


ASSEMBLY INSTRUCTIONS

STORAGE QUEEN BED

A Headboard

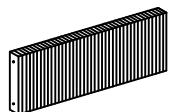


1 pc

B Footboard




1 pc

C Side Rail C

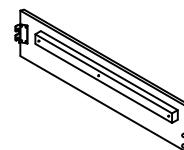

2 pcs

D Side Rail D

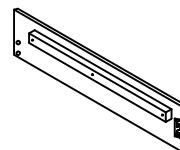


2 pcs

E Headboard Leg (L)



1 pc

F Headboard Leg (R)

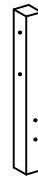


1 pc

G Footboard Leg (L)




1 pc

H Footboard Leg (R)

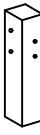

1 pc

I Side Rail Leg

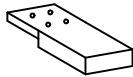


2 pcs

J Slat




2 sets (6 pcs per set)

K Center Rail (Front)

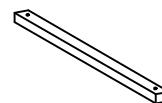

1 pc

L Center Rail (Rear)

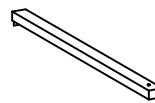

1 pc

M Support Leg



3 pcs

N Drawer Front Panel



1 pc

O Drawer Back Panel




1 pc

P Drawer Bottom Panel




1 pc

Q Drawer Side Panel (L)

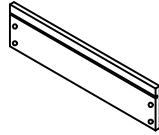


1 pc

R Drawer Side Panel (R)

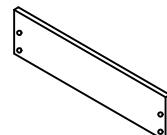


1 pc

S Drawer Support Wood (Big)

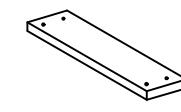

2 pcs

T Drawer Support Wood (Small)

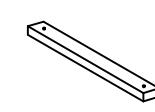

2 pcs

U Roller




4 pcs

V Nail 20mm




24 pcs

W JCBB Bolt M8 x 20mm

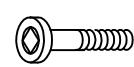



8 pcs

X JCBC Bolt M6 x 30mm

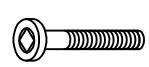


8 pcs

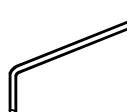Y	JCBC Bolt M6 x 50mm	Z	JCBC Bolt M6 x 60mm	AA	CSK Screw M3.5 x 16mm	AB	CSK Screw M4 x 25mm
							
8 pcs		3 pcs		16 pcs		1 pc	
AC	CSK Screw M4 x 32mm	AD	CSK Screw M4 x 50mm	AE	Spring Washer M6	AF	Flat Washer M6
							
36 pcs		8 pcs		8 pcs		16 pcs	
AG	Allen Key M4	AH	Allen Key M5				
							
1 pc		1 pc					

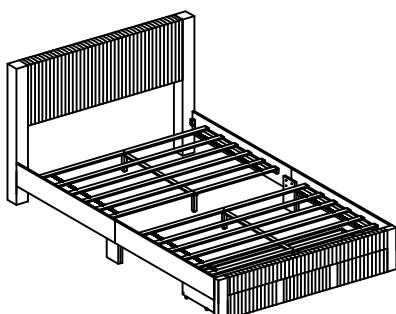


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Unzip the black woven fabric on both sides of the back of the Footboard (B). Attach the Footboard Leg (G & H) to the Footboard (B) using JCBC Bolt (Y), Spring Washer (AE) and Flat Washer (AF) with the Allen Key (AG). Then zip the fabric up.

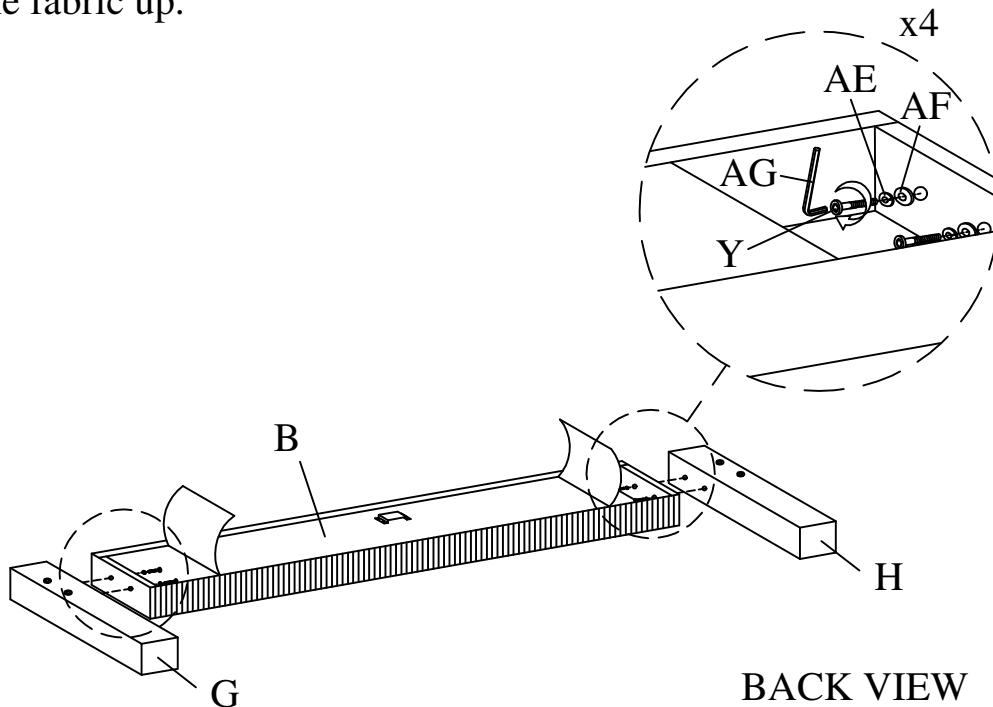


2 Attach the Headboard Leg (E & F) to the Headboard (A) using JCBC Bolt (Y), Spring Washer (AE) and Flat Washer (AF) with the Allen Key (AG).

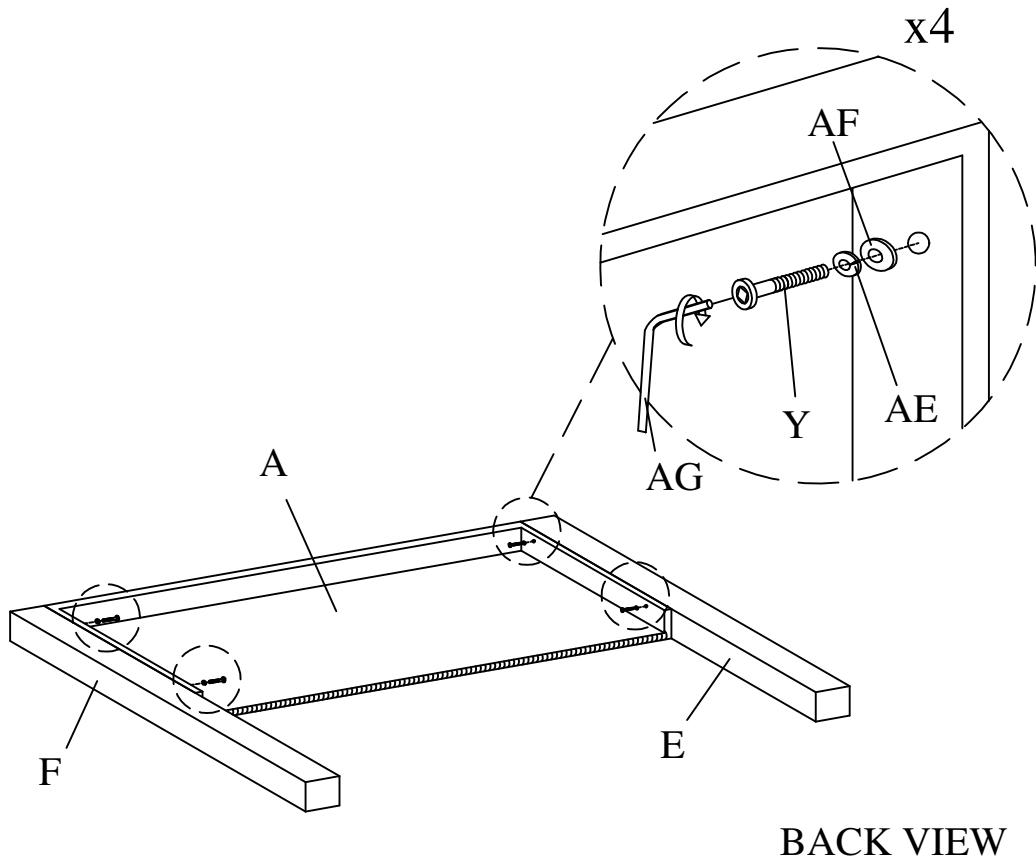


3 Attach JCBB Bolt (W) to the Headboard Leg (E & F) and Footboard Leg (G & H) with the Allen Key (AH). DO NOT fully tighten the JCBB Bolt (W).

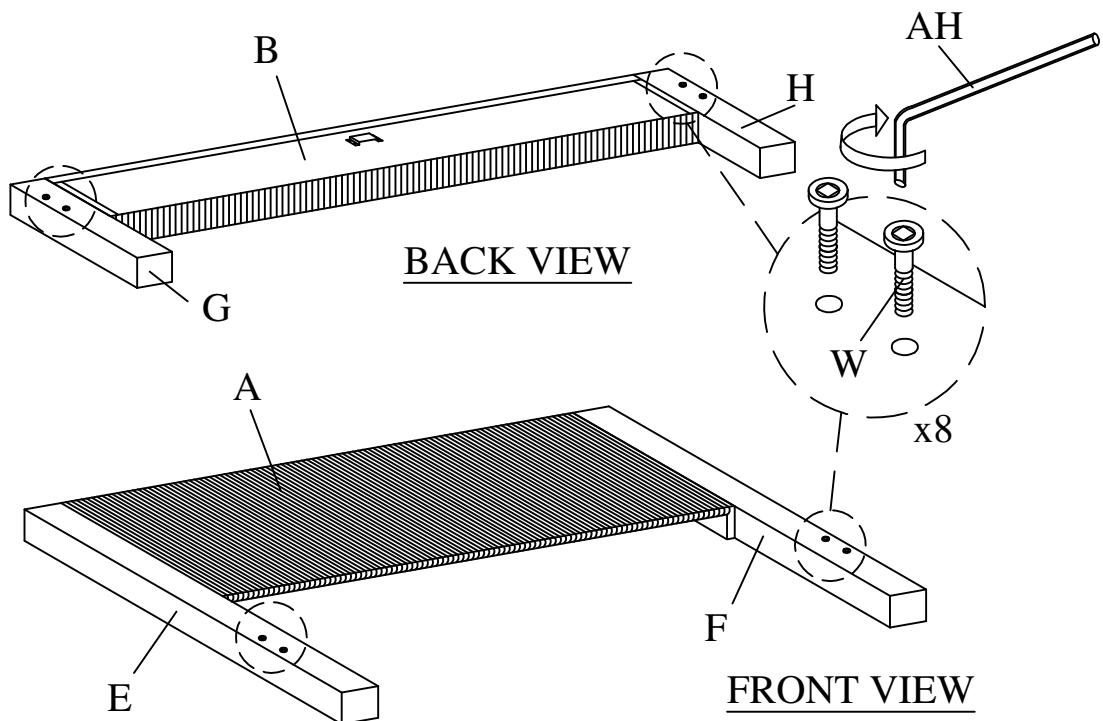


4 Attach the Side Rail Leg (I) to the Side Rail (C & D) using JCBC Bolt (X) and Flat Washer (AF) with the Allen Key (AG).

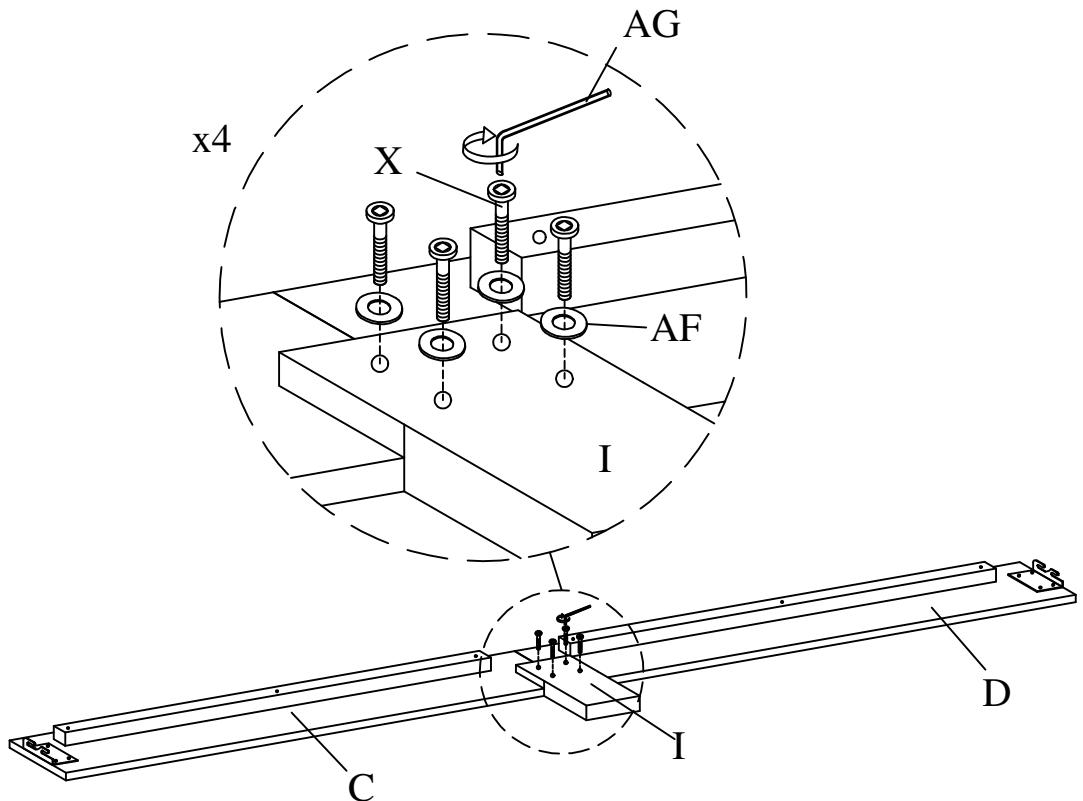


5 Attach the Side Rail (C & D) to the Headboard Leg (E & F) and Footboard Leg (G & H) by pushing the bracket down to fit it.

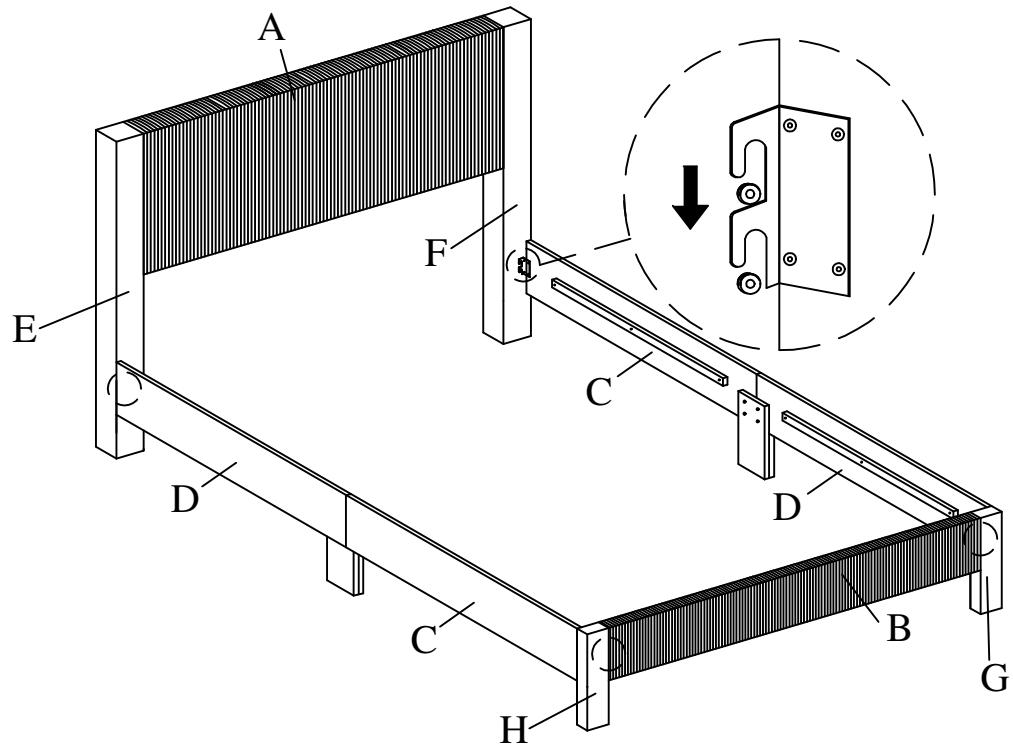

6 Attach the Center Rail (K & L) and Support Leg (M) to the Slat (J) using JCBC Bolt (Z) with the Allen Key (AG).

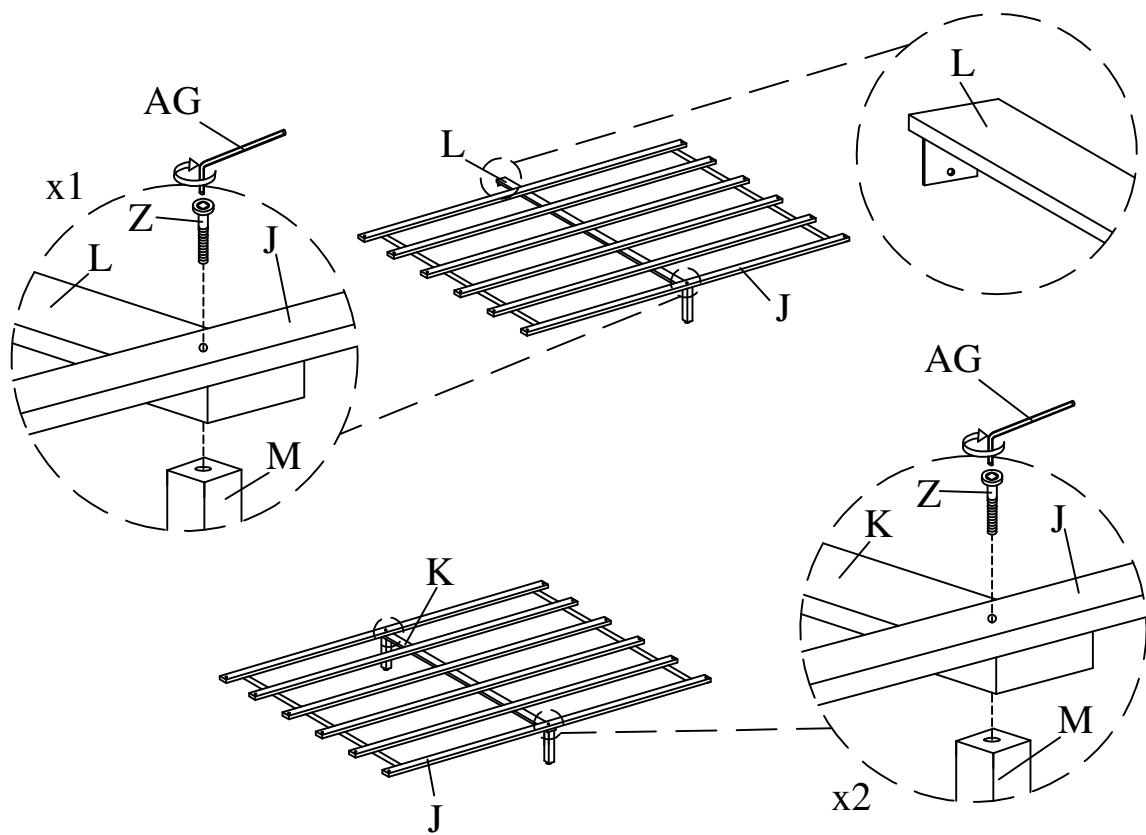


7 Place the two sets of Slats onto the Side Rails. Hook the Center Rail (Rear) (L) to the Footboard (B) using CSK Screw (AB) with a screwdriver (not included).

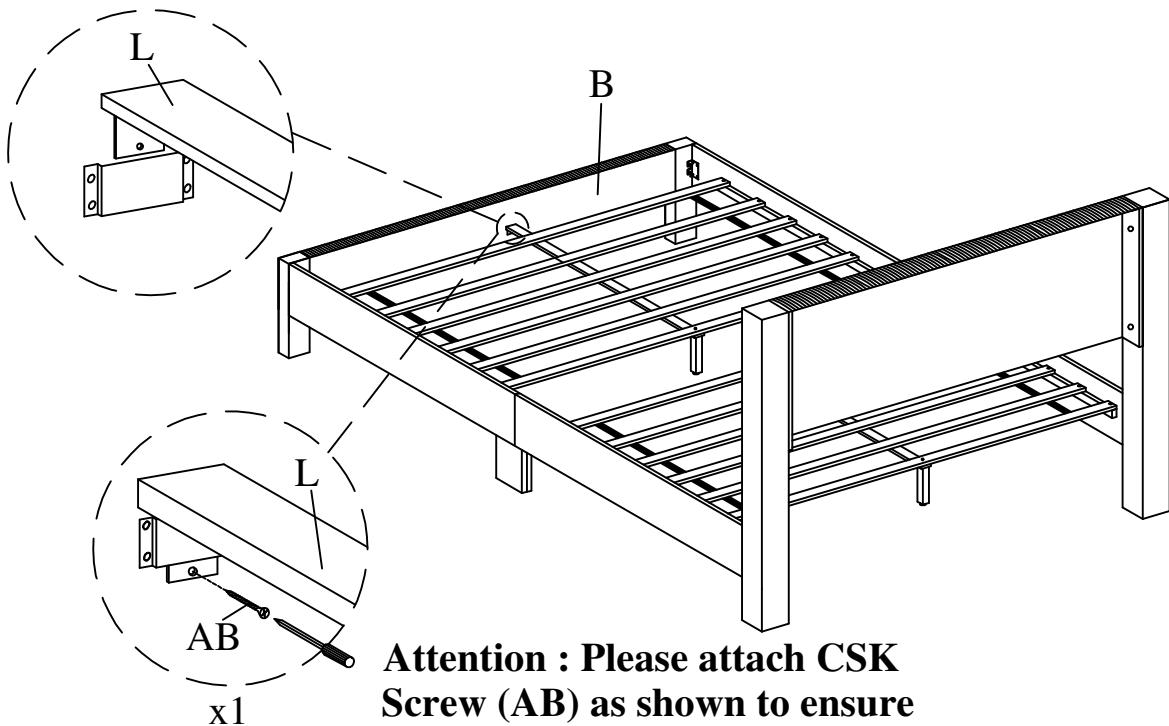


Attention : Please attach CSK Screw (AB) as shown to ensure the stability of the bed.

8 Tighten JCBB Bolt (W) on the Headboard Leg (E & F) and Footboard Leg (G & H) with the Allen Key (AH). Then, attach the Slat (J) to the Side Rail (C & D) using CSK Screw (AC) with a screwdriver (not included). The slat spacing should be sufficient to ensure the bed's stability.

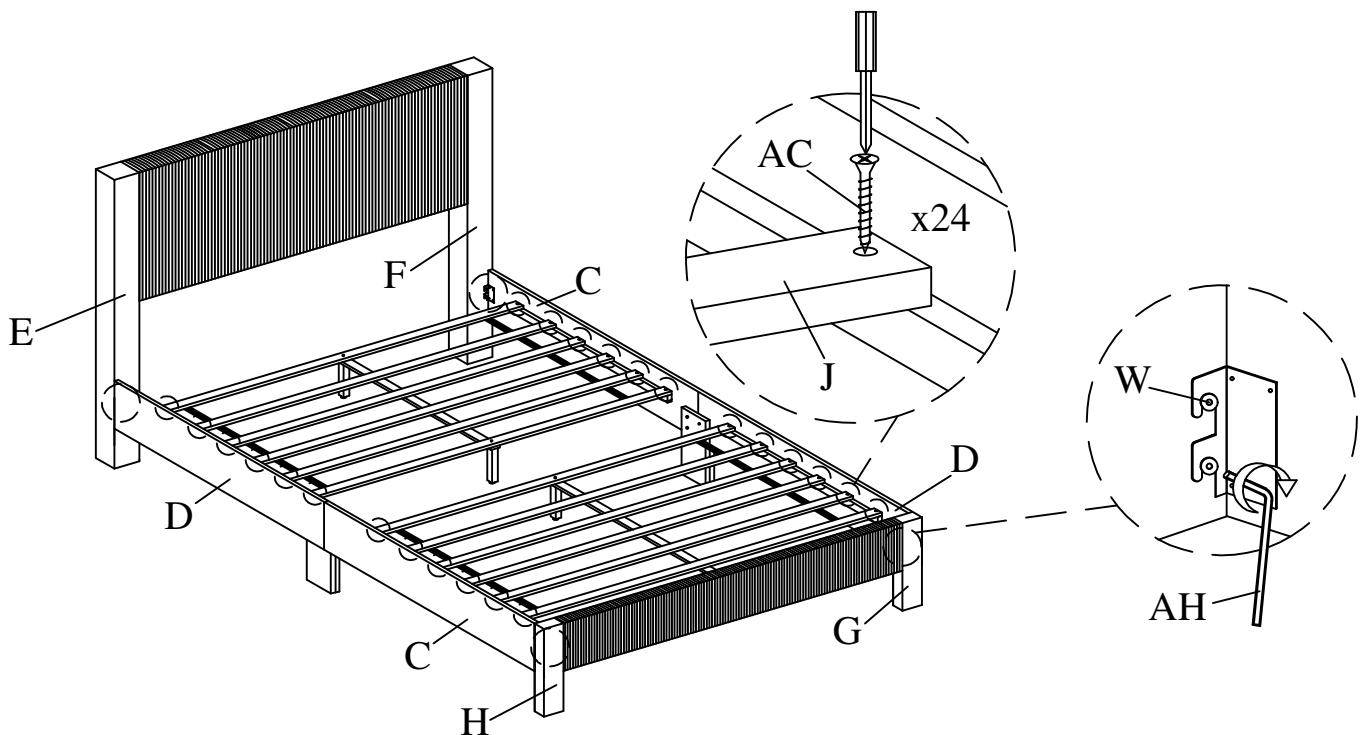


9 Attach the Drawer Side Panel (Q & R) to the Drawer Front Panel (N) and Drawer Back Panel (O) using CSK Screw (AD) with a screwdriver (not included).

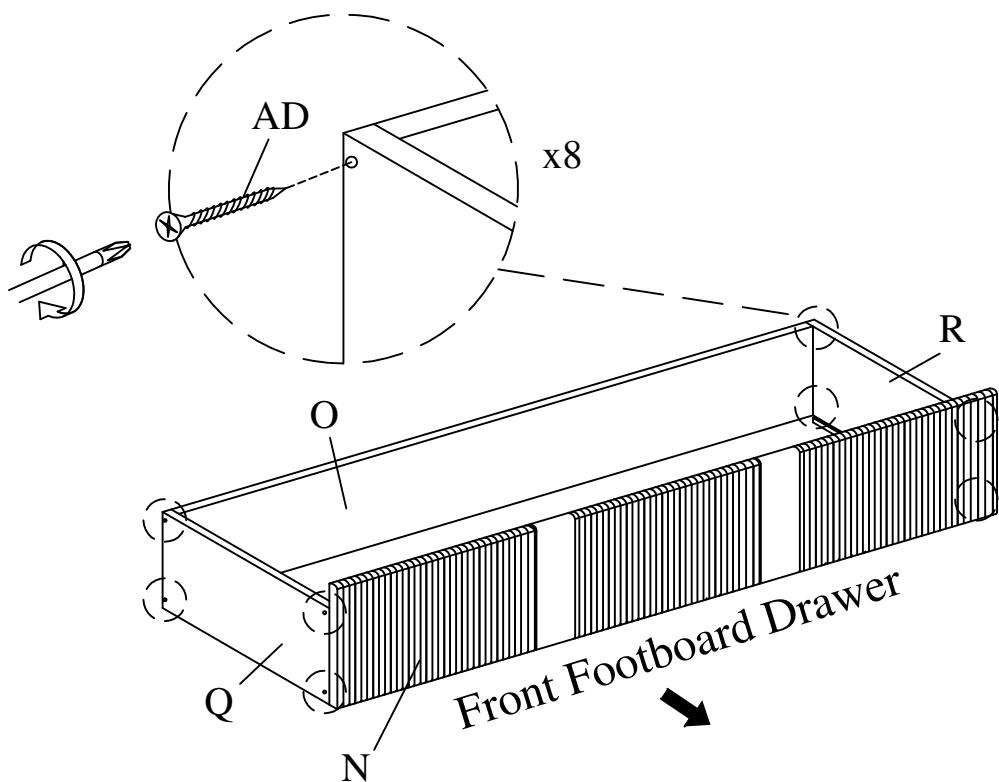


10 Flip the assembled drawer box frame. Attach the Drawer Bottom Panel (P) to the Drawer Side Panel (Q & R).


UNDERNEATH VIEW

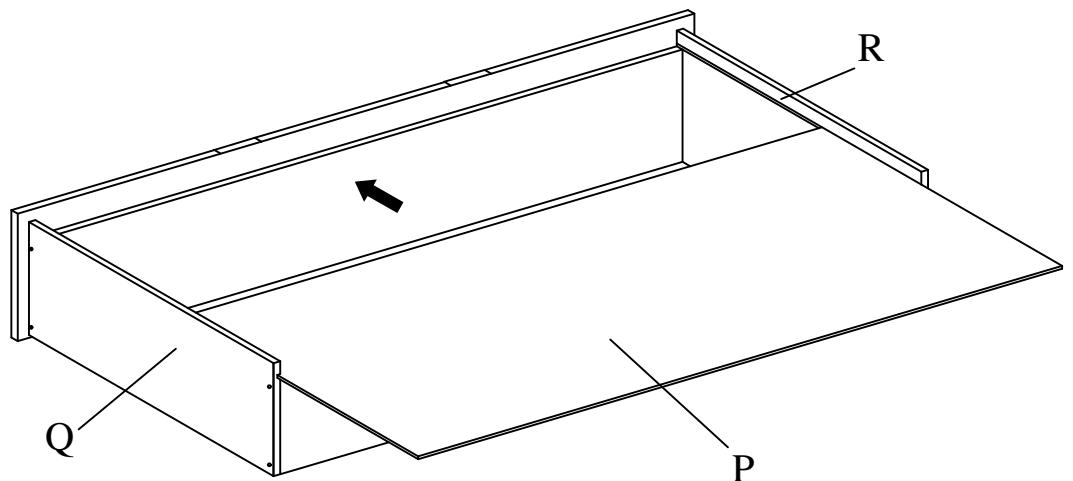


11 Attach the Drawer Support Wood (S & T) to the Drawer Bottom Panel (P) using CSK Screw (AC) with a screwdriver (not included). Secure the Drawer Bottom Panel (P) using Nail (V) with a hammer (not included).

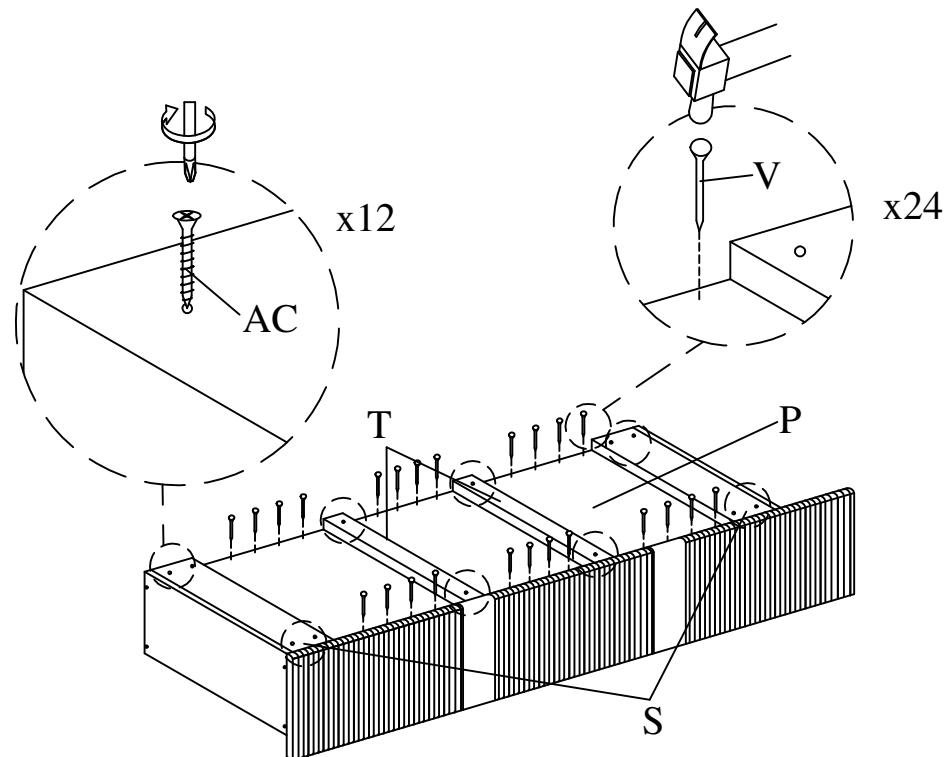

12 Attach the Roller (U) to the Drawer Support Wood (Big) (S) using CSK Screw (AA) with a screwdriver (not included).
Marking on the Wood !

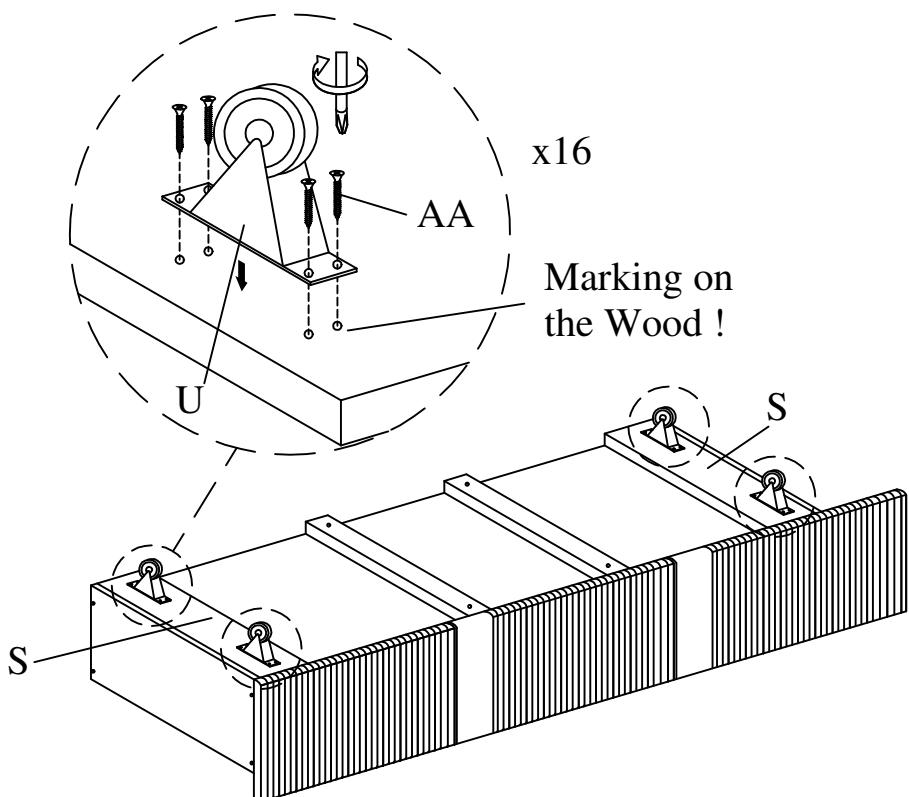

13 Place the assembled drawer under the Footboard (B).

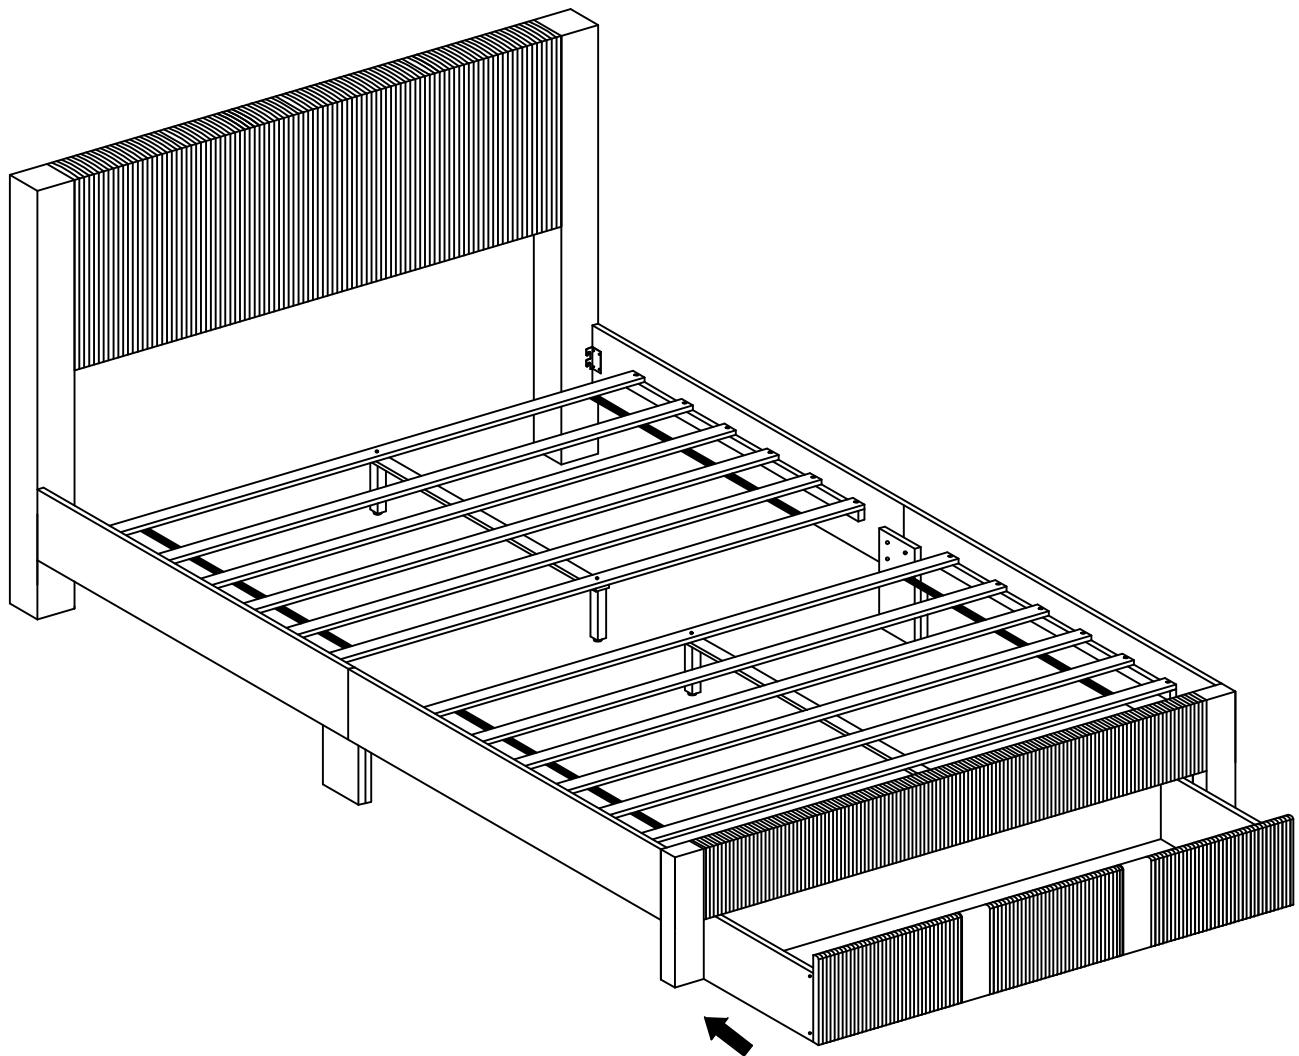

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.