


Assembling Guide




Thank you for choosing our product!






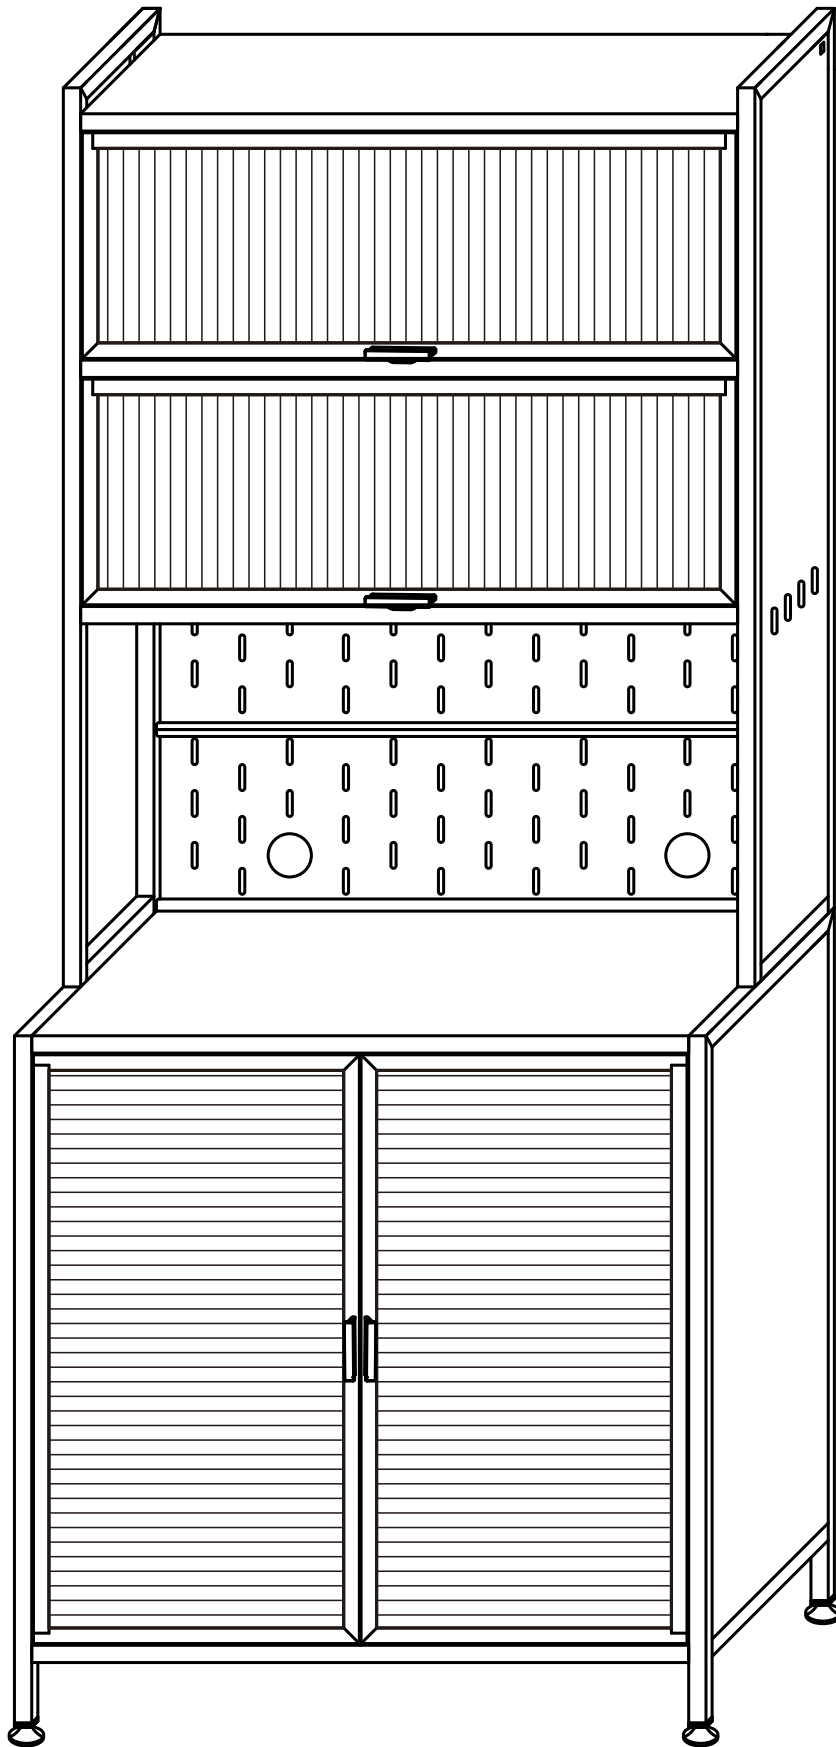










Thank you for lighting up another coordinate of our product on the map. We are committed to creating high-quality home living, making every household filled with warmth and comfort.


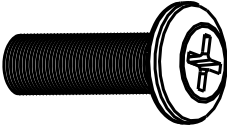


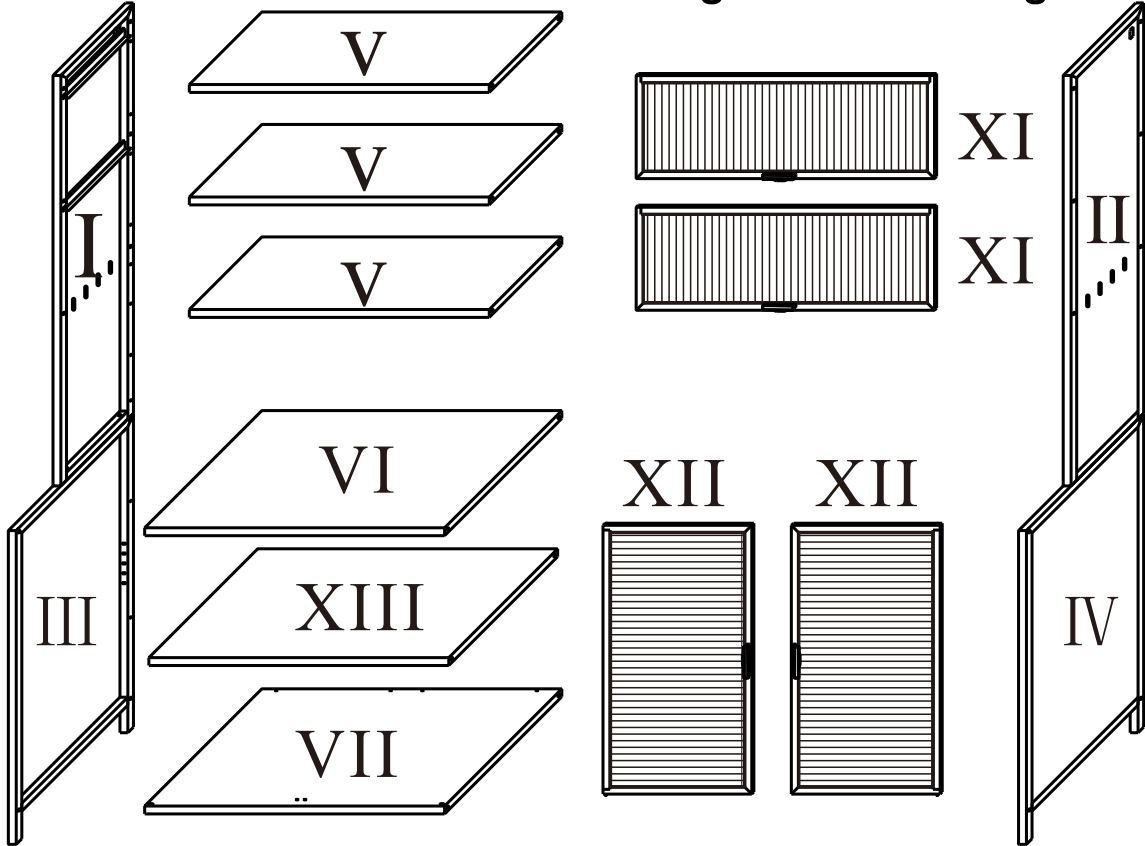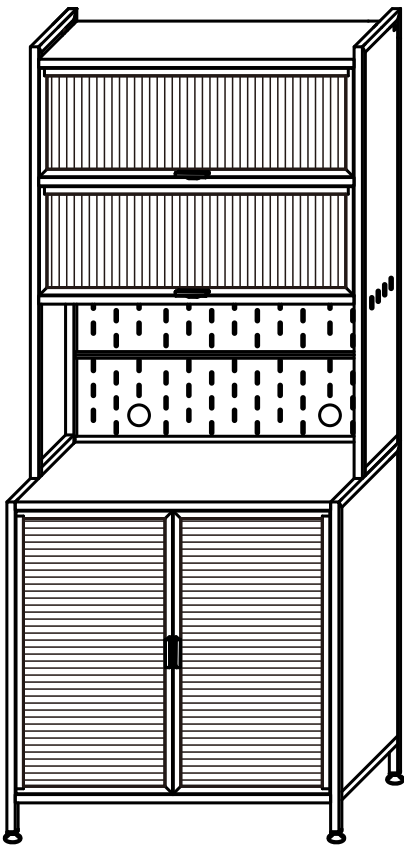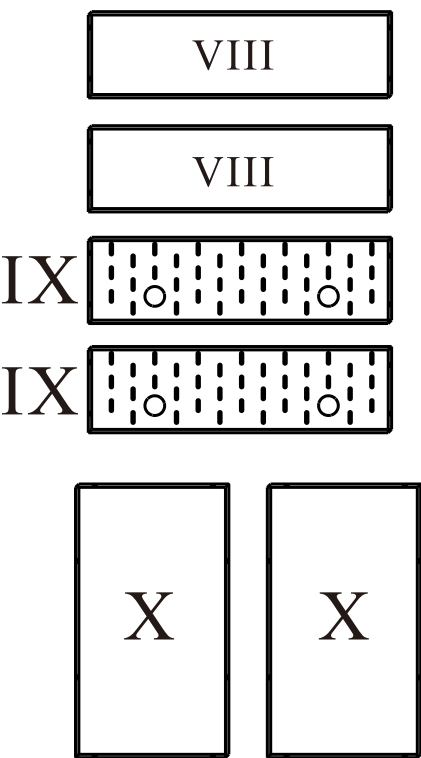

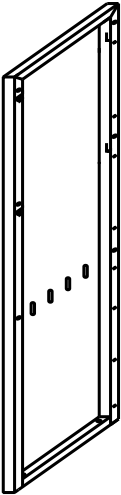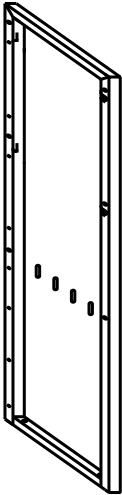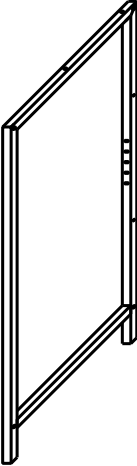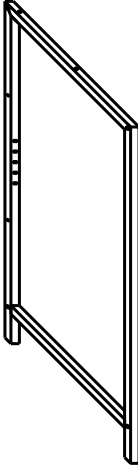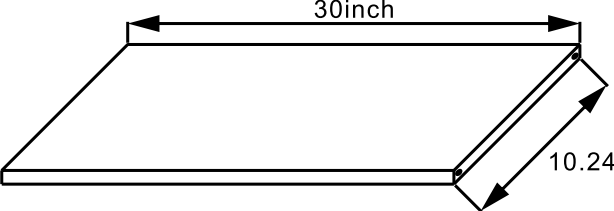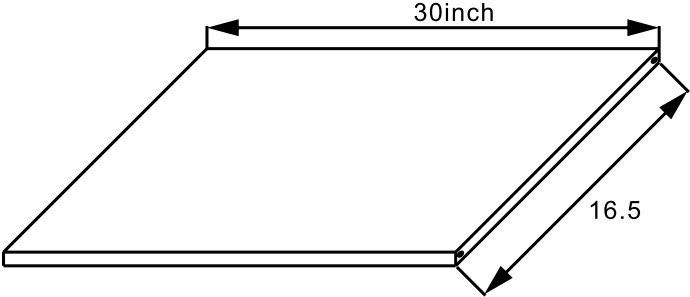



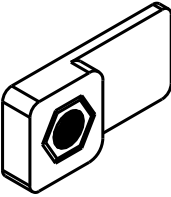


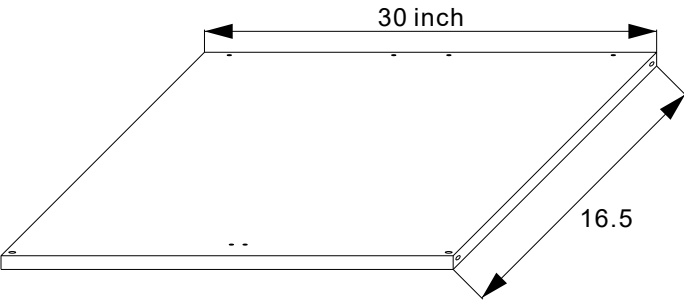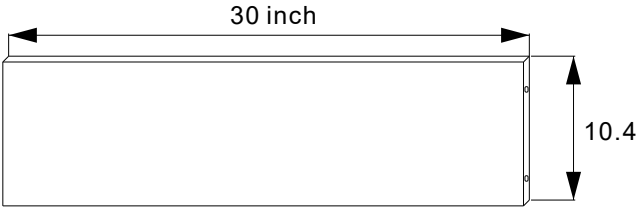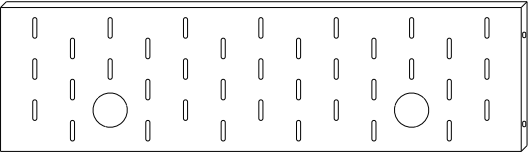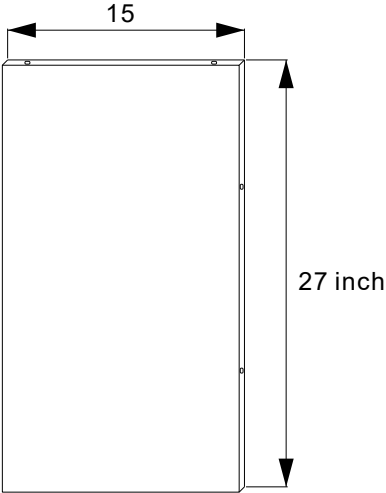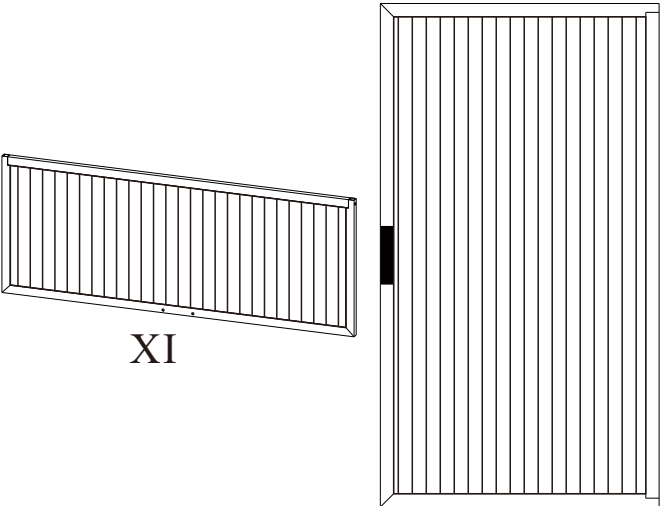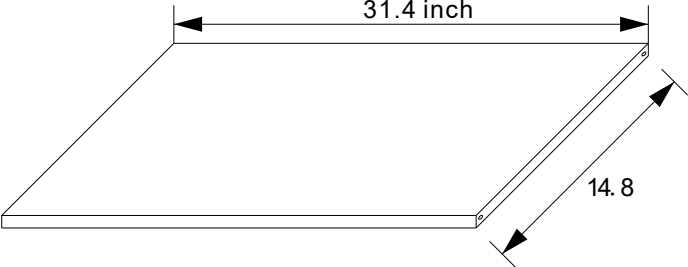




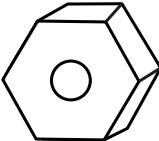

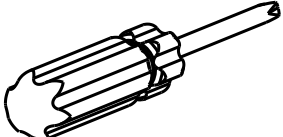





I-Left Top Panel x1	II-Right Top Panel x1
	
III-Left Bottom Panel x1	IV-Right Bottom Panel x1
	
V-Upper Part Shelf x3	VI-Lower Part Top Shelf x1
	

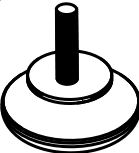We always provide some extra screws for backup.
 Don't worry if you have some left over after installation.


<p>VII-Lower Part Bottom Shelf x1</p> 	<p>VIII-Upper Part Back Panel x2</p> 
<p>IX-Pegboard x2</p> 	<p>X-Lower Part Back Panel x2</p> 
<p>XI-Upper Flip Door x2 XII-Lower Door x2</p> 	<p>XIII Lower Part Middle Shlef</p>  <p>4</p>

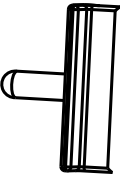A Screws for Side Panels (M6x50) 		B Screws for Shelves (M6x30) 	
C Screws for Handles (M4x16) 		D Screws for Back Panels (M4x10) 	
E Hooks for Pegboard 		F Hooks for Side Panels 	
G Door Hinge Gasket (plastic) 		H Magnetic Door Stopper 	
W Adjustment Foot 		J Foot Plug 	
K Nut Plate 		L Handle 	
M Handle Door Stopper 		N Base (For Magnetic Door Stopper) 	
O Door Hinge Spring 		P Door Clips 	
Q Shelf Clips 		R Door Rail 	
S Nut for Back Panel 5 	T Handy Tool for Door Hinge Spring X1 	U Screwdriver 	


1. Insert the door rail R to the back edge of the side panel I first, then the front edge.

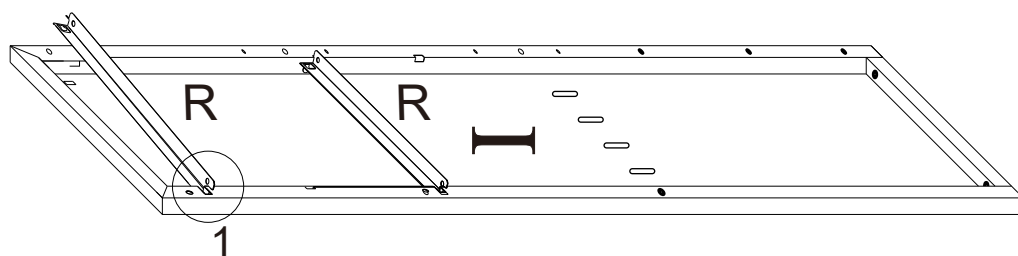

2. Use a screwdriver U to secure the stopper bar. Then repeat to another side panel II.

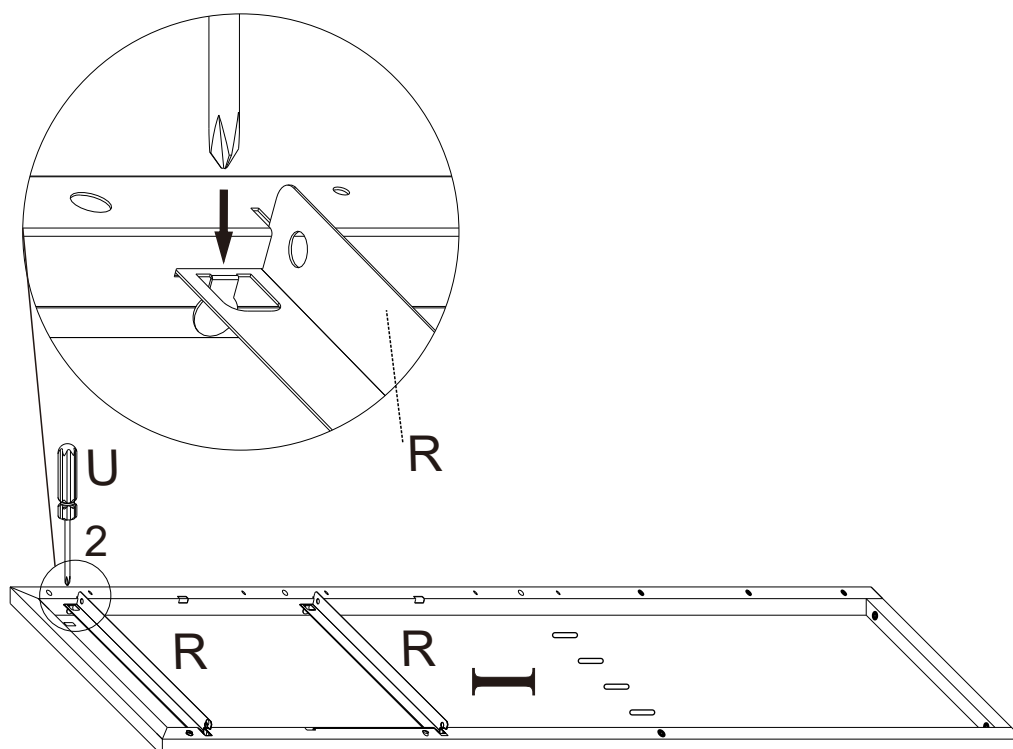


Use A and K to secure I and III. Repeat with right side: use A & K to secure II & IV. Then insert J and W to III&IV.

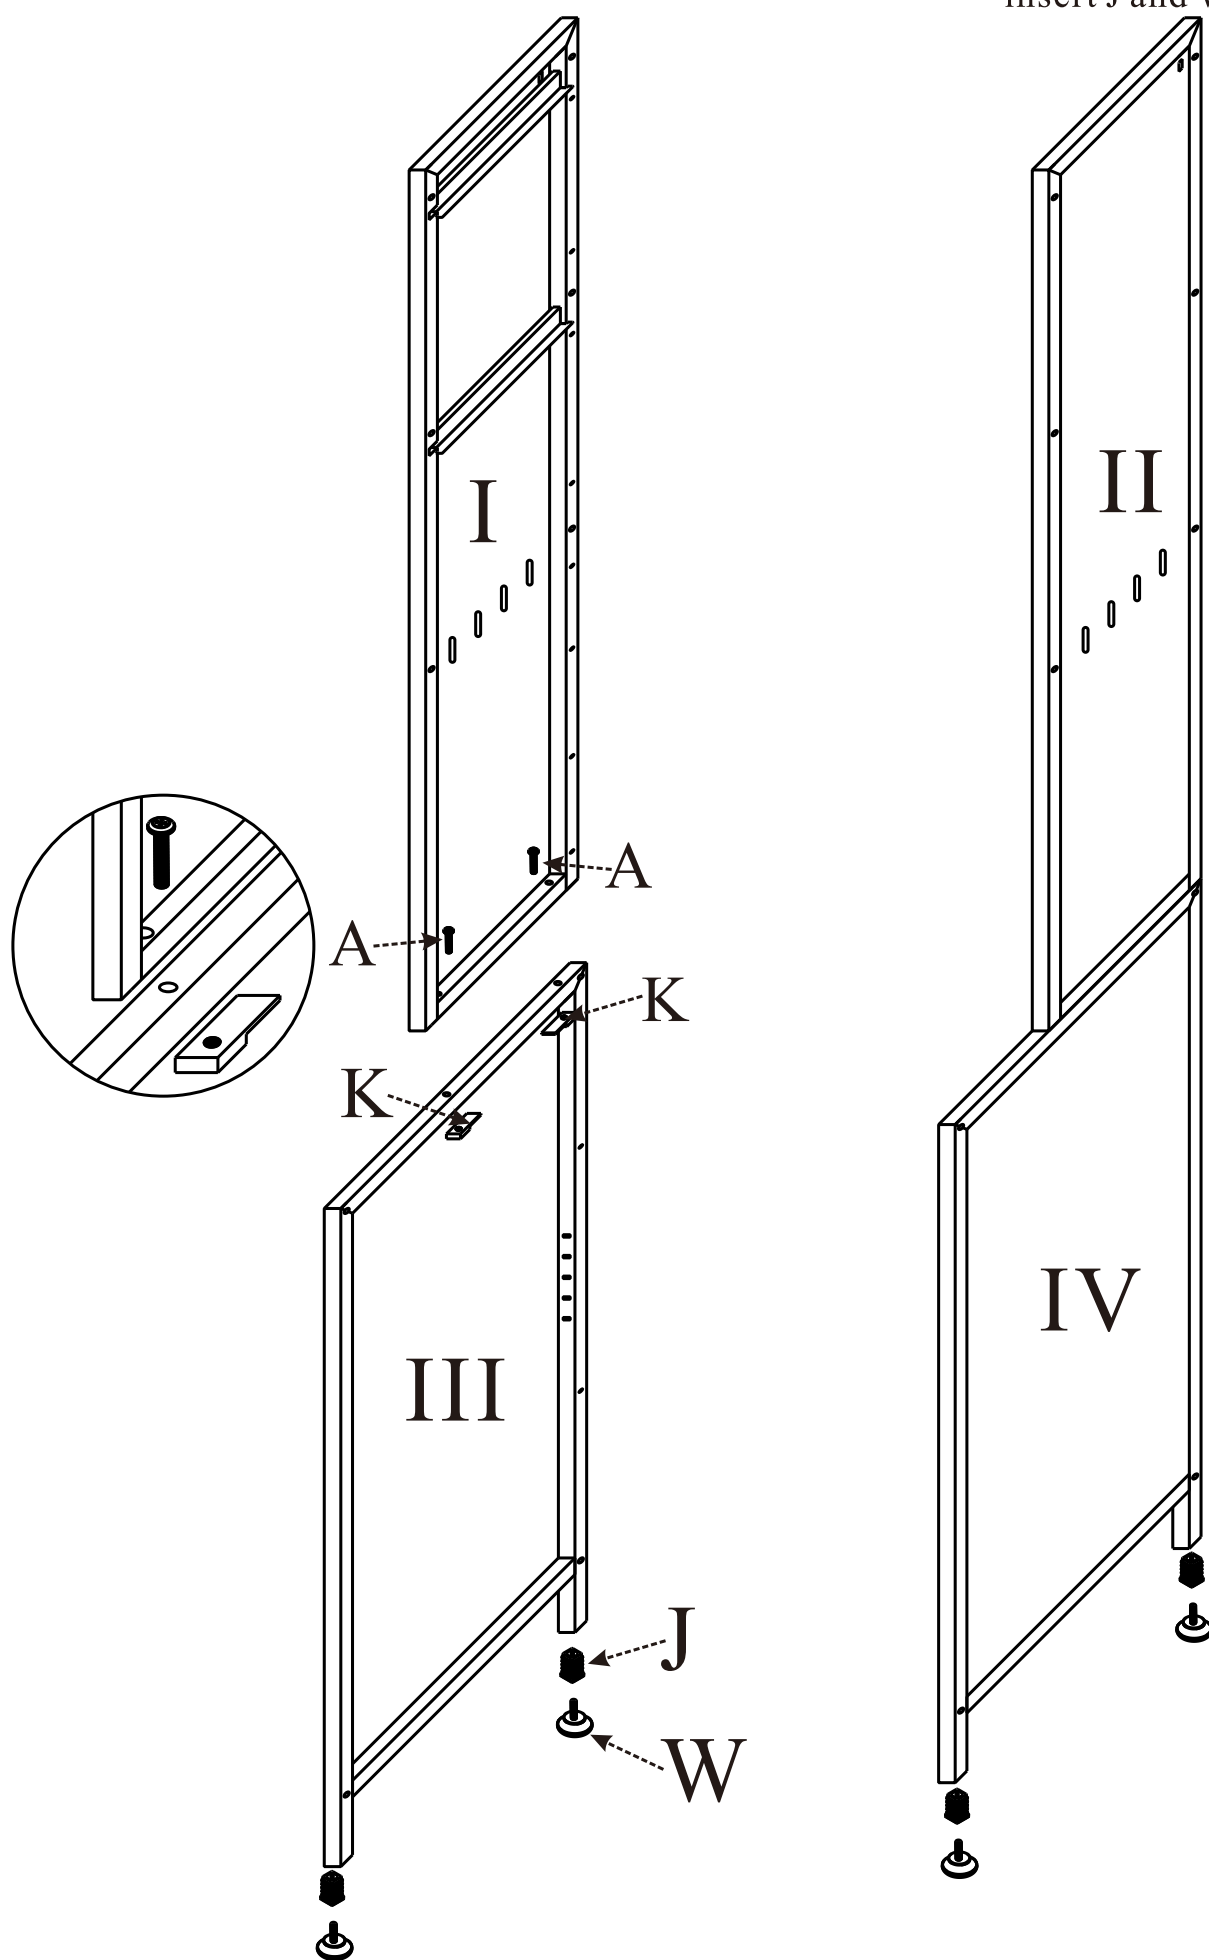


STEP 3


Use B and K to secure V & VI & VII to the side panels.

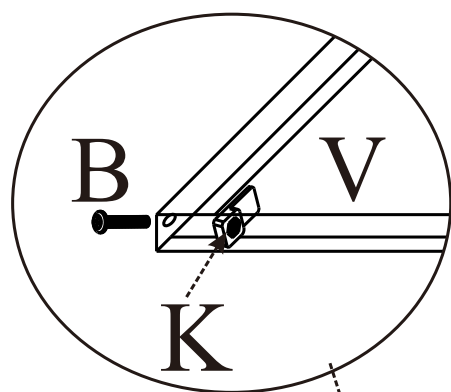

K should be under and inside the shelves.

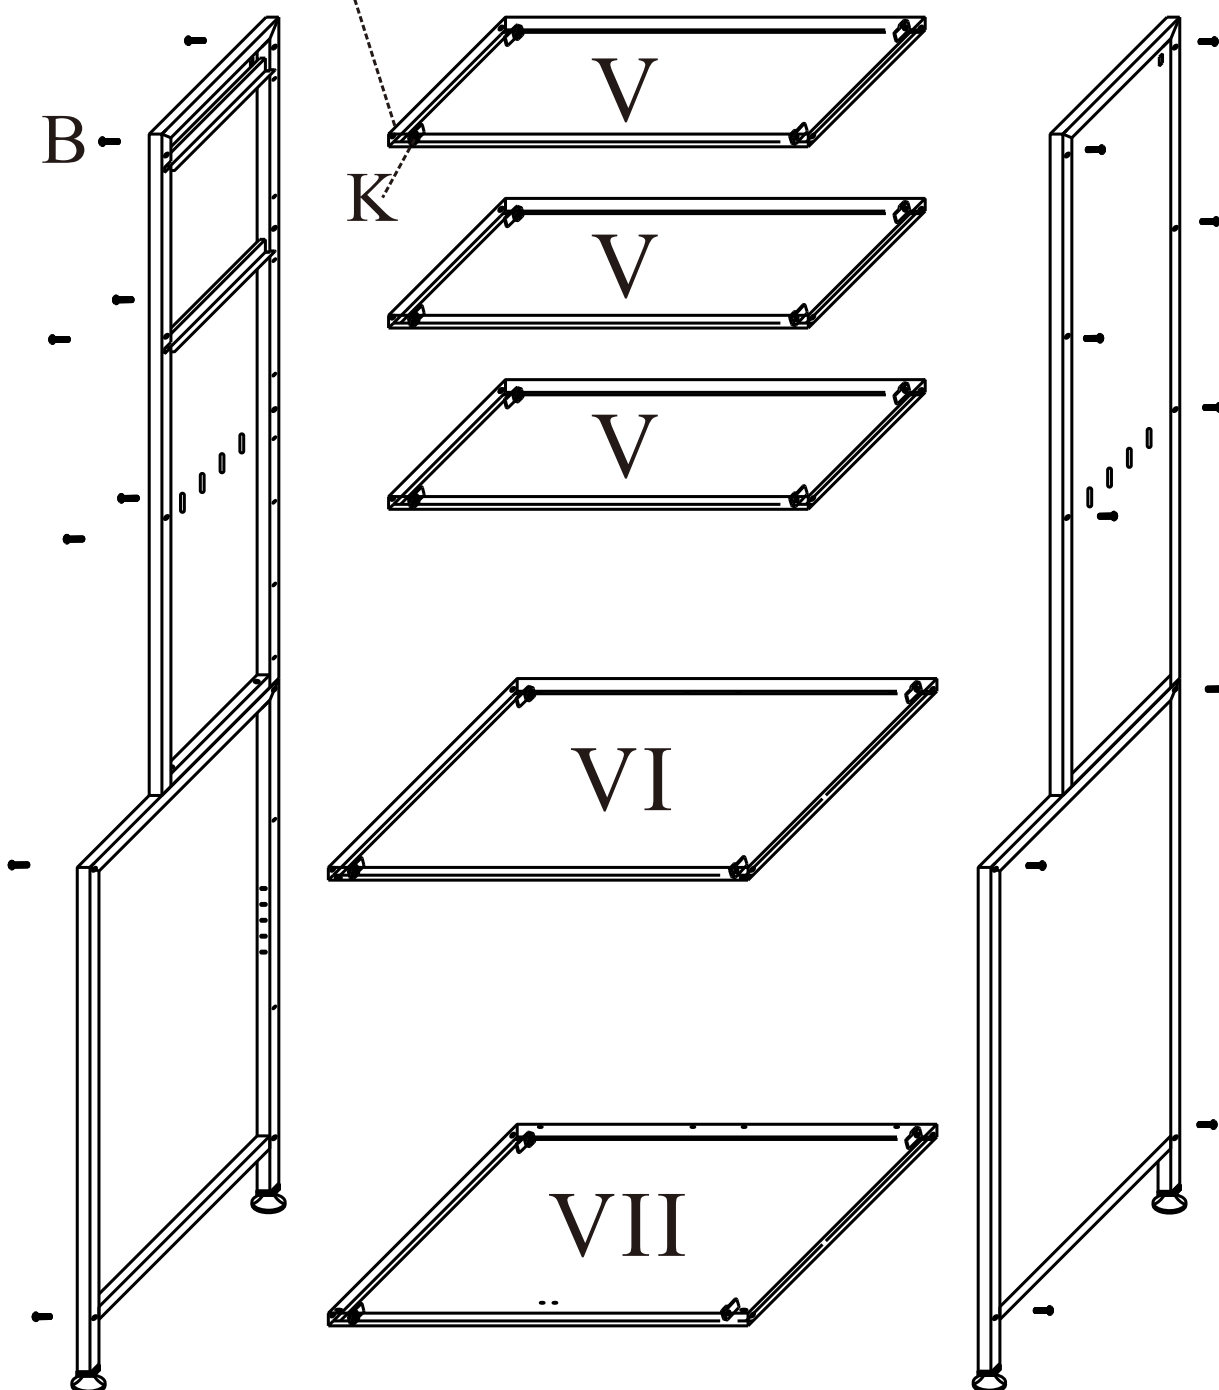

Use D to secure all back panels (VIII, IX, and X). Connect 2 Xs with D and S.

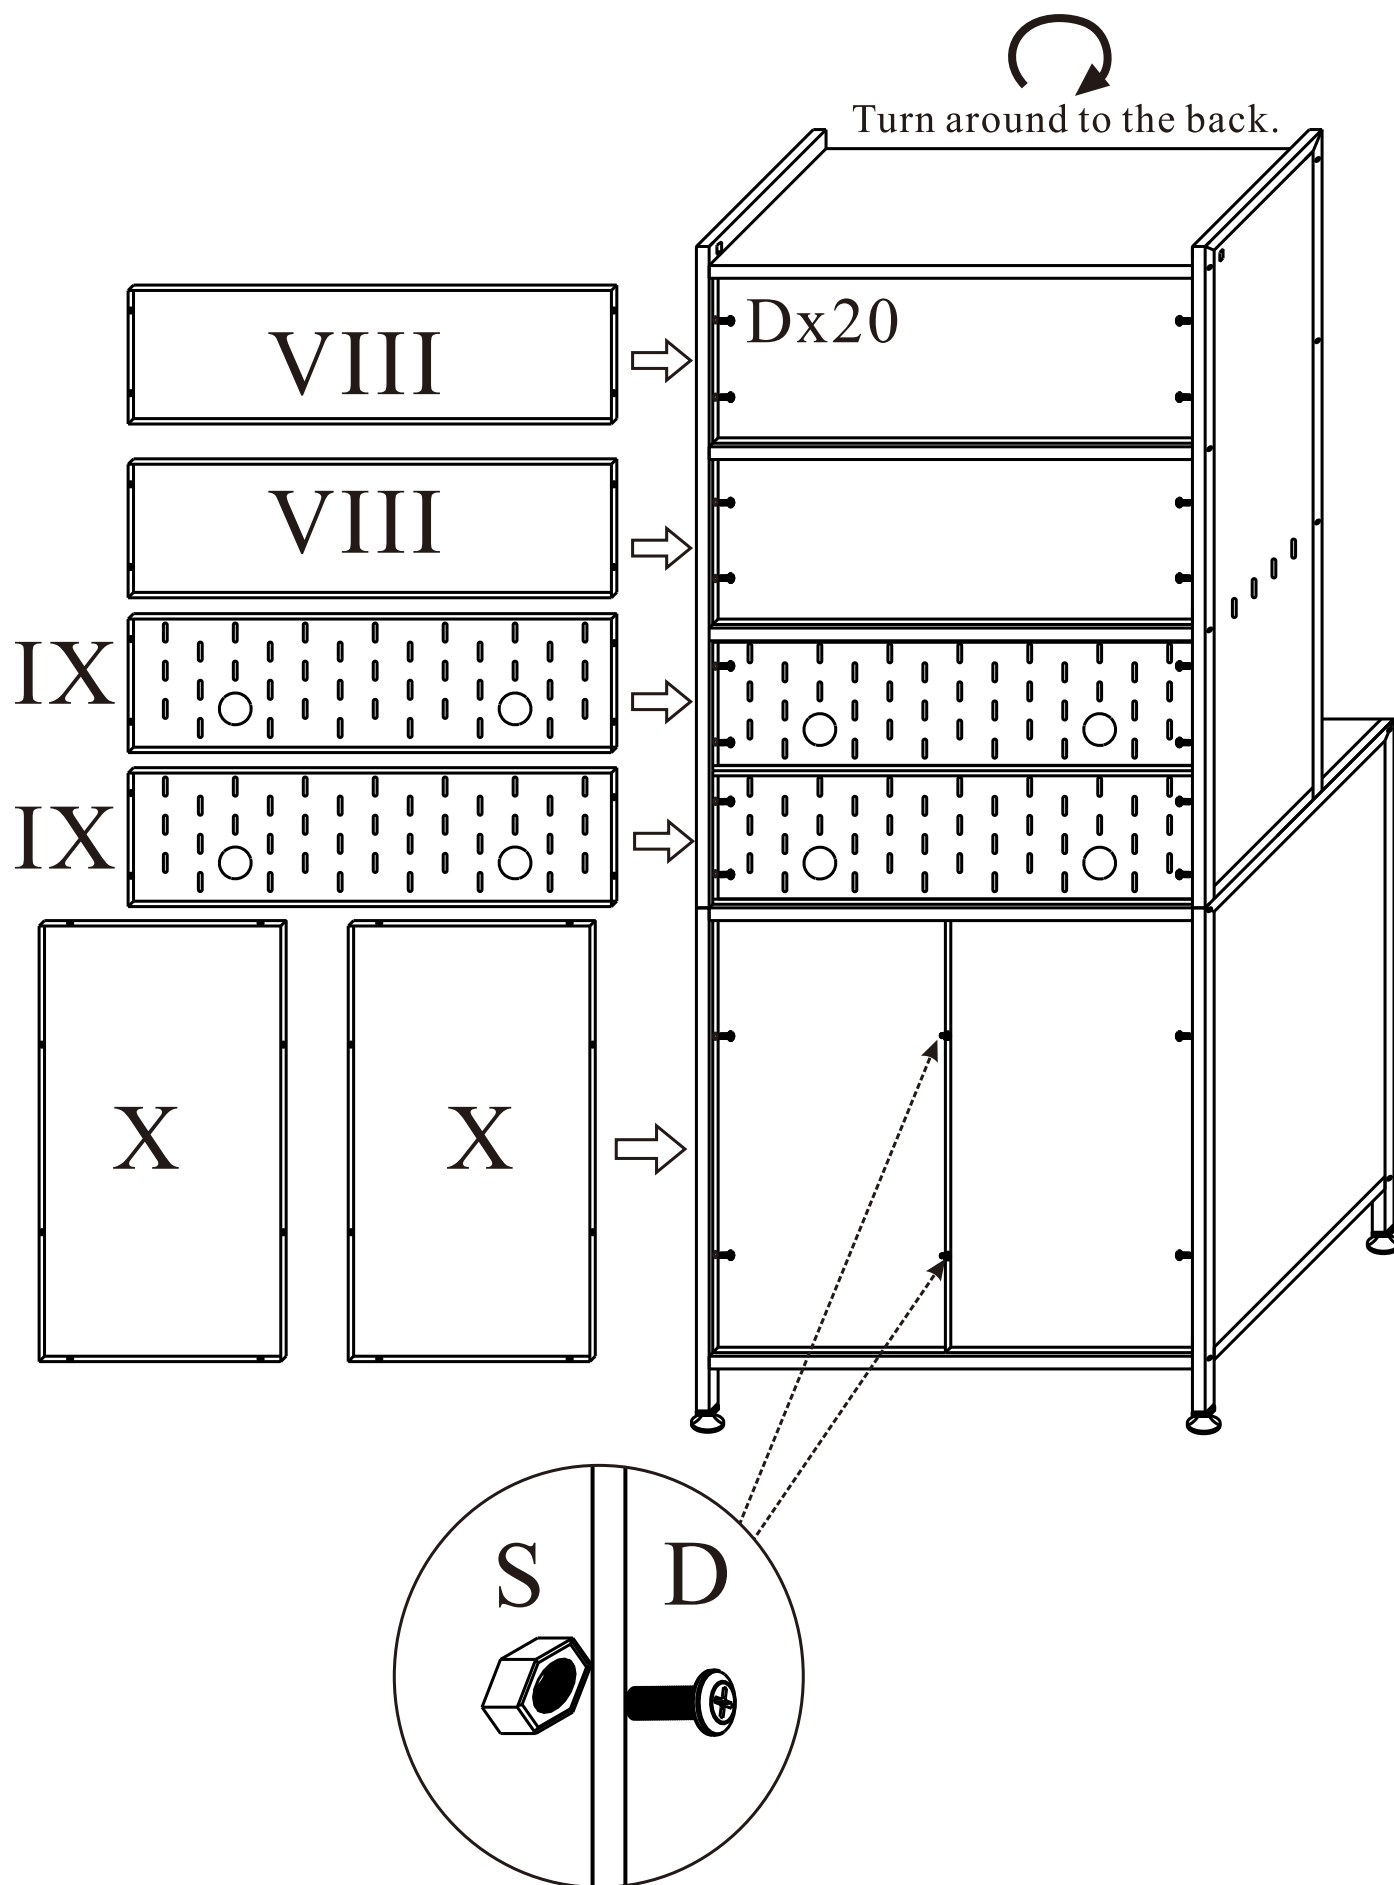


--	--	--


Please beware the position of the O.
The pin should face outwards.
Use T to help to insert the O.

Remember to tear off the protective film on the surface in advance

Press the assembled O to install XI & XII to the cabinet body.
Install Q for shelf. Make sure clips in 4 corners are at the same height .

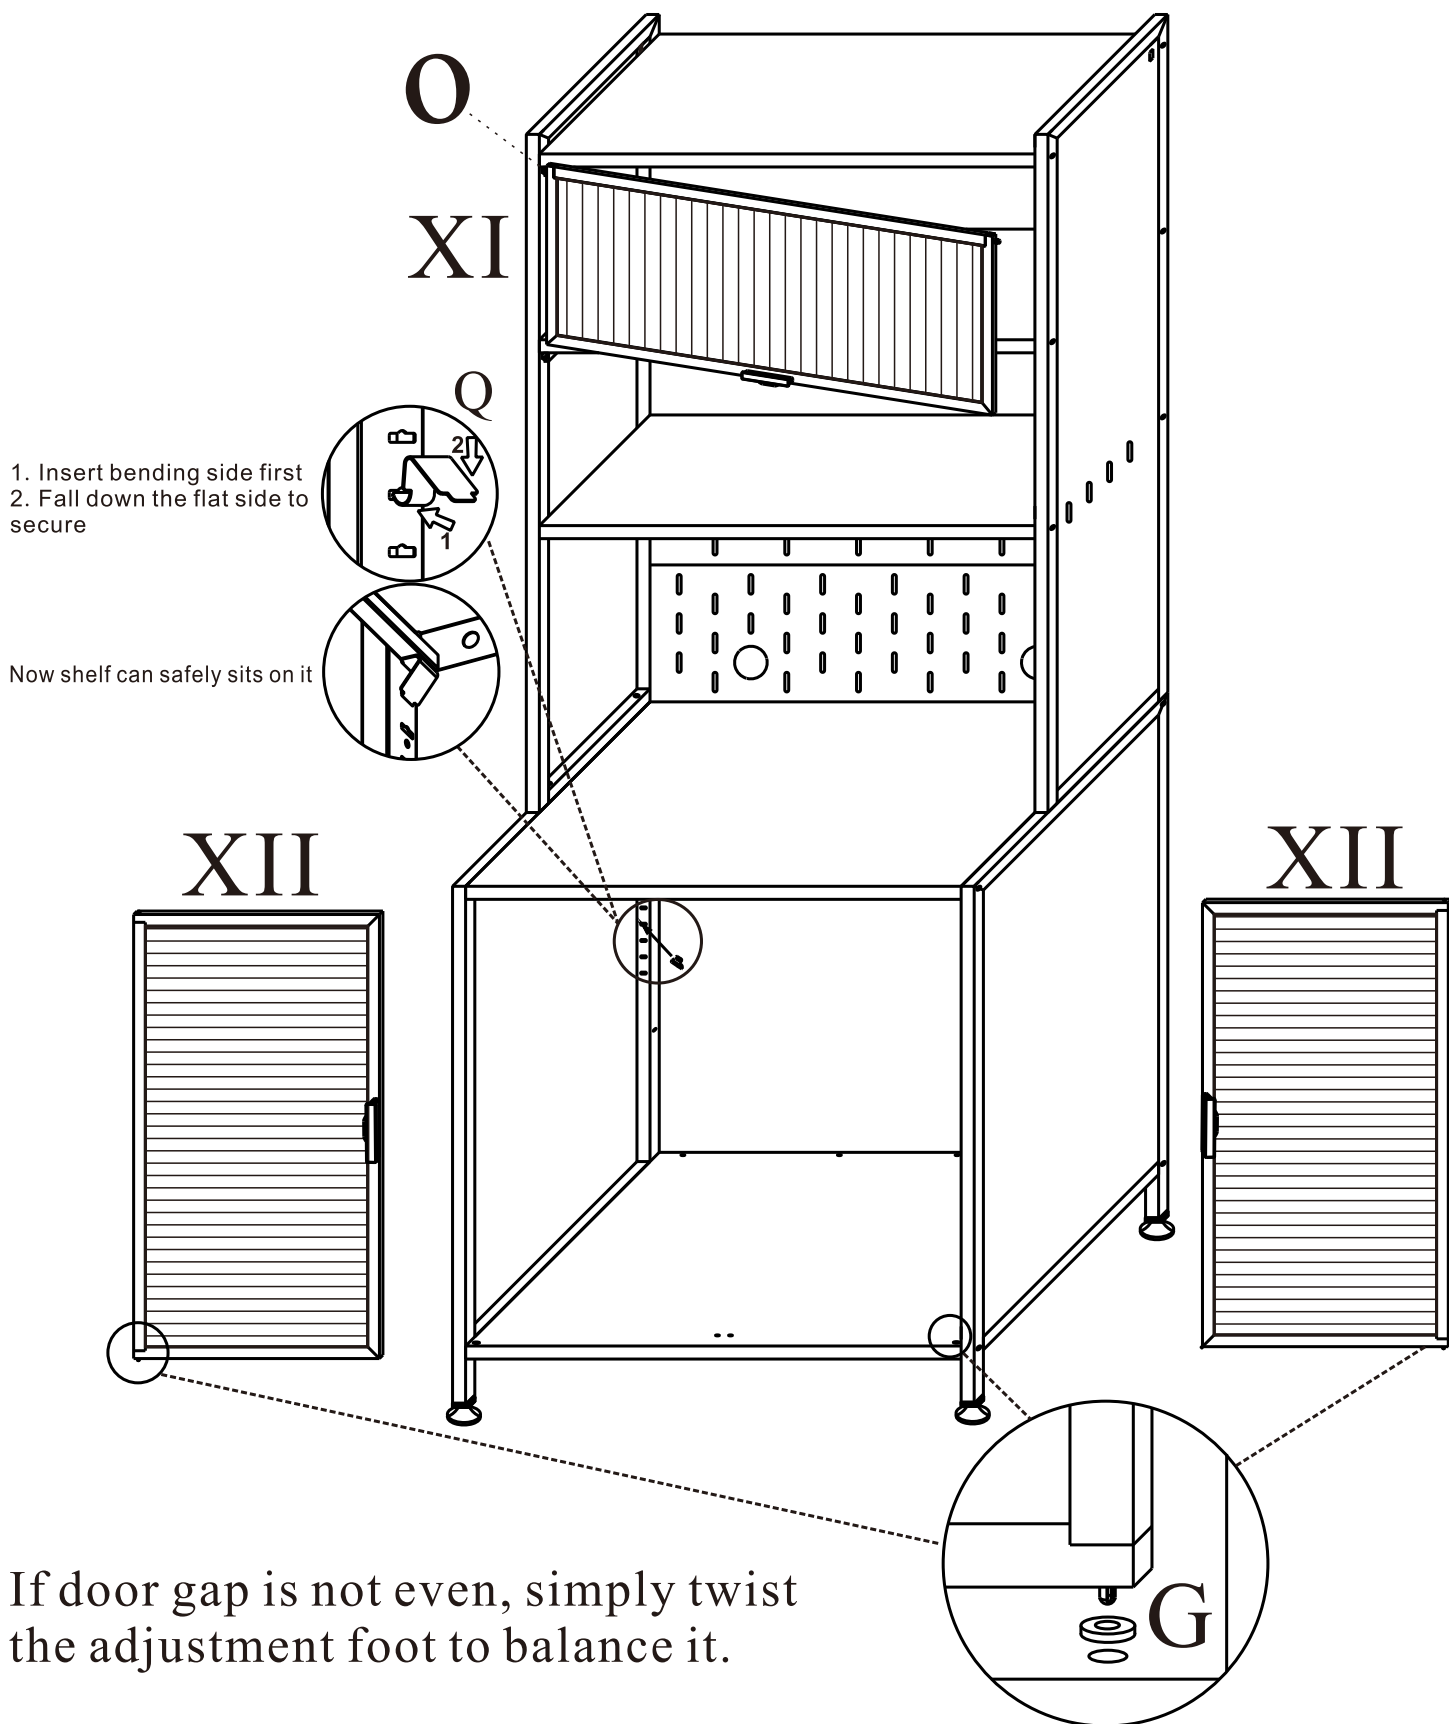

First to stick the H to N, then use D to secure N to VI & VII.

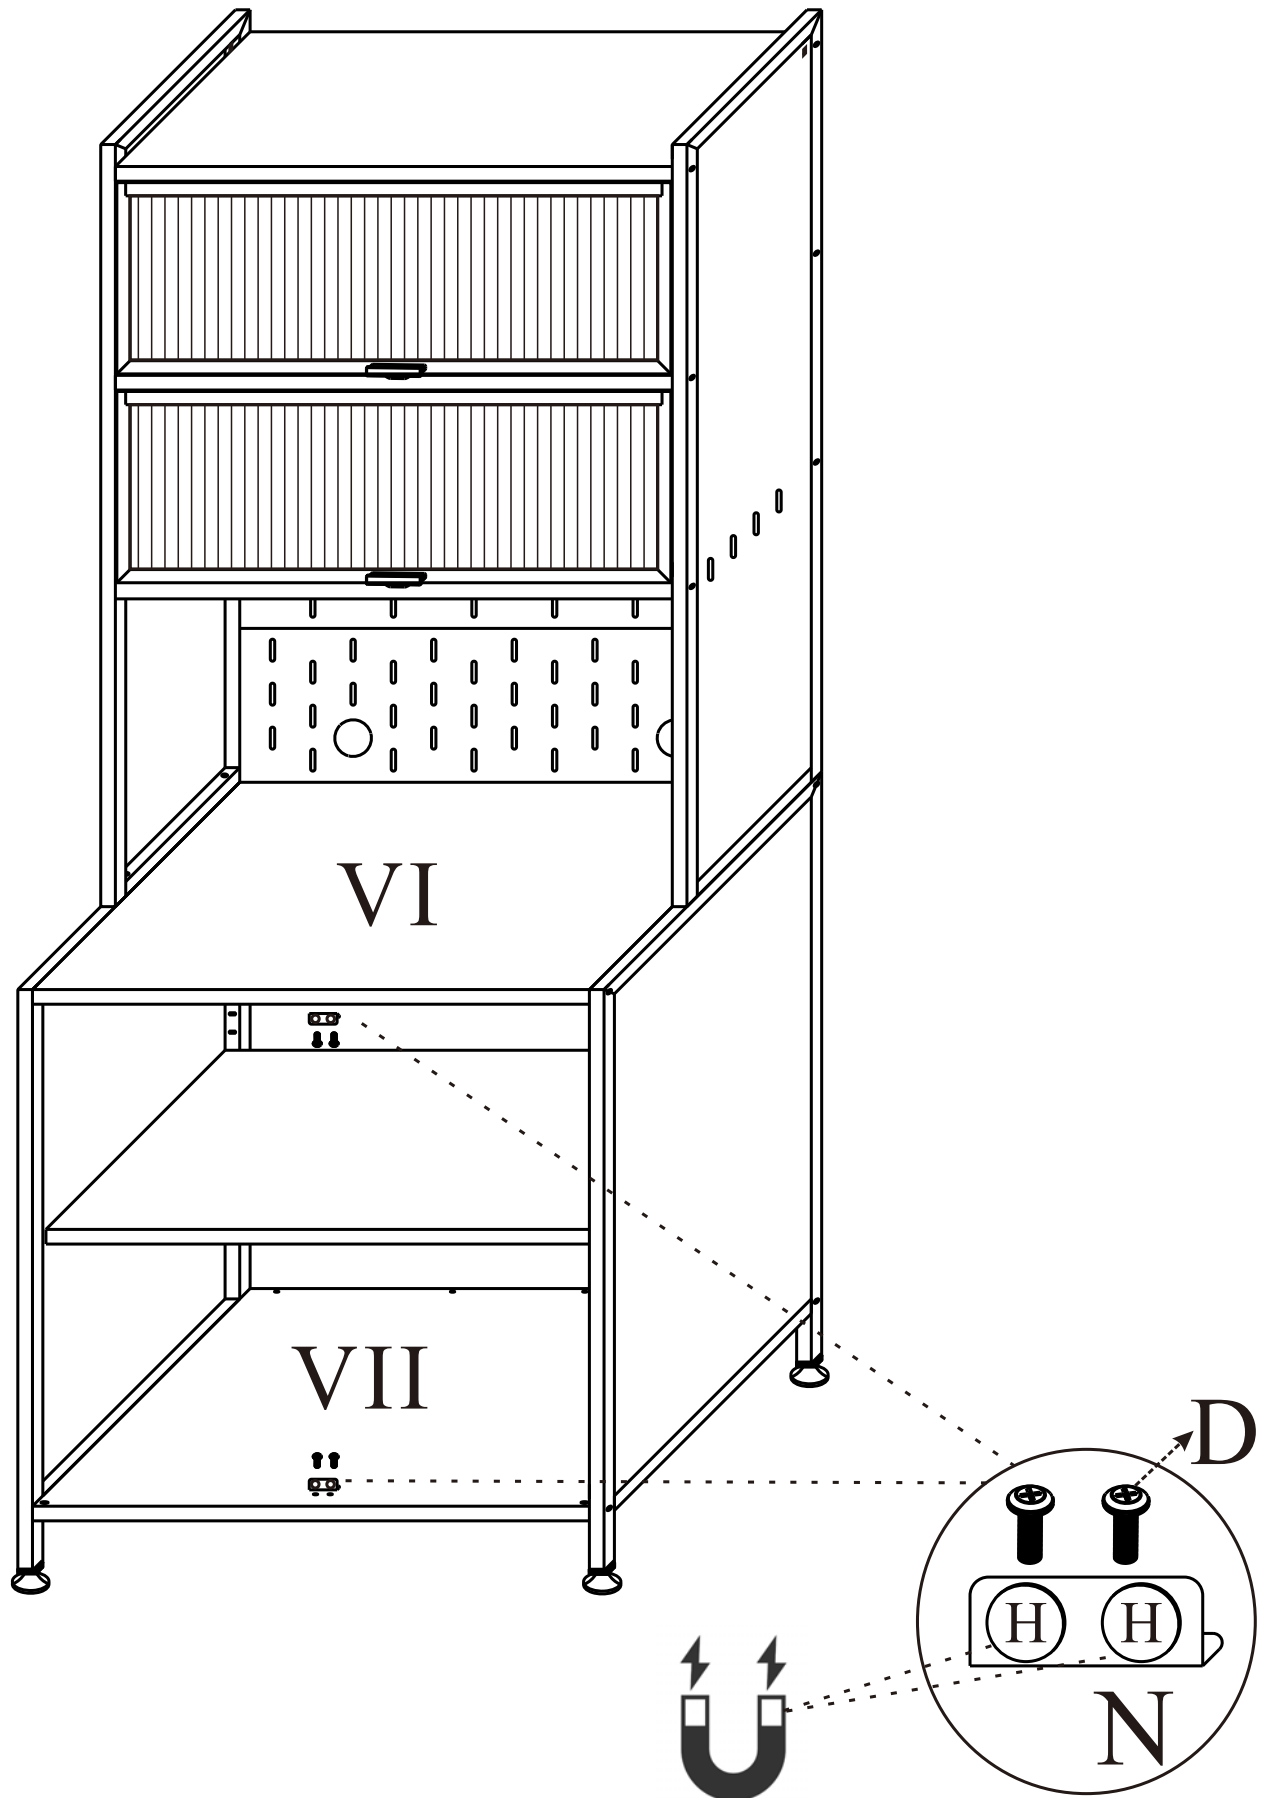

Hook E to the IX, hook F to the side panels.

