




## USER'S MANUAL

### LINDA SET SERIES

### TALL ADIRONDACK CHAIR SET WITH CONNECTING TRAY

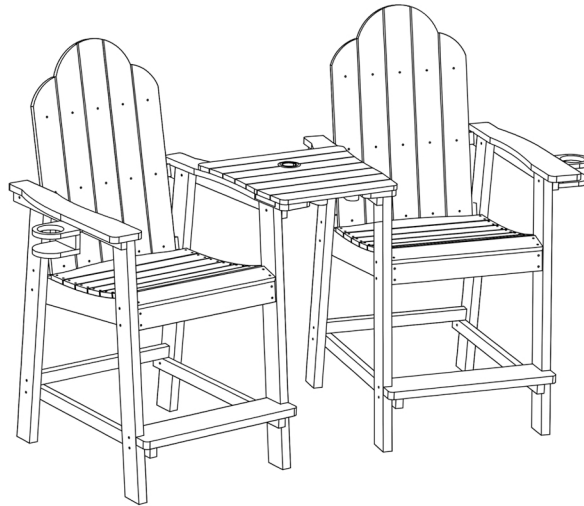

#### Guide of Manual

- ★ Thanks for your choice. We will do our best to provide customer service for everyone.
- ★ Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, we will expeditiously provide reissue accessories, compensation or other services.
- ★ Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. Please contact us if further information and help are needed. We will respond in a timely manner.
- ★ Please be patient that the other items are on the way if you buy more than one product.

#### Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- If you run into scratches problems, we suggest you erase the scratches by knife.
- This item could be cleaned with soap and water. Be sure to avoid harsh solvents and abrasives.
- Periodically (every 90 days) make sure the screws are fully tightened.

#### Material

- Frame: 100% HDPS
- Bolts: 304 Stainless Steel

#### Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- Usually it's unnecessary to use electric drill. Please at a low gear if you need.

#### Resists Pest & Rough Weather

- These all-weather items can be stored outdoors year-round. Perfect for people who lives in a wet climate or lives on the coast where humidity and moisture will be an issue all year.










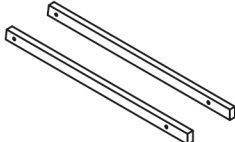


#### Max weight capacity

- TALL ADIRONDACK CHAIR: 300lbs
- CONNECTING TRAY: 150lbs



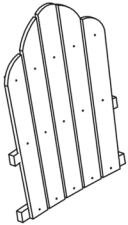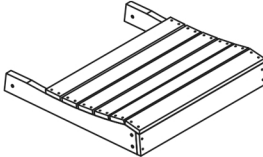






# Parts List & Assembly Instruction


1. Make sure all parts are in the package.
2. Do not fully tighten anything until all screws, nuts, washers and bolts are in place.

## Parts List


<p>A x 2pcs Back</p> 	<p>B x 2pcs Seat</p> 	<p>C x 2pcs Right Arm</p> 	<p>D x 2pcs Left Arm</p> 
<p>E x 4pcs Rear Legs</p> 	<p>F x 4pcs Front Legs</p> 	<p>G x 2pcs Seat Brace</p> 	<p>H x 2pcs Leg Support</p> 
<p>I x 2pcs Cup Holder</p> 	<p>J x 4pcs Leg Support</p> 	<p>K x 2pcs Footrest</p> 	<p>L x 1pc Connecting Tray</p> 


## Hardware List


 <p>AA x 8+1pcs Screws (4*35)</p>	 <p>BB x 4pcs Bolts (M6*80)</p>	 <p>CC x 12+1pcs Bolts (M6*60)</p>	 <p>DD x 8+1pcs Bolts (M6*60)</p>	 <p>EE x 20+2pcs Bolts (M6*70)</p>
 <p>FF x 2pcs Bolt (M6*30)</p>	 <p>GG x 1pc</p>	 <p>x 1pc Allen Wrench</p>	 <p>x 1pc Phillips screwdriver (Not included)</p>	

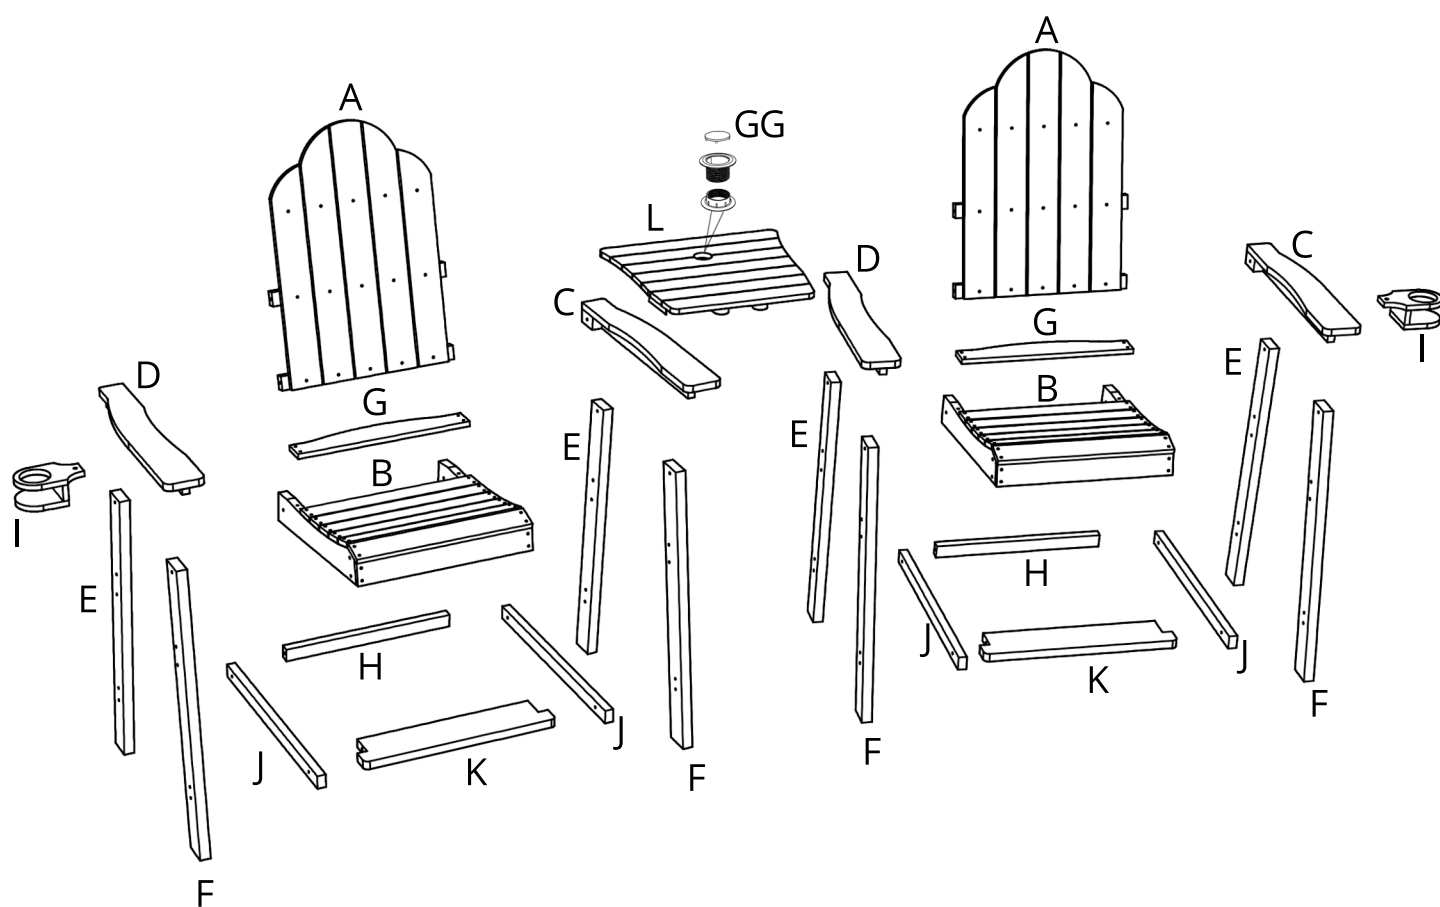

# Step1


AA  x8

 x1

 100%


80%  
X


100%  
✓

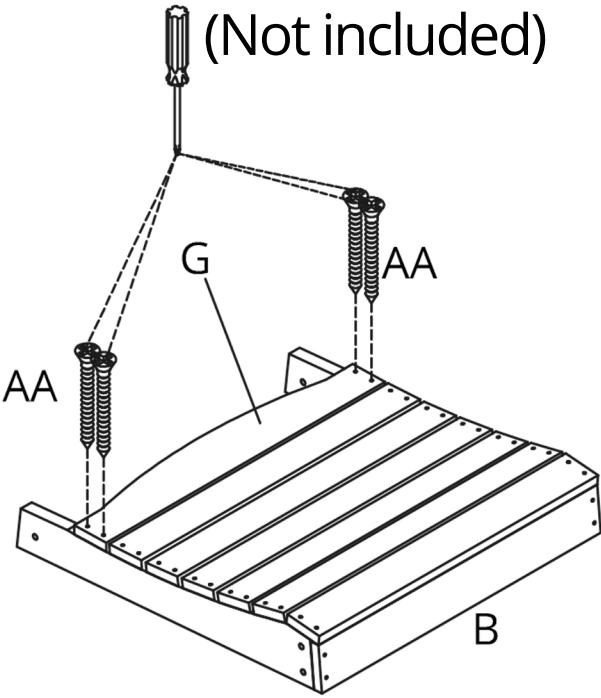


x 2

# Step2


EE  x8

 x1

 100%

80%  
X


100%  
✓

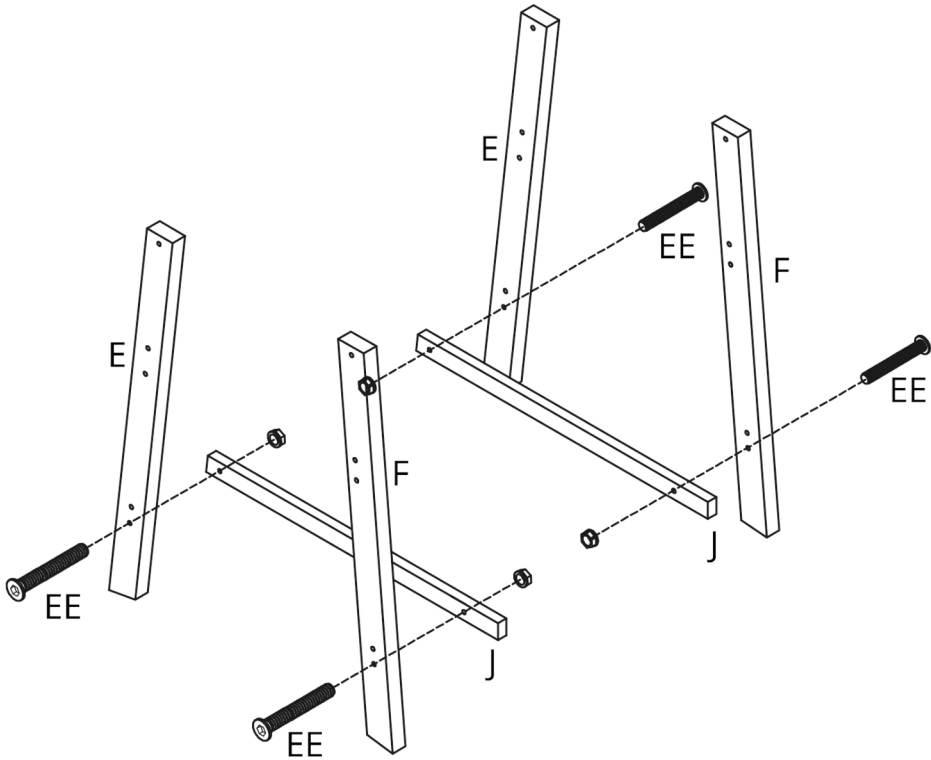



x 2





# Step3


EE  x12

 x1

 80%


 80%  
✓


 100%  
X

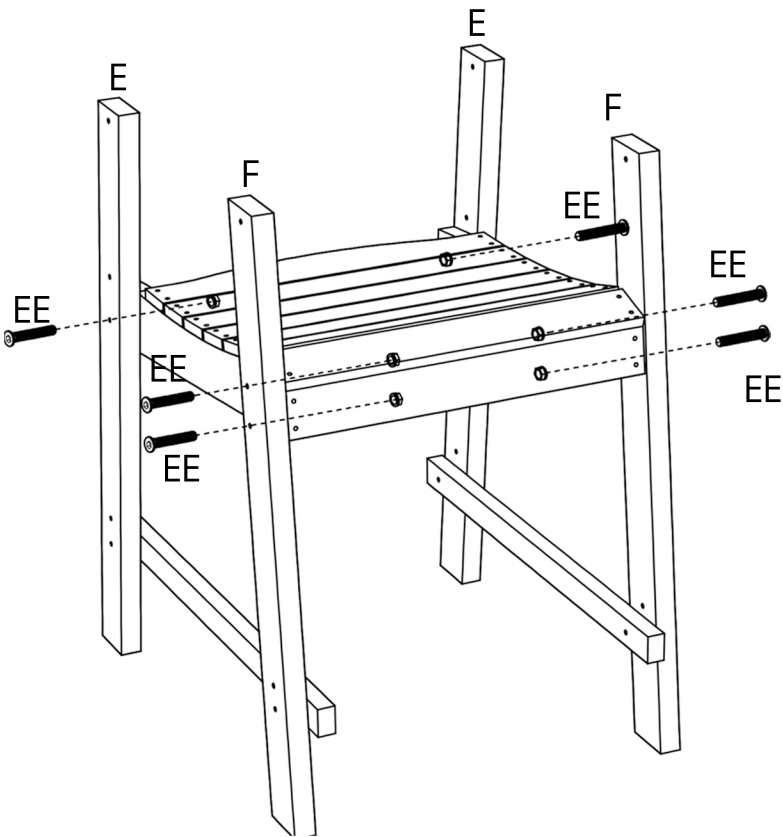



x 2


# Step4


CC  x8

 x1

 80%


 80%  
✓


 100%  
X

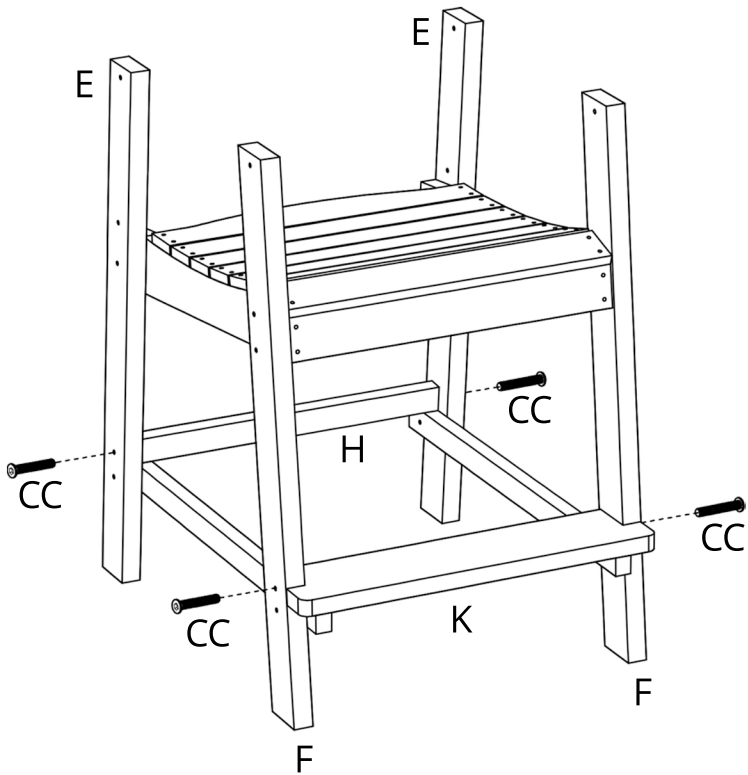



x 2


# Step5


DD  x8


 x1

 80%

 80%


 100%


 100%

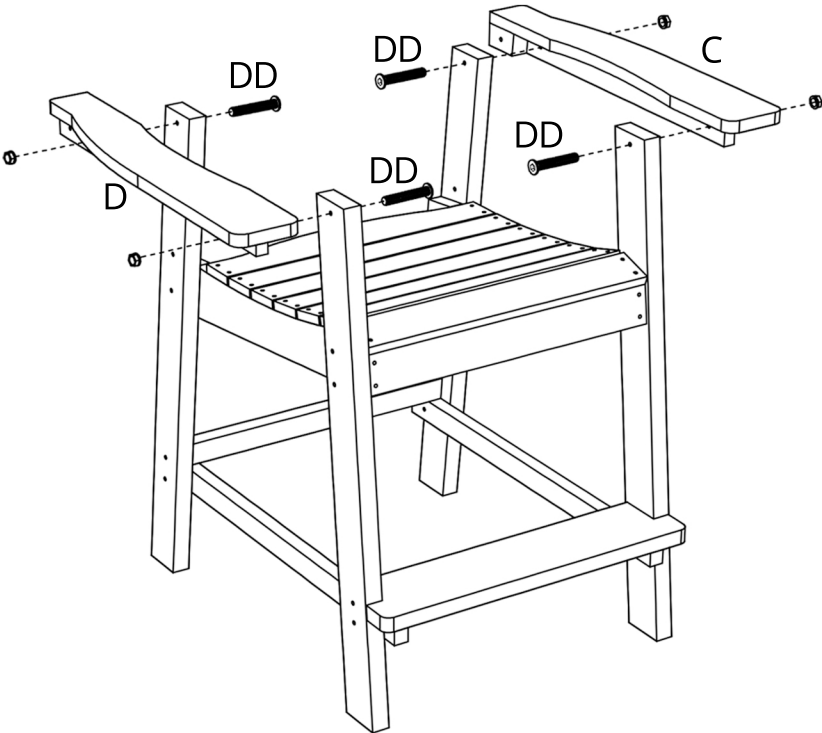



x 2


# Step6


CC  x4


 x1

 80%

 80%


 100%


 100%

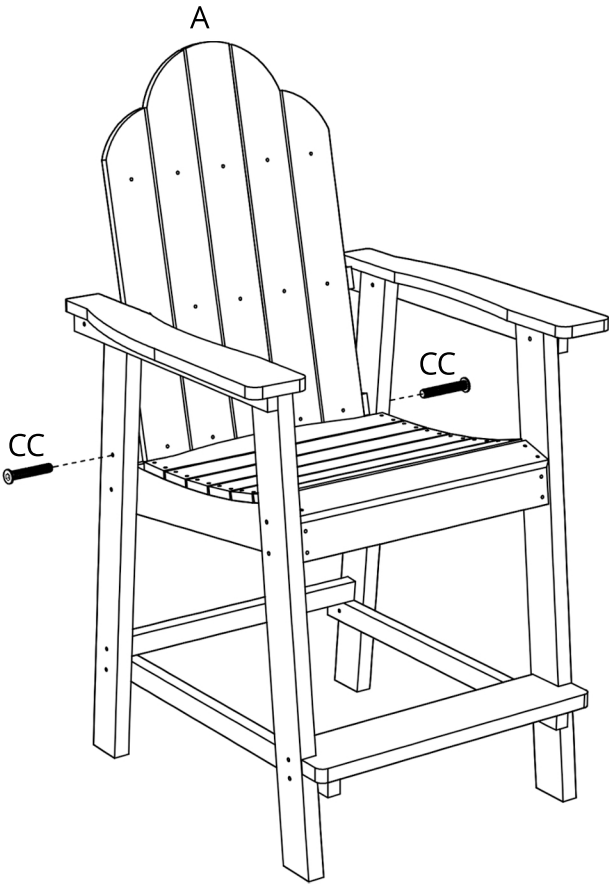


x 2

# Step7

BB  x4


 x1

 100%

80%  
X


100%  
✓


Finally, tighten the bolts that were not fully tightened in all previous steps.

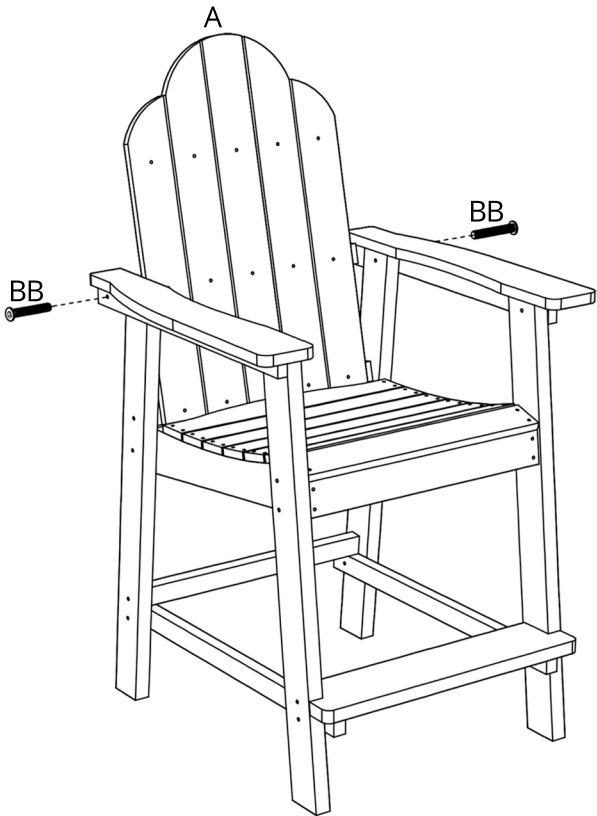


x 2

# Step8


FF  x1

 x1


 100%


80%  
X


100%  
✓

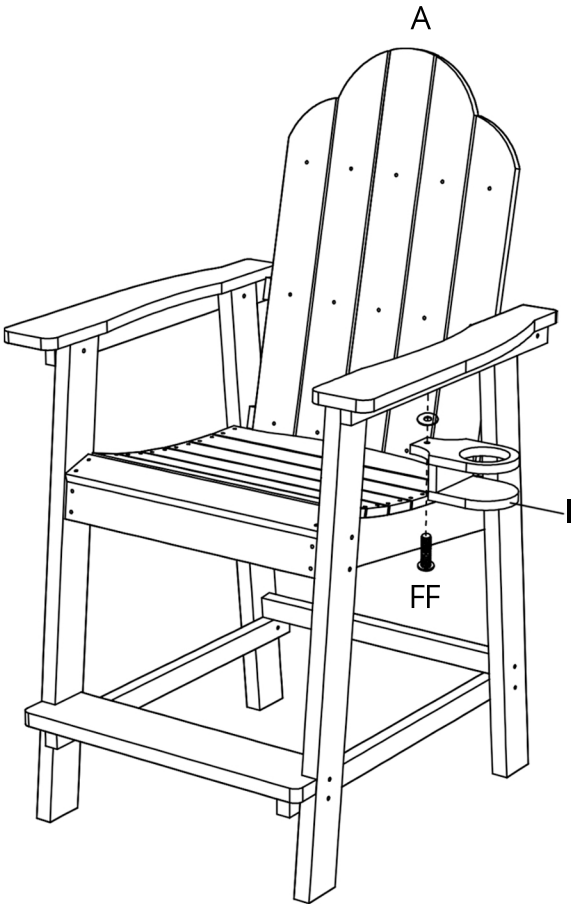


# Step9

FF  x1



 x1

 80%  
X




100%  
✓

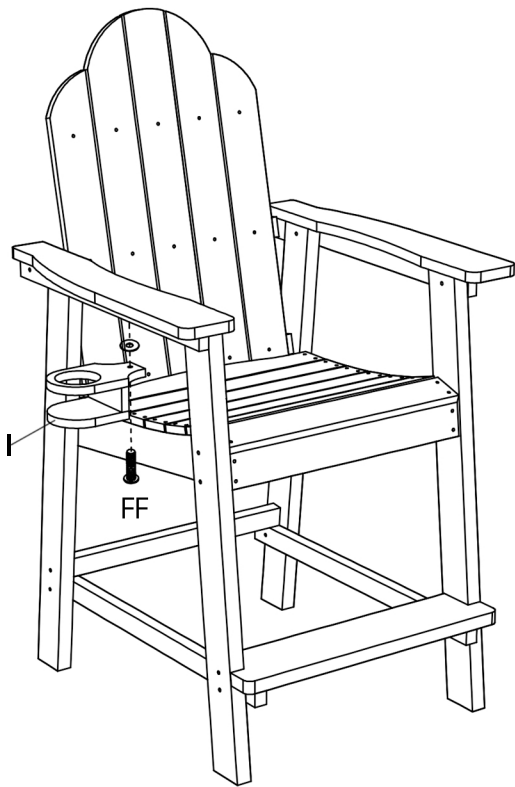


# Step10

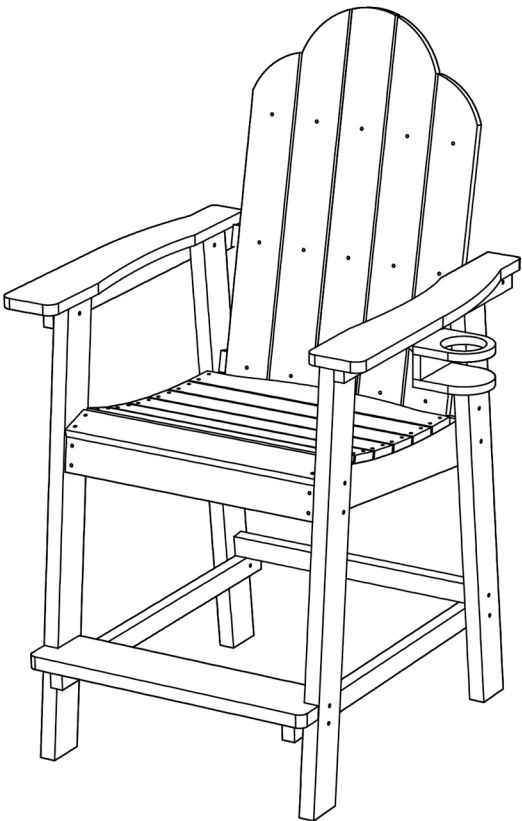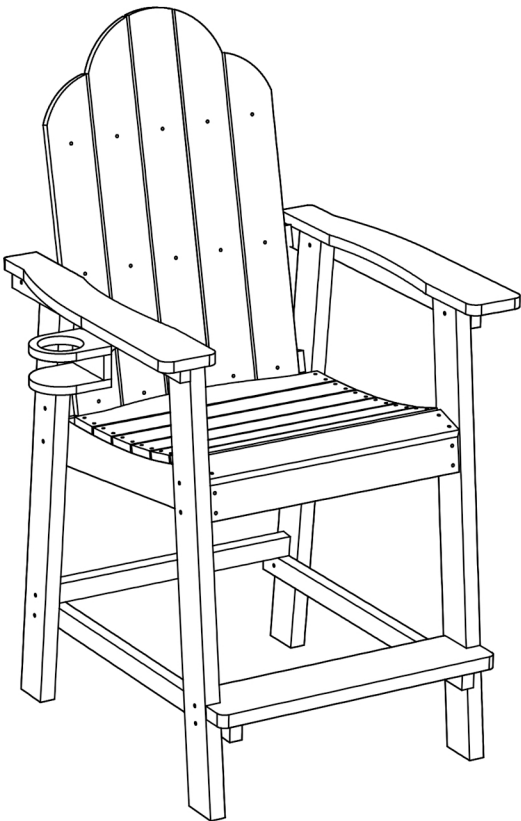



# Step11

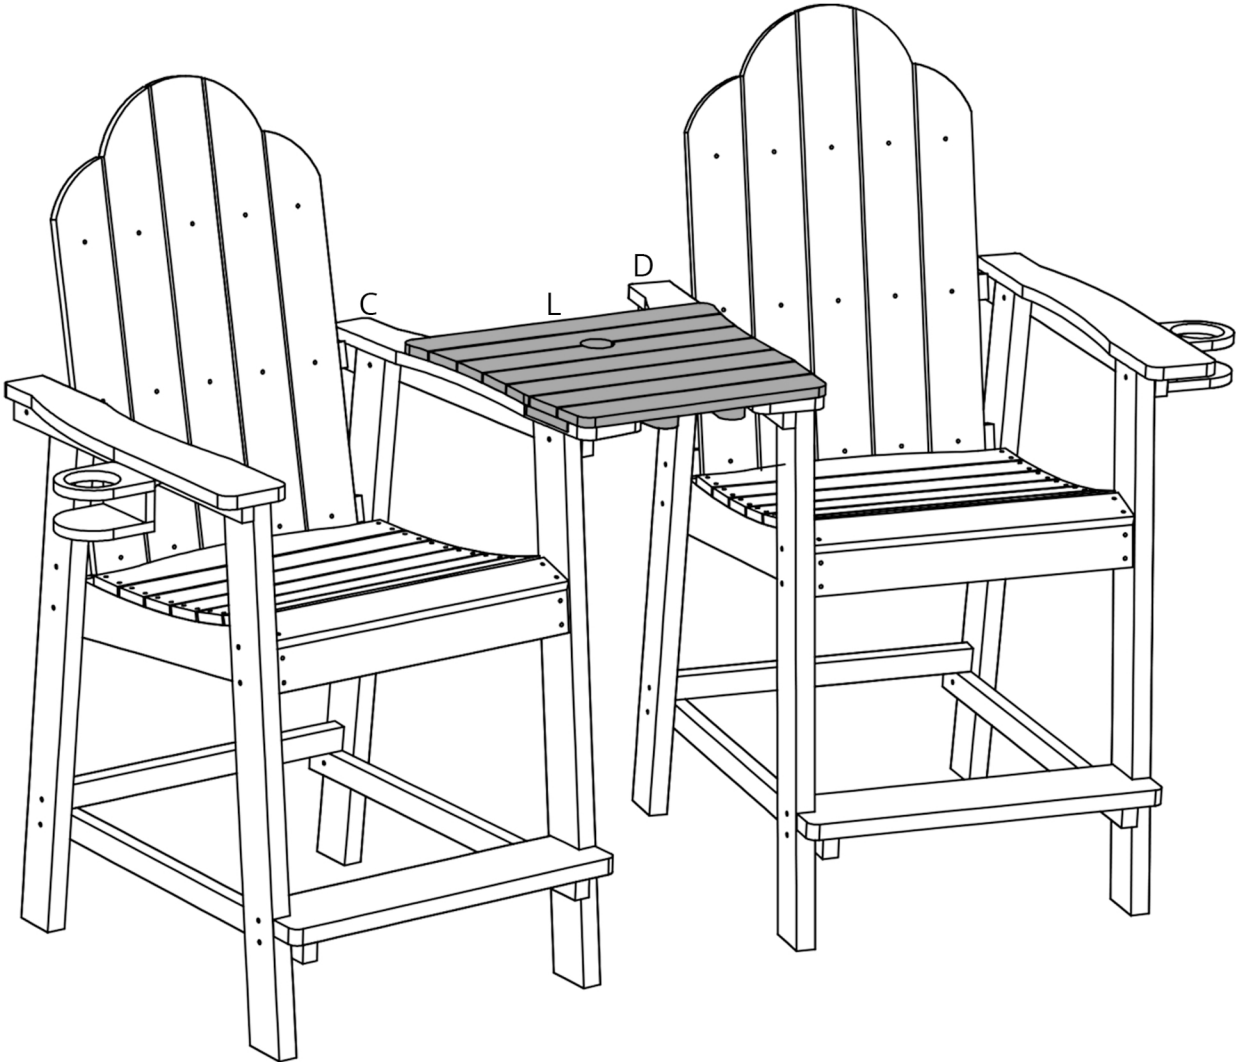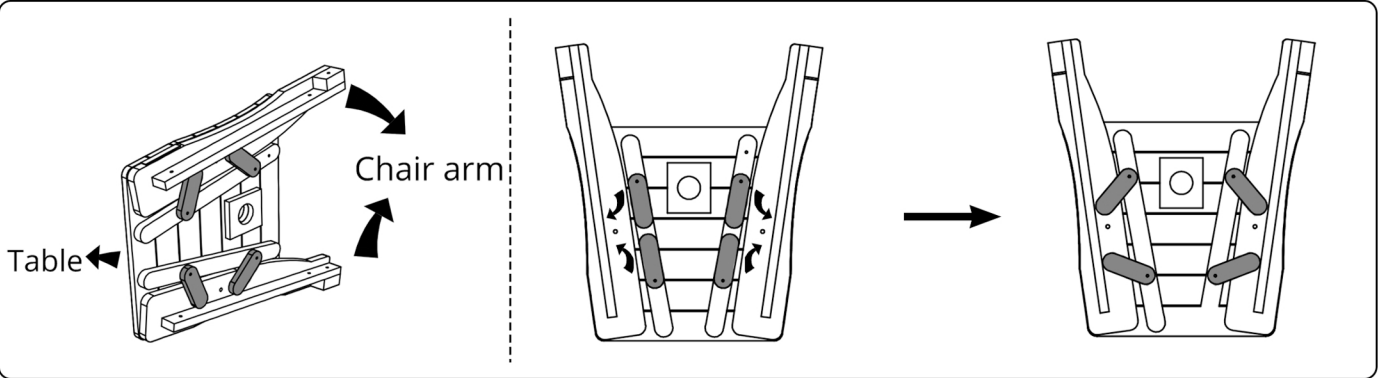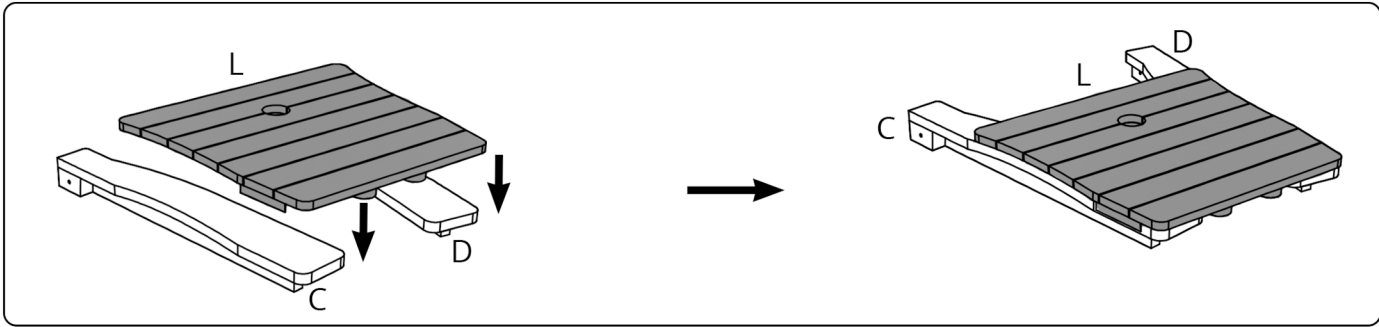

## Step12

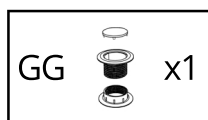

When the umbrella is not inserted into this hole, it is recommended to cover the cover in order to achieve smooth and convenient desktop shelves.

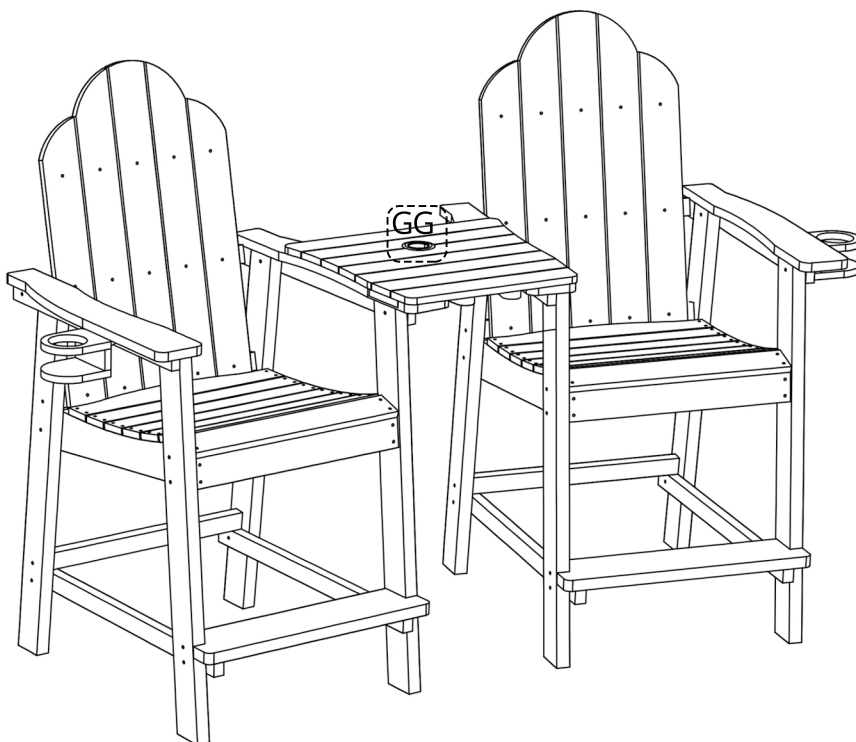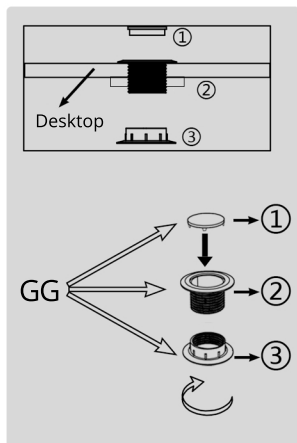

## FINISHED

