



# ASSEMBLY INSTRUCTIONS

ITEM#N719P30057

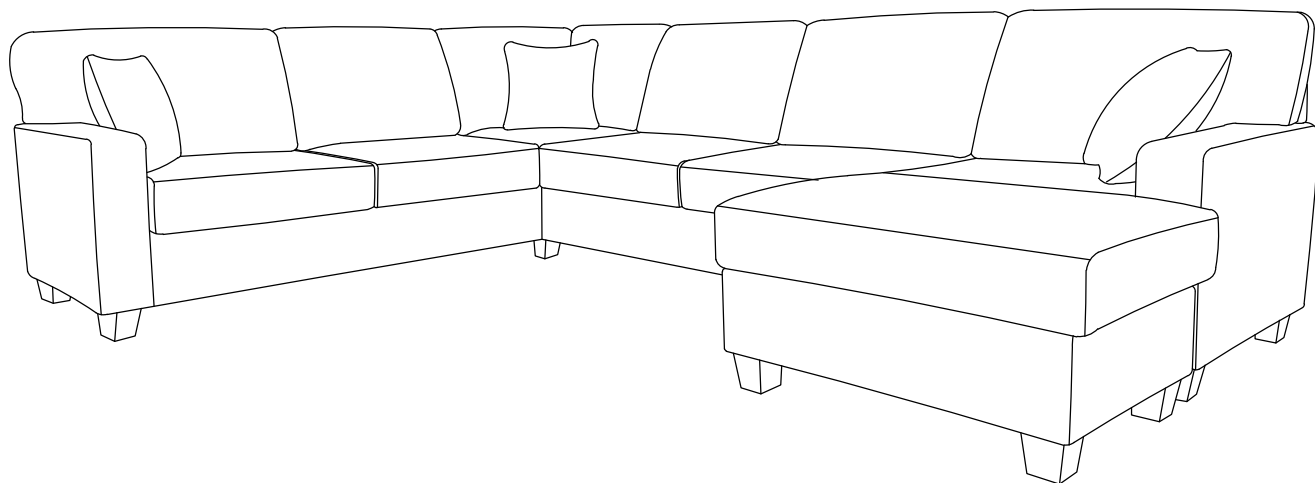











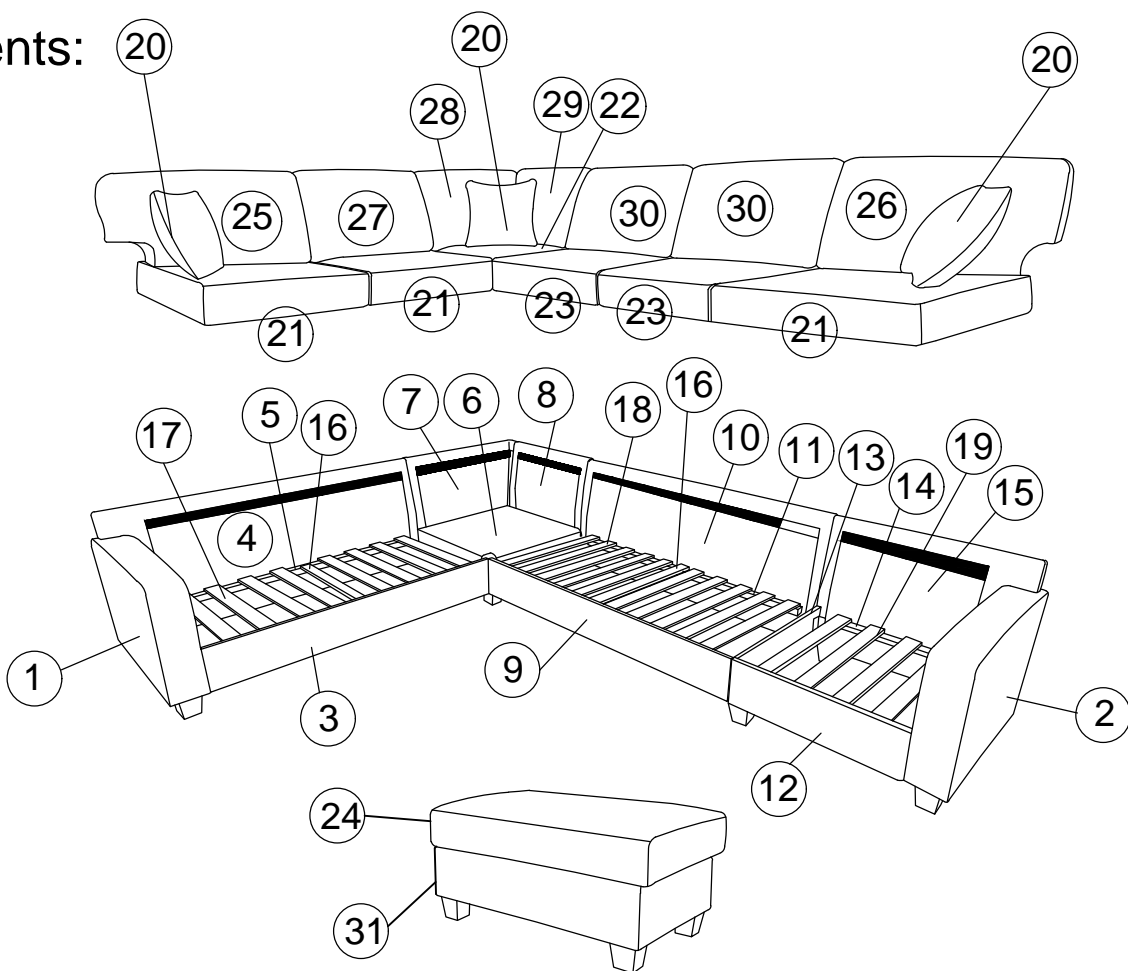





Sectional Sofa

Components:











**N719P300570**











# PACK LIST

<p>③</p>  <p>Left 2S Seat front panel 1PC</p>	<p>④</p>  <p>Left 2S backrest 1PC</p>	<p>⑤</p>  <p>Left 2S Seat wood brace 1PC</p>	<p>⑨</p>  <p>Armless 2S Seat front panel 1PC</p>	<p>⑩</p>  <p>Armless 2S backrest 1PC</p>	<p>⑪</p>  <p>Armless 2S Seat wood brace 1PC</p>
<p>⑭</p>  <p>Right 1S wood brace 1PC</p>	<p>Ⓐ</p>  <p>LEG 2 PC</p>	<p>Ⓑ</p>  <p>M8*100MM 14 PCS</p>	<p>Ⓒ</p>  <p>M8*35MM 12 PCS</p>	<p>Ⓓ</p>  <p>M8*18MM 46 PCS</p>	<p>Ⓔ</p>  <p>M8x19x2 48PCS</p>
<p>Ⓕ</p>  <p>Metal bracket 11PCS</p>	<p>Ⓖ</p>  <p>Metal bracket 1 PC</p>	<p>Ⓗ</p>  <p>Wrench 1PC</p>	<p>Ⓘ</p>  <p>Connect Bar 3PCS</p>		








**N719P300571**
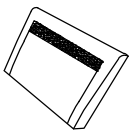
<p>①</p>  <p>Left Arm 1 PC</p>	<p>②</p>  <p>Right Arm 1PC</p>	<p>⑫</p>  <p>Right 1S front panel 1PC</p>	<p>⑯</p>  <p>Connect panel 2PCS</p>	<p>⑰</p>  <p>Left 2S Seat Slats 1PC</p>
<p>⑱</p>  <p>Armless 2S Seat Slats 1PC</p>	<p>⑲</p>  <p>Right 1S Seat Slats 1PC</p>	<p>⑳</p>  <p>Pillows 3 PCS</p>		

## N719P300572

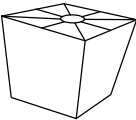
<p>7</p>  <p>corner backrest 1PC</p>	<p>8</p>  <p>corner backrest 1PC</p>	<p>15</p>  <p>Right 1S wood brace 1PC</p>	<p>25</p>  <p>Left 2S side Back cushion 1PC Page 6</p>	<p>26</p>  <p>Right 1S Back cushion 1PC</p>
<p>28</p>  <p>Corner Back cushion 1PC</p>	<p>29</p>  <p>Corner Back cushion 1PC</p>	<p>30</p>  <p>Armless 2S Back cushion 2PCS</p>	<p>31</p>  <p>Stool base 1PC</p>	<p>A</p>  <p>LEG 12 PCS</p>





## N719P300573

<p>6</p>  <p>corner base 1PC</p>	<p>13</p>  <p>Right 1S side panel 1PC</p>	<p>21</p>  <p>Seat cushion 3PCS</p>	<p>22</p>  <p>Corner Seat cushion 1PC</p>	<p>23</p>  <p>Armless 2s Seat cushion 2PCS</p>
<p>24</p>  <p>Stool Seat cushion 1PC</p>	<p>27</p>  <p>Left 2S middle Back cushion 1PC</p>			

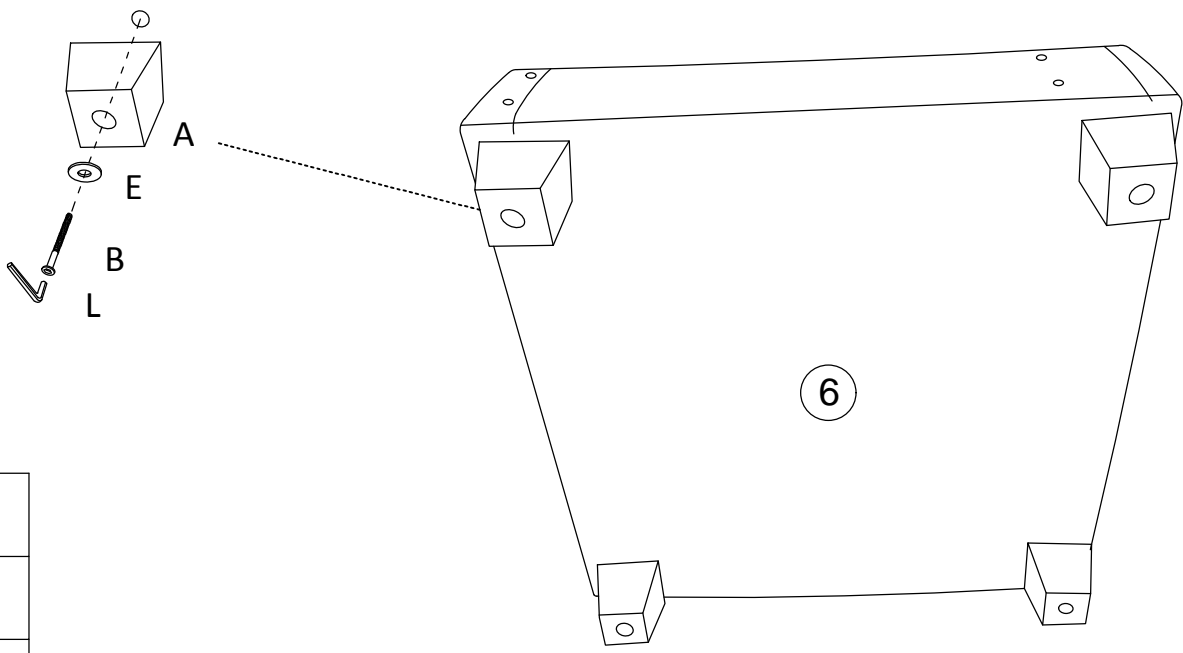
Assemble the Corner.


STEP 1:




	A X 4
	B X 4
	E X 4
	H X 1


STEP 2:

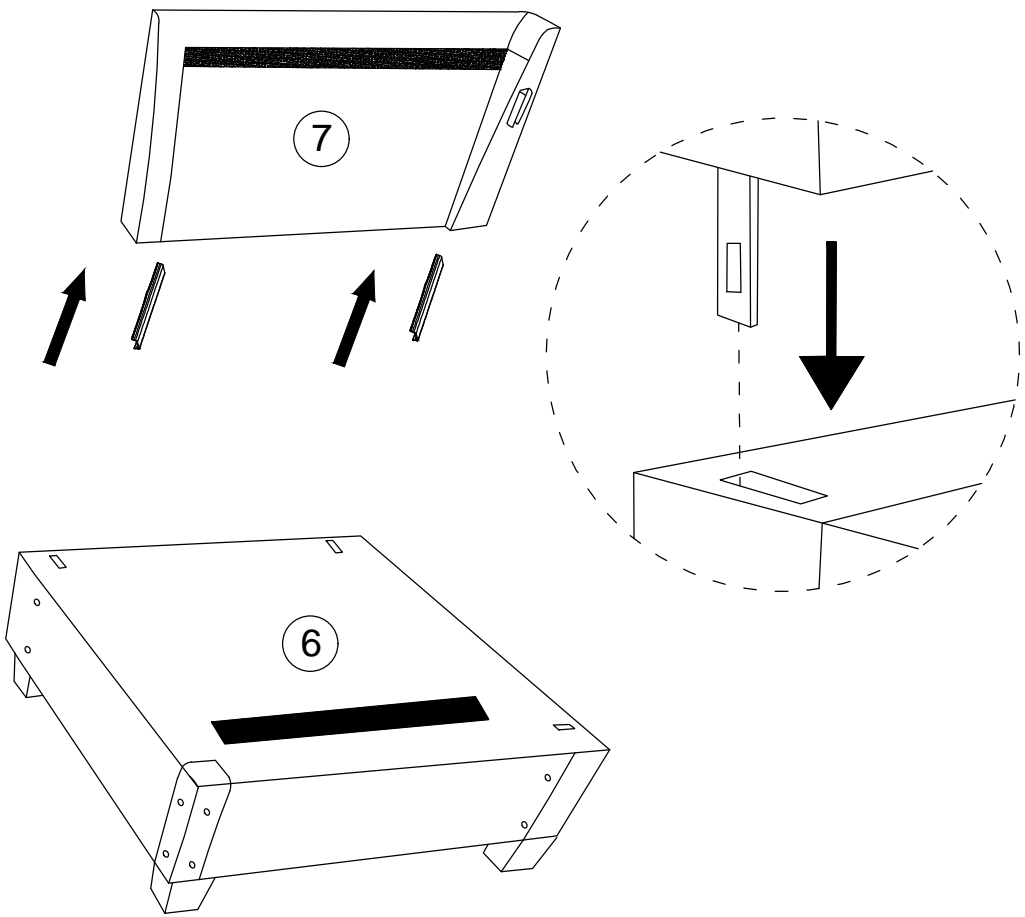



	I X 2
--	-------


STEP 3:

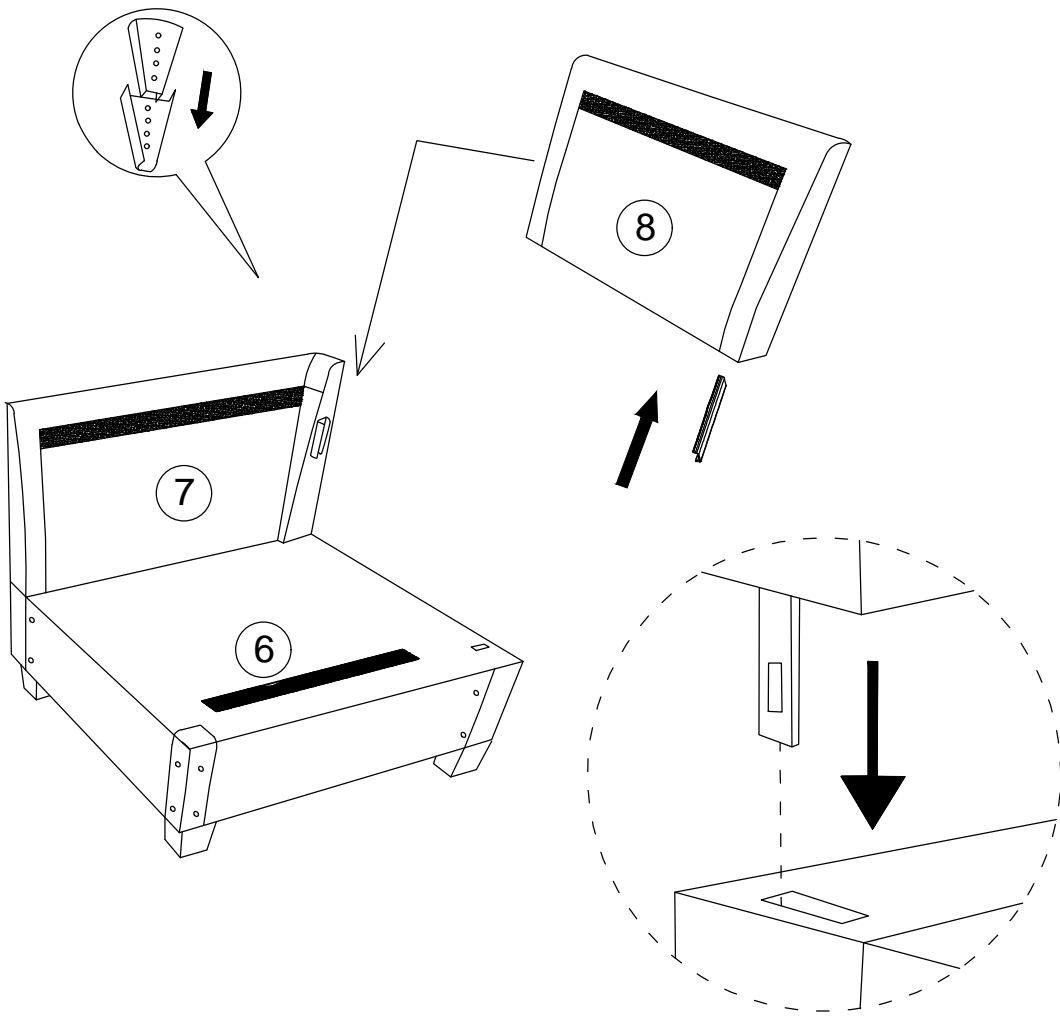

	I X 1
--	-------


STEP 4: Tighten half.

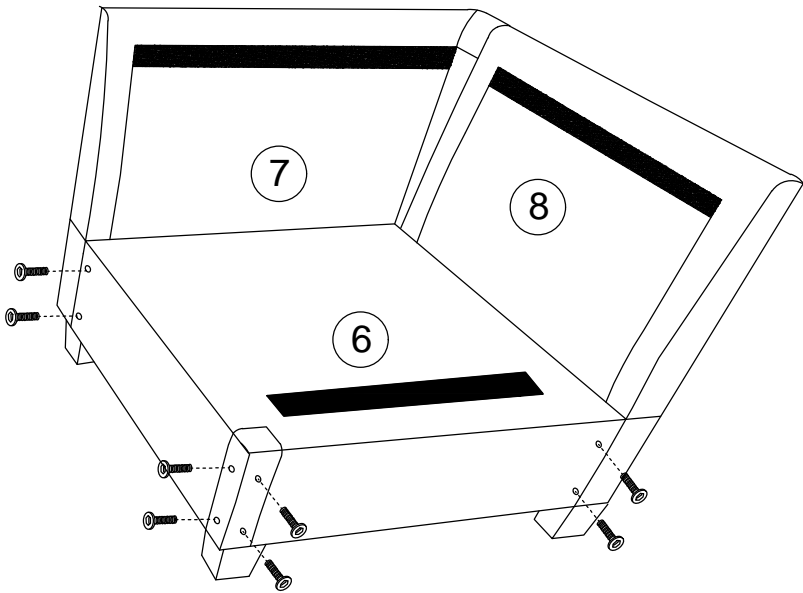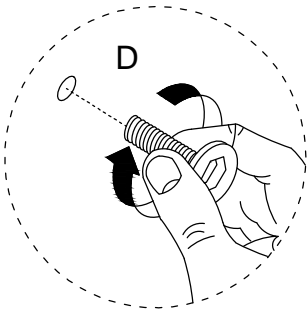





	D X 8
--	-------

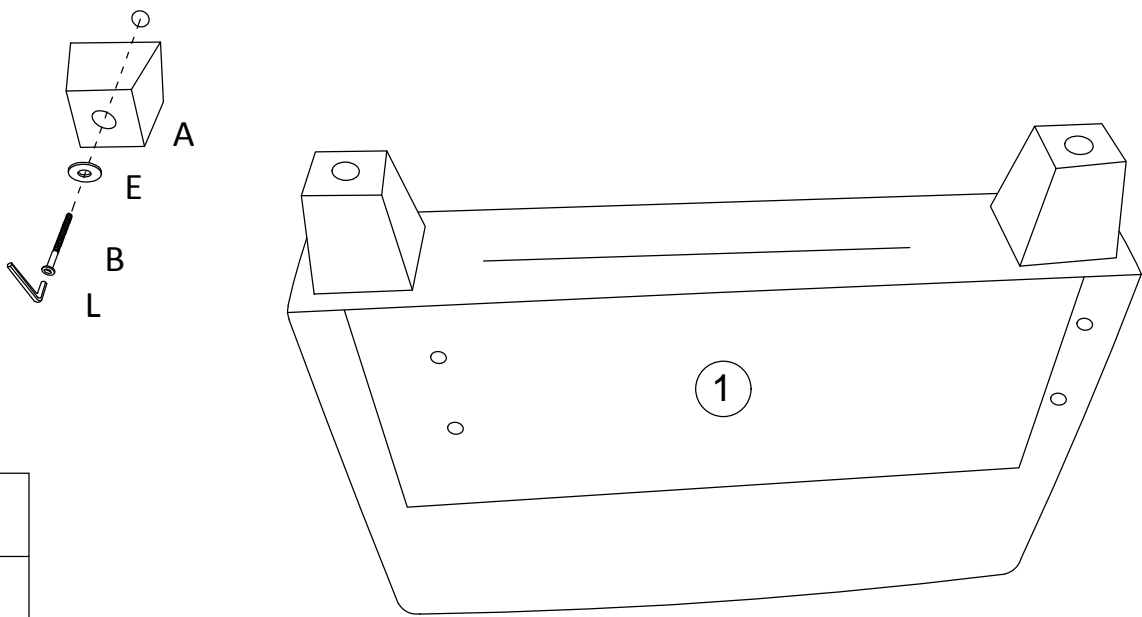
Assemble the Left arm 2S.




STEP 5:





	A X 2
	B X 2
	E X 2
	H X 1

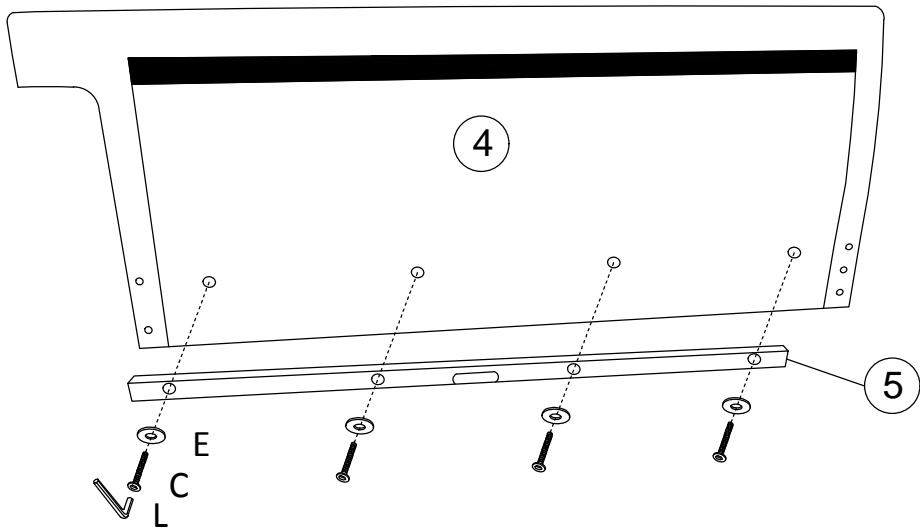



STEP 6:

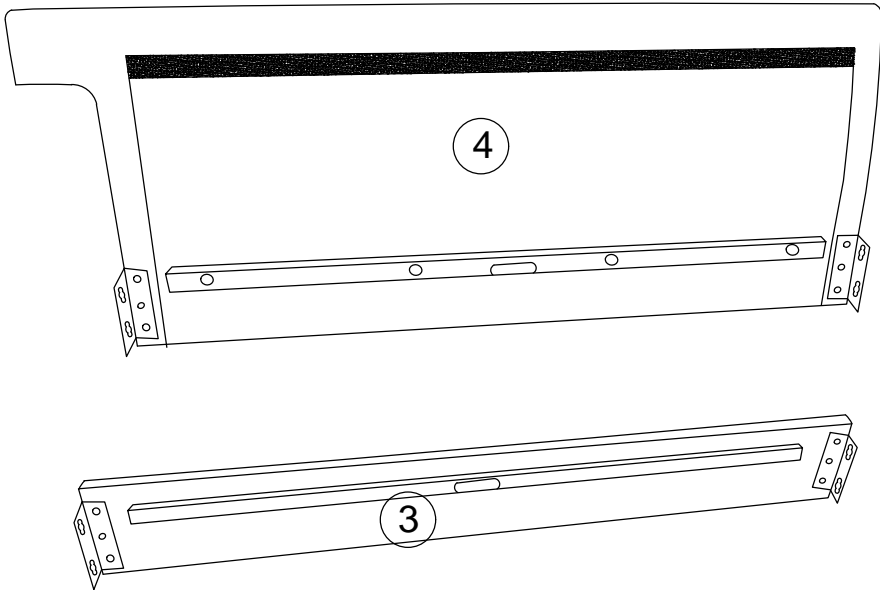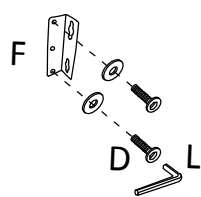



	C X 4
	E X 4
	H X 1


STEP 7:




	E X 8
	F X 4
	D X 8
	H X 1


STEP 8:Tighten half.

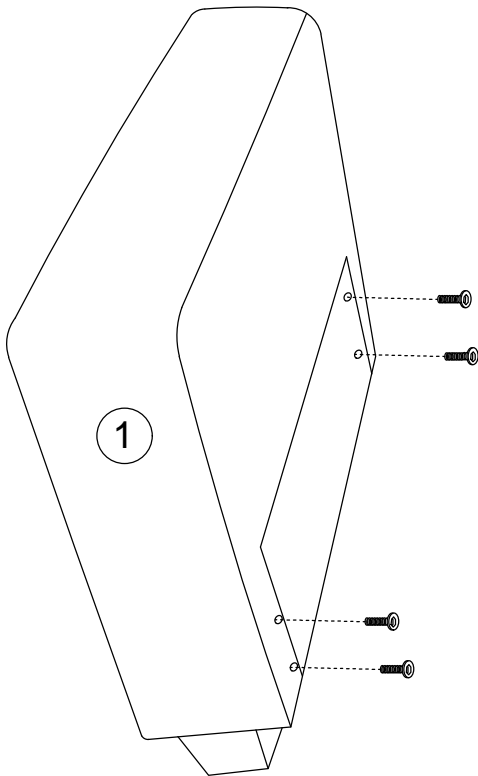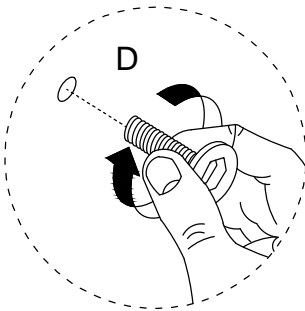

	D X 4
--	-------




STEP 9:

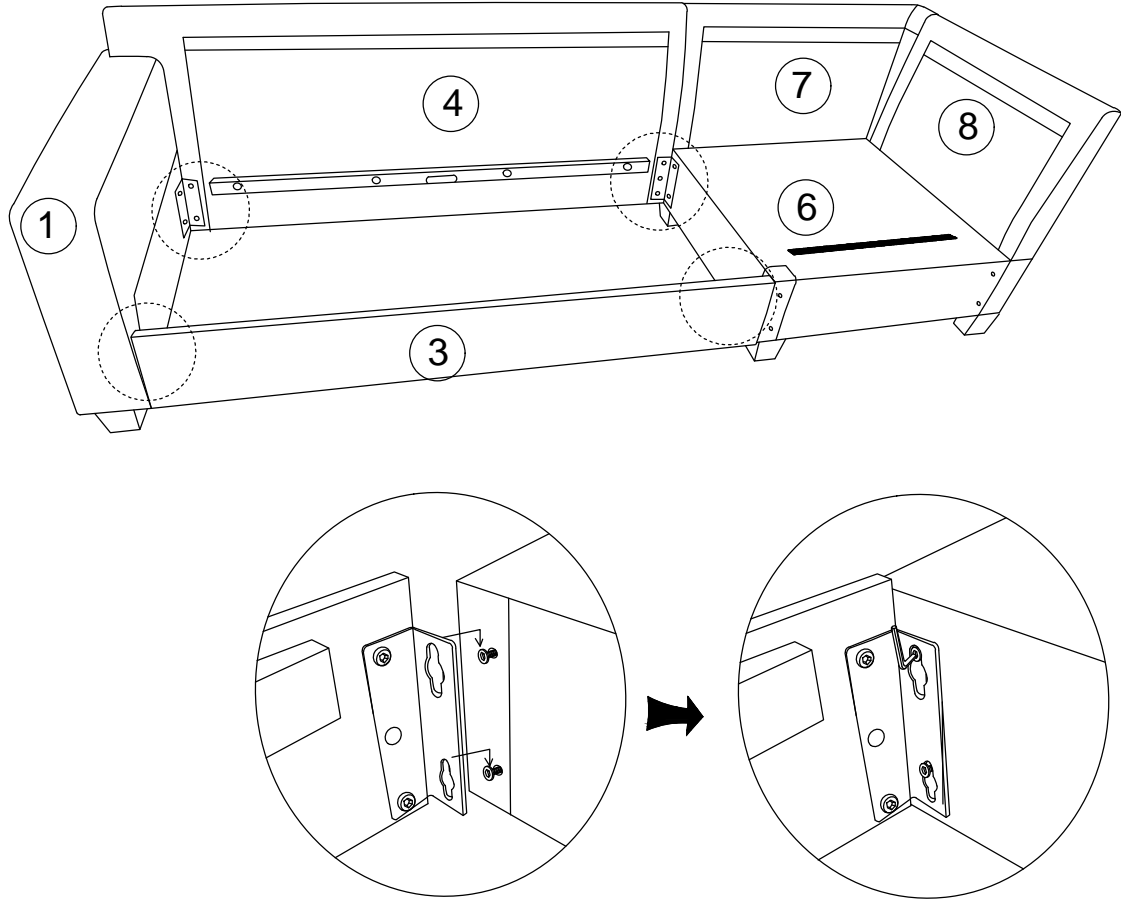





	H X 1
--	-------

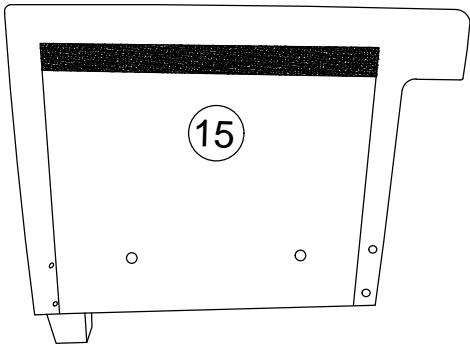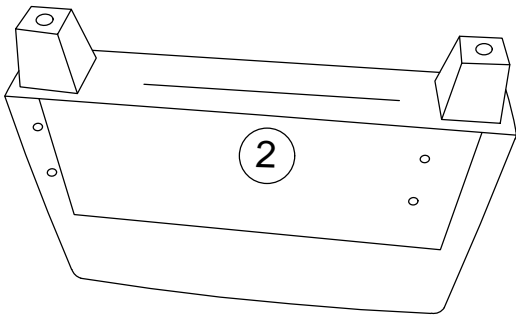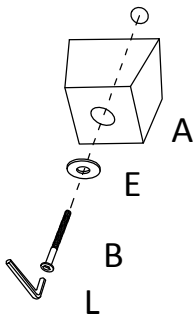Assemble the Right arm 1S.


STEP 10:






	A X 3
	B X 3
	E X 3
	H X 1



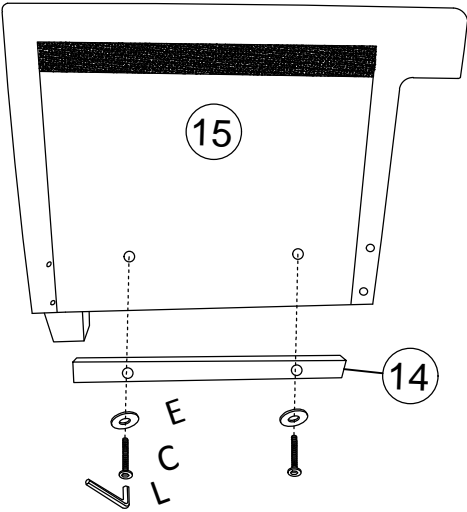



STEP 11:







	C X 2
	E X 2
	H X 1



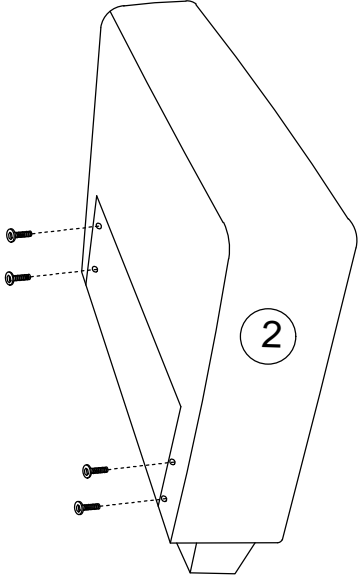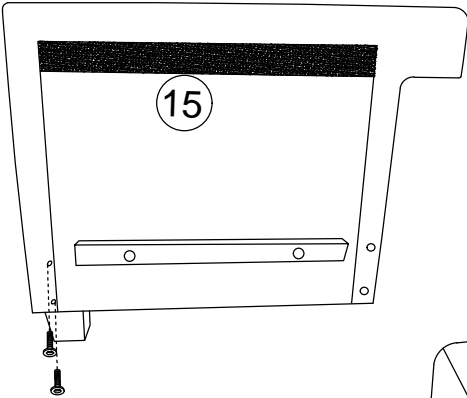
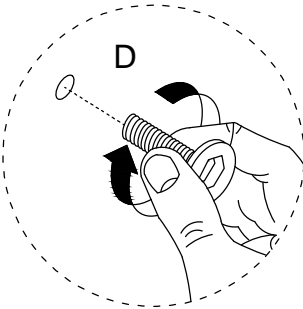


STEP 12: Tighten half.

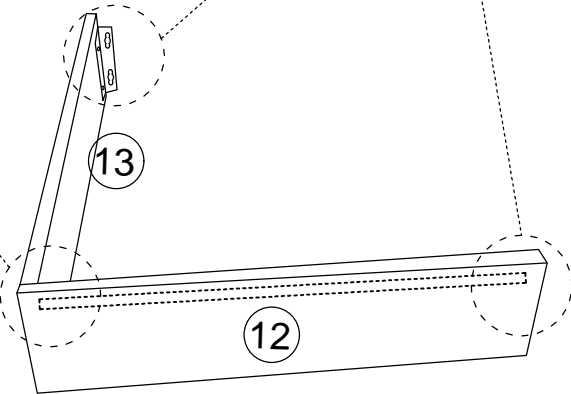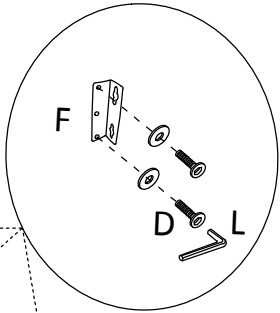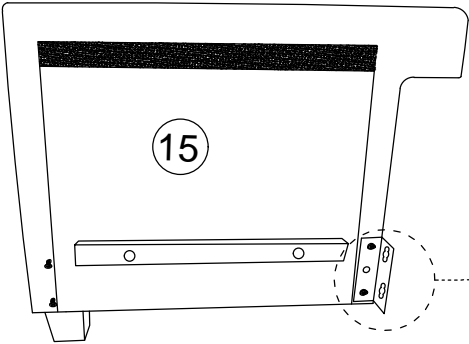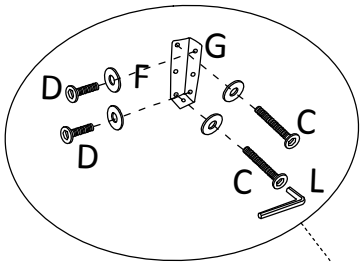



	D X 6
--	-------





STEP 13:

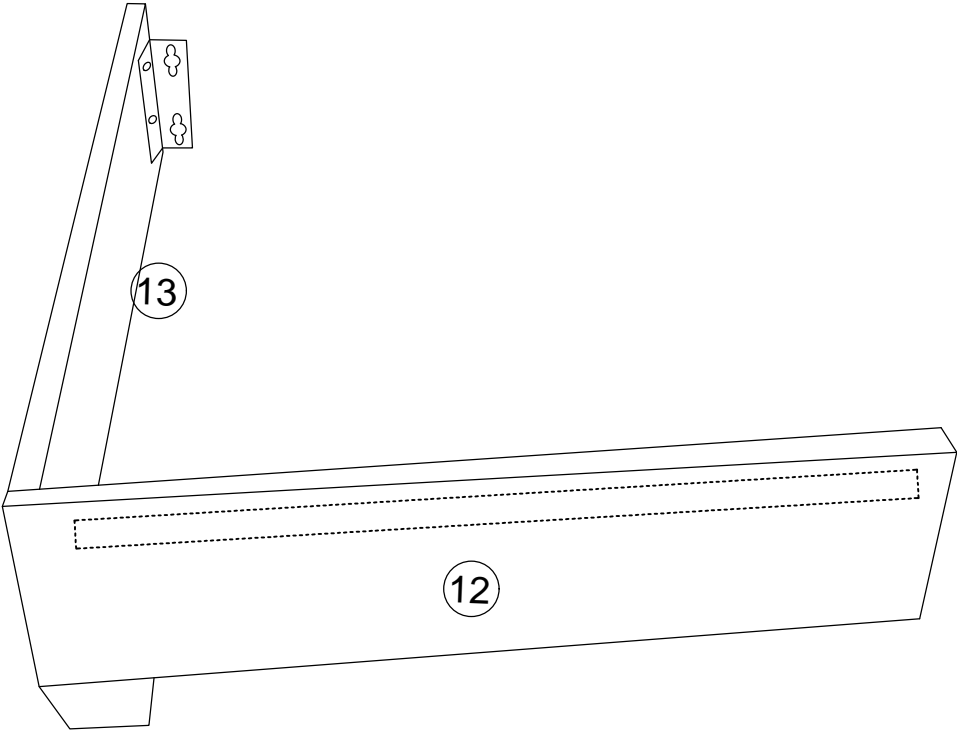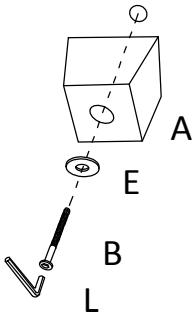


	C X 2
	E X 8
	G X 1
	F X 3
	D X 6
	H X 1



STEP 14:



	A X 1
	B X 1
	E X 1
	H X 1

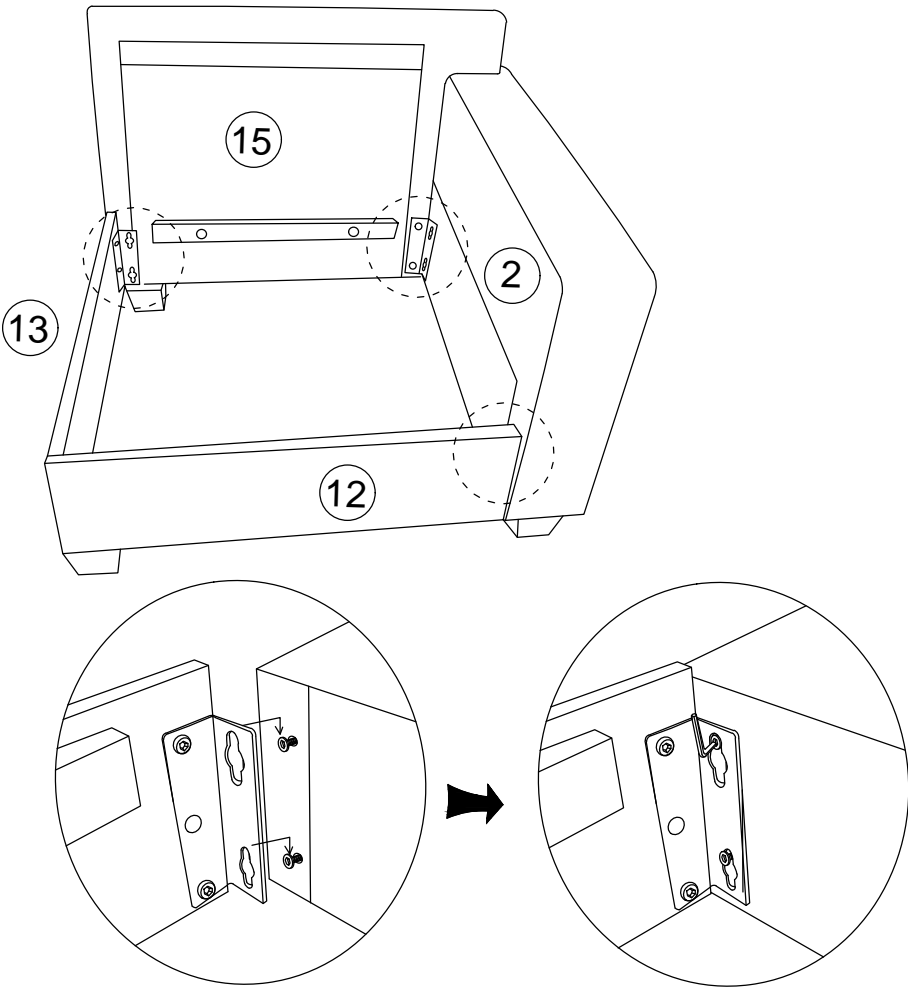
STEP 15:




	D X 8
	H X 1


Assemble the Armless 2S.

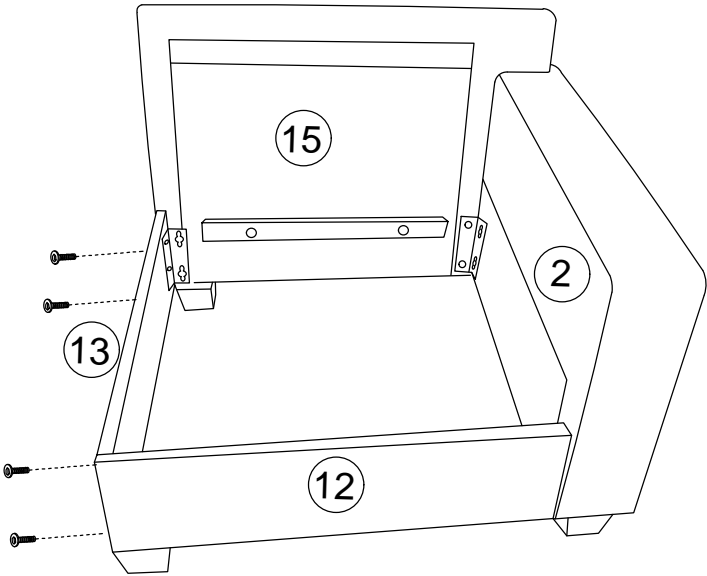


STEP 16:Tighten half.





	D X 4
--	-------

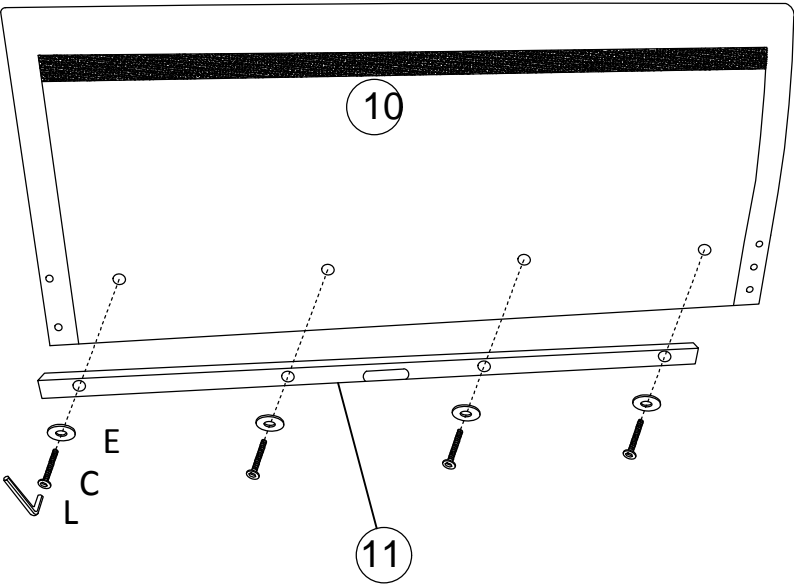



STEP 17:




	C X 4
	E X 4
	H X 1

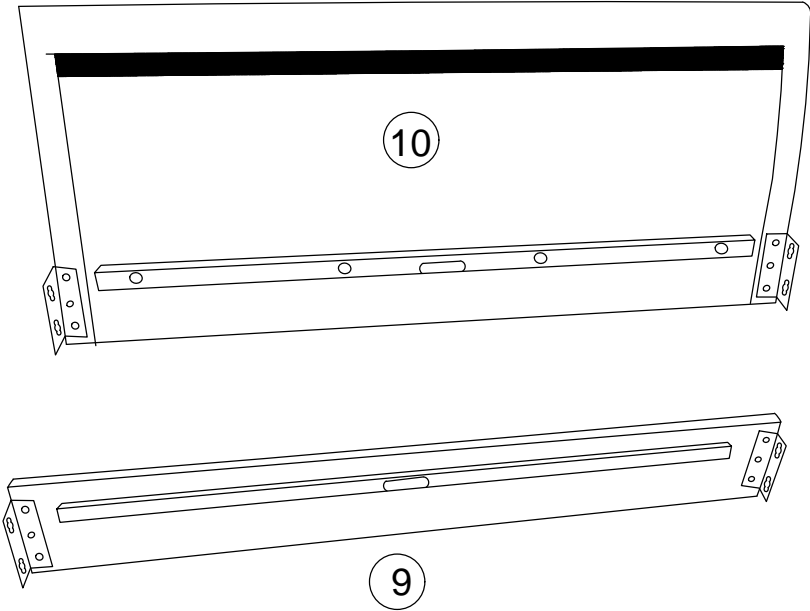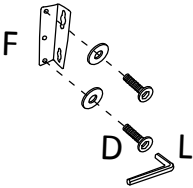STEP 18:




	E X 8
	F X 4
	D X 8
	H X 1

STEP 19:

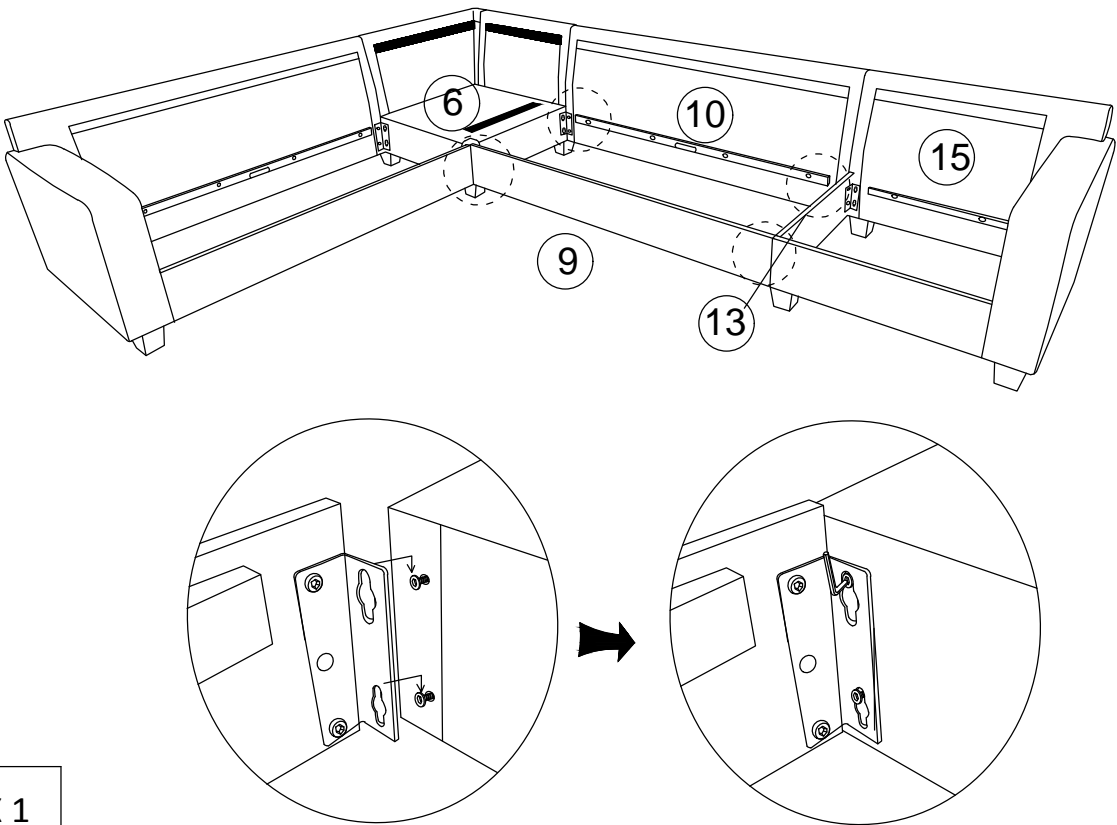



H X 1

STEP 20:

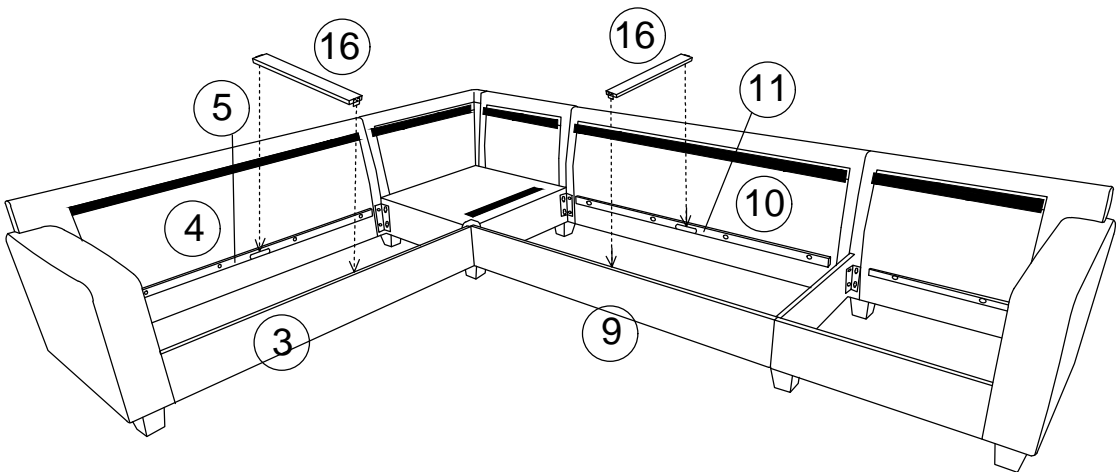


STEP 21:

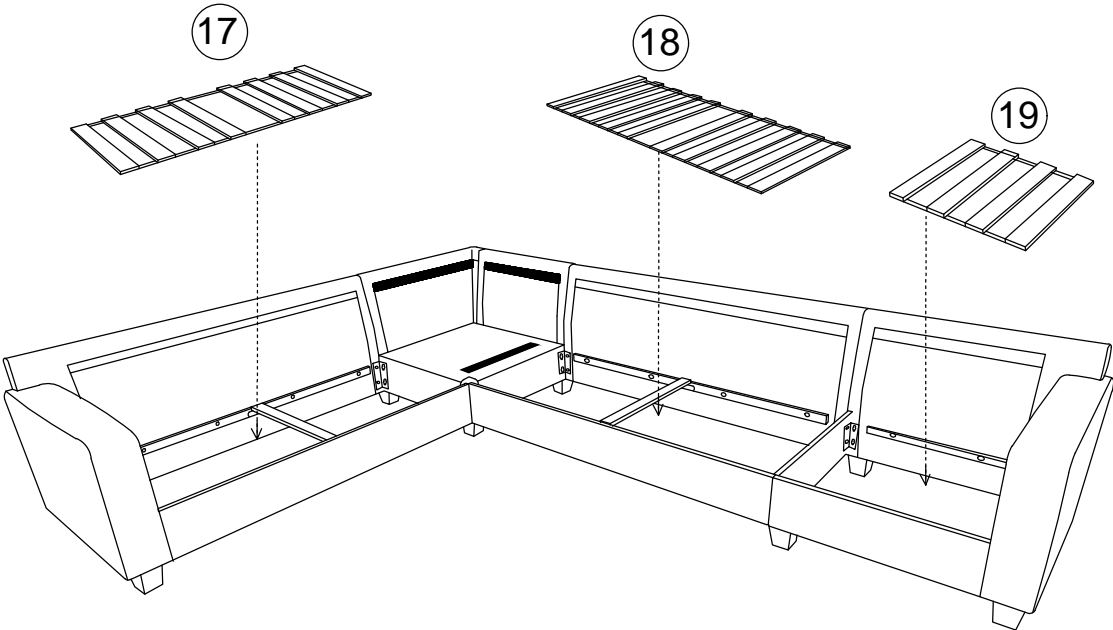


	H X 1
--	-------

STEP 22:

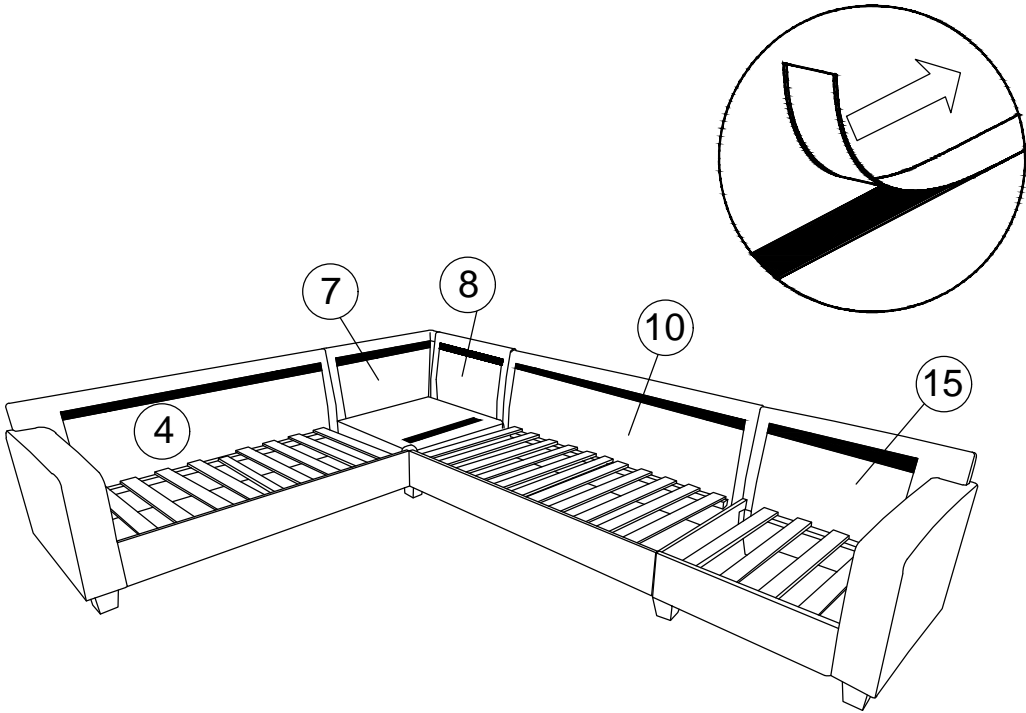

## TIPS:

- 1, Please do not open the compress packaging until your sofa frame is completely assembled.
- 2, Compress cushions or pillows need to fully fluffed within 72 hours for your perfect use.
- 3, Please keep children away from plastic bag or any small pieces of stuff.
- 4, After assembly is completed, don't forget to pat the back cushions and seat cushions, make them recovering better. And wait 72 hours for fully rebound.

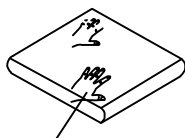


Pat and tidy the cushions

- 5, Cushions should be regularly maintained for perfect use.

## STEPS for compressed pack:

(1) open the carton -- (2) take out the compressed pack -- (3) cut from edge and take out the cushion -- (4) Put the cushion on floor -- (5) Pat and tidy the cushion -- (6) Wait to rebound completely after 72 hours.

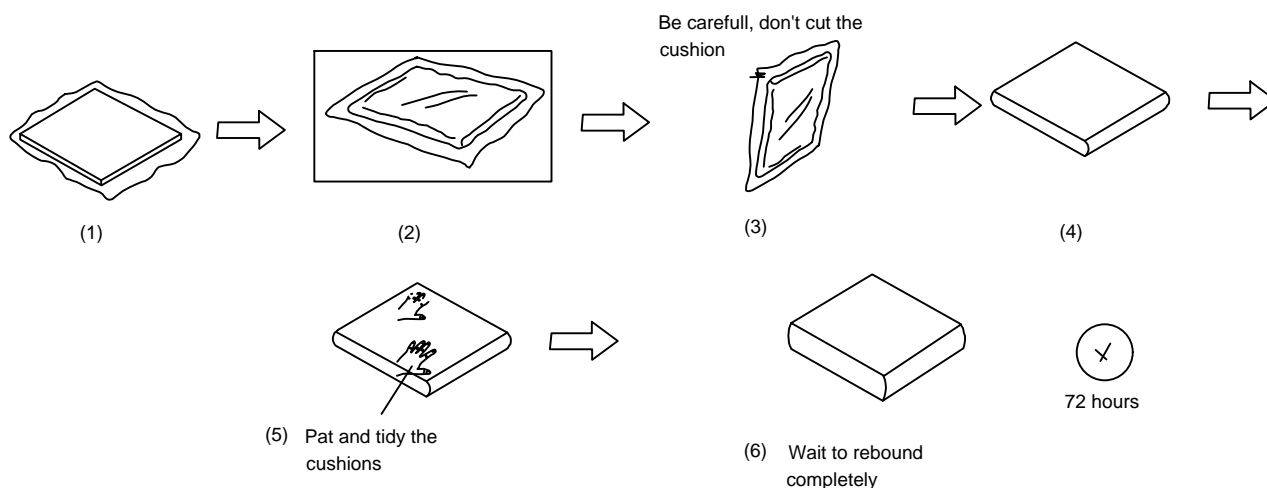


## CAUTION

:


PLEASE DO NOT OPEN COMPRESSED PLASTIC CUSHION BACK UNTIL YOUR SOFA FRAME IS COMPLETELY ASSEMBLED, OTHERWISE, IT CAN'T BE REPACKED IN ORIGINAL PACKING WAY TO RETURN.



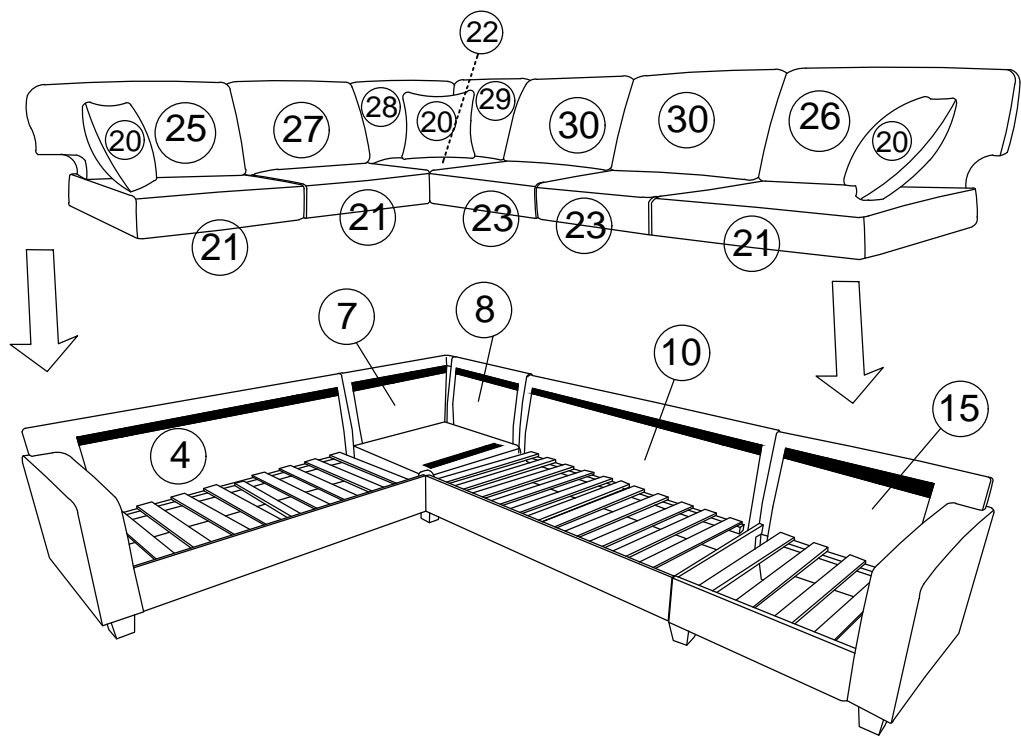

STEP 23:

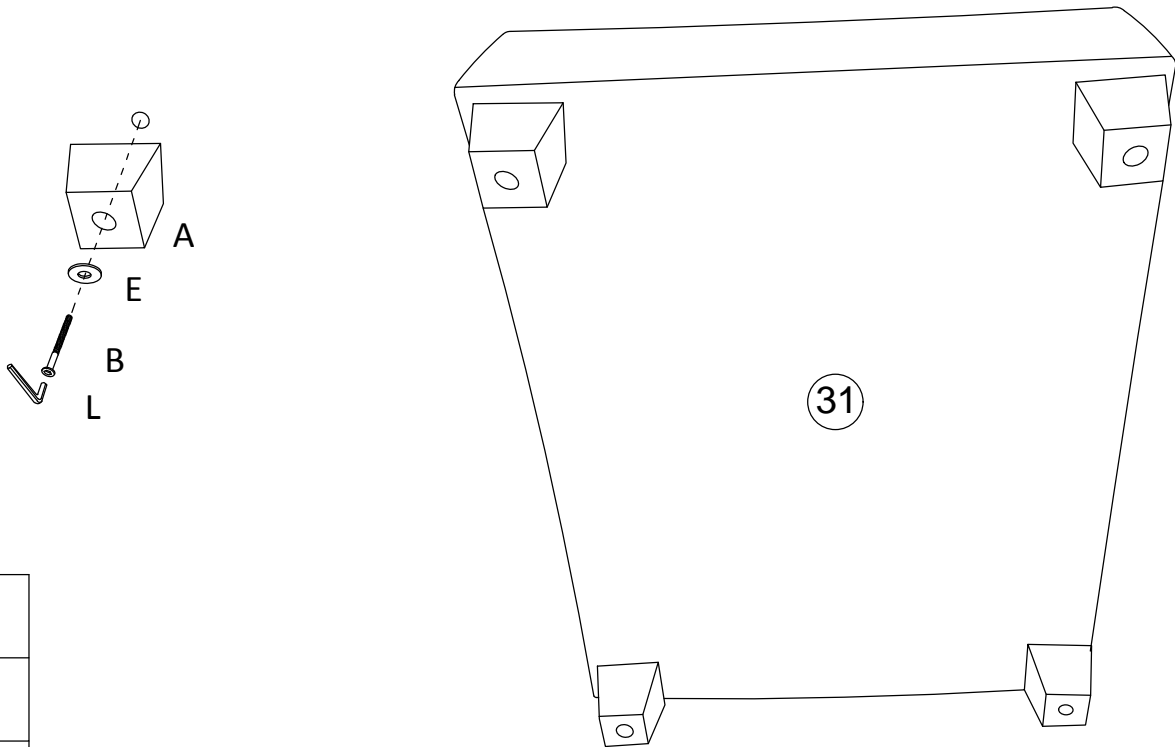

Assemble the Stool.


STEP 24:



	A X 4
	B X 4
	E X 4
	H X 1



STEP 25:

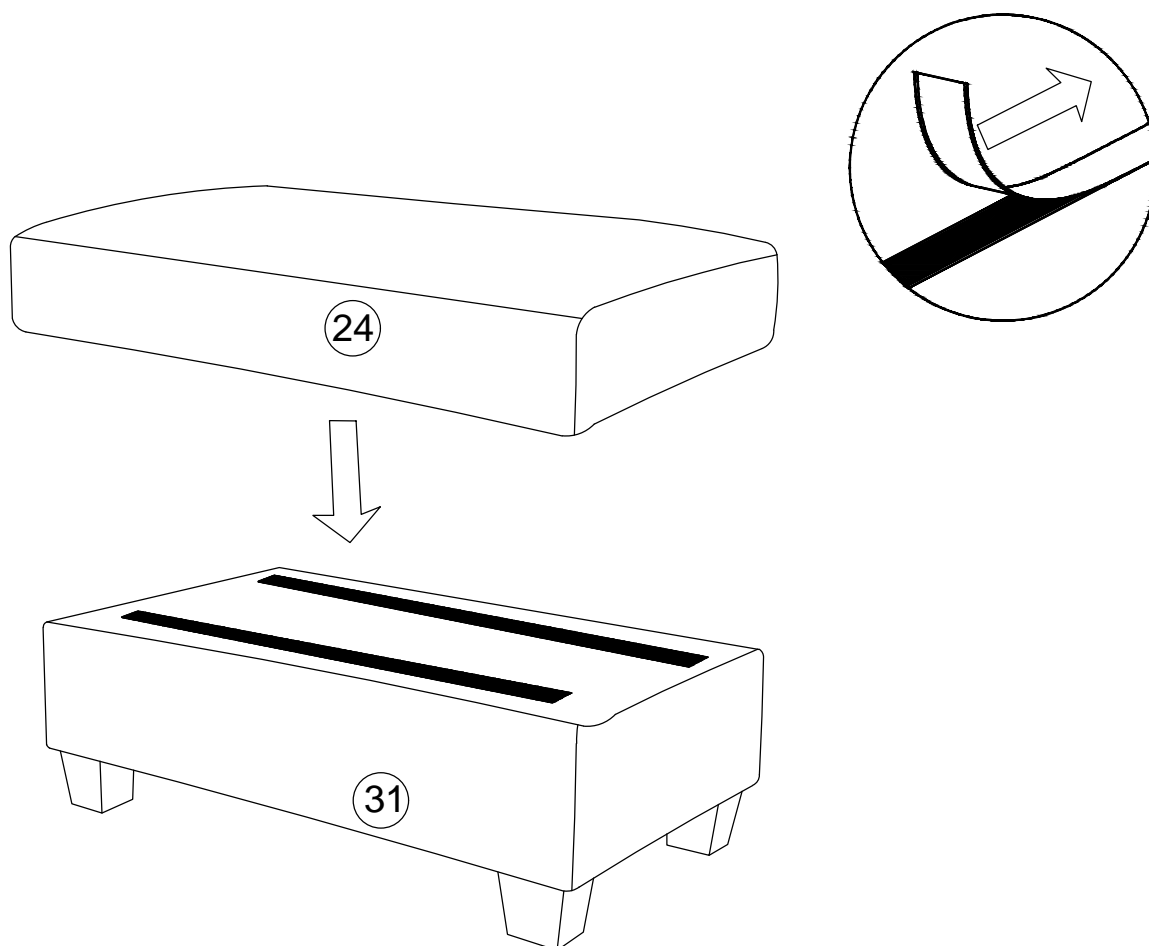

Complete

