


# Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P288229

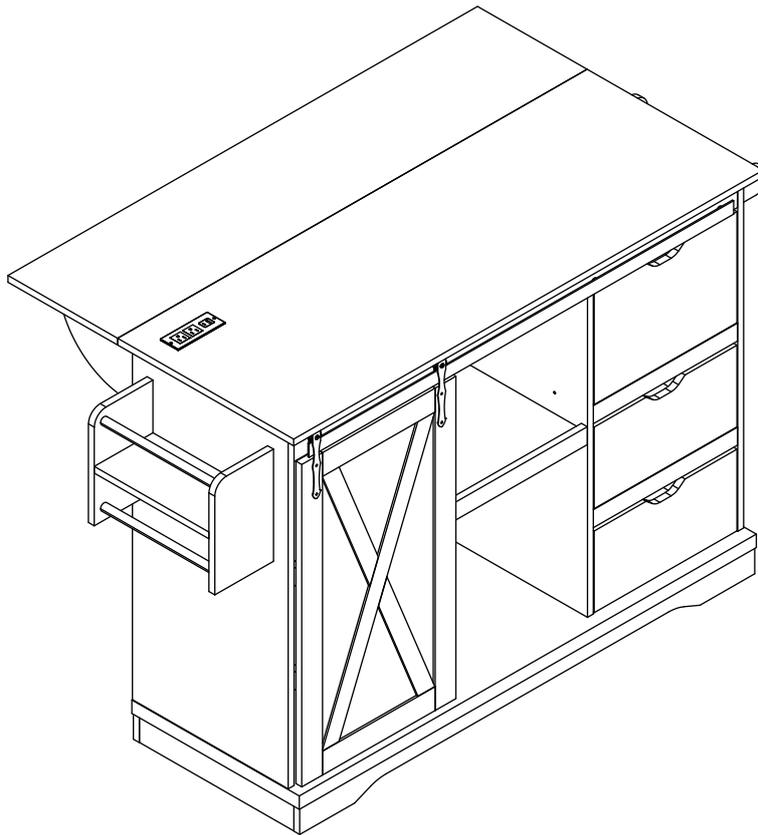

## Dimensions

Width-55.5inch

Depth-17.7inch+11inch

Height-36.9inch

**Important – Please read these instructions fully before starting assembly**

Issue 1 - 09/04/25



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose











Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


# Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

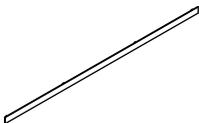

<p><b>(A)</b></p>  <p>Cam Bolt x 50</p>	<p><b>(B)</b></p>  <p>Cam lock x 50</p>	<p><b>(C)</b></p>  <p>6*30mm Dowel x 52</p>	<p><b>(D)</b></p>  <p>4*35mm Screw x 24</p>
<p><b>(E)</b></p>  <p>3.5*12mm Screw x 66</p>	<p><b>(F)</b></p>  <p>3*12mm Screw x 36</p>	<p><b>(G)</b></p>  <p>Angle iron x 6</p>	<p><b>(H)</b></p>  <p>6*50mm Screw x 4</p>
<p><b>(I)</b></p>  <p>Vertical nut x 4</p>	<p><b>(J)</b></p>  <p>6*12mm Screw x 4</p>	<p><b>(K)</b></p>  <p>Caster x 3</p>	<p><b>(L)</b></p>  <p>Locking caster x 2</p>
<p><b>(M)</b></p>  <p>6*14mm Screw x 20</p>	<p><b>(N)</b></p>  <p>hinge x 7</p>	<p><b>(O)</b></p>  <p>Pivot x 5</p>	<p><b>(P)</b></p>  <p>4*35mm Screw x 4</p>
<p><b>(Q)</b></p>  <p>Tergite x 1</p>	<p><b>(R)</b></p>  <p>Slide rail x 2</p>	<p><b>(S)</b></p>  <p>6*20mm Screw x 4</p>	<p><b>(T)</b></p>  <p>Screwdriver x 1</p>
<p><b>(U)</b></p>  <p>Back plate buckle x 12</p>	<p><b>(V)</b></p>  <p>3*14mm Screw x 12</p>	<p><b>(W)</b></p>  <p>Pulley x 1</p>	<p><b>(X)</b></p>  <p>4*25mm Screw x 20</p>
<p><b>(CR)</b></p>  <p>Runner 300mm x 3</p>	<p><b>(CL)</b></p>  <p>Runner 300mm x 3</p>	<p><b>(DR)</b></p>  <p>Runner 300mm x 3</p>	<p><b>(DL)</b></p>  <p>Runner 300mm x 3</p>

## Tools required

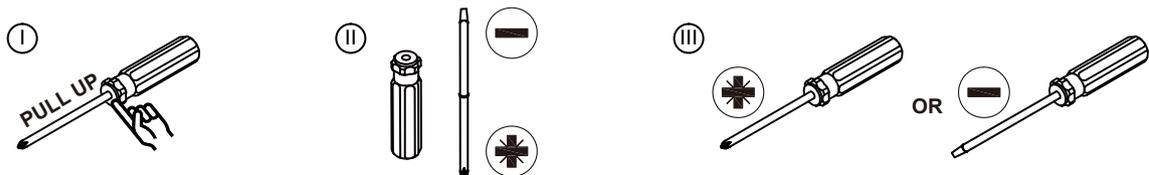

Screwdrivers can be converted to Phillips and Slotted.

## Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

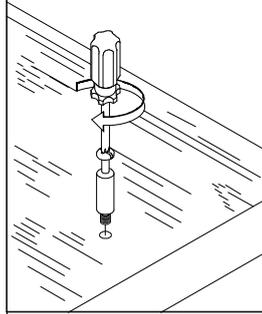

## Step 2

Push the male camlock into the entry hole.

2

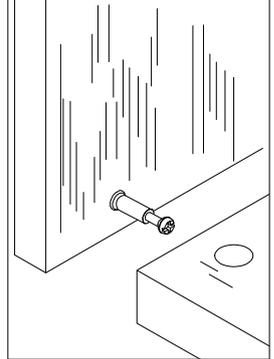


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

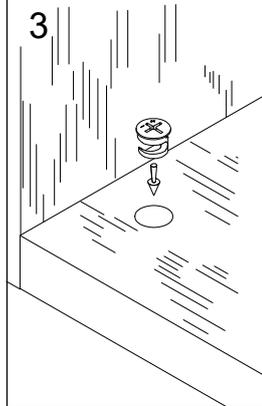


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.















4

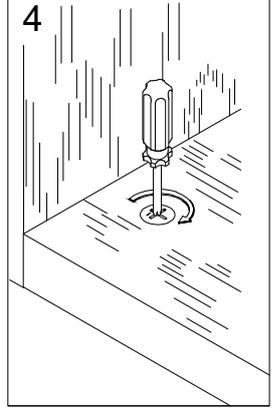















# Assembly Instructions

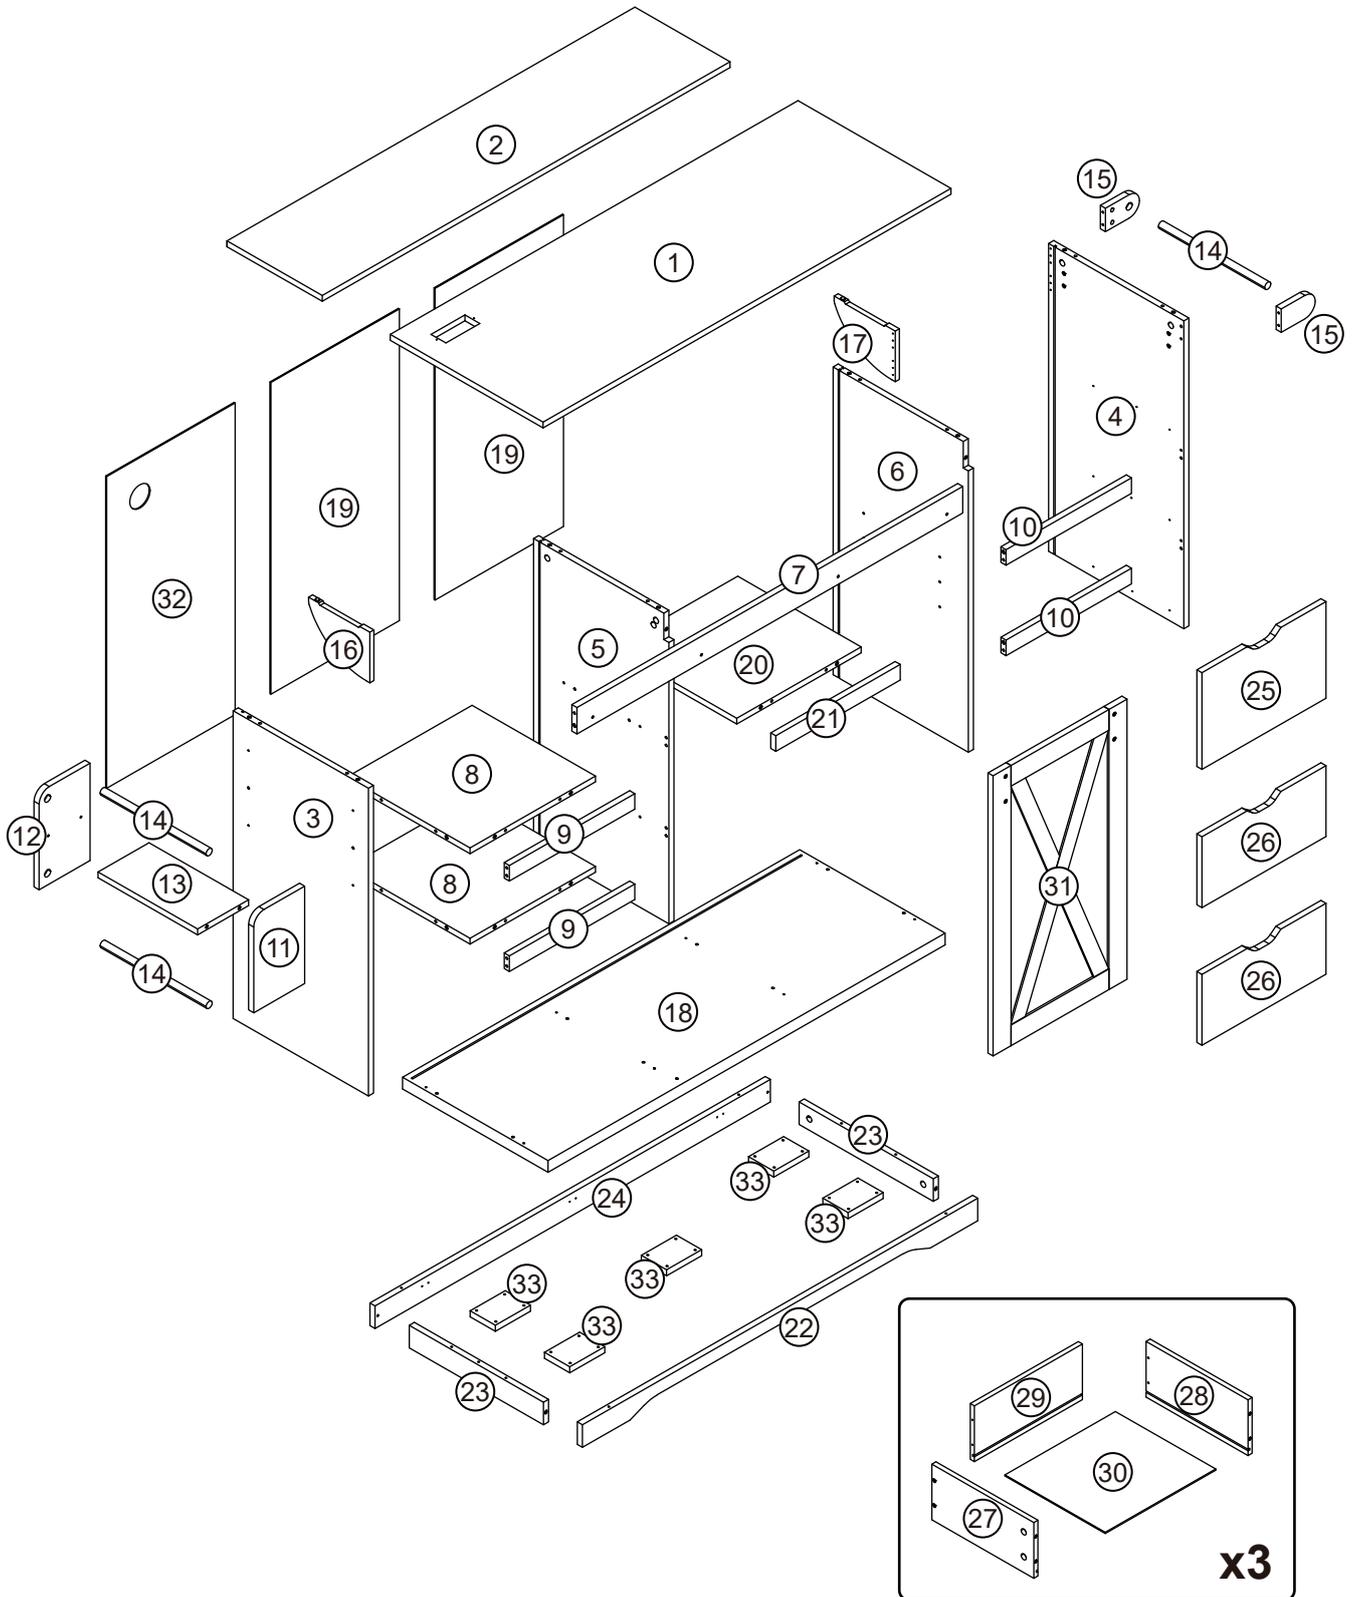






# Assembly Instructions
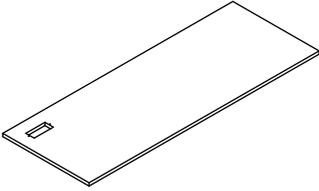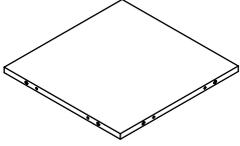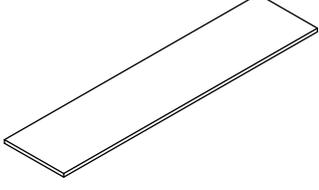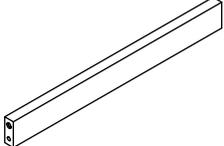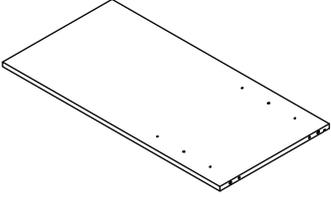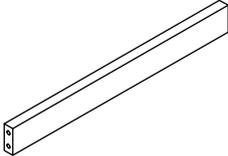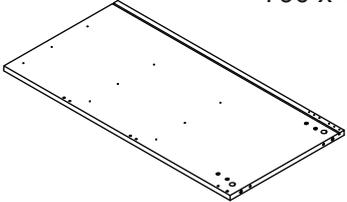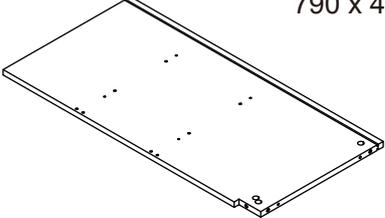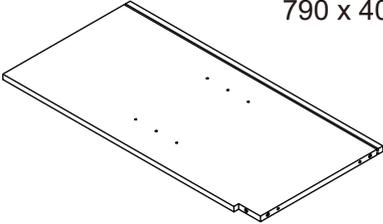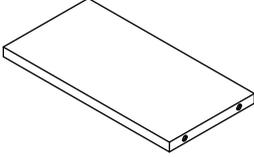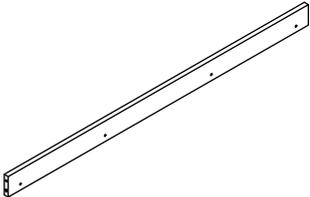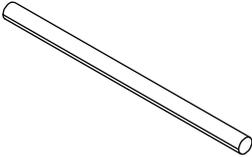
<p>① 1200 x 450 x 15 mm</p>  <p><b>1</b></p>	<p>⑧ 367 x 360 x 12 mm</p>  <p><b>2</b></p>
<p>② 1200 x 280 x 15 mm</p>  <p><b>1</b></p>	<p>⑨ 366 x 40 x 15 mm</p>  <p><b>2</b></p>
<p>③ 790 x 400 x 15 mm</p>  <p><b>1</b></p>	<p>⑩ 366 x 40 x 15 mm</p>  <p><b>2</b></p>
<p>④ 790 x 400 x 15 mm</p>  <p><b>1</b></p>	<p>⑪ 250 x 150 x 15 mm</p>  <p><b>1</b></p>
<p>⑤ 790 x 400 x 15 mm</p>  <p><b>1</b></p>	<p>⑫ 250 x 150 x 15 mm</p>  <p><b>1</b></p>
<p>⑥ 790 x 400 x 15 mm</p>  <p><b>1</b></p>	<p>⑬ 293 x 146 x 15 mm</p>  <p><b>1</b></p>
<p>⑦ 1130 x 68 x 15 mm</p>  <p><b>1</b></p>	<p>⑭ 310 x 18 x 18 mm</p>  <p><b>3</b></p>

# Assembly Instructions

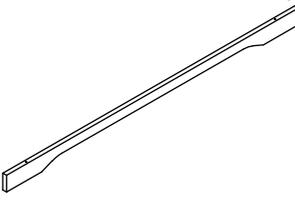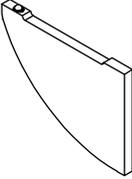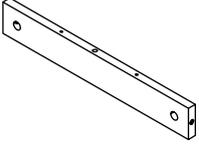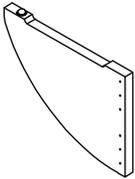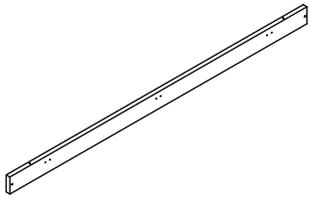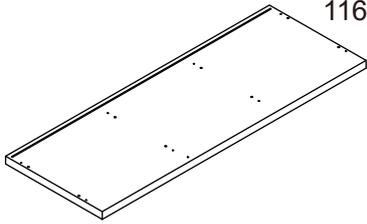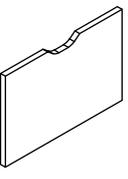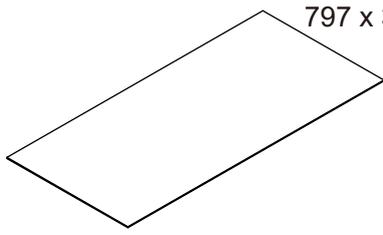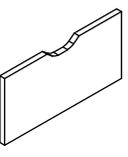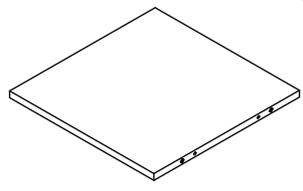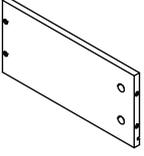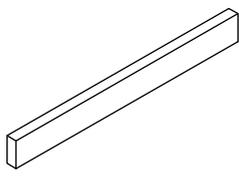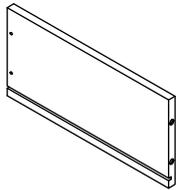
<p>15</p> <p>100 x 60 x 15 mm</p>  <p><b>2</b></p>	<p>22</p> <p>1163 x 55 x 15 mm</p>  <p><b>1</b></p>
<p>16</p> <p>180 x 140 x 15 mm</p>  <p><b>1</b></p>	<p>23</p> <p>395 x 55 x 15 mm</p>  <p><b>2</b></p>
<p>17</p> <p>180 x 140 x 15 mm</p>  <p><b>1</b></p>	<p>24</p> <p>1163 x 55 x 15 mm</p>  <p><b>1</b></p>
<p>18</p> <p>1168 x 428 x 30 mm</p>  <p><b>1</b></p>	<p>25</p> <p>360 x 230 x 15 mm</p>  <p><b>1</b></p>
<p>19</p> <p>797 x 373 x 2.5 mm</p>  <p><b>2</b></p>	<p>26</p> <p>360 x 182 x 15 mm</p>  <p><b>2</b></p>
<p>20</p> <p>363 x 360 x 12 mm</p>  <p><b>1</b></p>	<p>27</p> <p>300 x 143 x 12 mm</p>  <p><b>3</b></p>
<p>21</p> <p>366 x 40 x 15 mm</p>  <p><b>1</b></p>	<p>28</p> <p>300 x 143 x 12 mm</p>  <p><b>3</b></p>

# Assembly Instructions

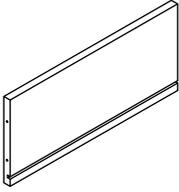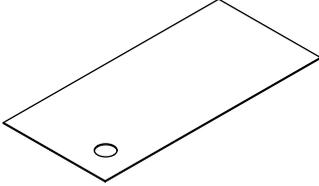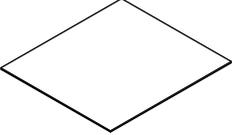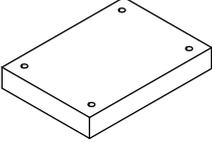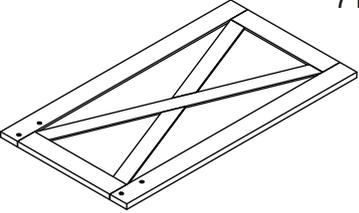
<p>②9</p>  <p>318 x 143 x 12 mm</p> <p><b>3</b></p>	<p>③2</p>  <p>797 x 373 x 2.5 mm</p> <p><b>1</b></p>
<p>③0</p>  <p>325 x 295 x 2.5 mm</p> <p><b>3</b></p>	<p>③3</p>  <p>100 x 60 x 15 mm</p> <p><b>5</b></p>
<p>③1</p>  <p>716 x 394 x 15 mm</p> <p><b>1</b></p>	

# Assembly Instructions

## Step 1

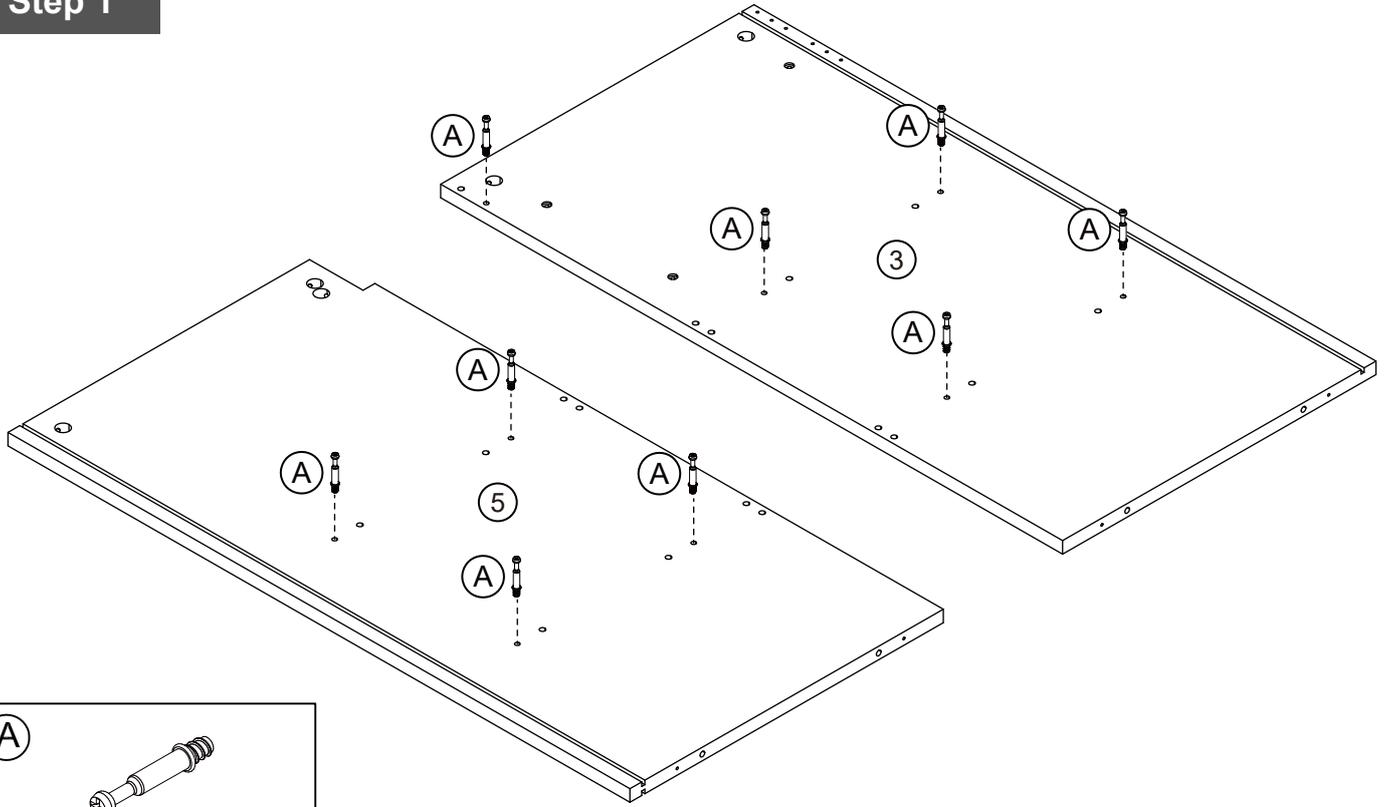


A



Cam Bolt x 9

## Step 2

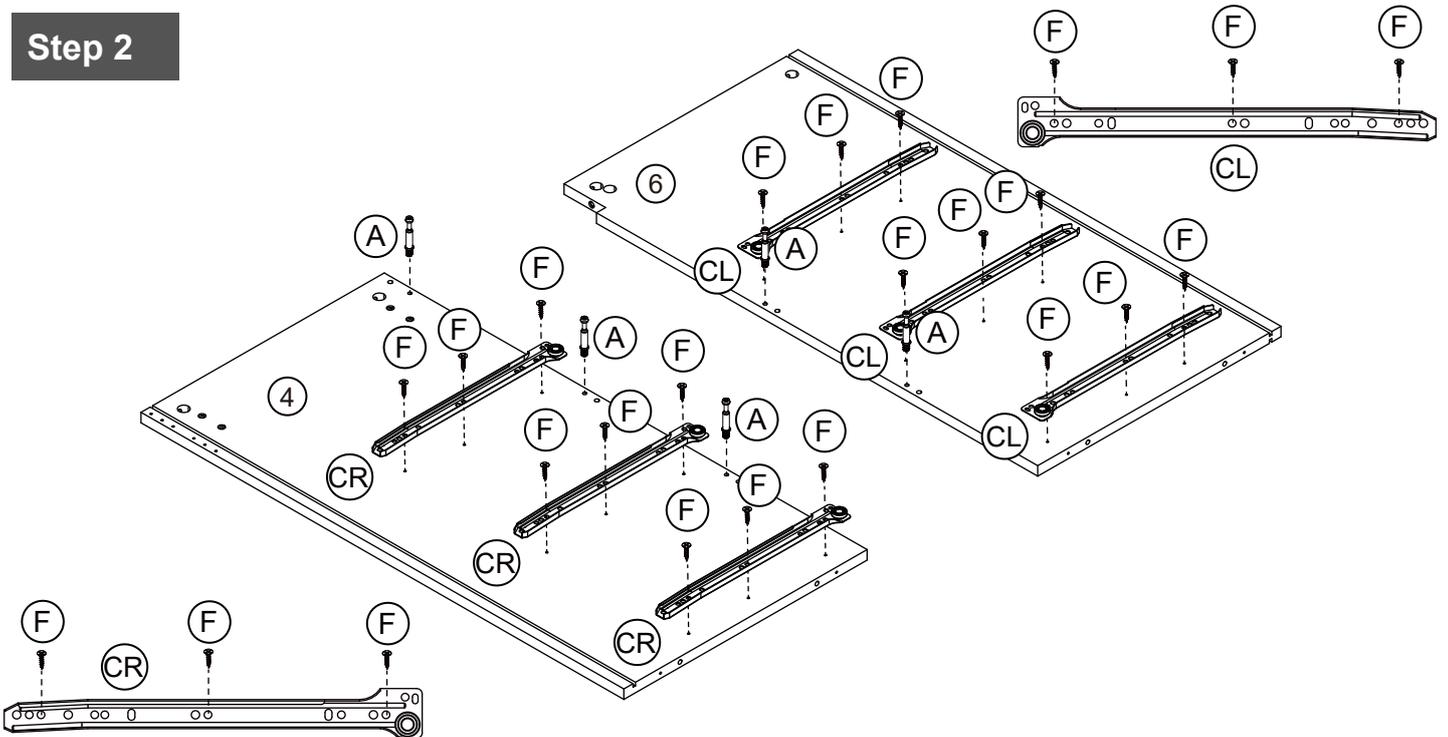

A



Cam Bolt x 5

F



3\*12mm Screw x 18

CR



Runner 300mm x 3


CL




Runner 300mm x 3

# Assembly Instructions

## Step 3

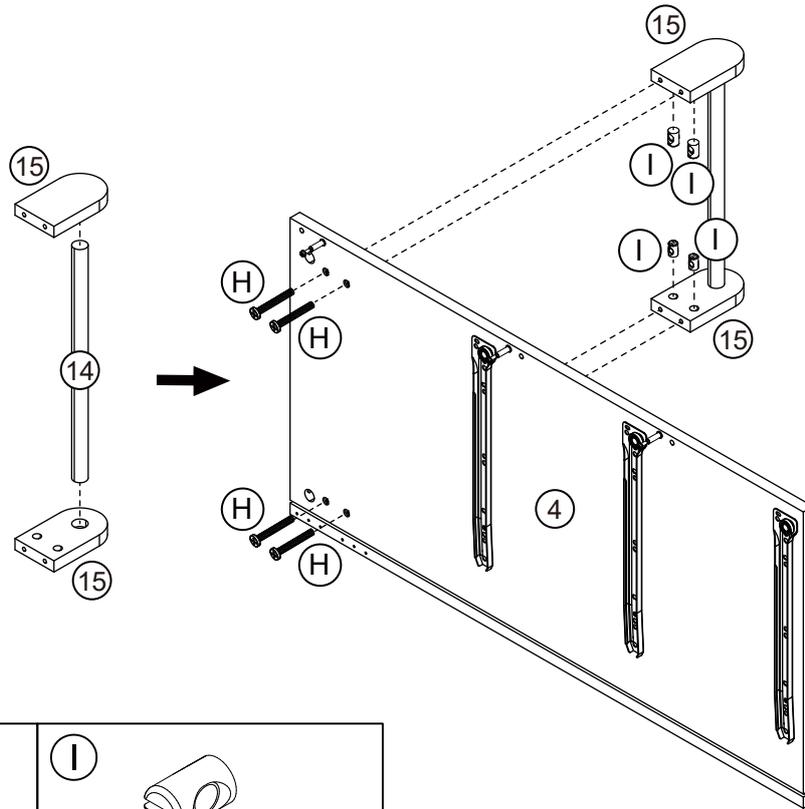

(H)




6\*50mm Screw x 4

(I)



Vertical nut x 4

## Step 4

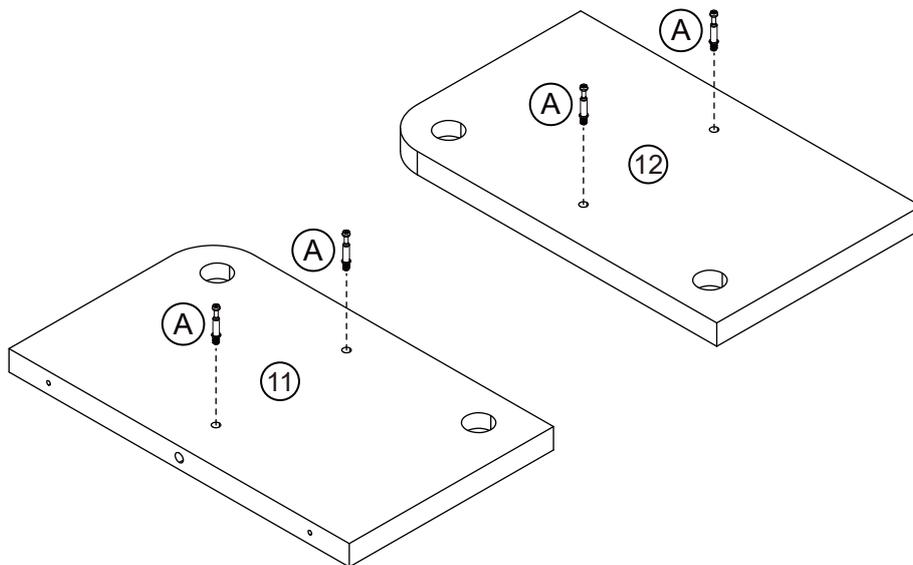


(A)



Cam Bolt x 4

# Assembly Instructions

## Step 5

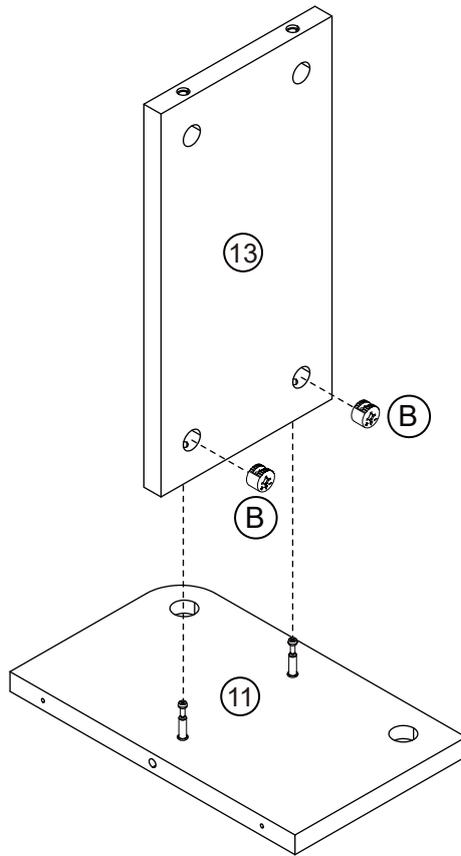


(B)




Cam lock x 2

## Step 6

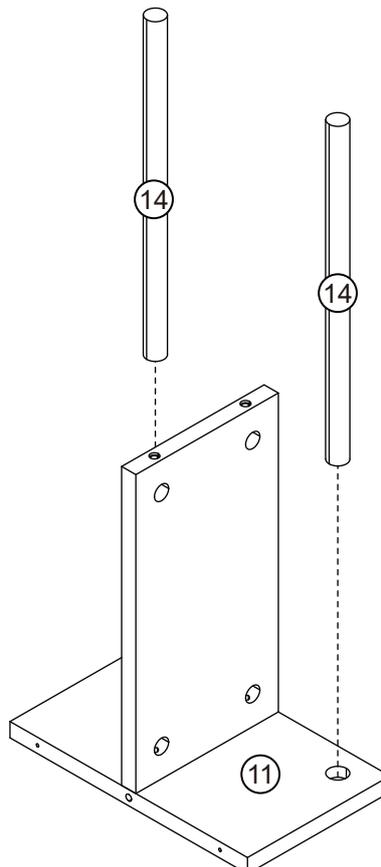

# Assembly Instructions

## Step 7

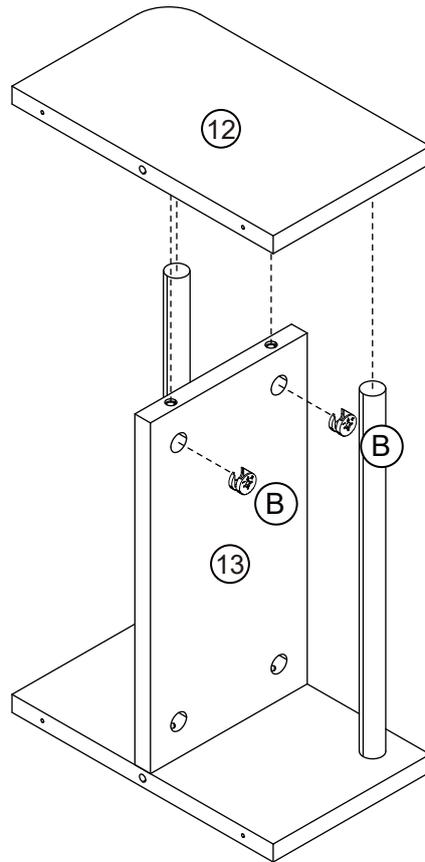


(B)



Cam lock x 2

## Step 8

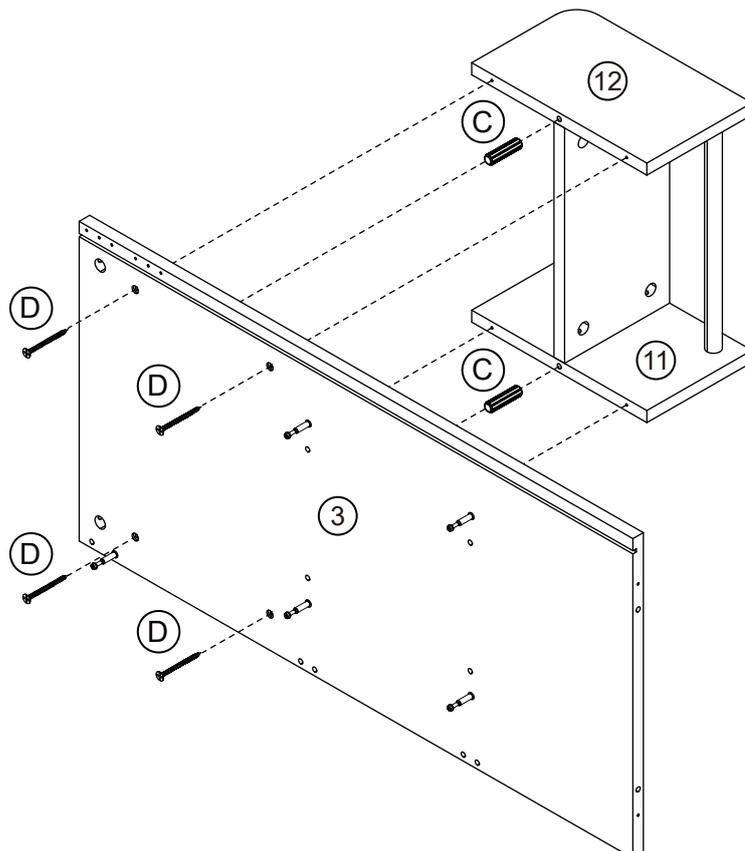

(C)



6\*30mm Dowel x 2


(D)




4\*35mm Screw x 4

# Assembly Instructions

## Step 9

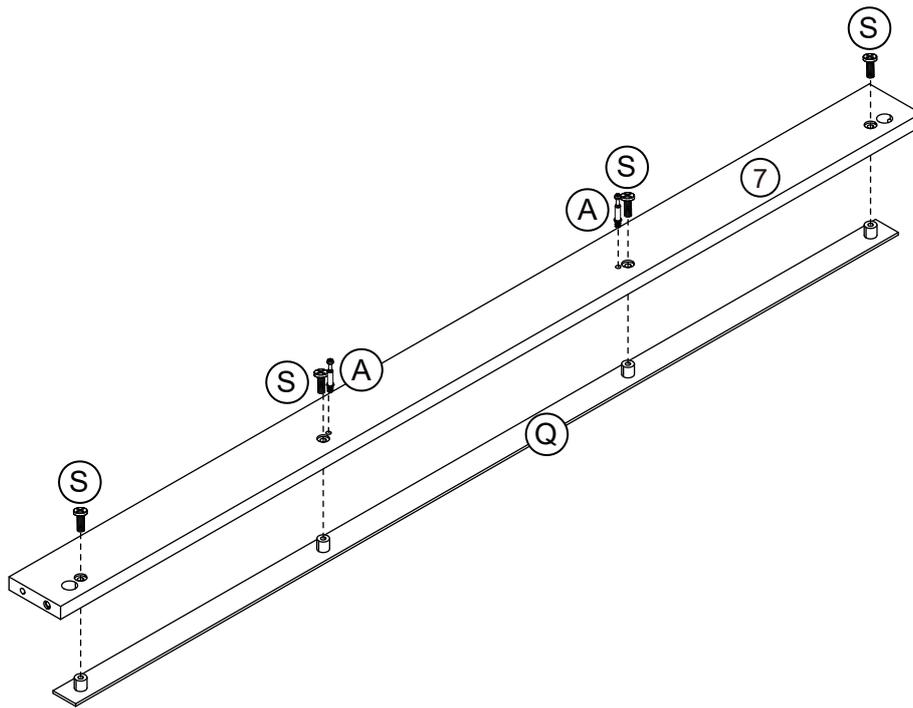

(A)




Cam Bolt x 2

(S)




6\*20mm Screw x 4

(Q)

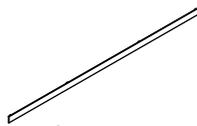

Tergite x 1

## Step 10

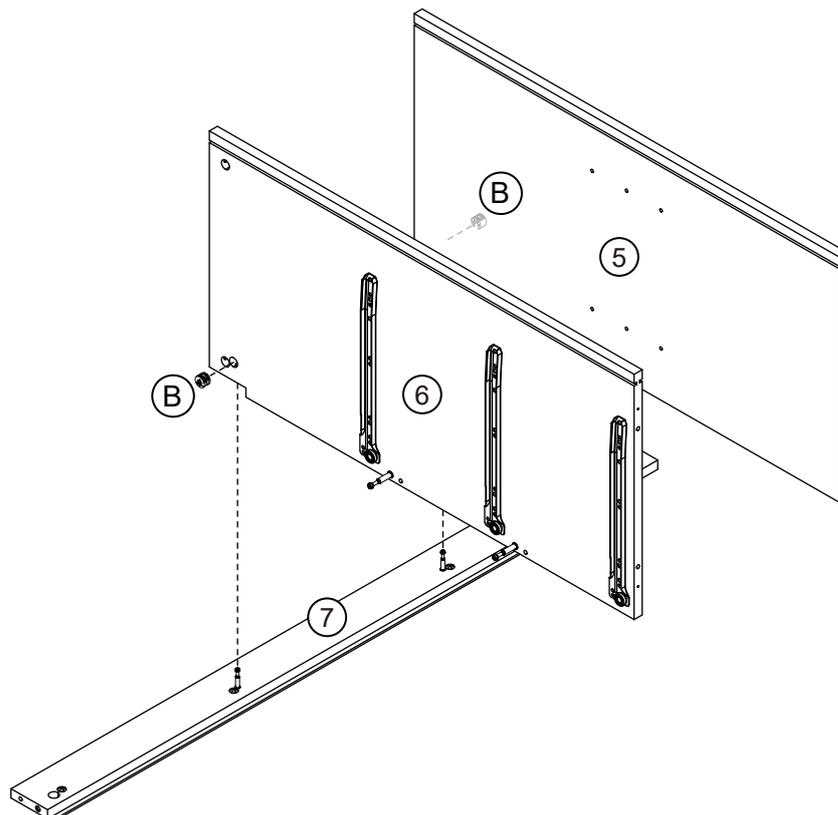


(B)




Cam lock x 2

# Assembly Instructions

## Step 11

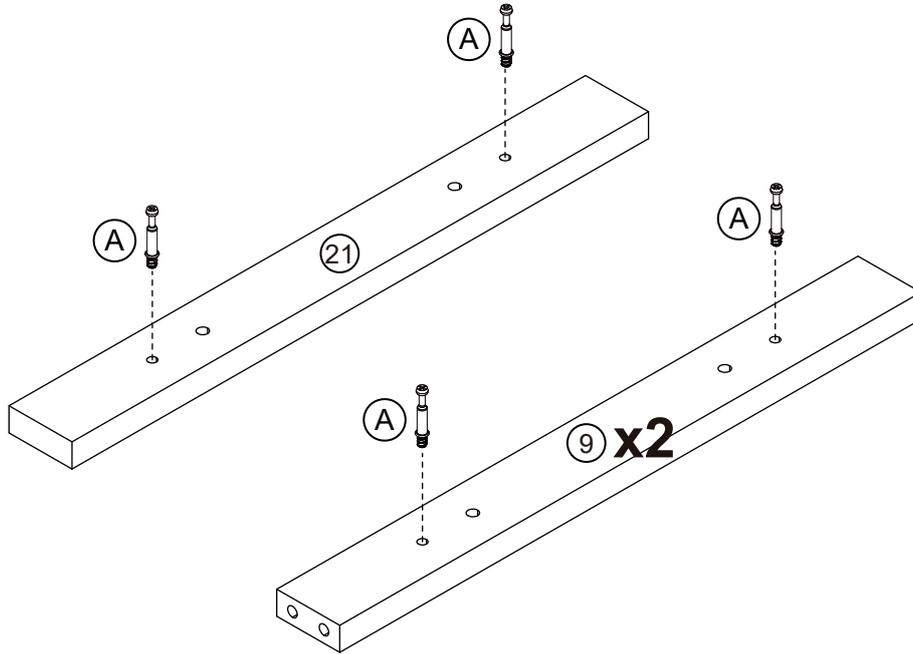


(A)



Cam Bolt x 6

## Step 12

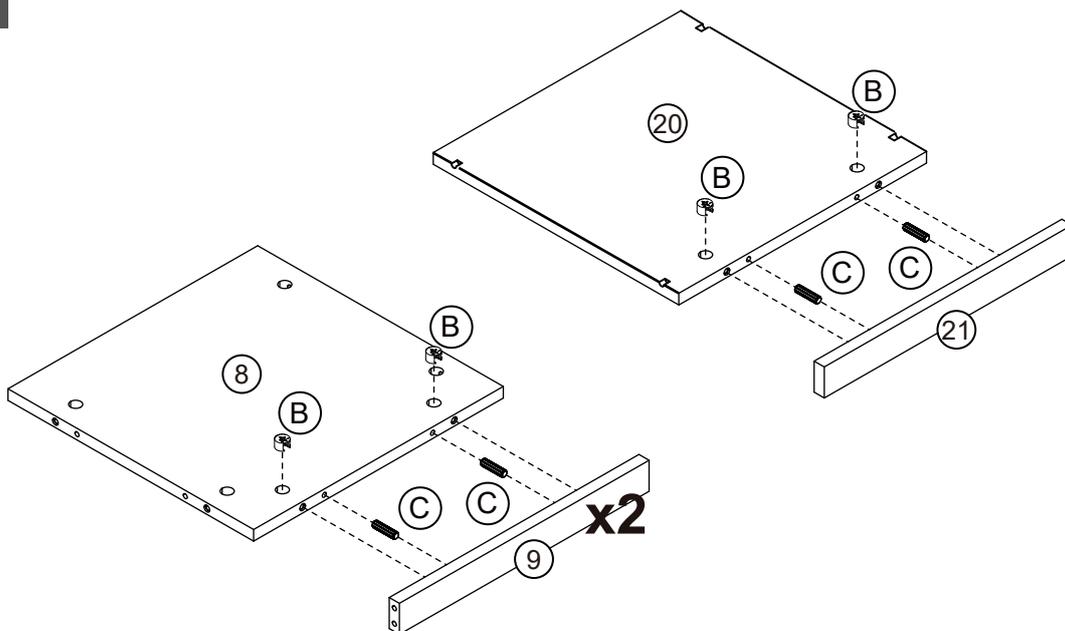

(B)



Cam lock x 6


(C)



6\*30mm Dowel x 6

# Assembly Instructions

## Step 13

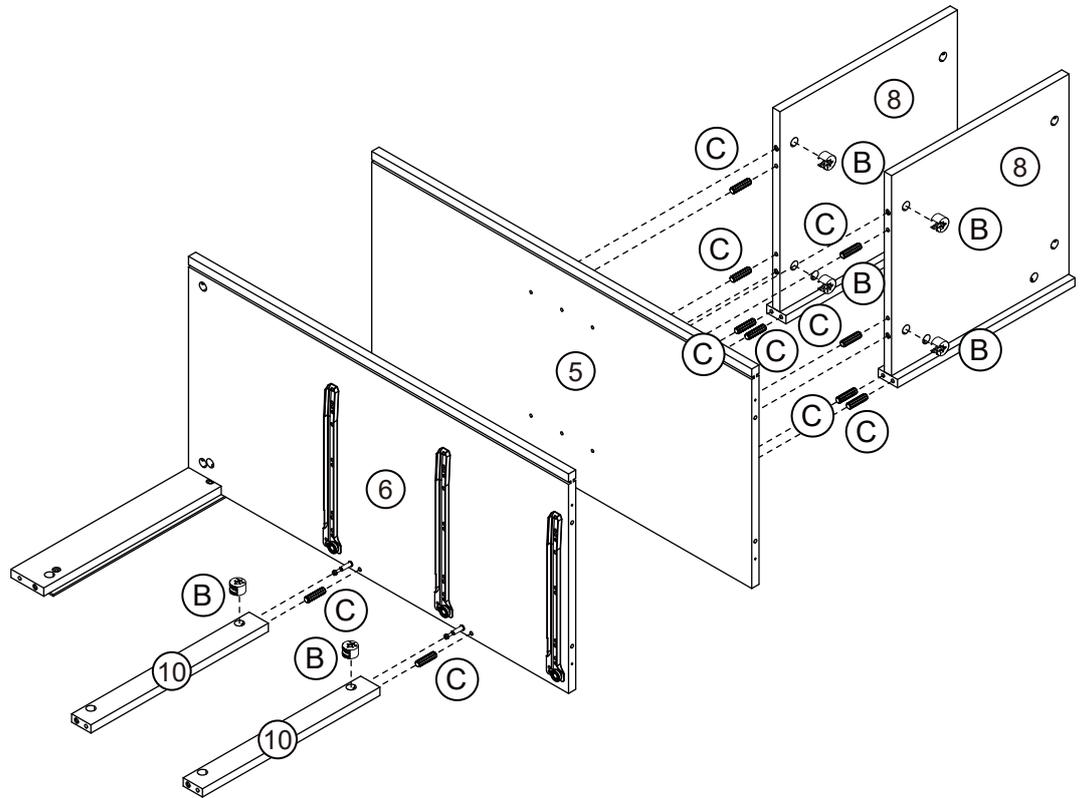

(B)




Cam lock x 6

(C)



6\*30mm Dowel x 10

## Step 14

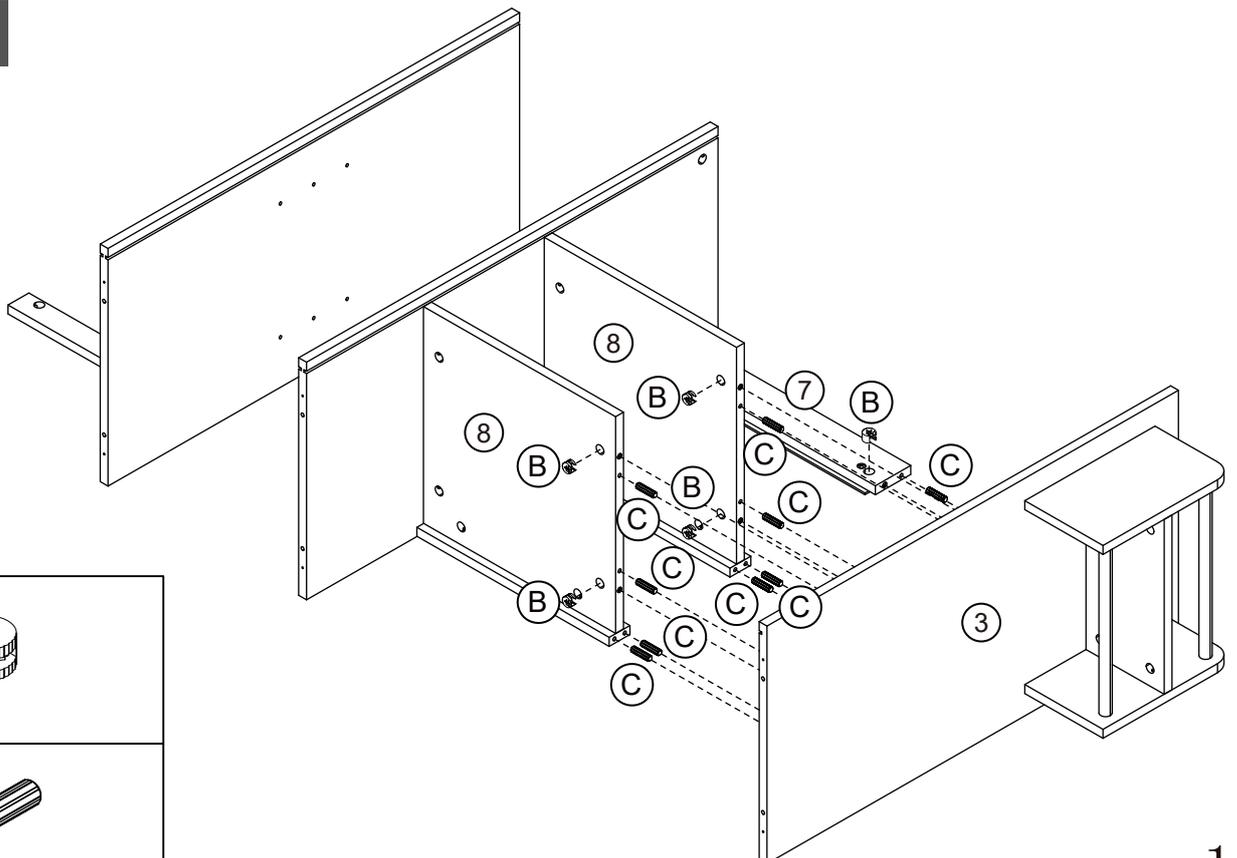

(B)



Cam lock x 5


(C)



6\*30mm Dowel x 9

# Assembly Instructions

## Step 15

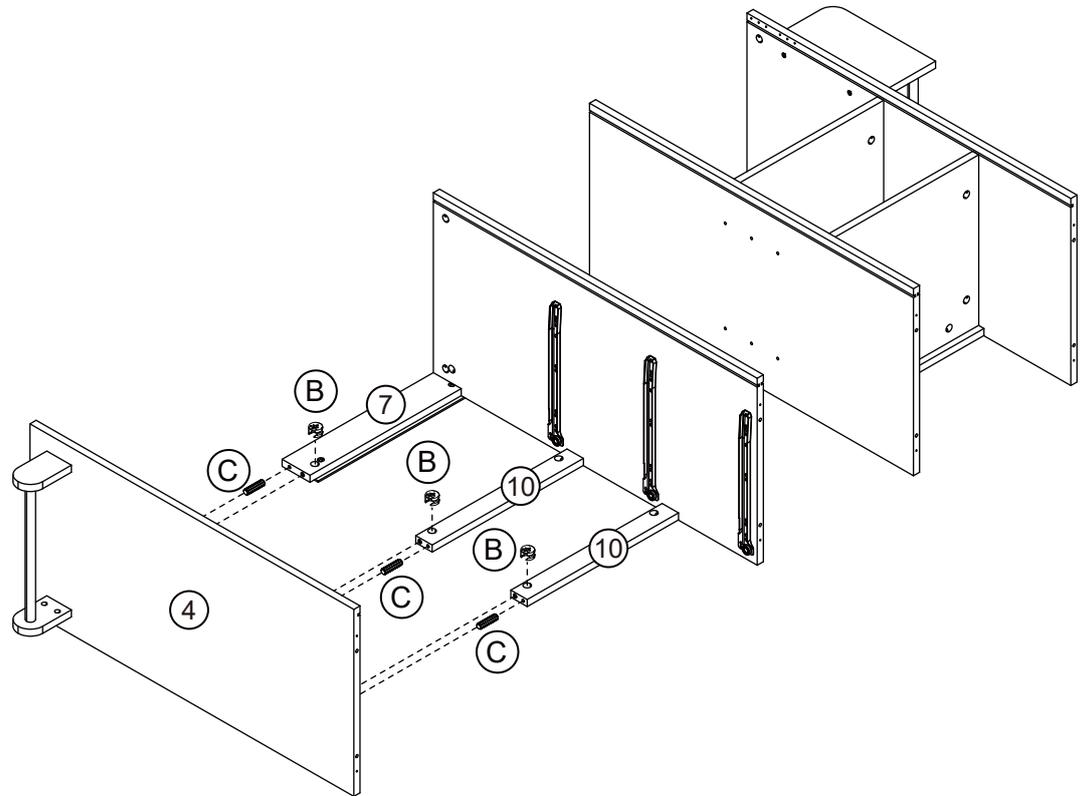

(B)




Cam lock x 3

(C)




6\*30mm Dowel x 3

## Step 16

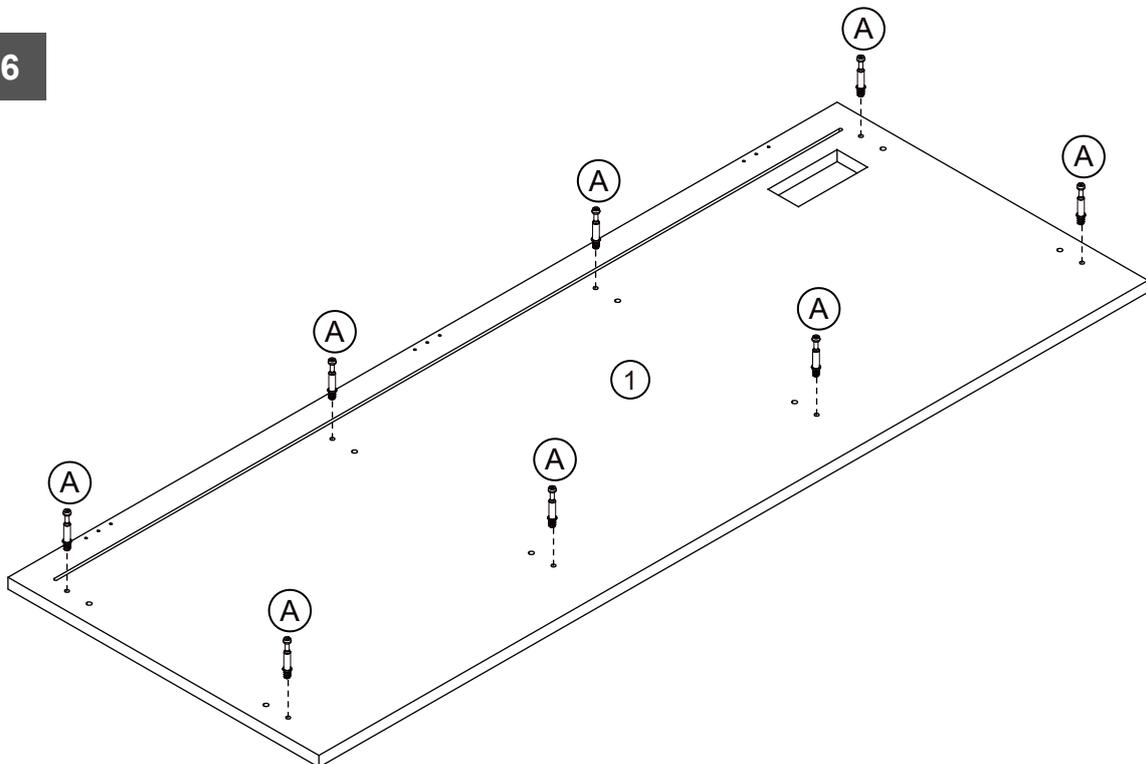


(A)



Cam Bolt x 8

# Assembly Instructions

## Step 17

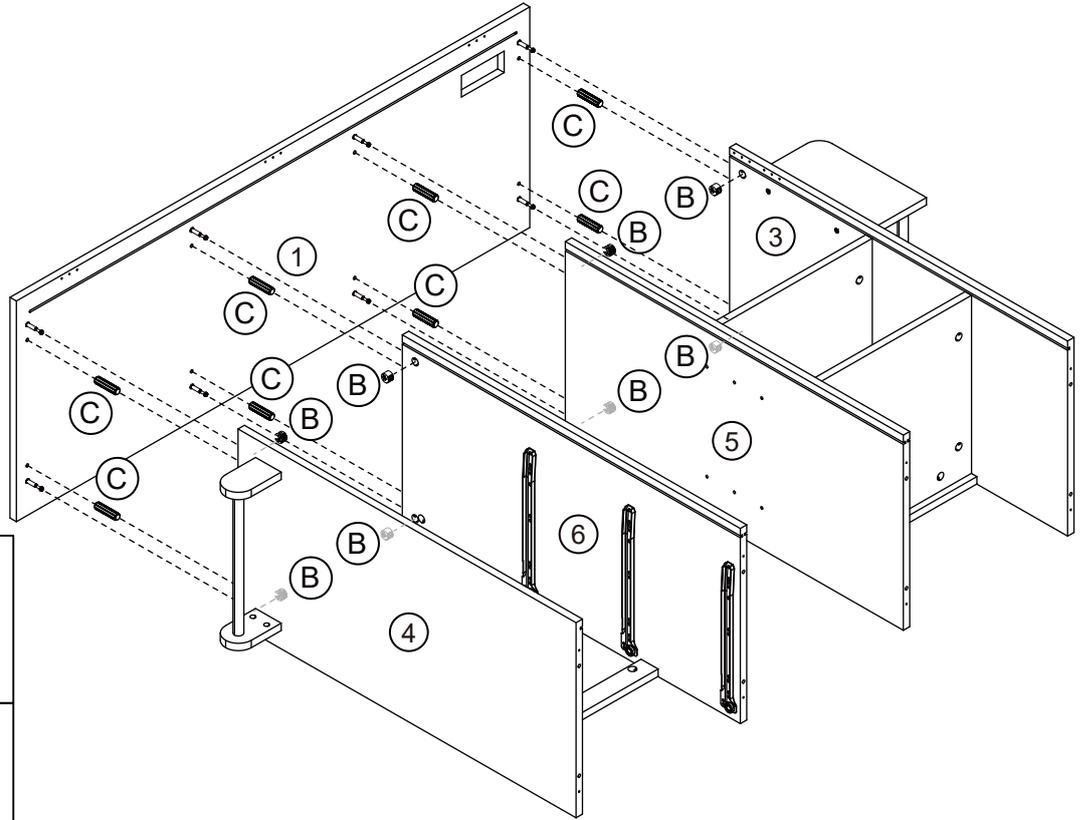

(B)




Cam lock x 8

(C)




6\*30mm Dowel x 8

## Step 18

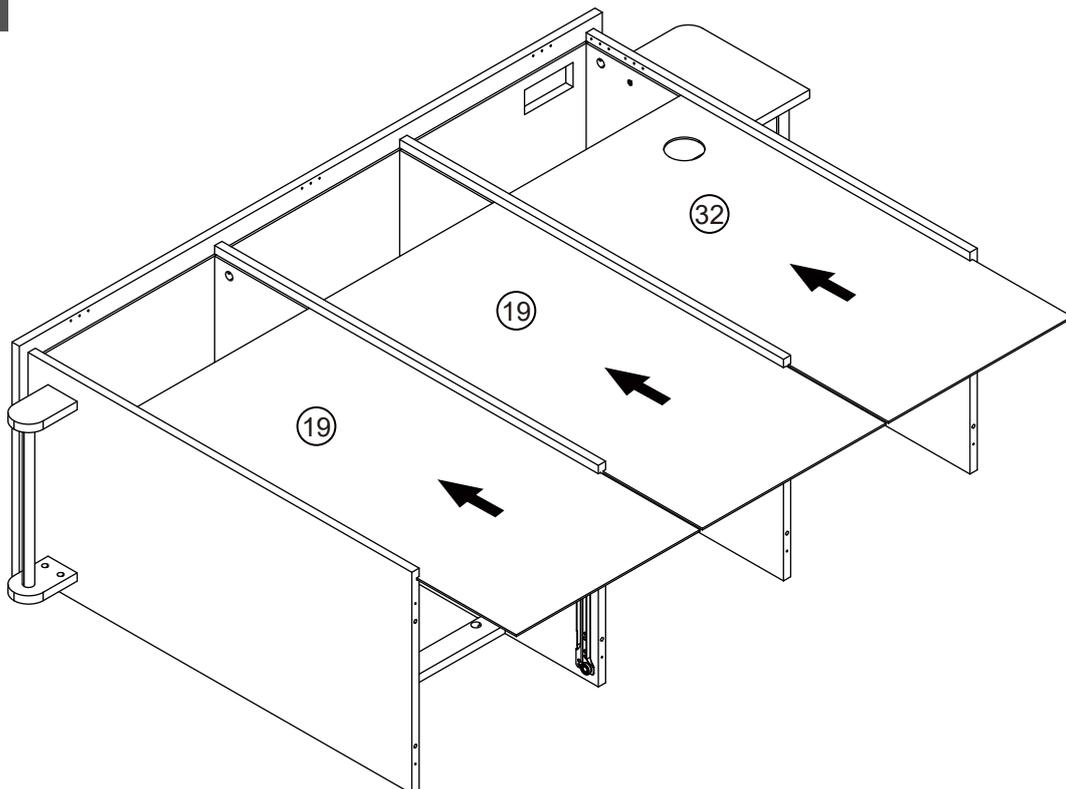

# Assembly Instructions

## Step 19

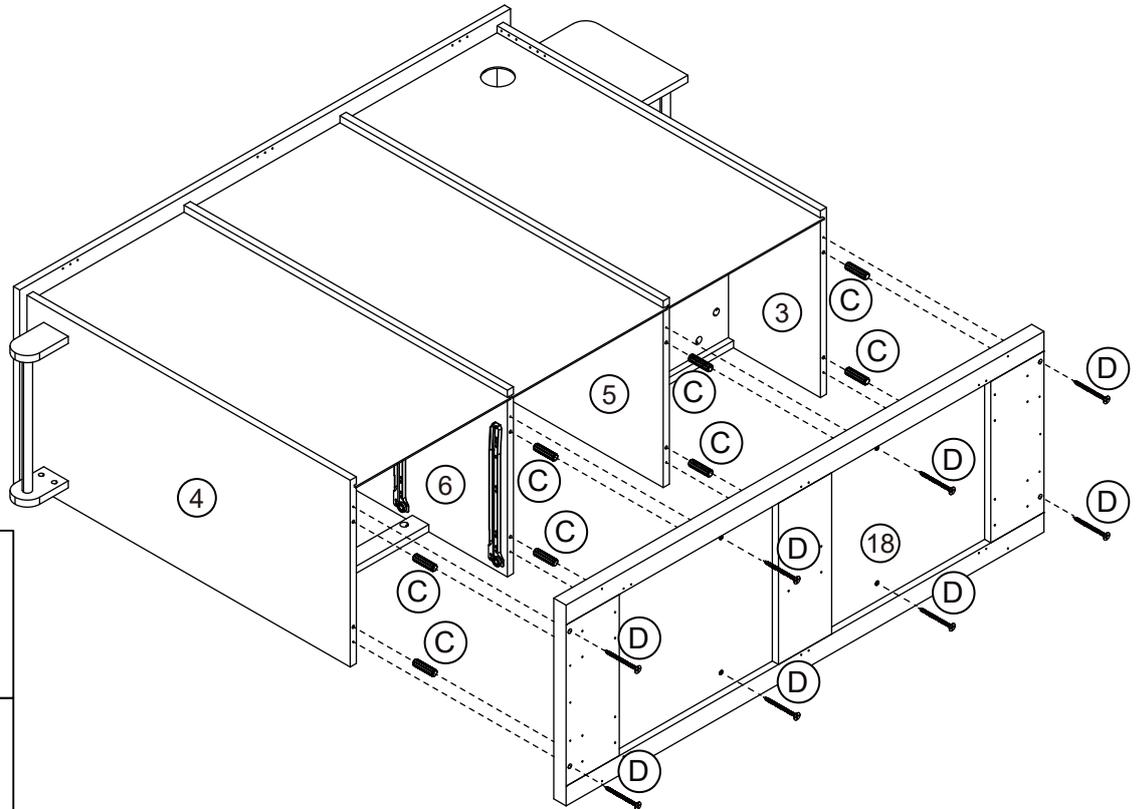

(C)




6\*30mm Dowel x 8

(D)



4\*35mm Screw x 8

## Step 20

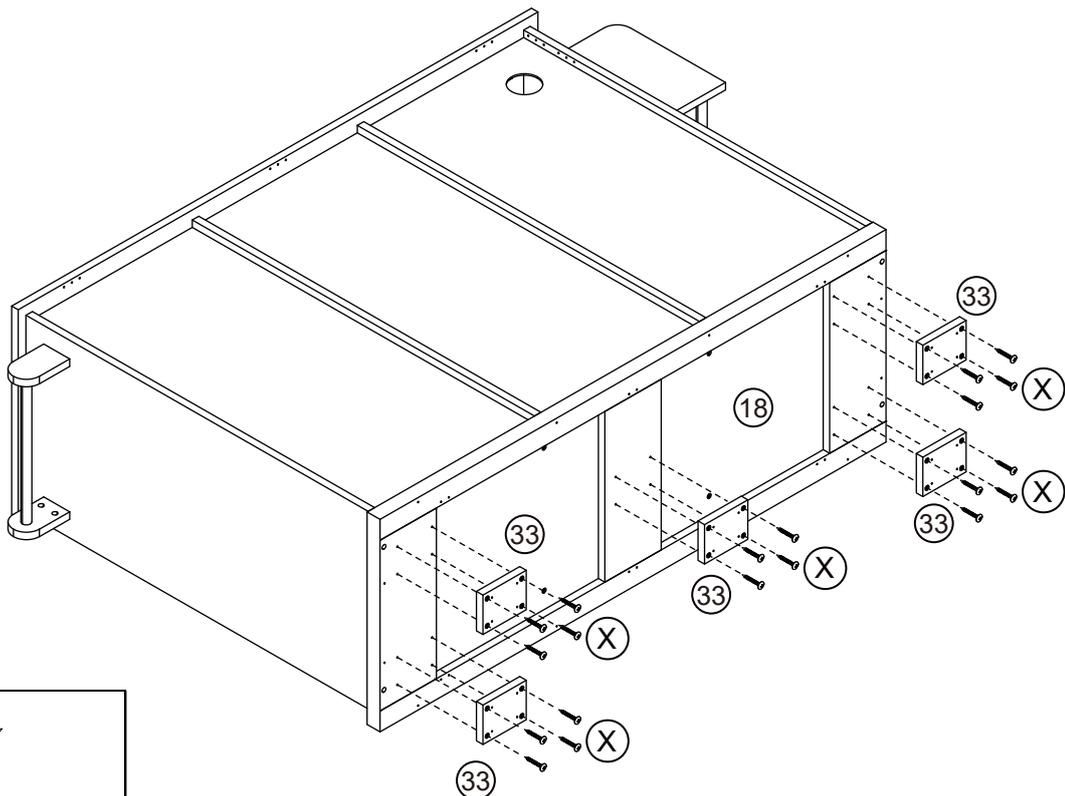




(X)



4\*25mm Screw x 20

# Assembly Instructions


## Step 21

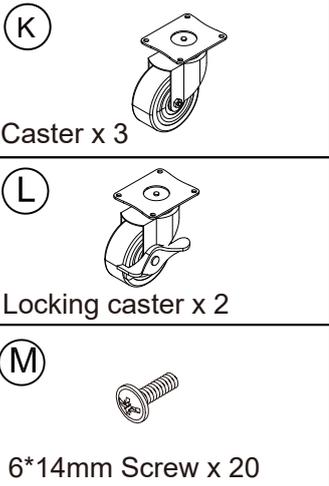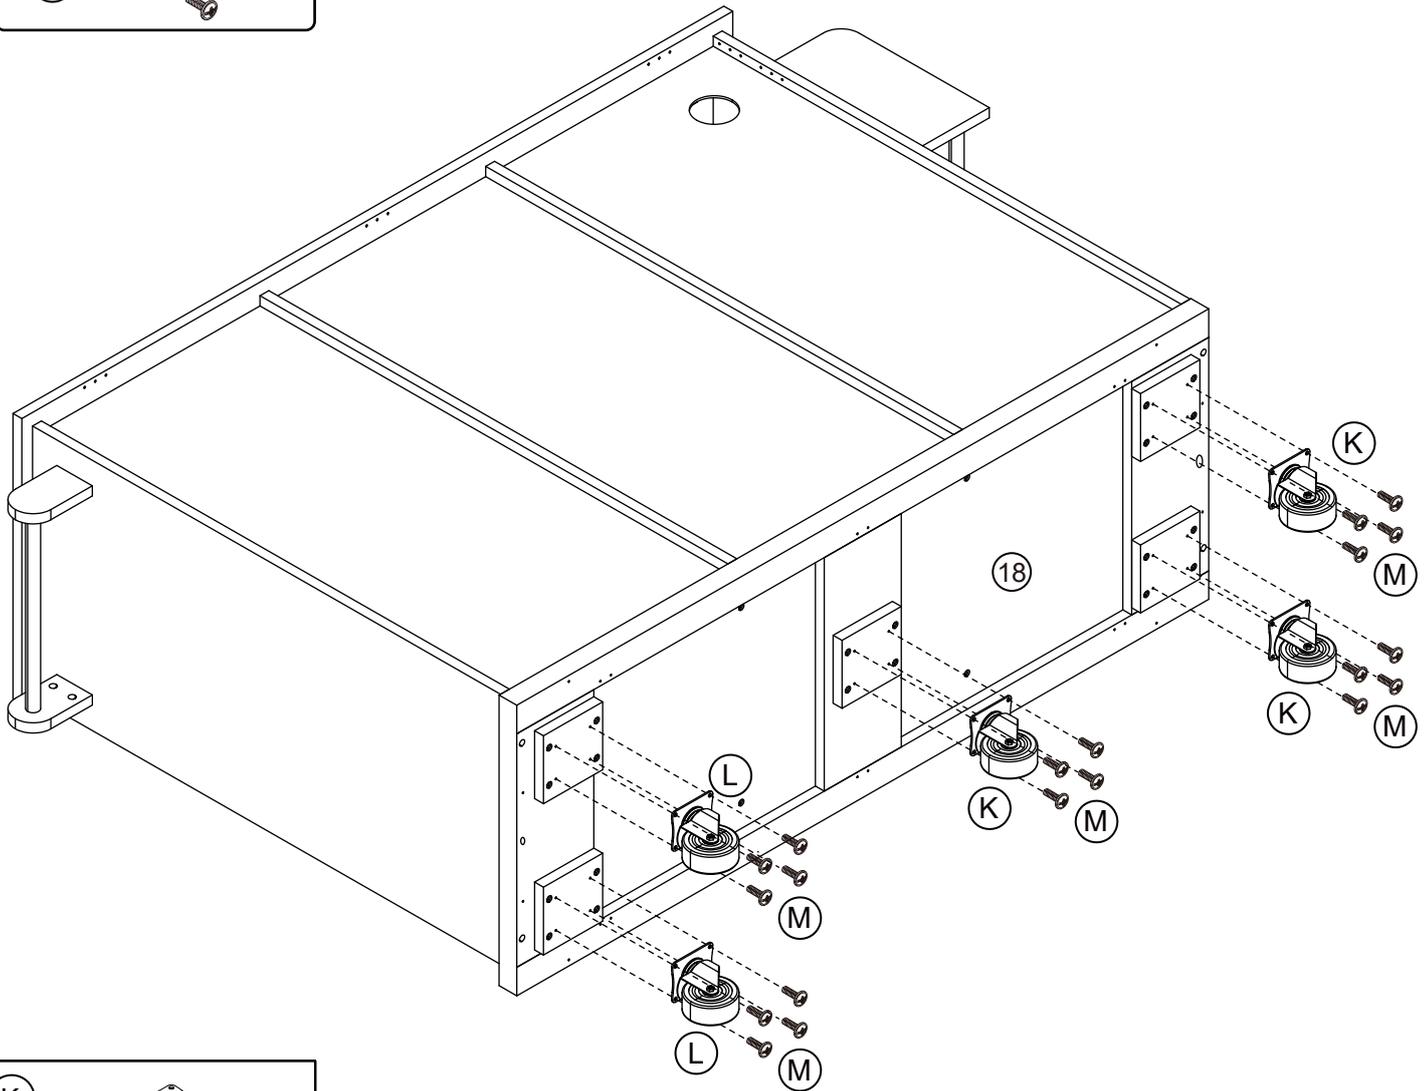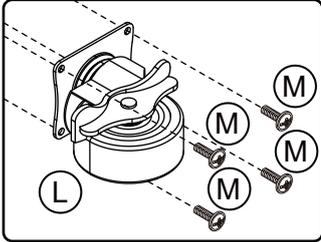


If you do not want to move this kitchen island cart, you may not install this step.

# Assembly Instructions

## Step 22

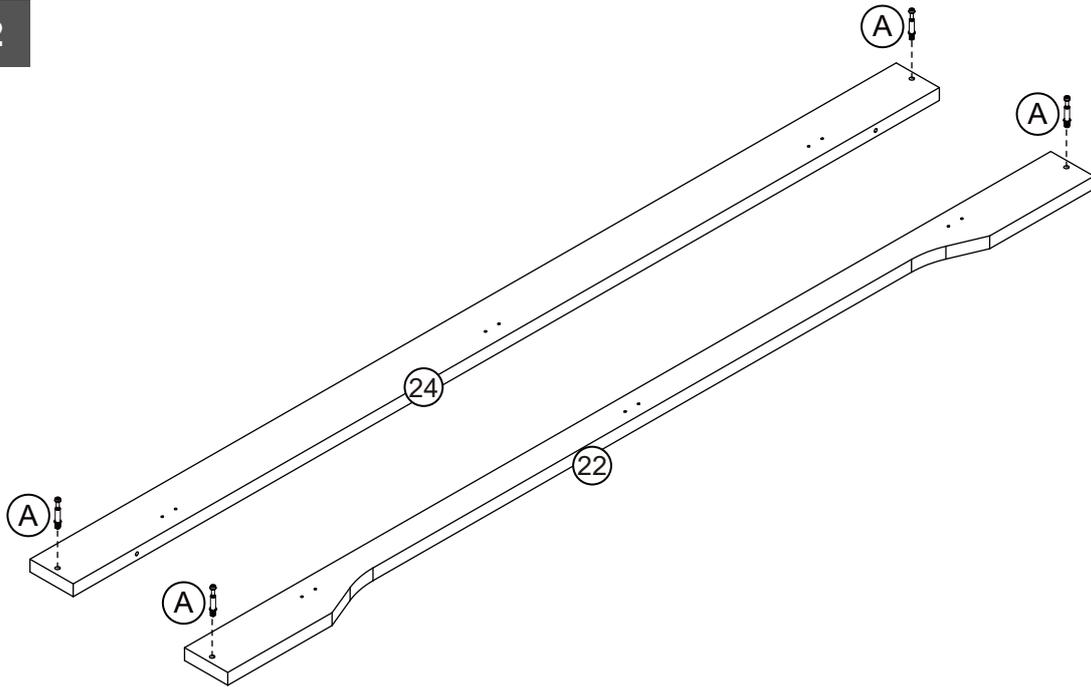


A



Cam Bolt x 4

## Step 23

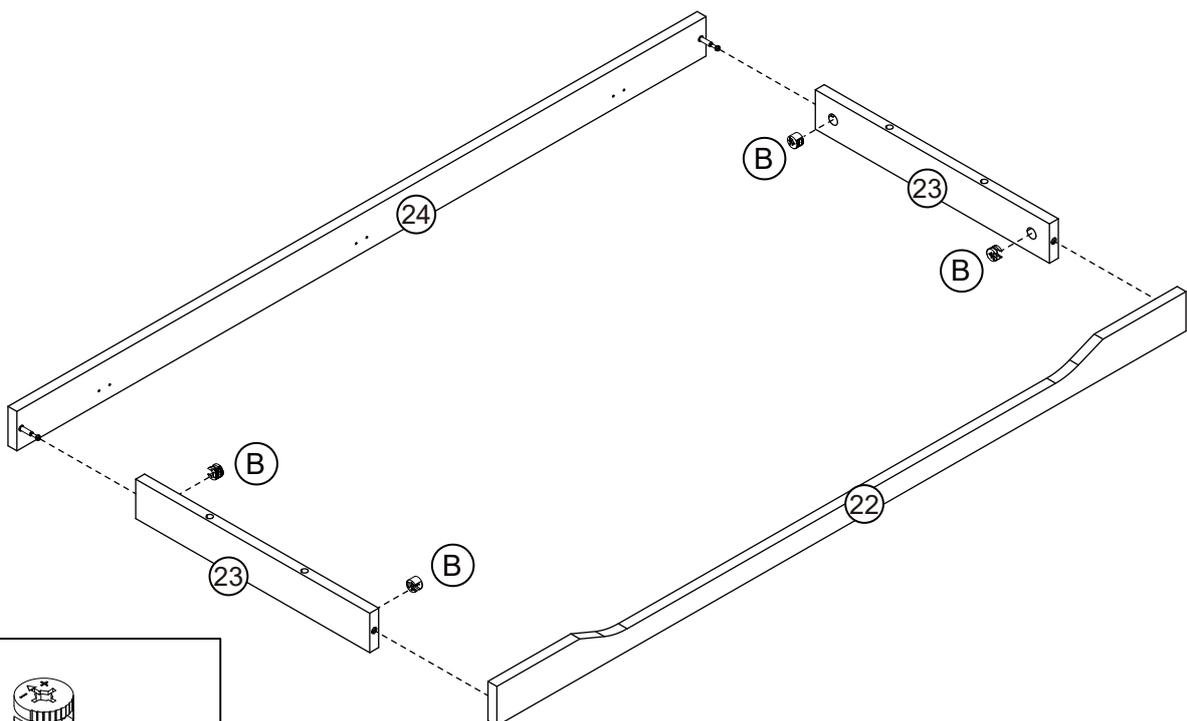


B



Cam lock x 4

# Assembly Instructions

## Step 24

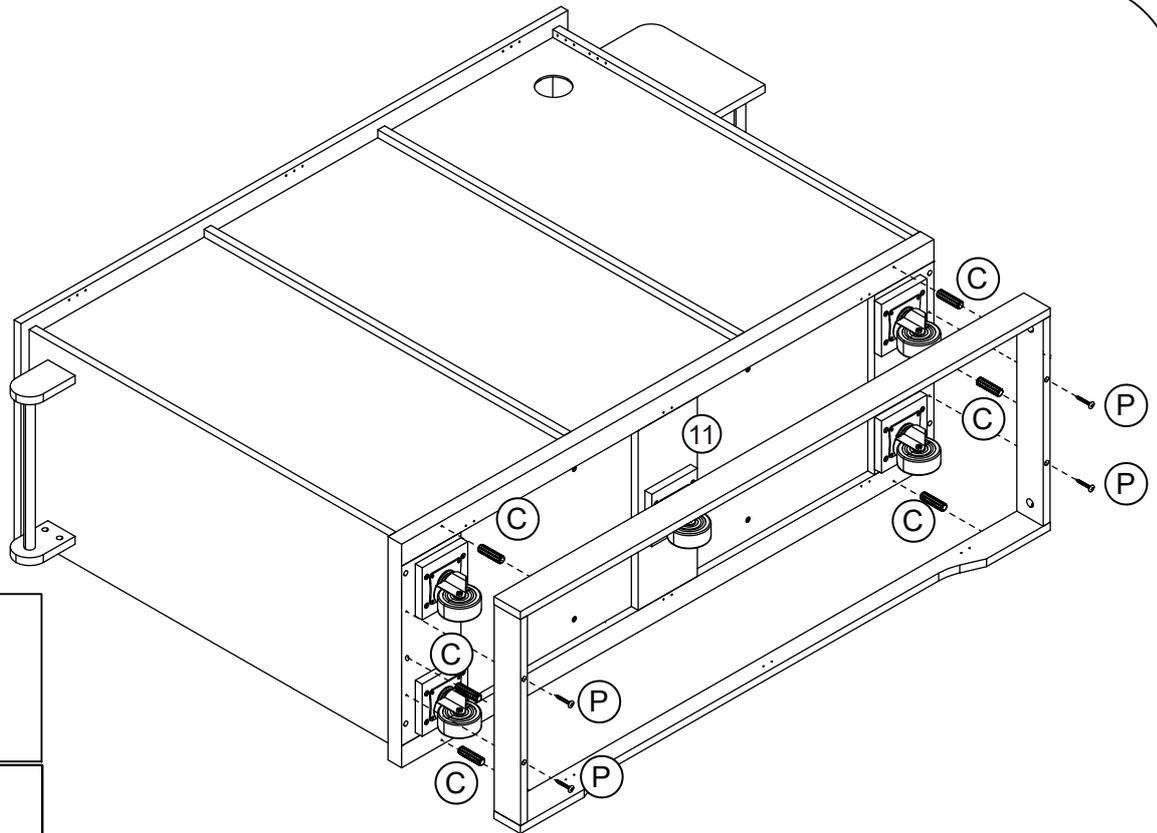


C




6\*30mm Dowel x 6

P



4\*35mm Screw x 4

## Step 25

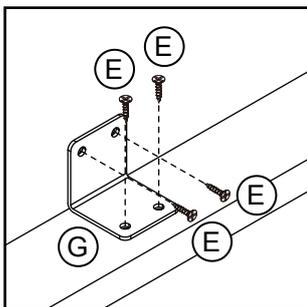

E




3.5\*12mm Screw x 24

G




Angle iron x 6

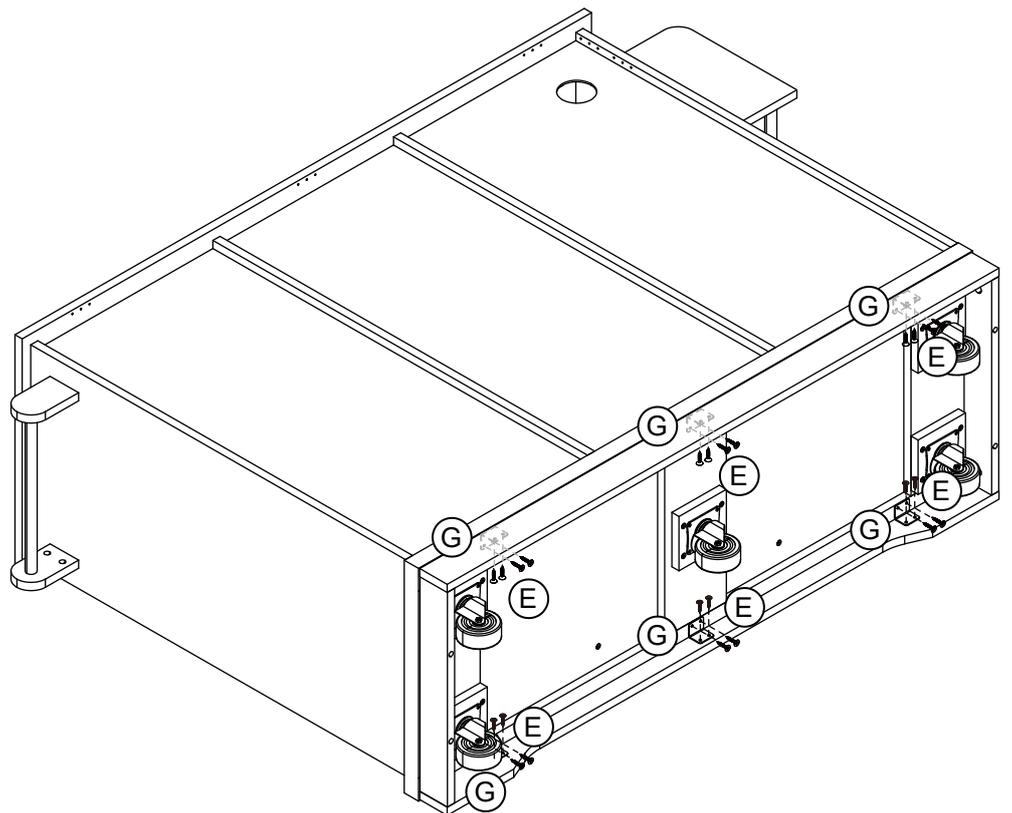

# Assembly Instructions

## Step 26

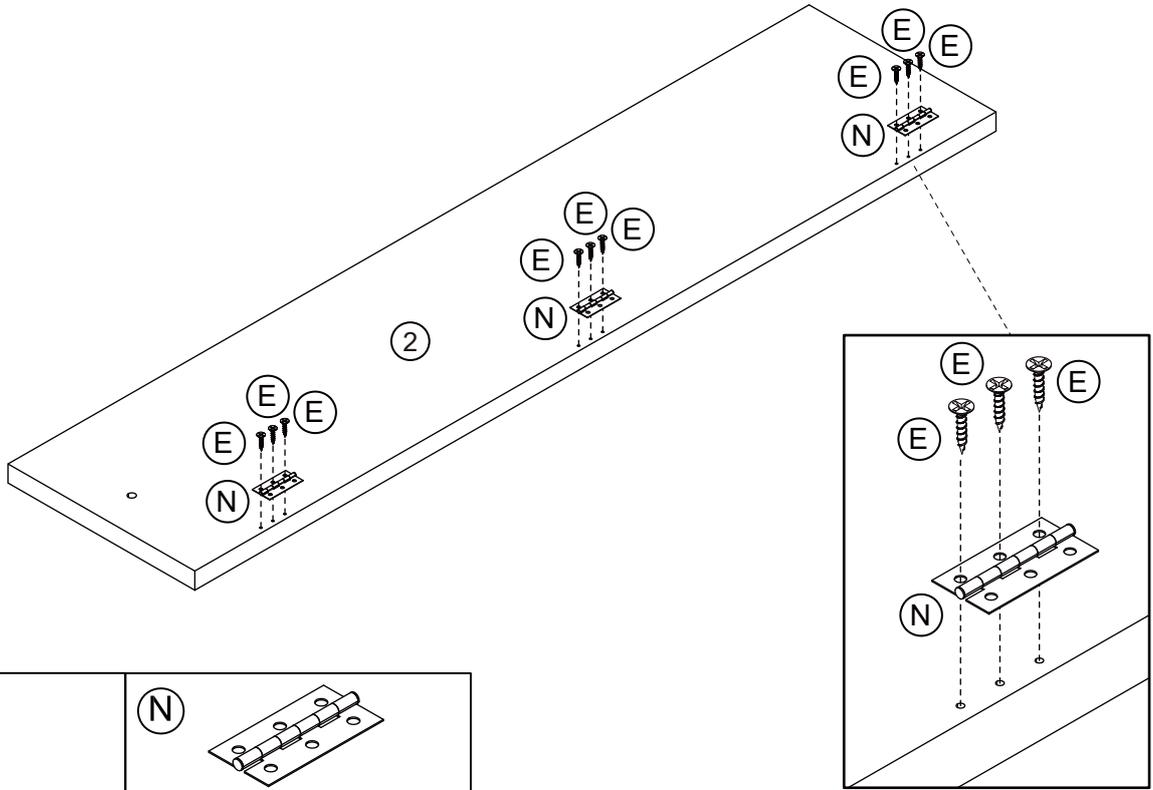


(E)




3.5\*12mm x 9

(N)



hinge x 3

## Step 27

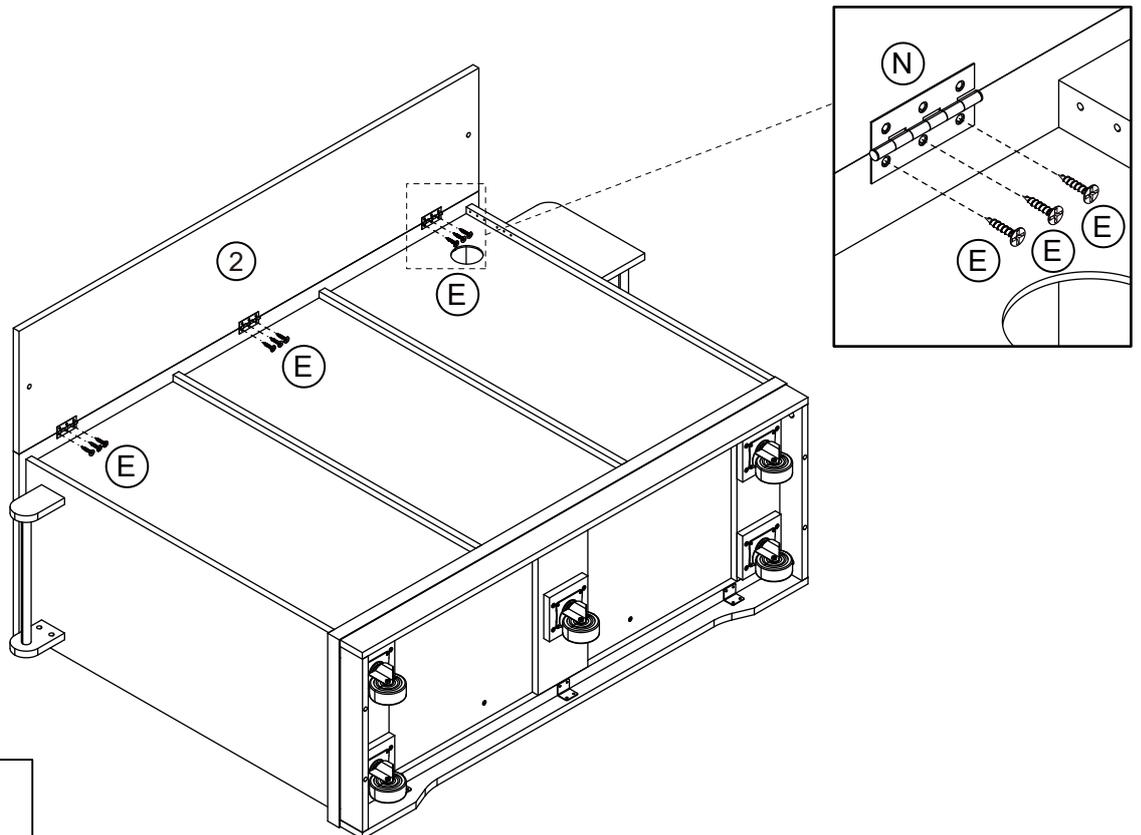


(E)



3.5\*12mm x 9

# Assembly Instructions

## Step 28

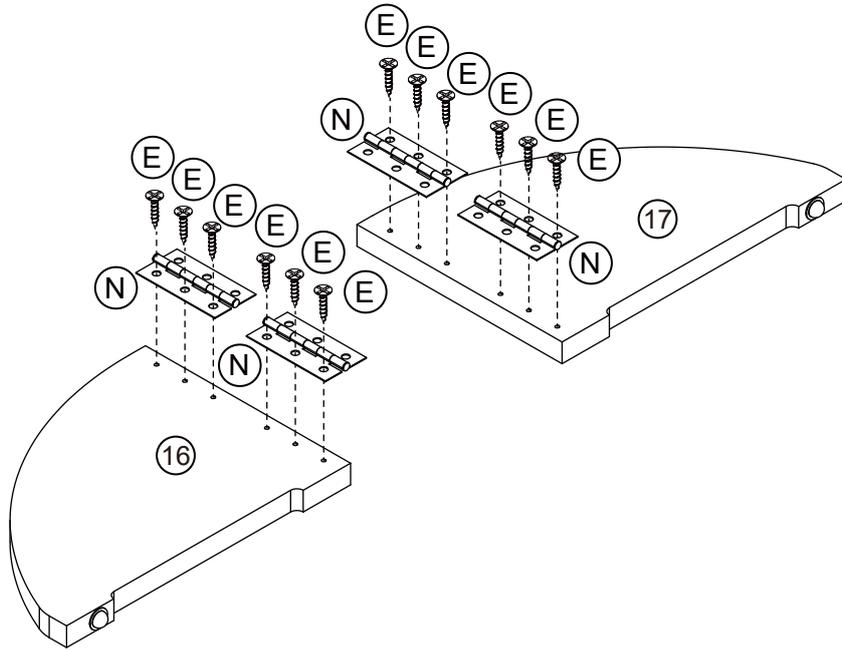


(E)




3.5\*12mm x 12

(N)



x 4

## Step 29

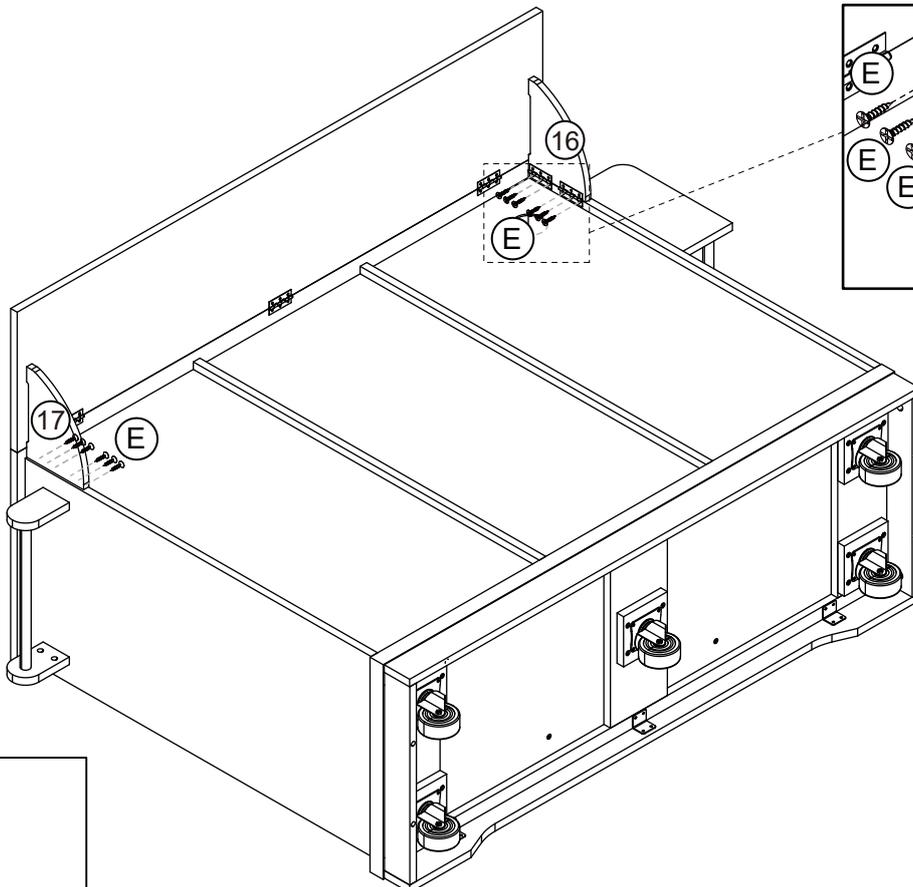




(E)



3.5\*12mm x 12


# Assembly Instructions

## Step 30

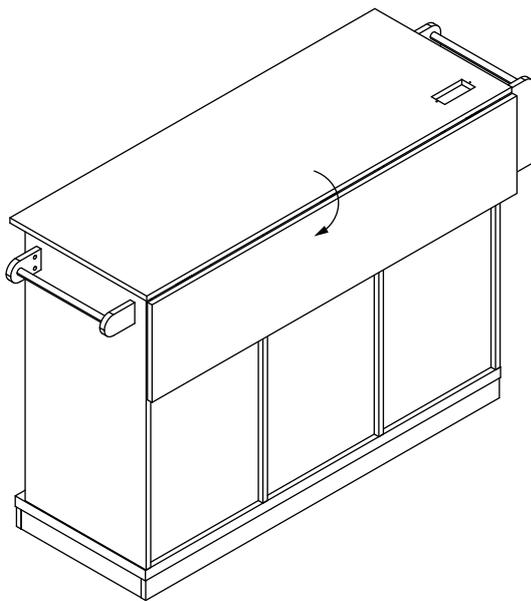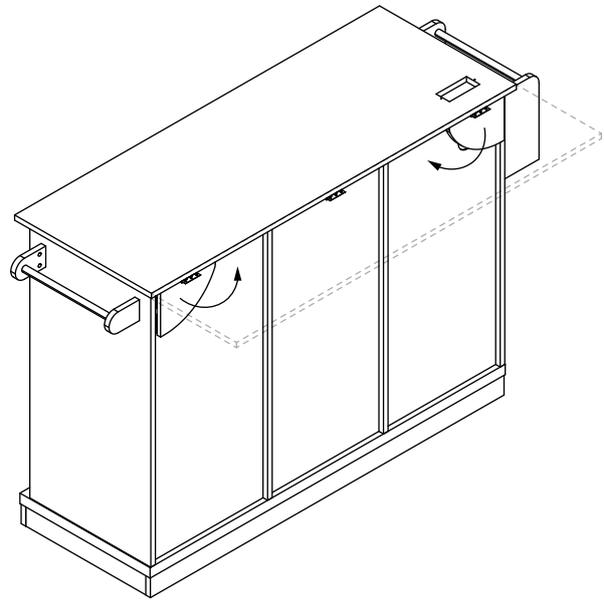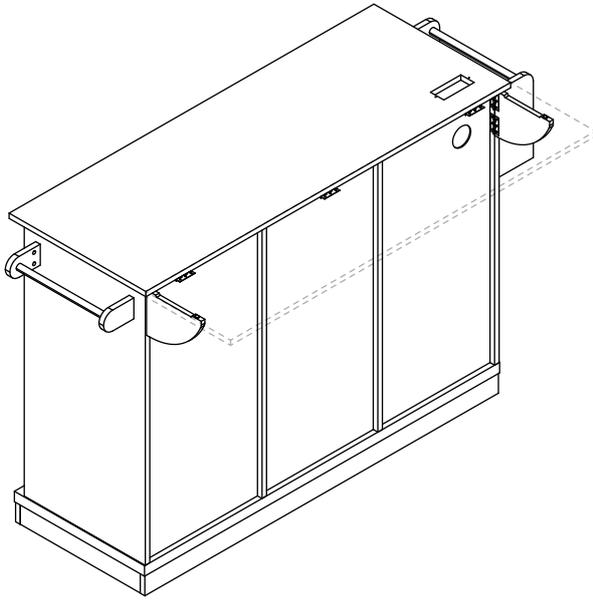

# Assembly Instructions

## Step 31

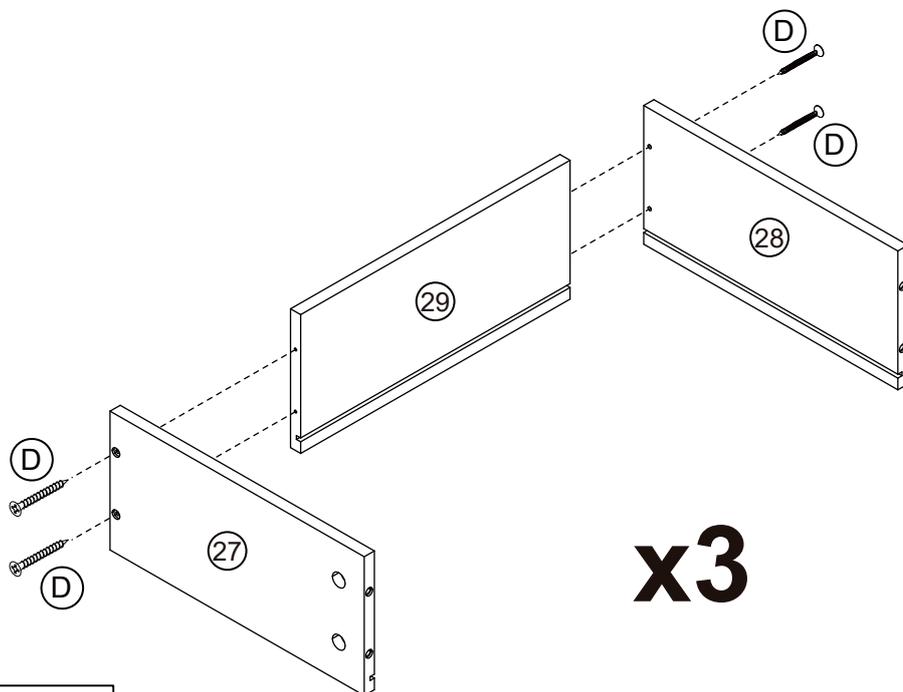


(D)




4\*35mm Screw x 12

## Step 32

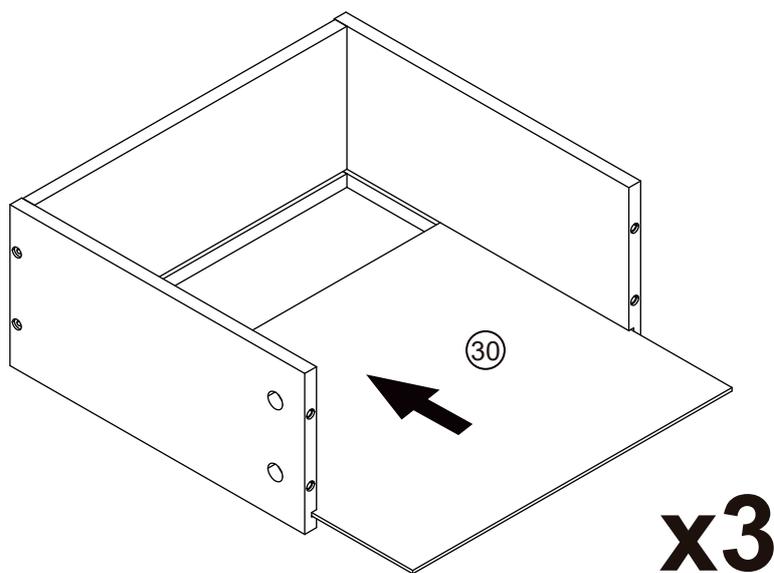


# Assembly Instructions

## Step 33

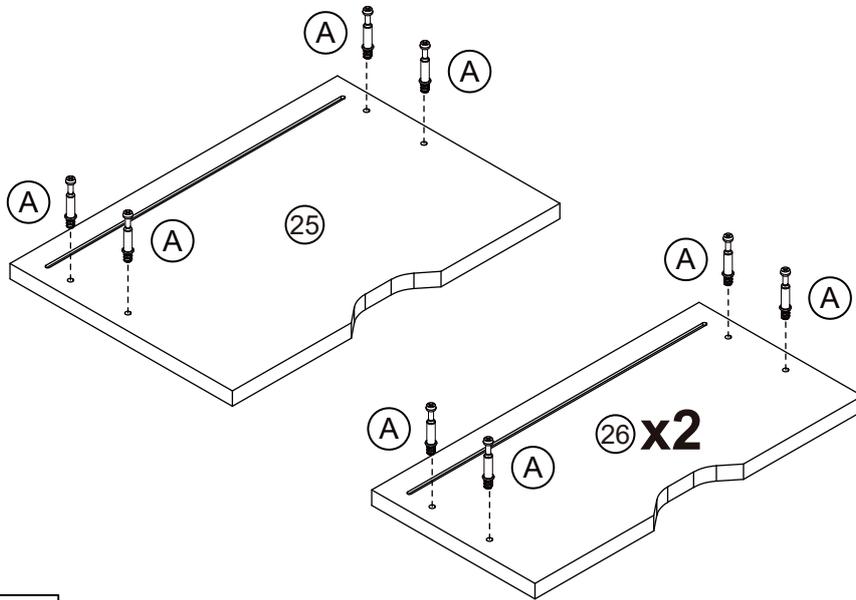


A



Cam Bolt x 12

## Step 34

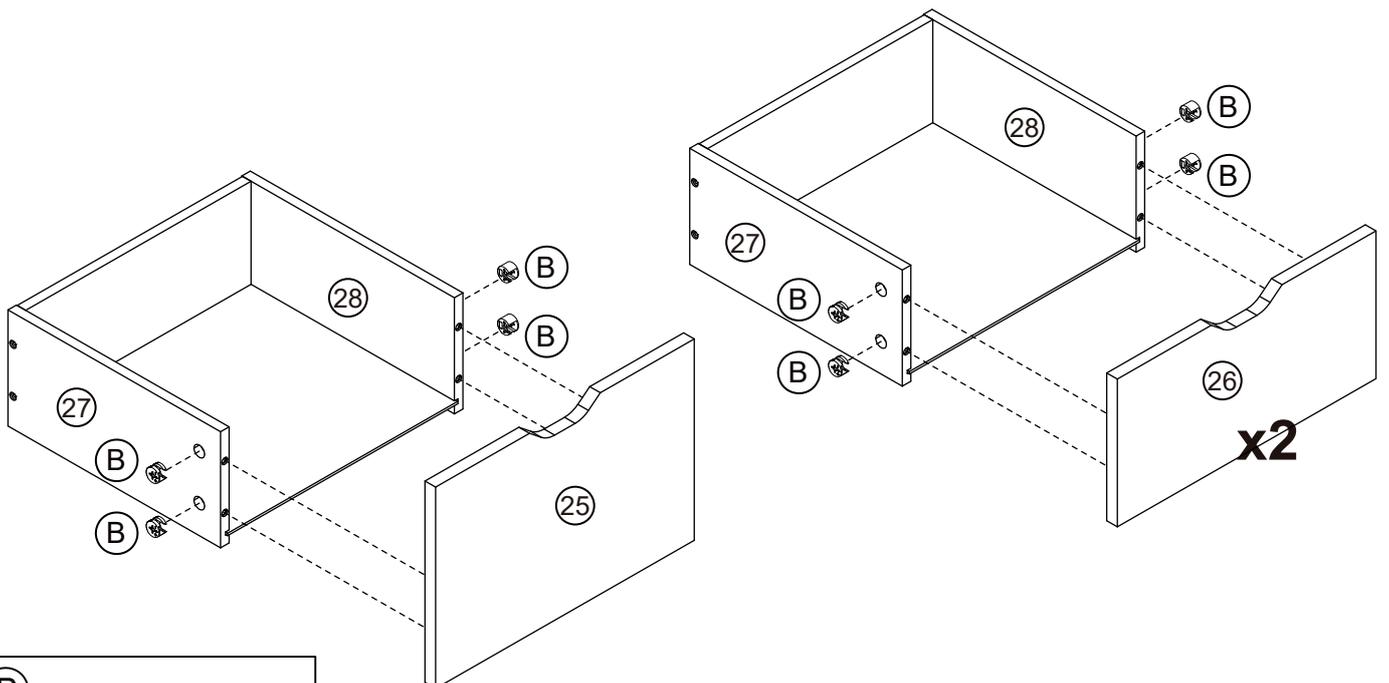


B



Cam lock x 12

# Assembly Instructions

## Step 35

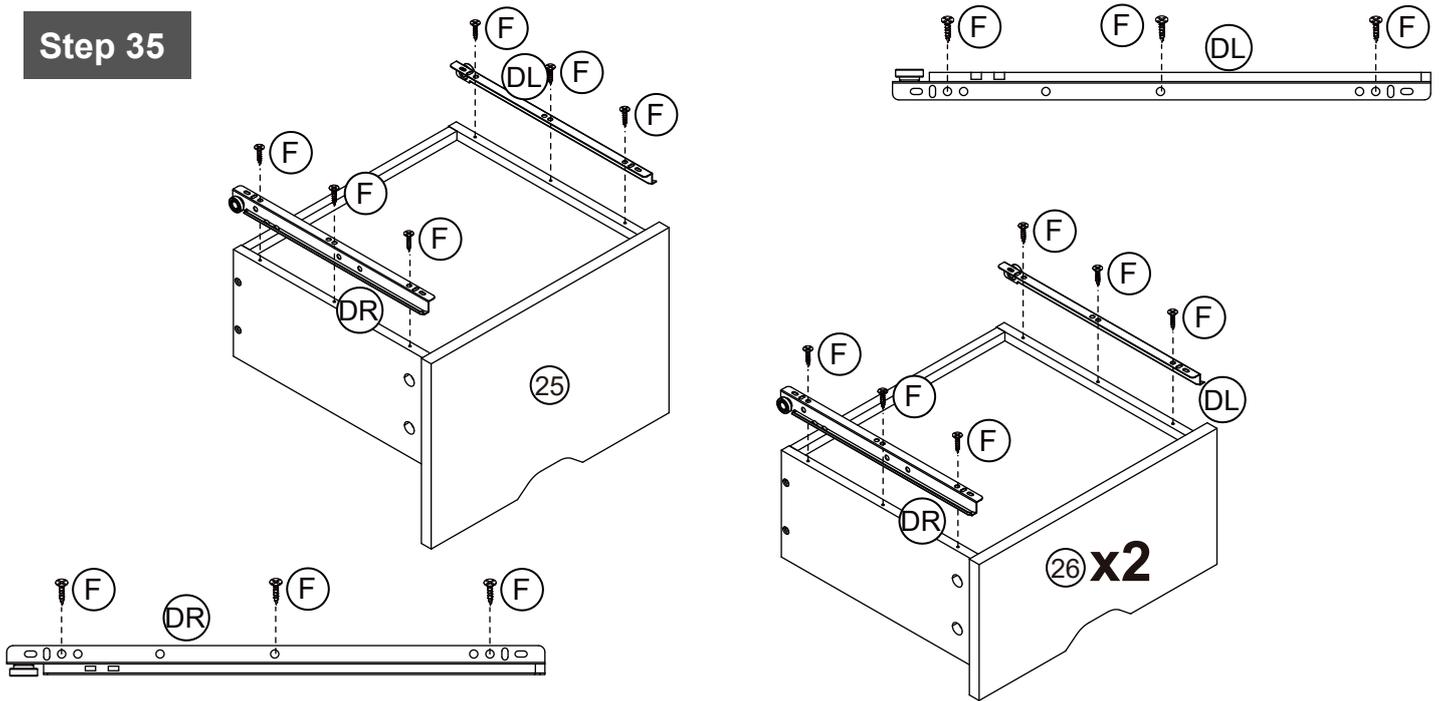


(F)




3\*12mm Screw x 18

(DR)




Runner 300mm x 3

(DL)





Runner 300mm x 3

## Step 36


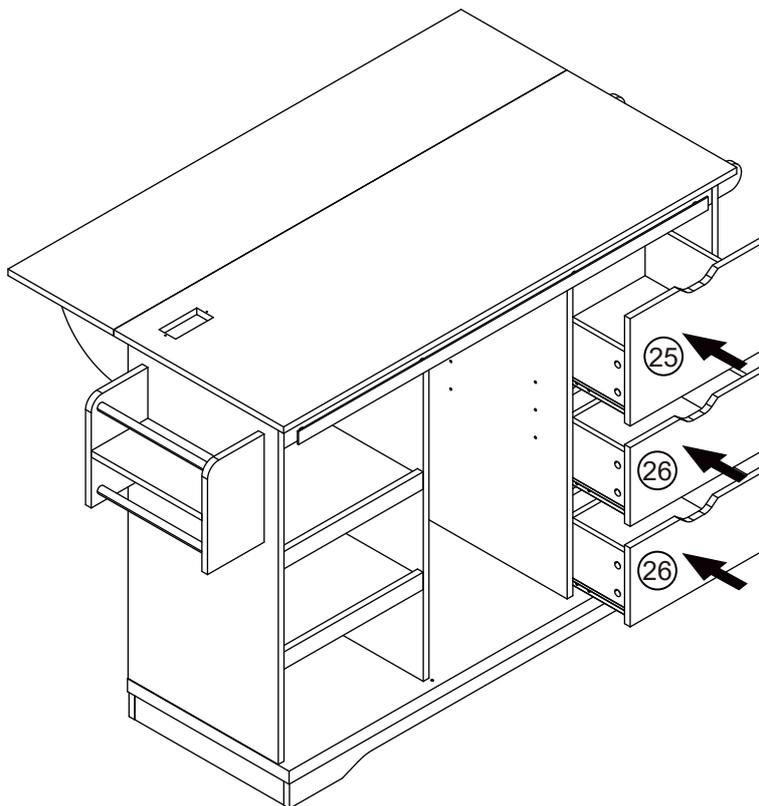


# Assembly Instructions

## Step 37


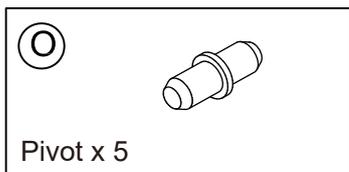
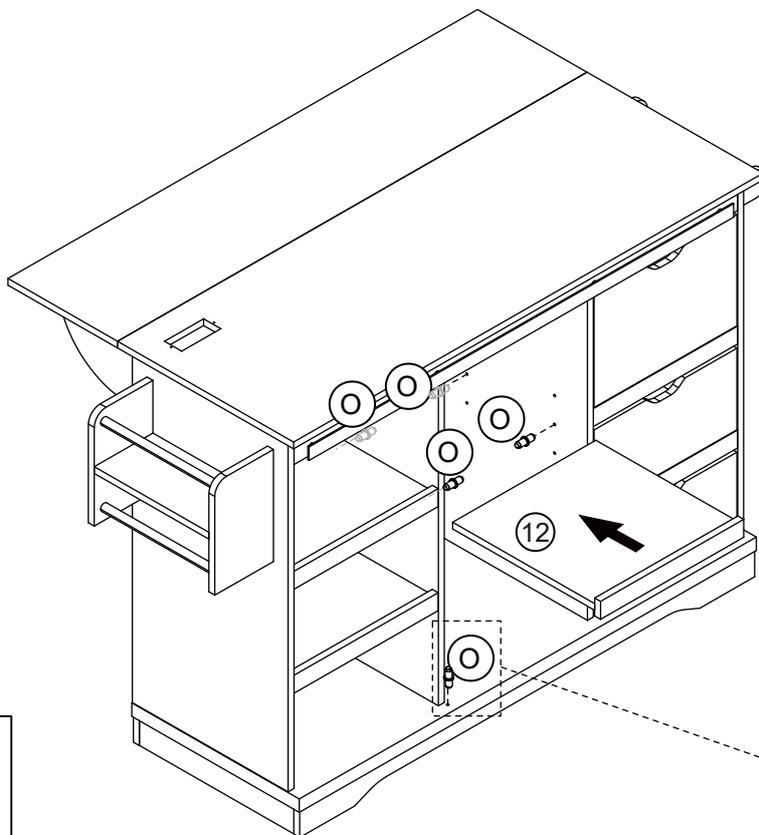


## Step 38


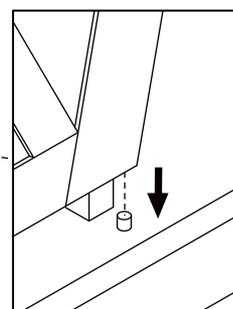
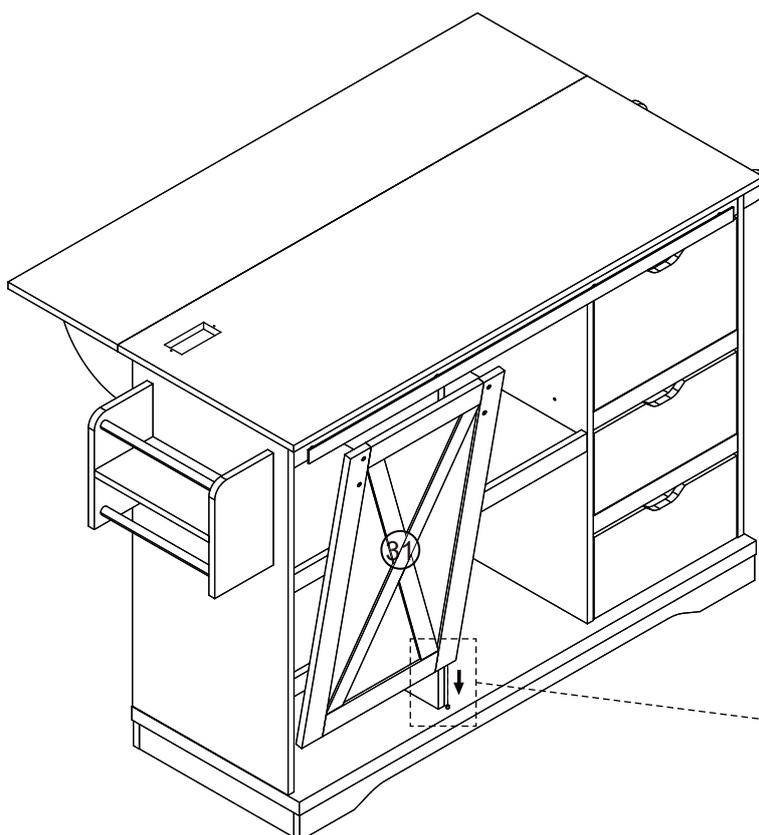


# Assembly Instructions

## Step 39

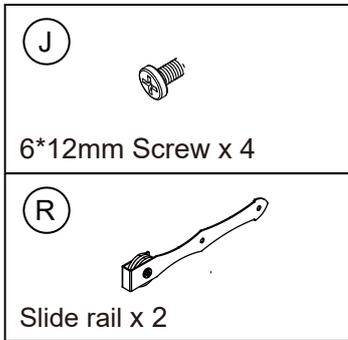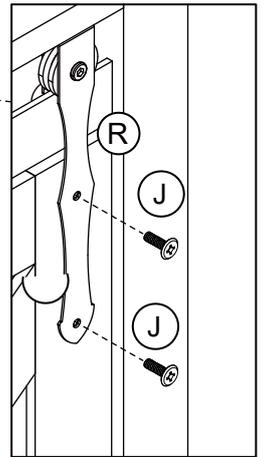
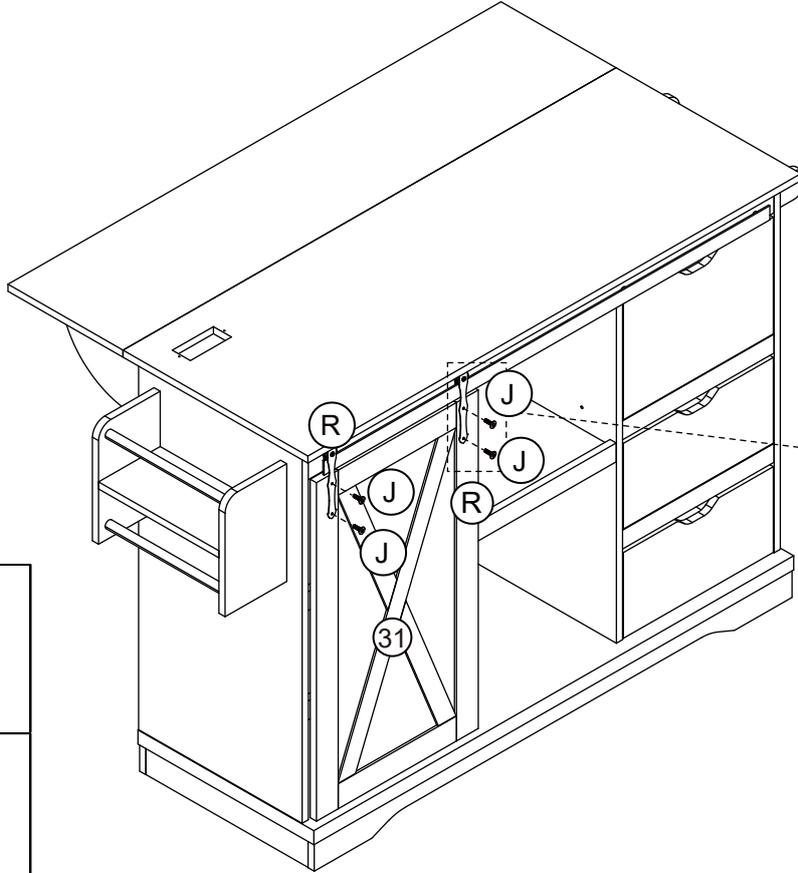


## Step 40

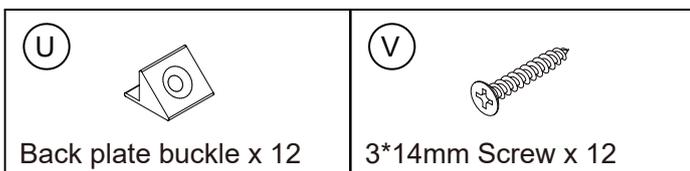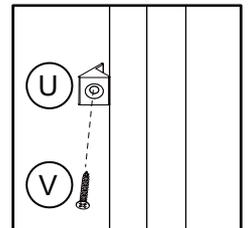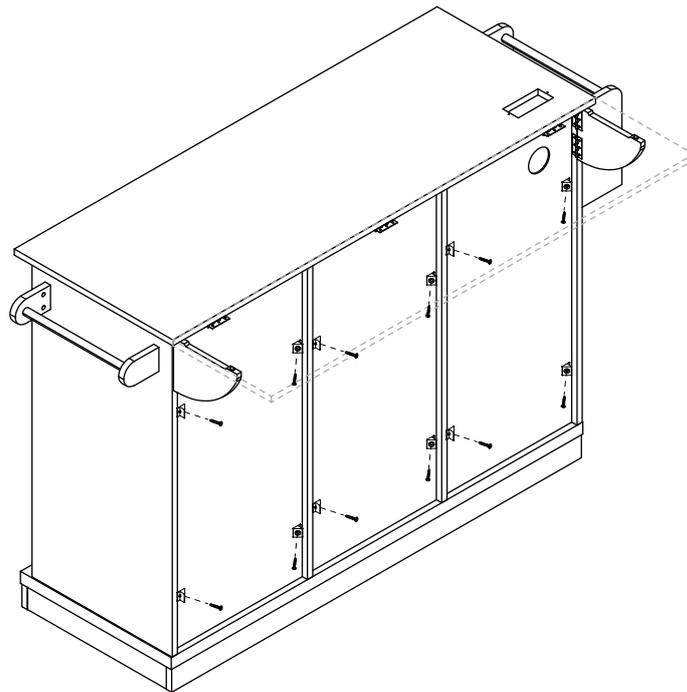

# Assembly Instructions

## Step 41

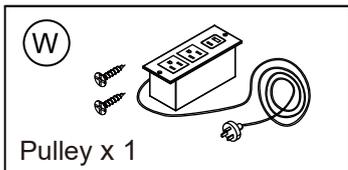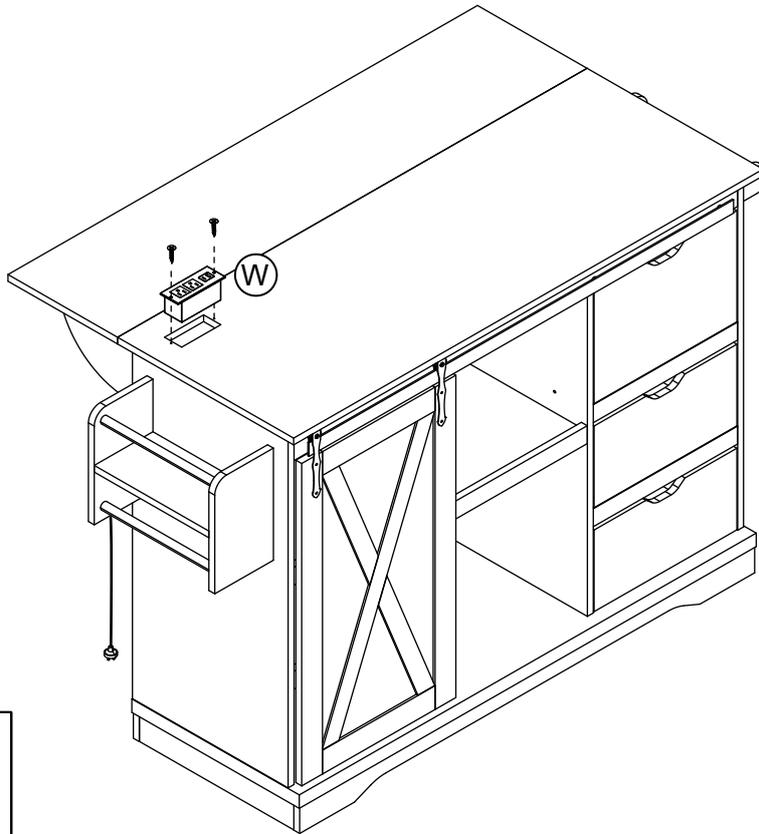

## Step 42

