



N704P277393D

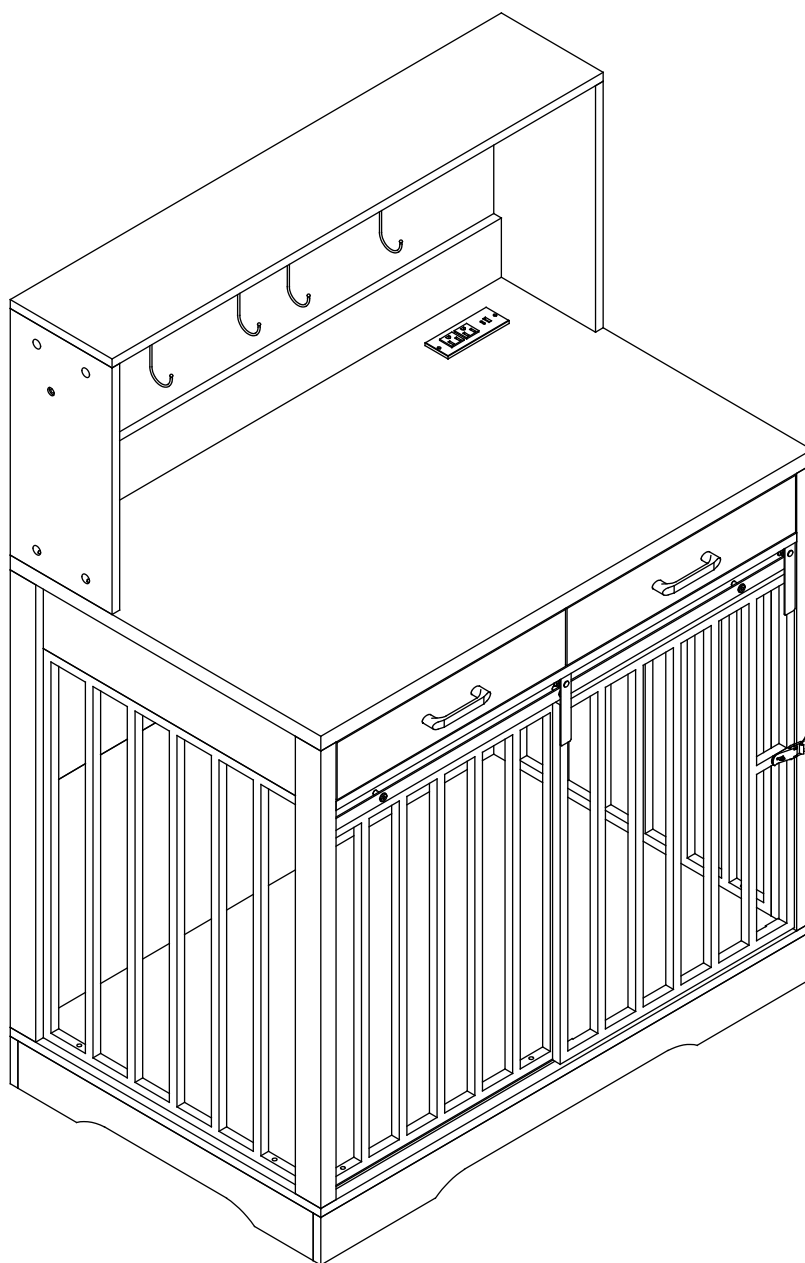


2PERS




45 MIN


Tool Required Not Provided



①



⊕

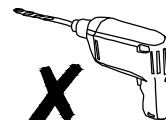



[EN]

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.

Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.


Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.















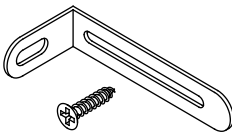
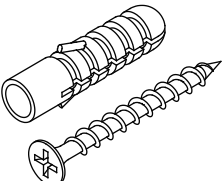
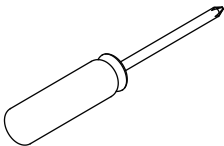
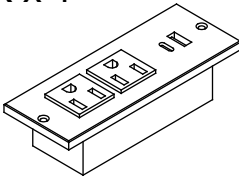

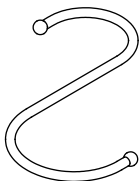
Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.


Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

Warning: This product is equipped with an anti-tilt device. Please be sure to install this device to prevent unnecessary injuries caused by tipping.

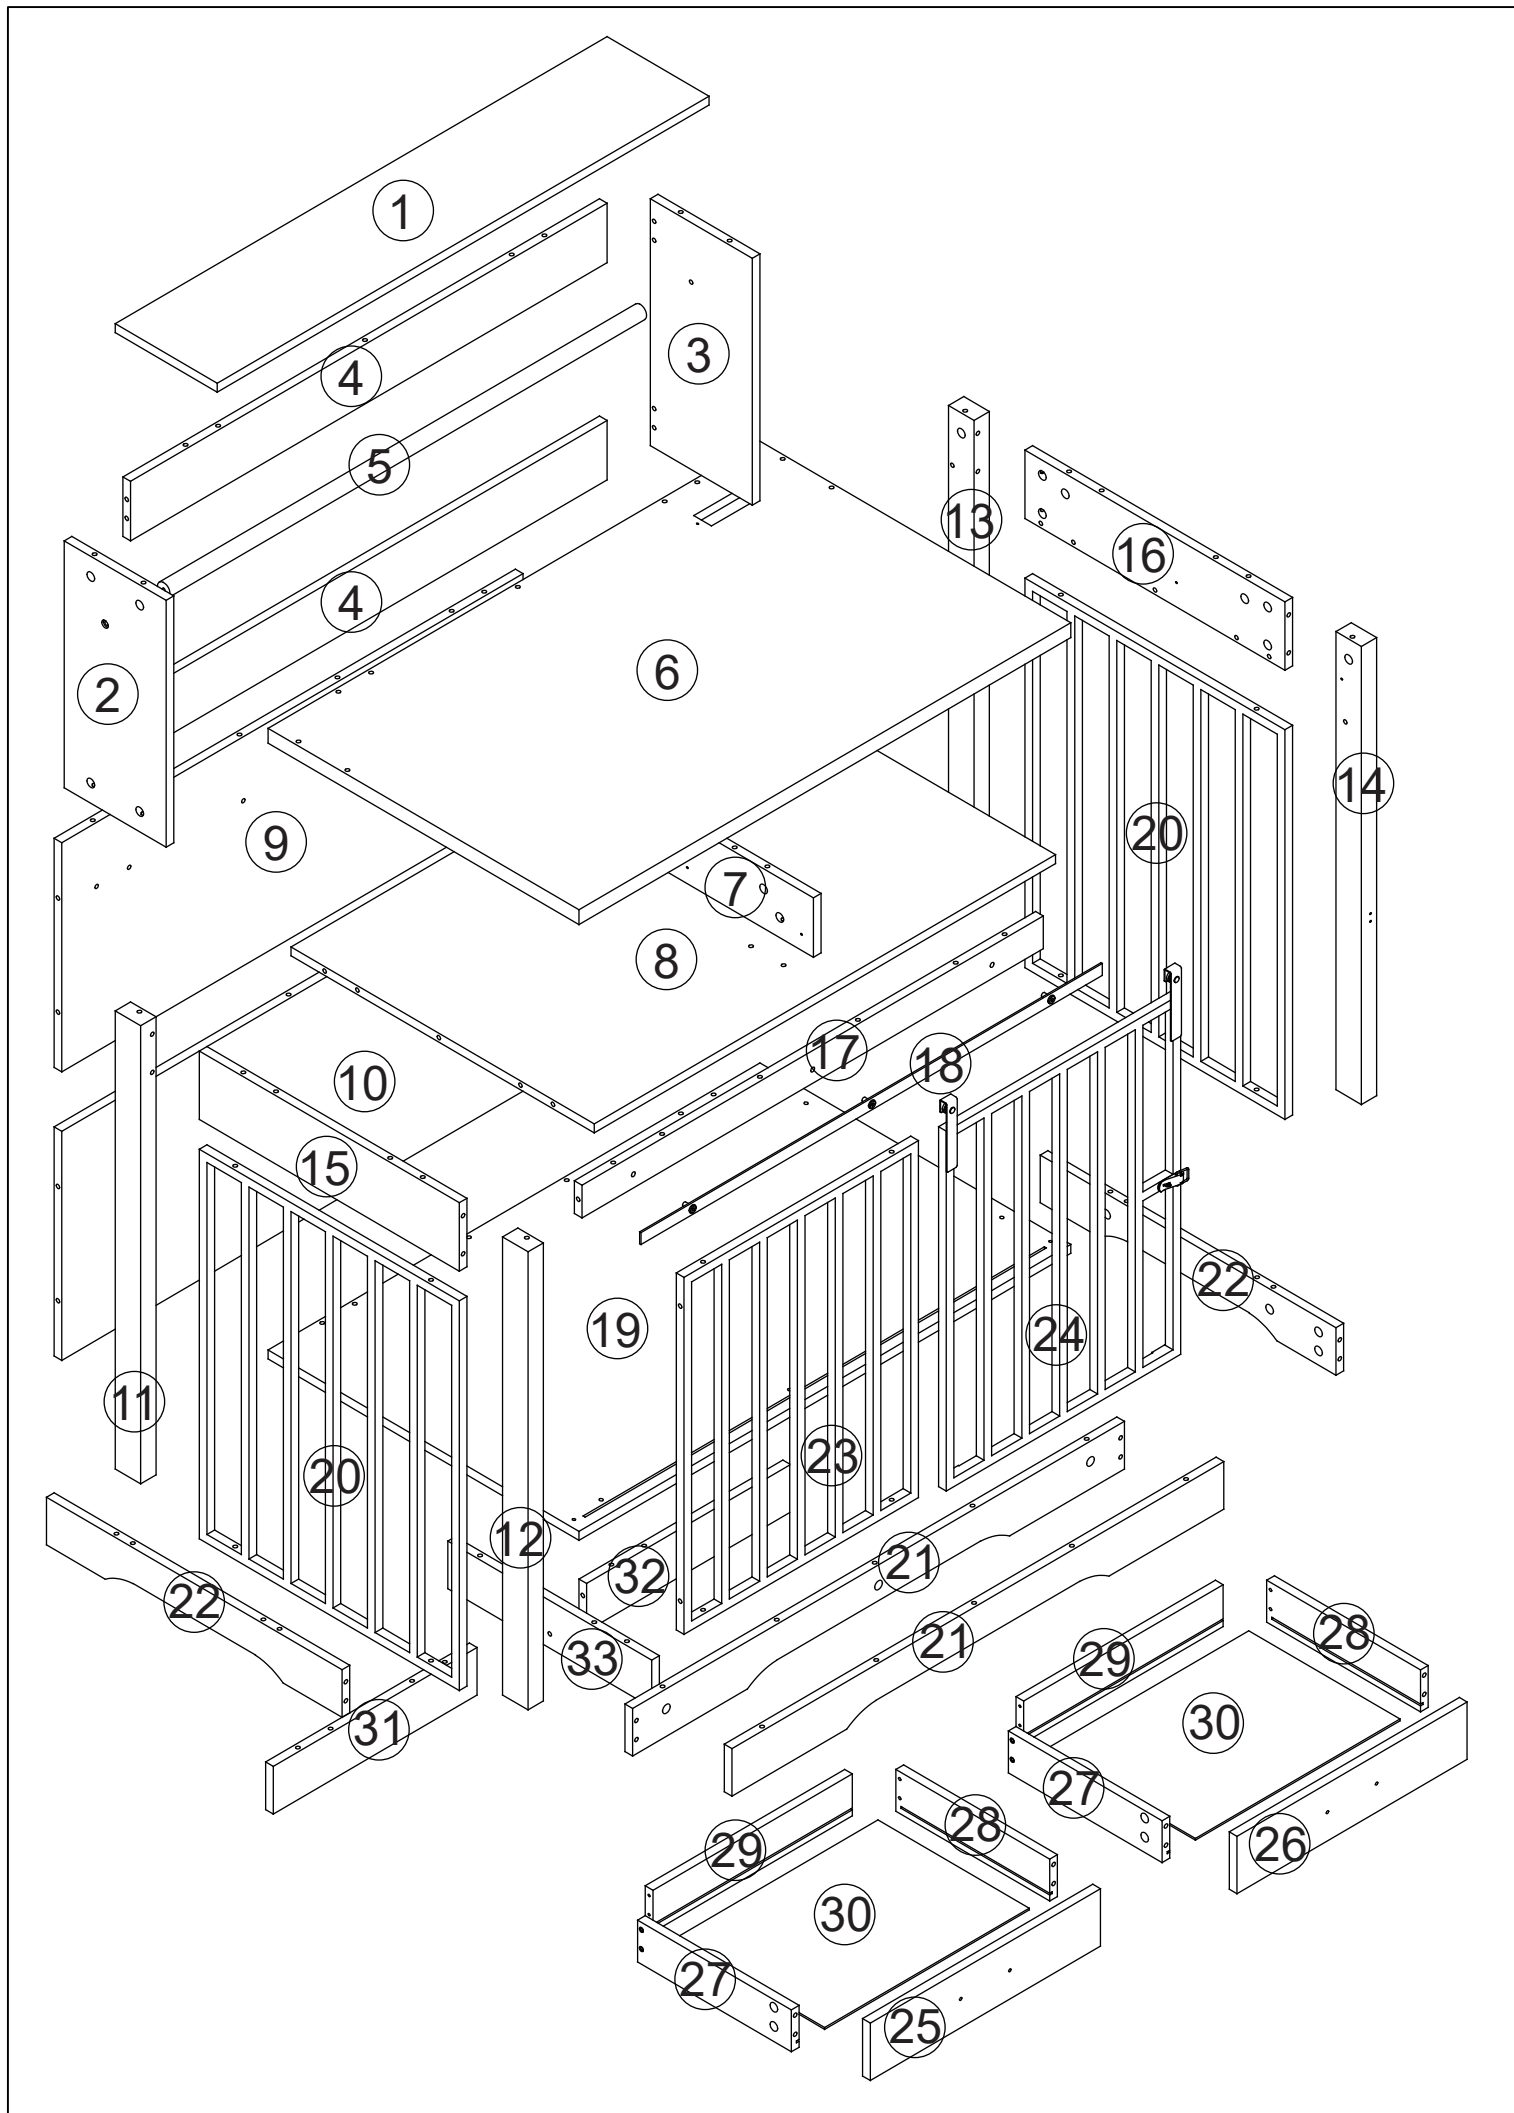


Hardwareliste

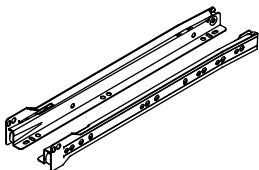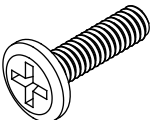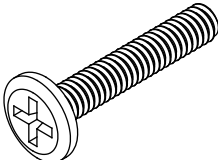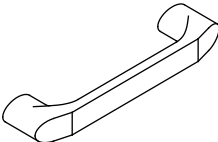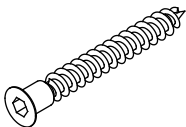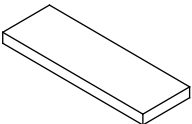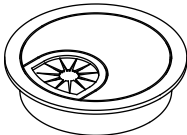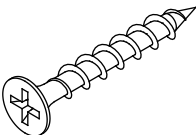
<p>A x 108</p>  <p>7x40mm</p>	<p>B x 108</p>  <p>15x10mm</p>	<p>C x 41</p> 	<p>D x 20</p> 	<p>E x 2</p> 
<p>F x 11</p> 	<p>G x 2</p> 	<p>H x 4</p> 	<p>I x 2</p> 	<p>J x 10</p> 
<p>K x 4</p> 	<p>L x 1</p> 	<p>M x 8</p> 	<p>N x 108</p> 	<p>O x 2</p> 
<p>P x 2</p> 	<p>Q x 1</p> 	<p>R x 1</p> 	<p>S x 1</p> 	<p>T x 4</p> 

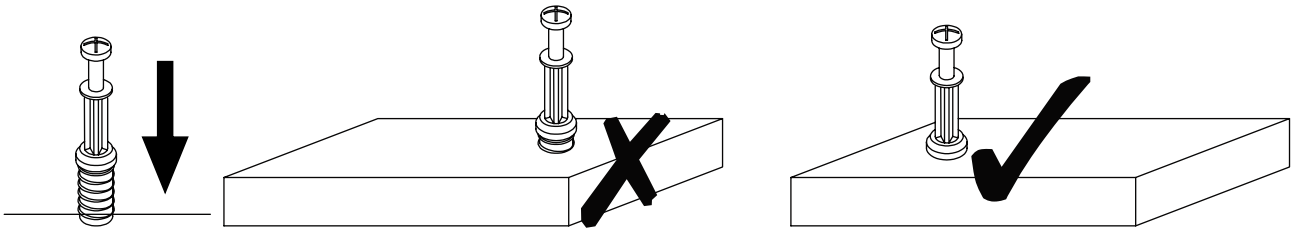


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

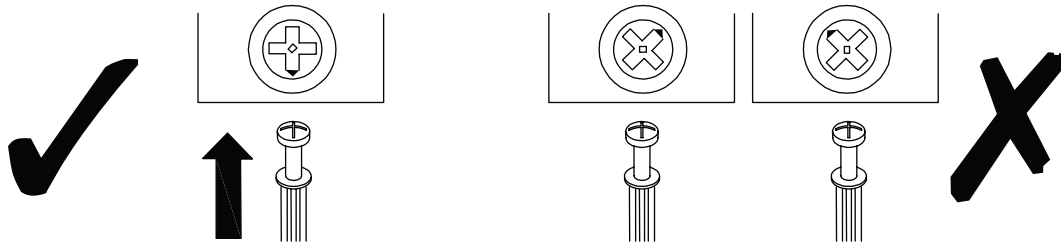

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

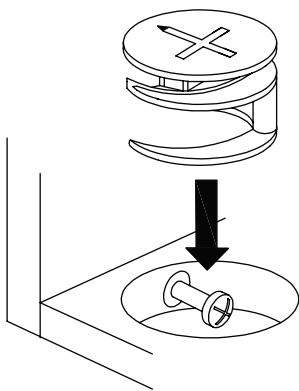

EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

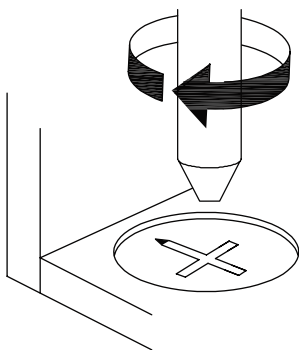


EN_Turn cam lock clockwise to tighten.


EN:

Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%.

1

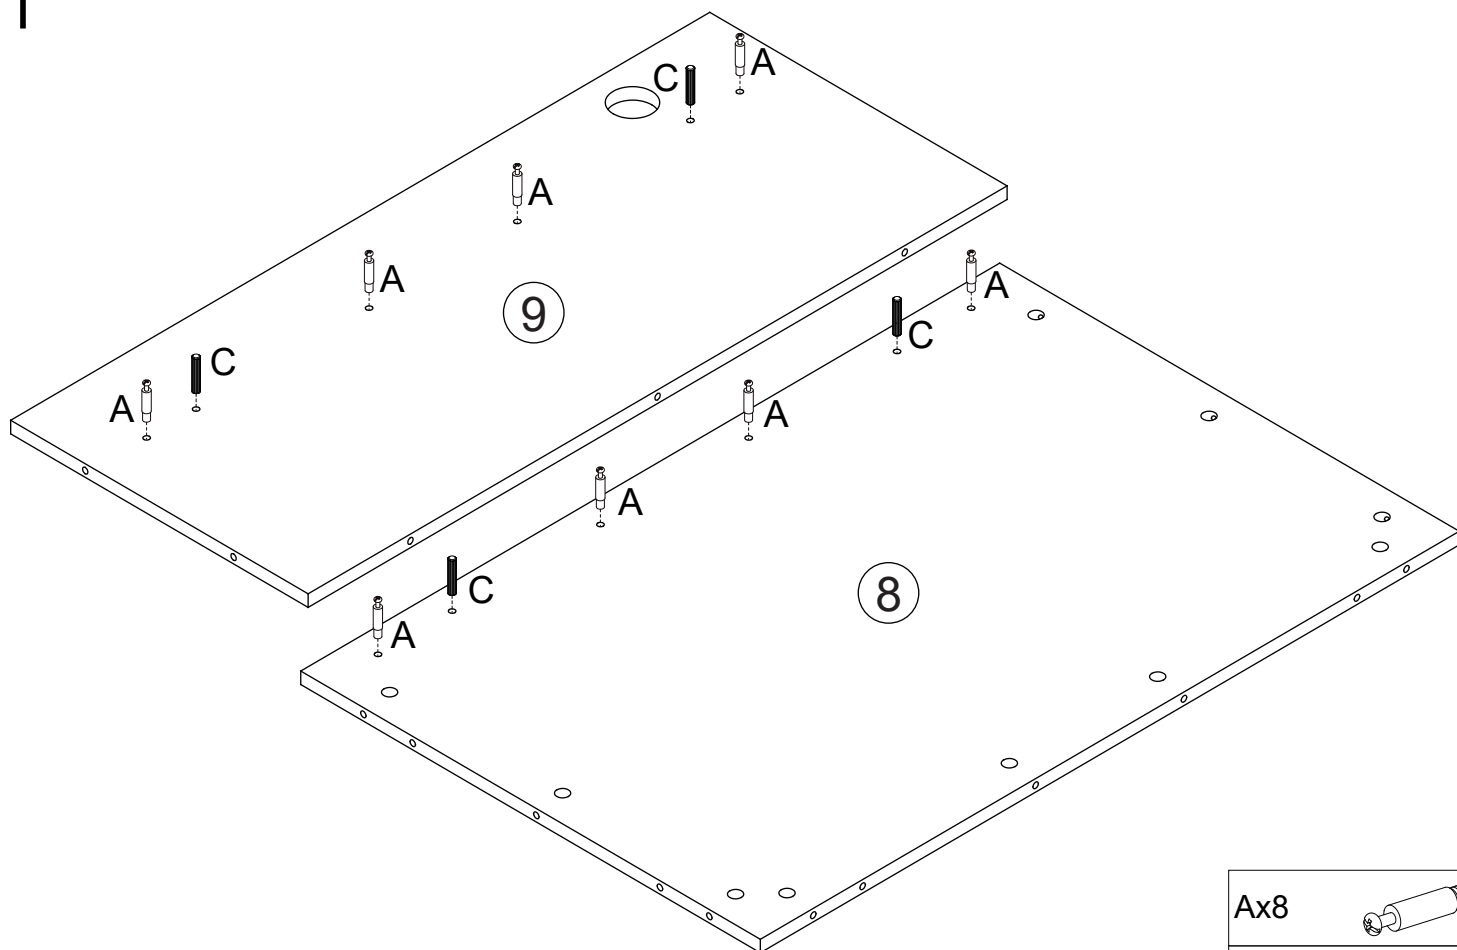


Ax8




Cx4




2

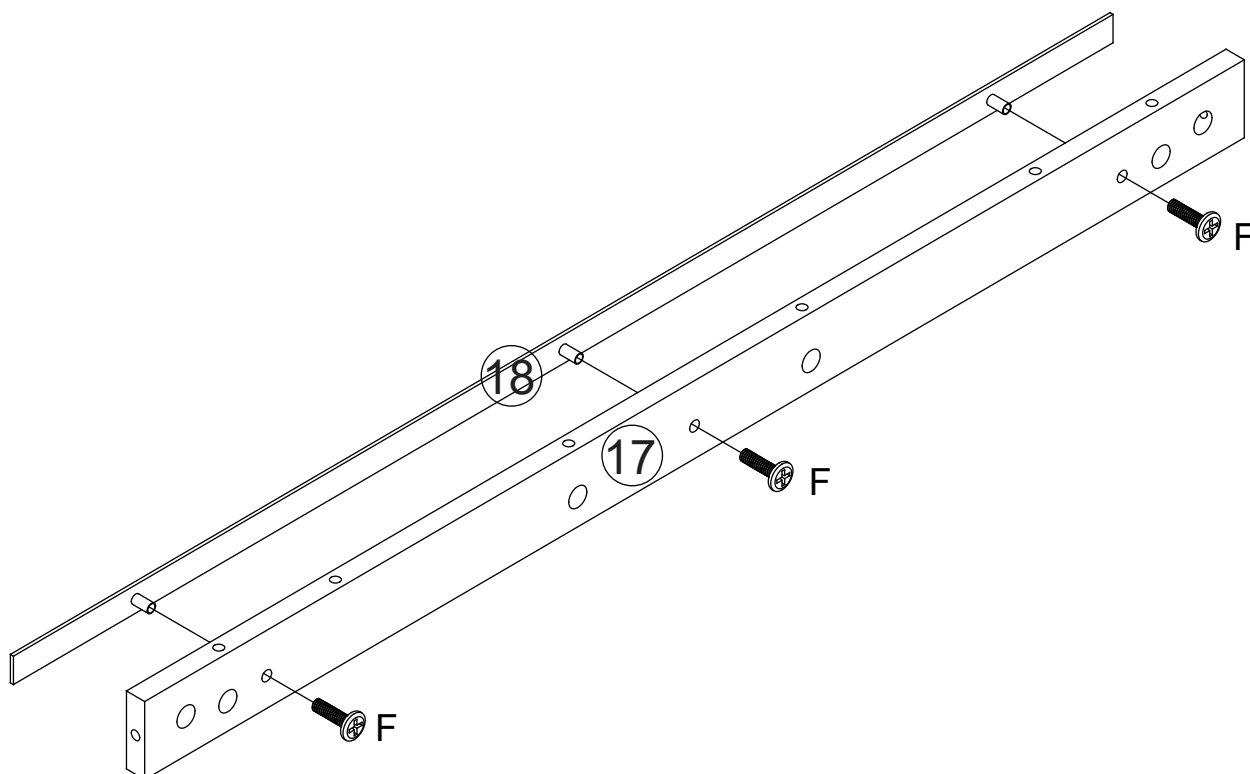

Fx3




3

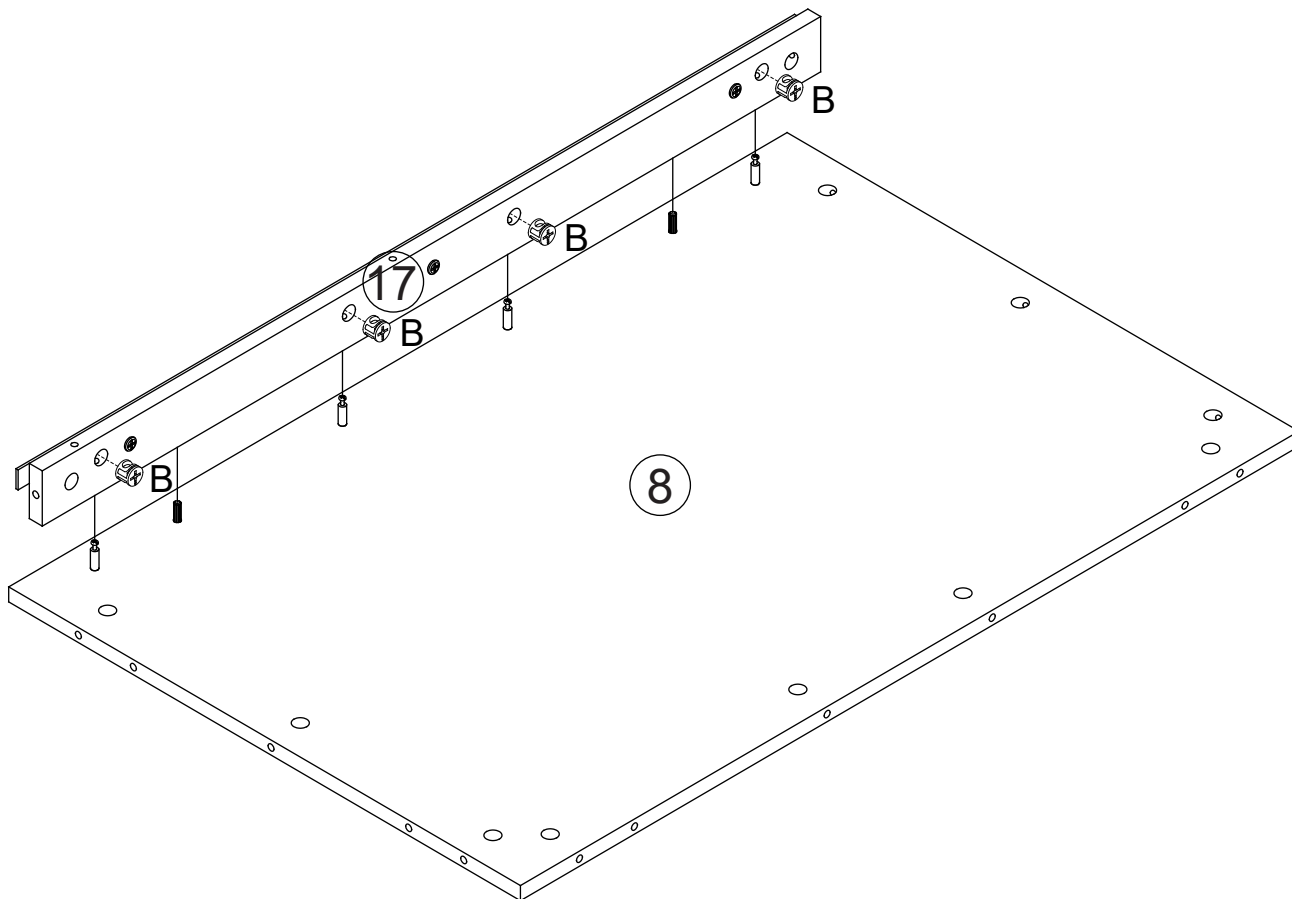

Bx4




4

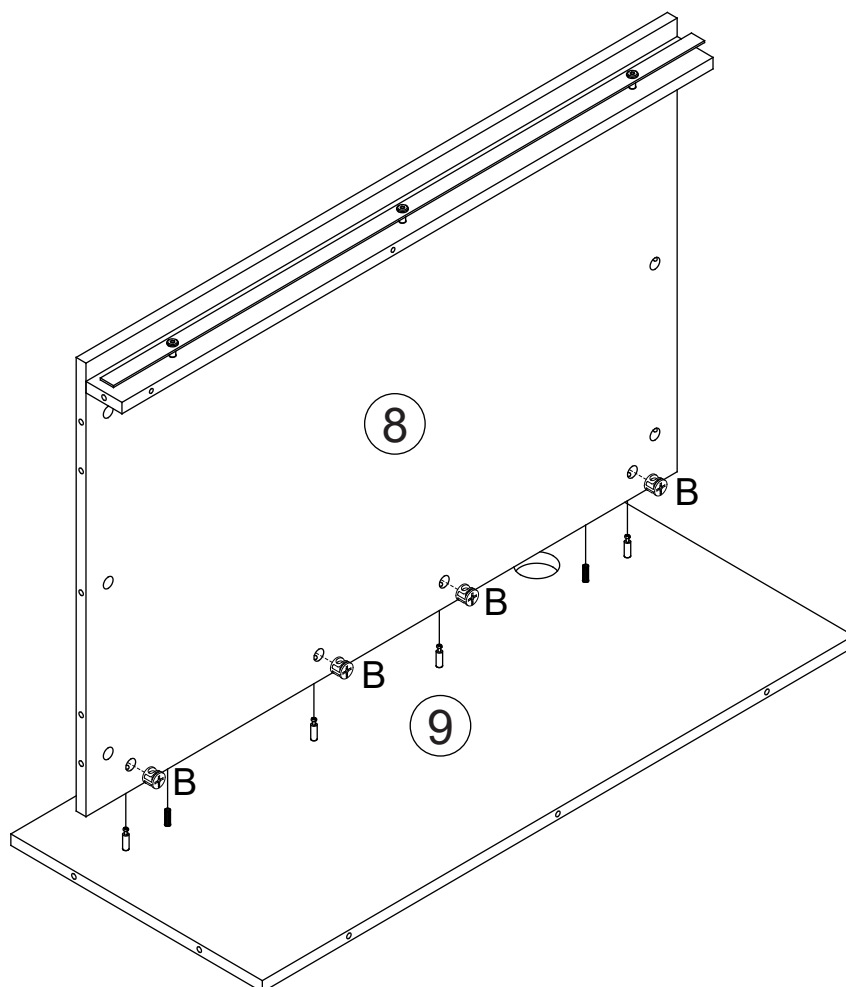

Bx4




5

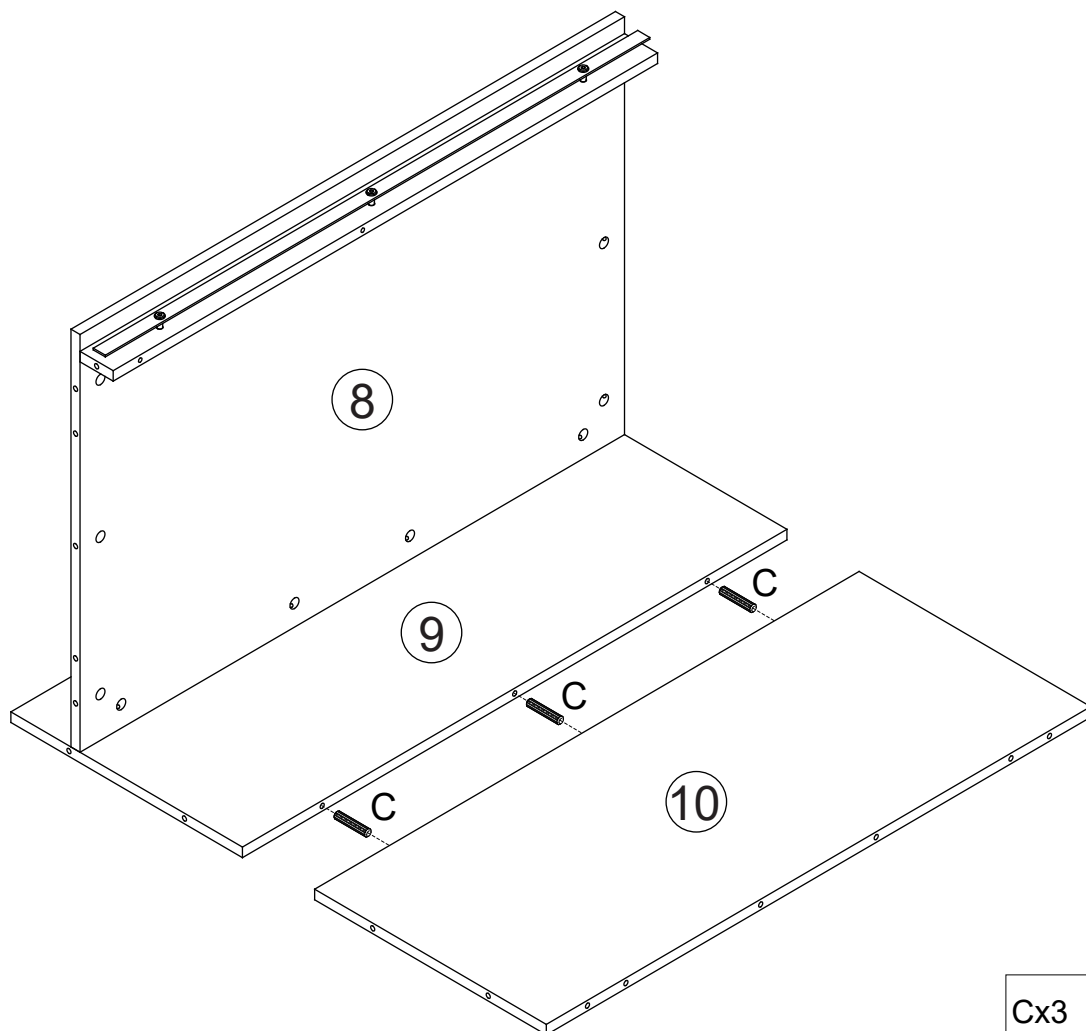


Cx3



6

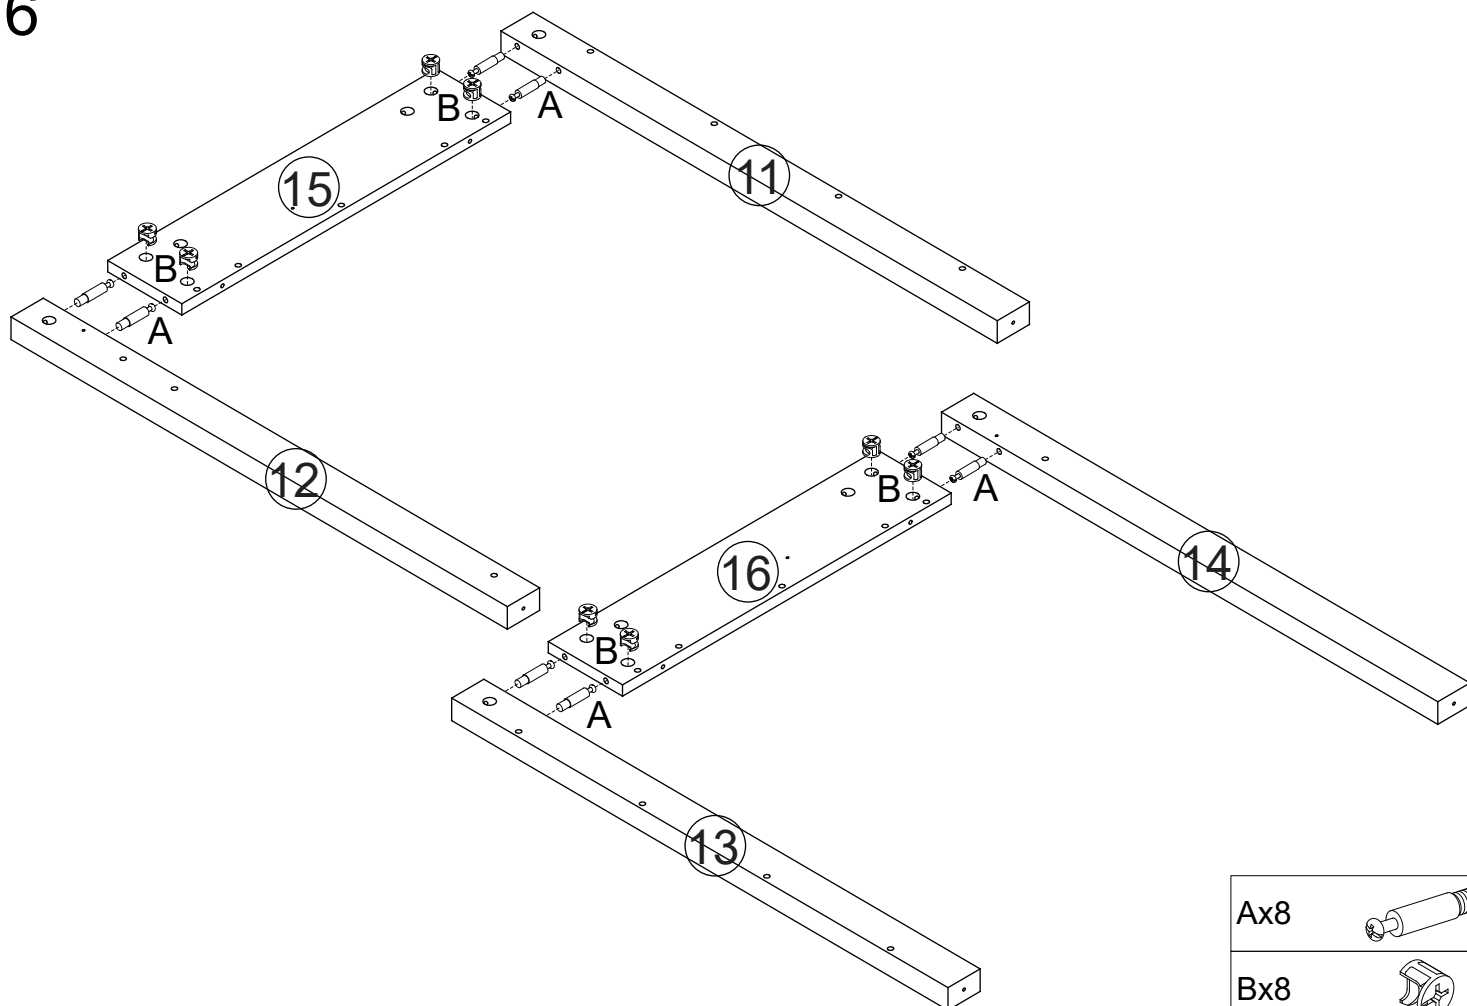


Ax8




Bx8



7

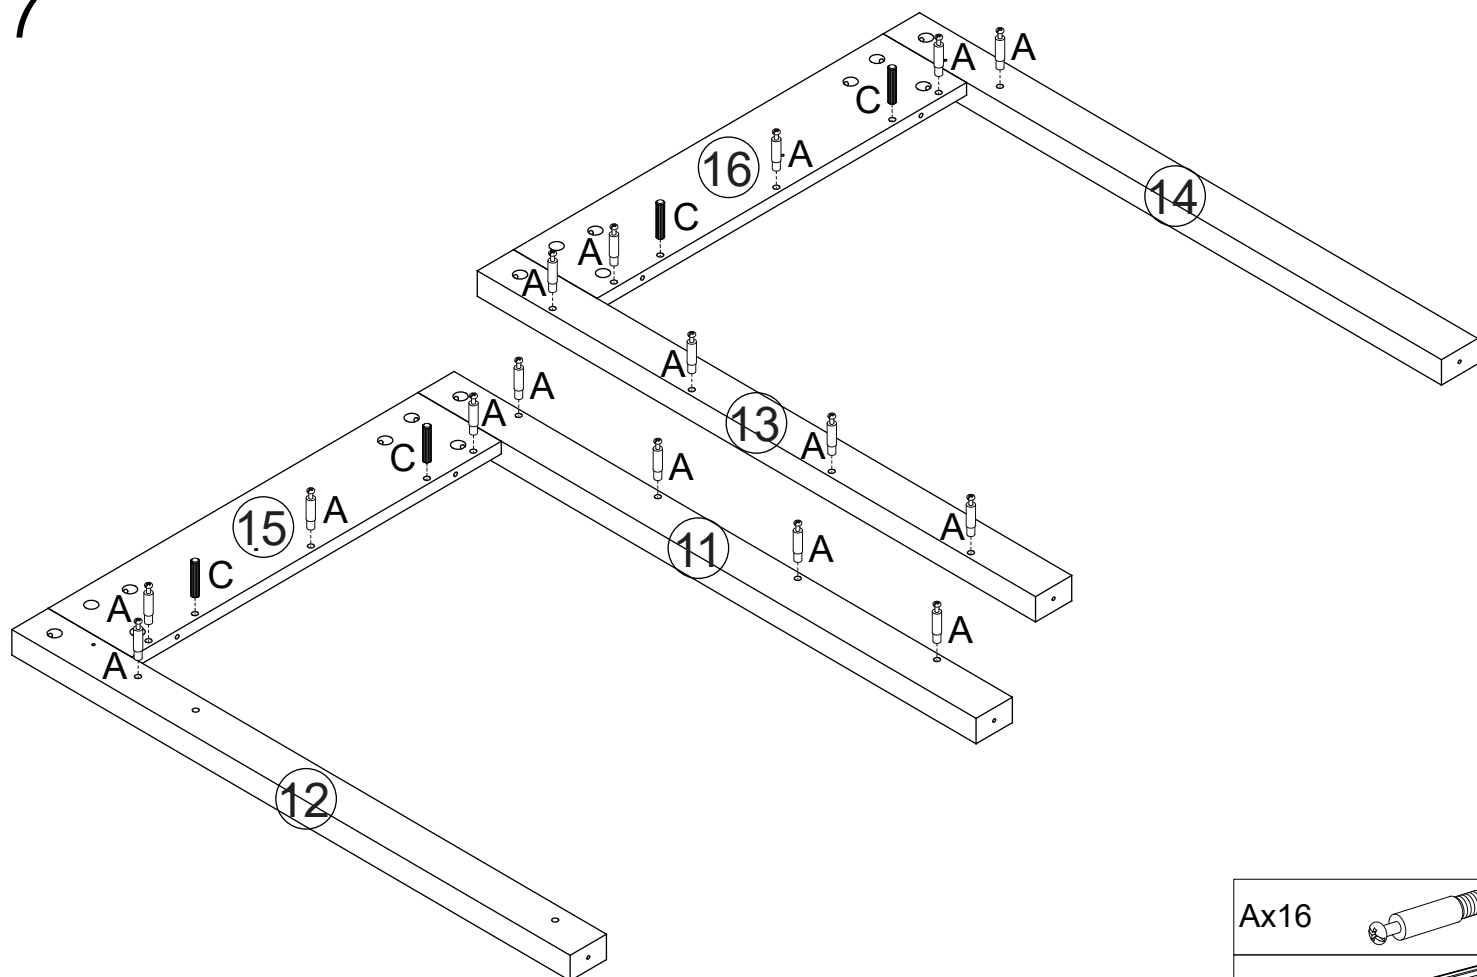


Ax16



Cx4



8

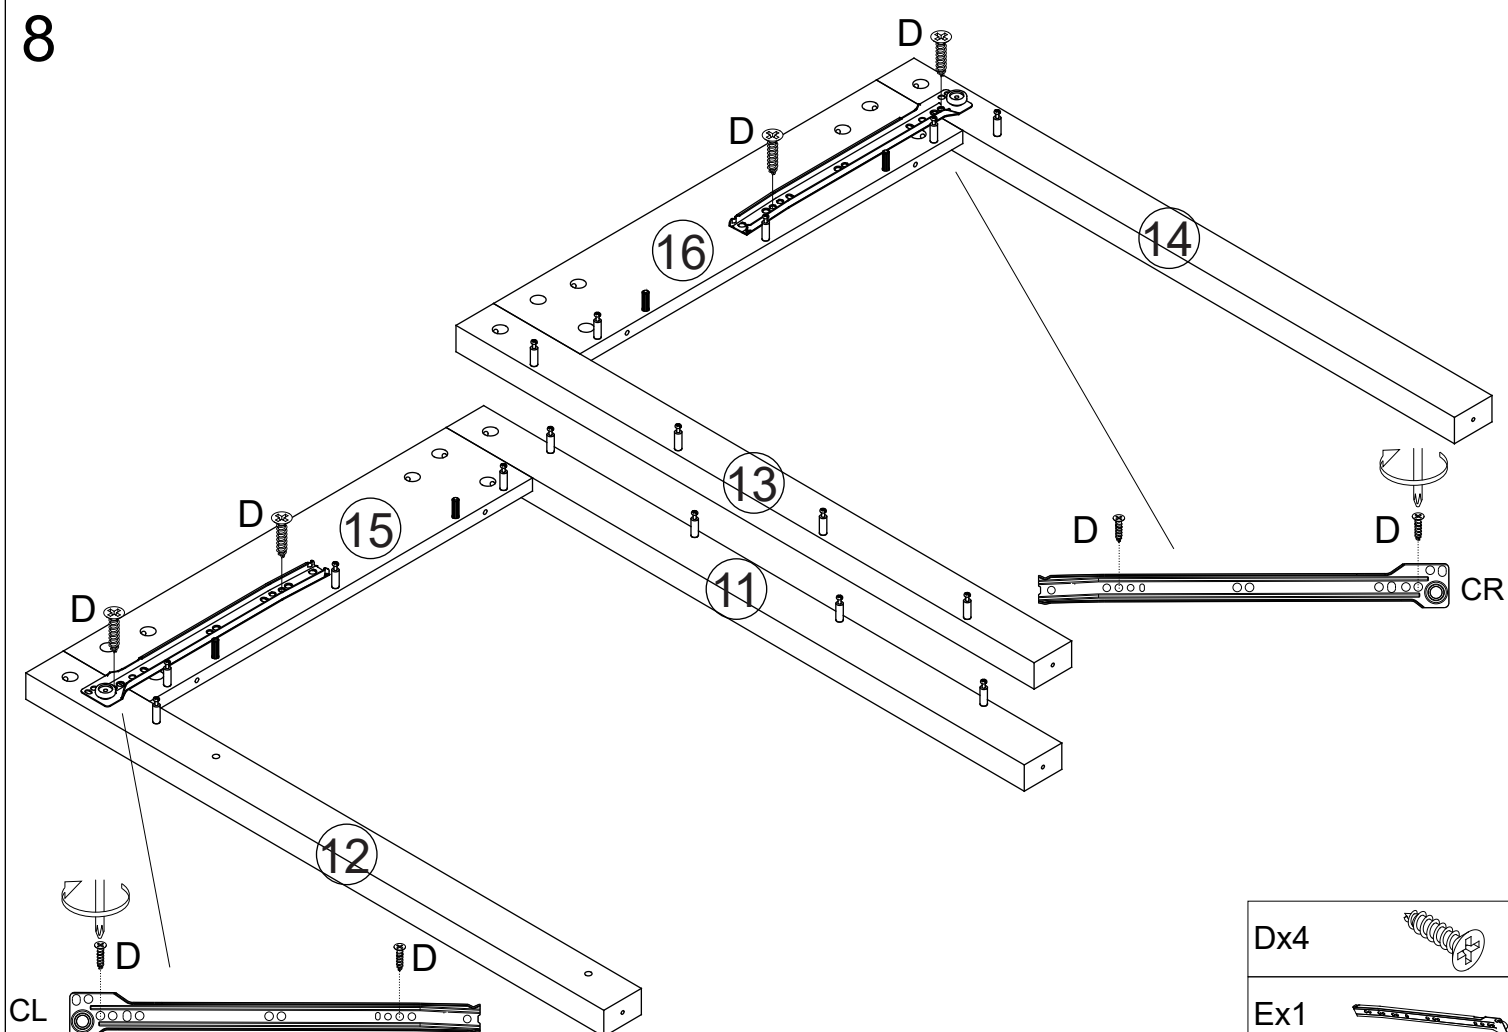


Dx4



Ex1





9

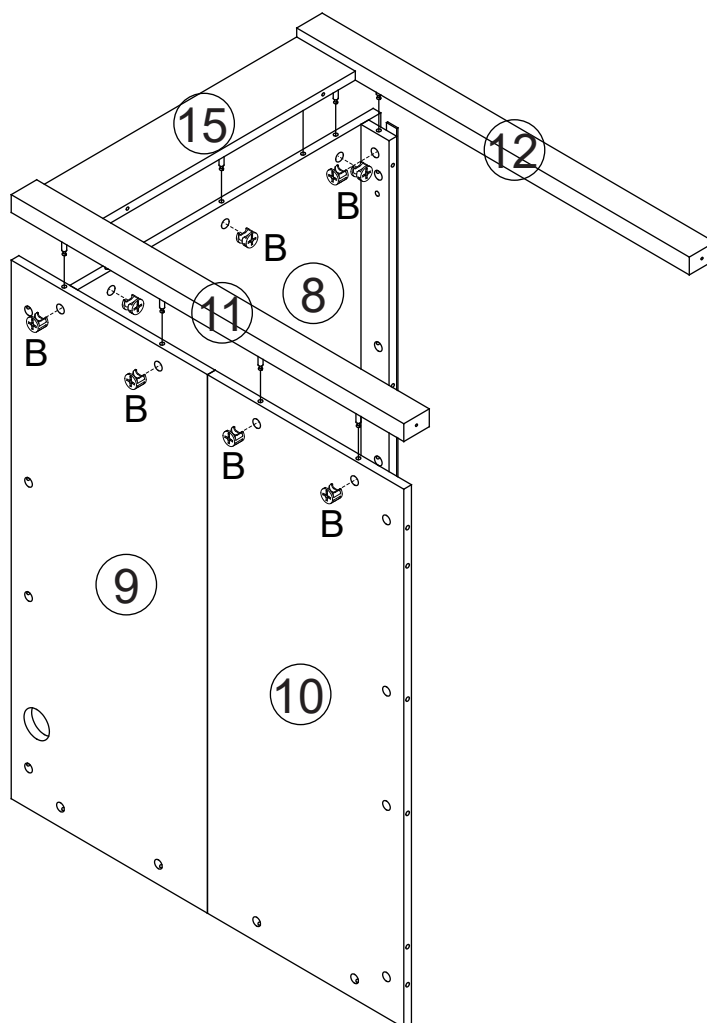


Bx8



10

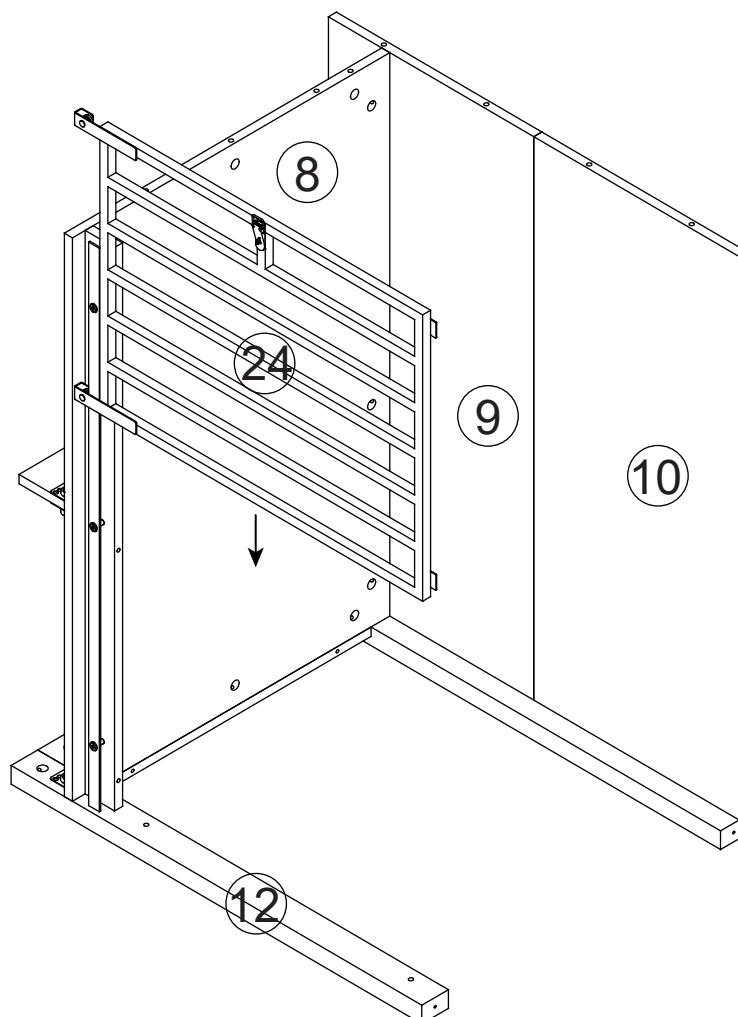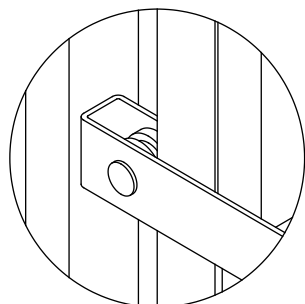




11

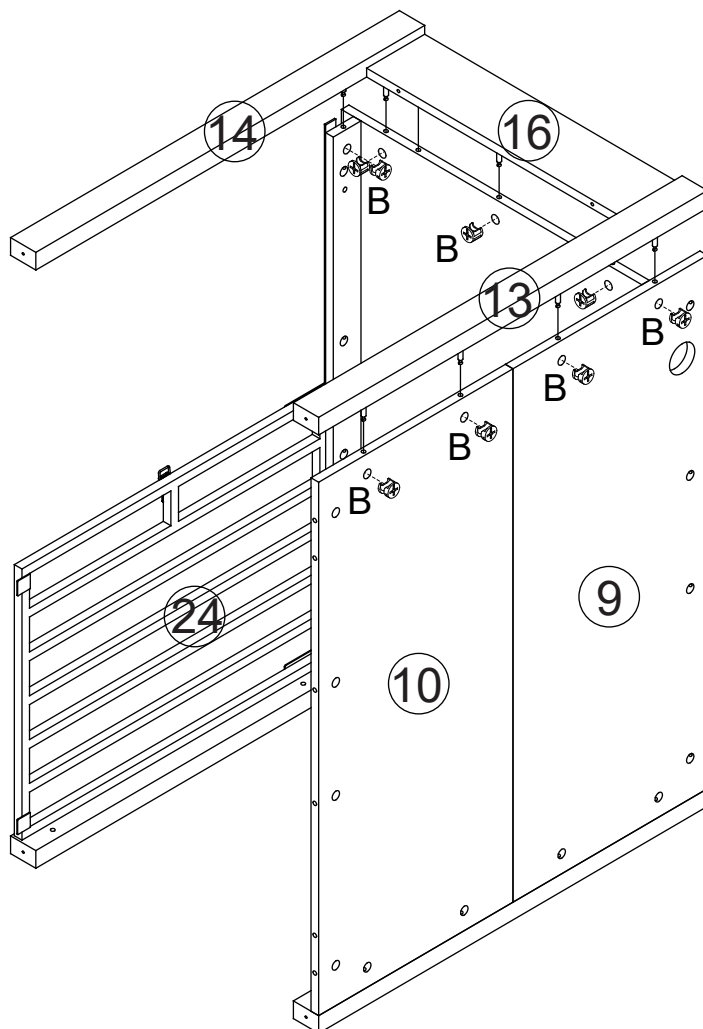

Bx8




12

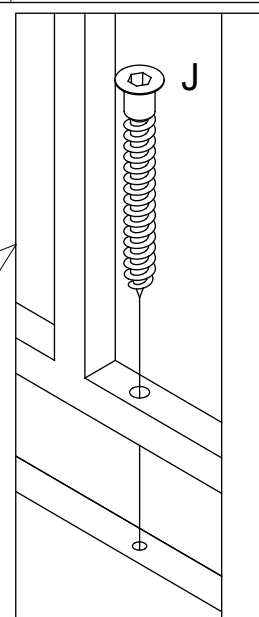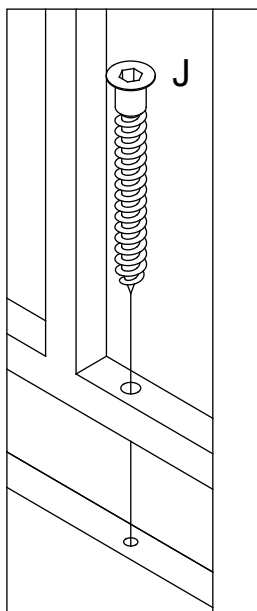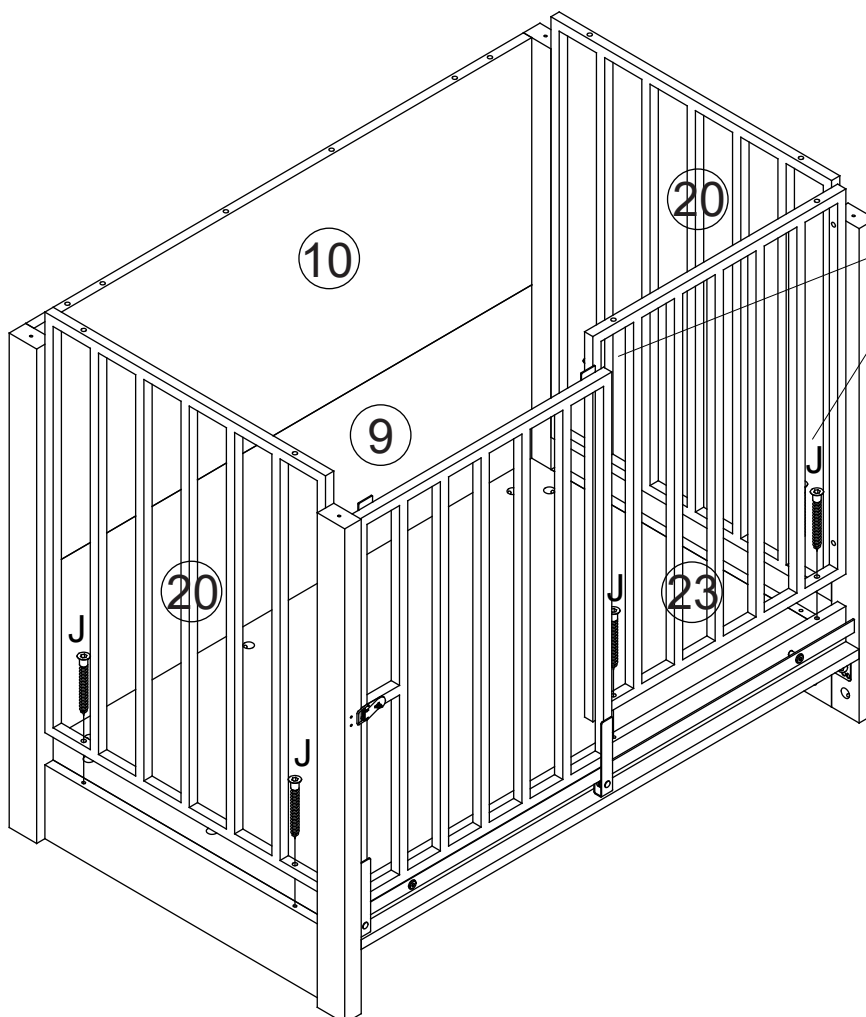


Jx6




13

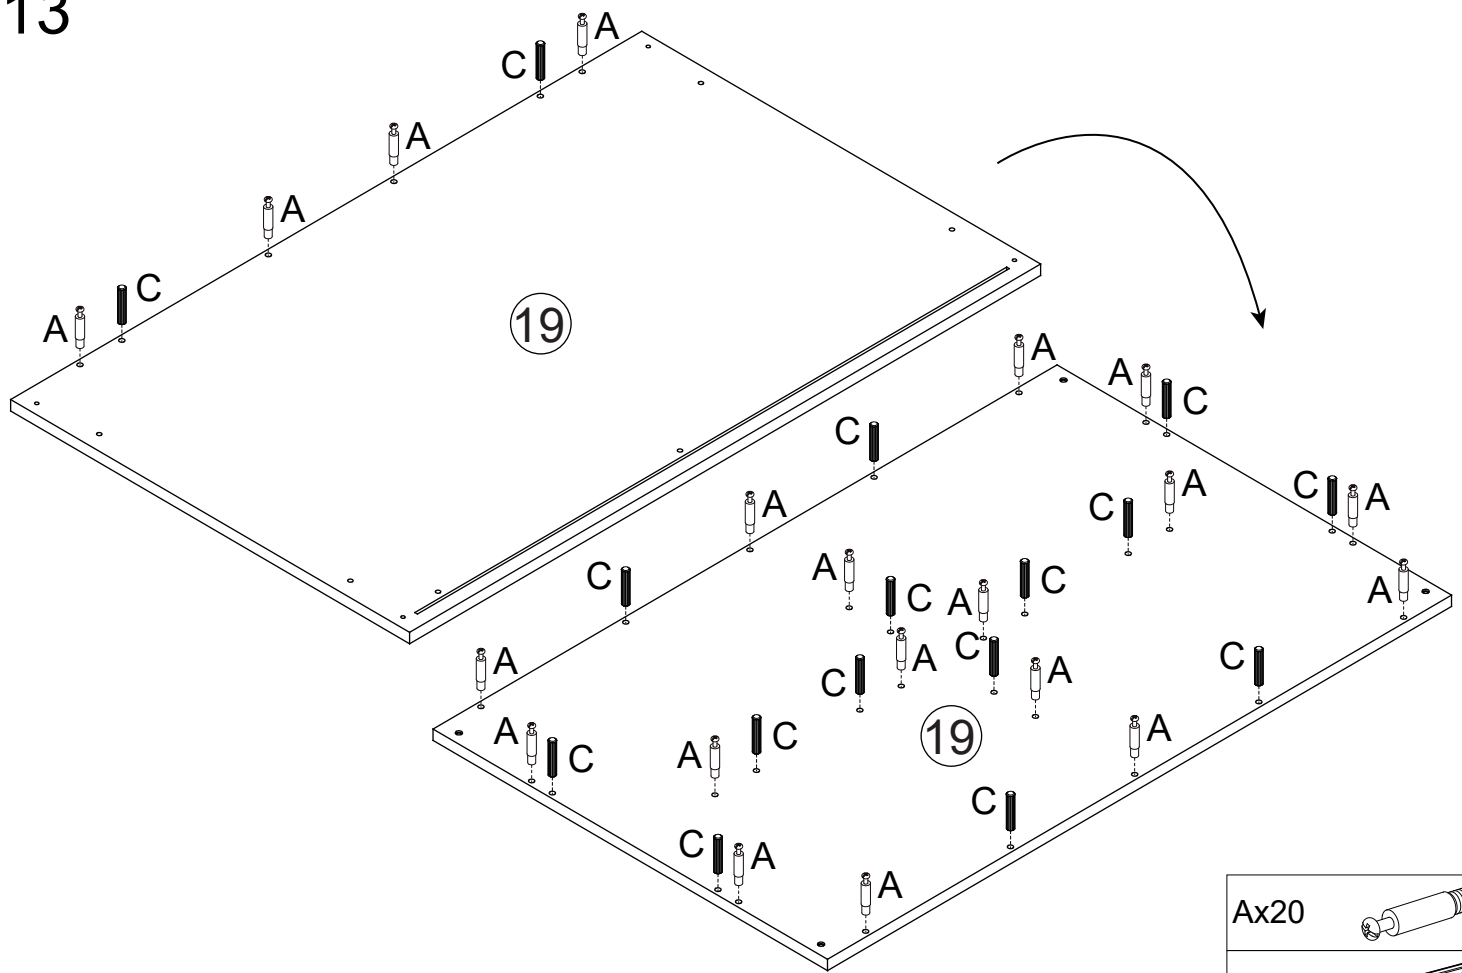



Ax20



Cx16



14

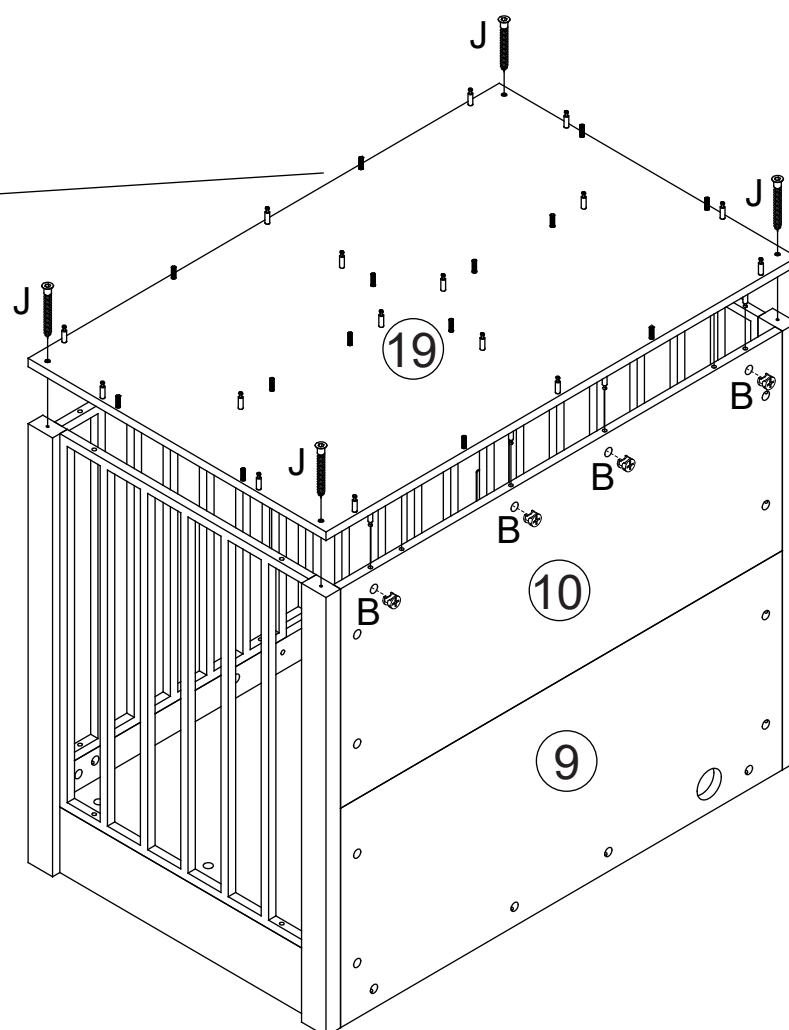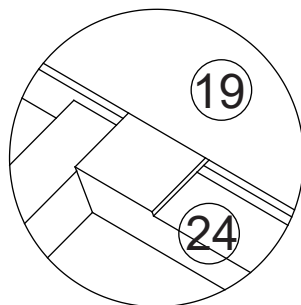





Bx4



Jx4




15

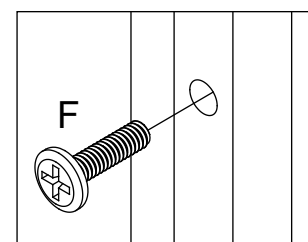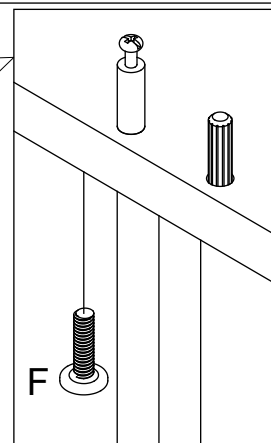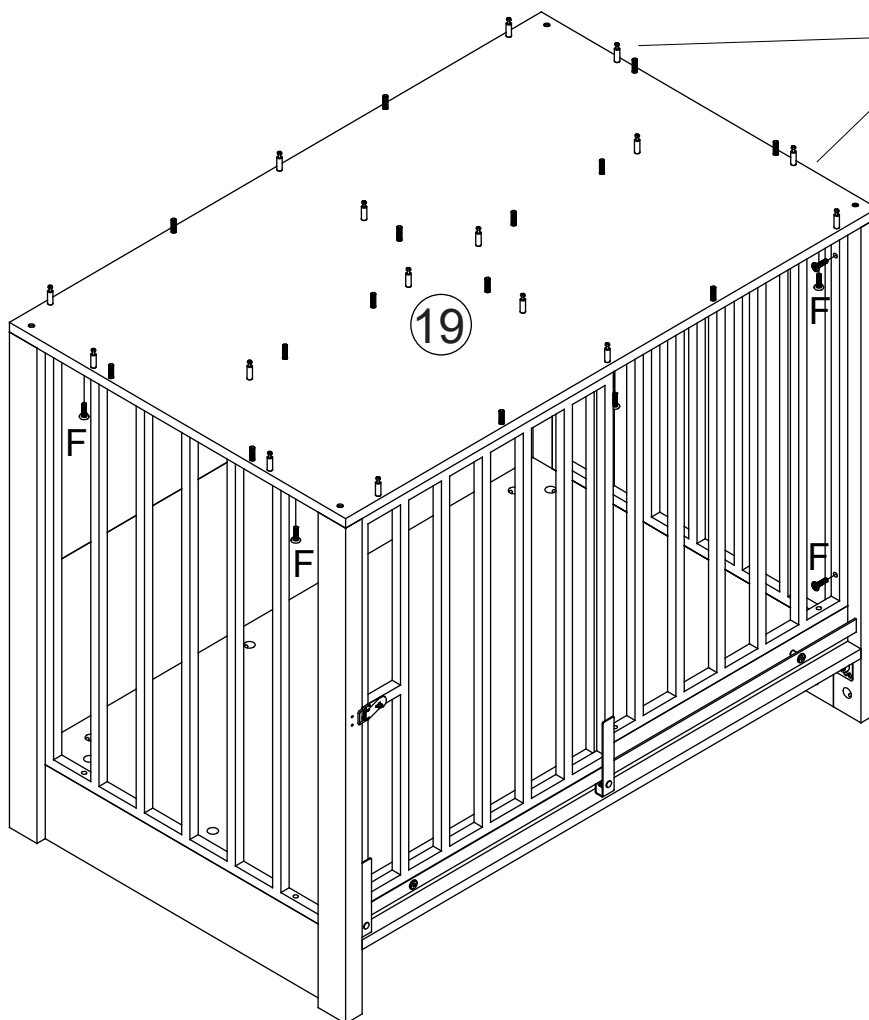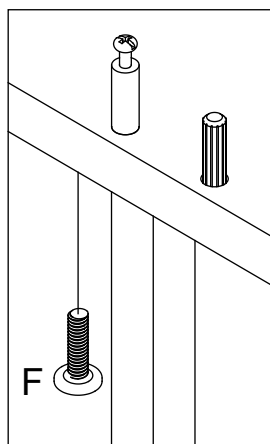


Bx5




Fx8



16

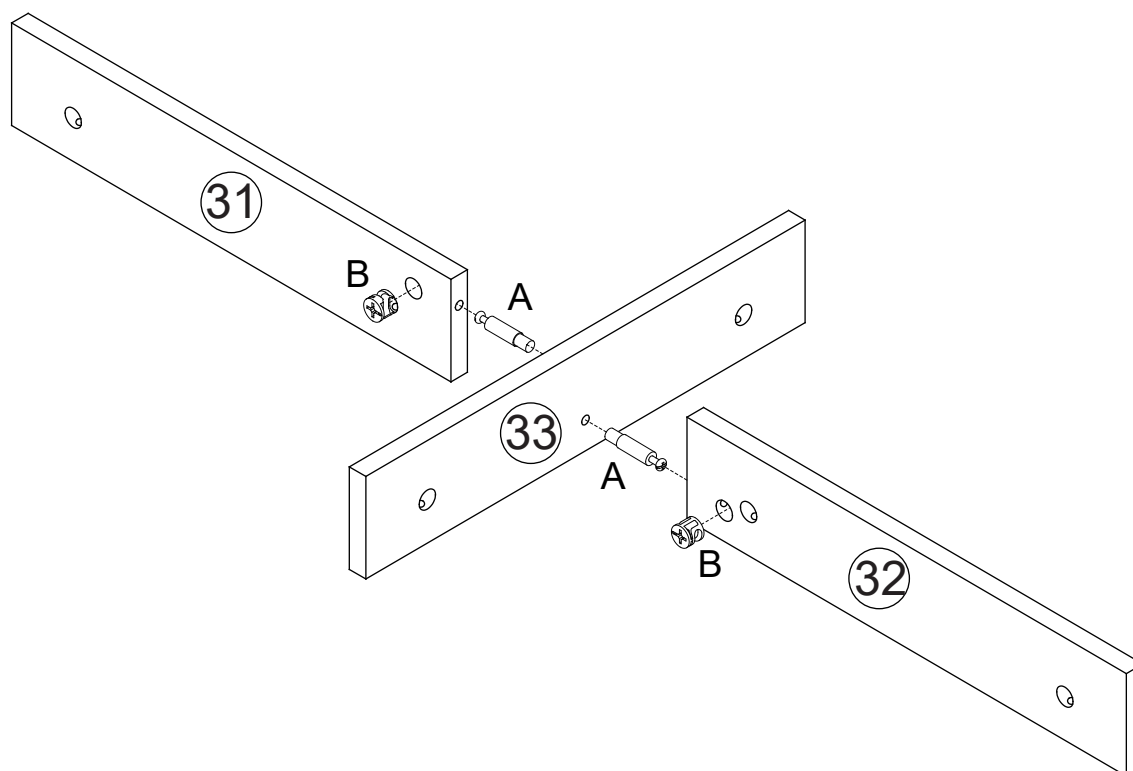


Ax2



Bx2




17

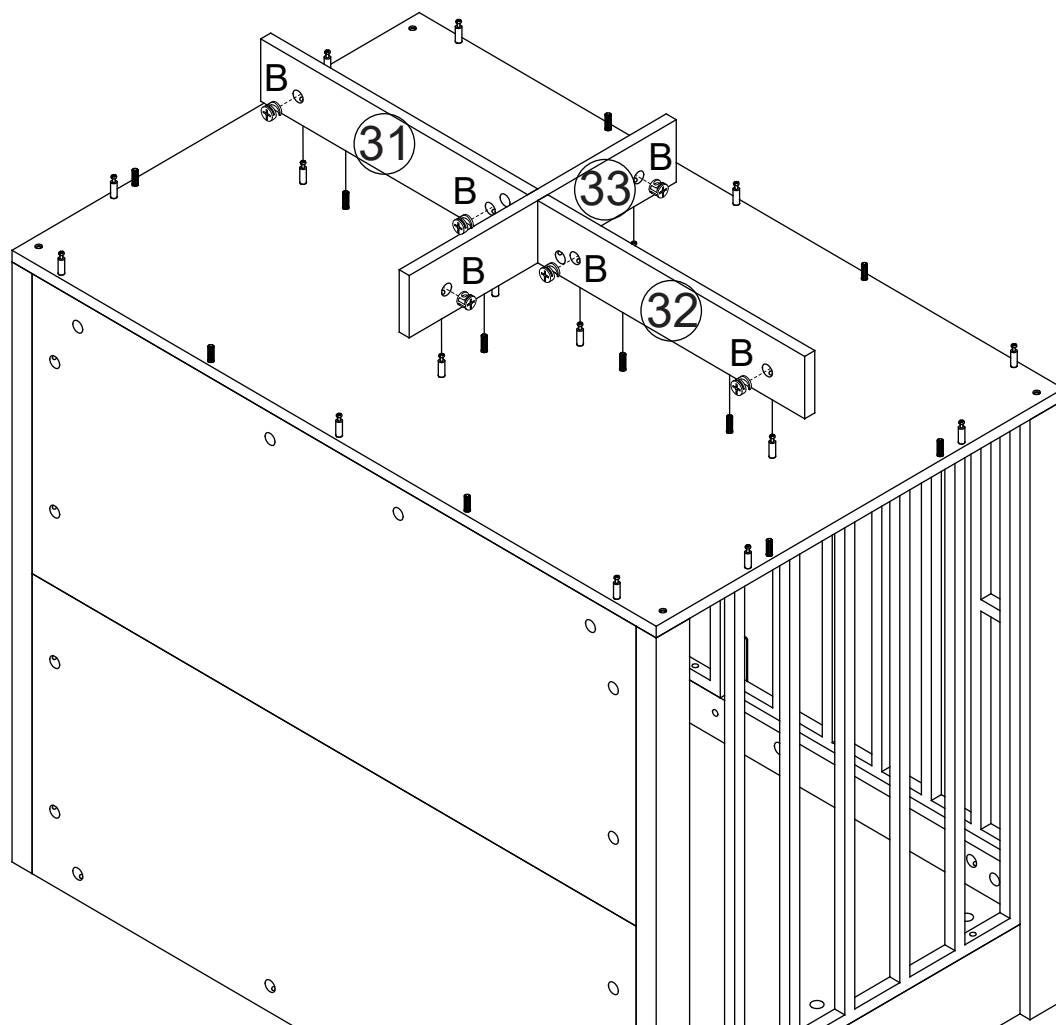


Bx6



18

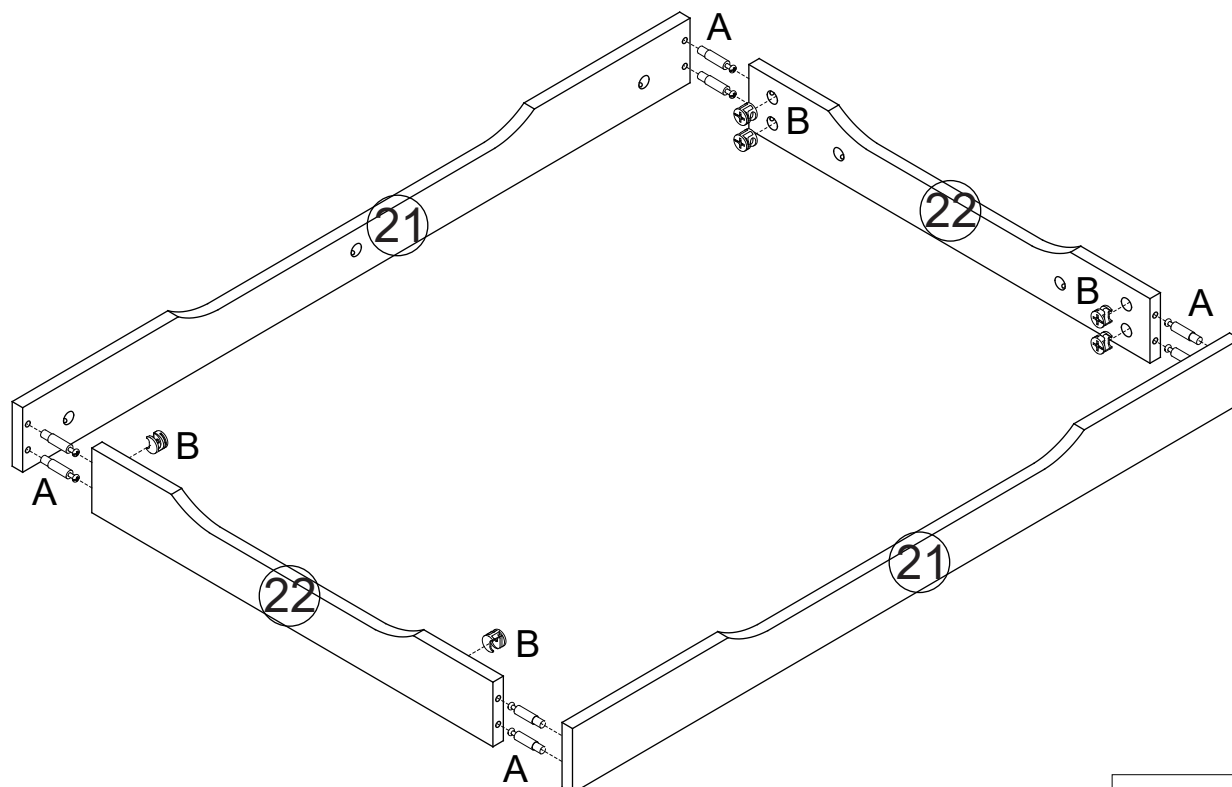


Ax8



Bx8




19

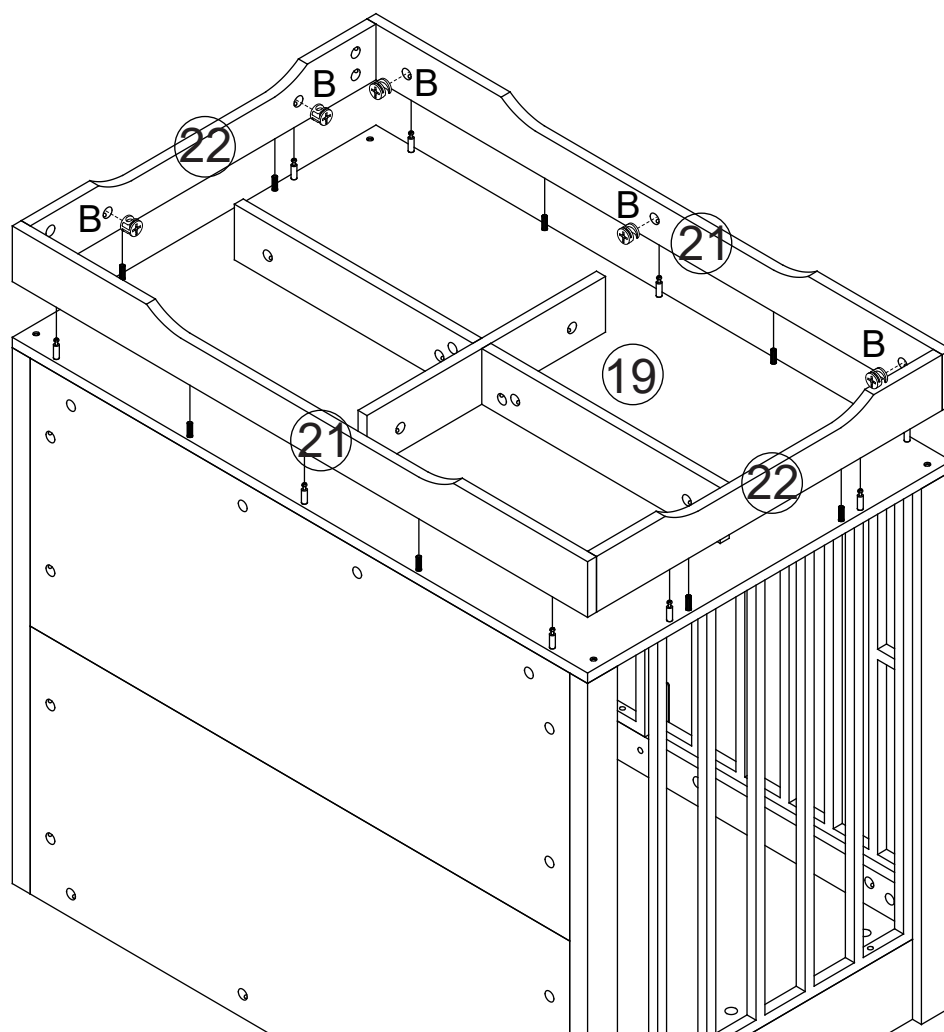

Bx10



20

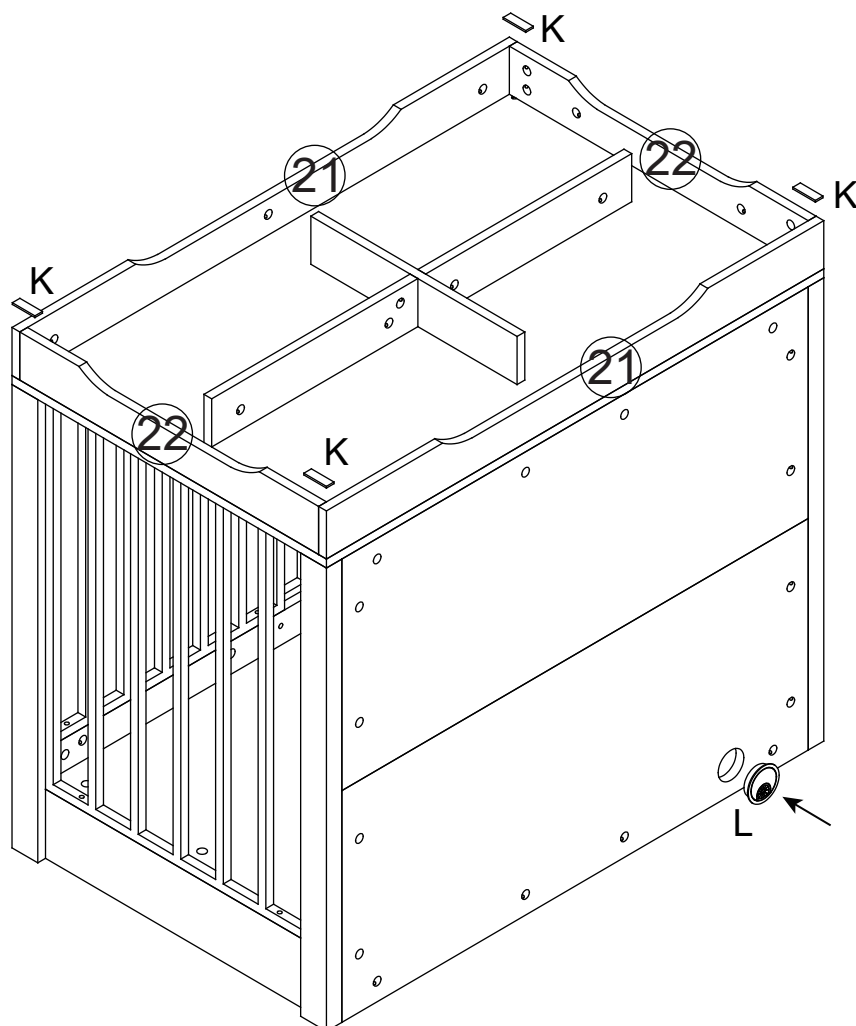


Kx4



Lx1




21

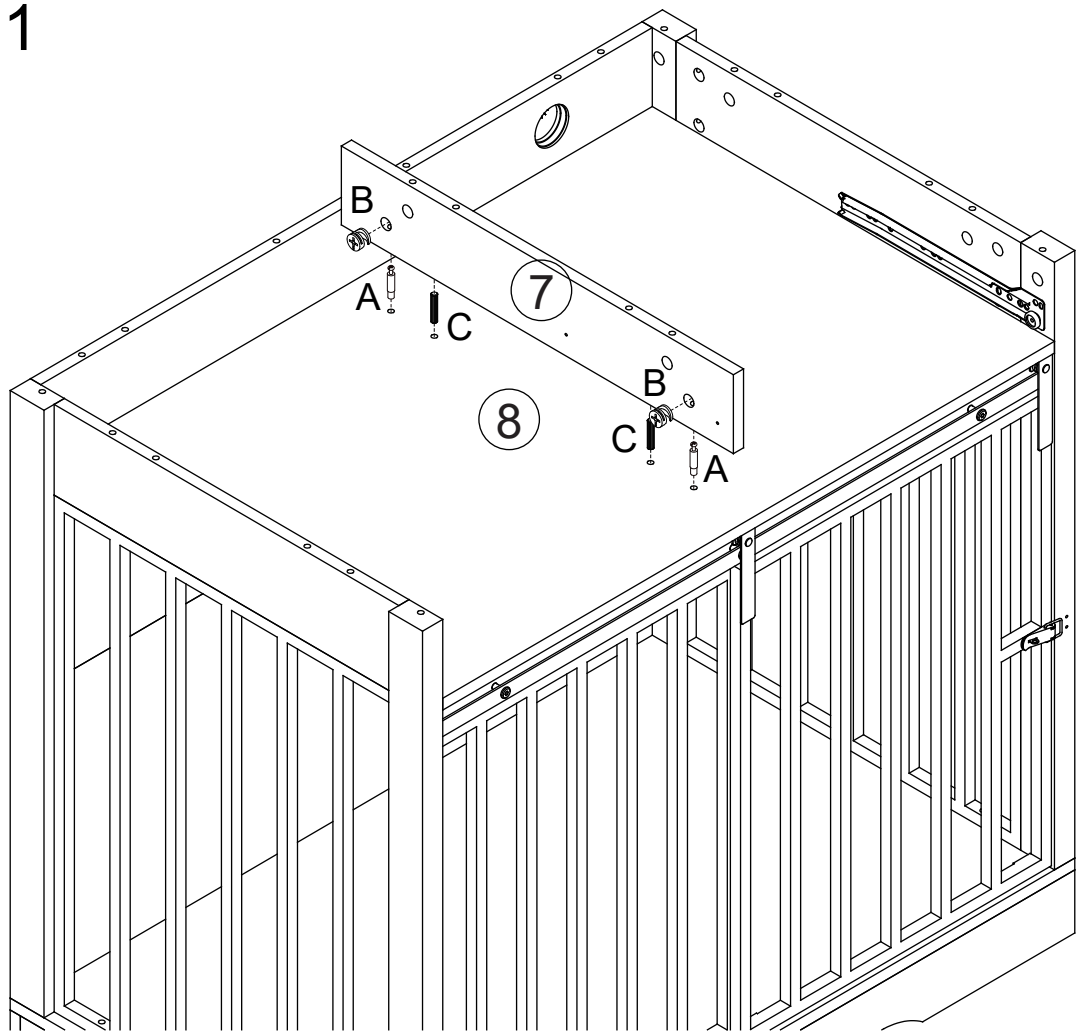


- | | |
|-----|--|
| Ax2 | |
| Bx2 | |
| Cx2 | |

22

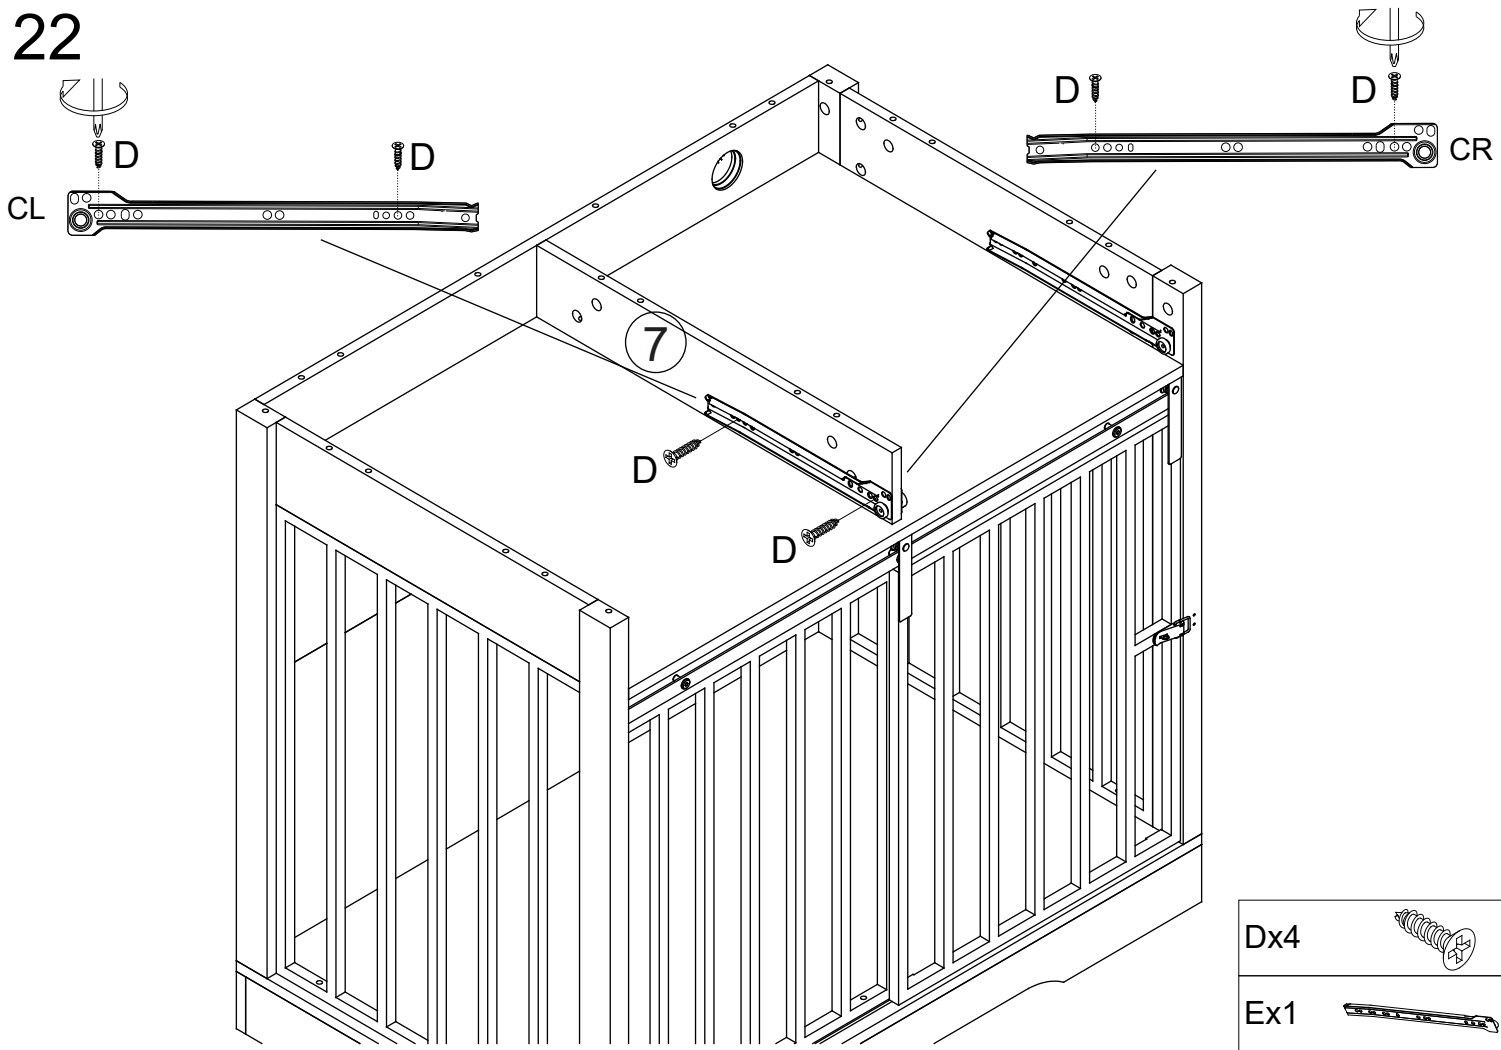


- | | |
|-----|--|
| Dx4 | |
| Ex1 | |


23

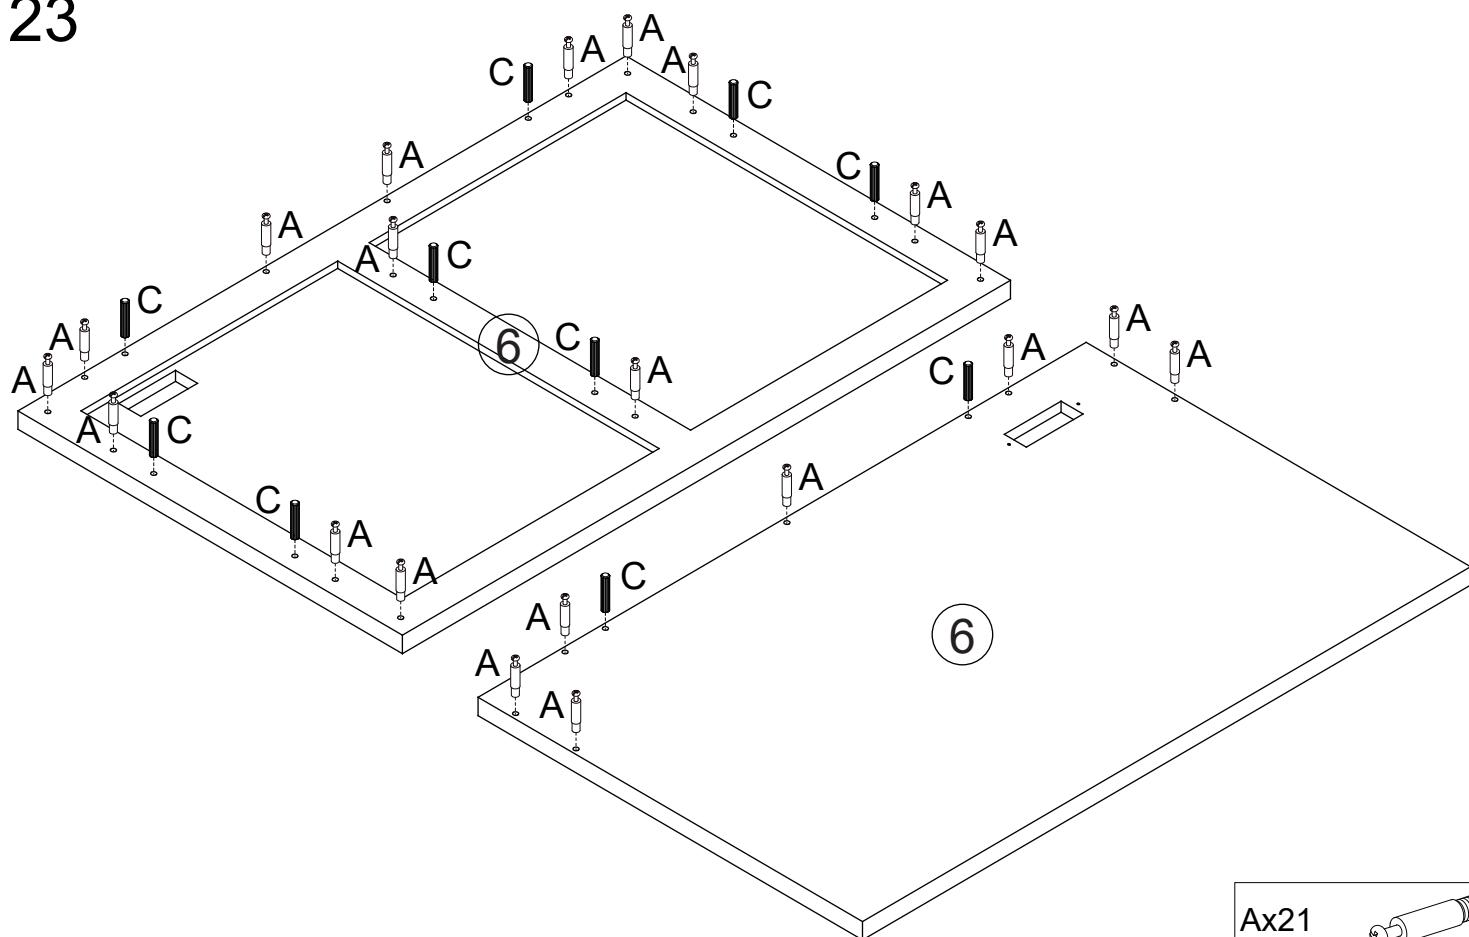


Ax21



Cx10




24

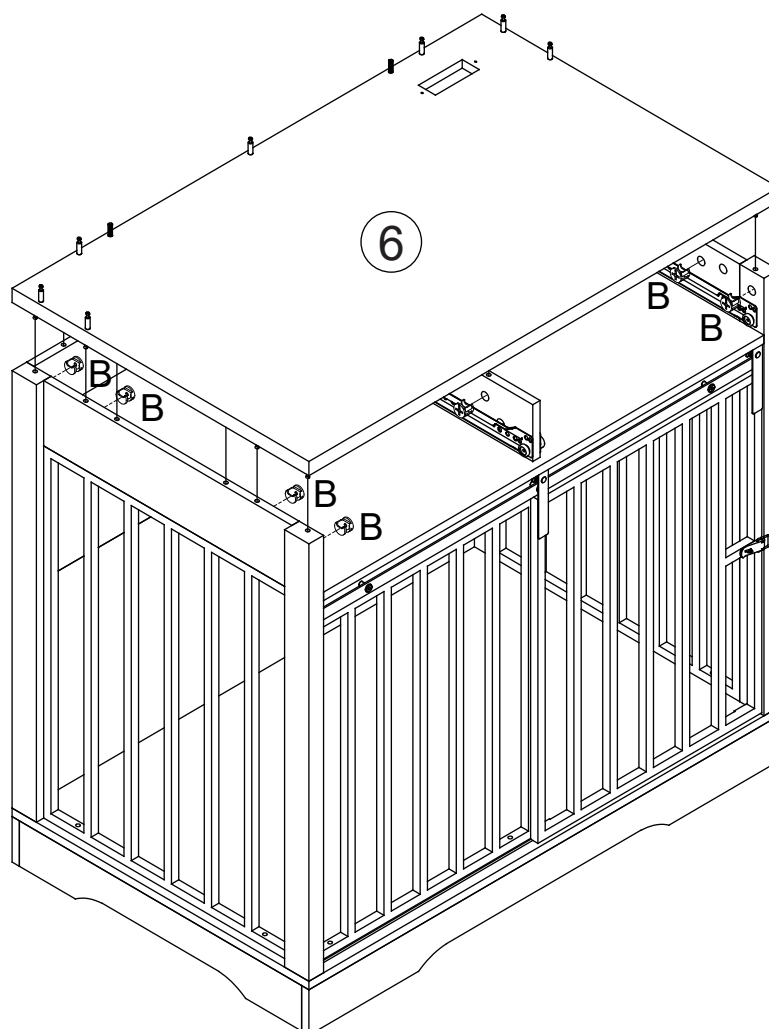


Bx14




25

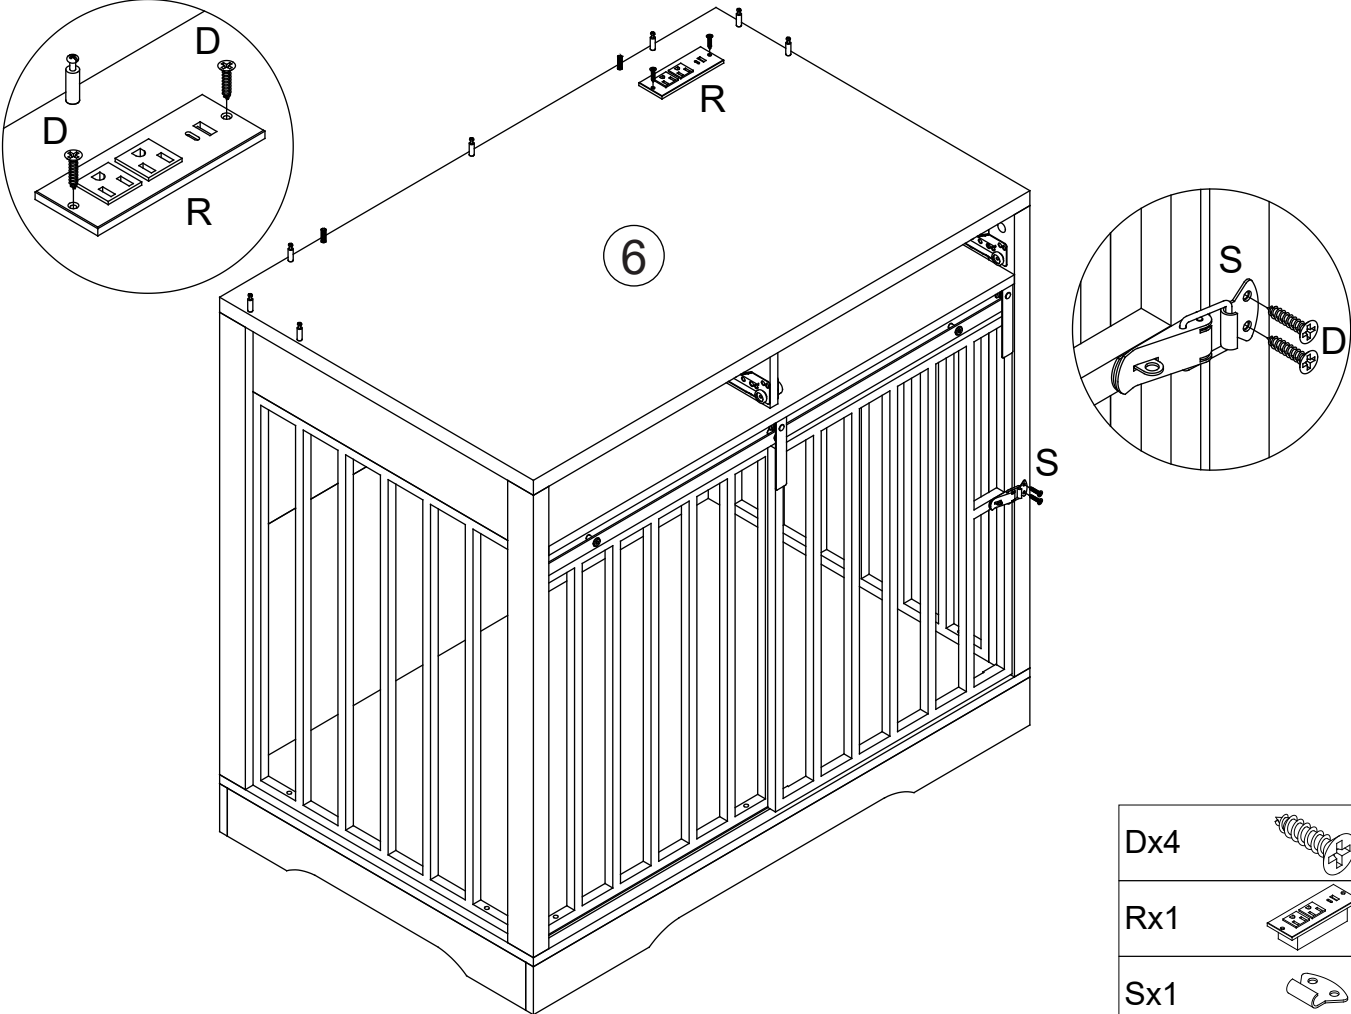


26

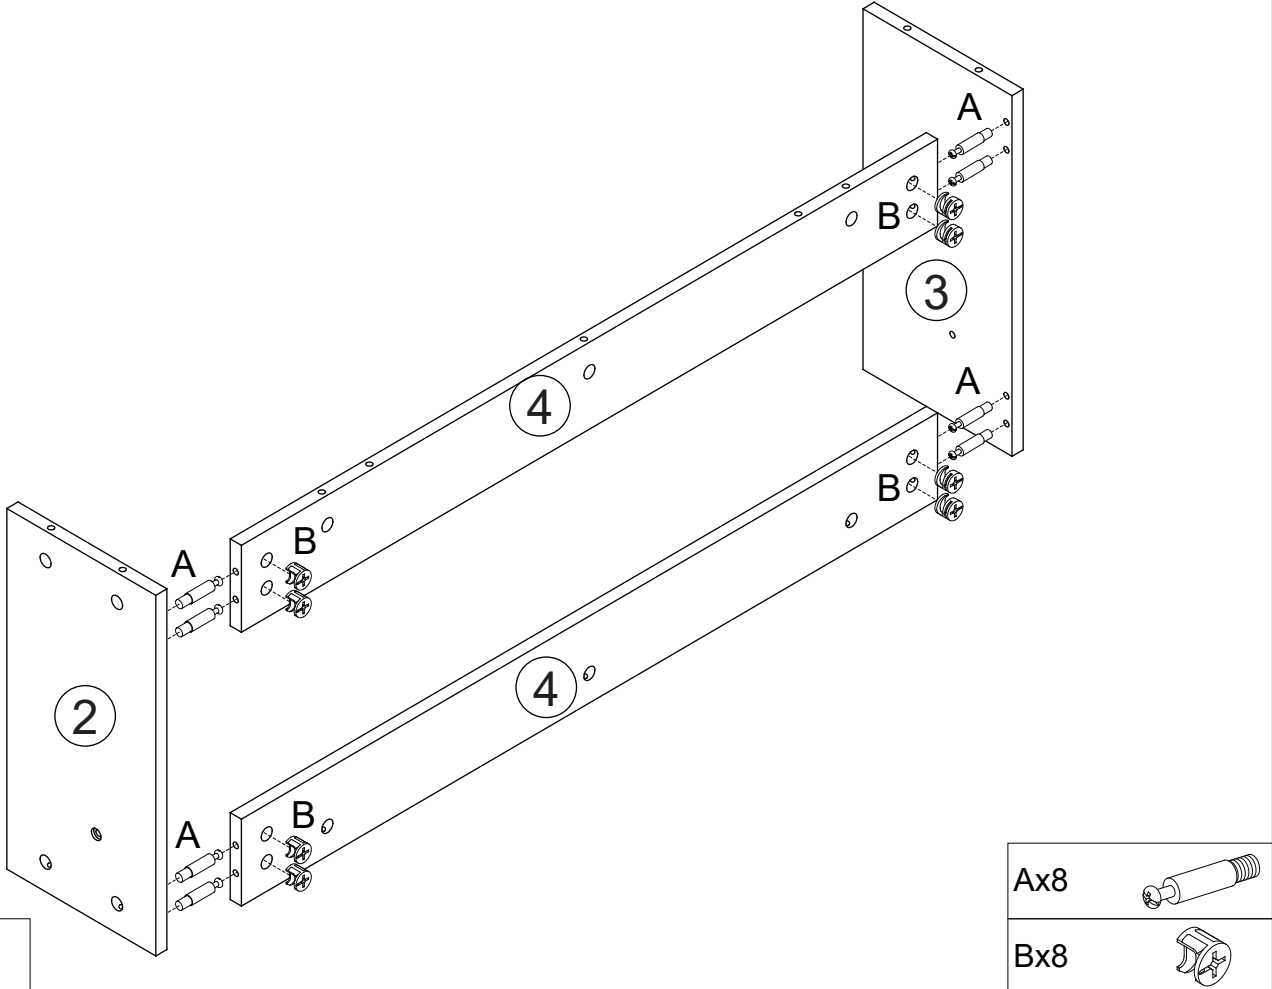


27

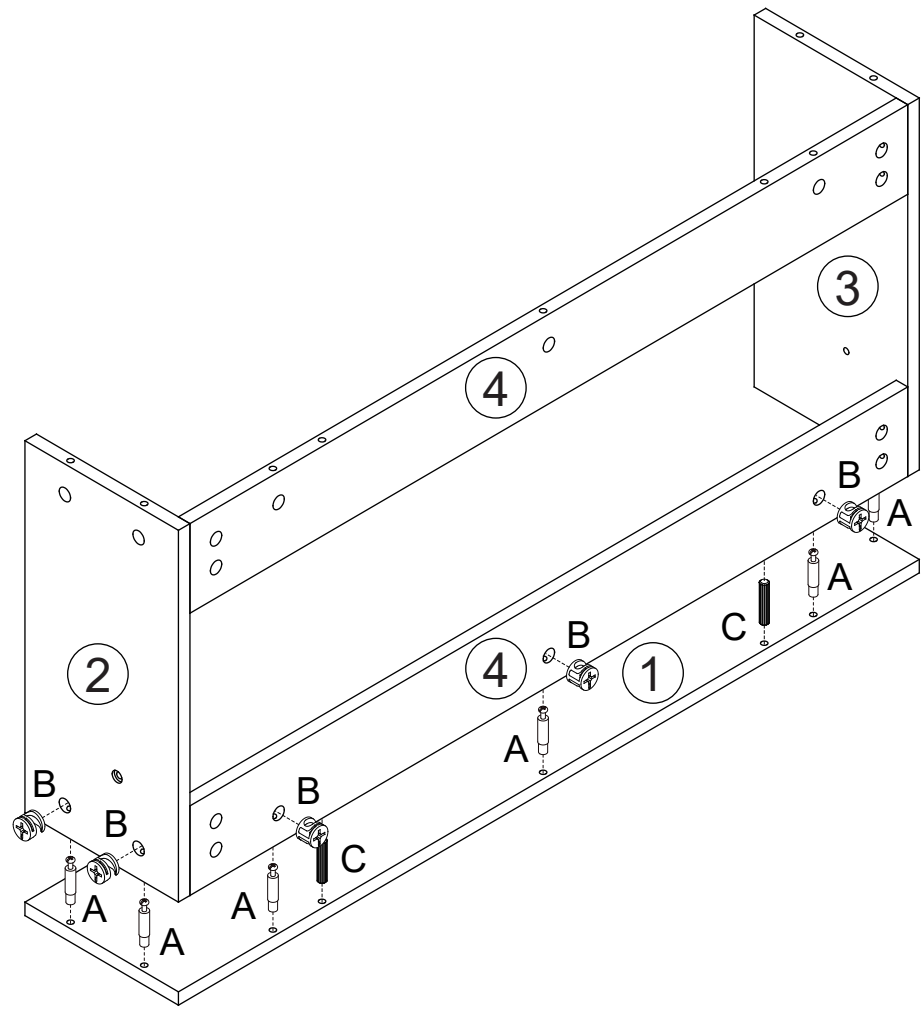

28

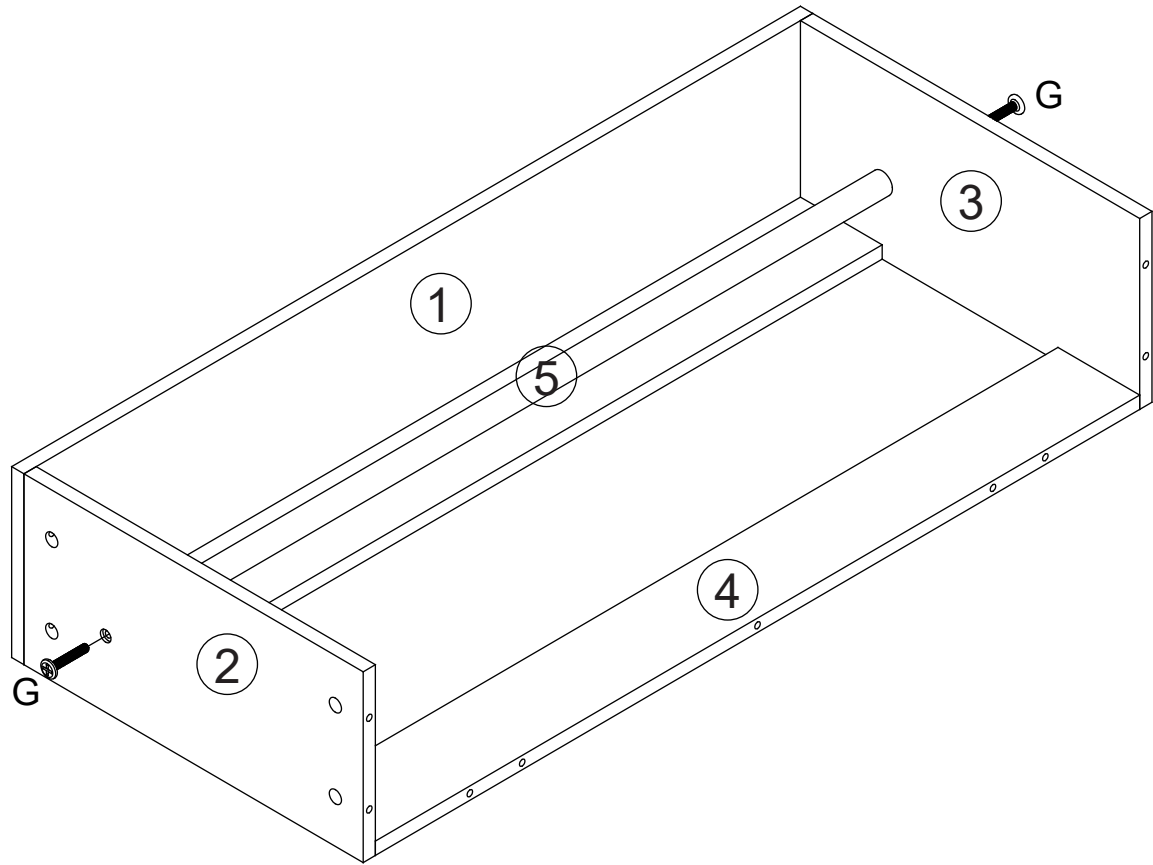



29

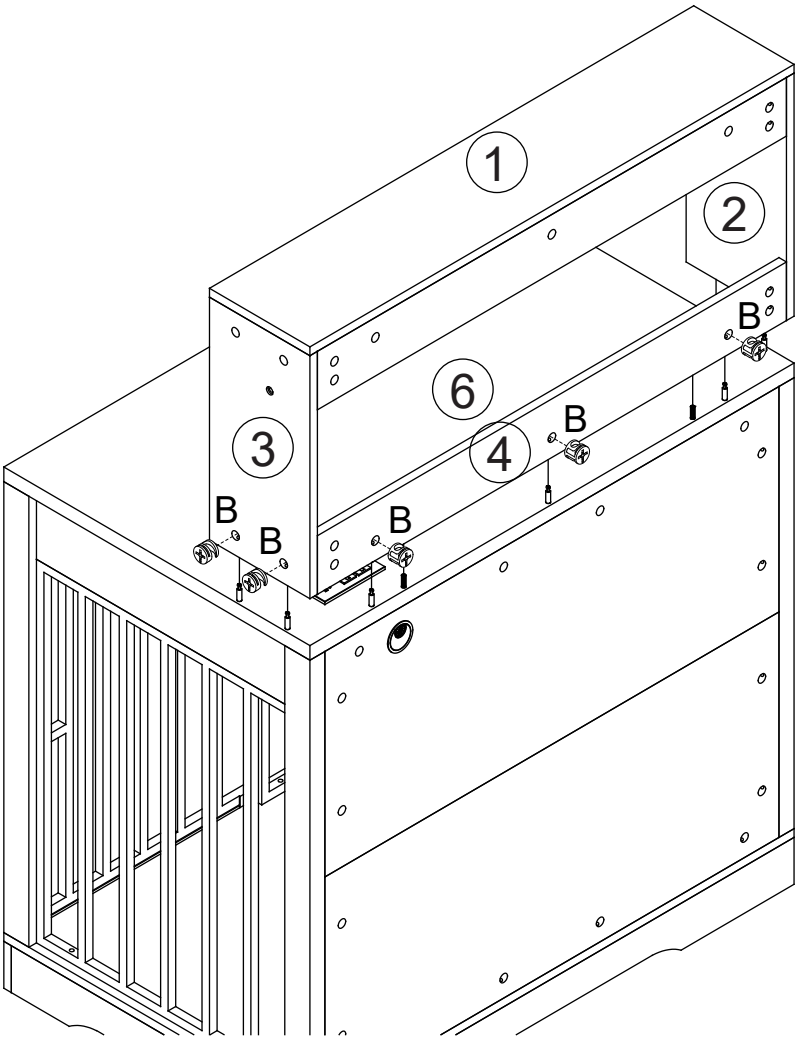


Bx7




30

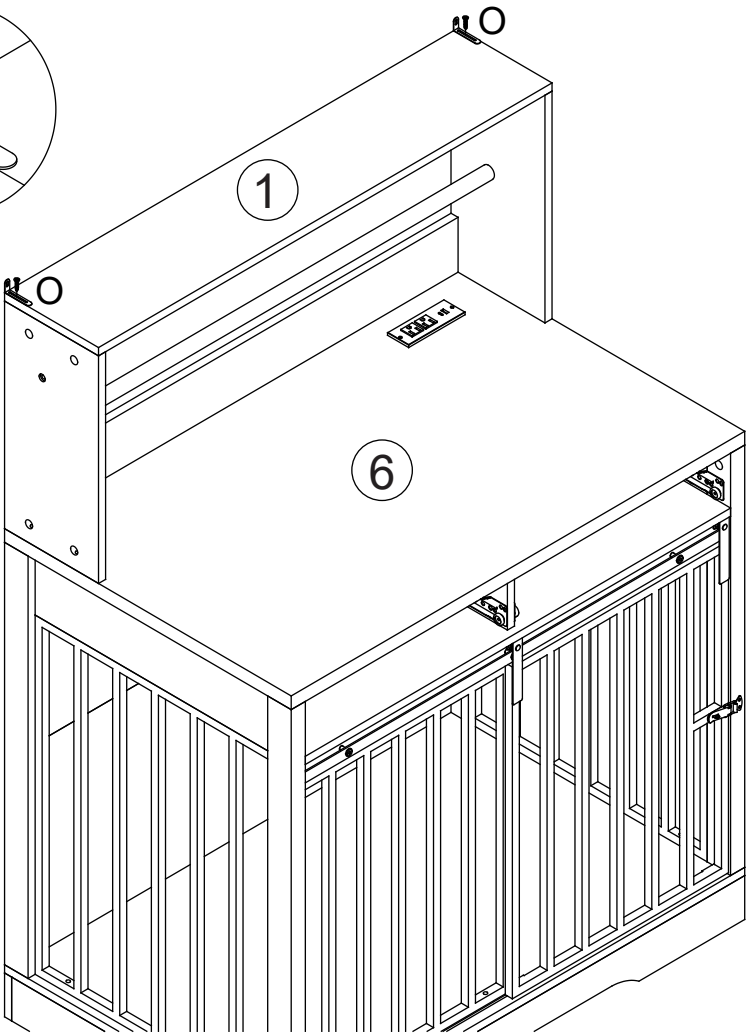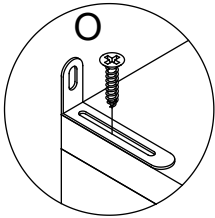


Ox2




31

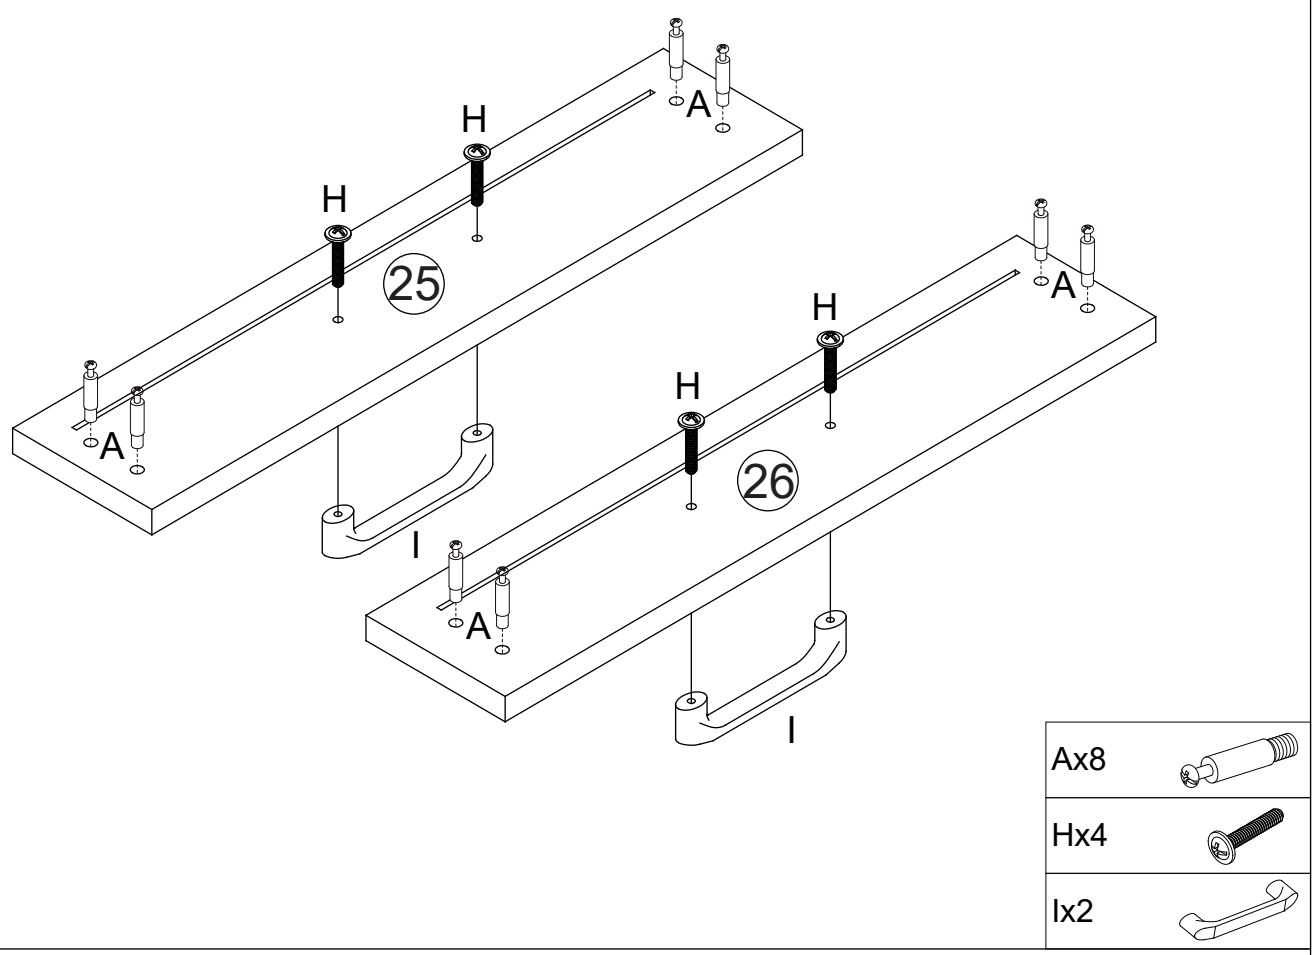

32

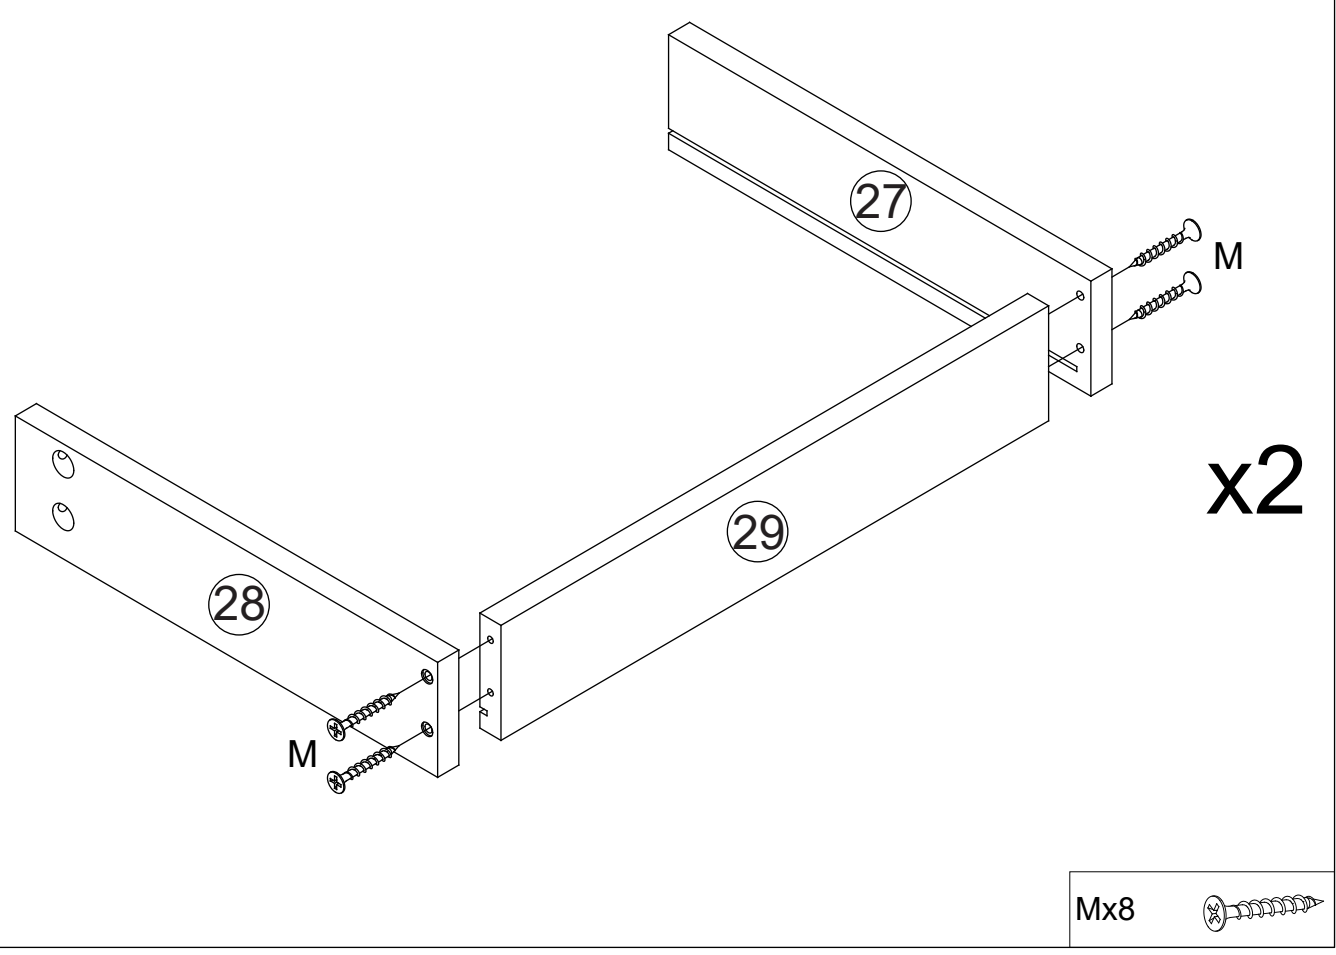


33

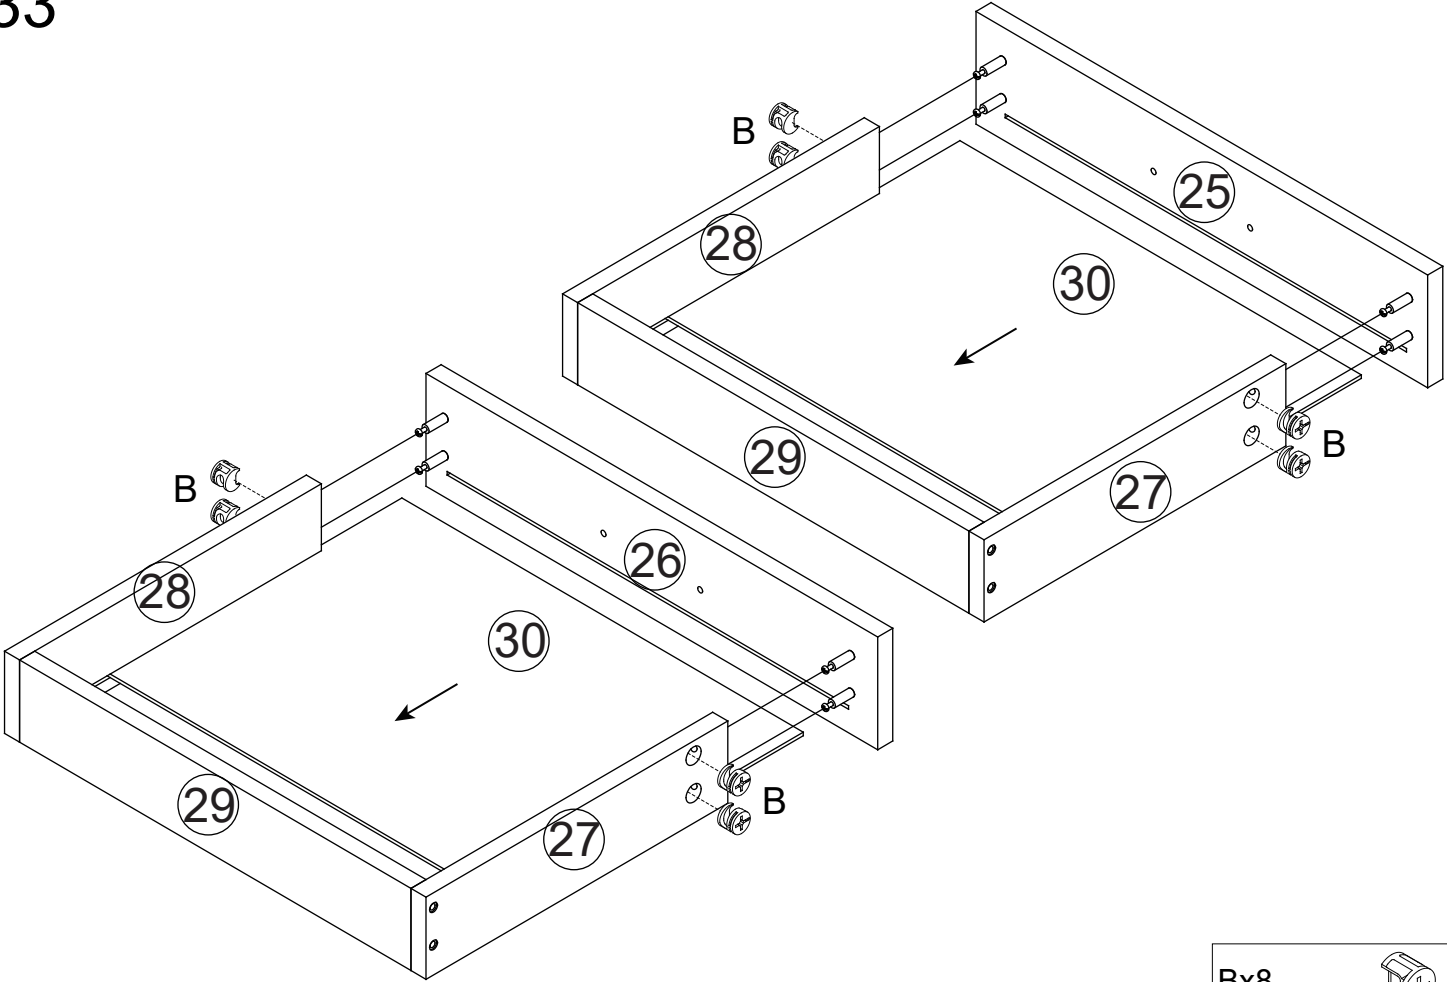

Bx8



34

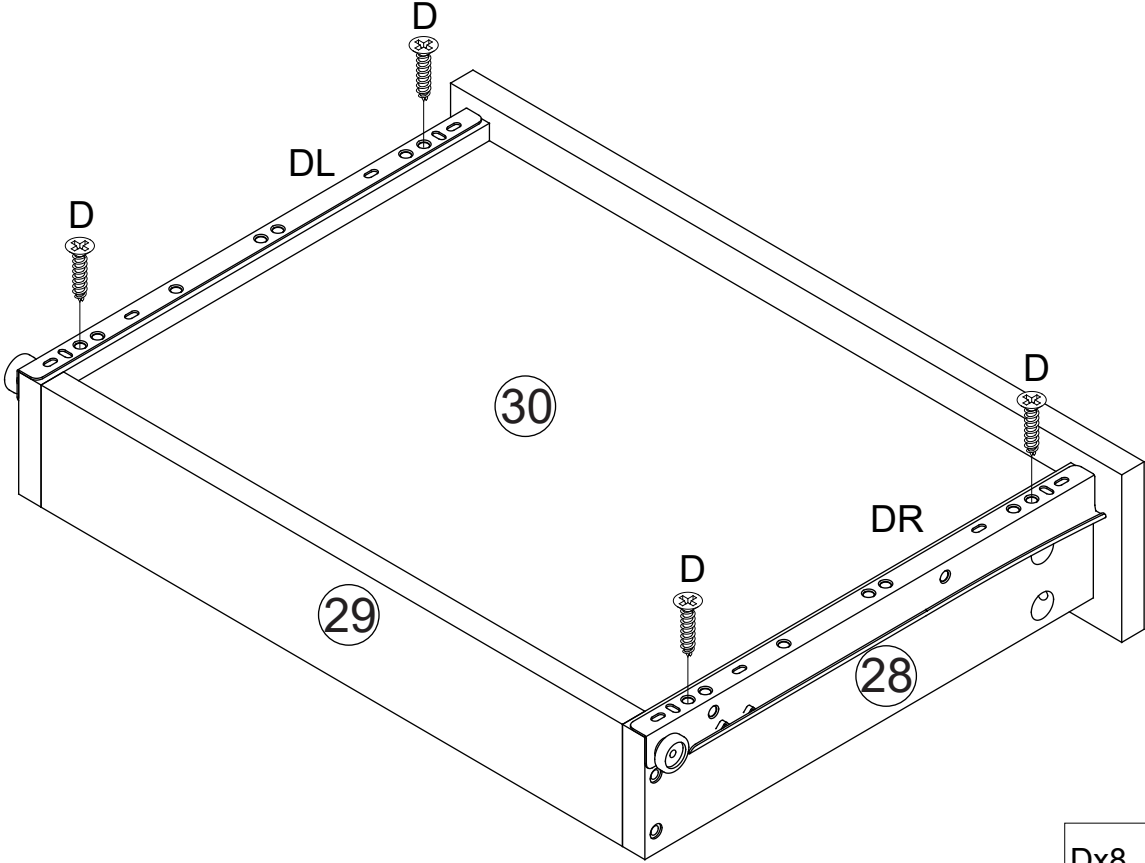

x2






Dx8



Ex2



35

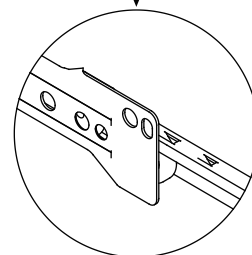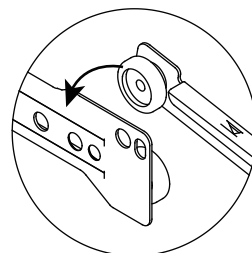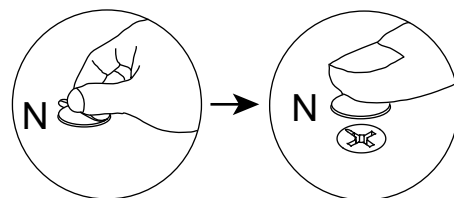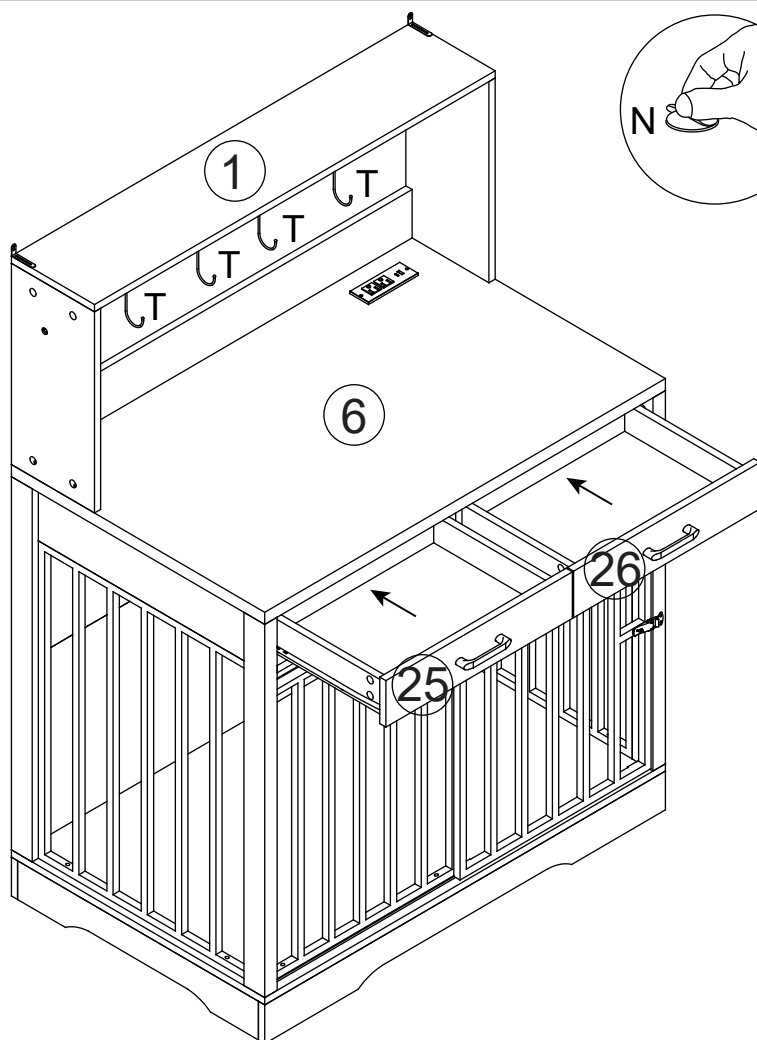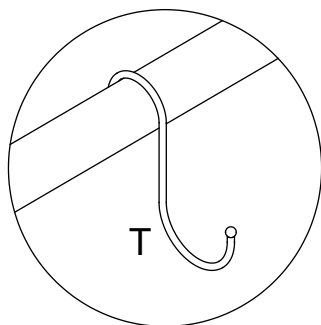





Tx4



Nx108



36

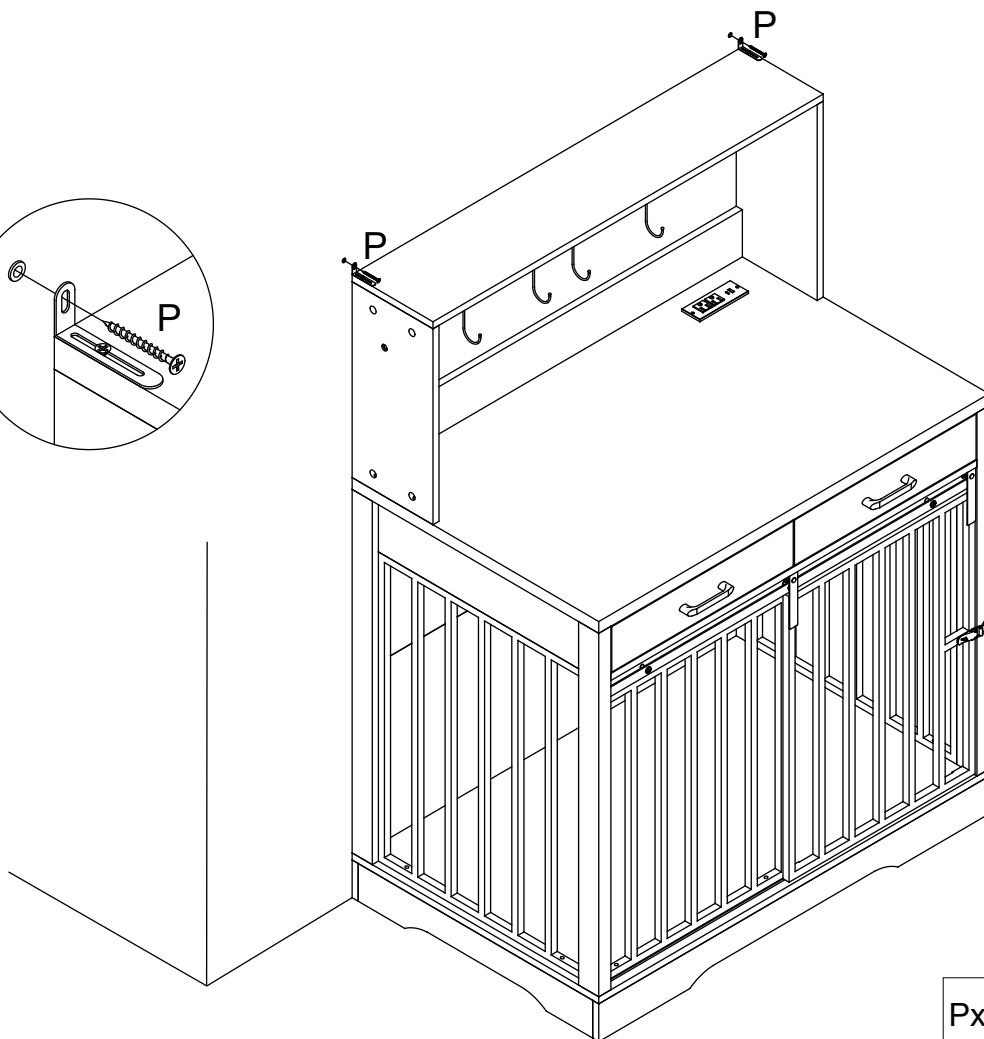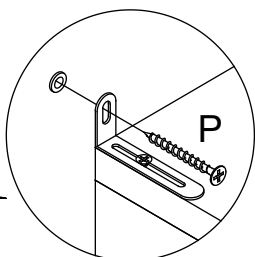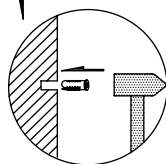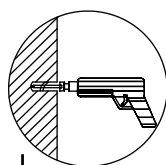

Px2

