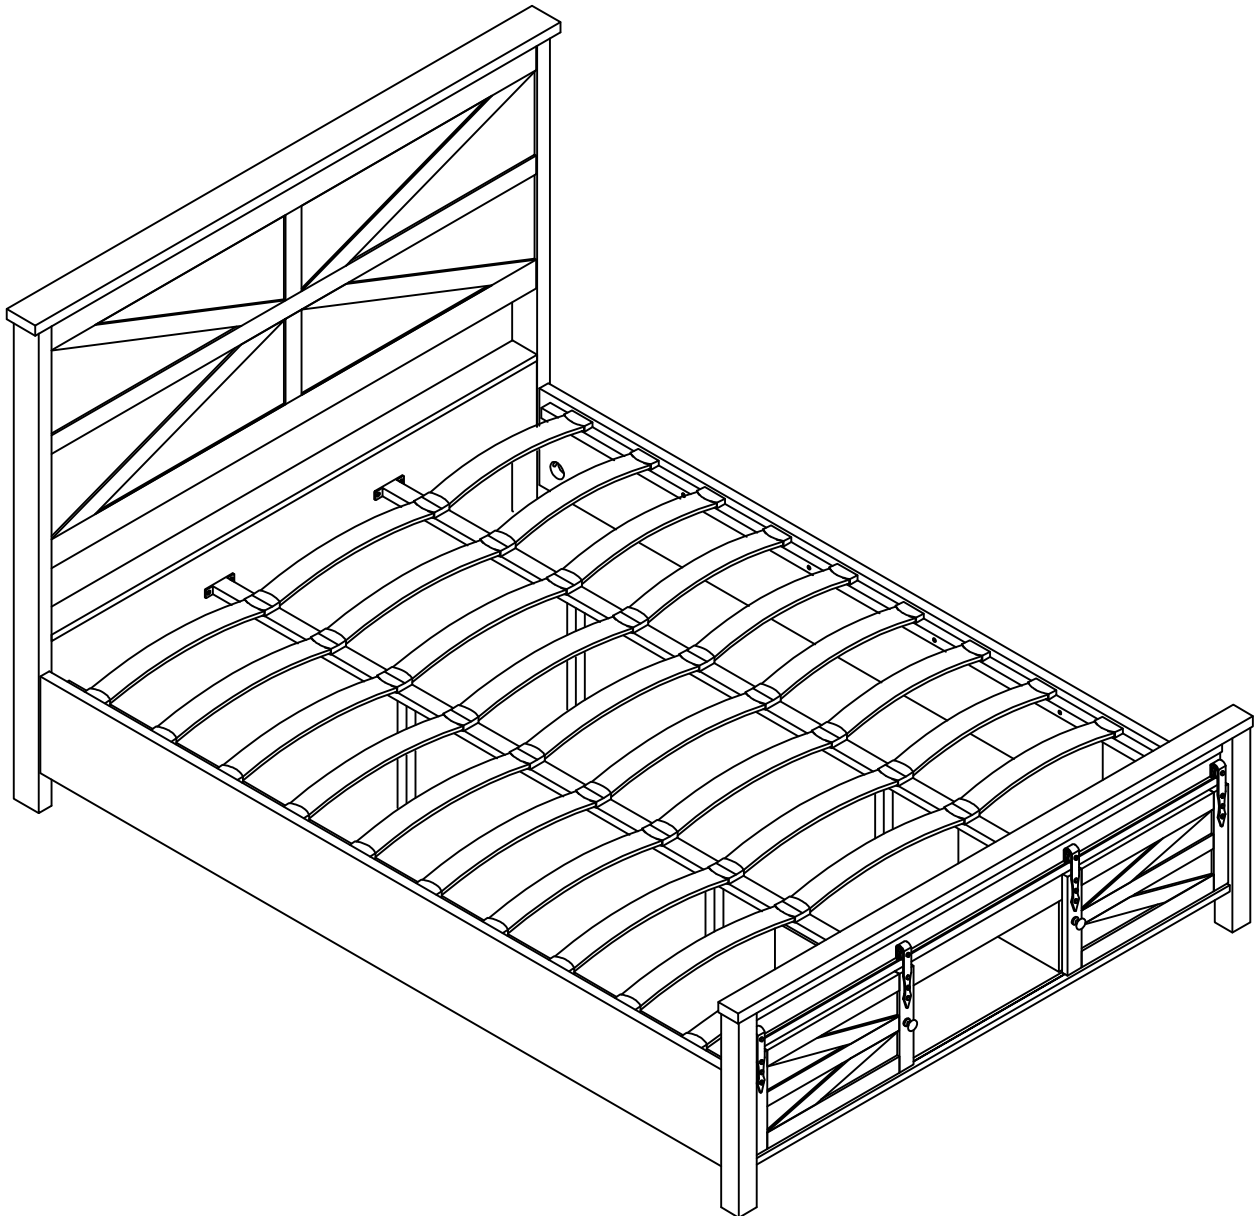


Item # : LM023-BD80

Assembly Instructions



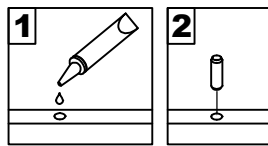
Customer Service E-mail Address: LINGMU1703583851@163.com

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now

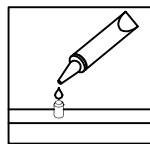
Revised 21/08/2023

General Assembly Guidelines

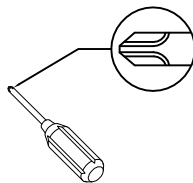
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.



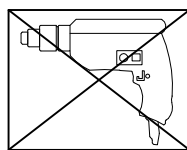
In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.



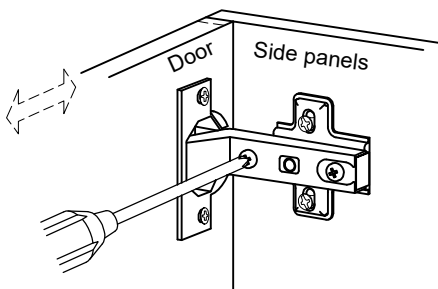
- VI. A Phillips head screwdriver is required for the assembly of this product .



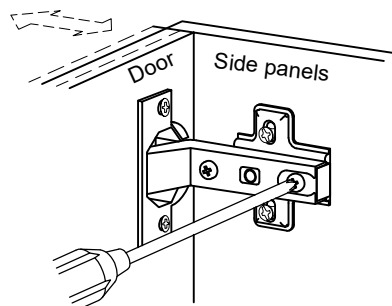
- VII. Power tools should not be used to assemble this product .



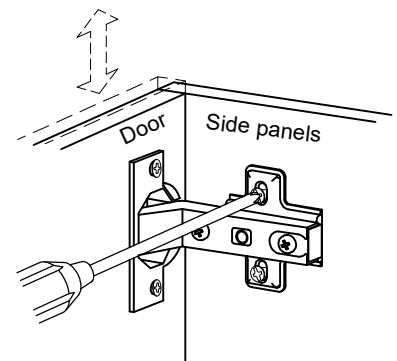
- VIII. Concealed hinges are three-way adjustable.



Horizontal
by screw adjustment

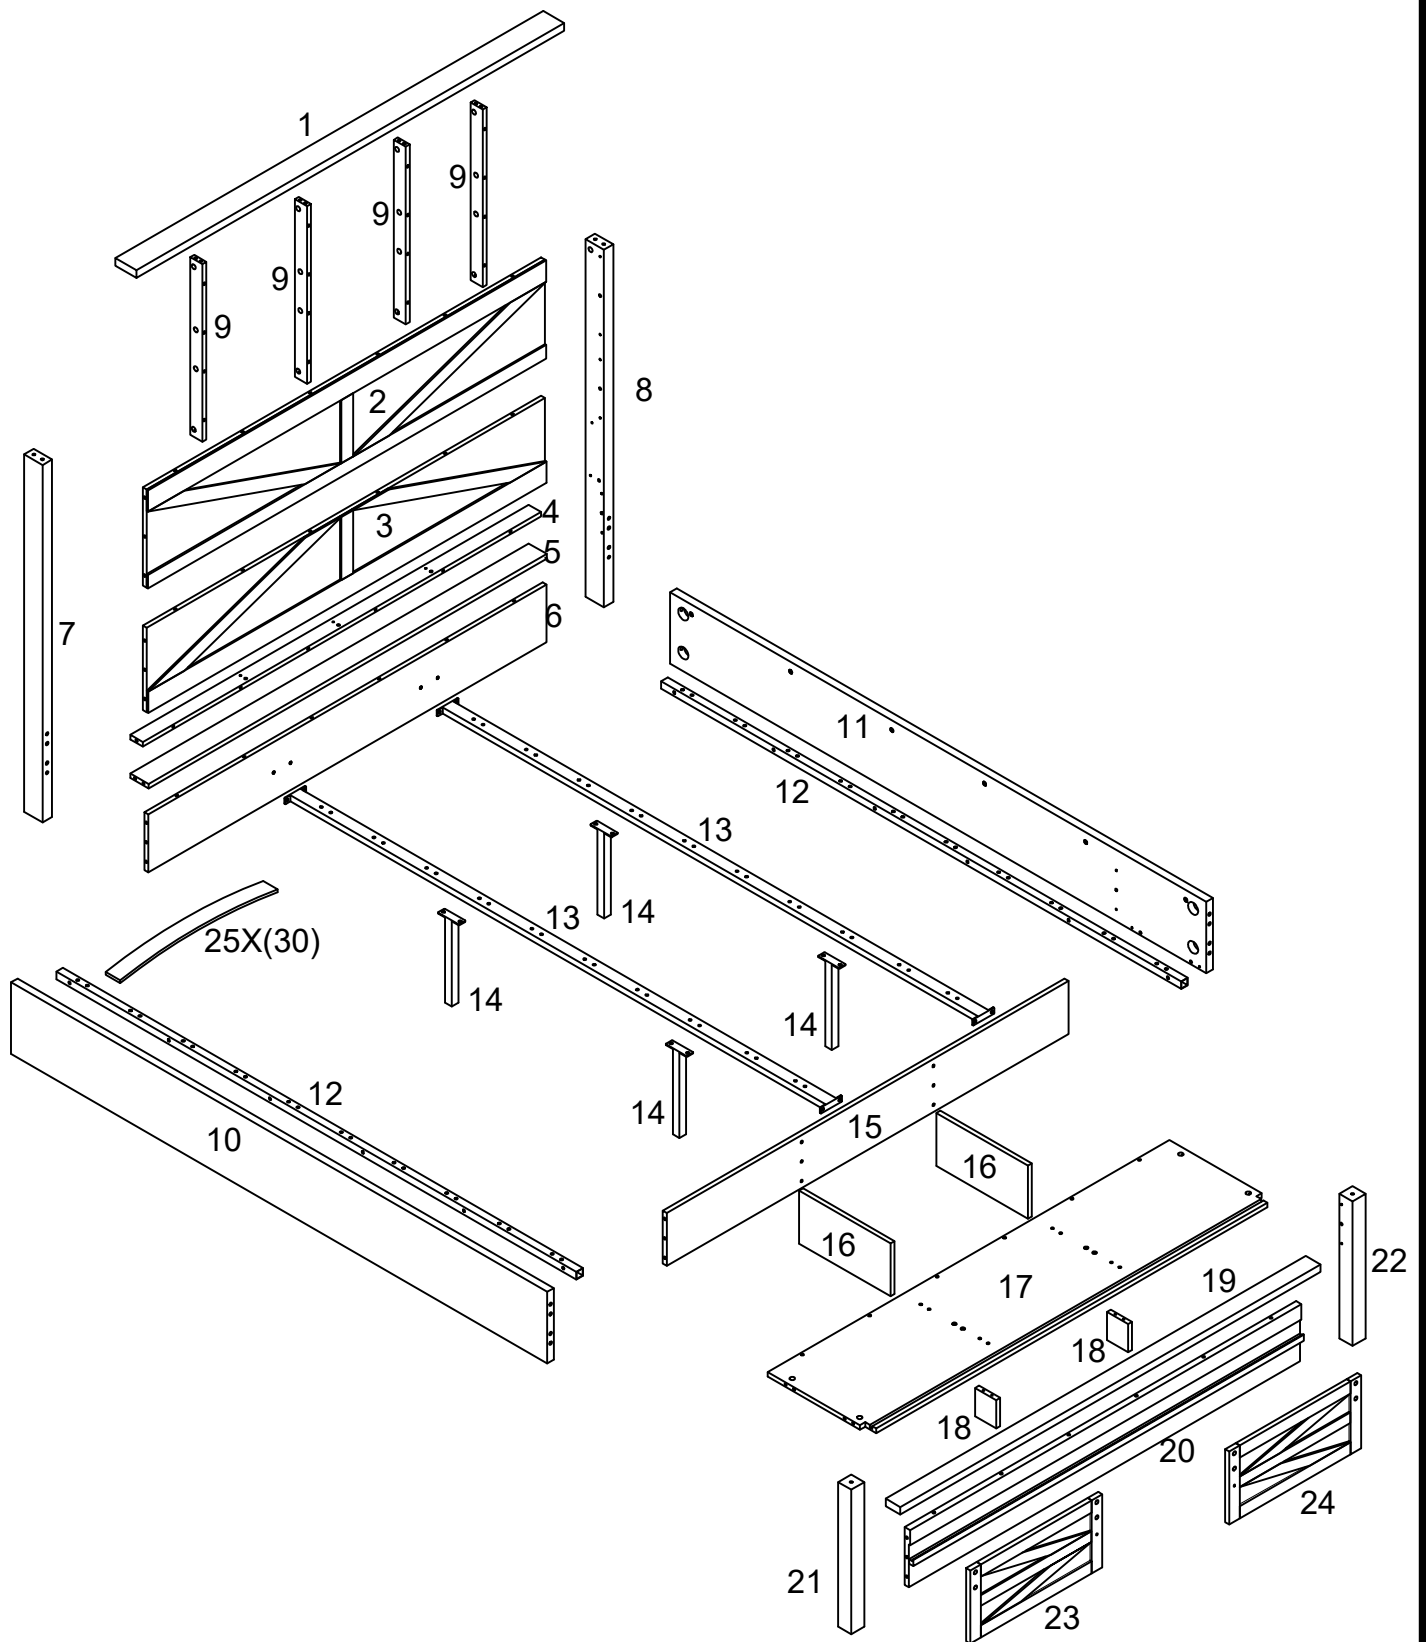


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment



























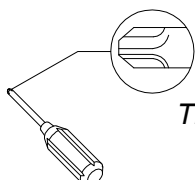
Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List



Hardware List

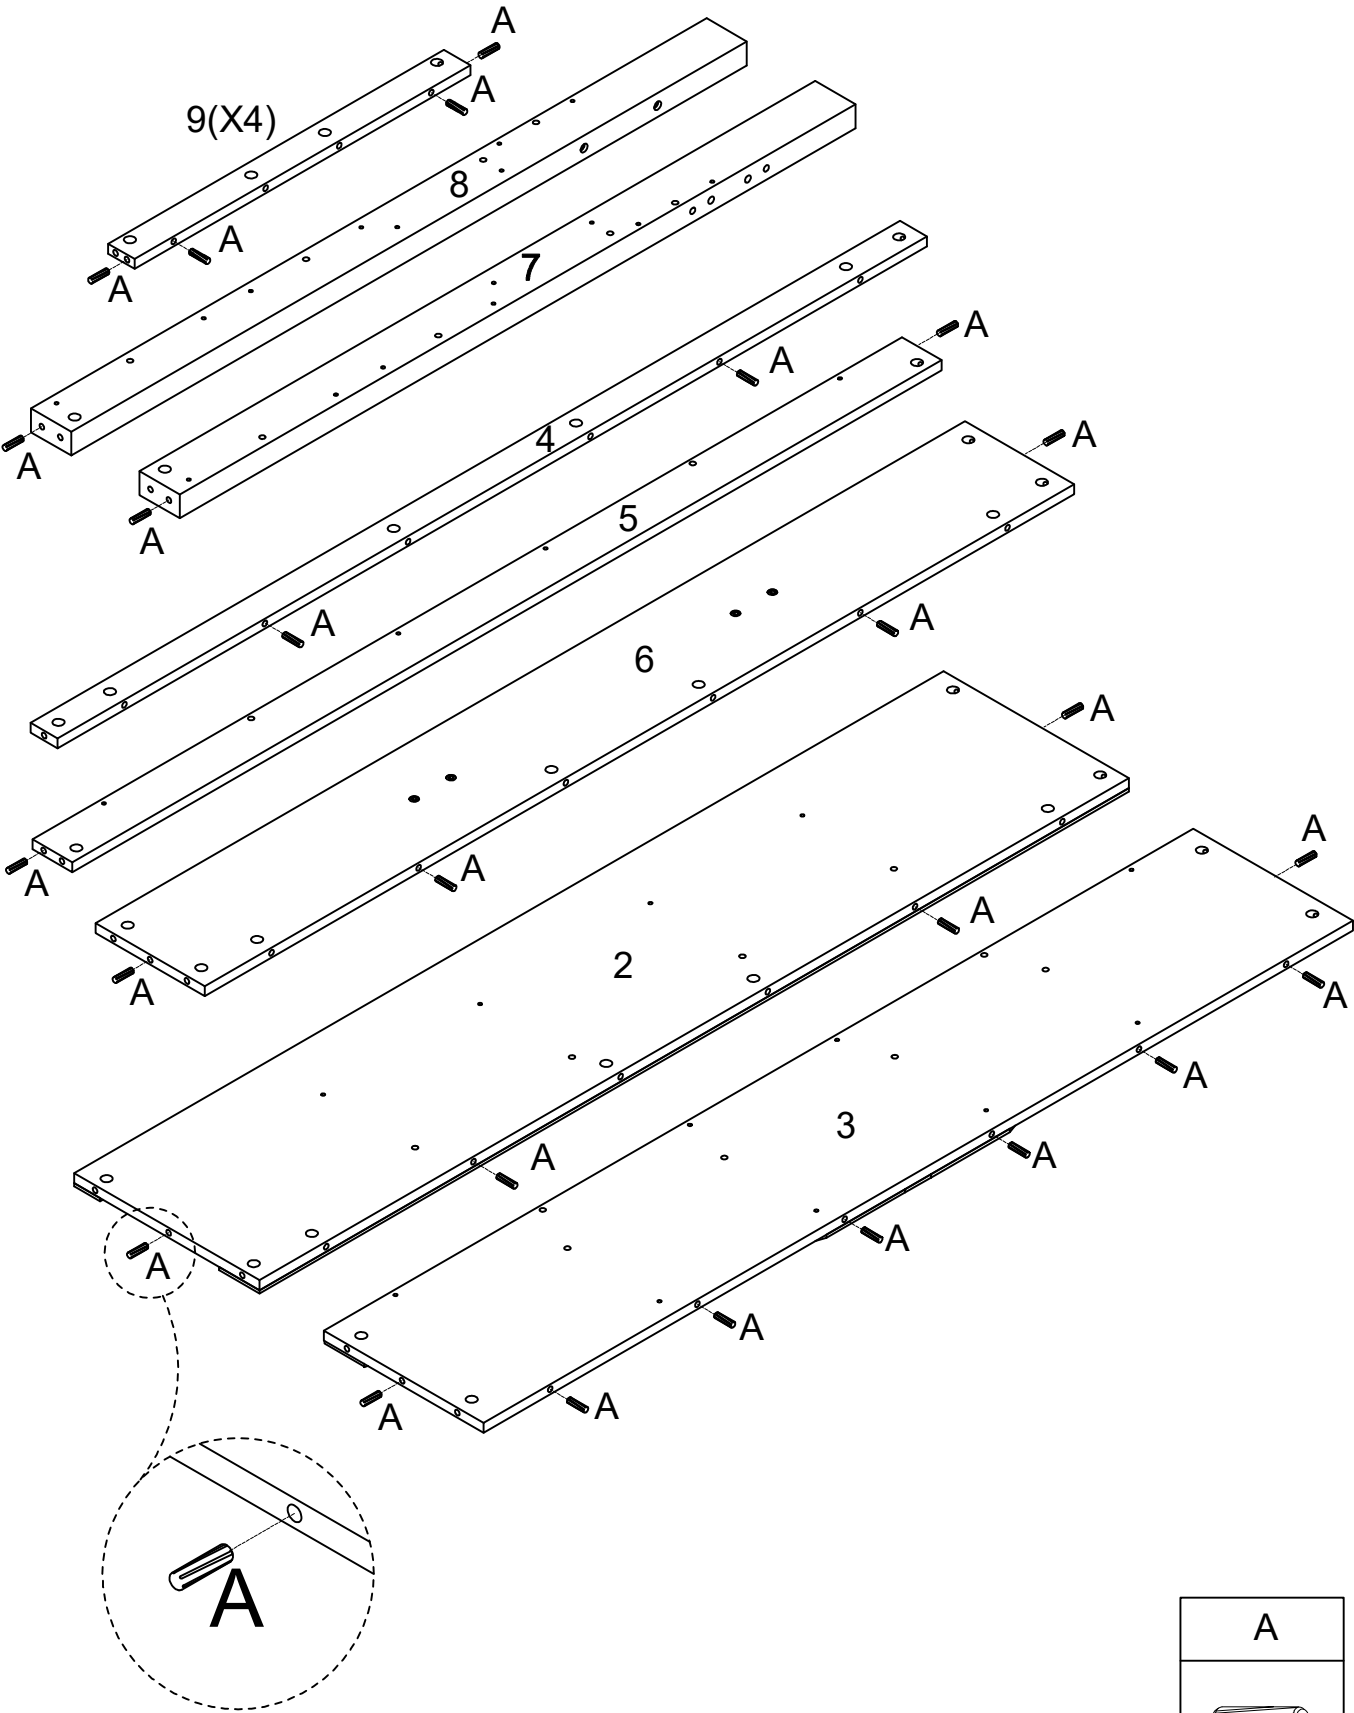
A		Ø8x30mm	Wooden dowel	58 pcs
B		Ø10x40mm	Wooden dowel	8 pcs
C		Ø6x35mm	Cam lock	62 pcs
D		Ø15x11mm	Cam lock	62 pcs
E		Ø30mm	Sticker	62 pcs
F		Ø6x50mm	Bolt	16 pcs
G		M 4	Hex Key	1 pc
H		M6*12mm	Screw	16 pcs
I		M6*40mm	Screw	12 pcs
J		M 5	Hex Key	1 pc
K		M8*120mm	Screw	4 pcs
L		Ø5/16in	Nuts	8 pcs
M		Ø5/16in	Half-moon part	8 pcs
N		Ø5/16in	Wrench	1 pc
O		Ø8x70mm	Screw	4 pcs
P			Pulley	4 pcs
Q		Ø6x12mm	Screw	8 pcs
R			Iron Sheet	4 pcs
S		Ø4*12mm	Screw	8 pcs
T			Single head set	20 pcs
U			Double head set	20 pcs
V			Hold hands	2 pcs
W		Ø4x19mm	Screw	2 pcs
X			Small White Glue	1 pc




Philips head screwdriver required for assembly
(not included)

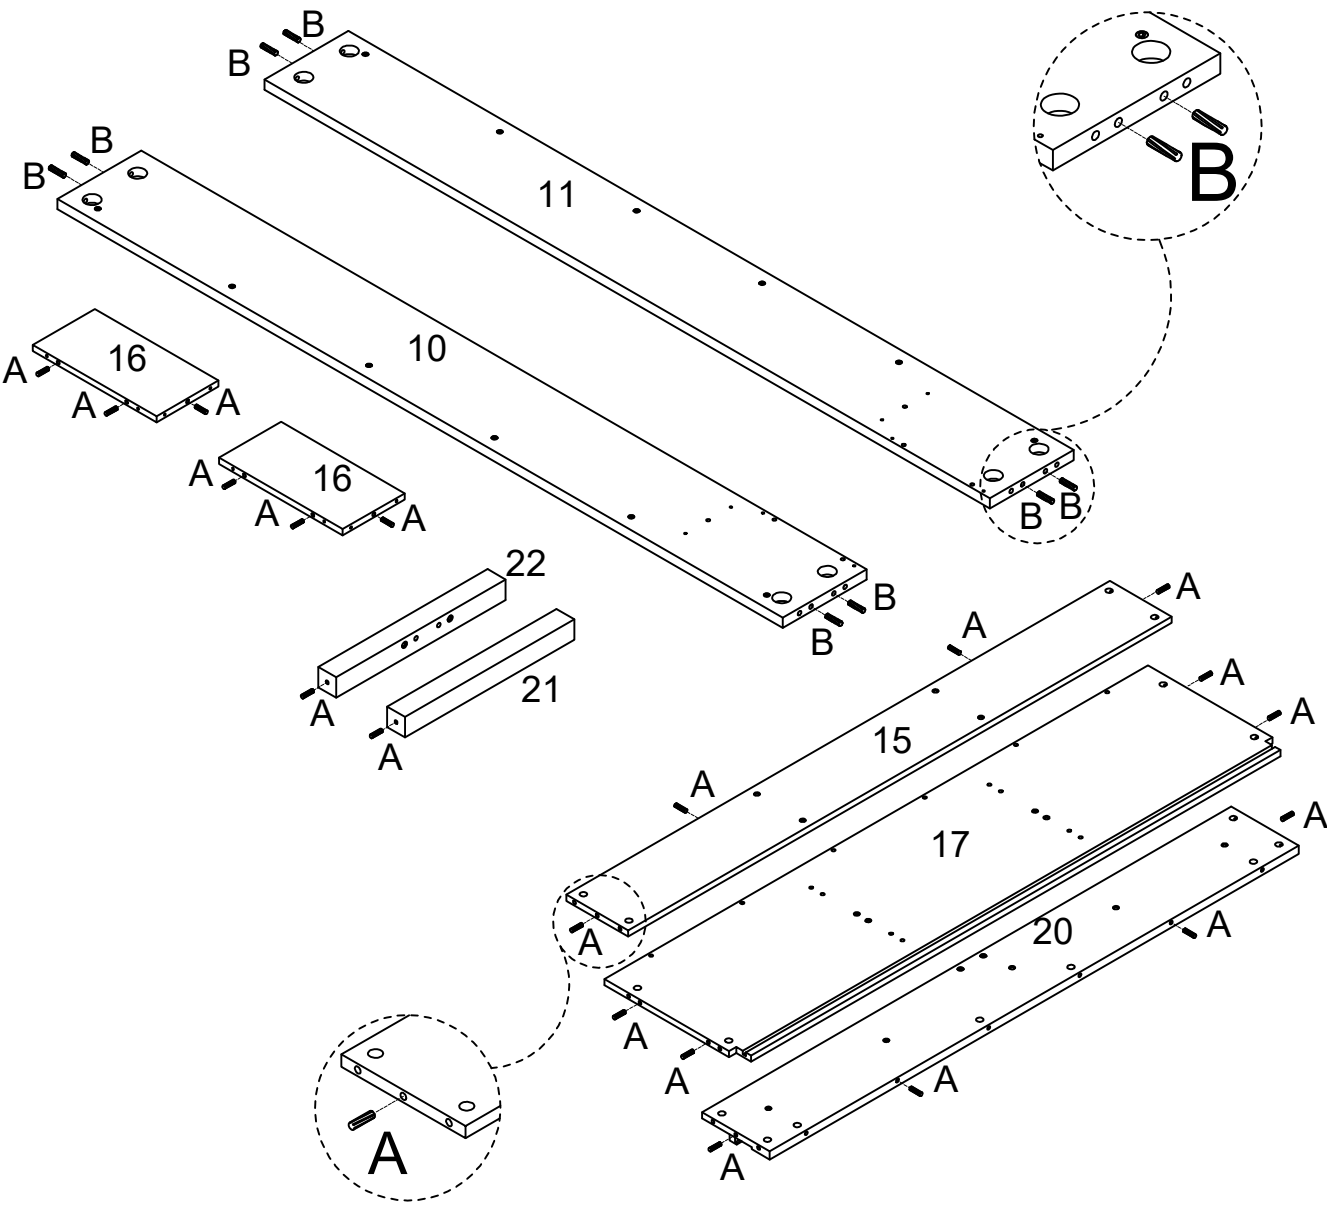
*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*



Step 1



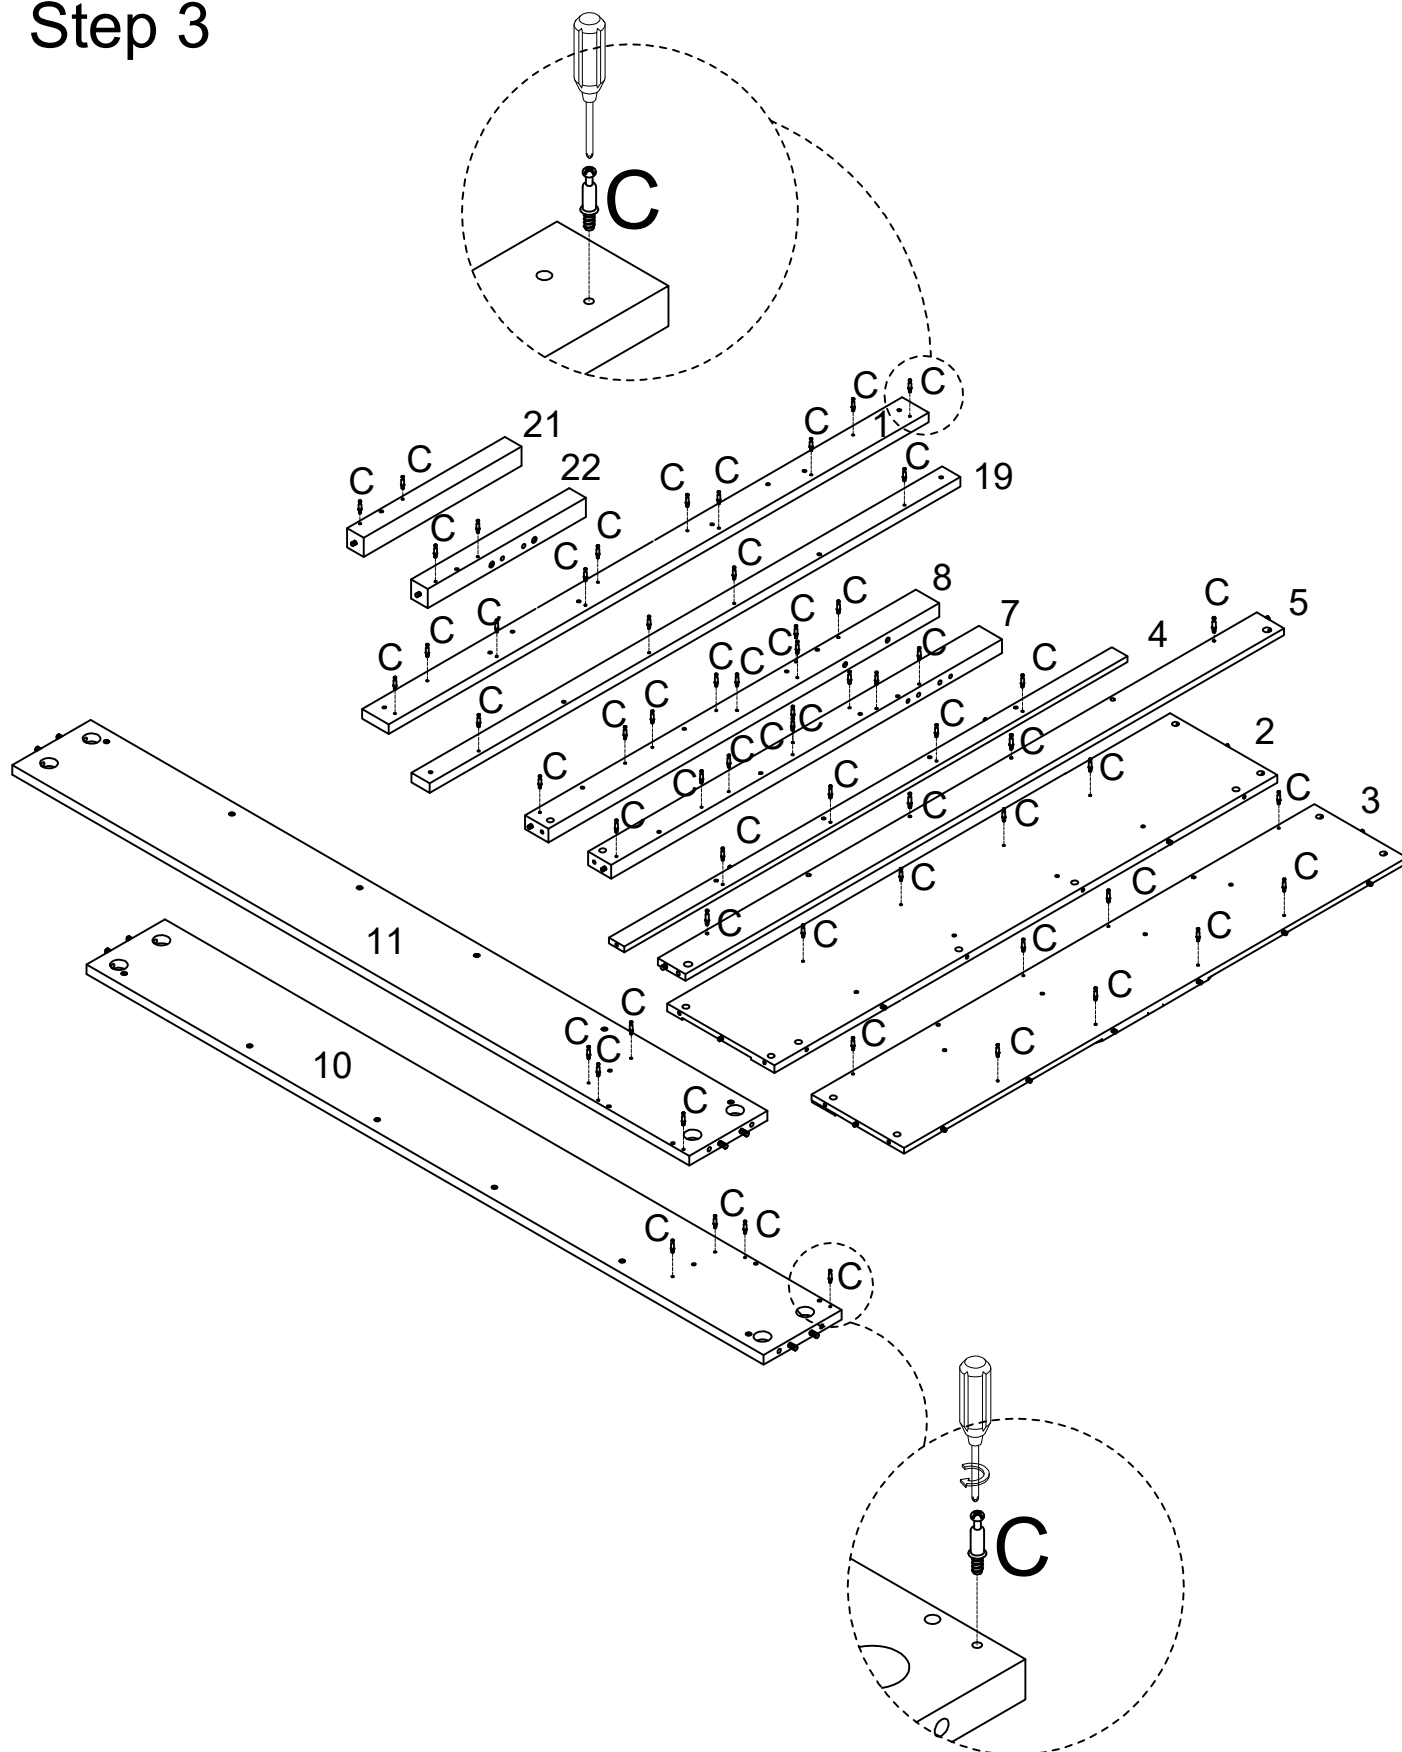
A

X38


Step 2



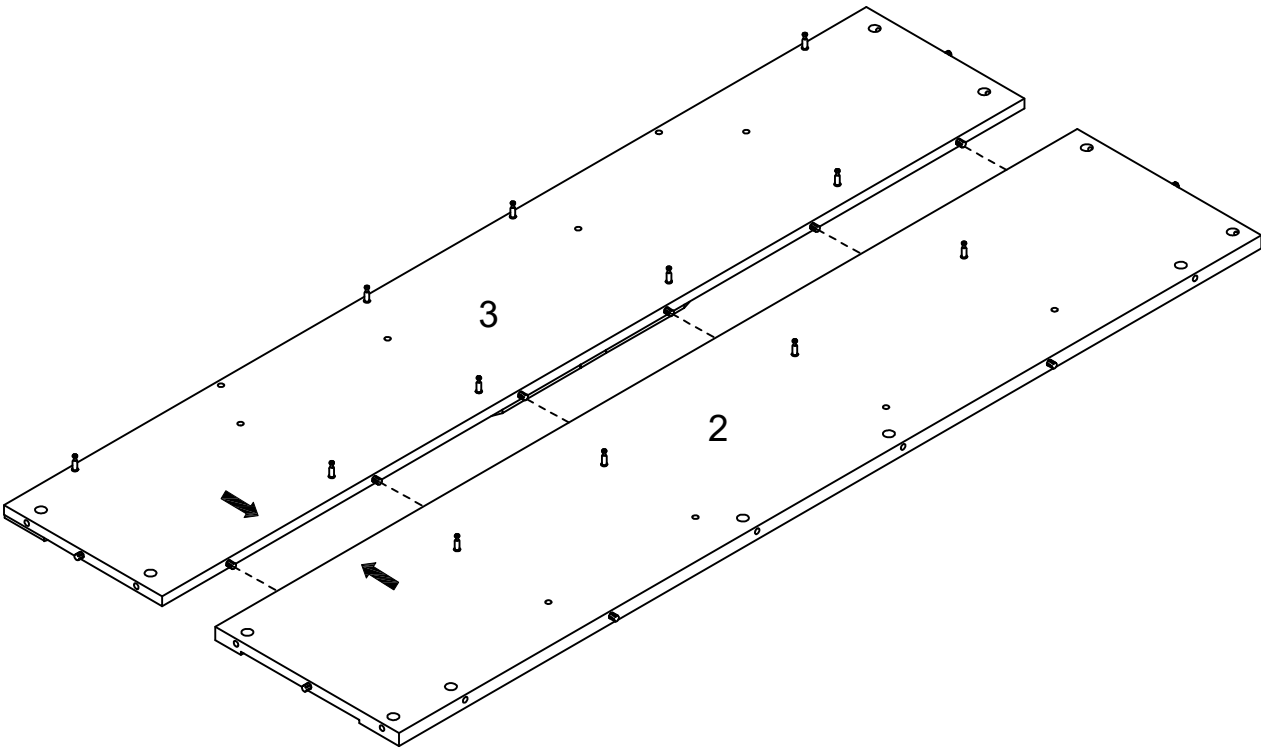
B	A
	
X8	X20

Step 3

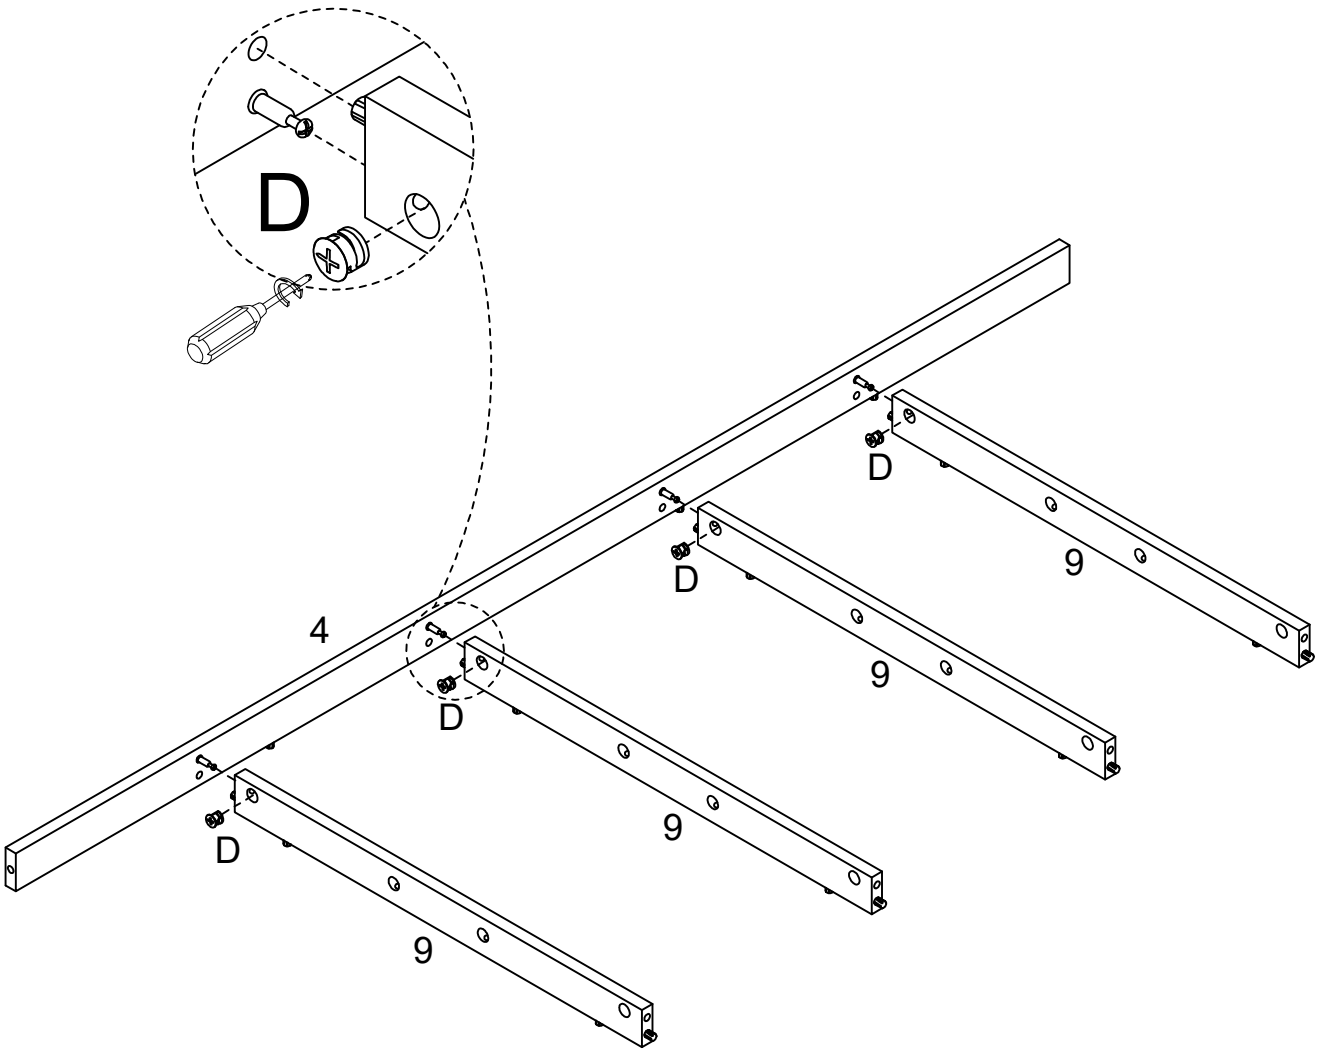
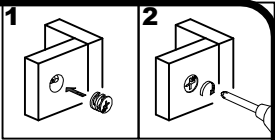



C

X62

Step 4

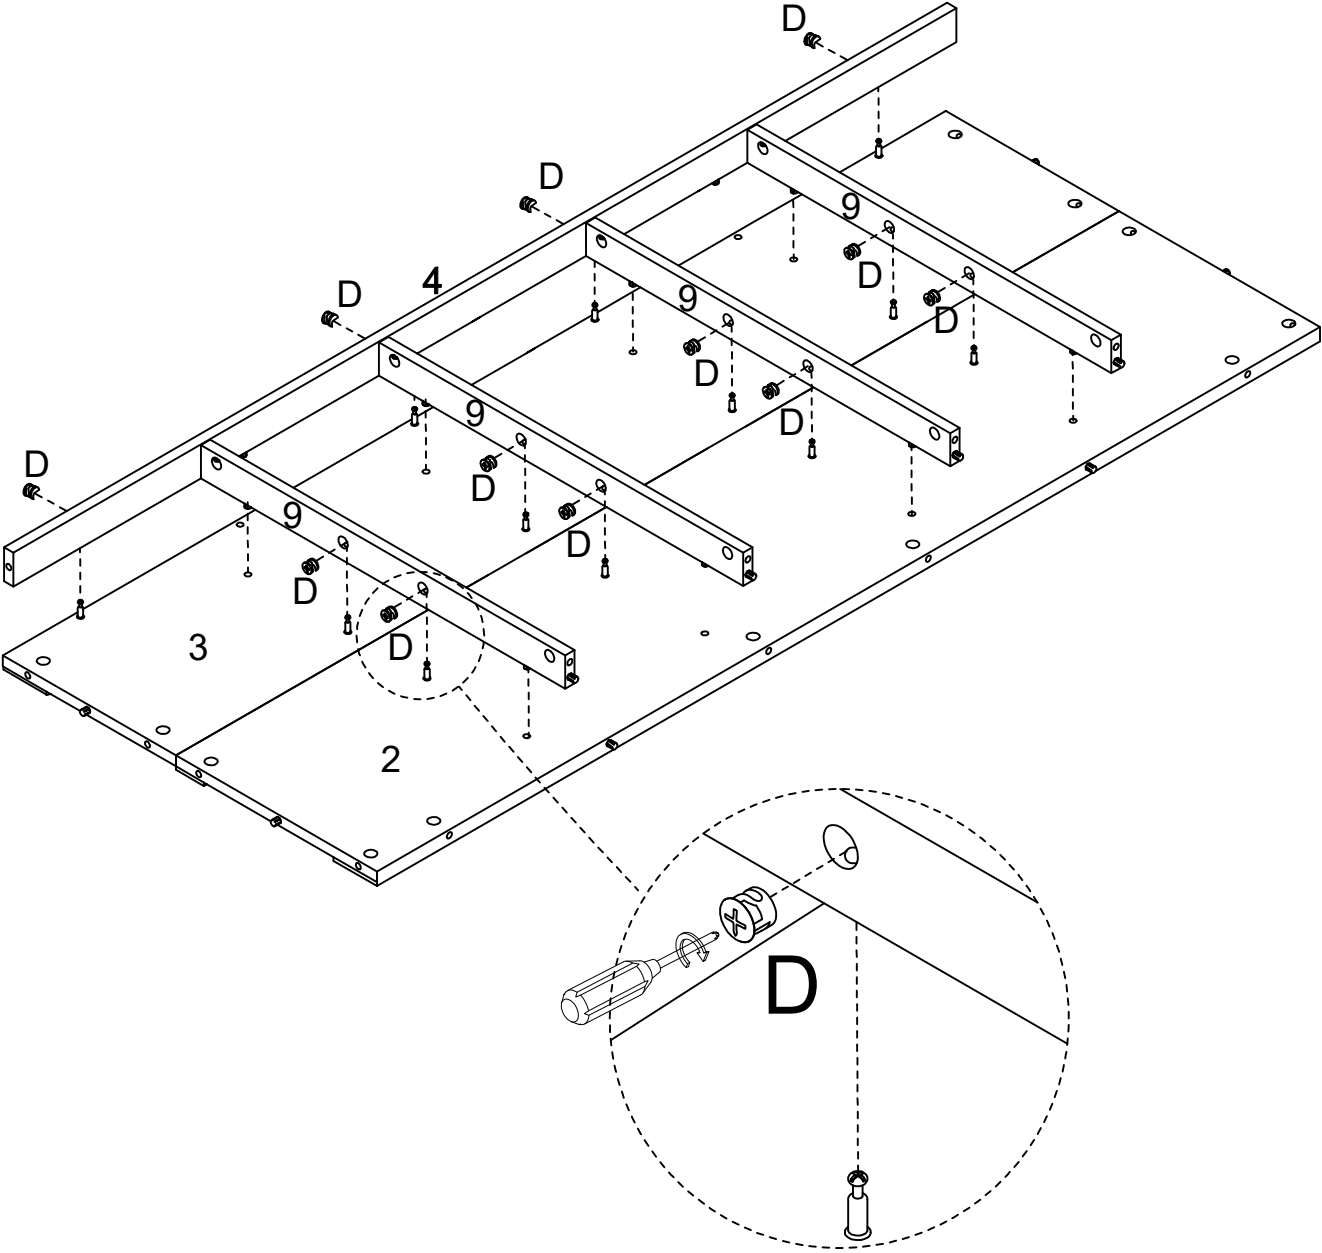
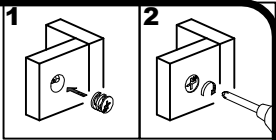



Step 5



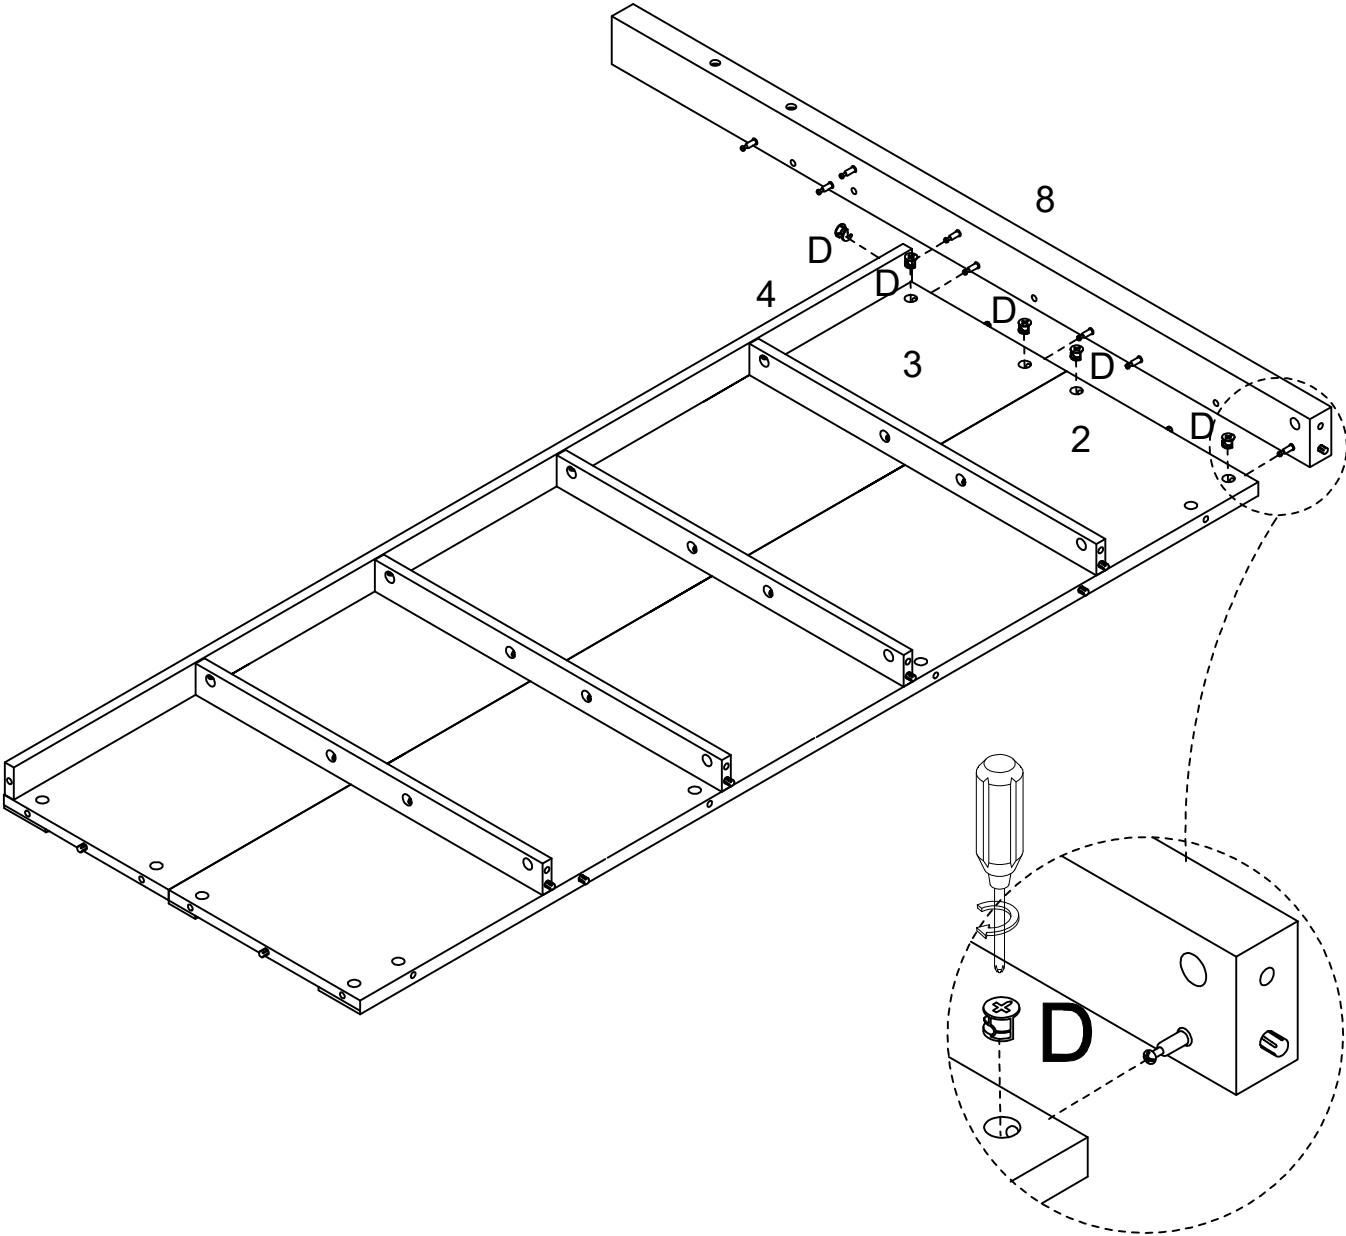
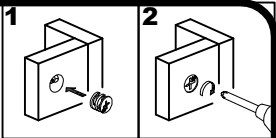
D

X4


Step 6



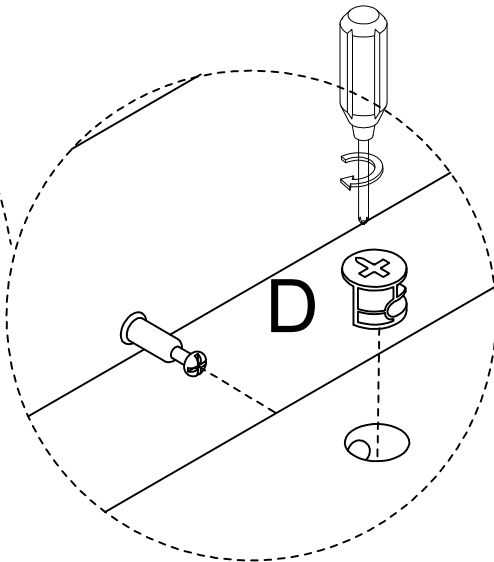
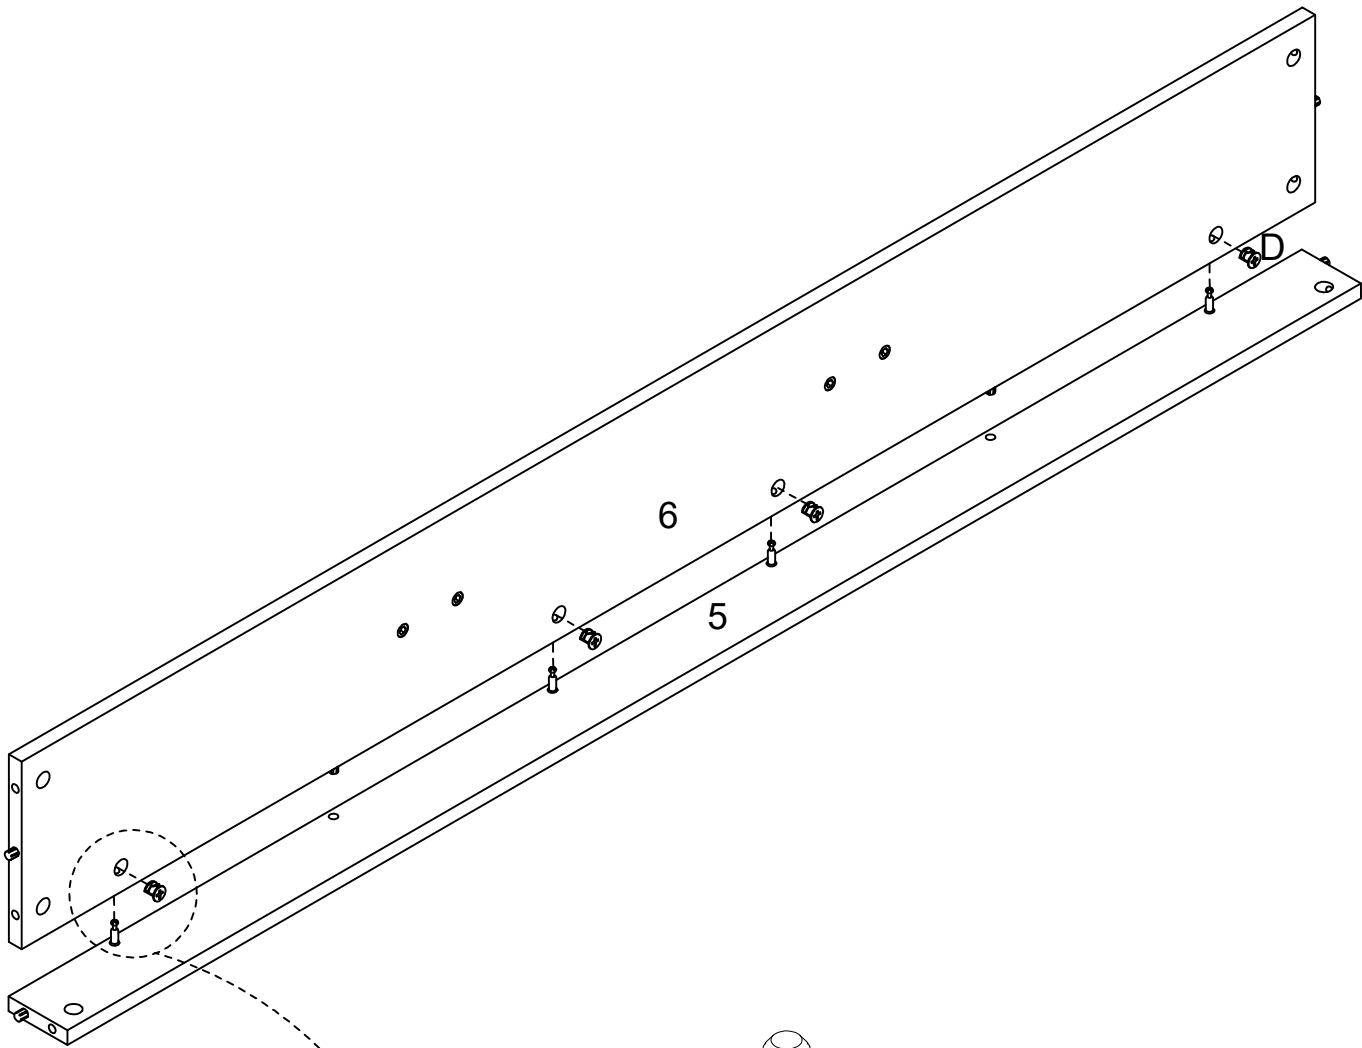
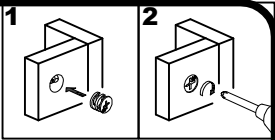
D

X12


Step 7



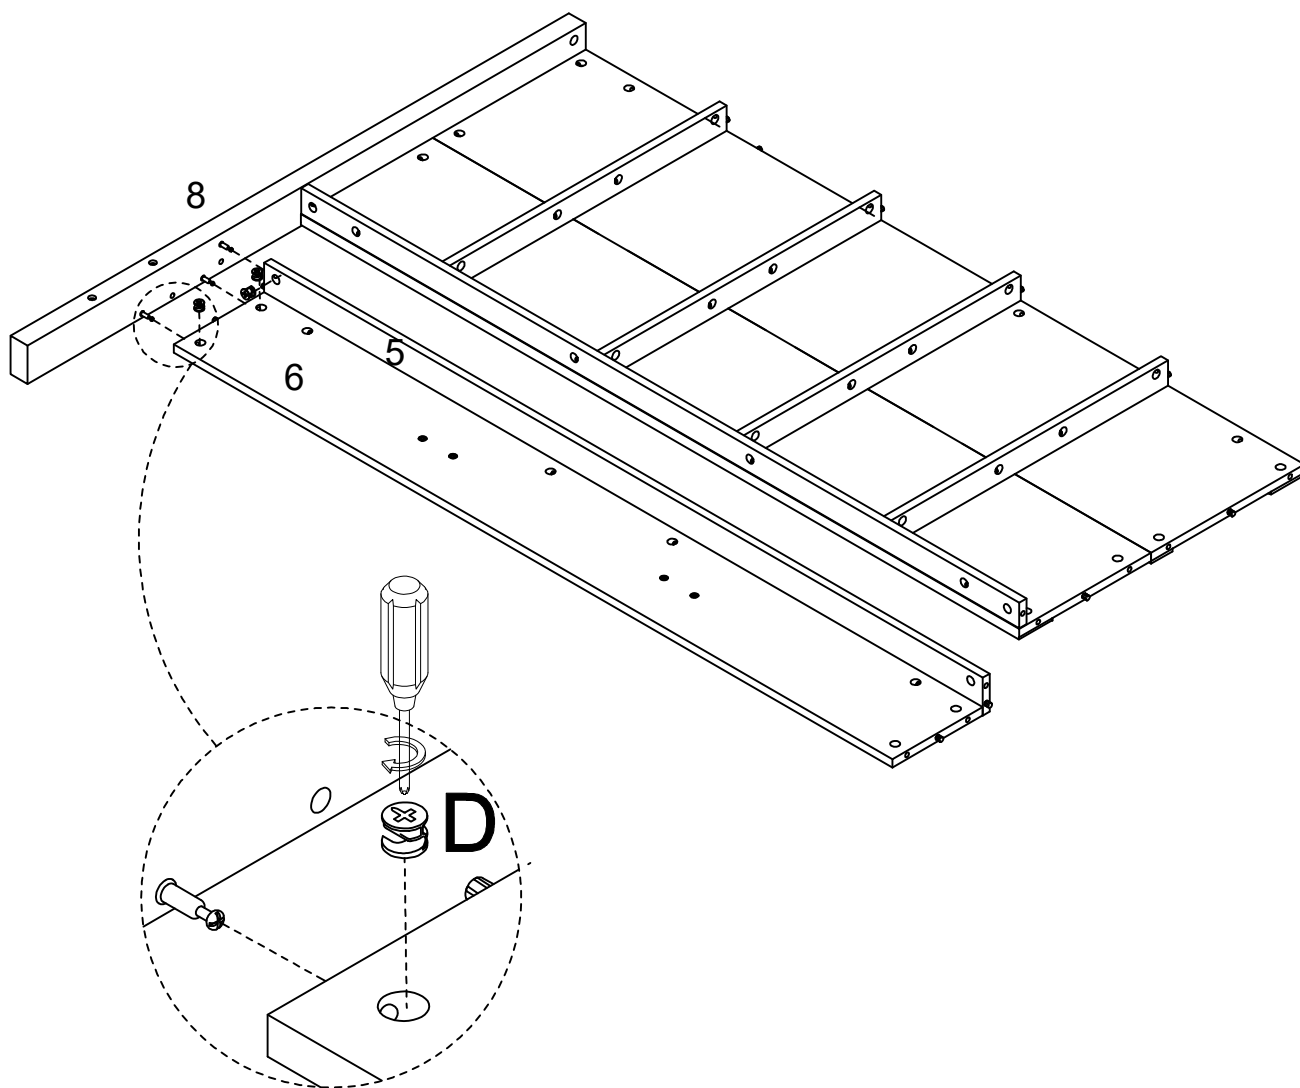
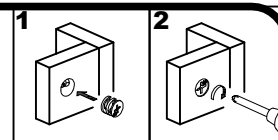
D

X5


Step 8



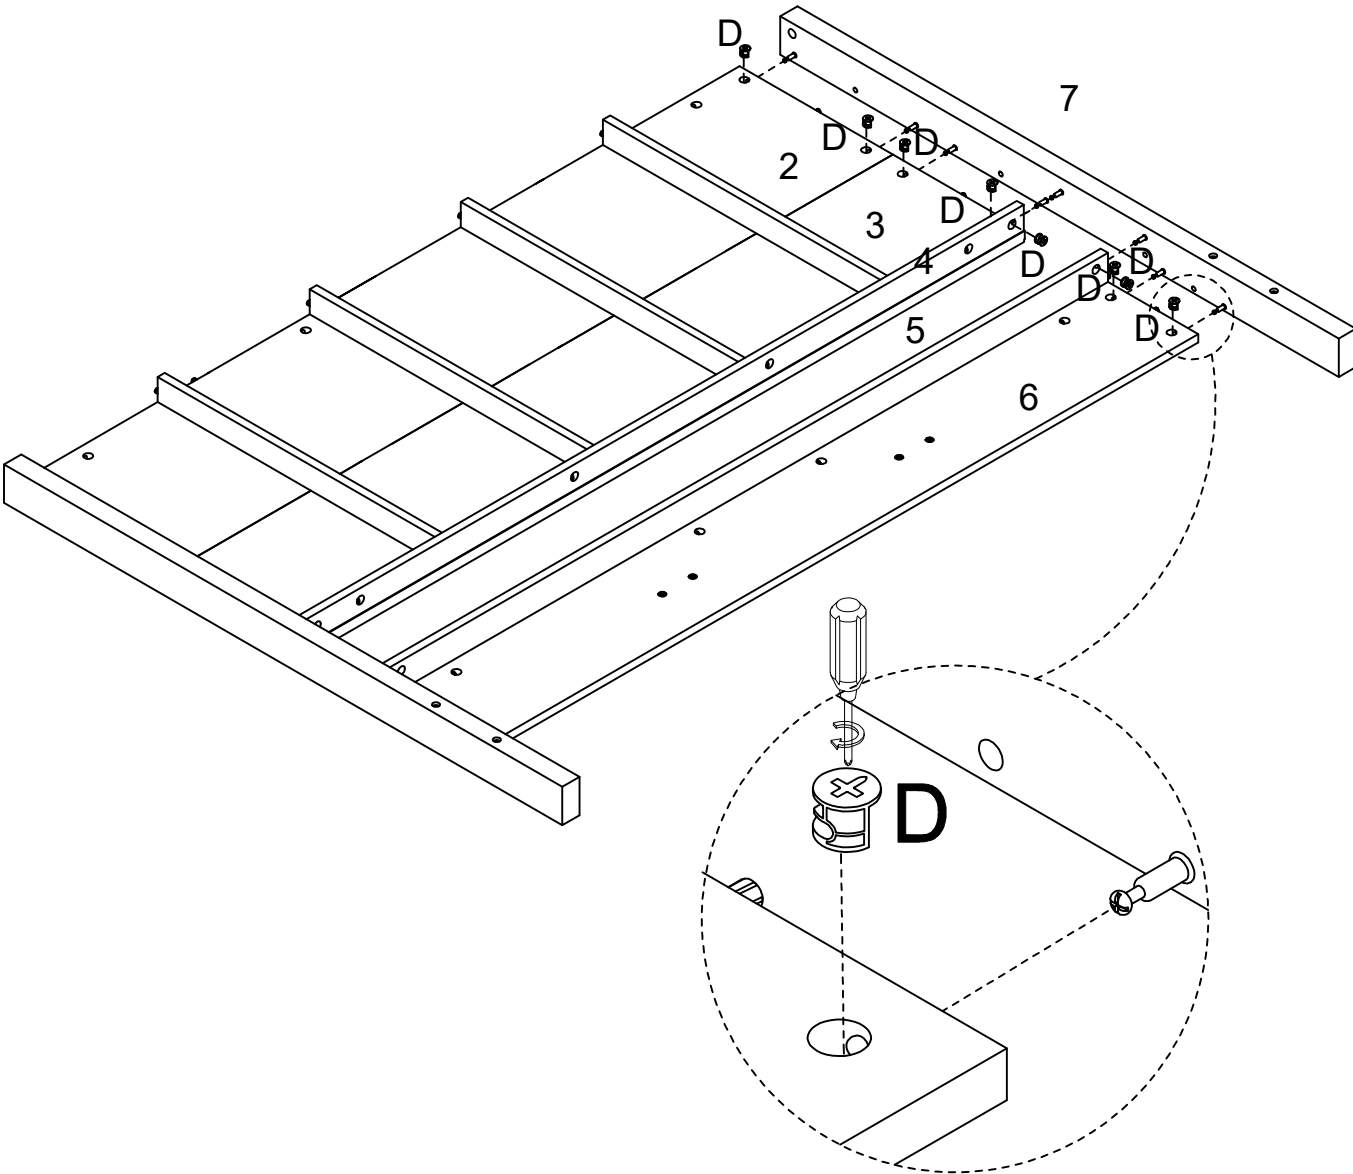
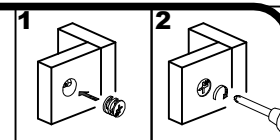
D

X4


Step 9



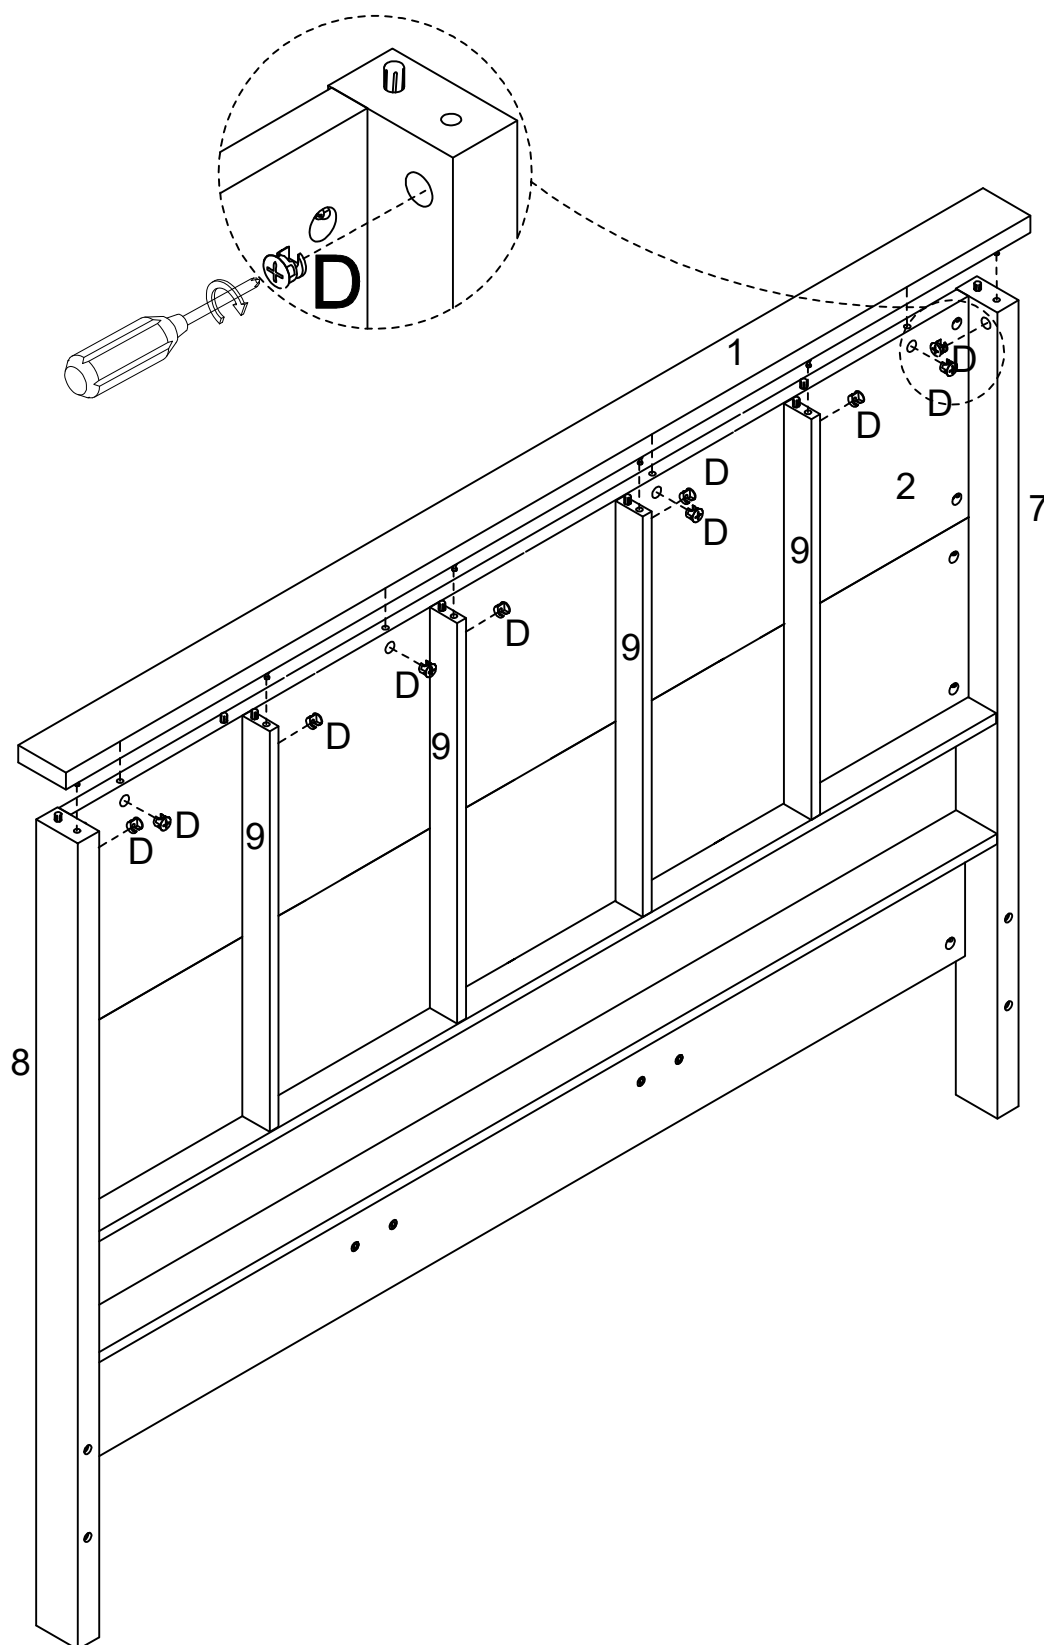
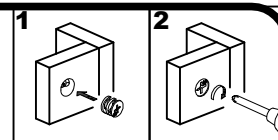
D

X3


Step 10



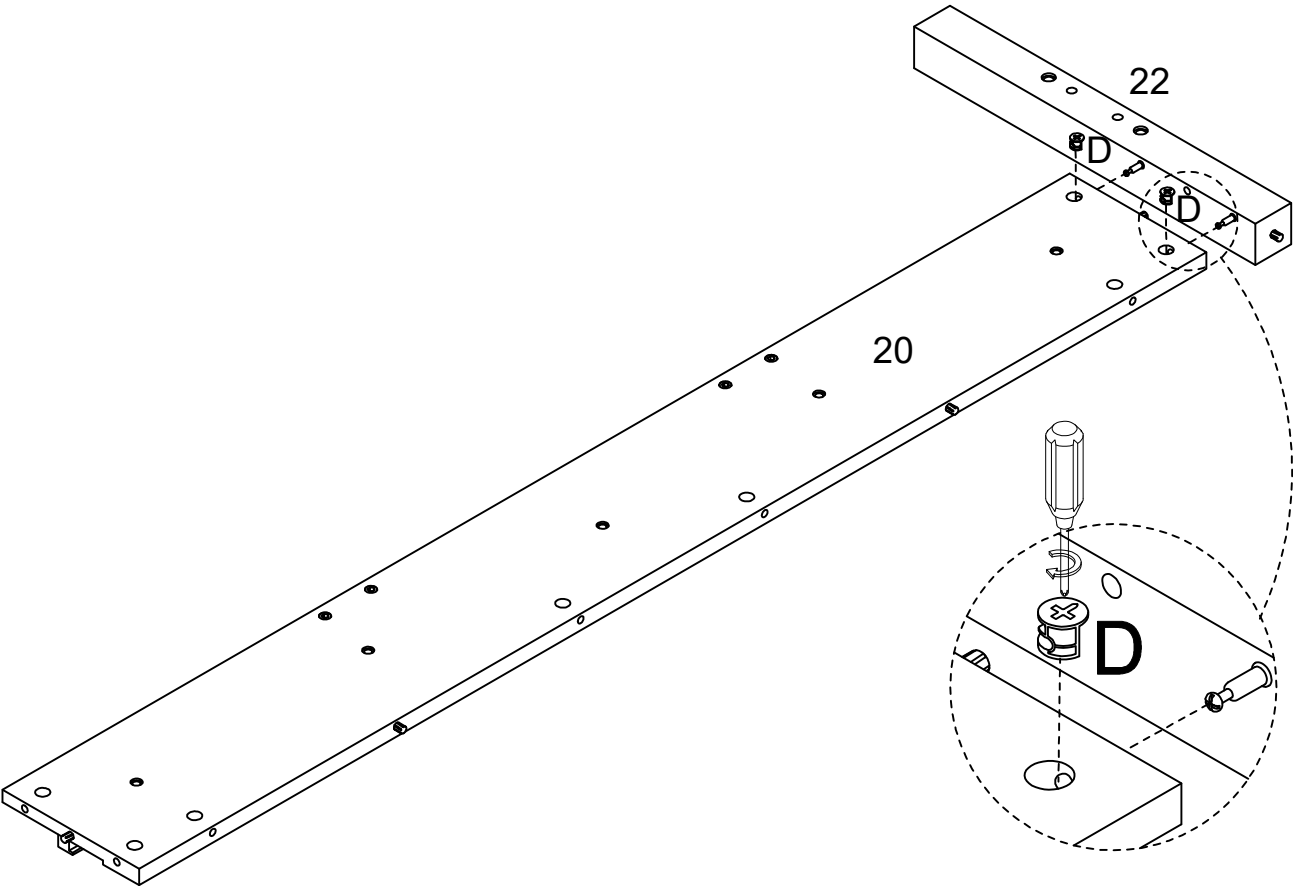
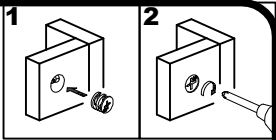
D

X8


Step 11



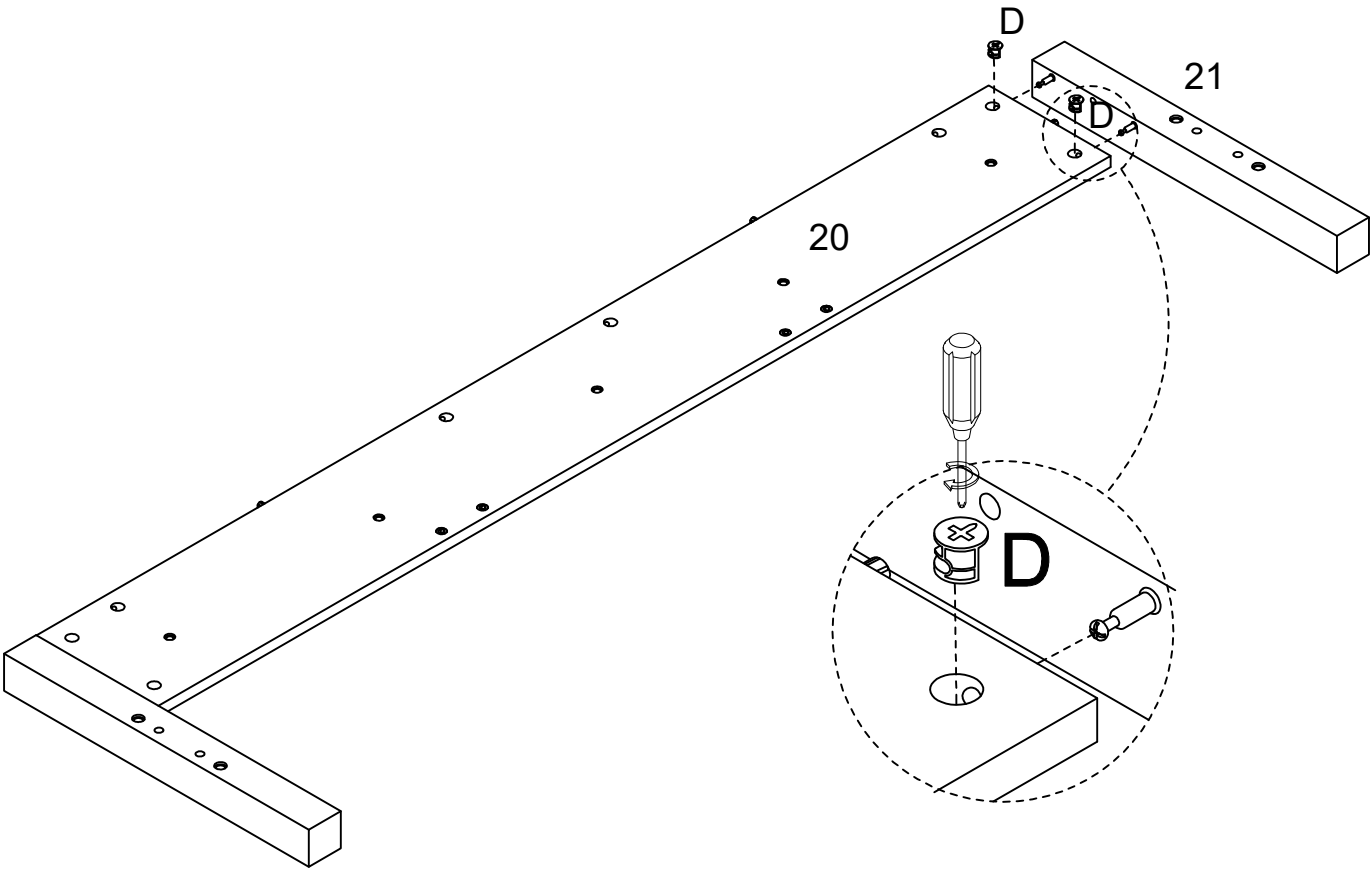
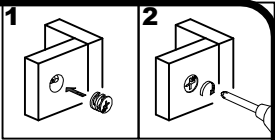
D

X10


Step 12



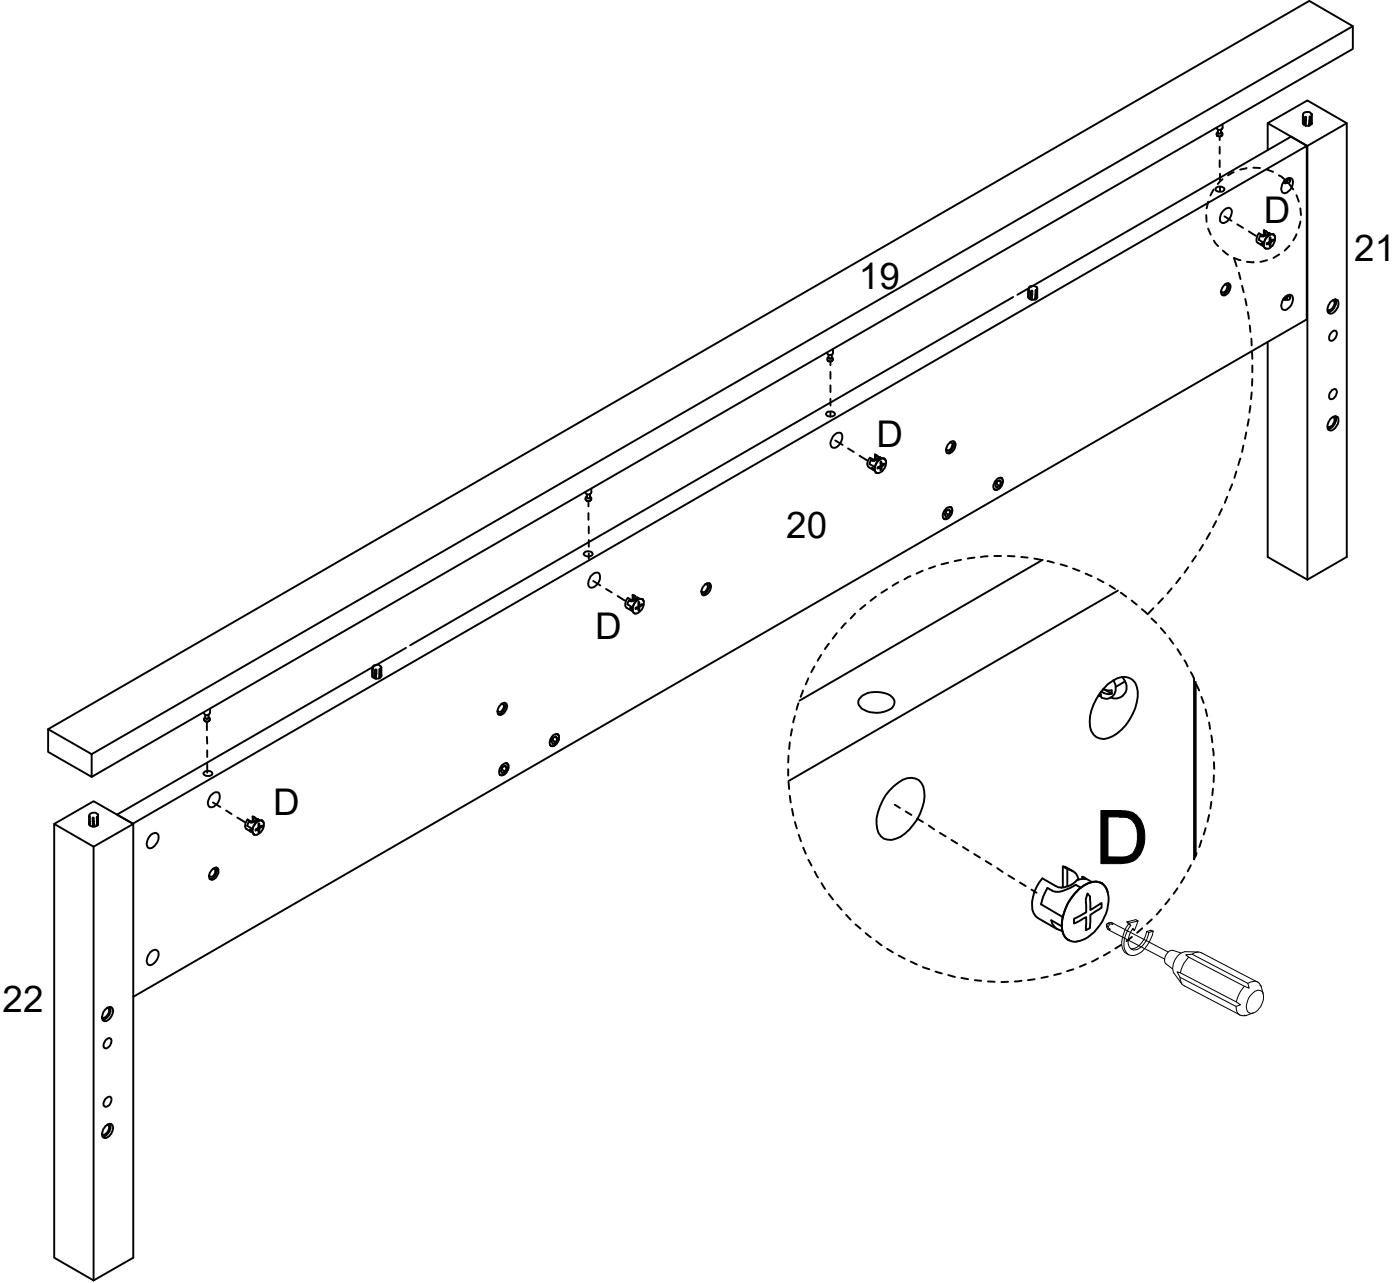
D

X2


Step 13



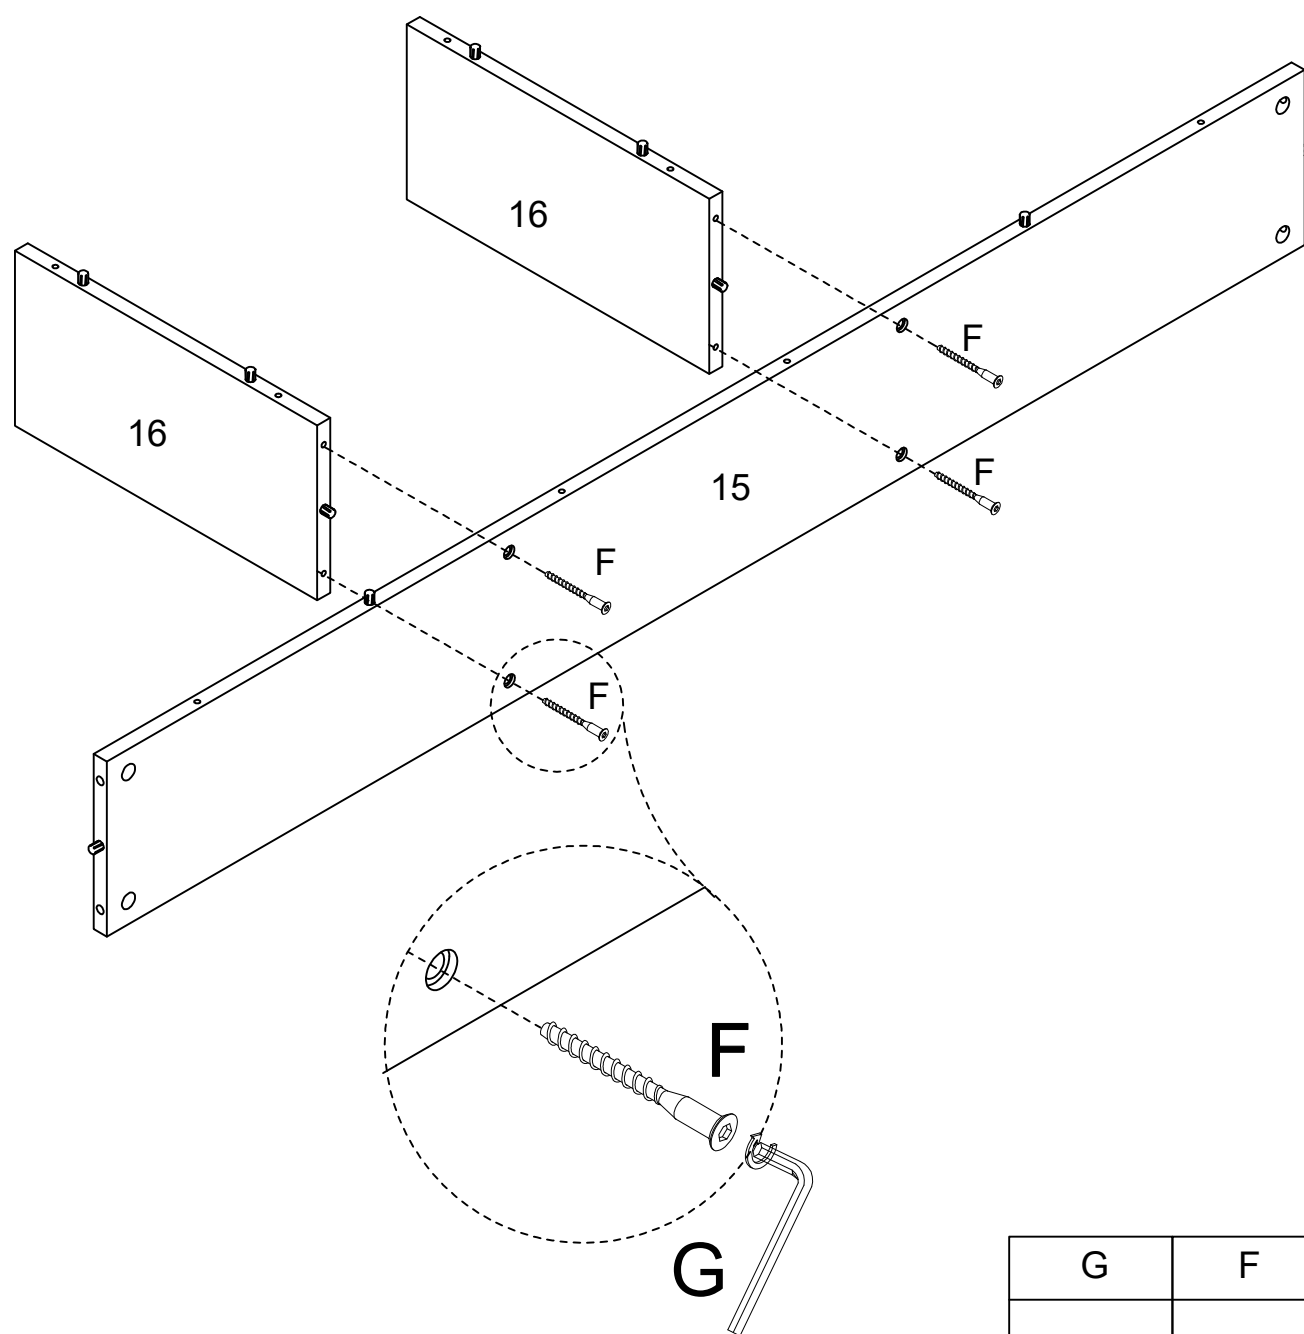
D

X2



Step 14



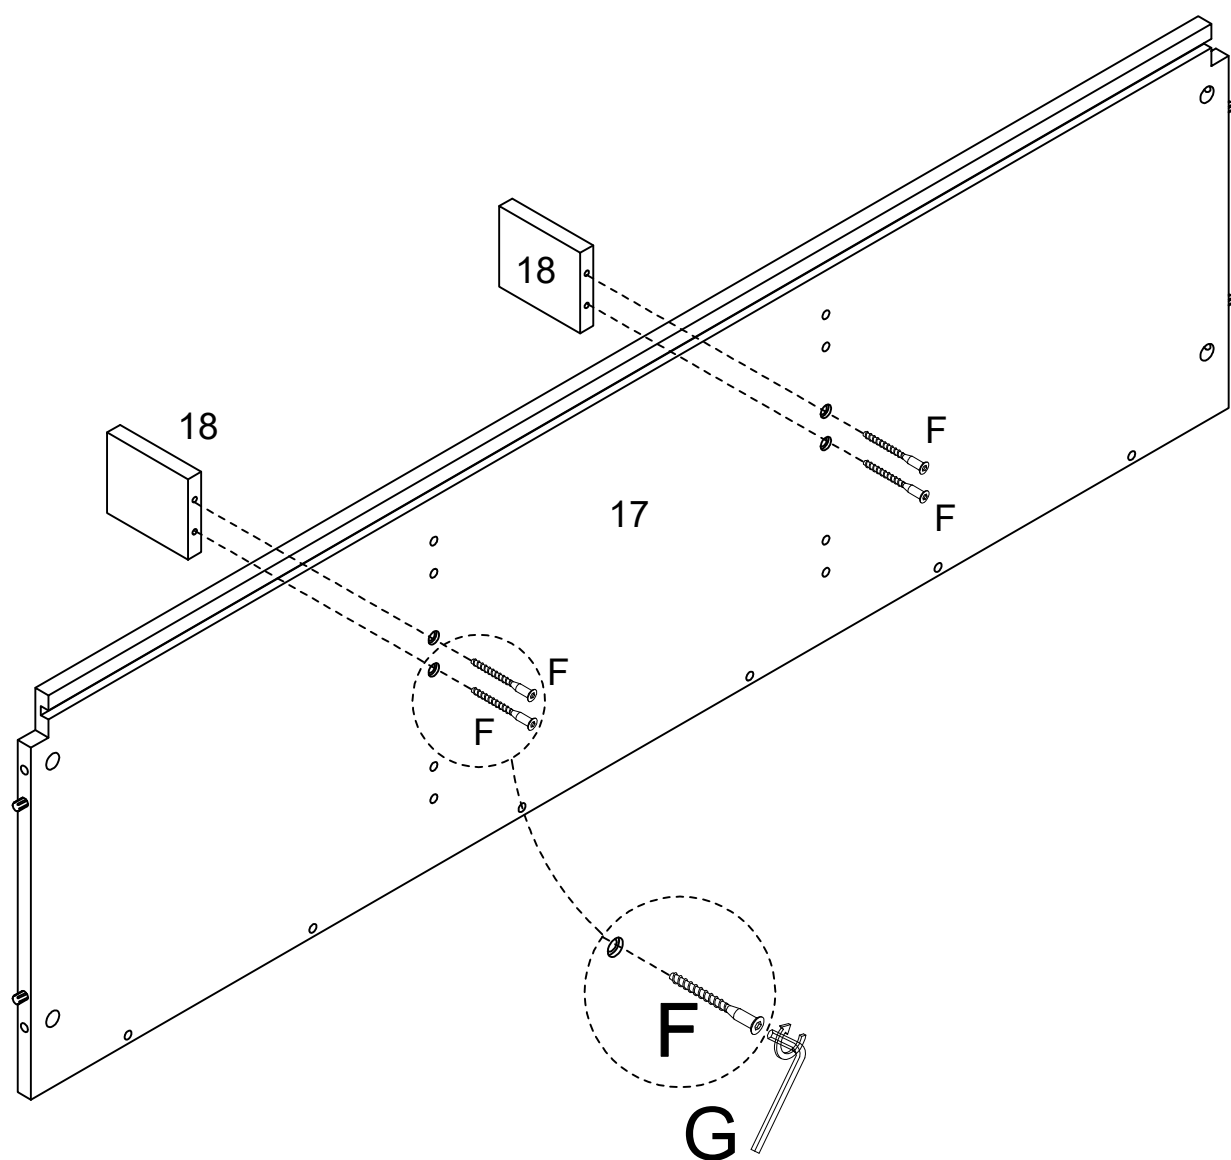
D

X4



Step 15



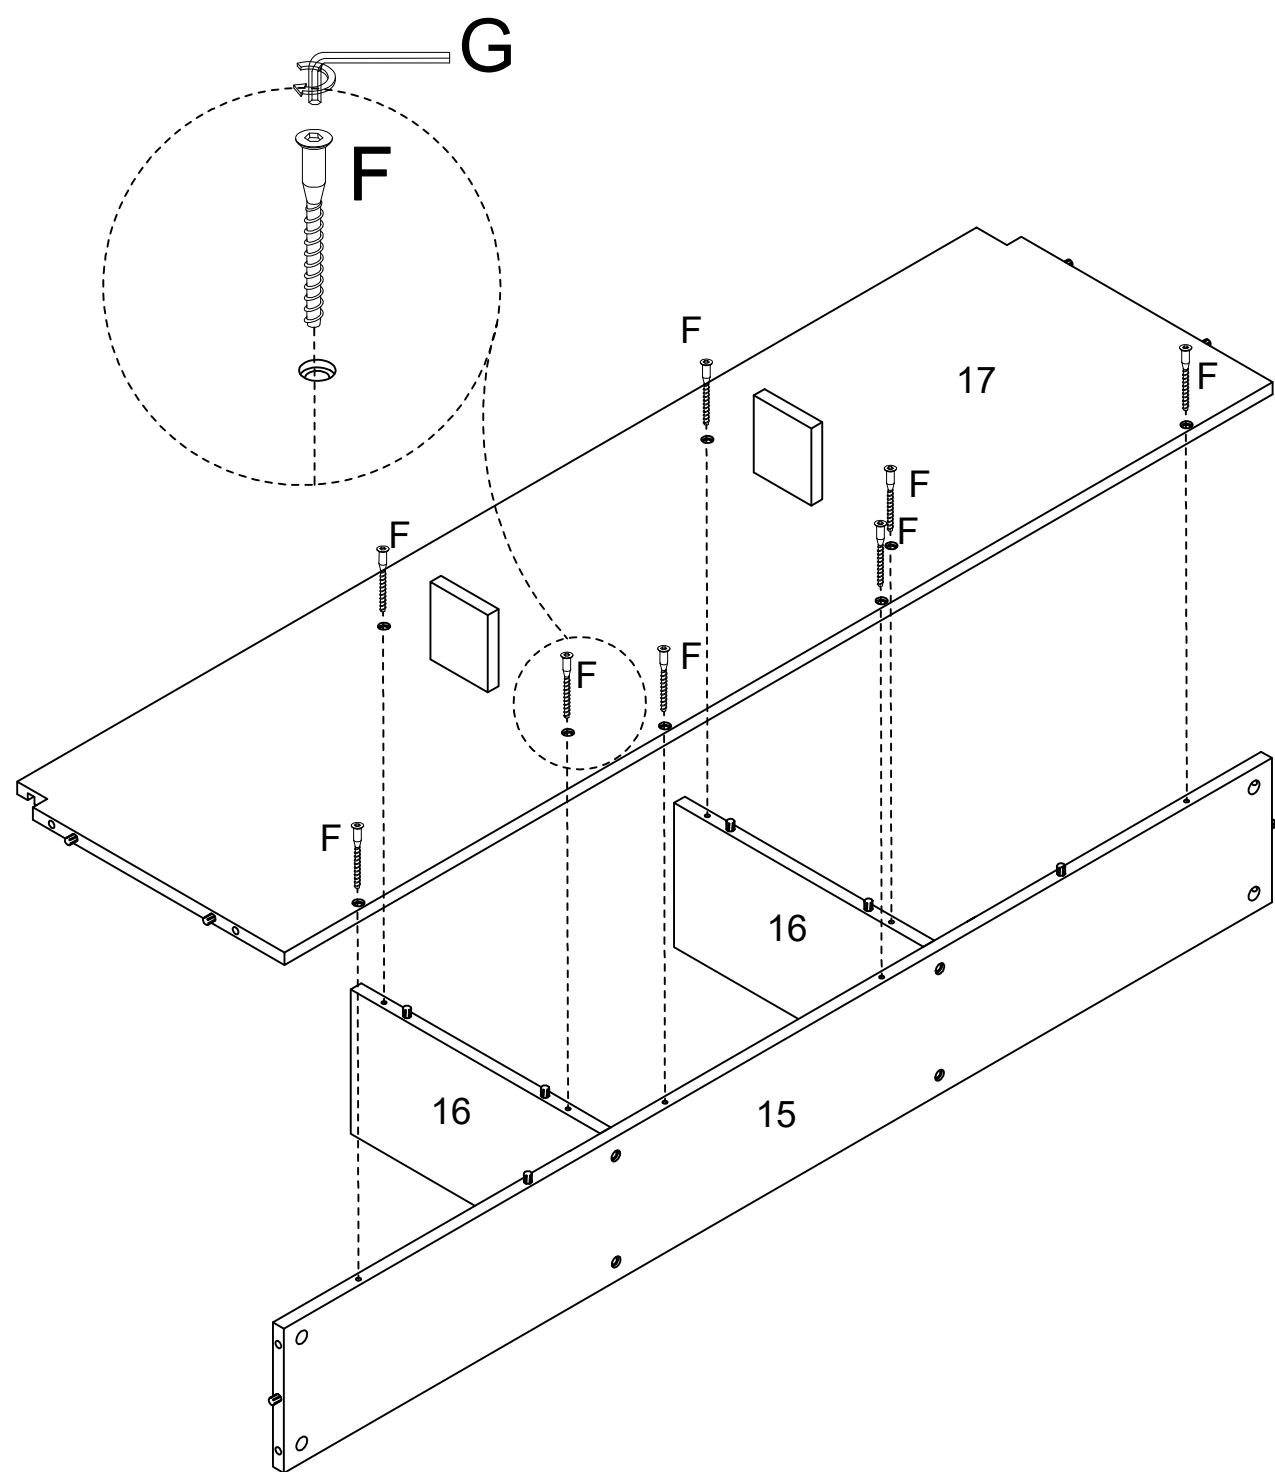
G	F
	
X1	X4



Step 16



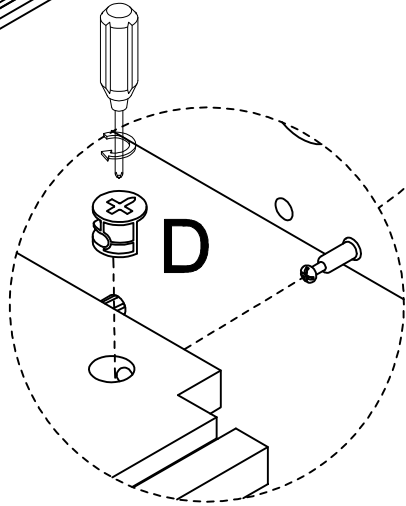
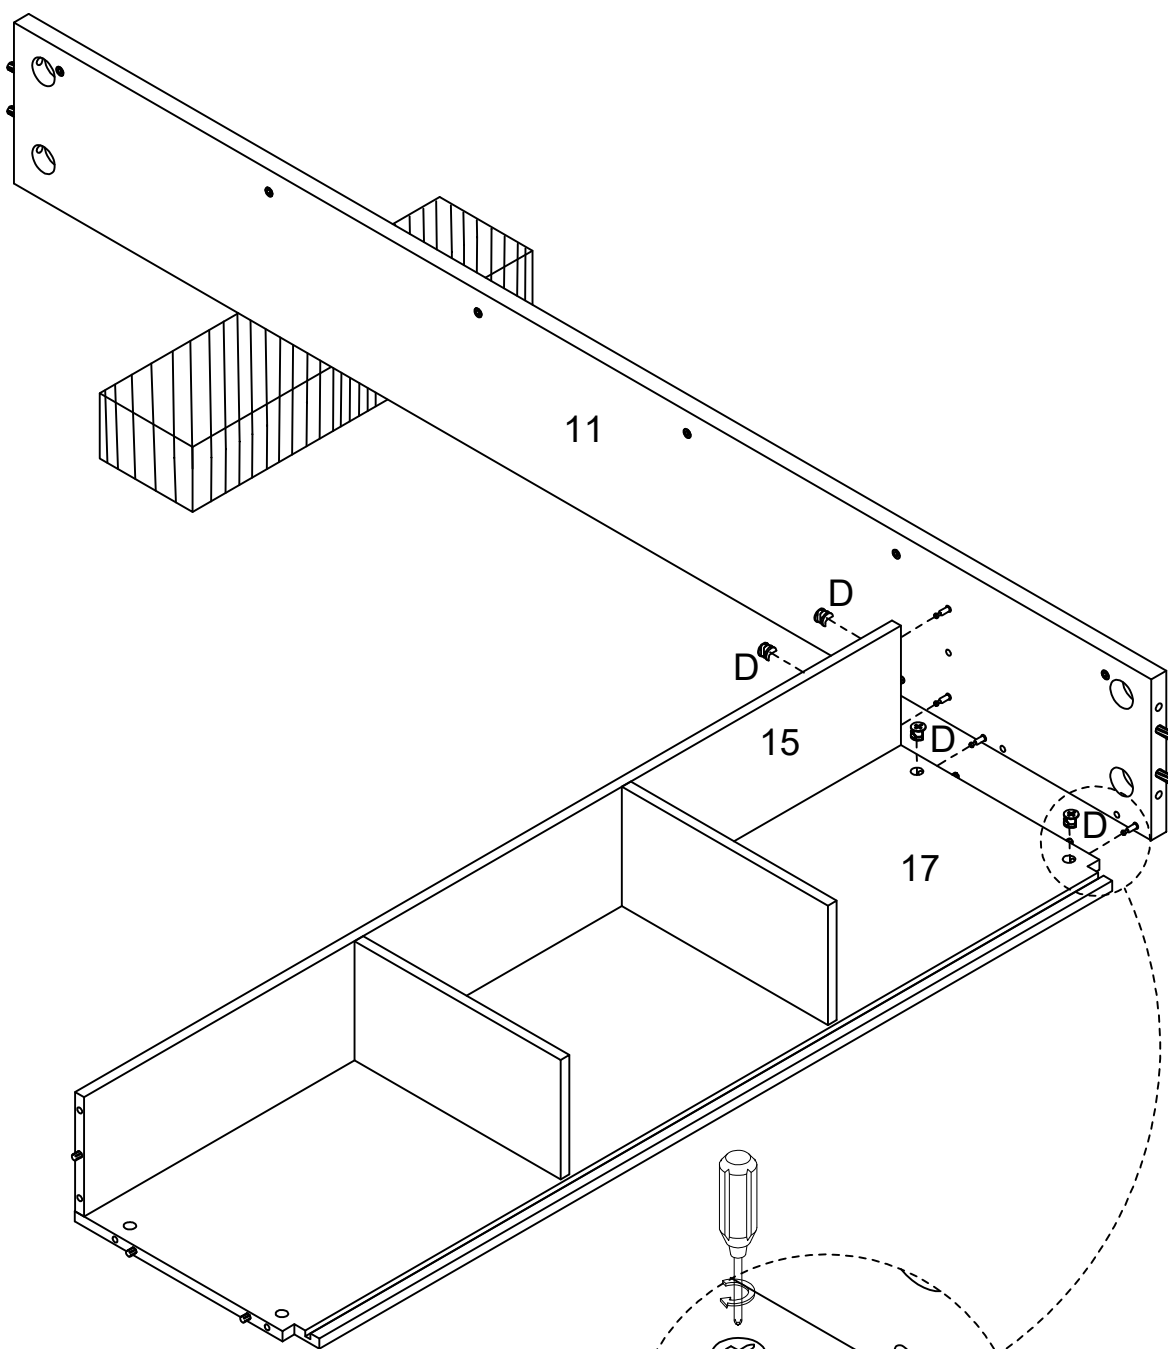
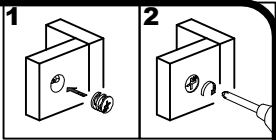
G	F
	
X1	X4


Step 17



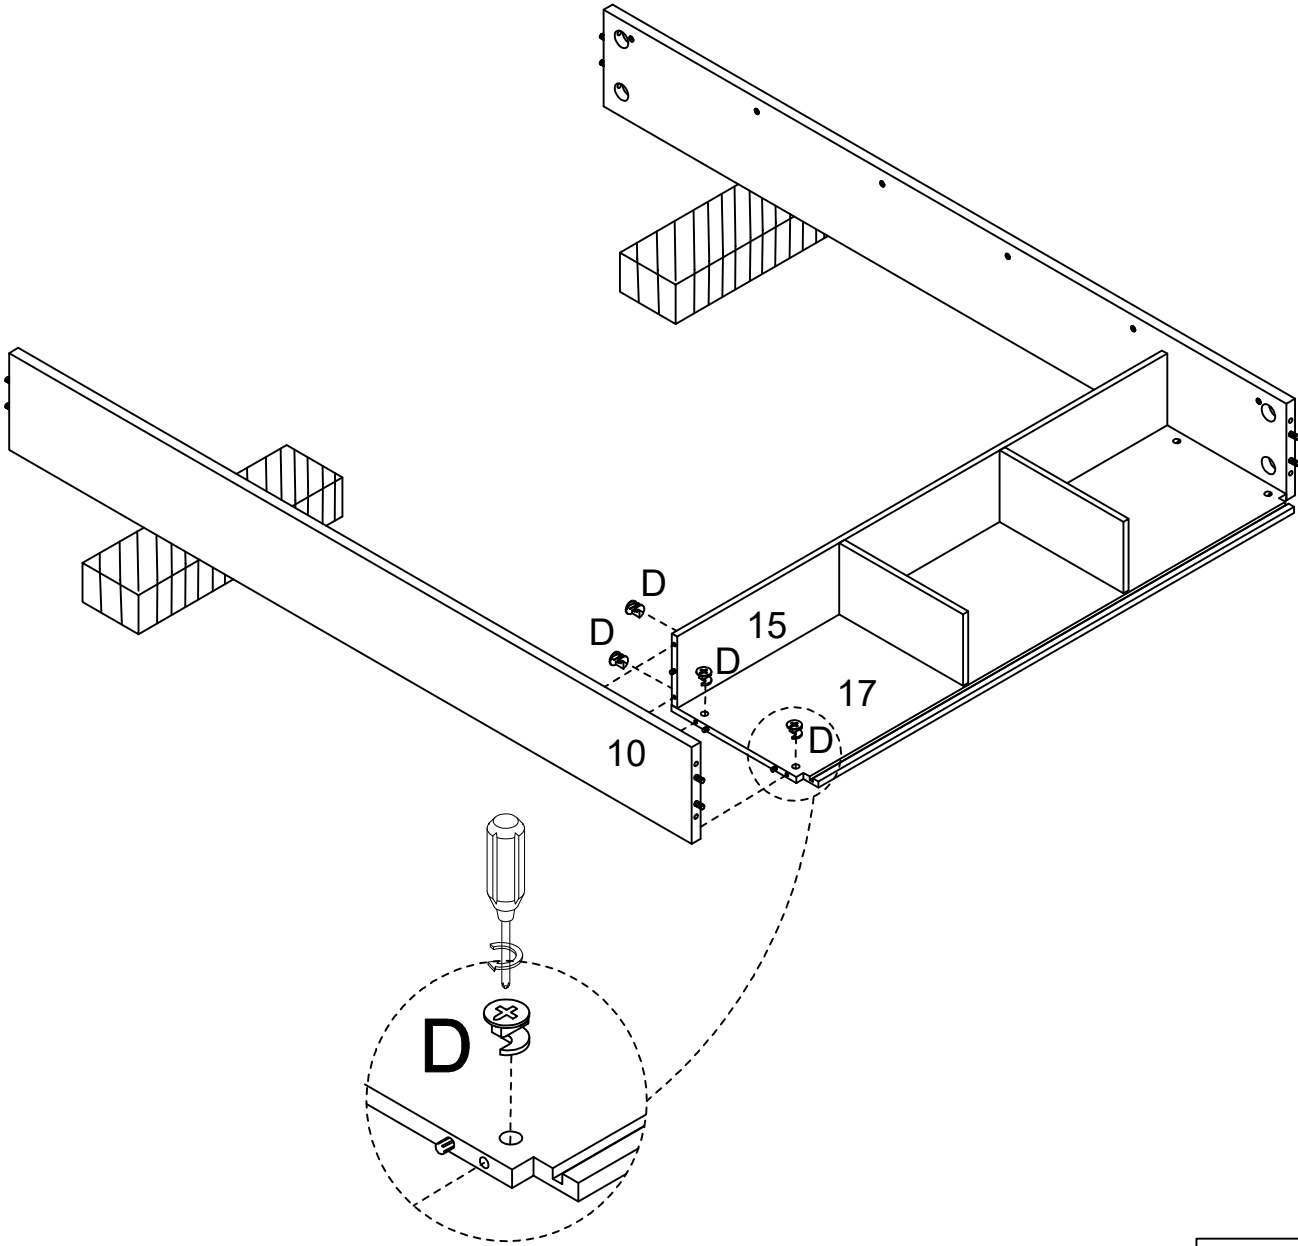
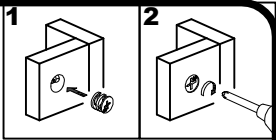
G	F
	
X1	X8


Step 18



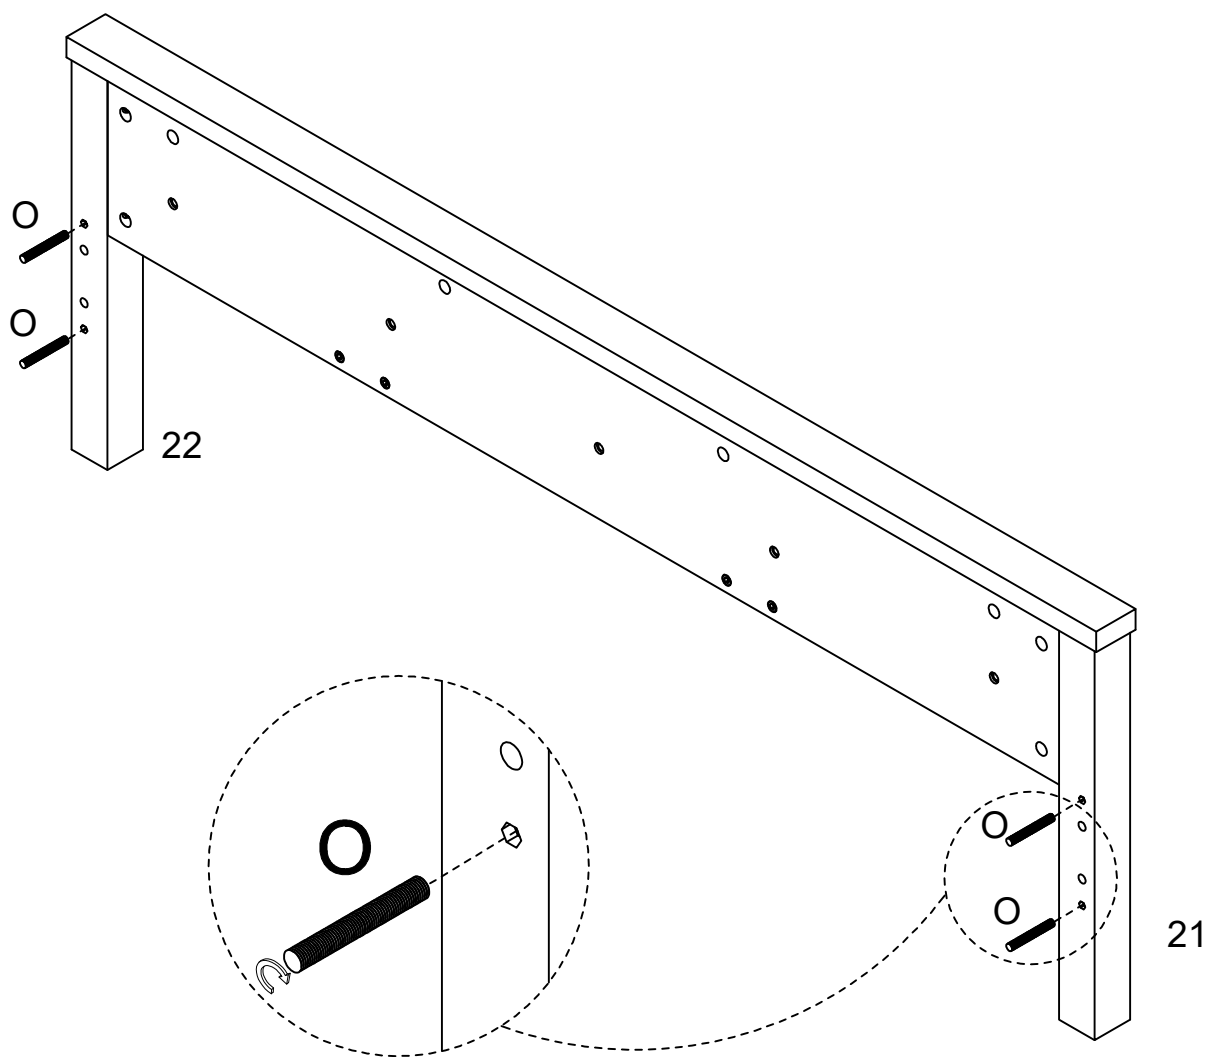
D

X4


Step 19



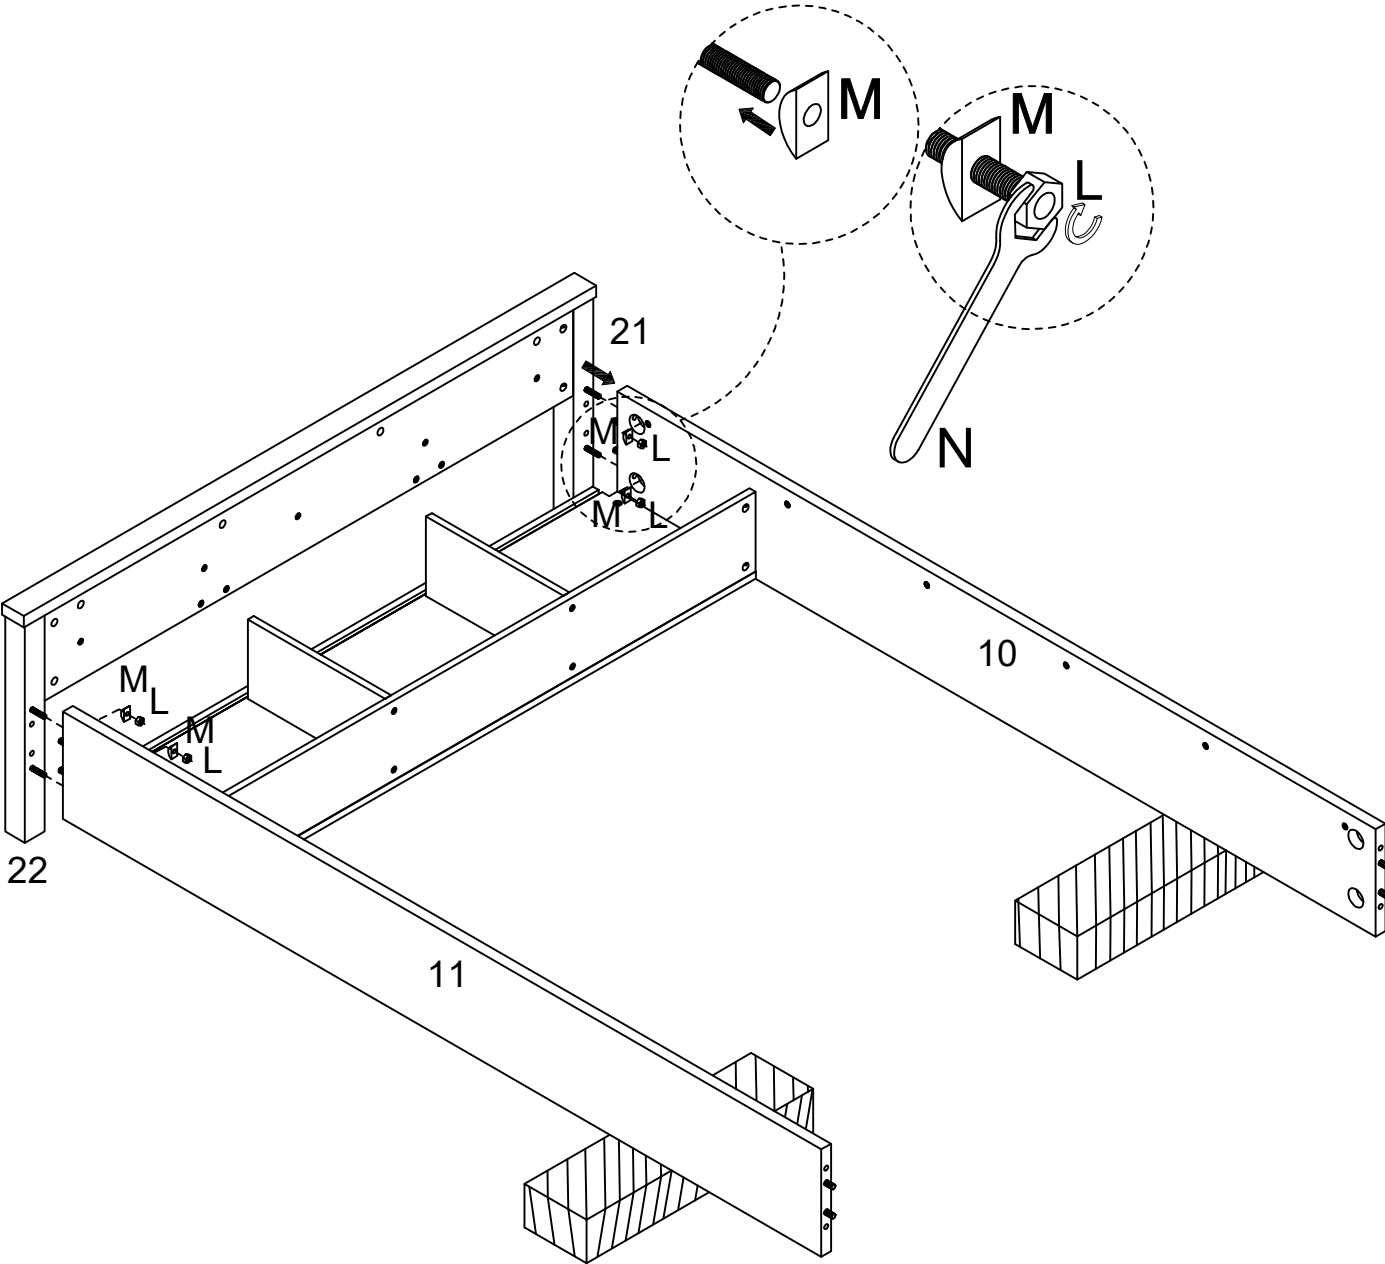
D

X4




Step 20



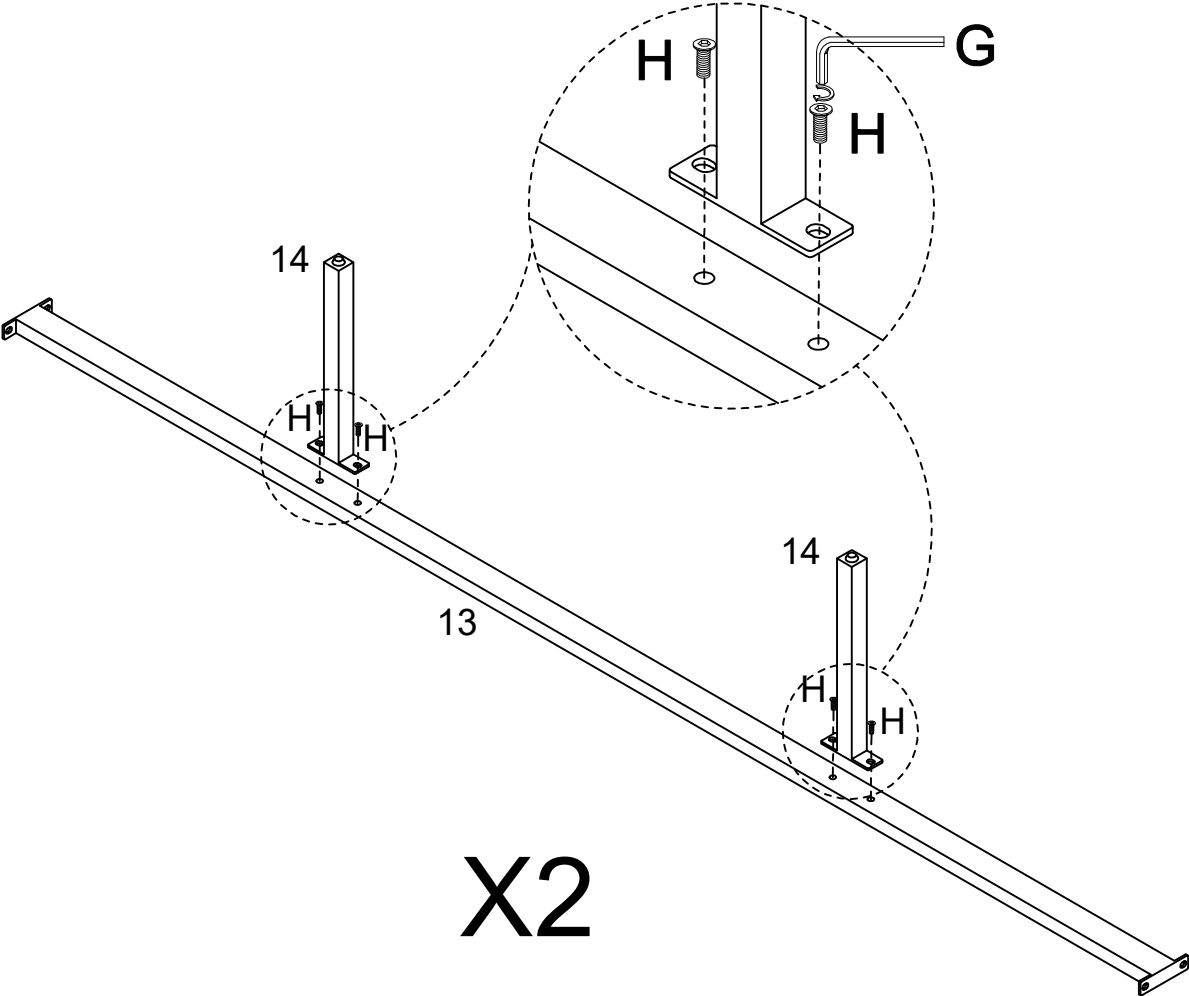
O

X4



Step 21



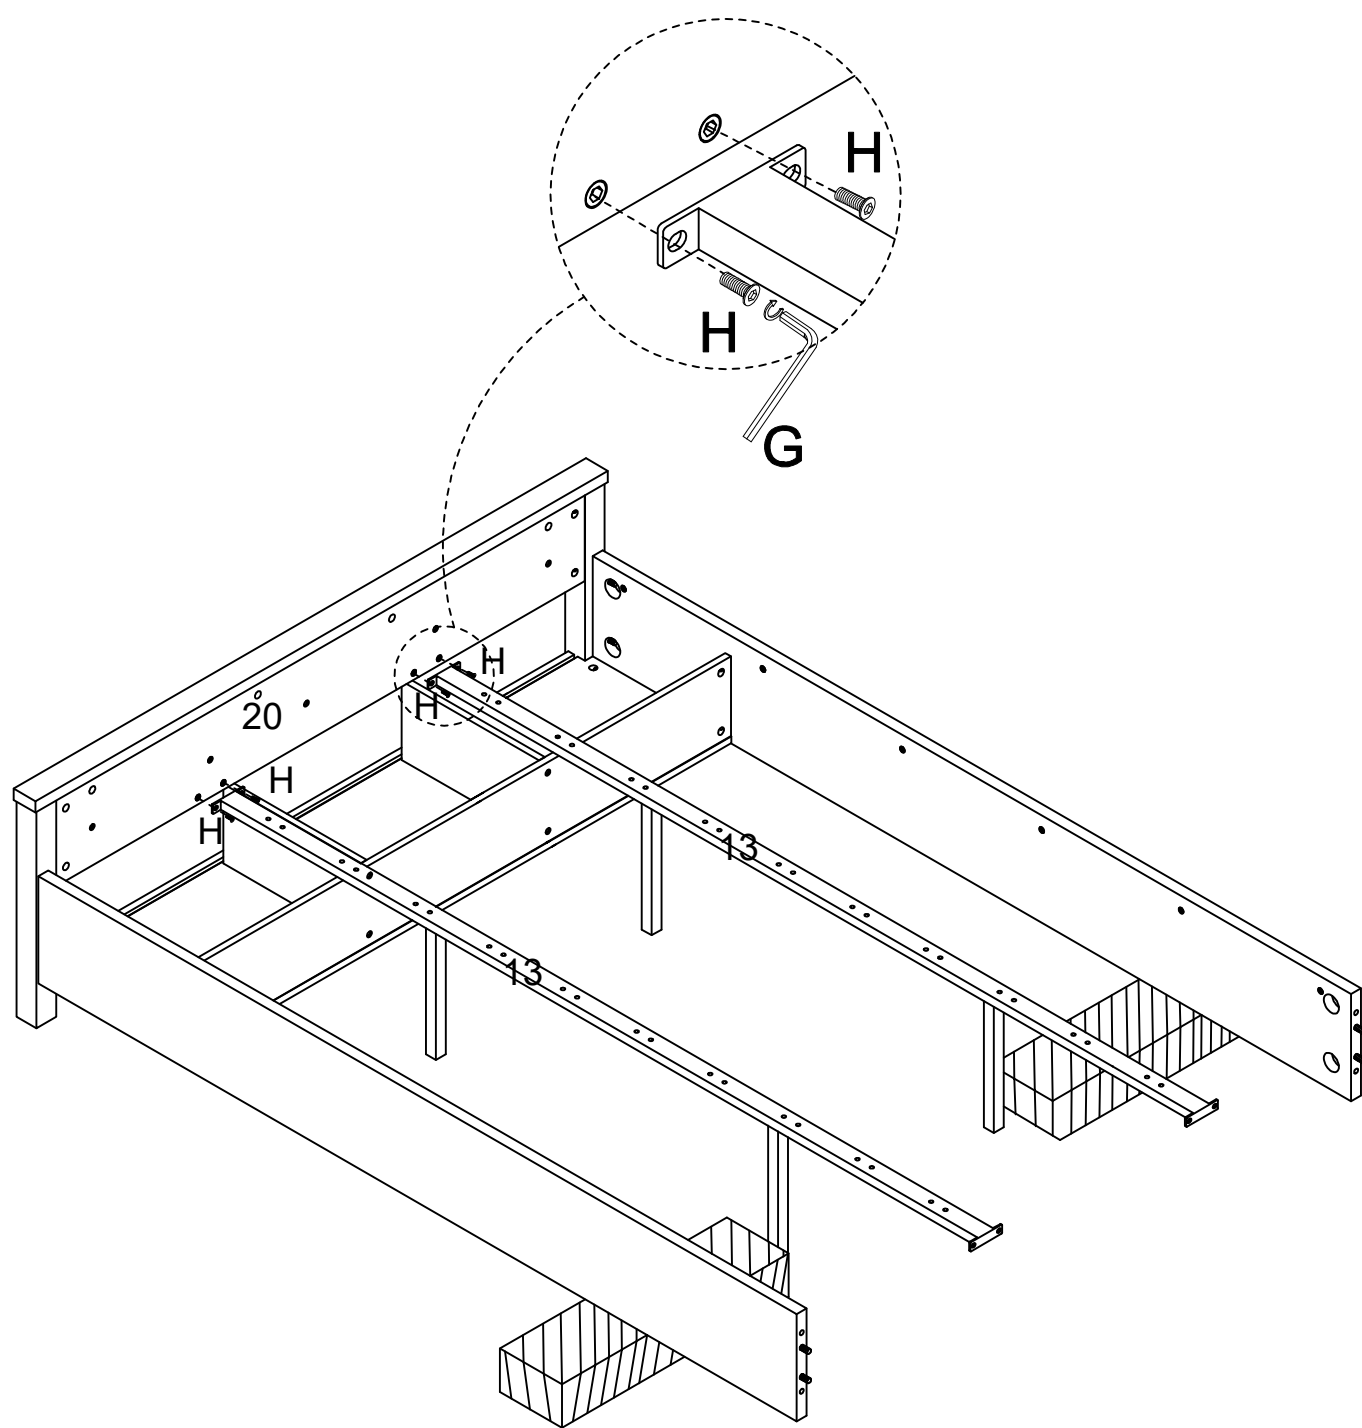
N	M	L
		
X1	X4	X4



Step 22



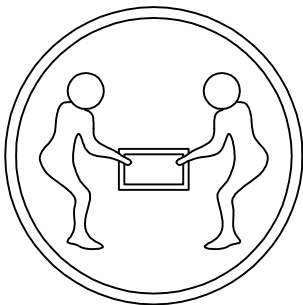
G	H
	
X1	X8

Step 23

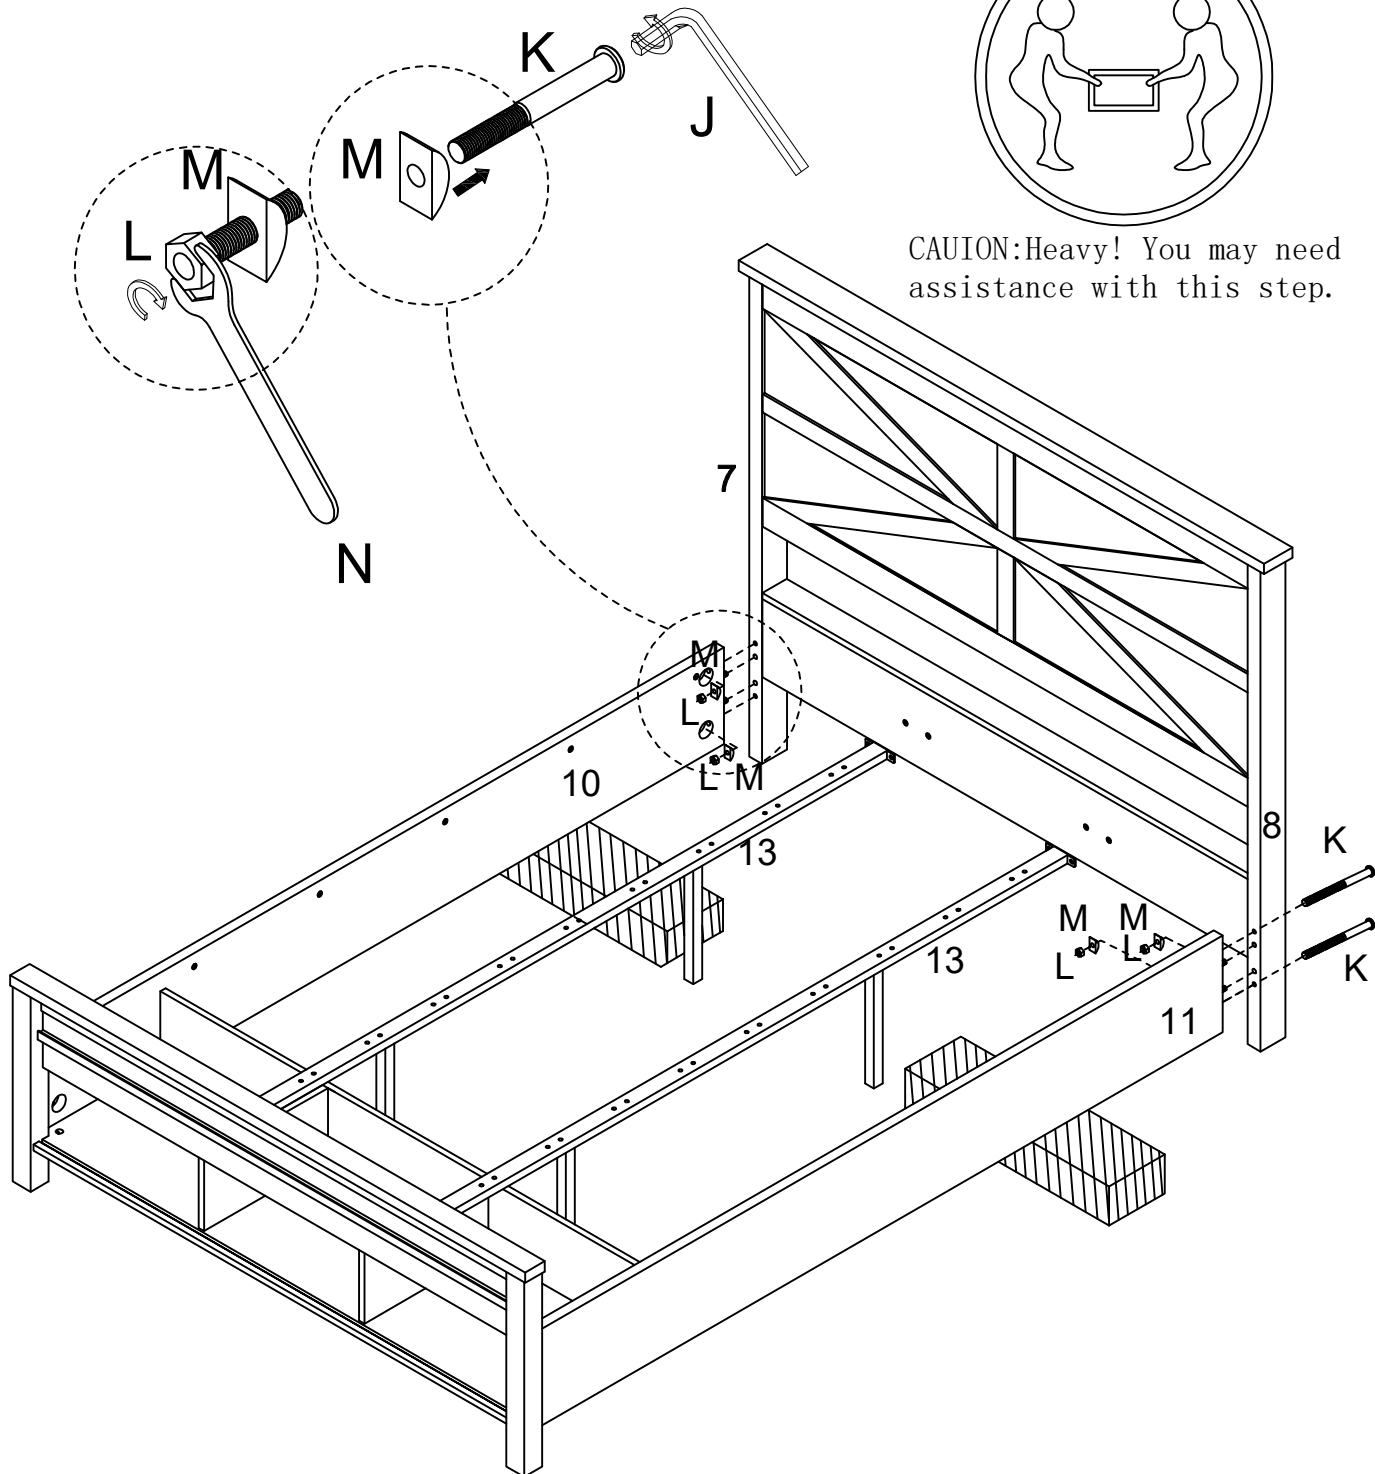


G	H
	
X1	X4

Step 24

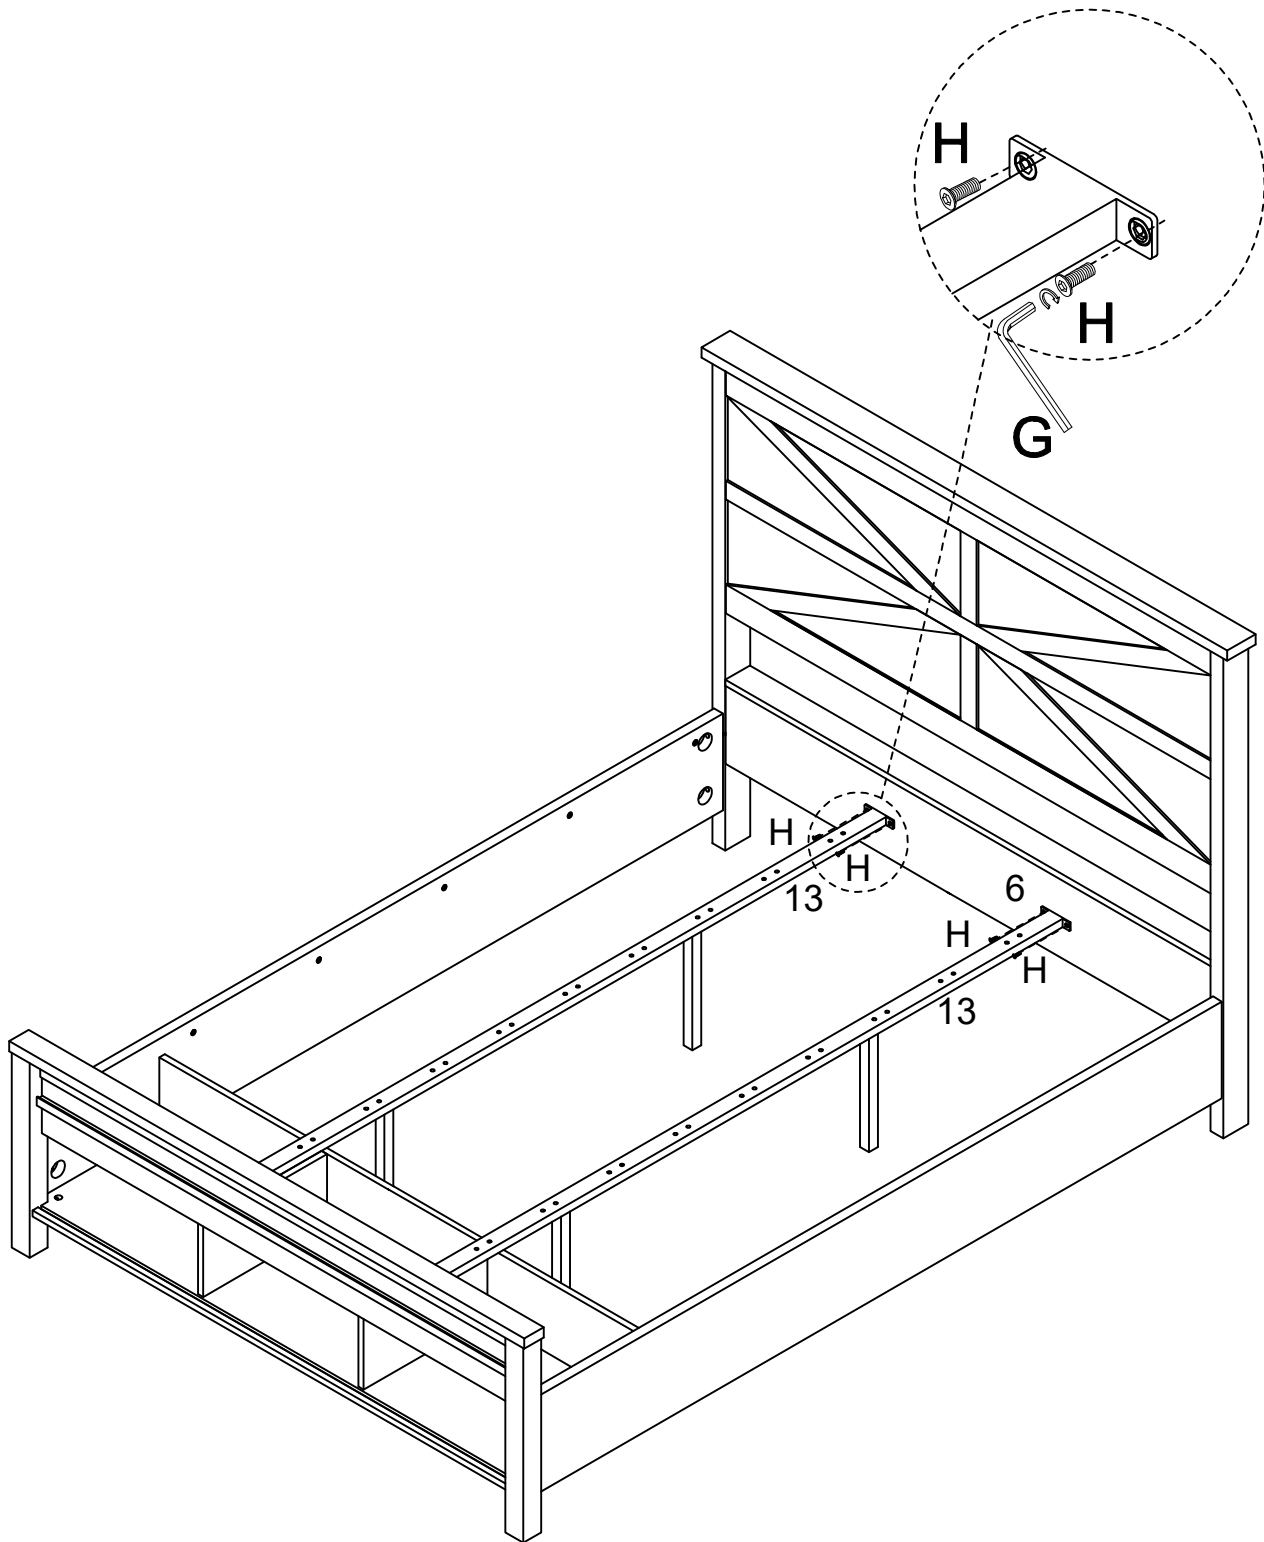




CAUTION: Heavy! You may need assistance with this step.



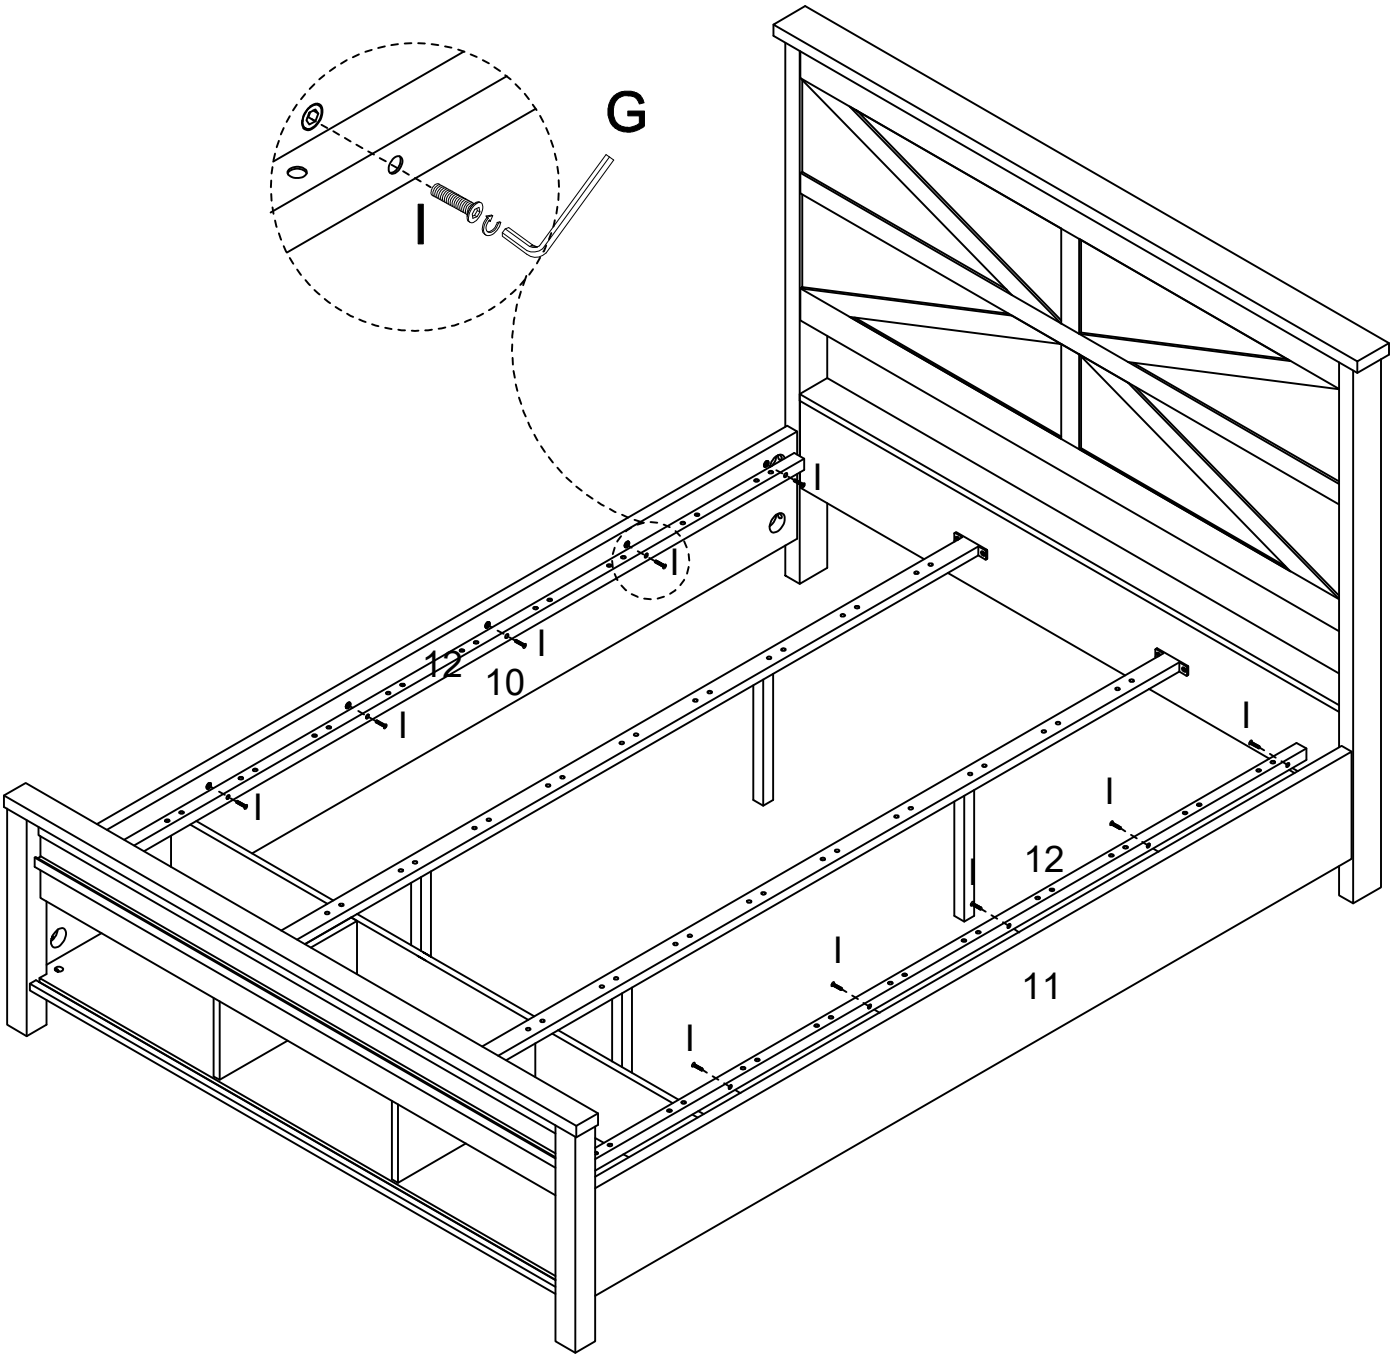
J	N	M	L	K
X1	X1	X4	X4	X4



Step 25



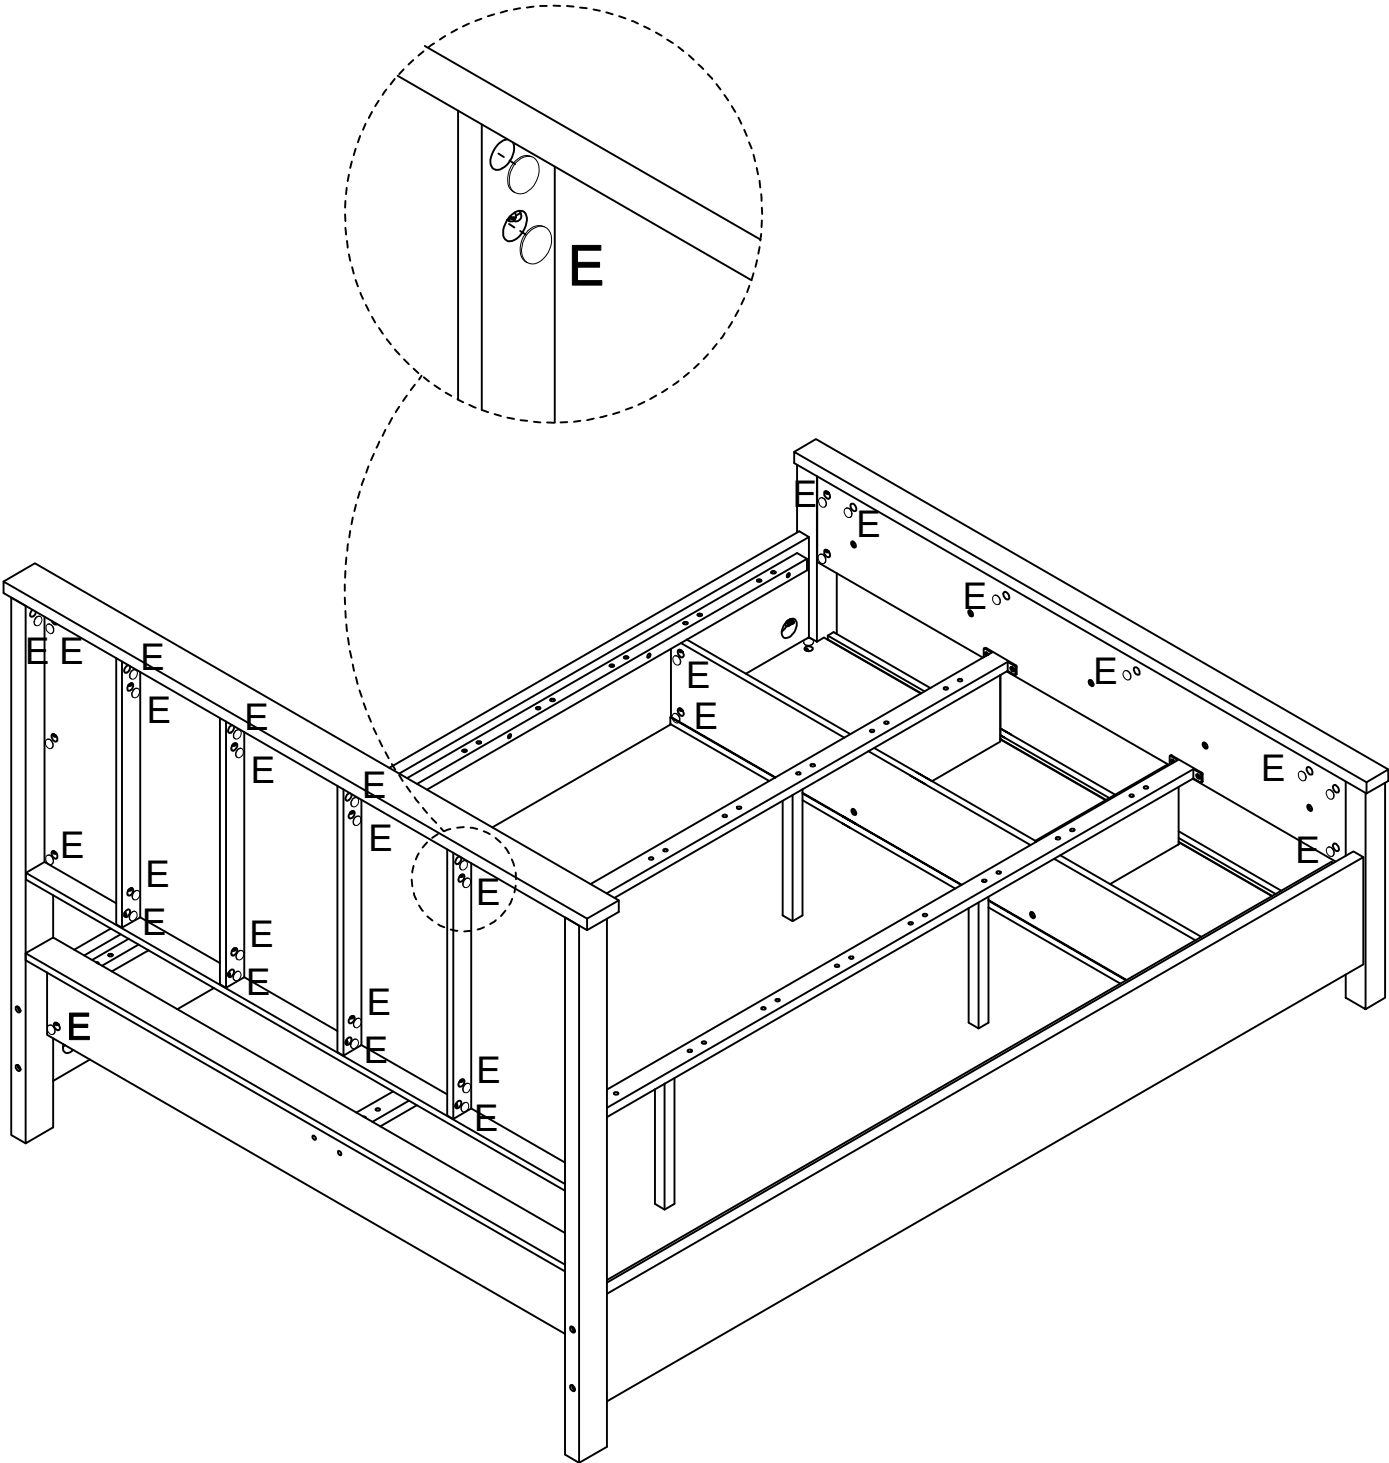
G	H
	
X1	X4

Step 26



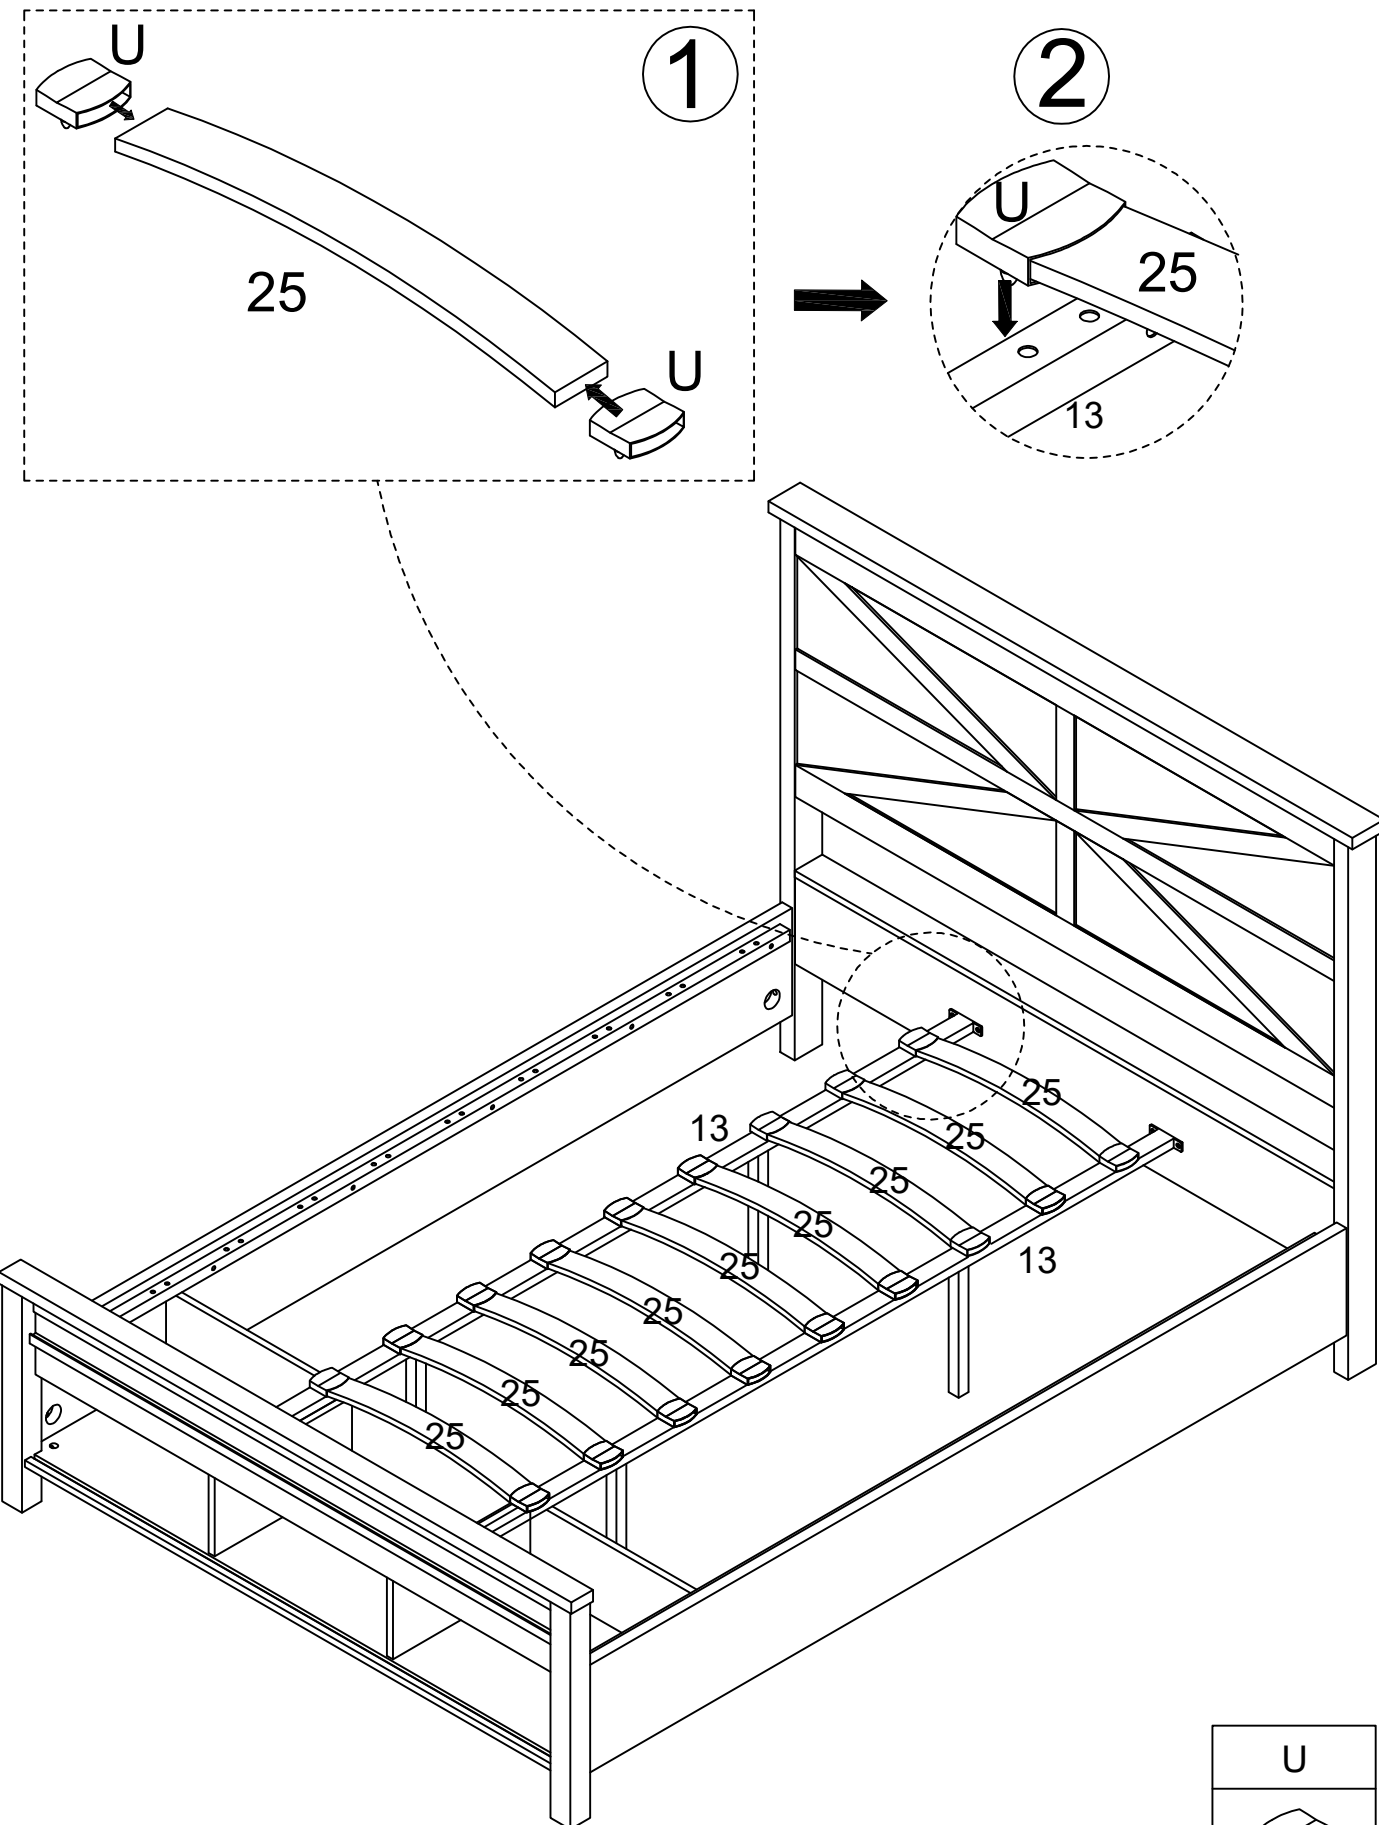
G	I
	
X1	X12


Step 27



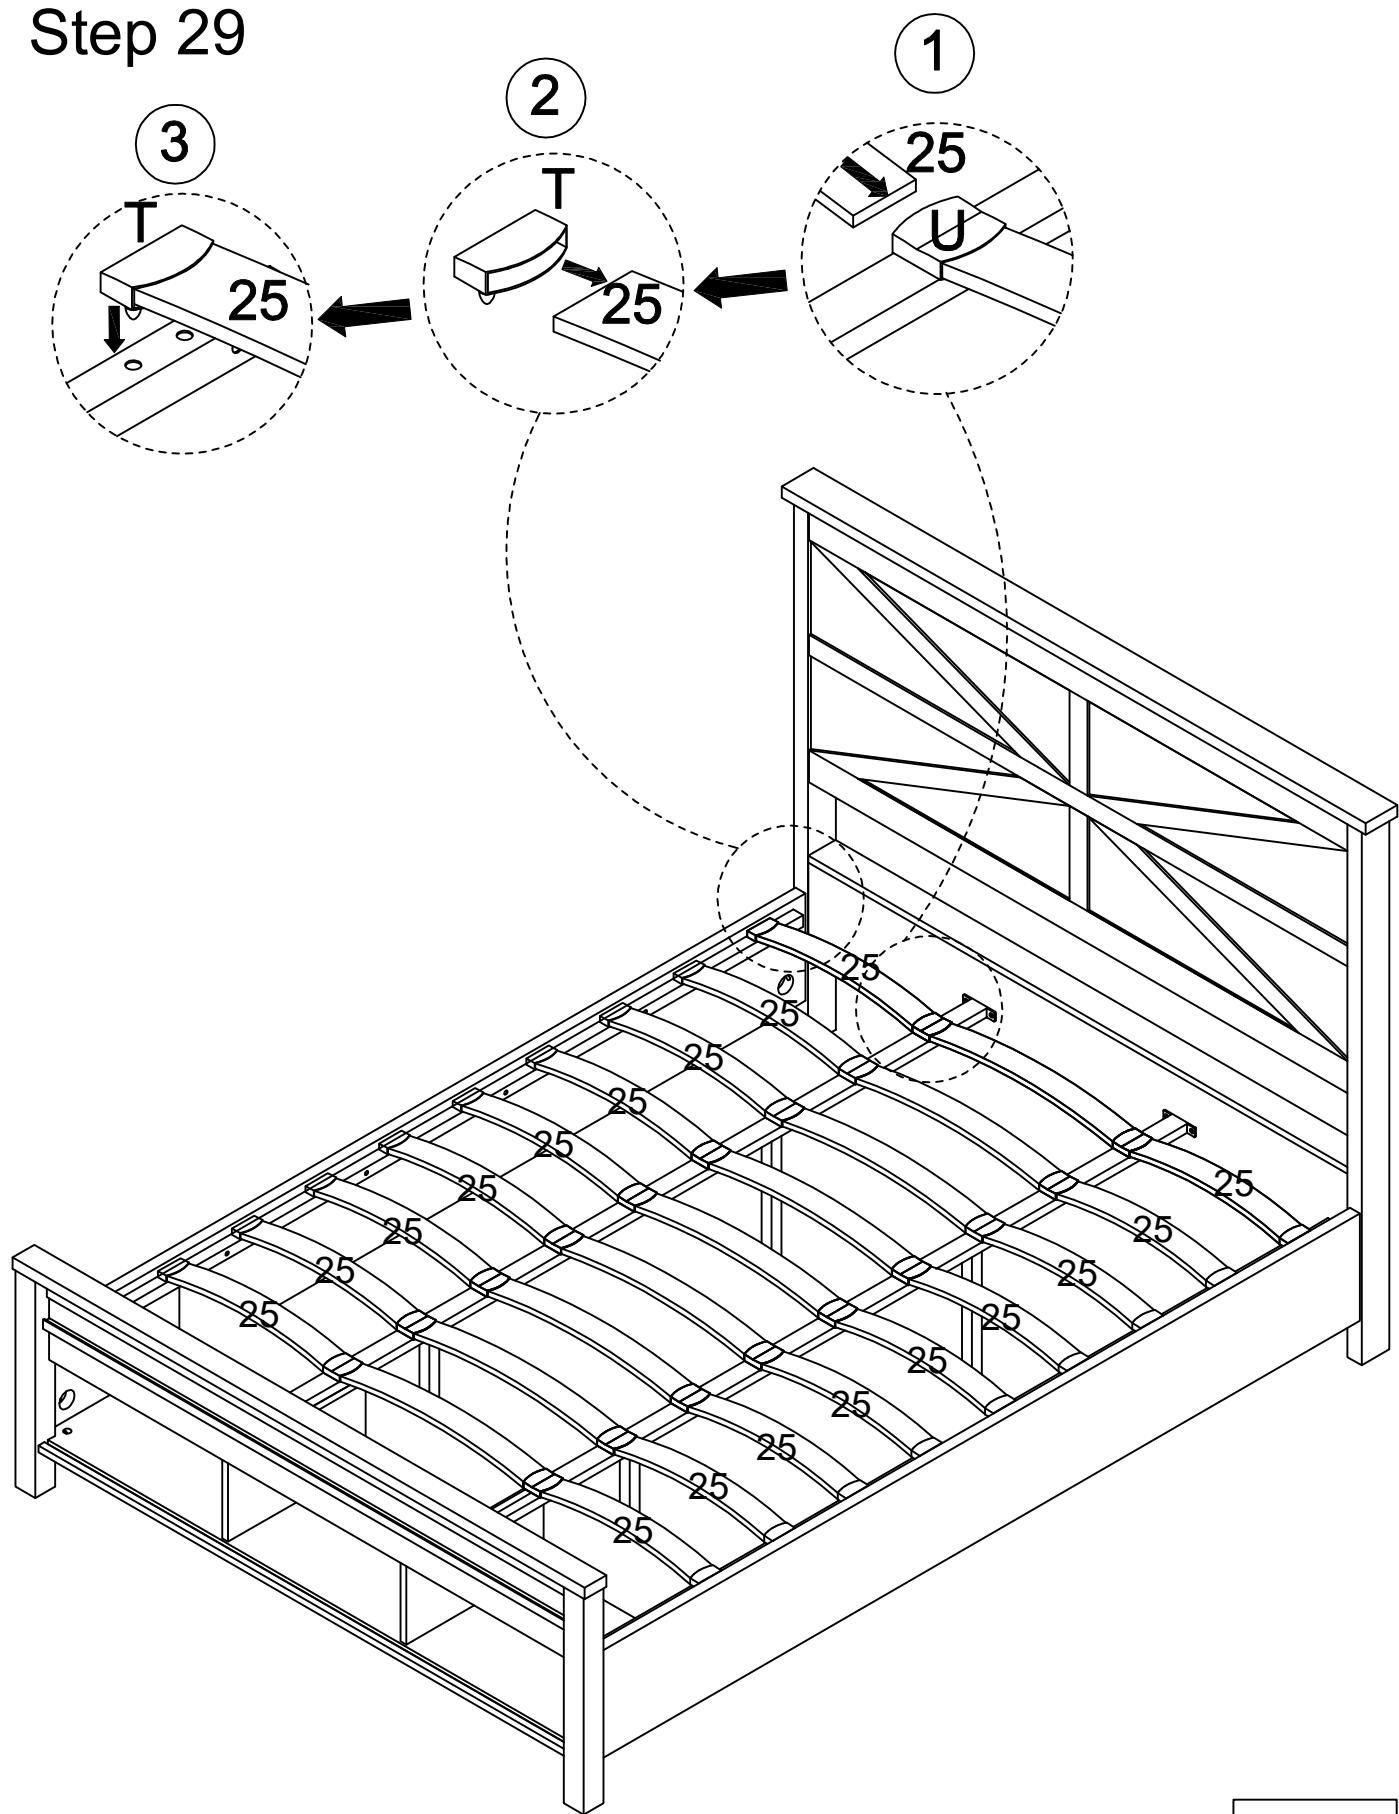
E
O
X62


Step 28



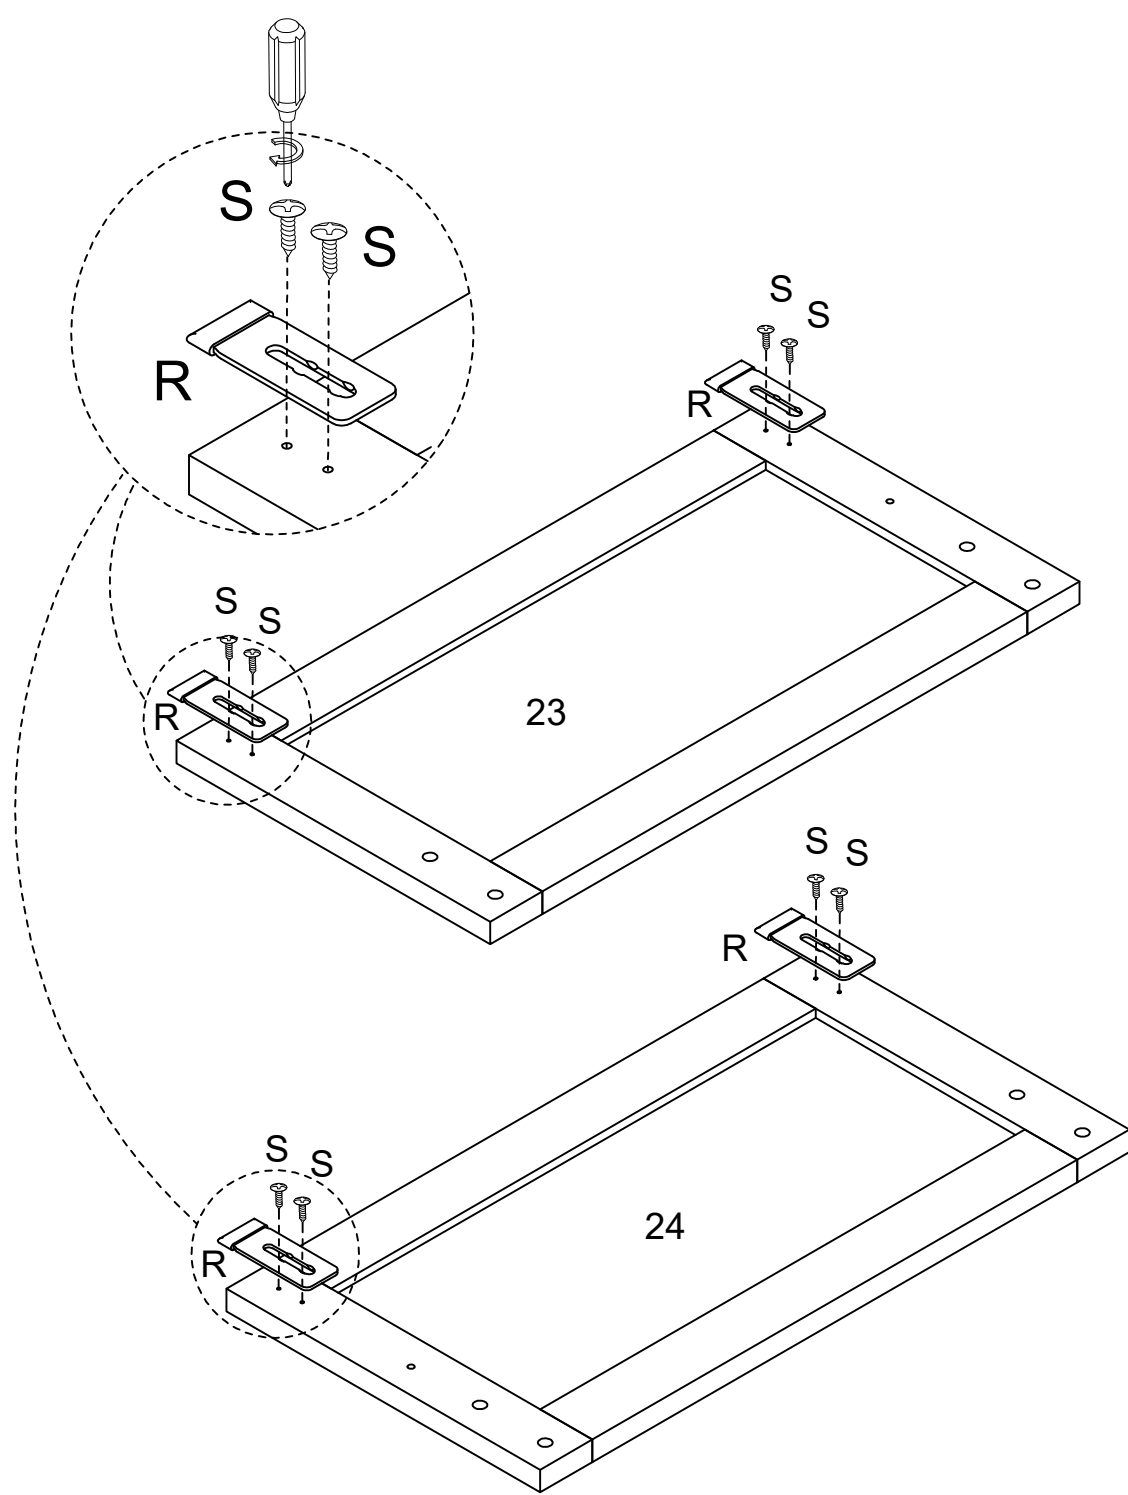
U

X20



Step 29



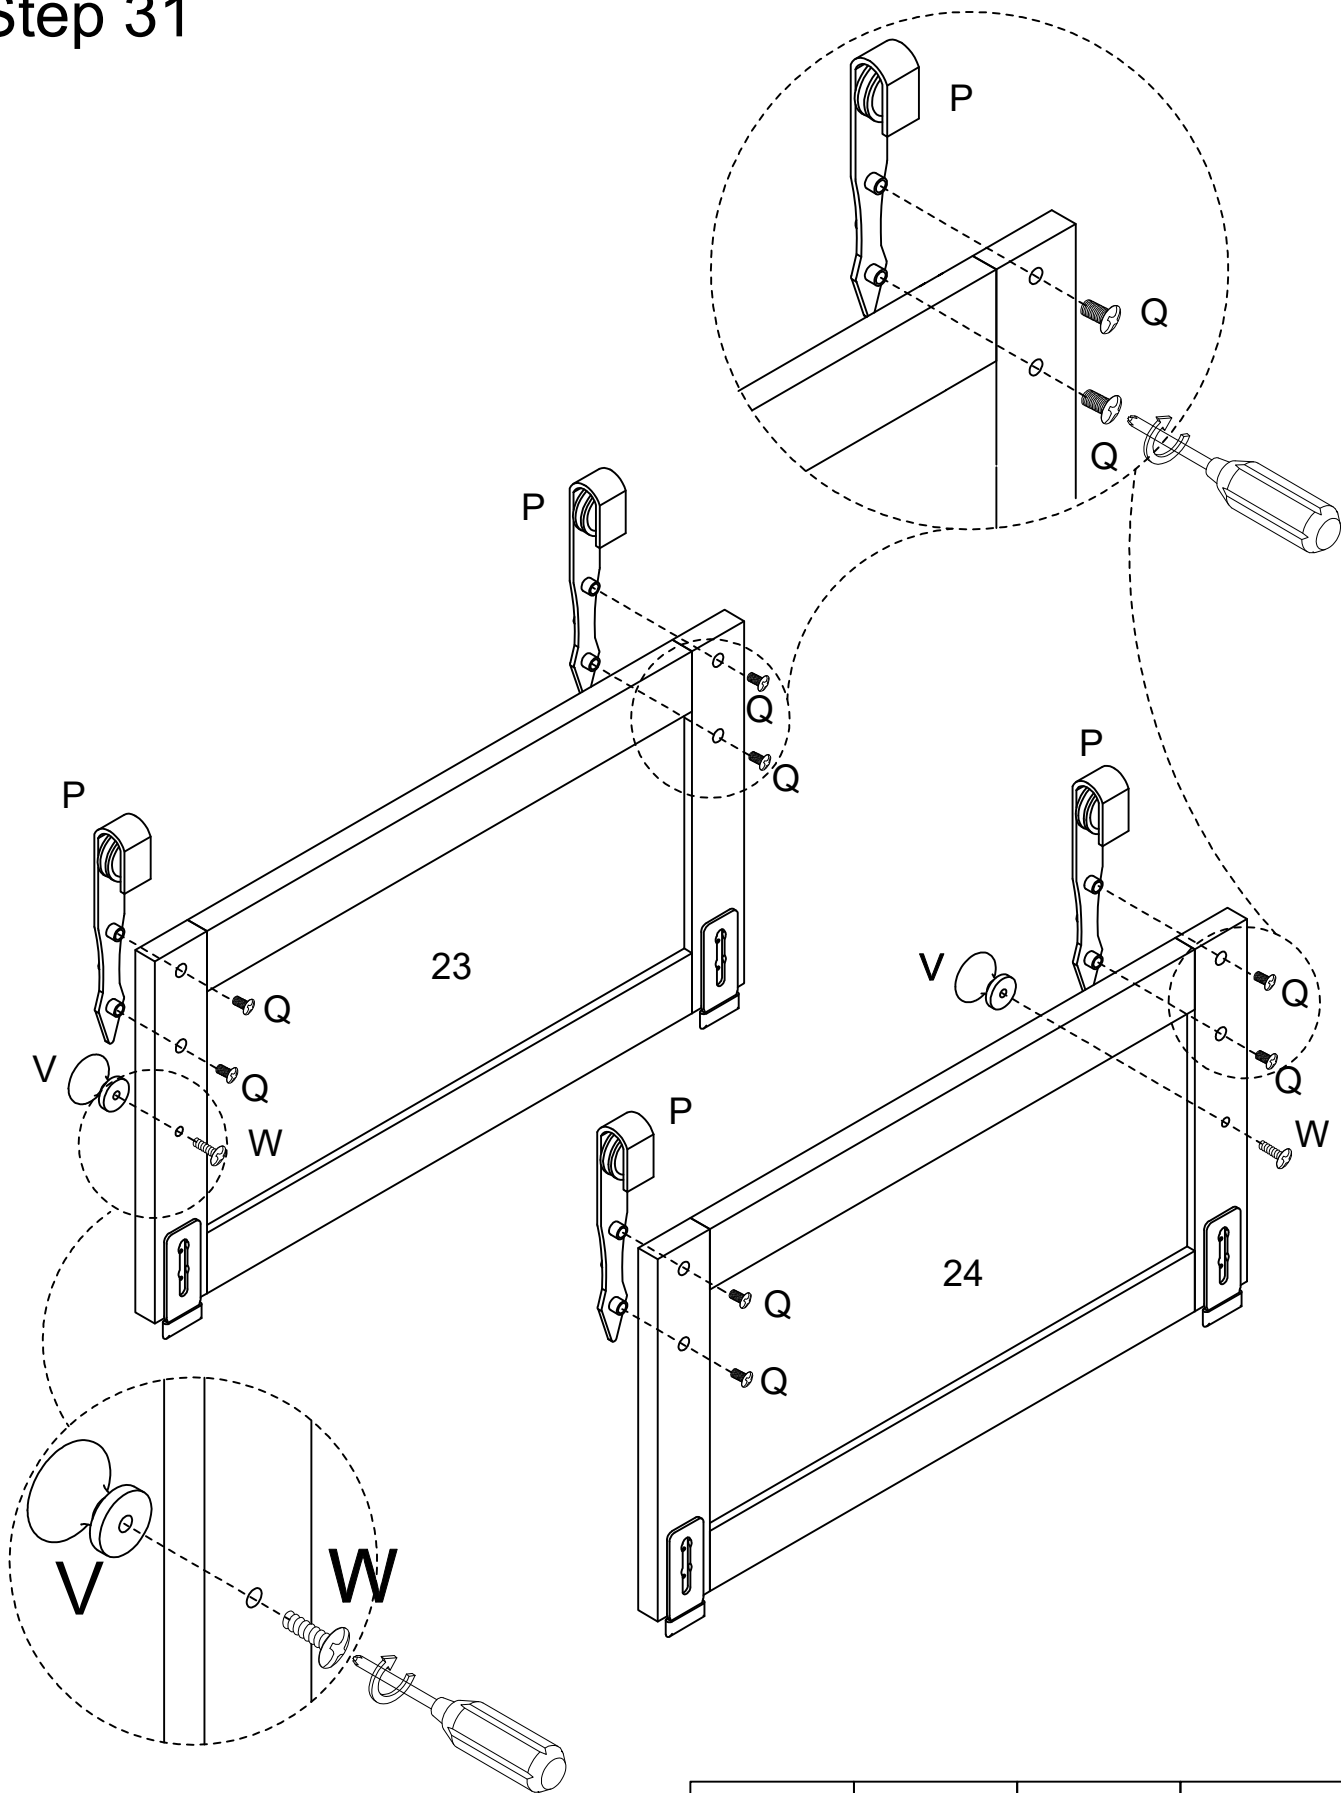
T

X20





Step 30



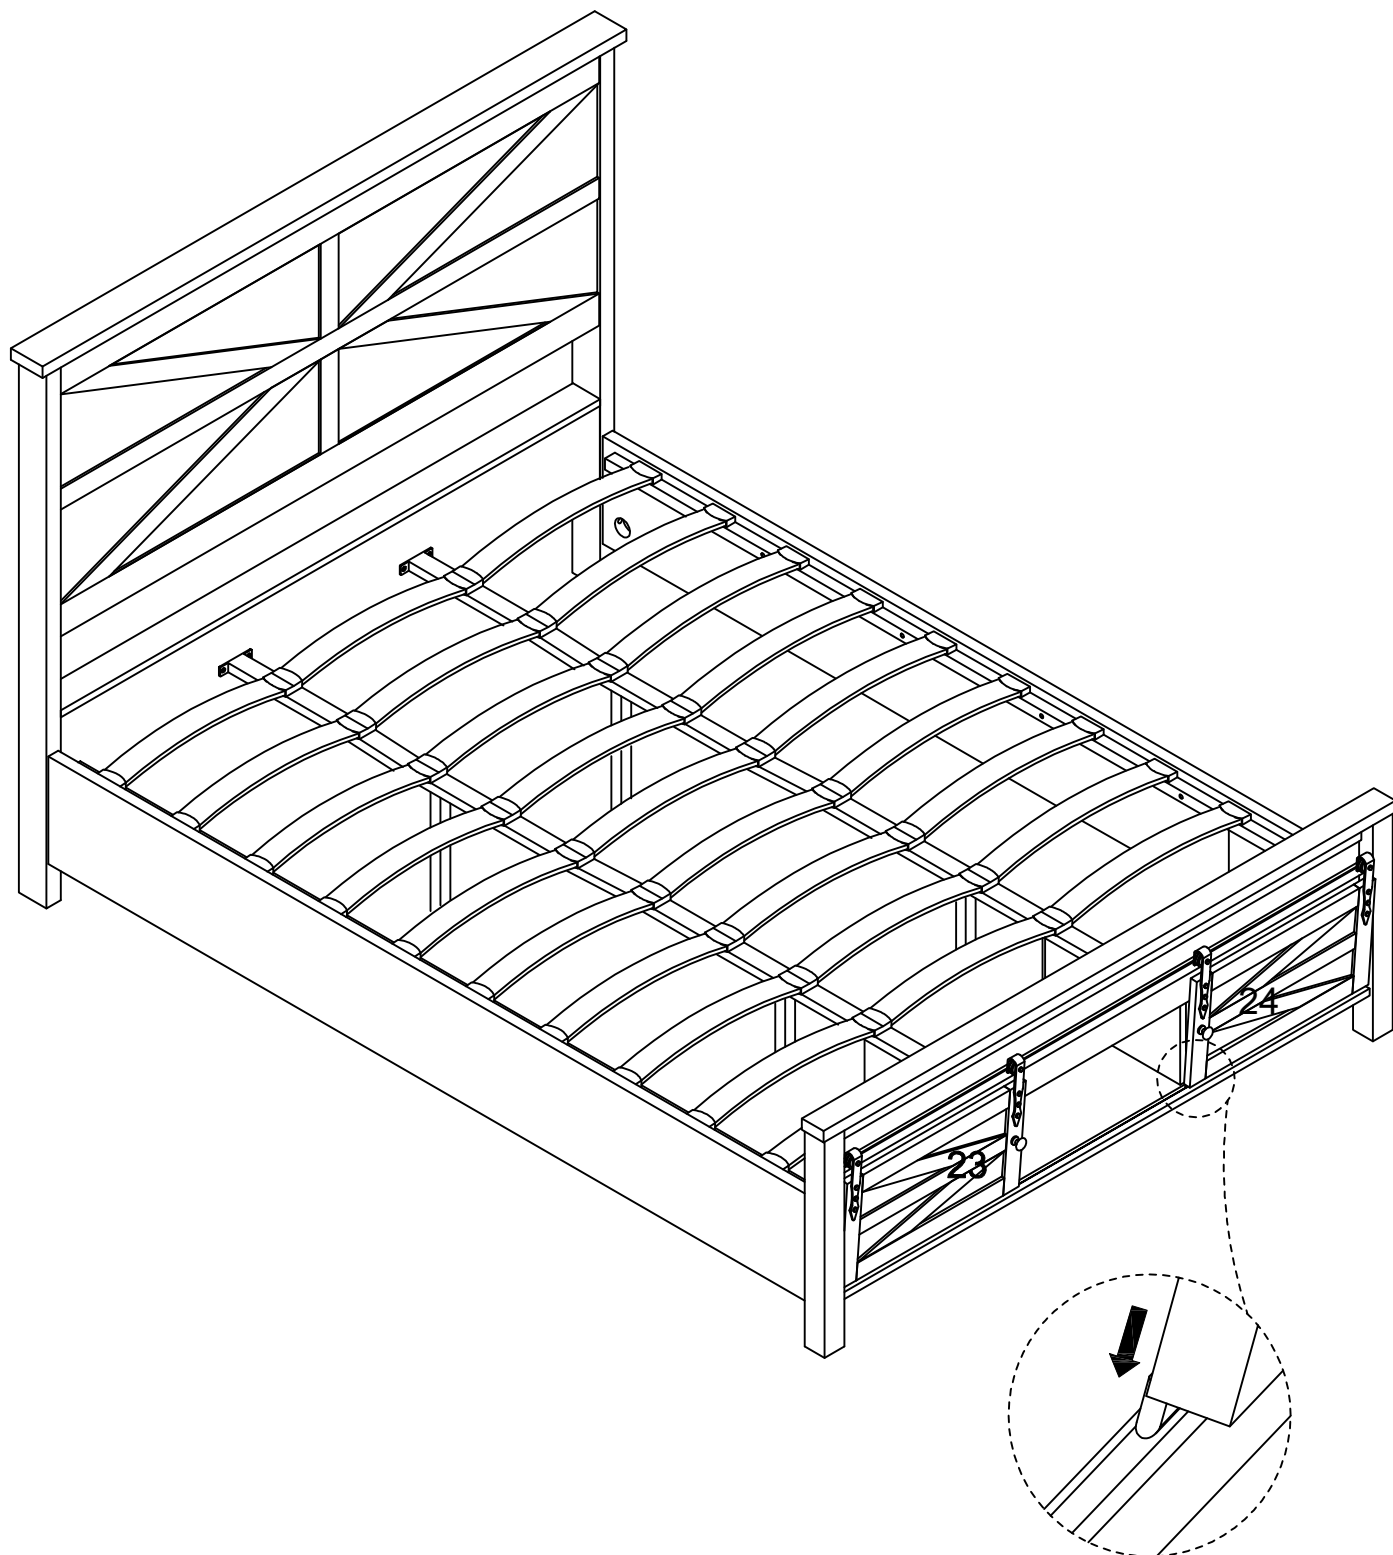
R	S
	
X4	X8

Step 31

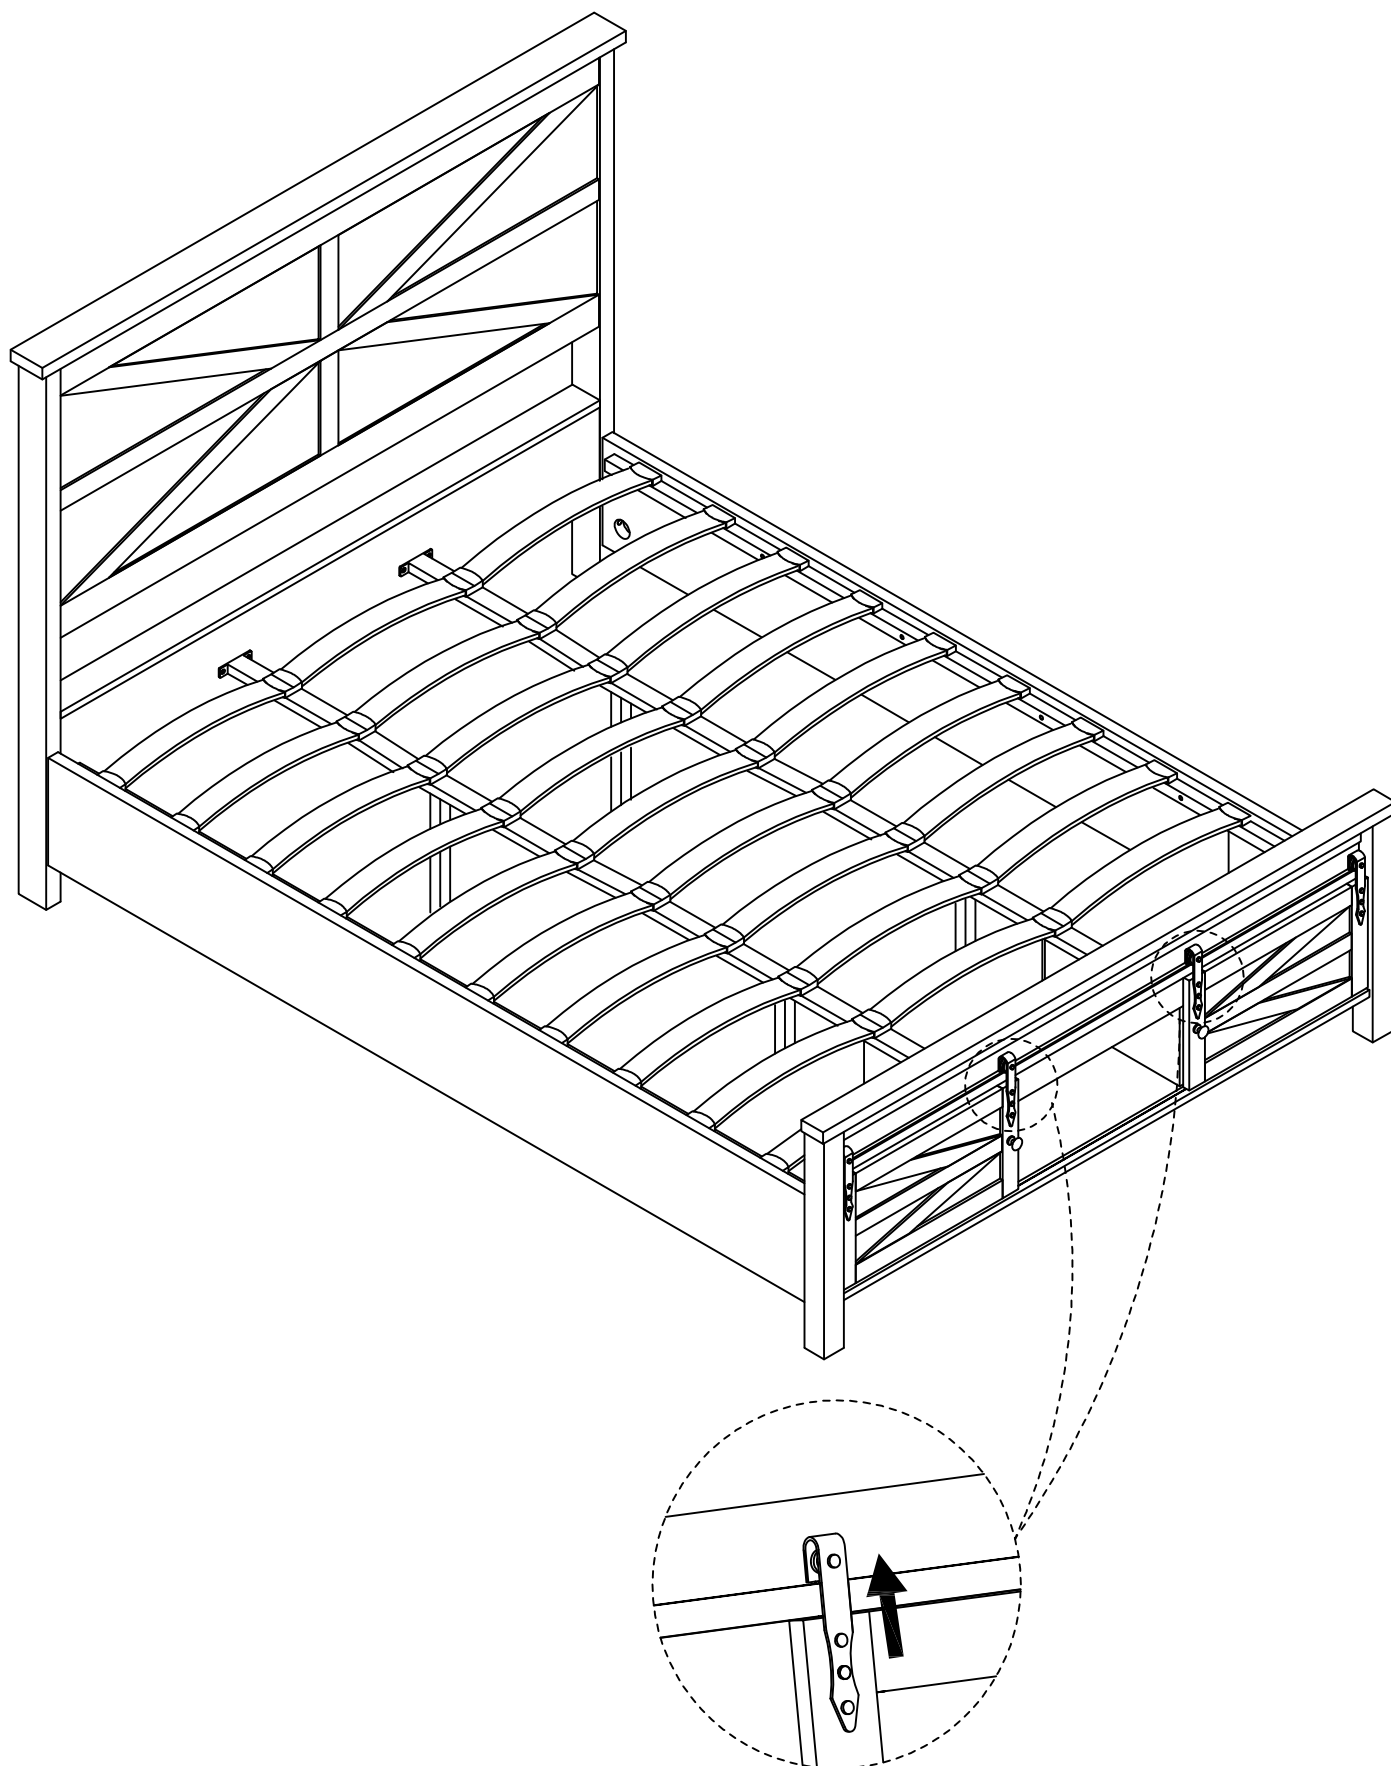


W	V	Q	P
			
X2	X2	X8	X4

Step32



Step 33



Step 34

