

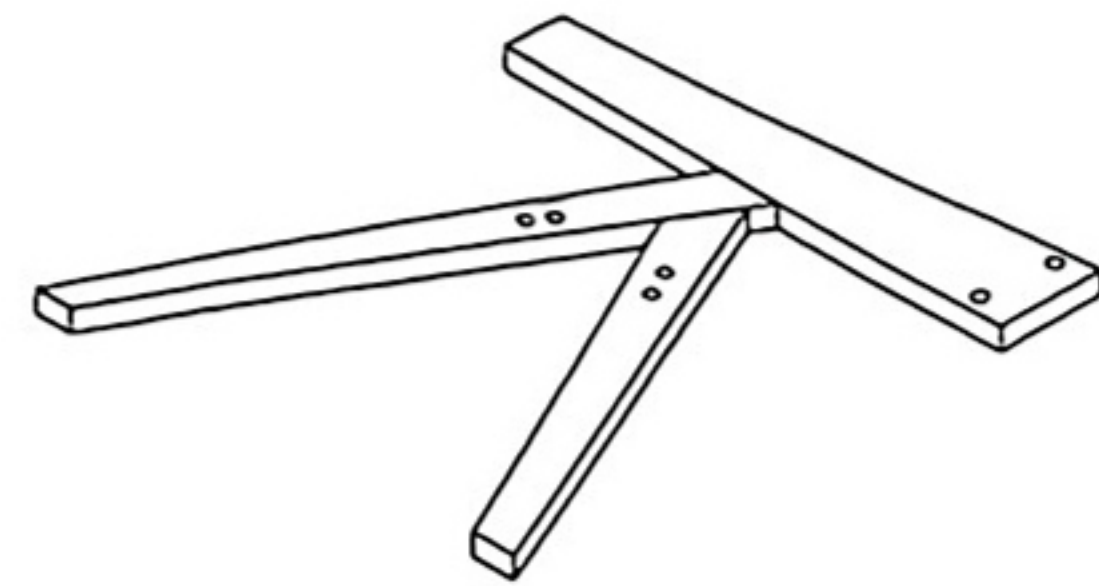



Installation Instructions

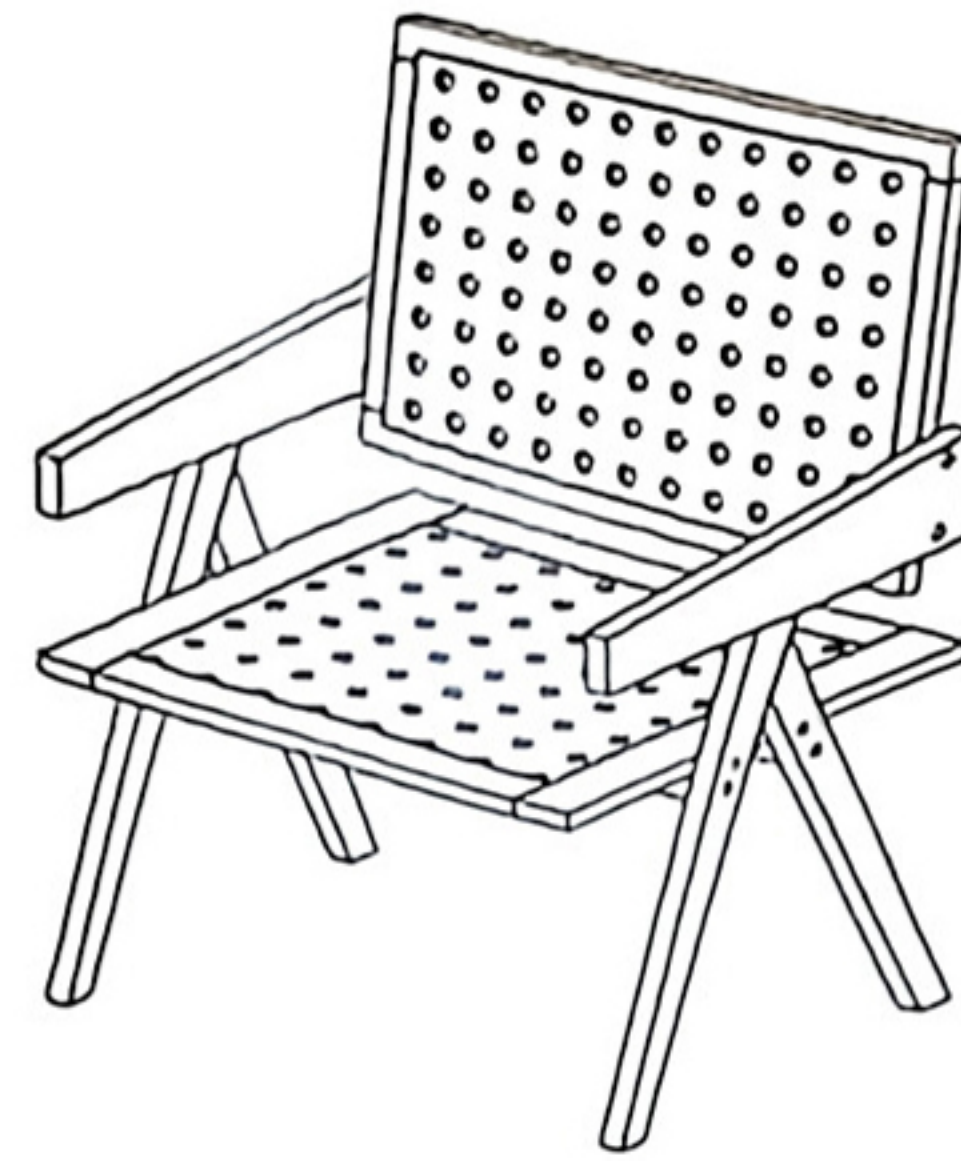

Ax2

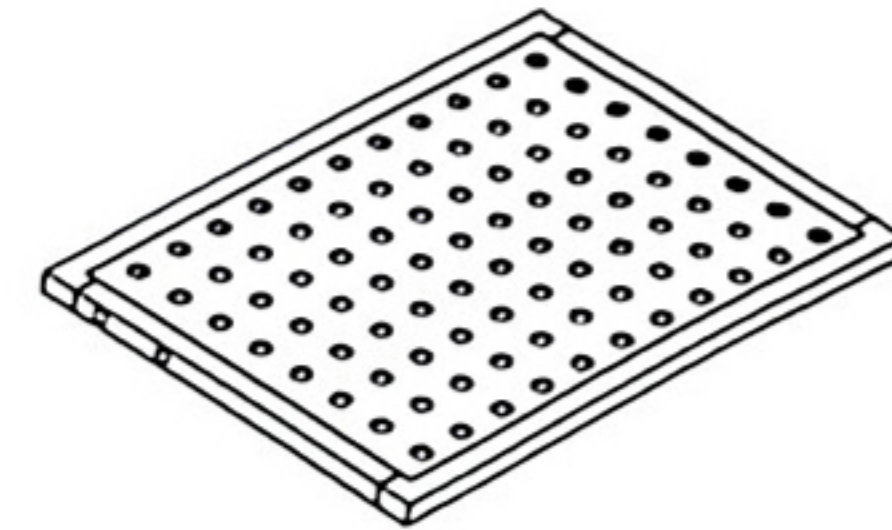


Bx1

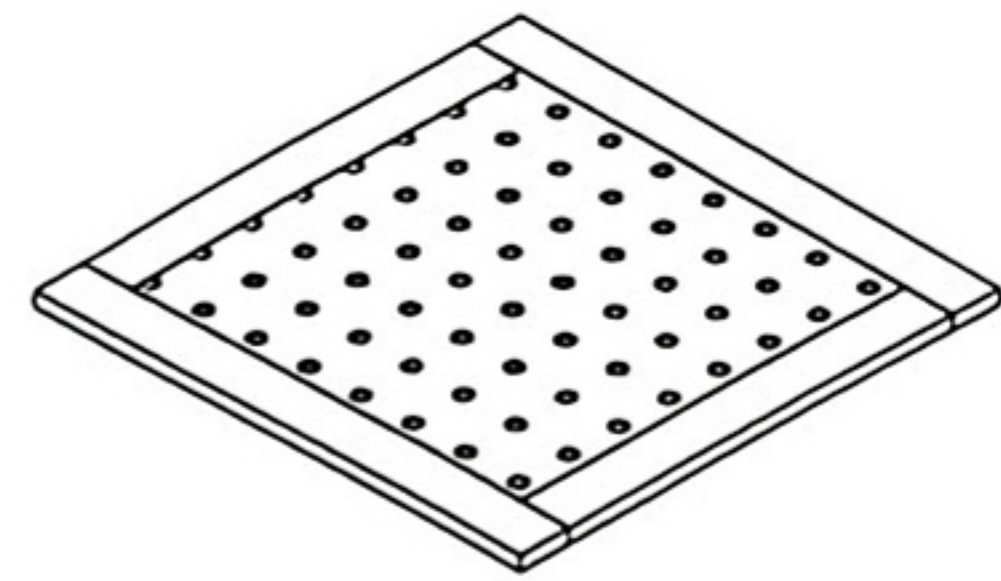

Cx1



Ex1

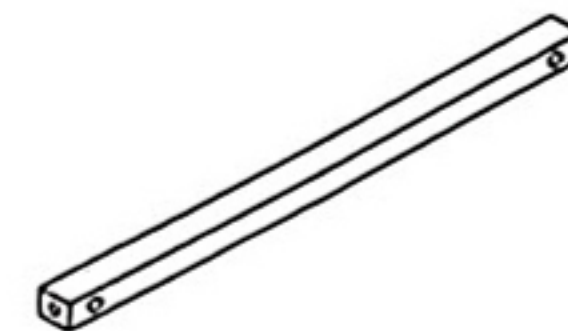

Dx2



① long screw x4




② Short screw x8



③ Nut x4

1

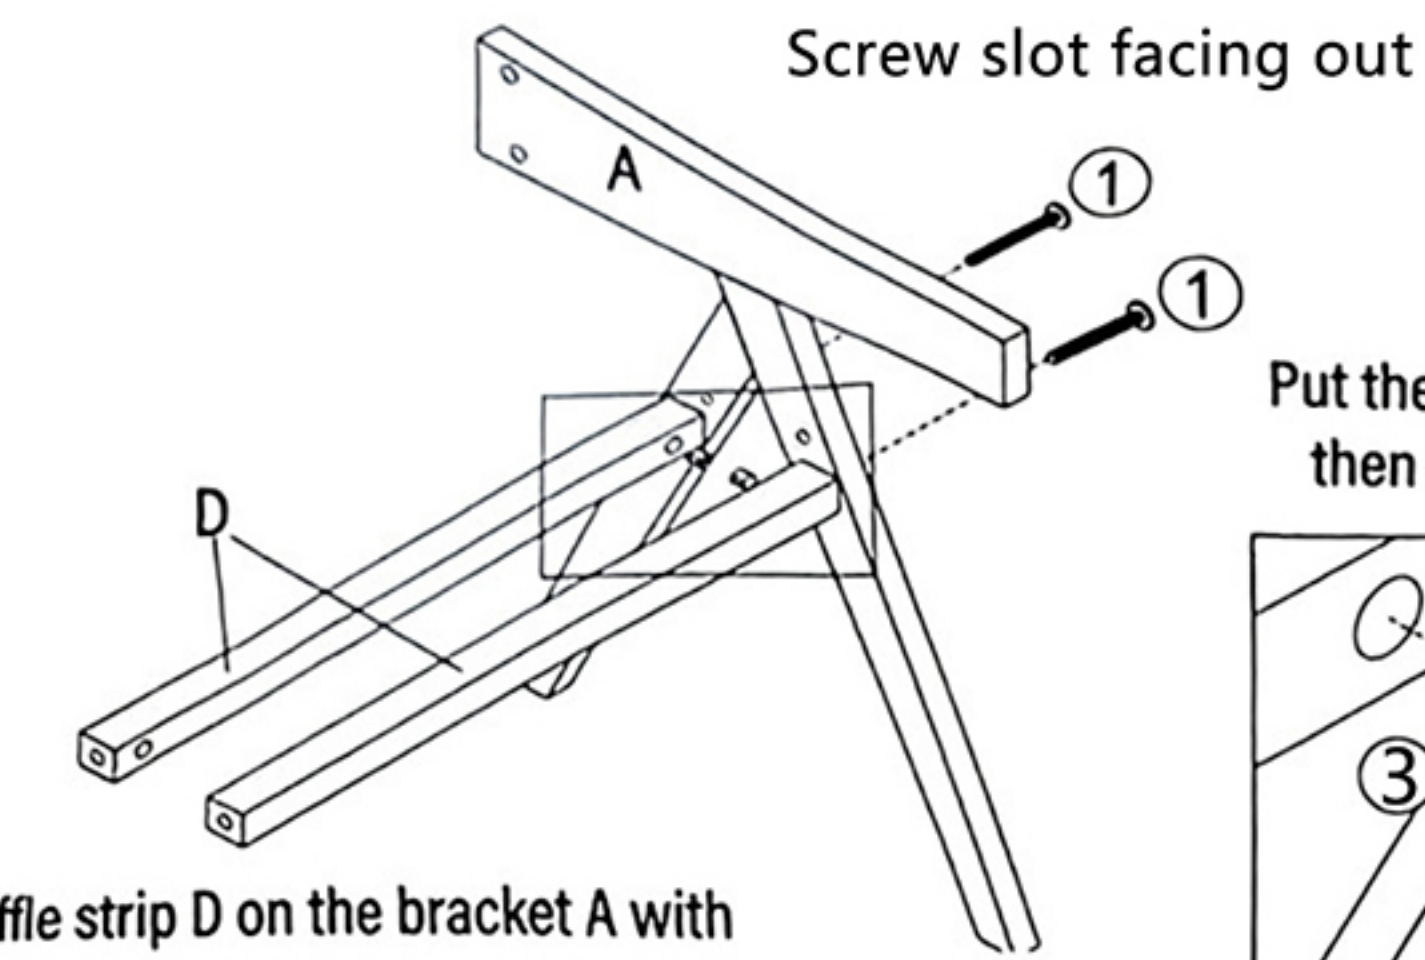

Fix the baffle strip D on the bracket A with the 1 # long screw and 3 # nut



Ax1



Dx2




①x2




③x2

Put the nut 3 into the hole first, and then screw in the 1 # long screw

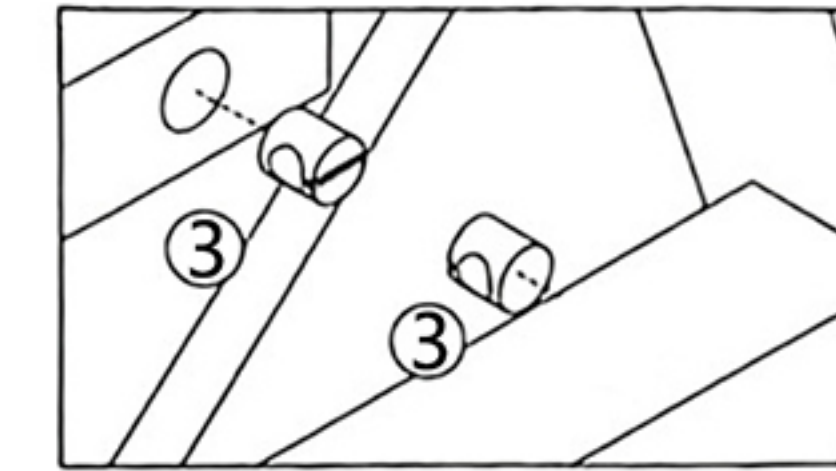

2

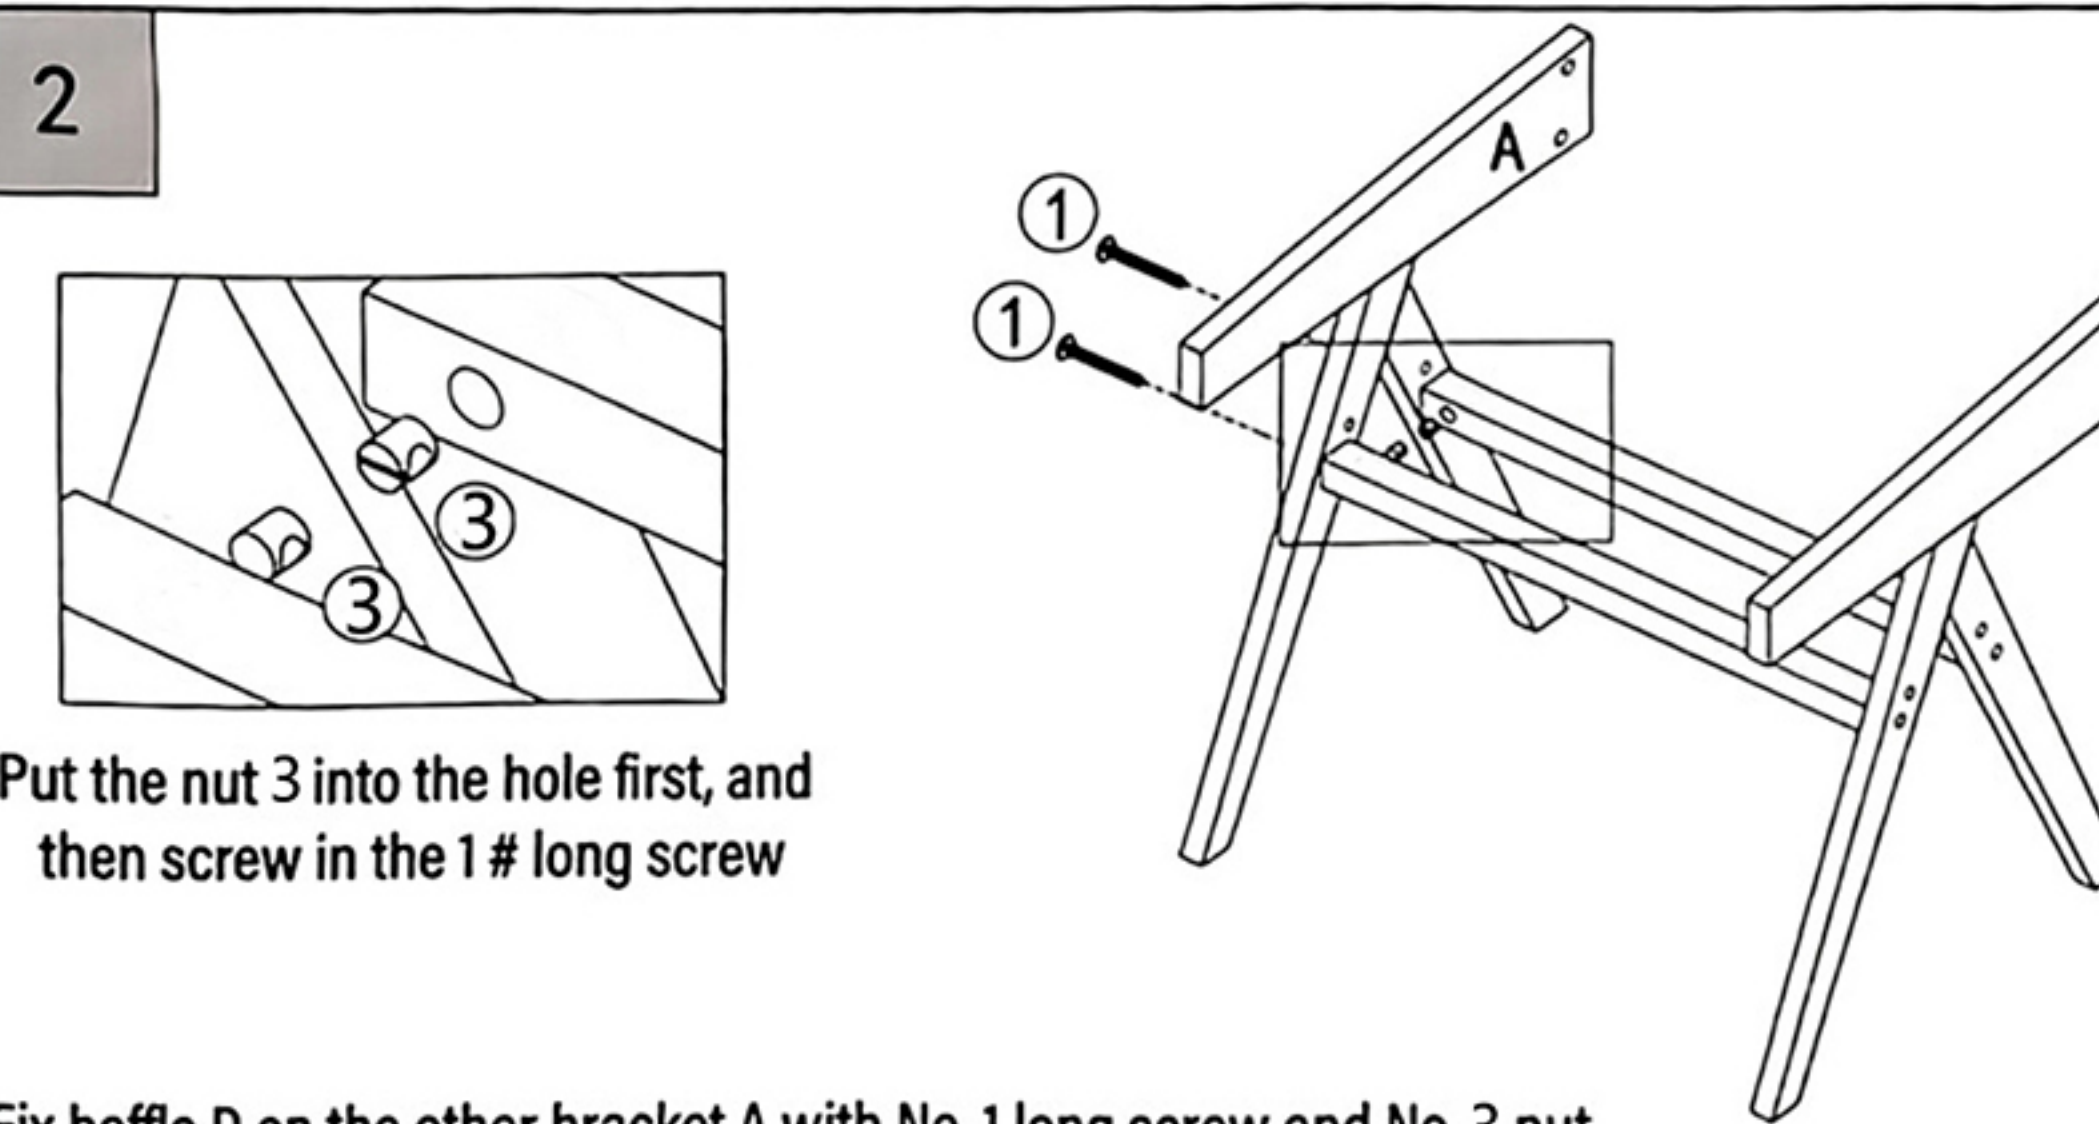

Put the nut 3 into the hole first, and then screw in the 1 # long screw

Fix baffle D on the other bracket A with No. 1 long screw and No. 3 nut



Ax1




①x2




③x2

3

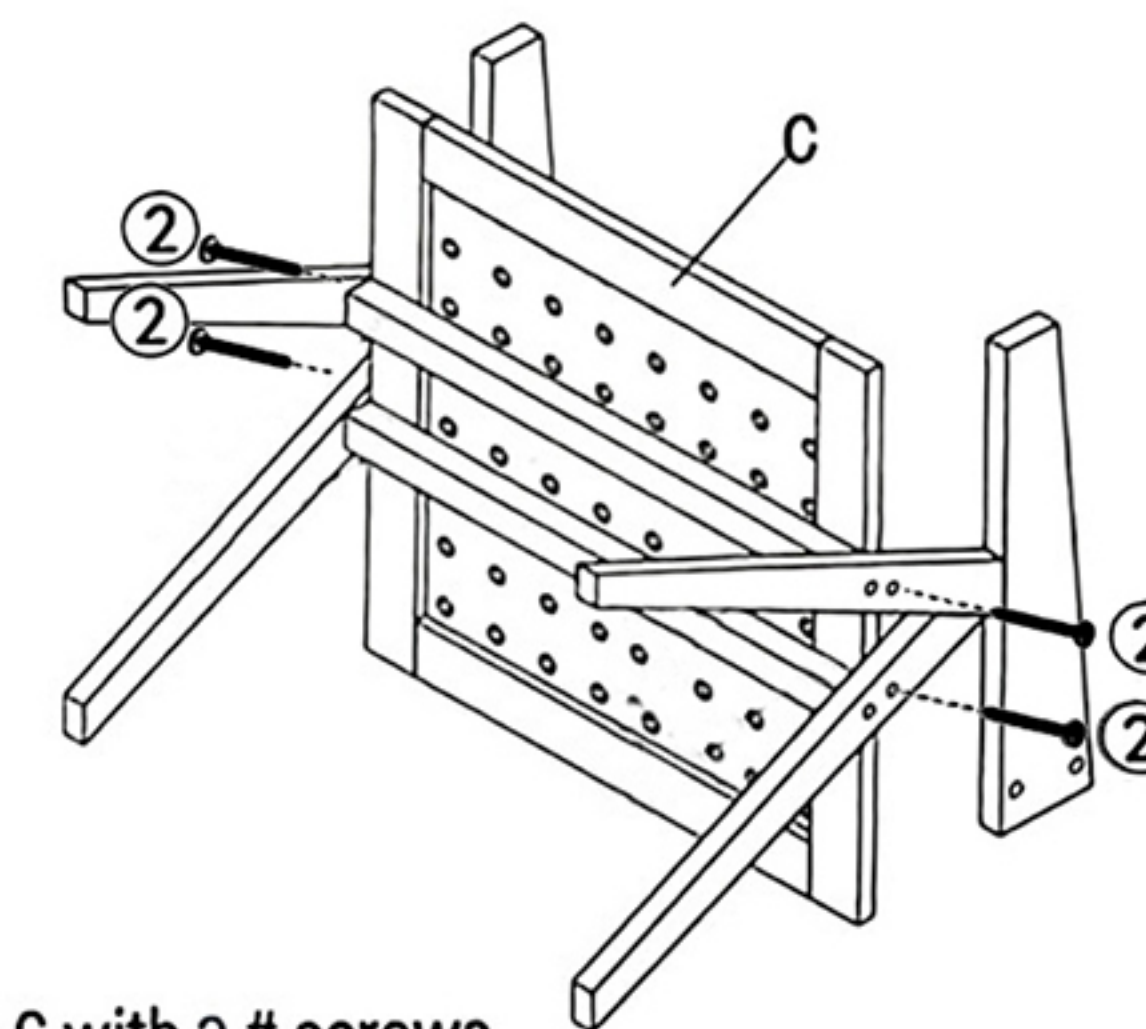

Fix the stool surface C with 2 # screws

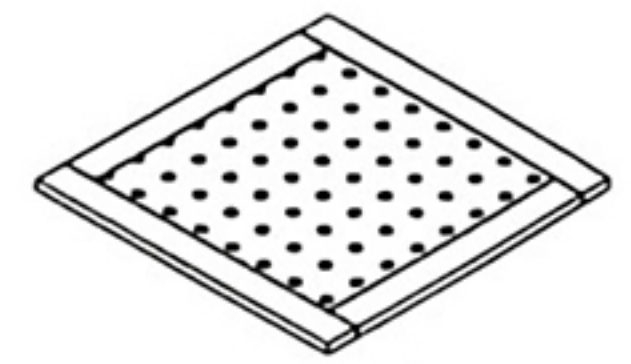


Cx1




②x4

4

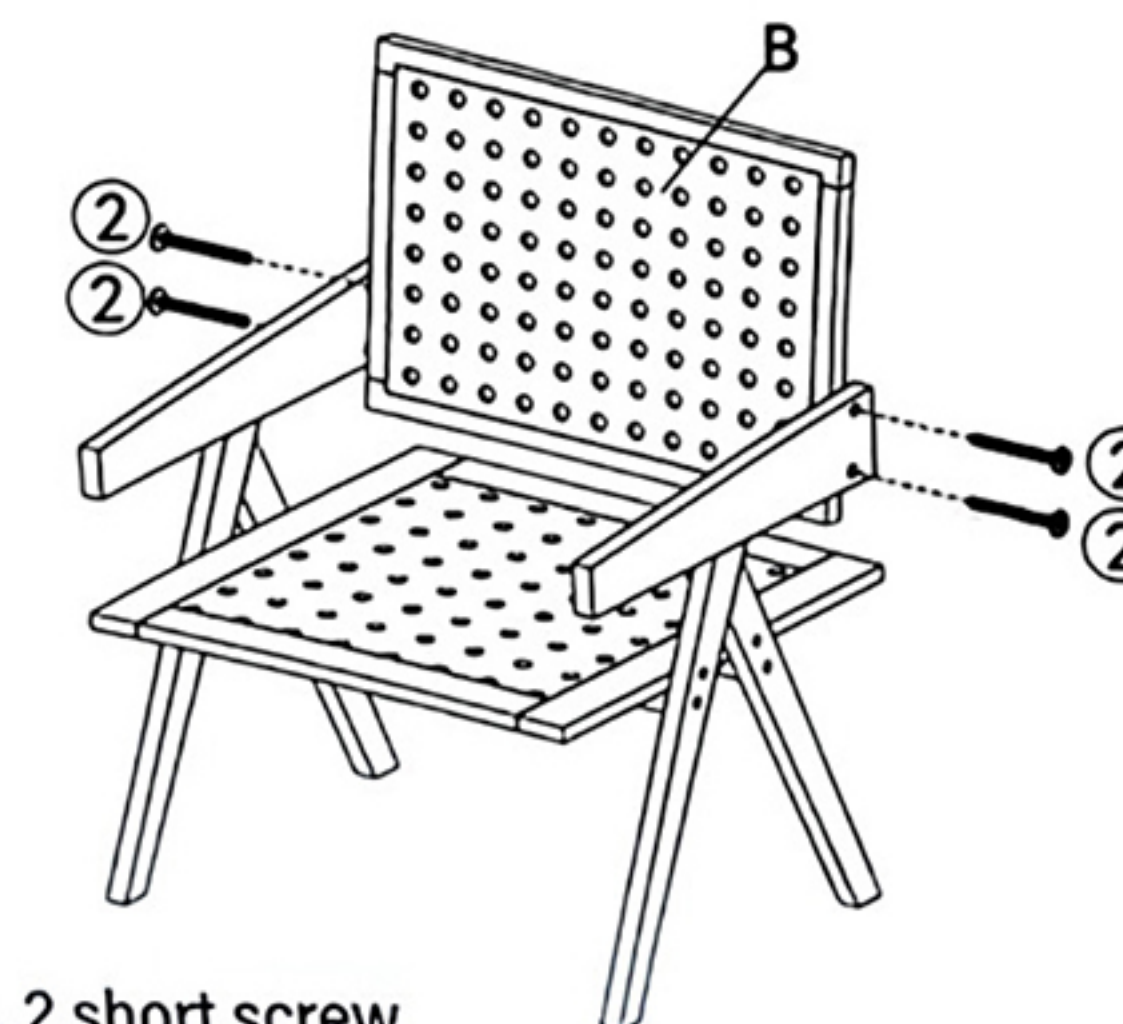

Fix backrest B with No. 2 short screw

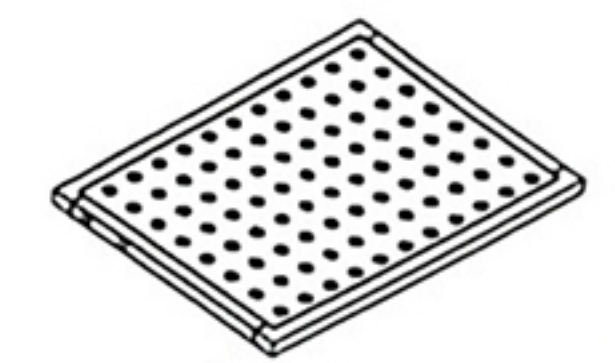

Bx1



②x4