# **Assembly Instructions**


#### Caution: You must read this before you proceed

#### **Care & Maintenance**



Not for commercial use. For residential use only.







• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.





 Stains may be removed with mild soap solution and damp cloth.




Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

## Queen Bed

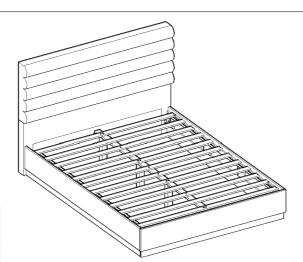









NEVER place bed near windows where cords from blinds or drapes may strangle a child.

NEVER suspend strings over bed.

NEVER place items with a string,cord,or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.

ALWAYS follow assembly instructions.



Not intended for children under the age of six.INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

NOTE: This Bed is NOT a TOY.

Keep your child/children at bay during the assembley process.


The BED is HEAVY.

To prevent injury to yourself or damage to the product a mininium of two adults are required whenever moving or lifting it.

## Parts List Label **QTY Picture** Description Α Headboard 1 В 1 **Headboard Bottom** C **Headboard Support** 3 D 1 Side Panel - L E 1 Side Panel - R F Footboard 1 G Center Rail 1

Н		Center Leg	4
I		Slat	12 (2set)
Hardware			
Label	Picture	Description	QTY
1		M4 Allen Wrench	1
2		M5 Allen Wrench	1
3		Bolt (M6x40mm)	20
4		Bolt (M6x50mm)	9
5		Screw (M4x25mm)	17
6		Screw (M4x20mm)	7
7	9	Spring Washer (M6)	20
8		Flat Washer (M6)	20
9		Screwdriver (Not provided)	1

# Assembly Preparation Before Begining Assembly:

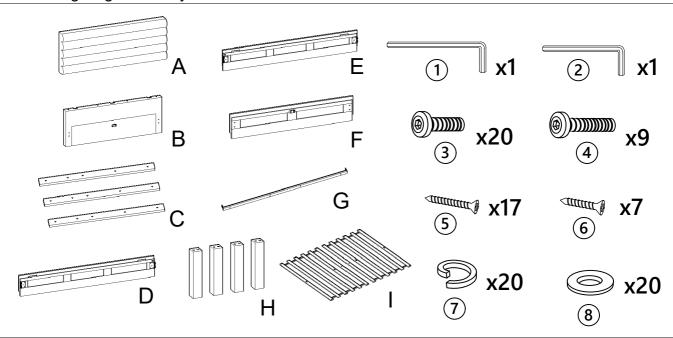



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




· Save all packaging until finished-

# Assembly Steps

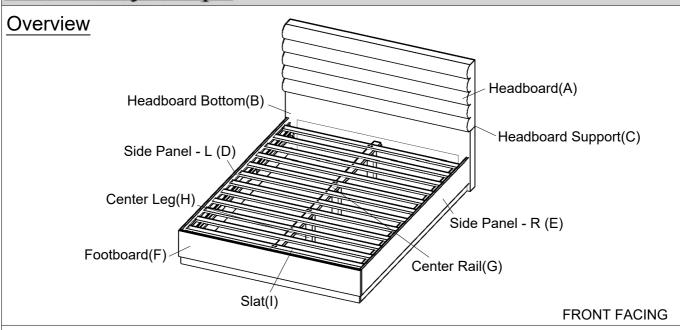


This Bed has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

## Step 1

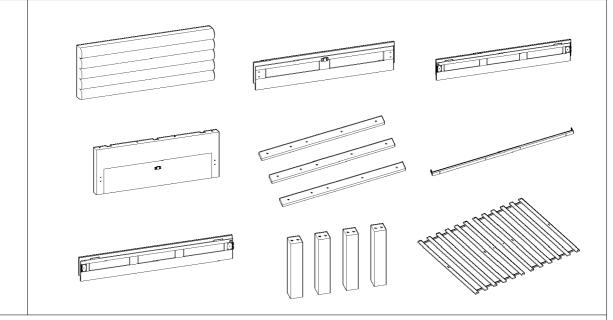

Unpack and place all parts on a clean, non-marring surface.

### Step 2

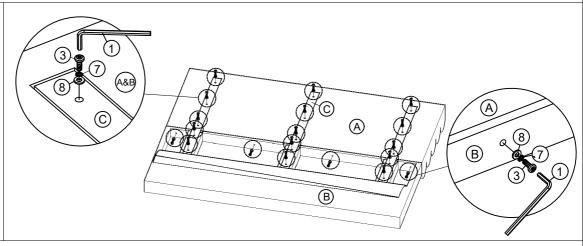


Place the Headboard (A), Headboard Bottom (B) with its inner side face skywards onto a clean, soft surface to avoid any scratches or damages to the product.

Align the Mounting Position of Headboard Support (C) into the Mounting Position of Headboard (A) and Headboard Bottom (B) as shown above.

Then, affix the Headboard Support (C) with Headboard (A) and Headboard Bottom (B) by using Bolts ( $\Im$ ), Spring Washers (7), Flat Washers ( $\Re$ ) with M4 Allen Wrench (1).

DO NOT FULLY TIGHTHEN BOLTS IN ONE GO, TIGHTEN THE BOLTS AFTER ALL Headboard Support (C) ARE ATTACHED.

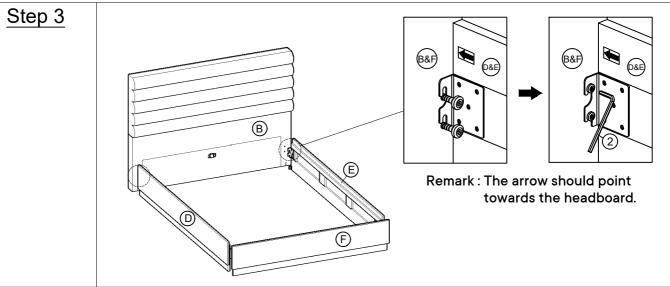


With the help from you partner, stand the assembled Headboard Bottom (B) standing as shown in picture above.

Lightly loose the bolts on headboard bottom(B) and Footboard (F), then attach the Side Panel L&R (D and E) to the assembled headboard bottom(B) and Footboard (F), tighten the bolts using with M5 Allen Wrench(②).


#### DO NOT FULLY TIGHTHEN BOLTS.

#### Step 4

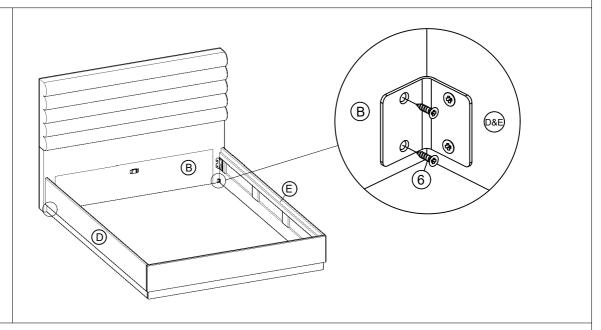


Screw up the iron panel on Side Panel L&R (D and E) to the bottom of headboard Bottom(B) using Screws (⑥) and Screwdriver (Not Provided).

### Step 5

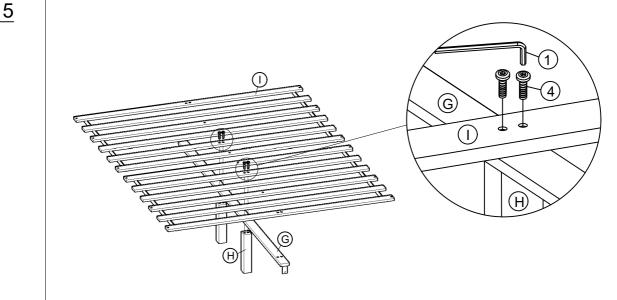

Align the Mounting Position on the Center Rail (G) to the Center Leg (H) and the Slat (I) Attach the Slat (I) and the Center Rail (G) to 2pcs middle Center Leg(H) by using Bolts (4) with M4 Allen Wrench(1)

## Step 6

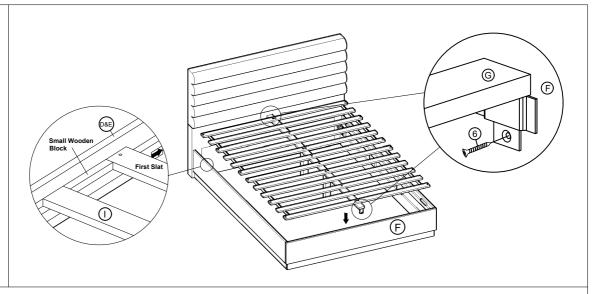


With the help from you partner, place the assembled Slats in the middle of the bed frame. Attention: When placing the Slats (I), please place the top 2pcs slats embed on the small wooden block in two ends of Side Panel L&R (D and E) as above picture shown, it will has the best performance of the slats.

Then, affix the Center Rail (G) to the headboard Bottom(B) and Footboard (F) by using Screws (⑥) and Screwdriver (Not Provided).


#### DO NOT FULLY TIGHTHEN SCREW.

#### Step 7

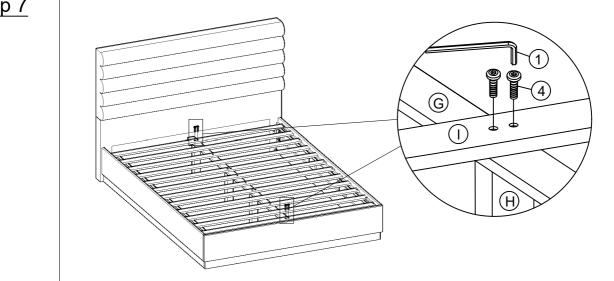


Attach the balance 2pcs Center Leg (H) to Assembled Slat (I) and the Center Rail (G) and by using Bolts (4), with M4 Allen Wrench(1).



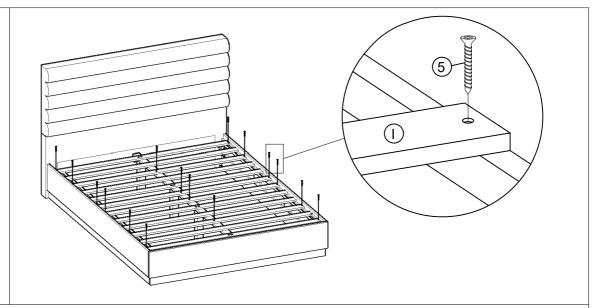

Attach all slats (I) to the rail on Side Panel L&R (D and E) by using Screws (⑤) and Screwdriver (Not Provided).



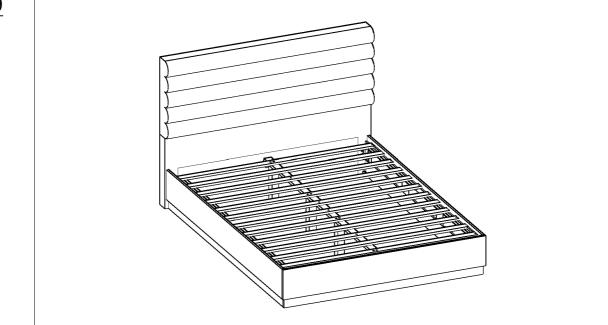

Place the Bed on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Don't push too hard, shake on the bed.

This would help to align all the parts at all the joint areas.

**CAUTION 1: When tightening these screws, tighten sequentially.** 

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.DO NOT tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

The bed is ready to be used.

Caution 2: This bed can only be used on a flat, level surface.