
BRON 36in

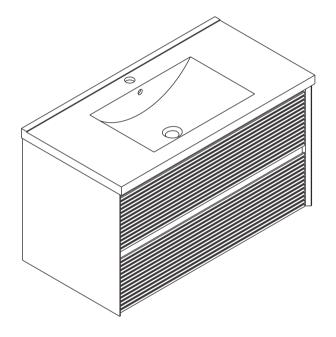

Bathroom Vanity

Notice:

- 1.Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.







Put a carpet on the floor before unpacking




Estimate installation time: 30 minutes

Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
А		x1	3		x4
В		x1	4		x 6
1		x4			
2		x4			










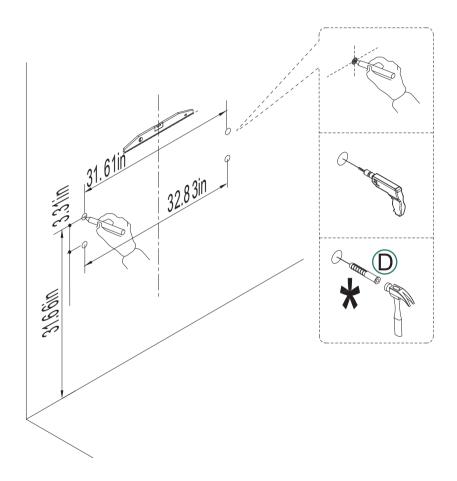


WARNING: To prevent tipping over, this product must beused with the included wall mounting device. WARNING: Evaluate the suitability of the wall to ensure thatthe fixtures can withstand the forces that occur.



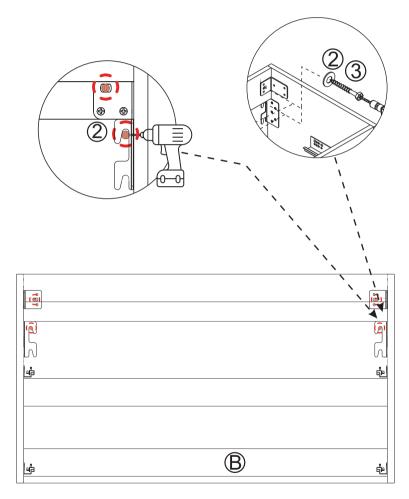


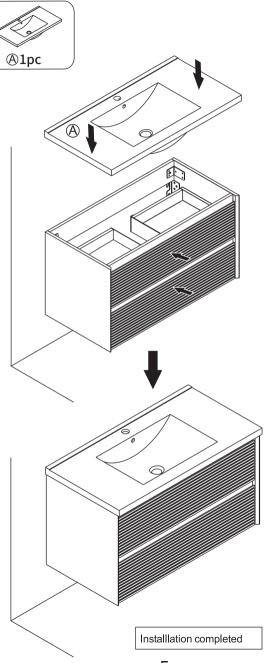

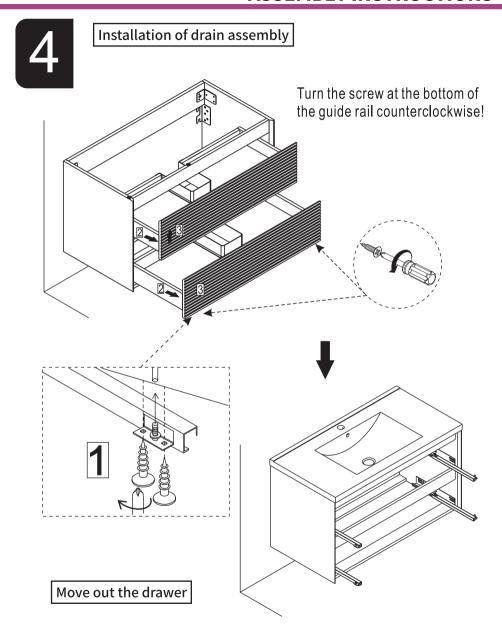

5



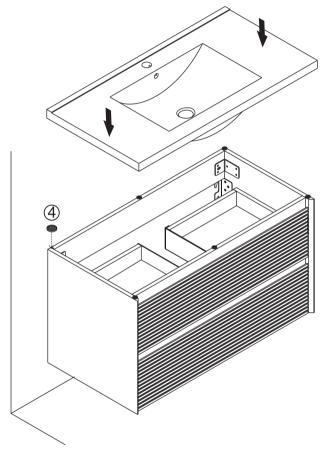

Installation of drain assembly

