



## C3015

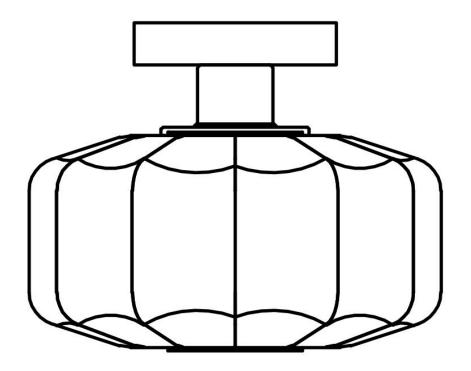


English / Español / Français


www.parrotuncle.com

## C3015

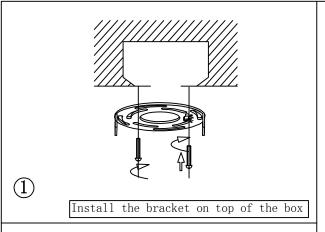

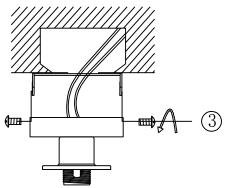

Screw the screw into the mounting board, and secure the light to the mounting board.

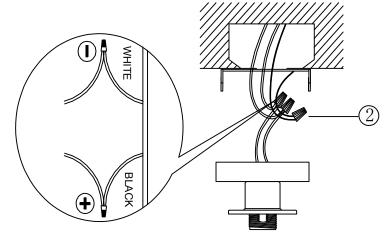

The black line is: L The white line is: N The yellow and green lines are: grounding wires

