



C3012

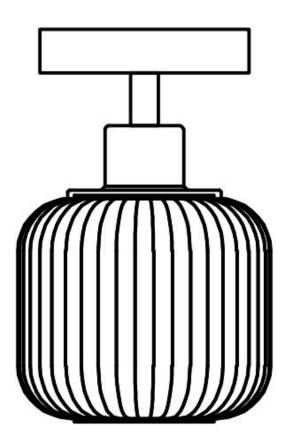


English / Español / Français


www.parrotuncle.com

C3012

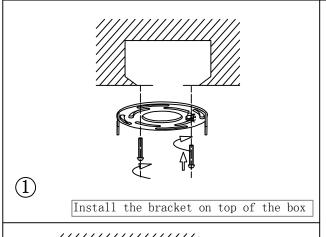

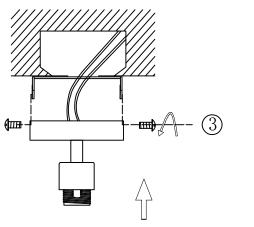

Screw the screw into the mounting board, and secure the light to the mounting board.

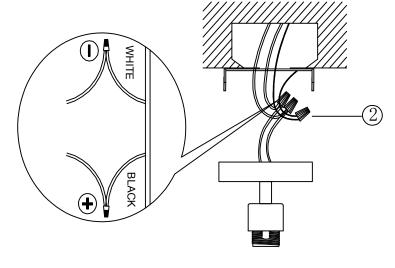

The black line is: L
The white line is: N
The yellow and green lines
are: grounding wires

