


Hall Tree

Assembly Instructions - Please keep for future reference

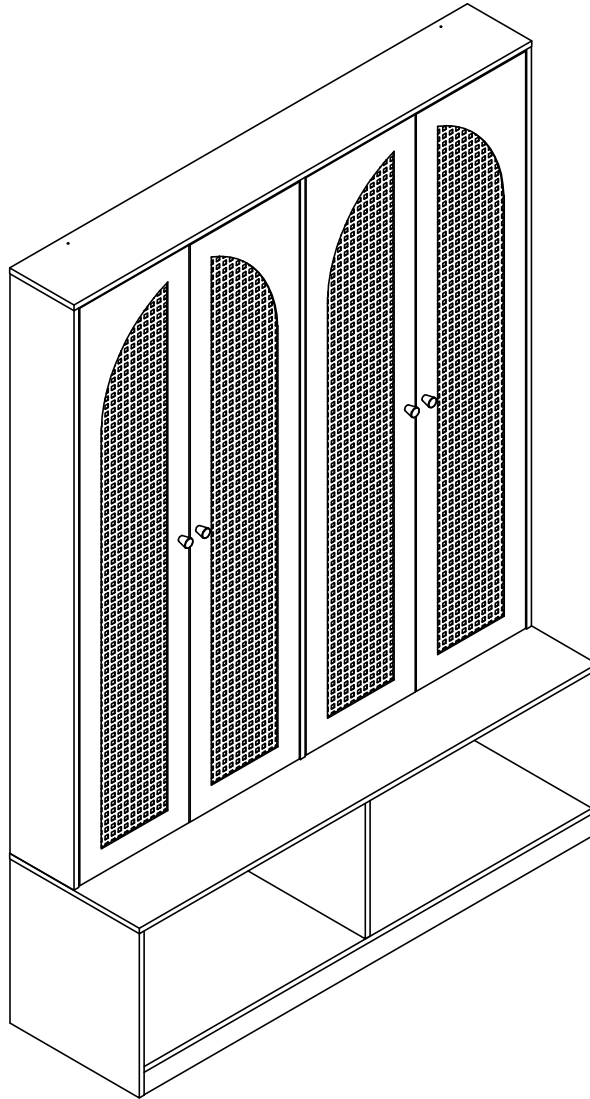

Dimensions

Width-55.12inch

Depth-15.75inch

Height-78.74inch

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions





















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>(A)</p>  <p>6*35mm Cam Bolt x 54</p>	<p>(B)</p>  <p>15*9mm Cam Lock x 54</p>	<p>(C)</p>  <p>8*30mm Dowel x 30</p>	<p>(D)</p>  <p>4*40mm Screw x 10</p>
<p>(E)</p>  <p>3.5*14mm Screw x 2</p>	<p>(F)</p>  <p>Metal handle x 4</p>	<p>(G)</p>  <p>Anti-tip iron sheet x 2</p>	<p>(H)</p>  <p>3.5*14mm Screw x 124</p>
<p>(I)</p>  <p>Hinge x 12</p>	<p>(J)</p>  <p>Back plate buckle x 40</p>	<p>(K)</p>  <p>Expansion plastic x 2</p>	<p>(L)</p>  <p>Link x 6</p>
<p>(M)</p>  <p>Shelf bracket x 16</p>	<p>(N)</p>  <p>6*25mm Screw x 4</p>	<p>(O)</p>  <p>Cross laminate bracket x 8</p>	<p>(P)</p>  <p>Hole to stick x 54</p>
<p>(Q)</p>  <p>Foot felt x 10</p>	<p>(R)</p>  <p>Allen key x 1</p>	<p>(S)</p>  <p>Phillips screwdriver x 1</p>	<p>(T)</p>  <p>4*20mm Screw x 4</p>

Tools required

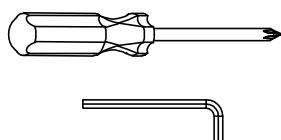

Phillips screwdriver
or Allen wrench


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

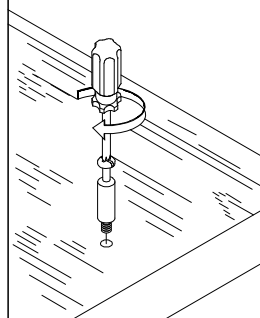

Step 2

Push the male camlock into the entry hole.

2

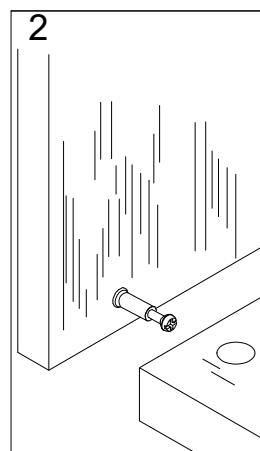


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

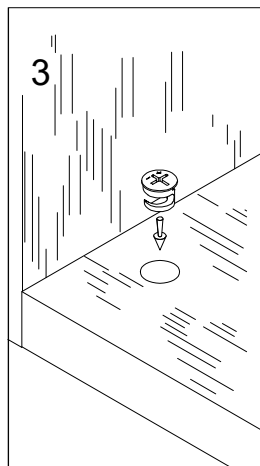


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.


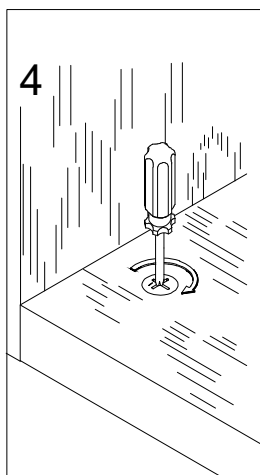



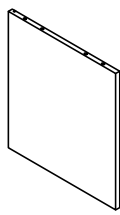
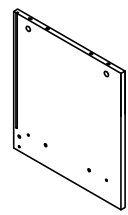
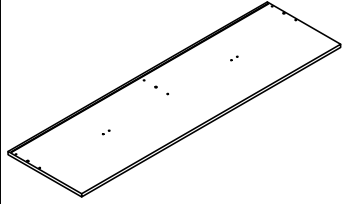
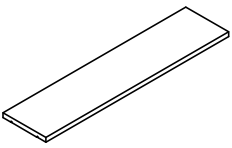
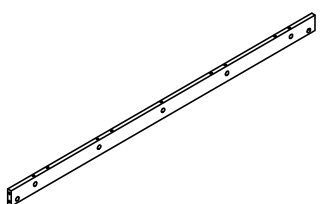


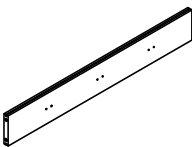
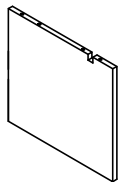
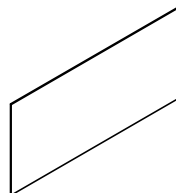
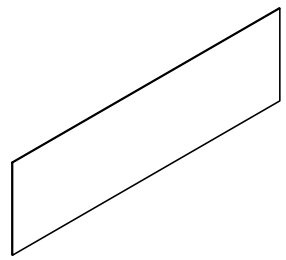
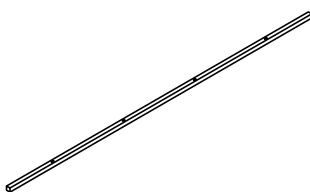
4

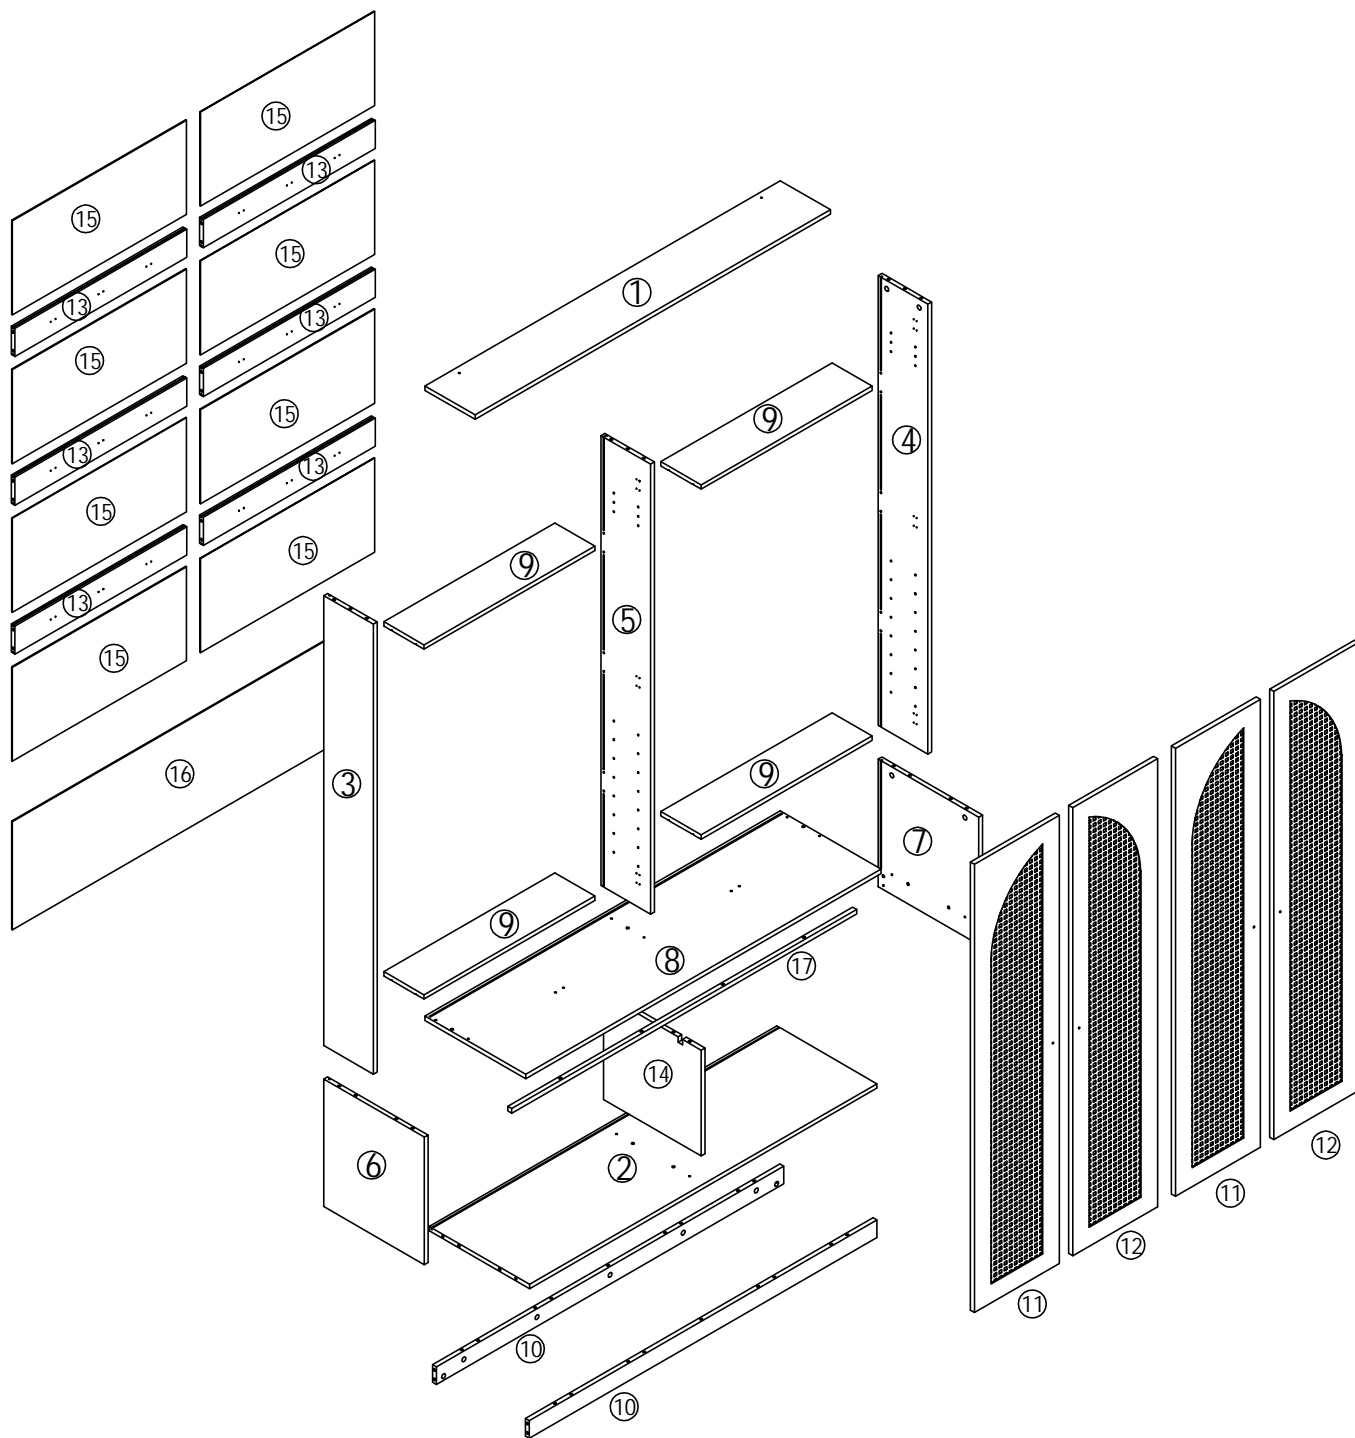

Assembly Instructions

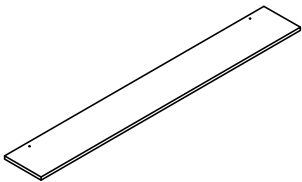
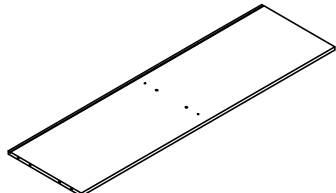


Assembly Instructions



 1400*200*15mm ① X1	 1369*398*15mm ② X1	 1535*199*15mm ③ X1	 1535*199*15mm ④ X1
 1535*199*15mm ⑤ X1	 435*399*15mm ⑥ X1	 435*399*15mm ⑦ X1	 1400*400*15mm ⑧ X1
 674*161*15mm ⑨ X4	 1369*60*15mm ⑩ X2	 1529*334*16mm ⑪ X2	 1529*334*16mm ⑫ X2
 677*96*15mm ⑬ X6	 384.5*360*15mm ⑭ X1	 686*321*3mm ⑮ X8	 1378*369*3mm ⑯ X1
 1360*16*16mm ⑰ X1			

Assembly Instructions

Step 1

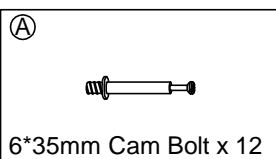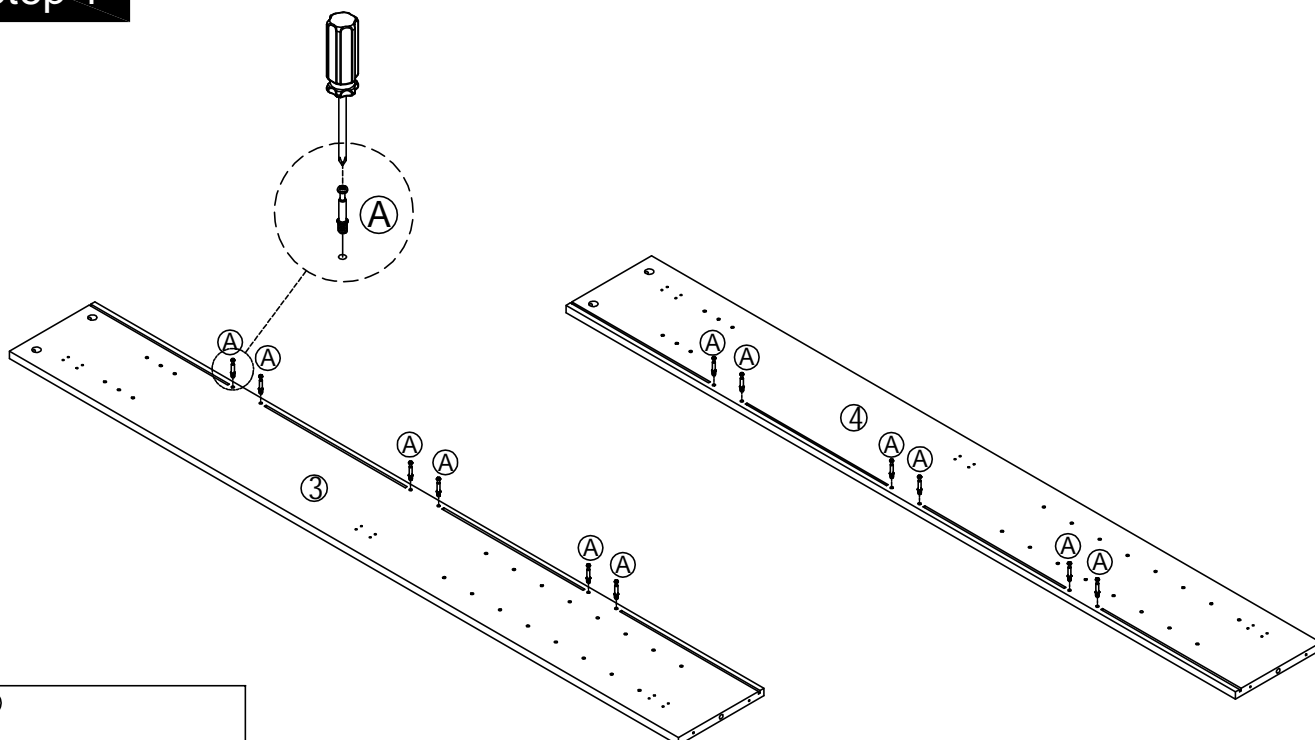


Step 2

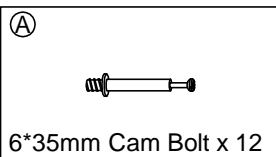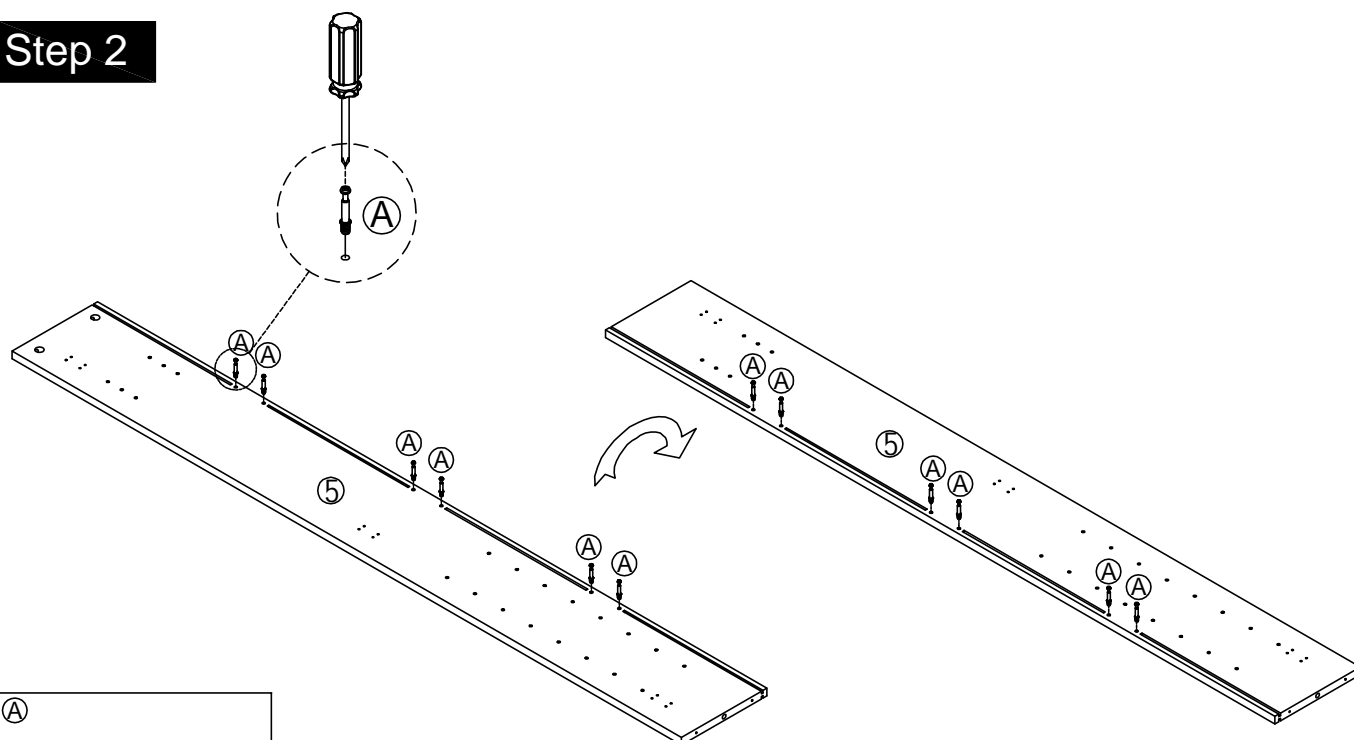


Assembly Instructions

Step 3



Step 1

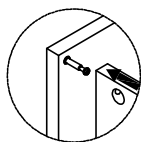

Step 2

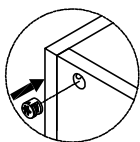

Step 3

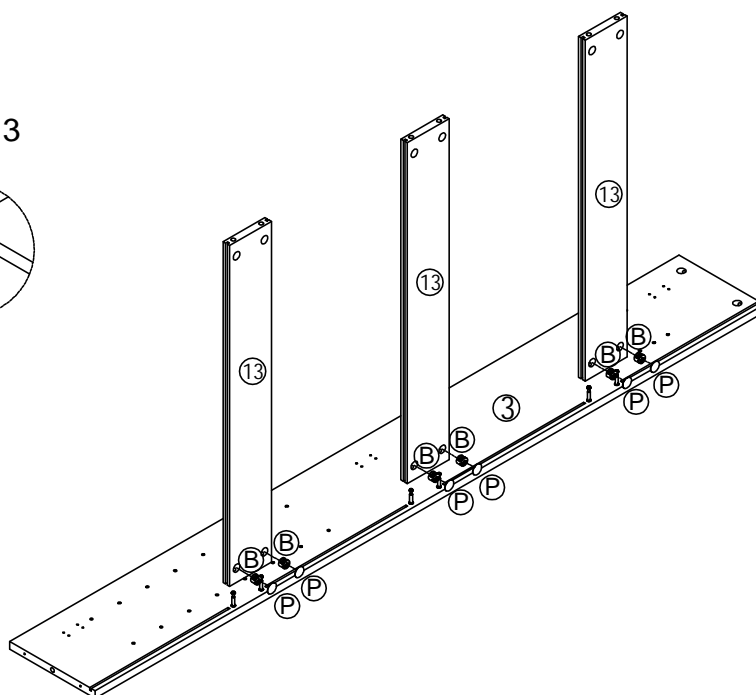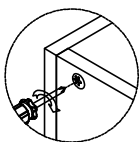

Ⓑ




15*9mm Cam lock x 6


Ⓟ



Hole to stick x 6

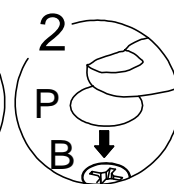

Step 4

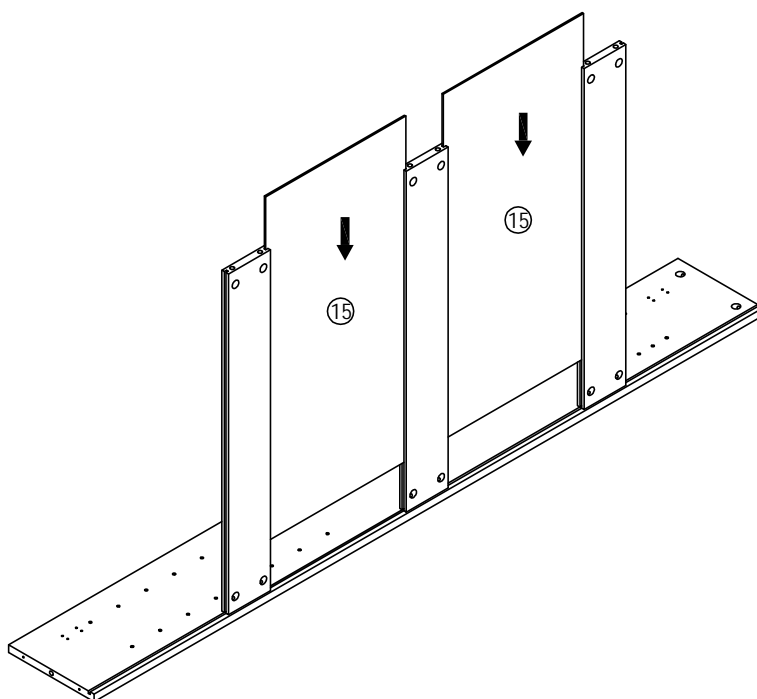





Assembly Instructions

Step 5


Step 1

Step 2

Step 3

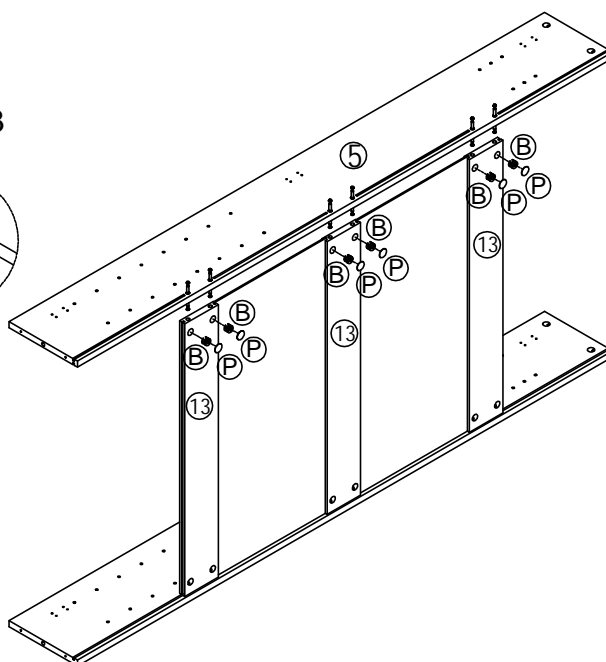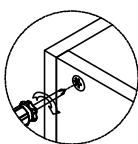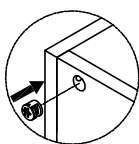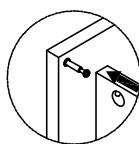

<p>Ⓑ</p> <p>15*9mm Cam lock x 6</p>	<p>Ⓟ</p> <p>Hole to stick x 6</p>
-------------------------------------	-----------------------------------




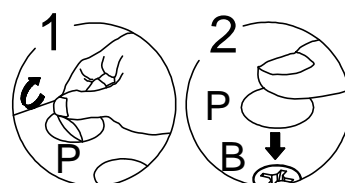


Step 6


Step 1

Step 2

Step 3

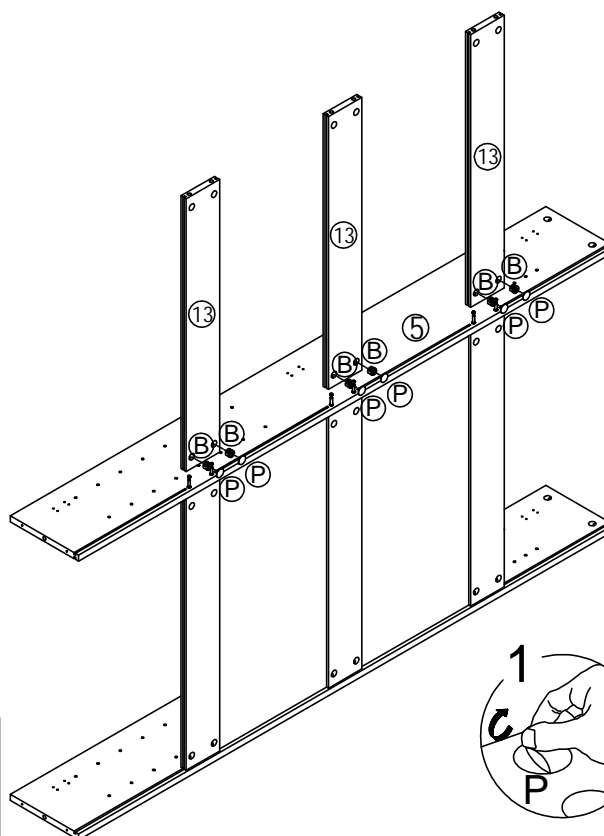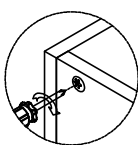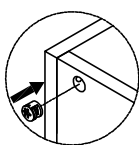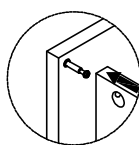


<p>Ⓑ</p> <p>15*9mm Cam lock x 6</p>	<p>Ⓟ</p> <p>Hole to stick x 6</p>
-------------------------------------	-----------------------------------

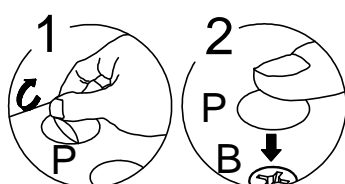

Assembly Instructions

Step 7





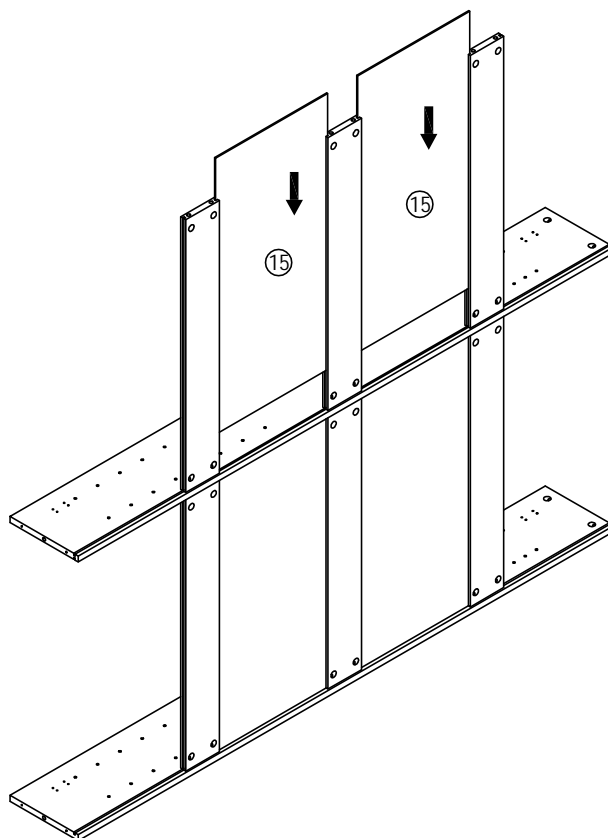




Step 8

Step 1

Step 2



Step 3

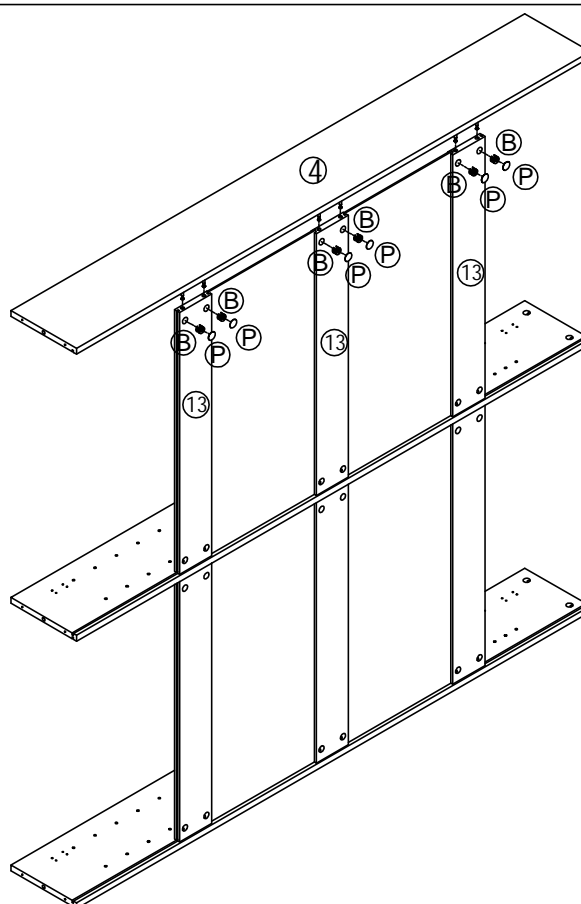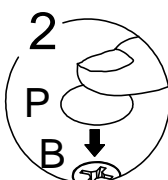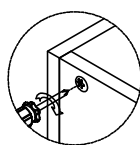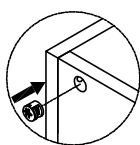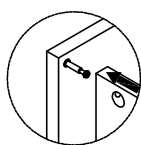



<p>Ⓑ</p>  <p>15*9mm Cam lock x 6</p>	<p>Ⓟ</p>  <p>Hole to stick x 6</p>
---	---

Assembly Instructions

Step 9

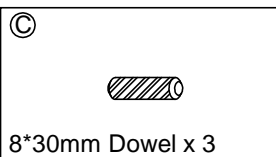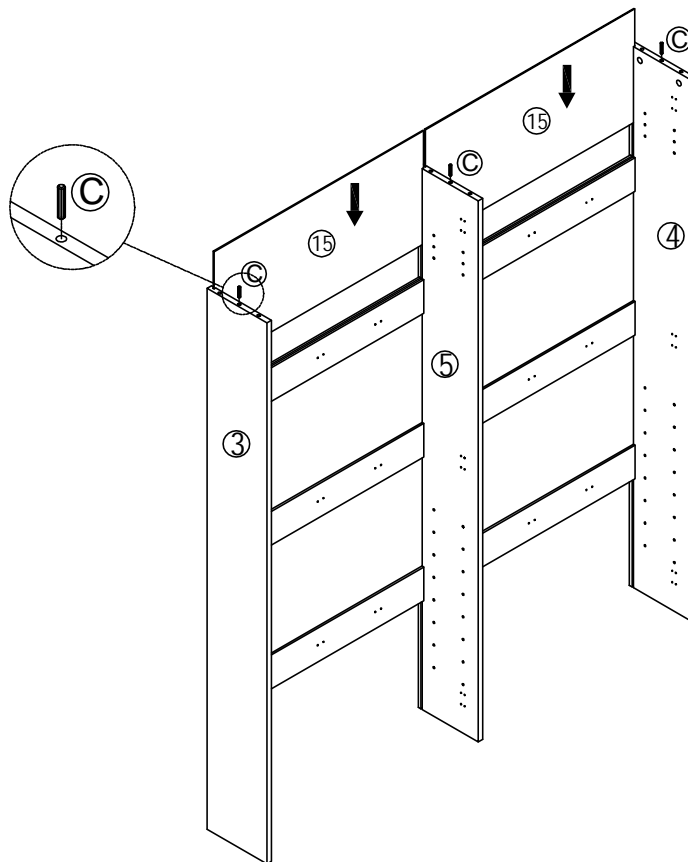

Step 10

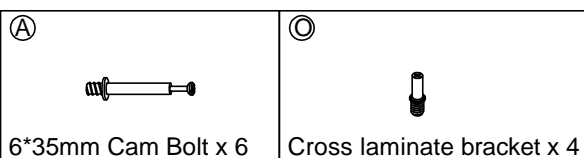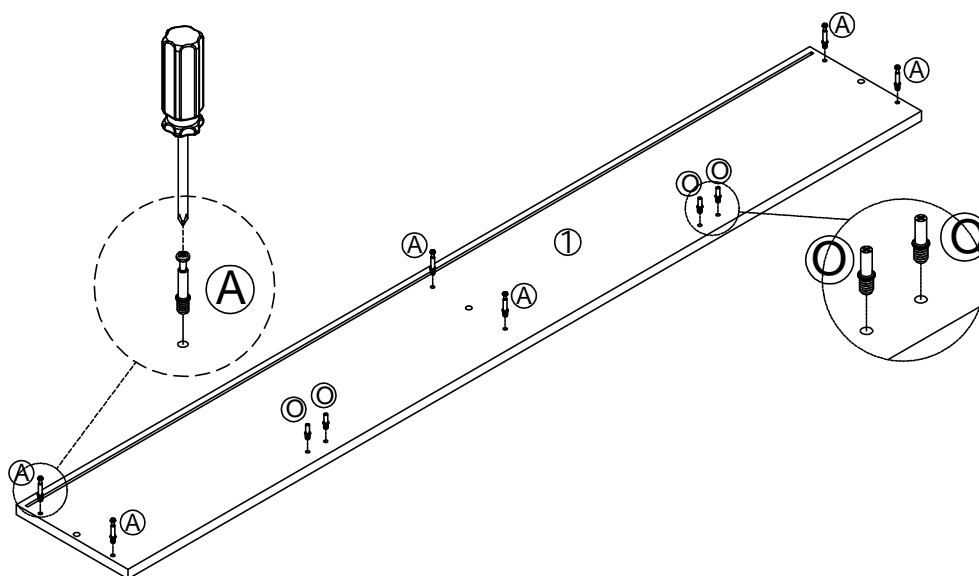








Assembly Instructions

Step 11

Step 1




Step 2

Step 3

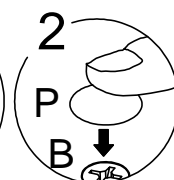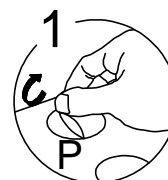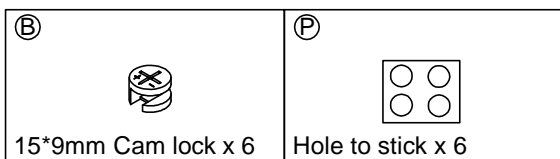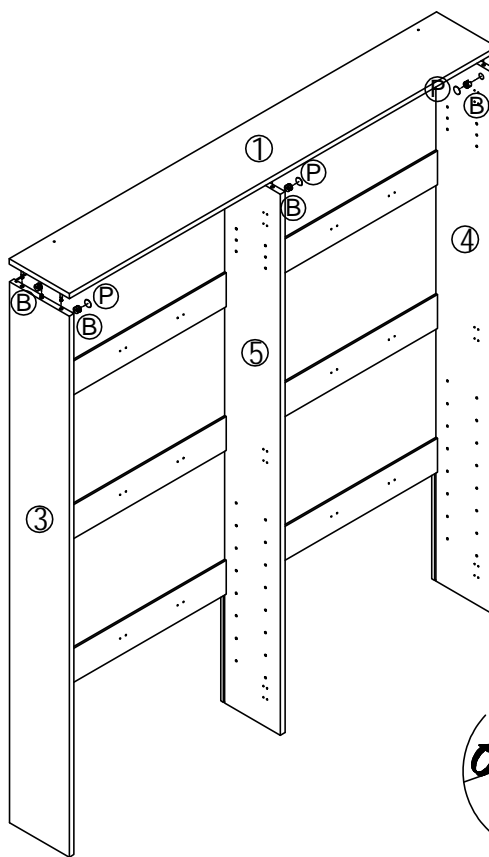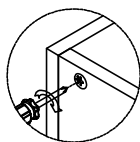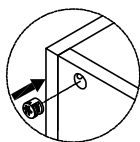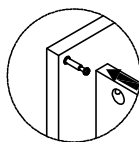


please flip carefully!

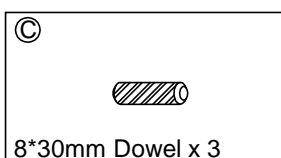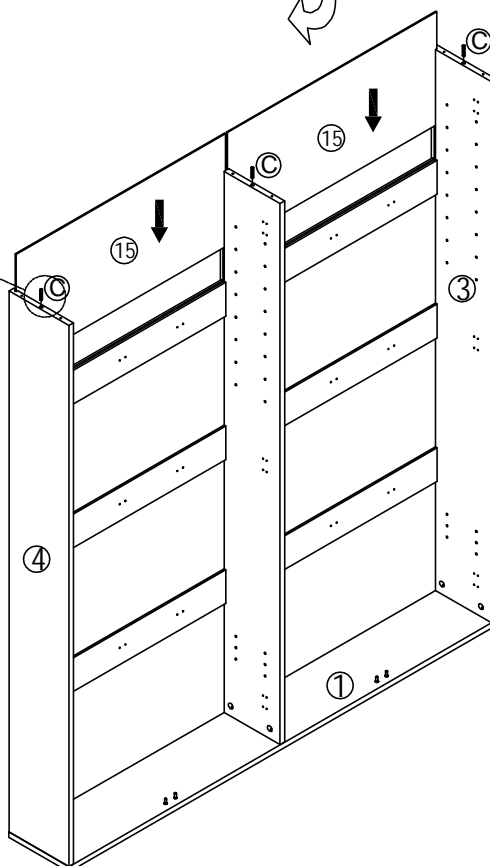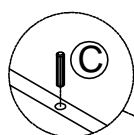



Step 12




Assembly Instructions

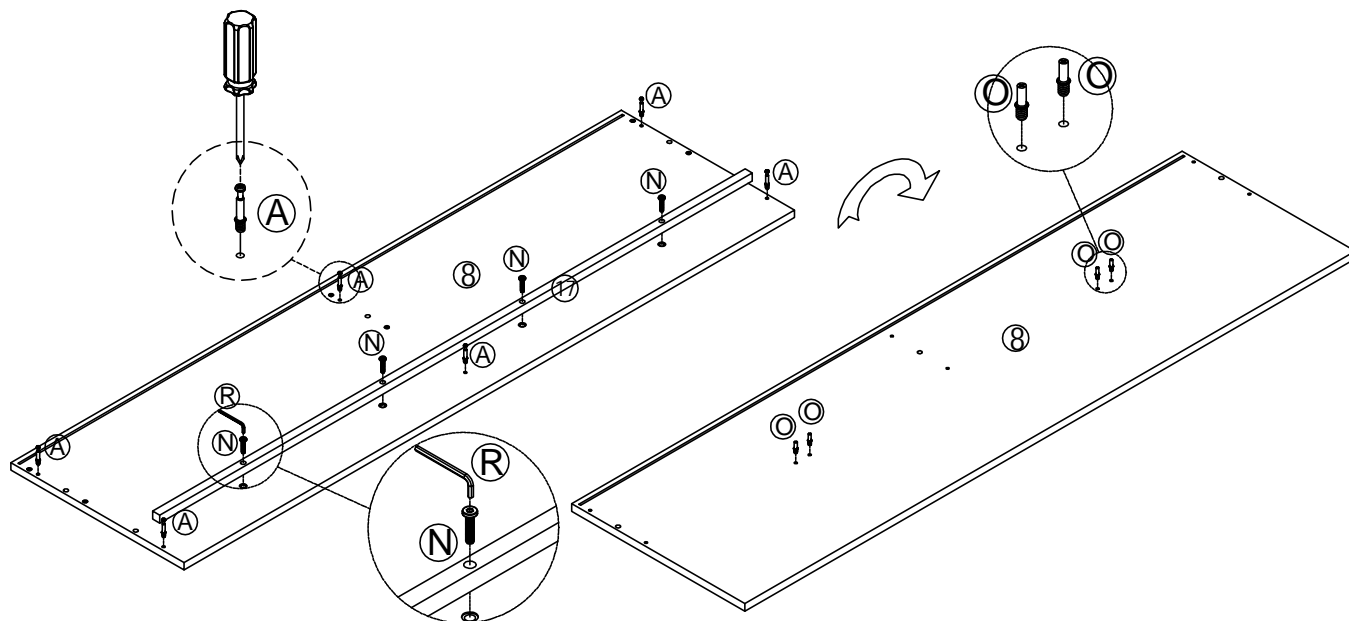
Step 13



<p>Ⓐ</p>  <p>6*35mm Cam Bolt x 6</p>	<p>Ⓝ</p>  <p>6*25mm Screw x 4</p>	<p>Ⓡ</p>  <p>Allen key x 1</p>	<p>Ⓞ</p>  <p>Cross laminate bracket x 4</p>
---	--	---	--


Step 14

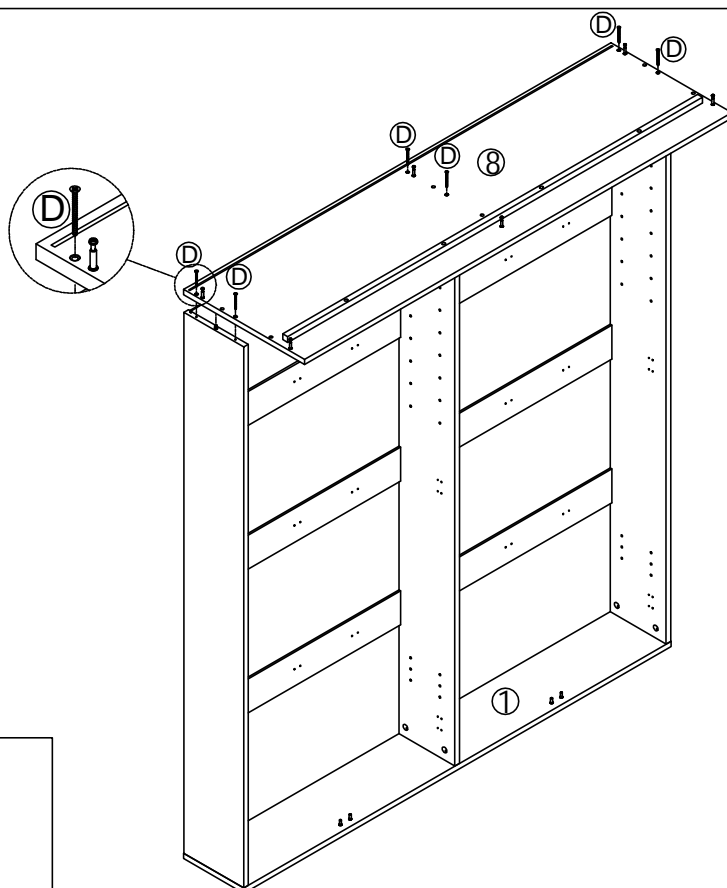



<p>Ⓓ</p>  <p>4*40mm Screw x 6</p>
--

Assembly Instructions



Step 15

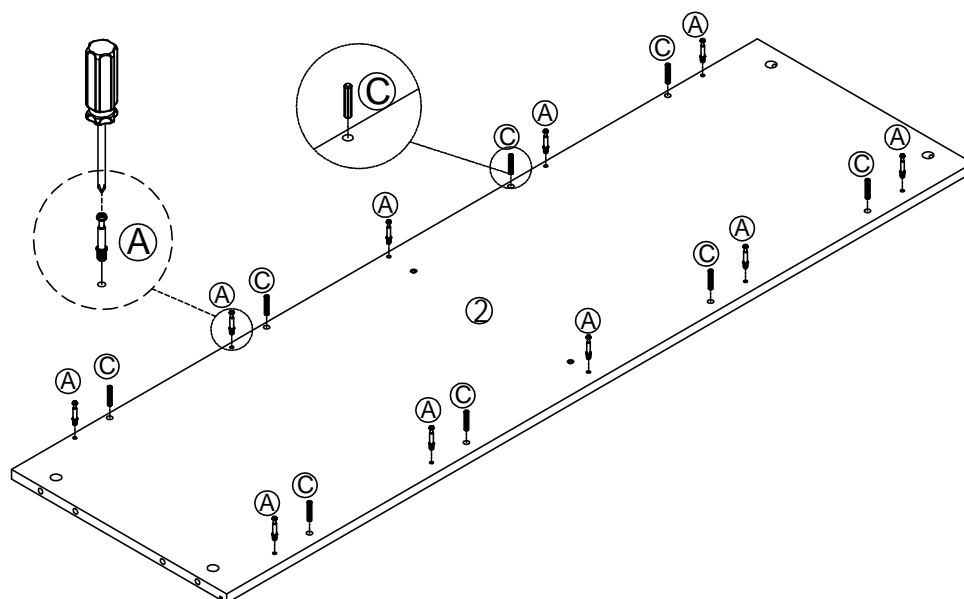




<p>(A)</p>  <p>6*35mm Cam Bolt x 10</p>	<p>(C)</p>  <p>8*30mm Dowel x 8</p>
--	--

Step 16

Step 1 Step 2 Step 3

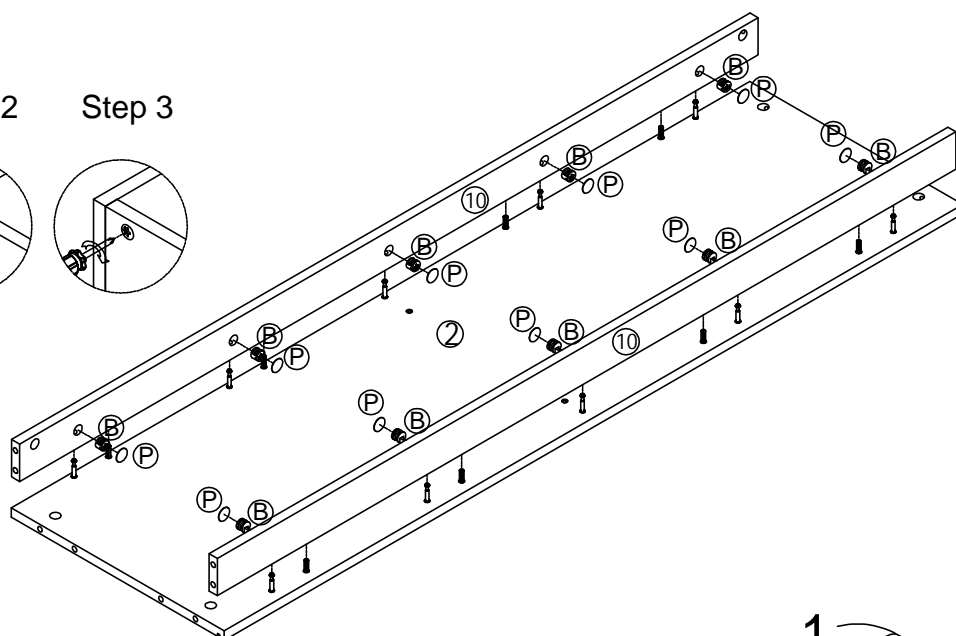
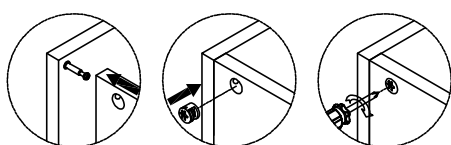


<p>(B)</p>  <p>15*9mm Cam lock x 10</p>	<p>(P)</p>  <p>Hole to stick x 10</p>
--	--


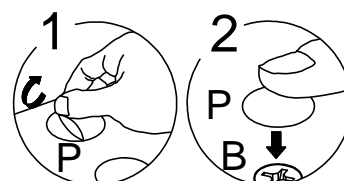


Assembly Instructions

Step 17

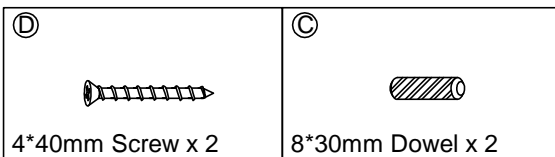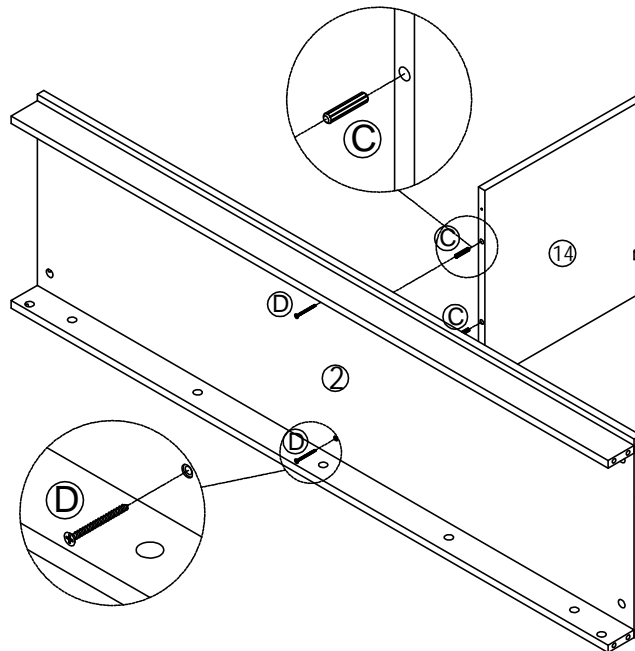


Step 18

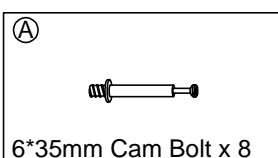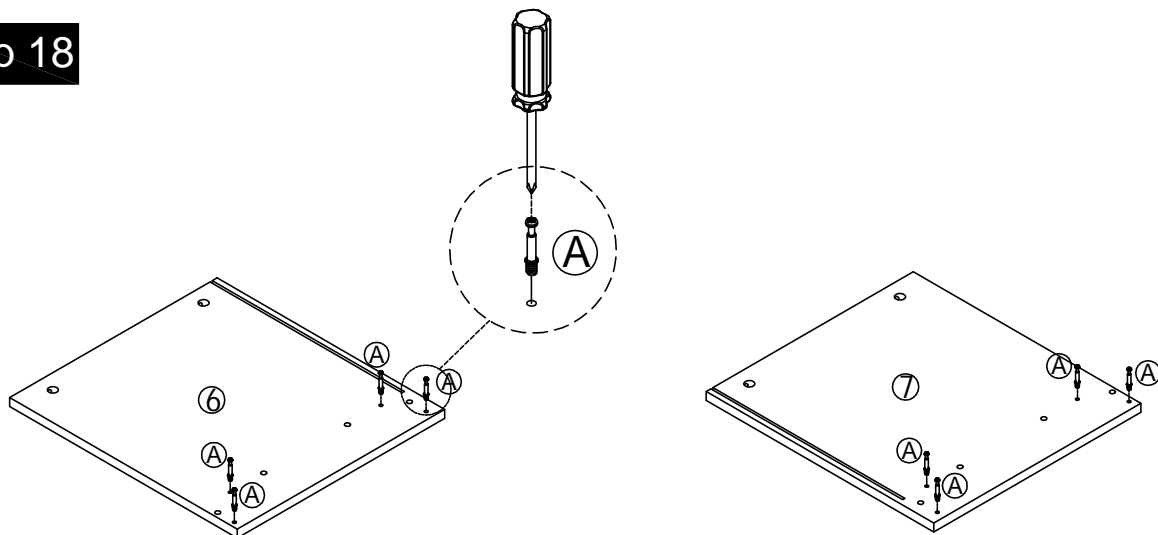


Assembly Instructions

Step 19





Step 1

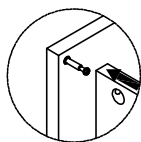




Step 2


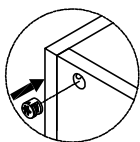



Step 3

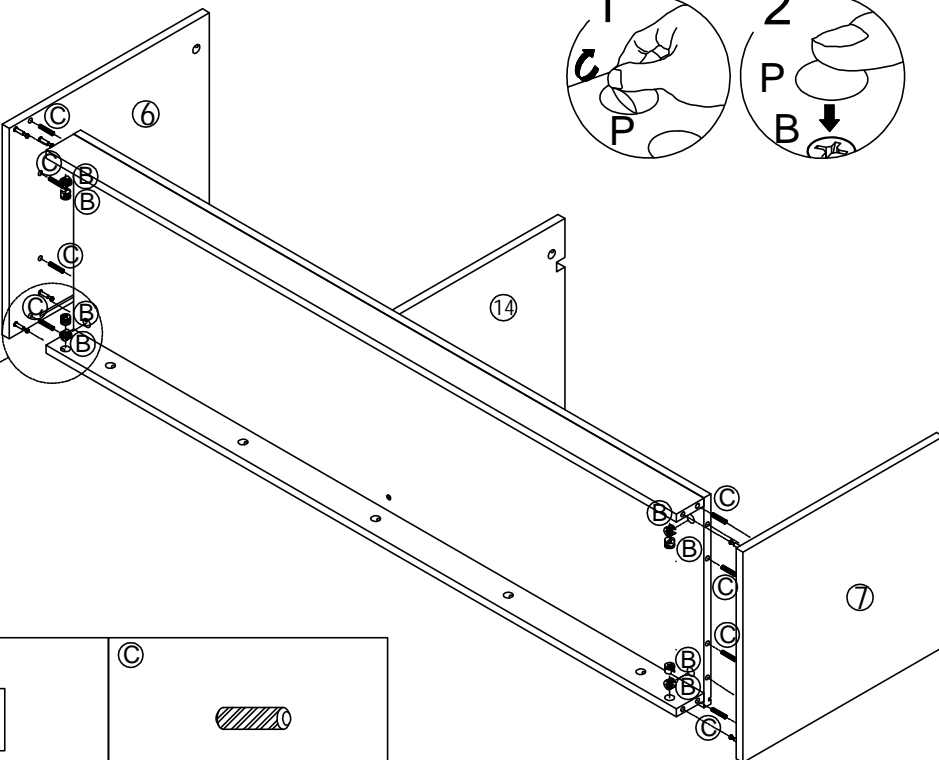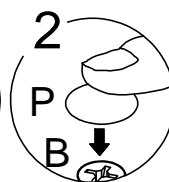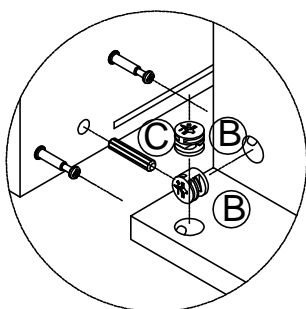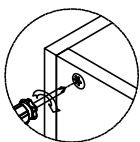

<p>Ⓑ</p>  <p>15*9mm Cam lock x 8</p>	<p>Ⓟ</p>  <p>Hole to stick x 8</p>	<p>Ⓒ</p>  <p>8*30mm Dowel x 8</p>
---	---	--

Step 20

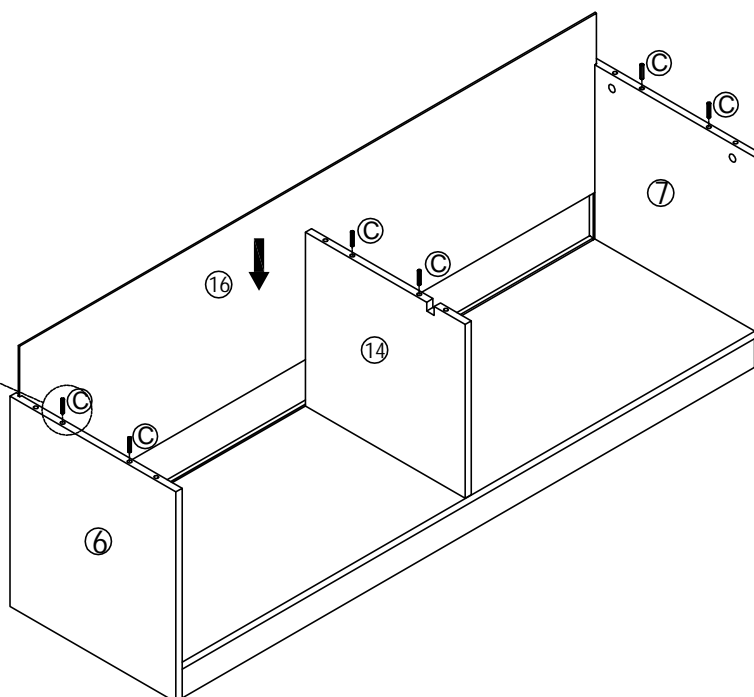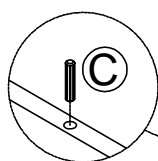

<p>Ⓒ</p>  <p>8*30mm Dowel x 6</p>
--





Assembly Instructions

Step 21

Step 1

Step 2


Step 3

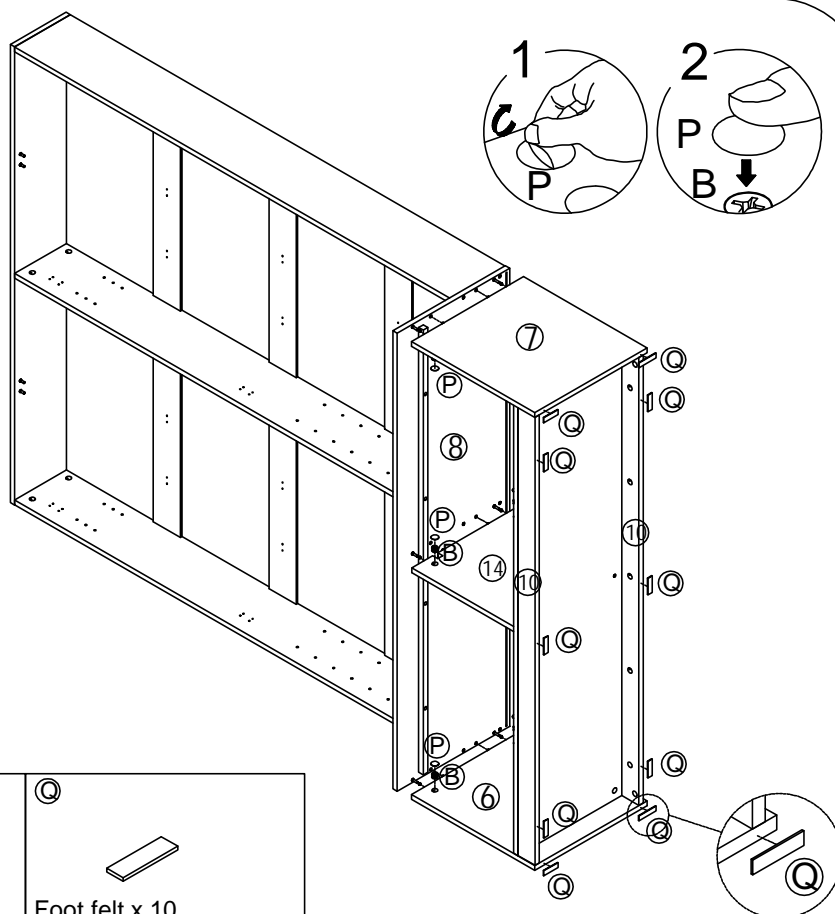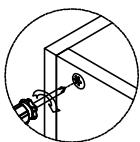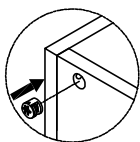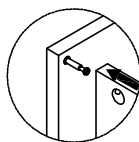

<p>Ⓑ</p> <p>15*9mm Cam lock x 6</p>	<p>Ⓟ</p> <p>Hole to stick x 6</p>	<p>Ⓚ</p> <p>Foot felt x 10</p>
-------------------------------------	-----------------------------------	--------------------------------

Step 22

Before installing J, please measure the diagonals to ensure they are equal in length, keeping the cabinet upright.

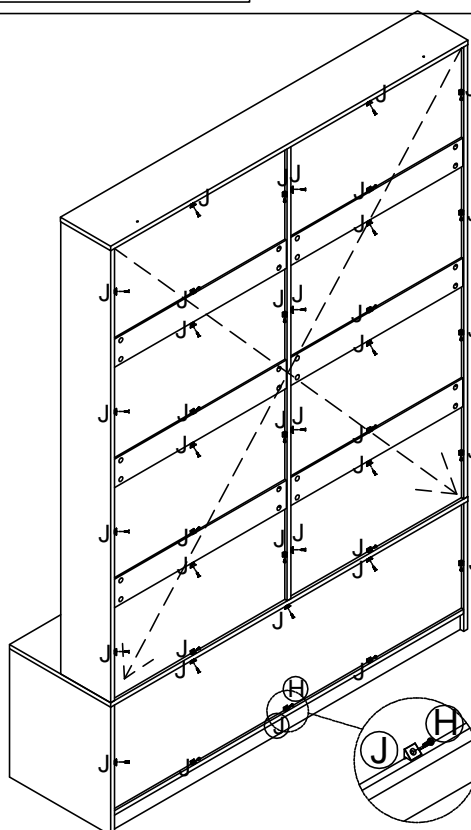


<p>ⓓ</p> <p>3.5*14mm Screw x 40</p>	<p>ⓐ</p> <p>Back plate buckle x 40</p>
-------------------------------------	--


Assembly Instructions

Step 23



Step 1

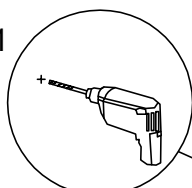

Step 2

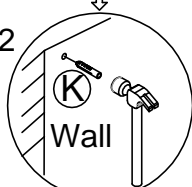

Step 3

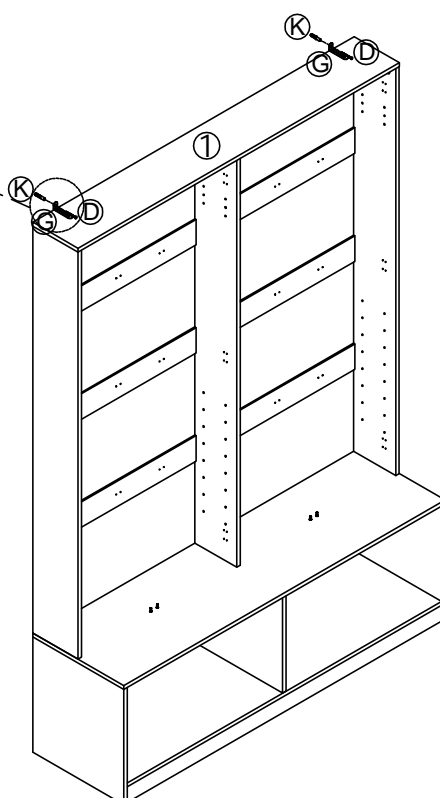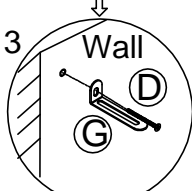


(K)



Expansion plastic x 2

(D)





4*40mm Screw x 2

(G)



Anti-tip iron sheet x 2

Step 24

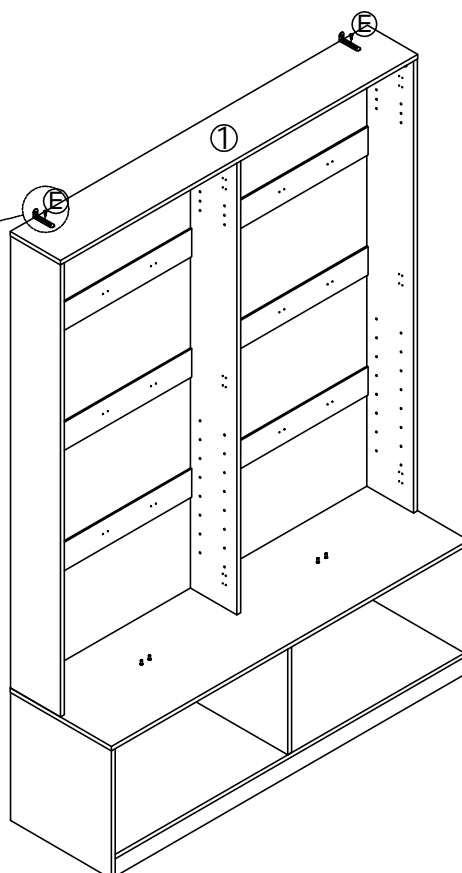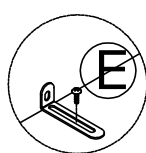


(E)



3.5*14mm Screw x 2

Assembly Instructions

Step 25

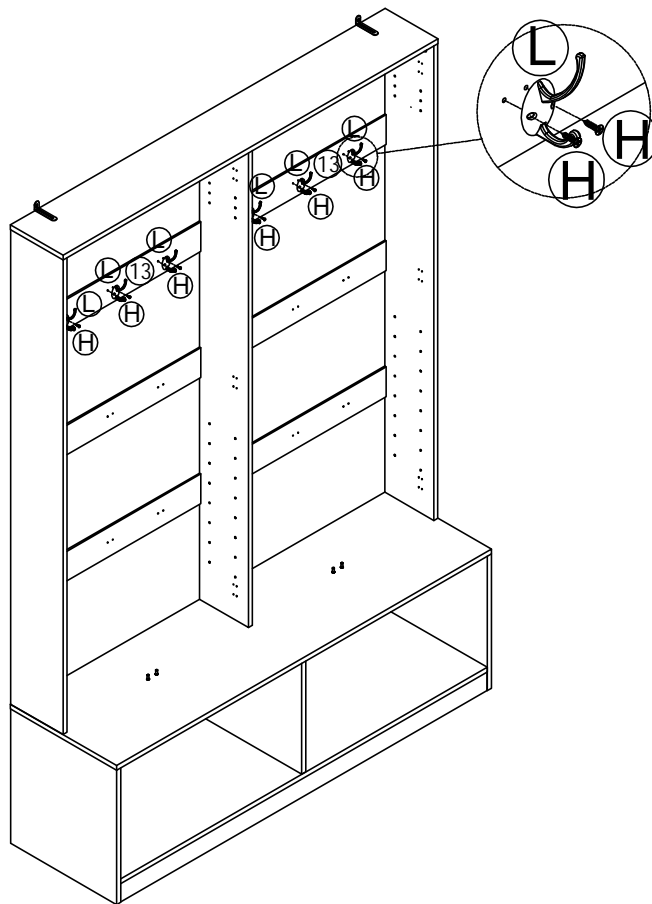

L




Link x 6

H



3.5*14mm Screw x 12

Step 26

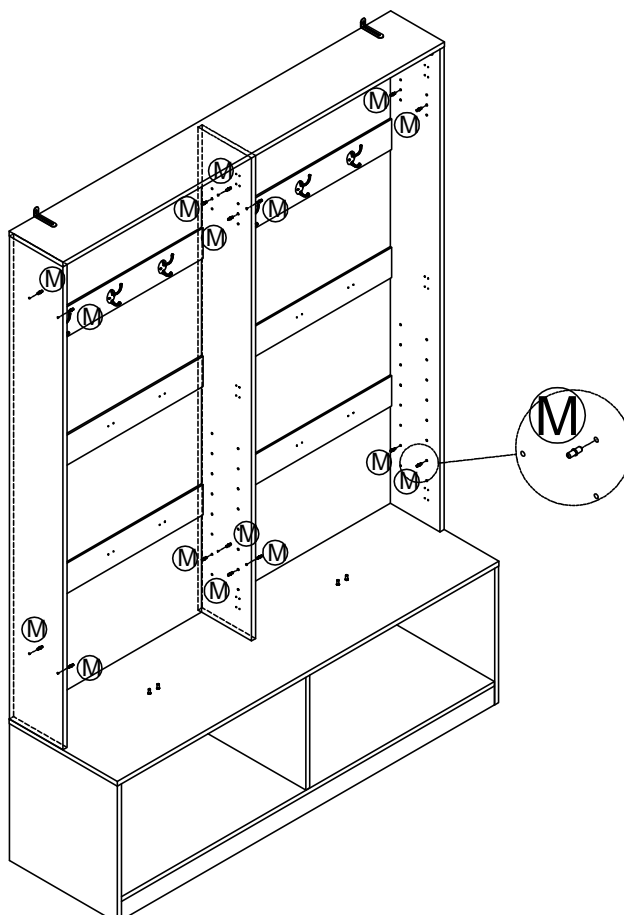


M




Shelf bracket x 16



Assembly Instructions

Step 27

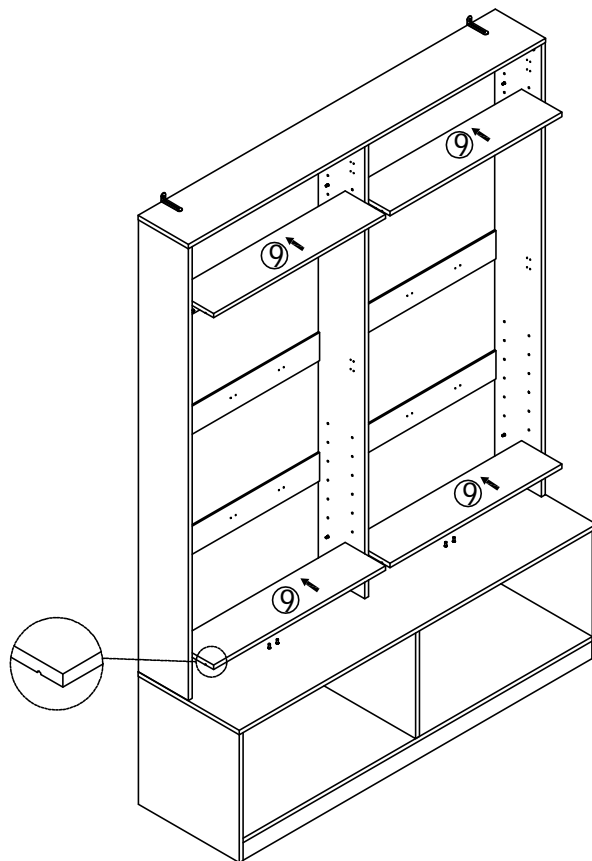

Step 28

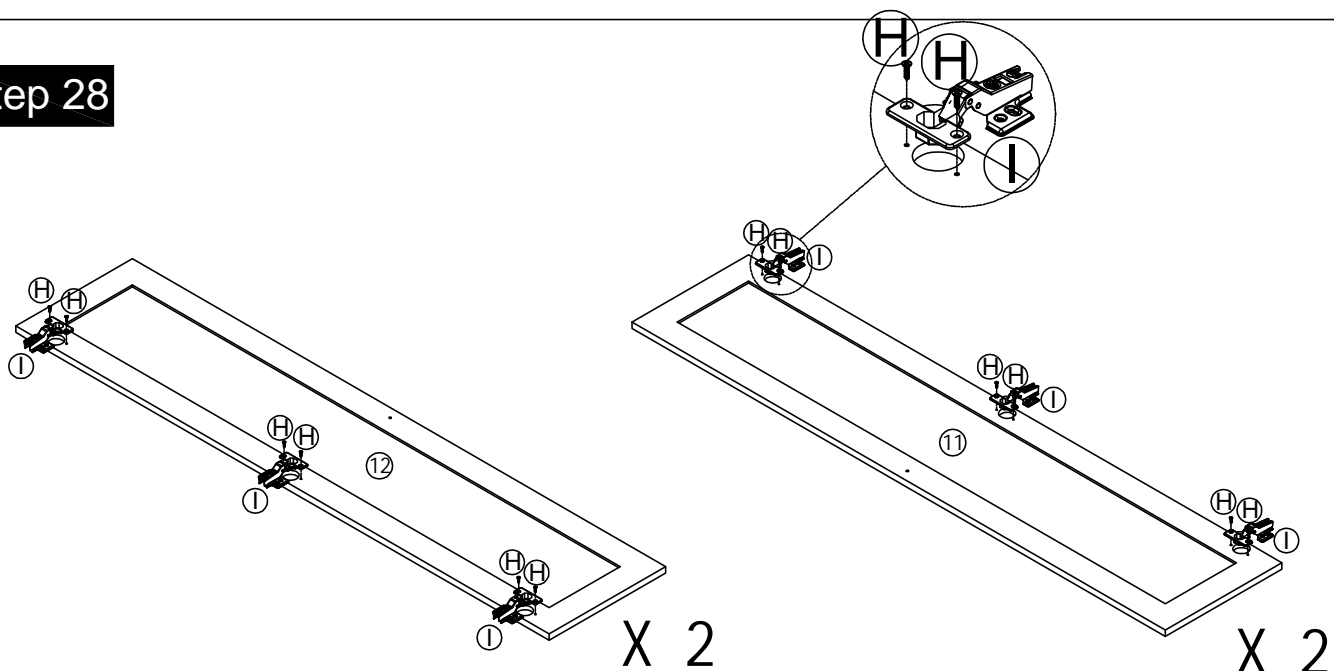


 3.5*14mm Screw x 24	 Hinge x 12
--	---


Assembly Instructions

Step 29


If the door can't close, please adjust the hinges.

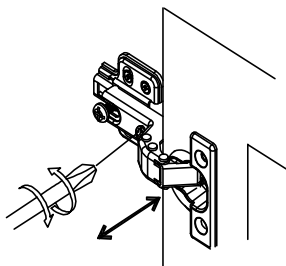

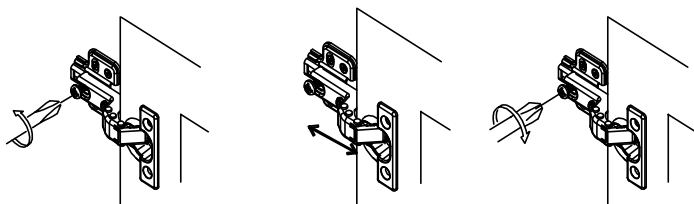


This is used to adjust the door panel in the up and down direction.

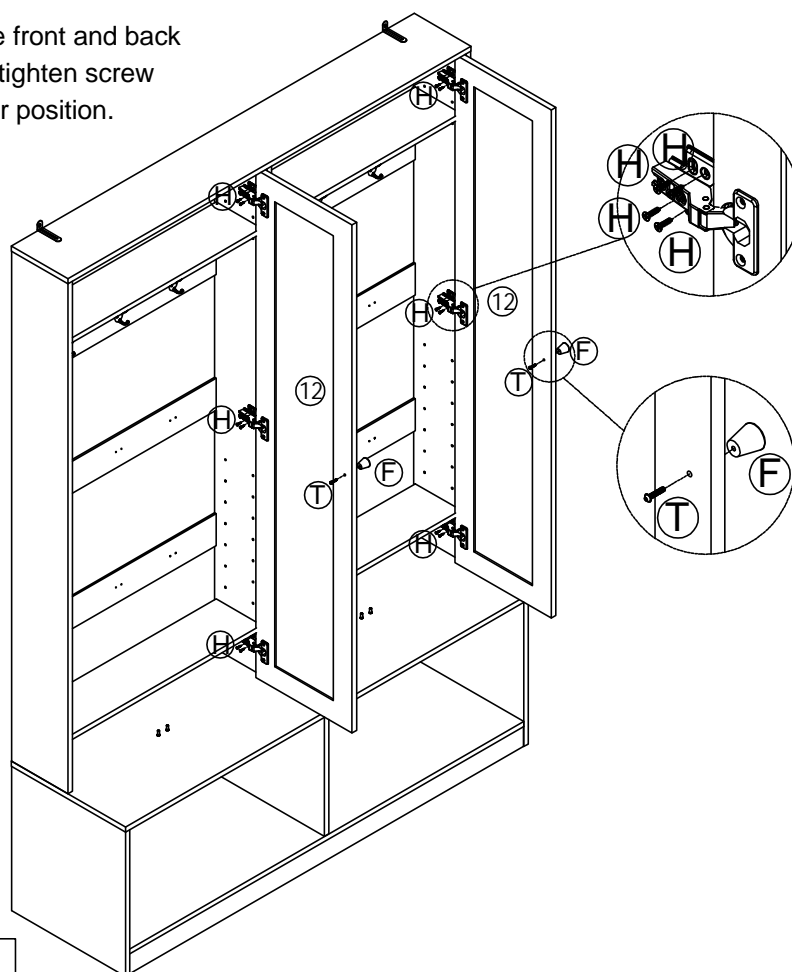

This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.




Ⓣ	
4*20mm Screw x 2	
Ⓜ	
3.5*14mm Screw x 24	

ⓕ	
Metal handle x 2	


Assembly Instructions

Step 30



If the door can't close, please adjust the hinges.

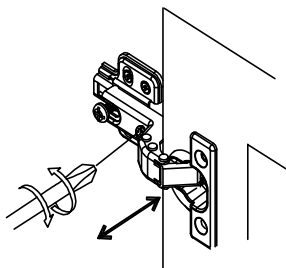

This is used to adjust the door panel in the up and down direction.

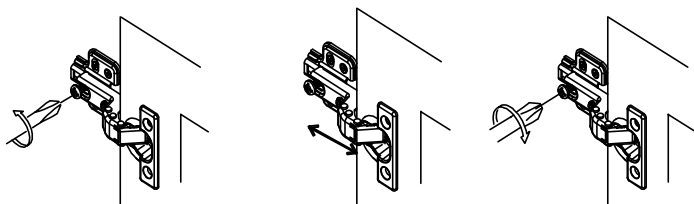

This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

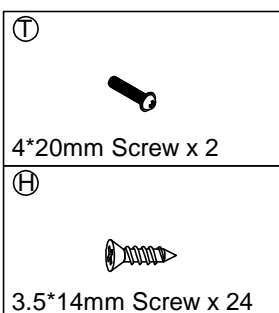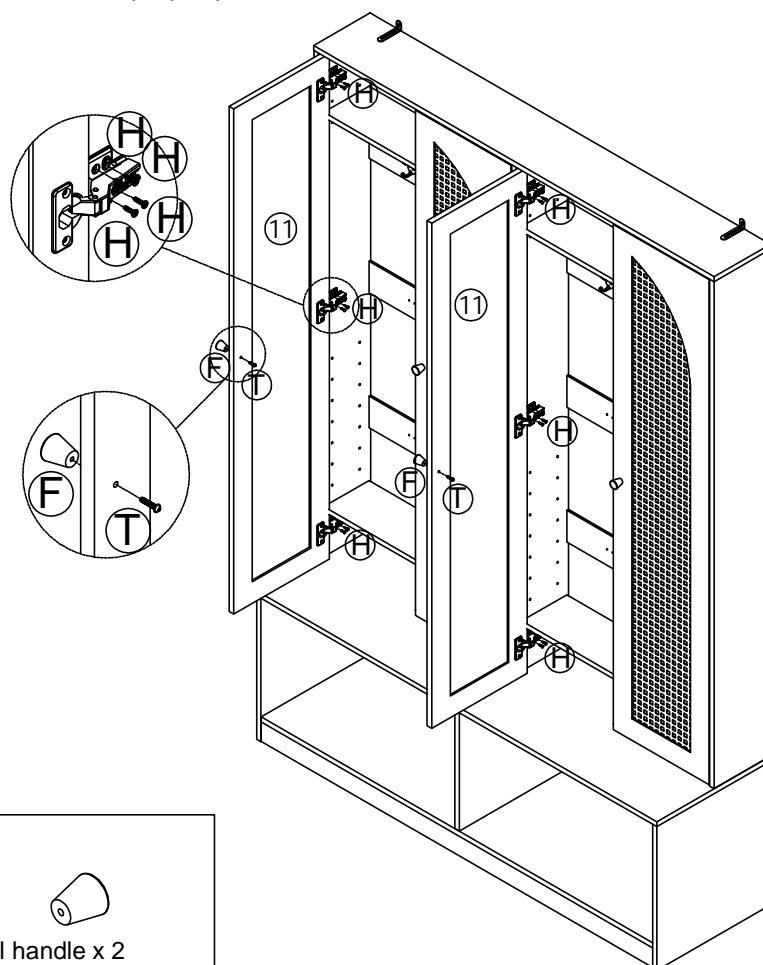

4*20mm Screw x 2

H

3.5*14mm Screw x 24

F

Metal handle x 2

Assembly Instructions

Step 31

