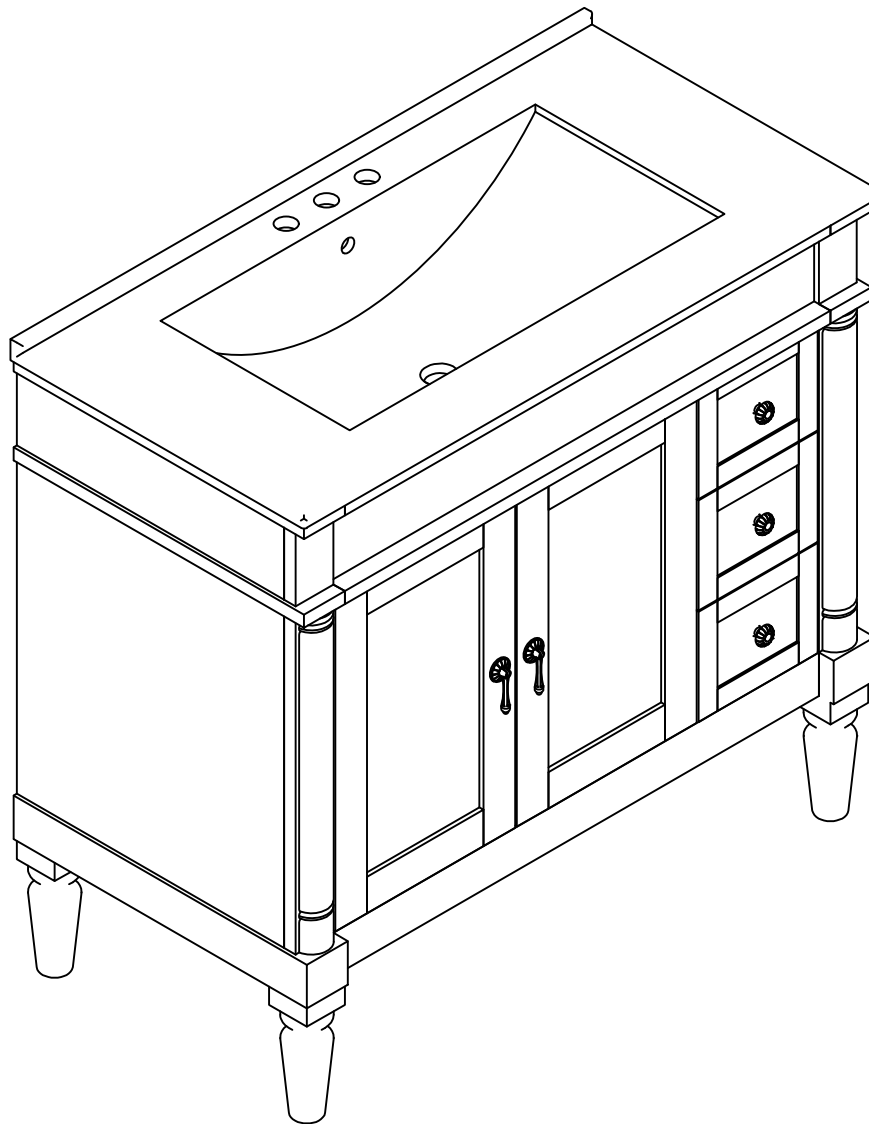


# ASSEMBLY INSTRUCTIONS

## BATH VANITY-CABINET

SKU - N729P300165

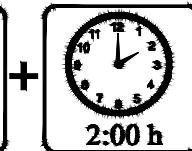
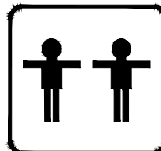
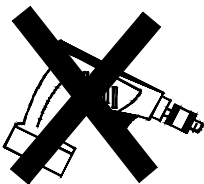


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

**DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED**


**▲**  
\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.



### Tools Required



(Not included)



(Not included)

**IMPORTANT:**

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

# PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


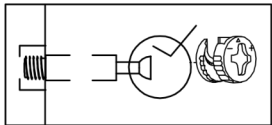

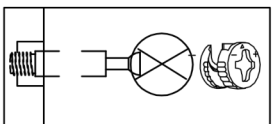

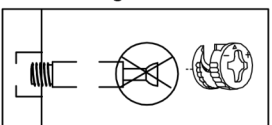

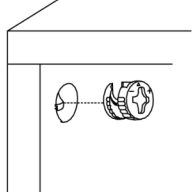
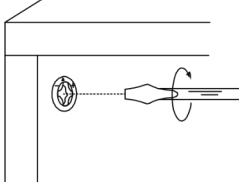
# Before Installation

**Important – Please read these instructions fully before starting assembly**

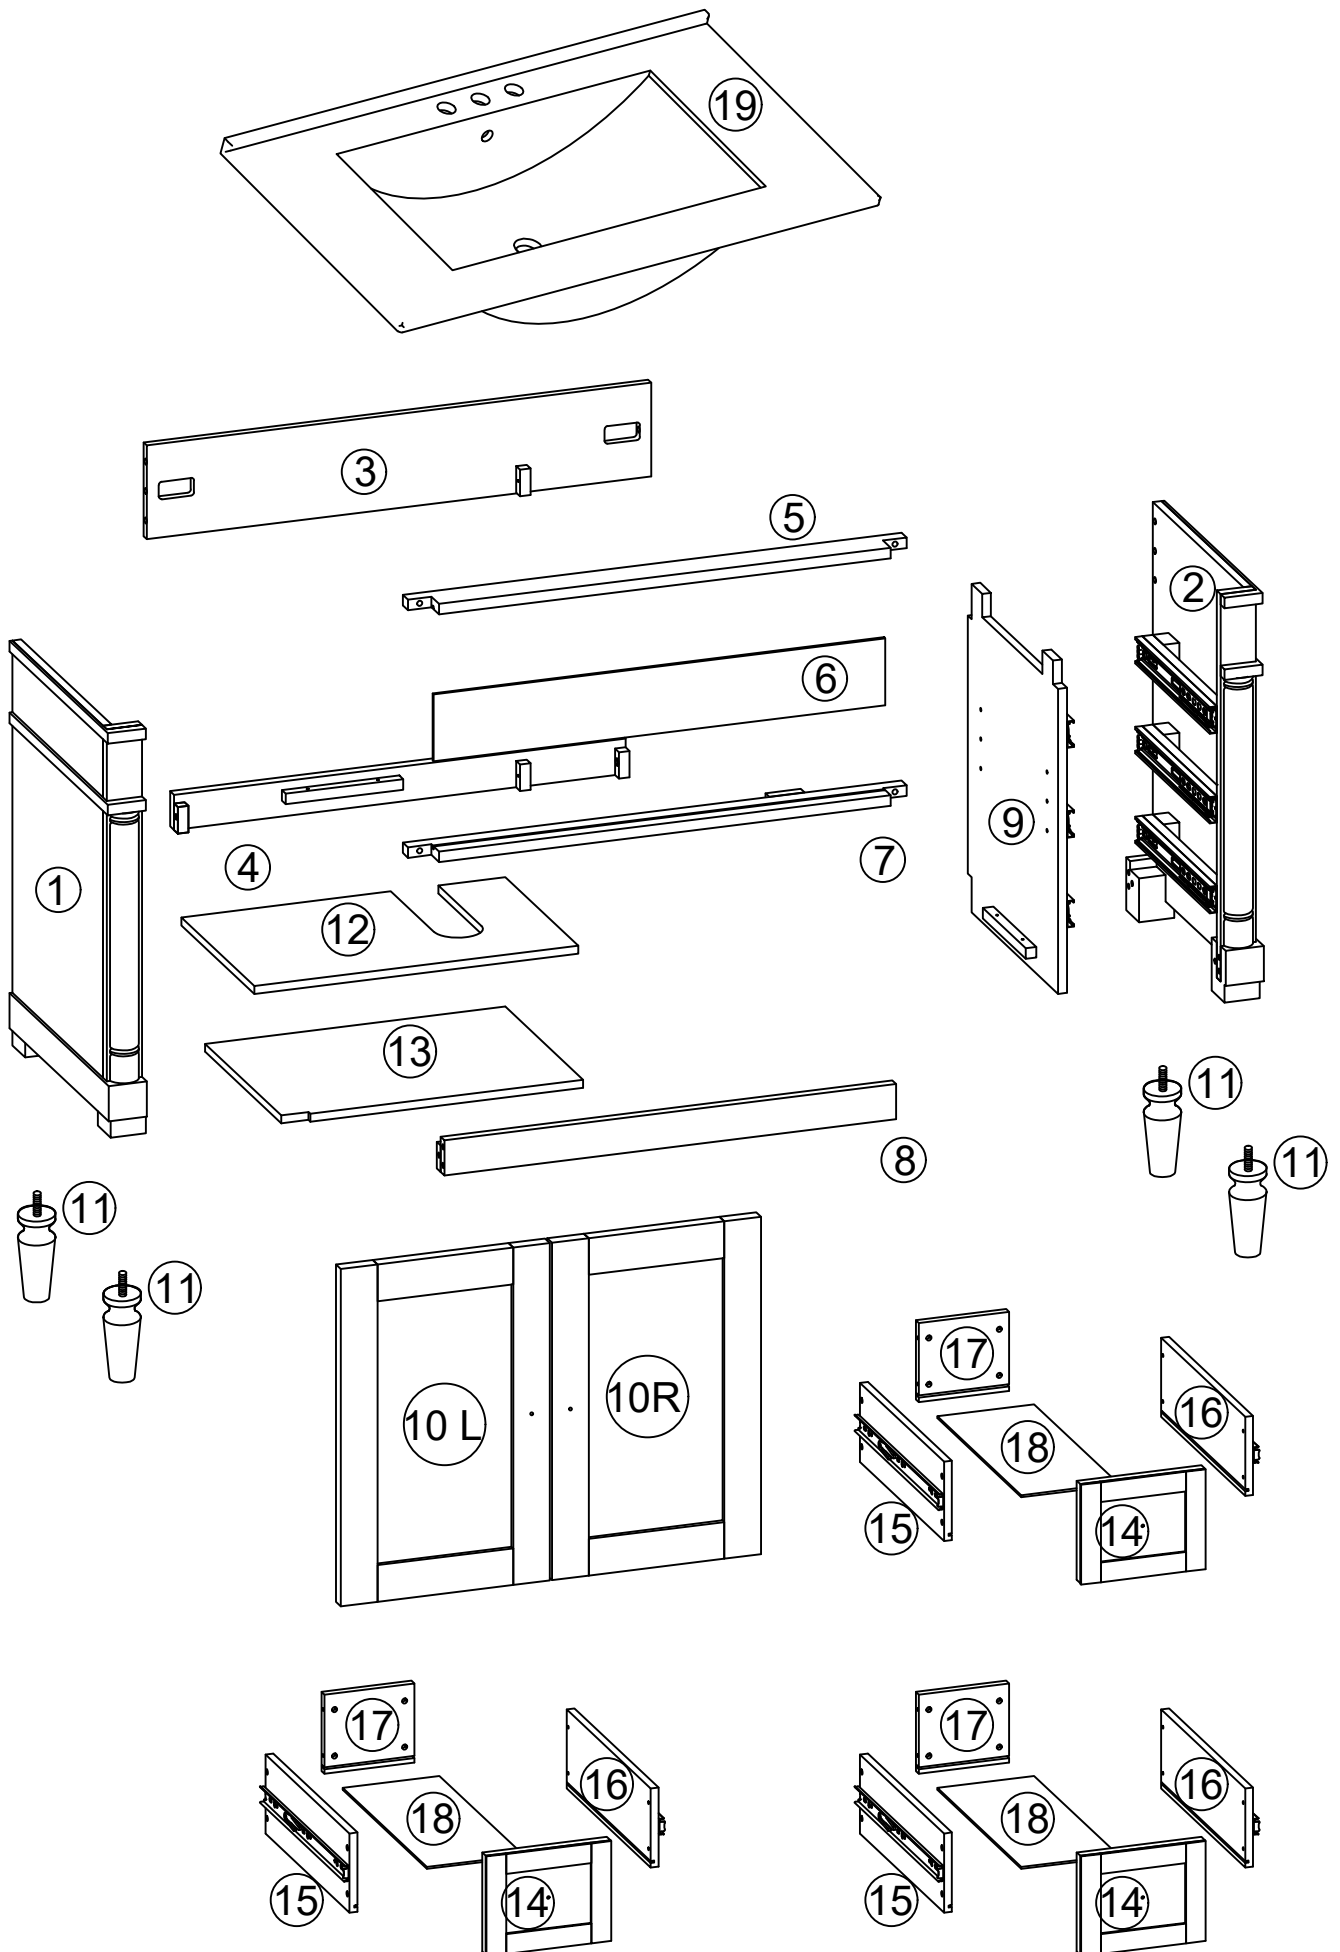
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

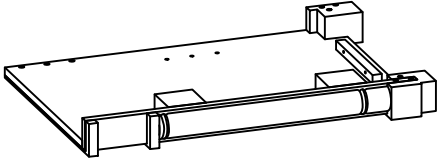
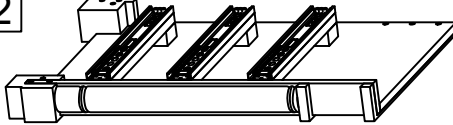







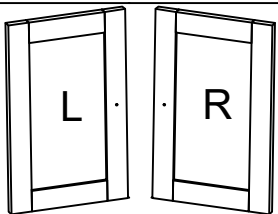



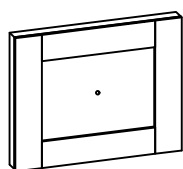
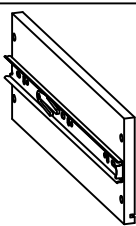
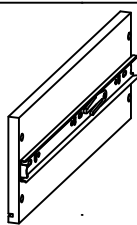
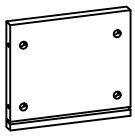
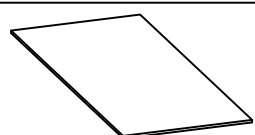
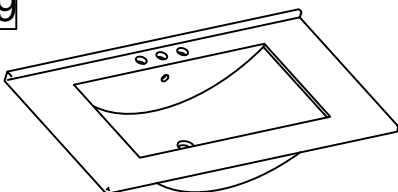
## Cam Lock Assembly Instructions

		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

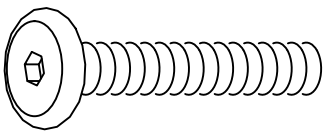
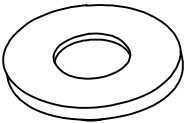
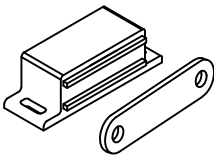
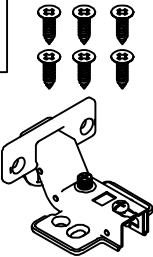
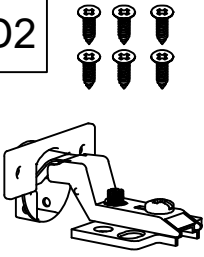










# Detail View




# Part Lists: N729P300165

1		2		3	
	Side Frame (L) - 1pc		Side Frame (R) - 1pc		Top Rear Crossbar - 1pc
4		5		6	
	Bottom Rear Crossbar - 1pc		Top Front Crossbar - 1pc		Front Panel - 1pc
7		8		9	
	Middle Front Crossbar - 1pc		Bottom Front Crossbar - 1pc		Middle Vertical Panel - 1pc
10		11		12	
	Door Cabinet (L + R) - 2pcs		Legs - 4pcs		Adjustable Shelf - 1pc
13		14		15	
	Bottom Panel - 1pc		Front Drawer - 3pcs		Side Drawer (L) - 3pcs
16		17		18	
	Side Drawer (R) - 3pcs		Rear Drawer - 3pcs		Bottom Drawer - 3pcs
19					
	Sink - 1pc				

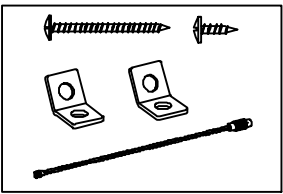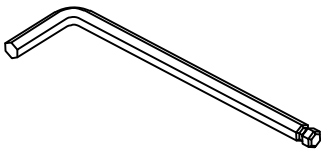
# Hardware Lists: N729P300165

<div>A</div>  <p>Ø13xØ1/4*30mm</p>	<div>B</div>  <p>Ø14xØ6</p>	<div>C</div> 
<p>Hex-Head bolt (10pcs)</p>	<p>Flat Washer (10pcs)</p>	<p>Inhaler magnet (2set)</p>
<div>D1</div> 	<div>D2</div> 	<div>E</div>  <p>Ø8x8mm</p>
<p>Damping hinge (2set)</p>	<p>Damping hinge (2set)</p>	<p>Plastic Canopy (12pcs)</p>
<div>G</div>  <p>Ø8xØ4*25mm</p>	<div>H</div>  <p>Ø6xØ3*12mm</p>	<div>I</div>  <p>Ø10 x 30mm</p>
<p>Round head screw (24pcs)</p>	<p>Round head screw (12pcs)</p>	<p>Wooden dowel (12pcs)</p>
<div>J</div>  <p>Ø8xØ4*50mm</p>	<div>K1</div> 	<div>K2</div> 
<p>Round head screw (12pcs)</p>	<p>Handle (2pcs)</p>	<p>Handle (3pcs)</p>
<div>M</div> 	<div>N</div>  <p>K4mm</p>	<div>L</div>  <p>Ø5/32*19mm</p>
<p>Anti fall Hardware (2sets)</p>	<p>Allen key (1pc)</p>	<p>Handle screw (5pcs)</p>


## STEP 1 :

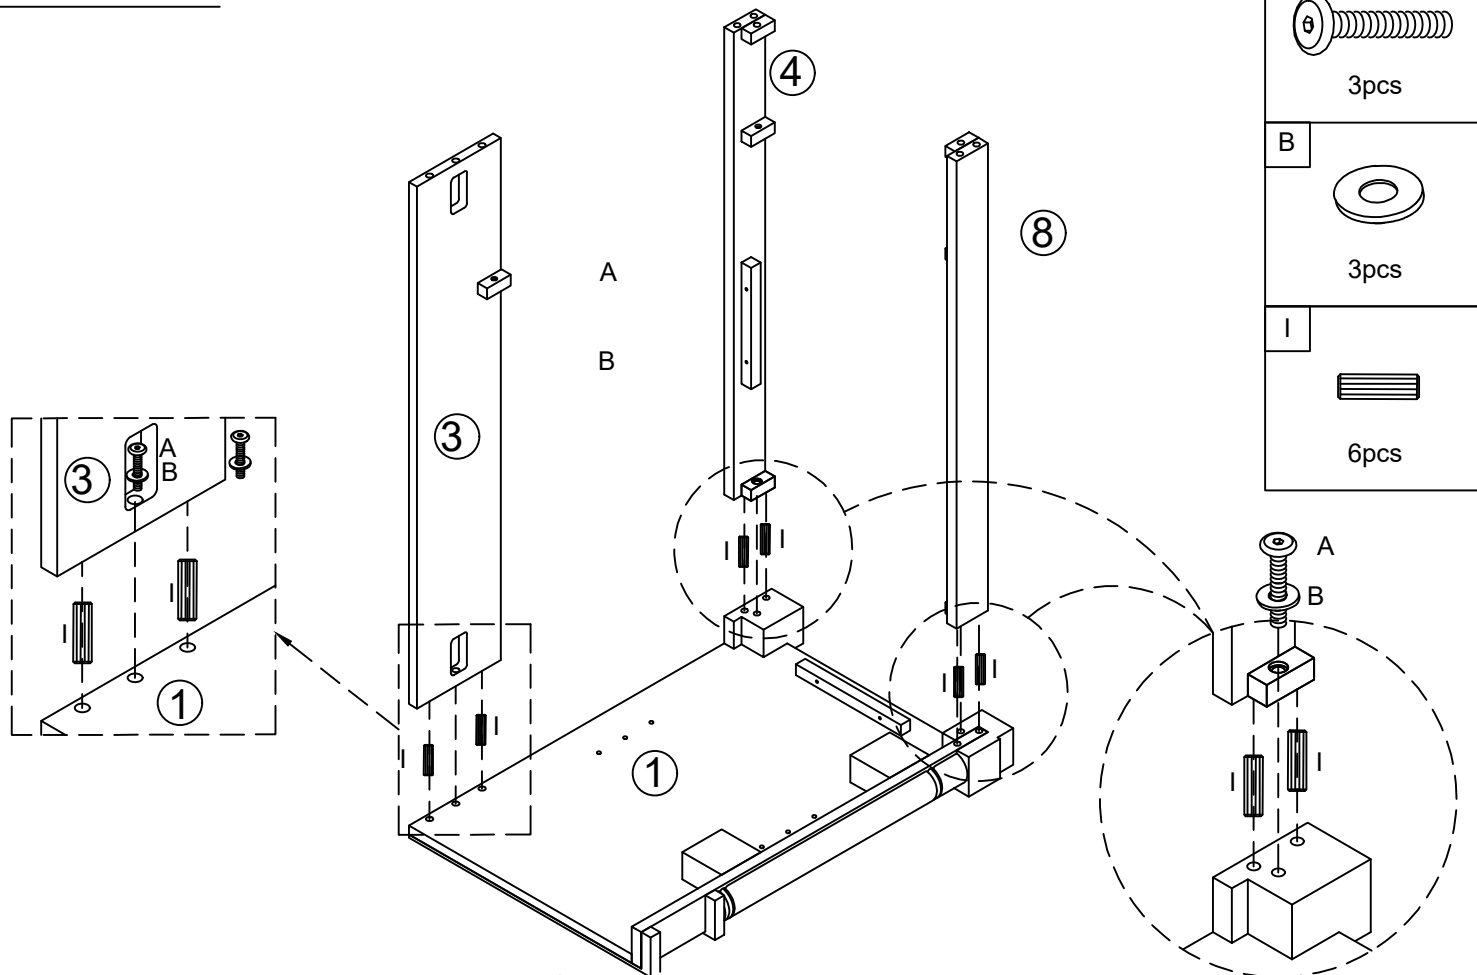


## STEP 2 :

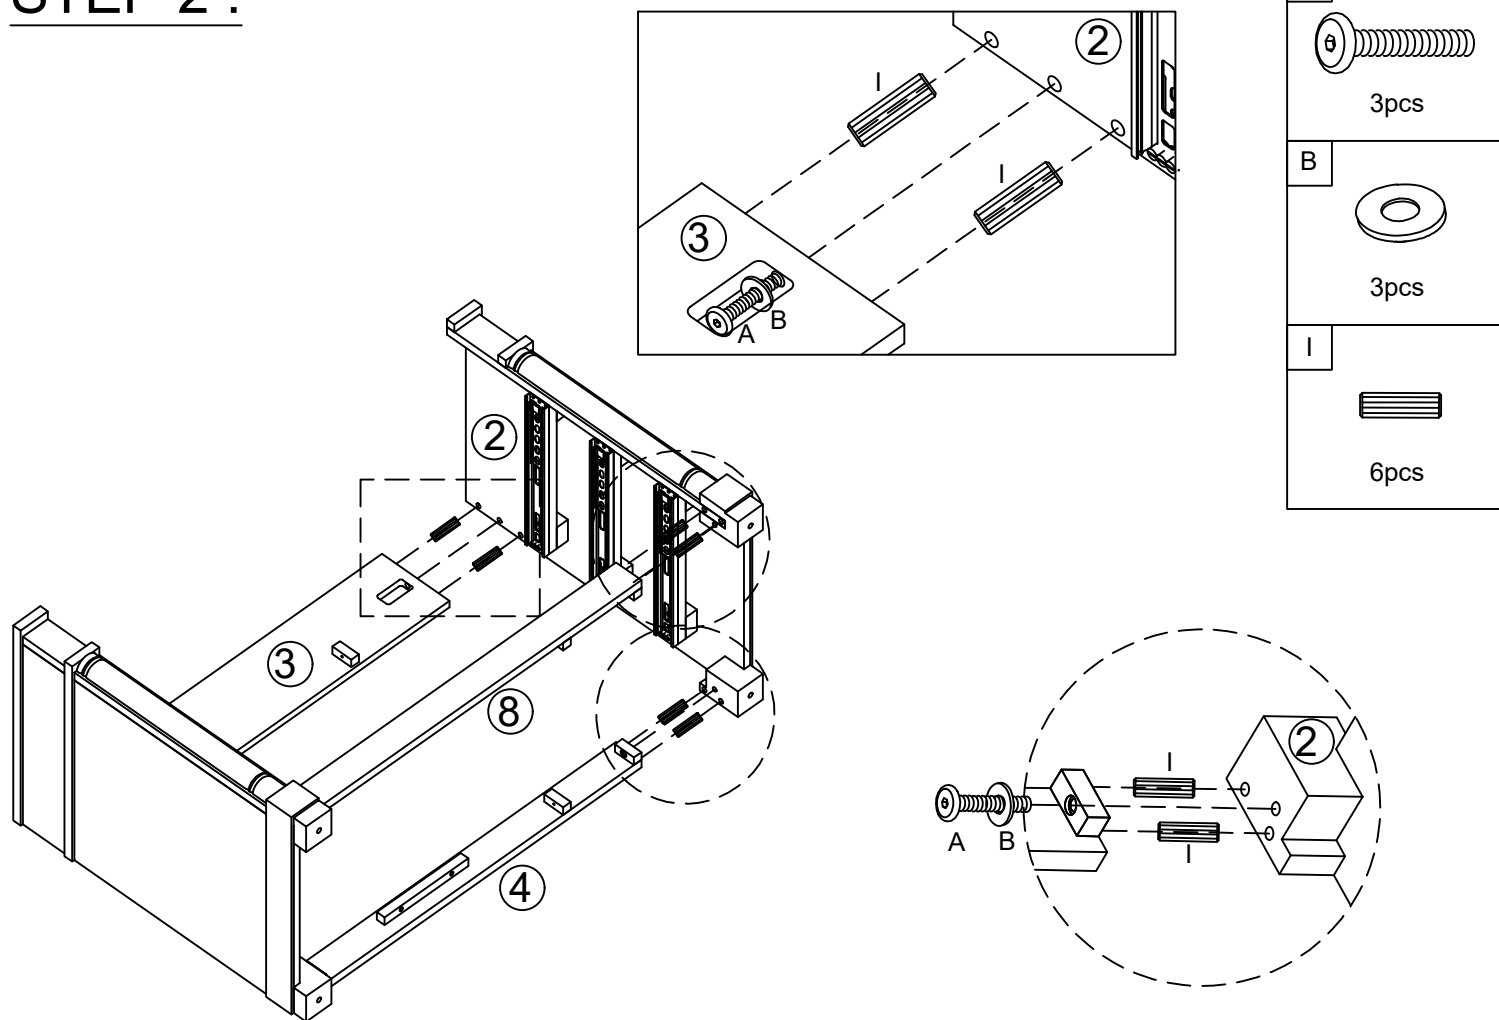

## STEP 3 :

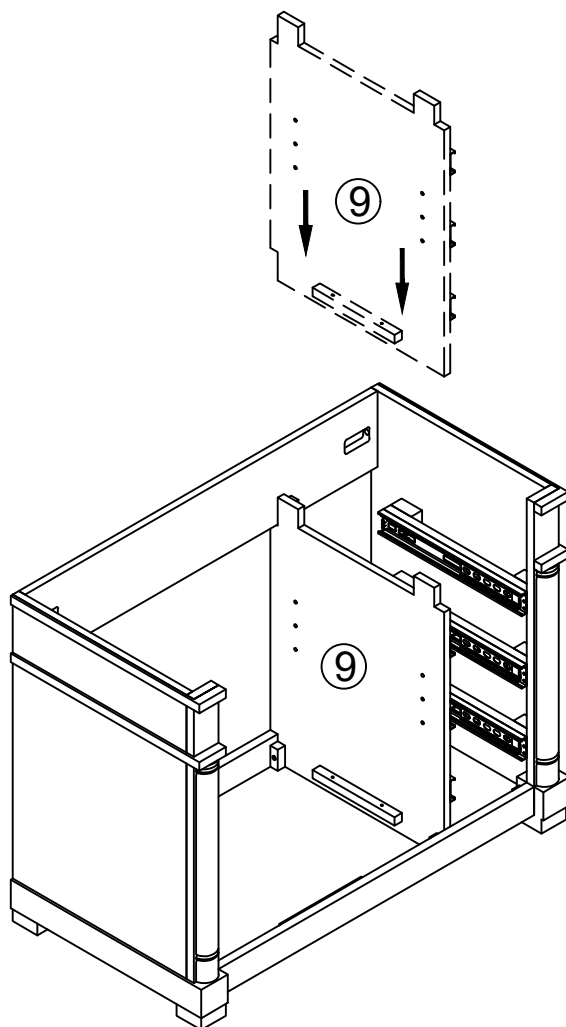


## STEP 4 :

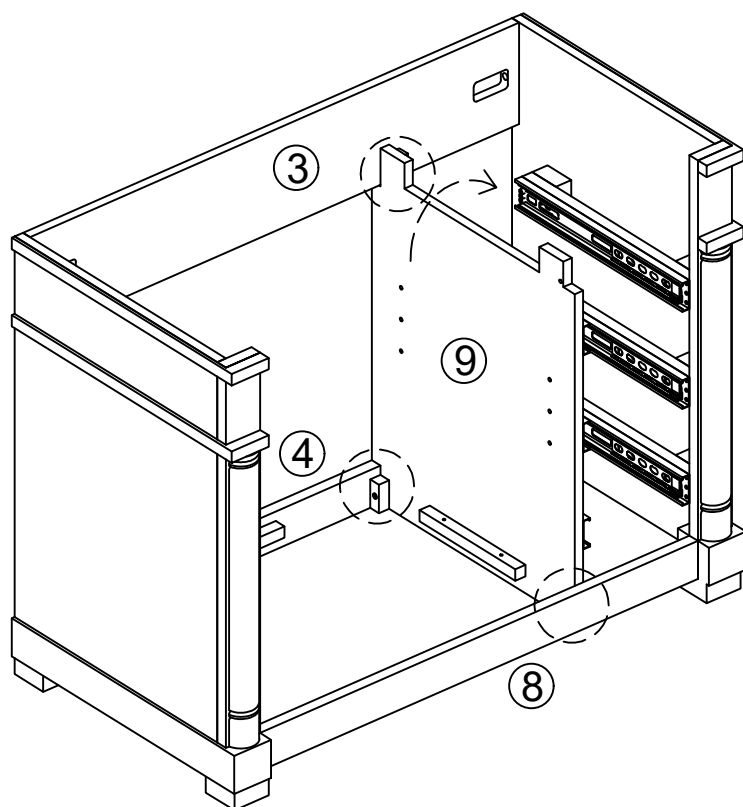

G




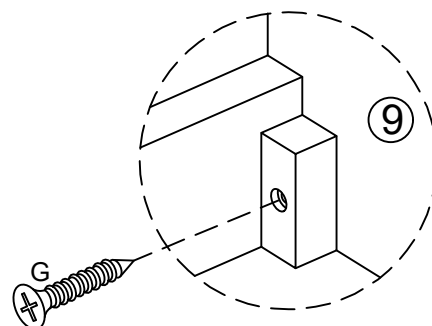3pcs







## STEP 5 :

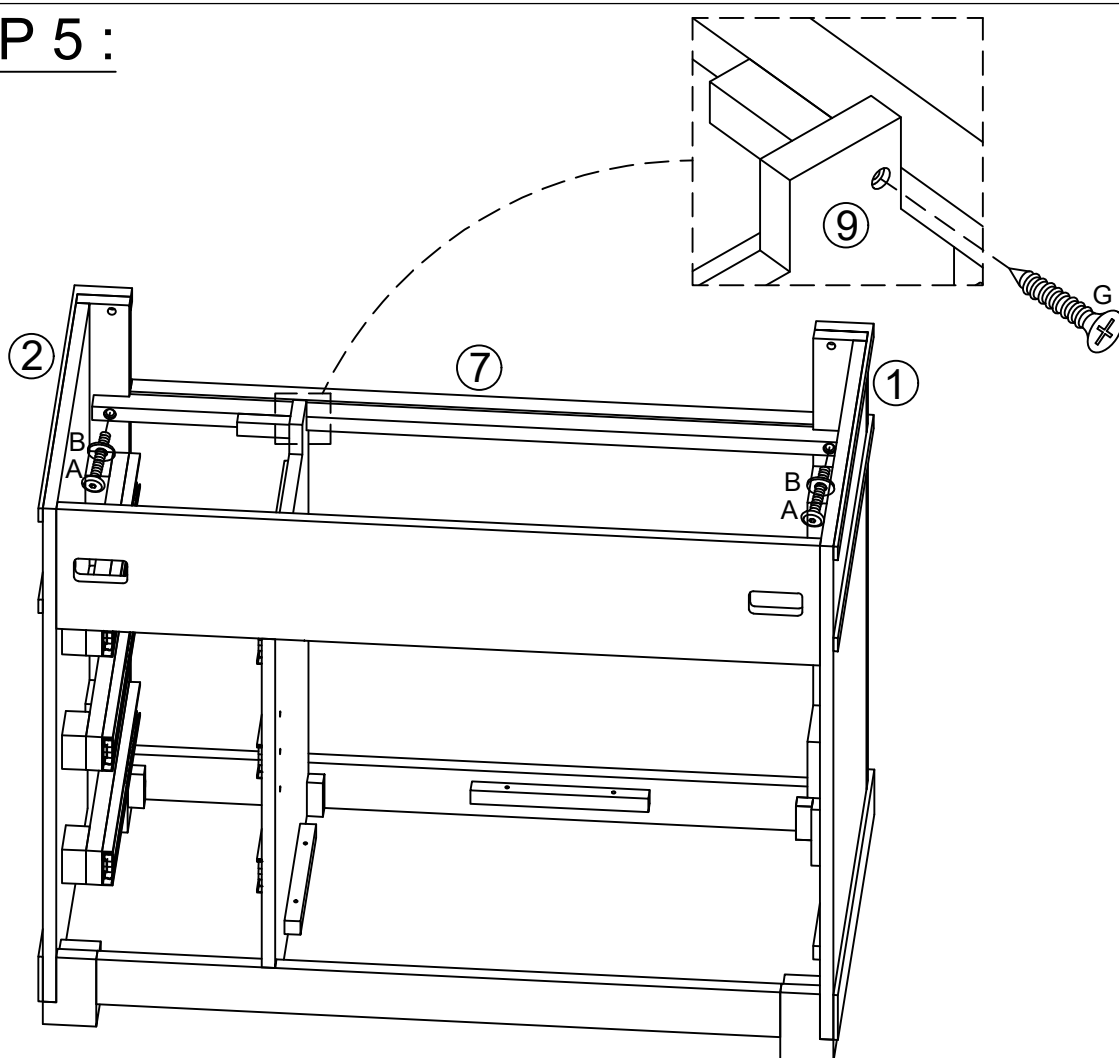

## STEP 6 :

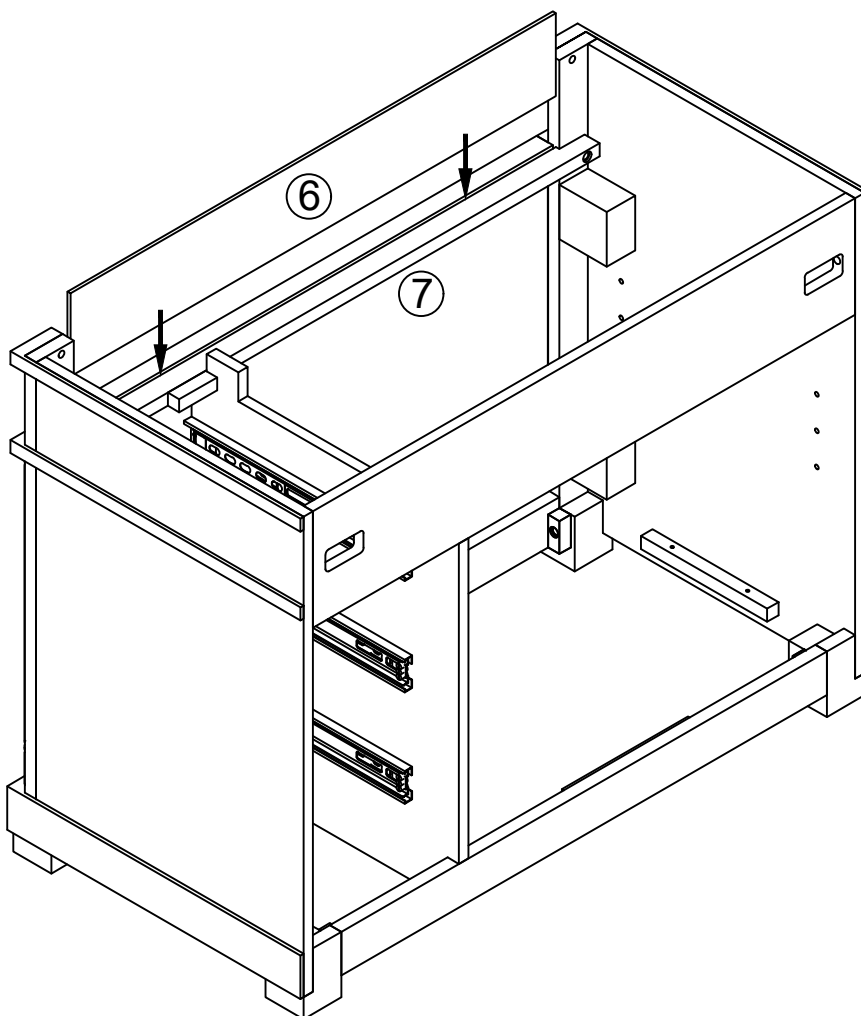

## STEP 7 :

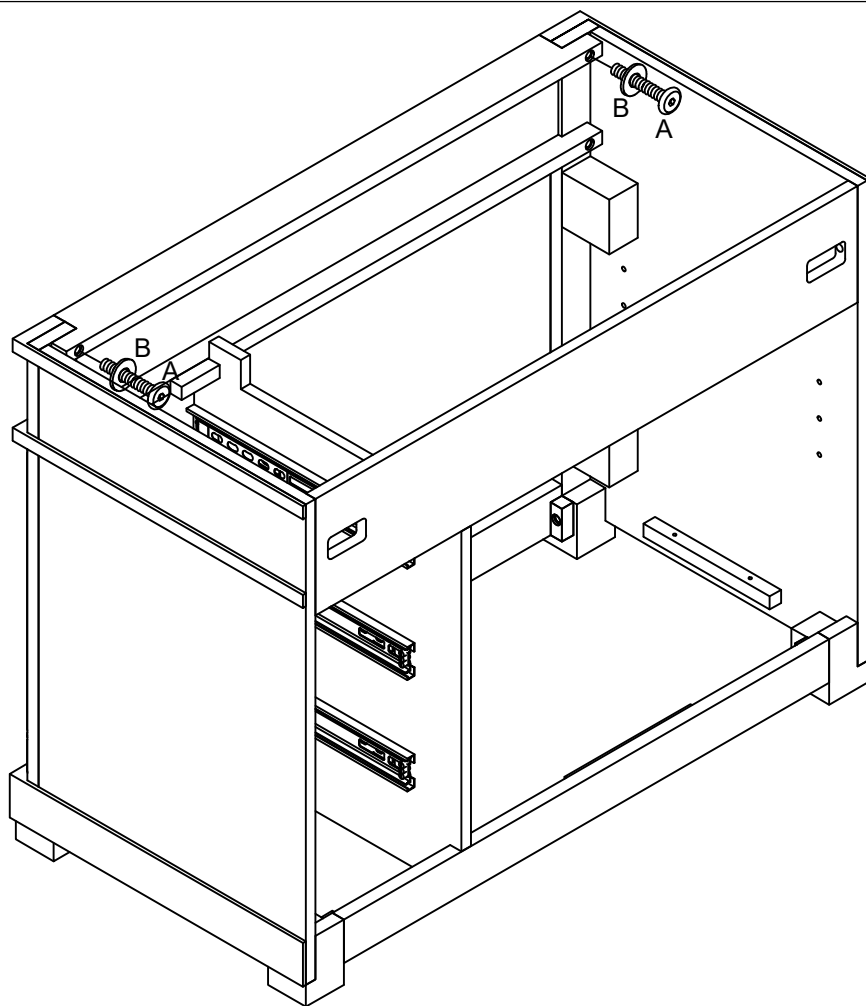

A




2pcs

B



2pcs

## STEP 8 :

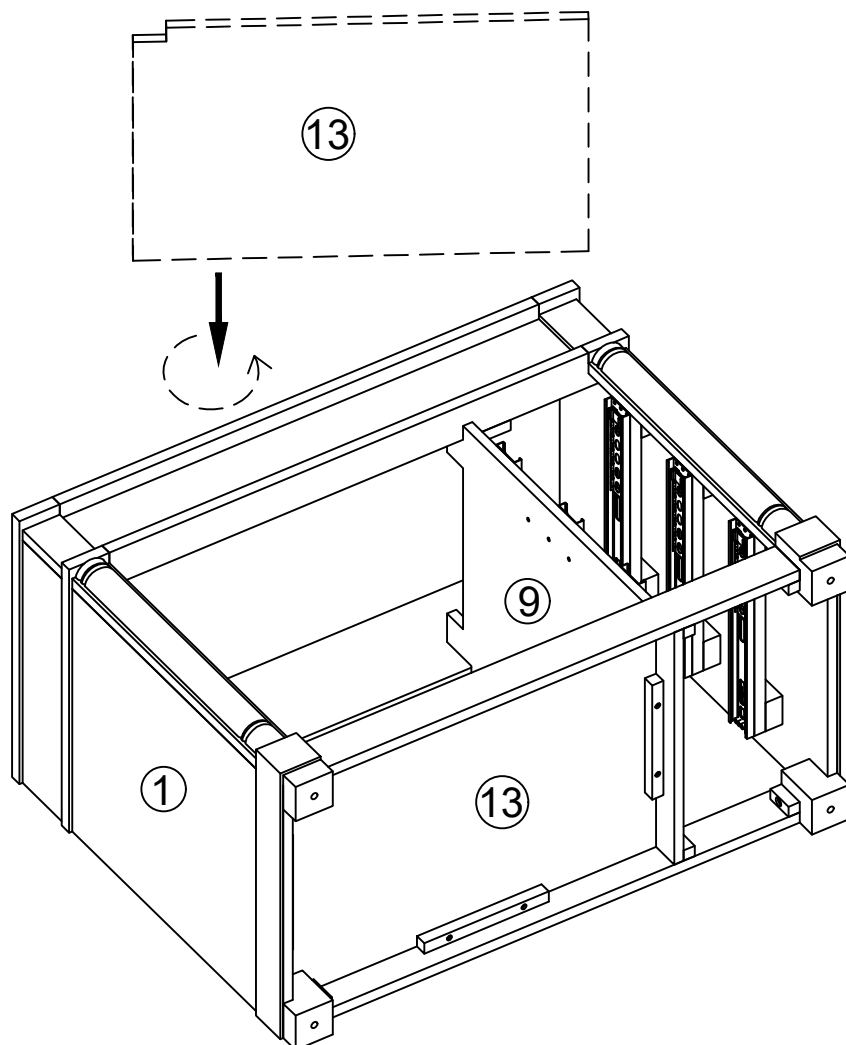



13

9






1

13


## STEP 9 :

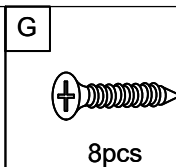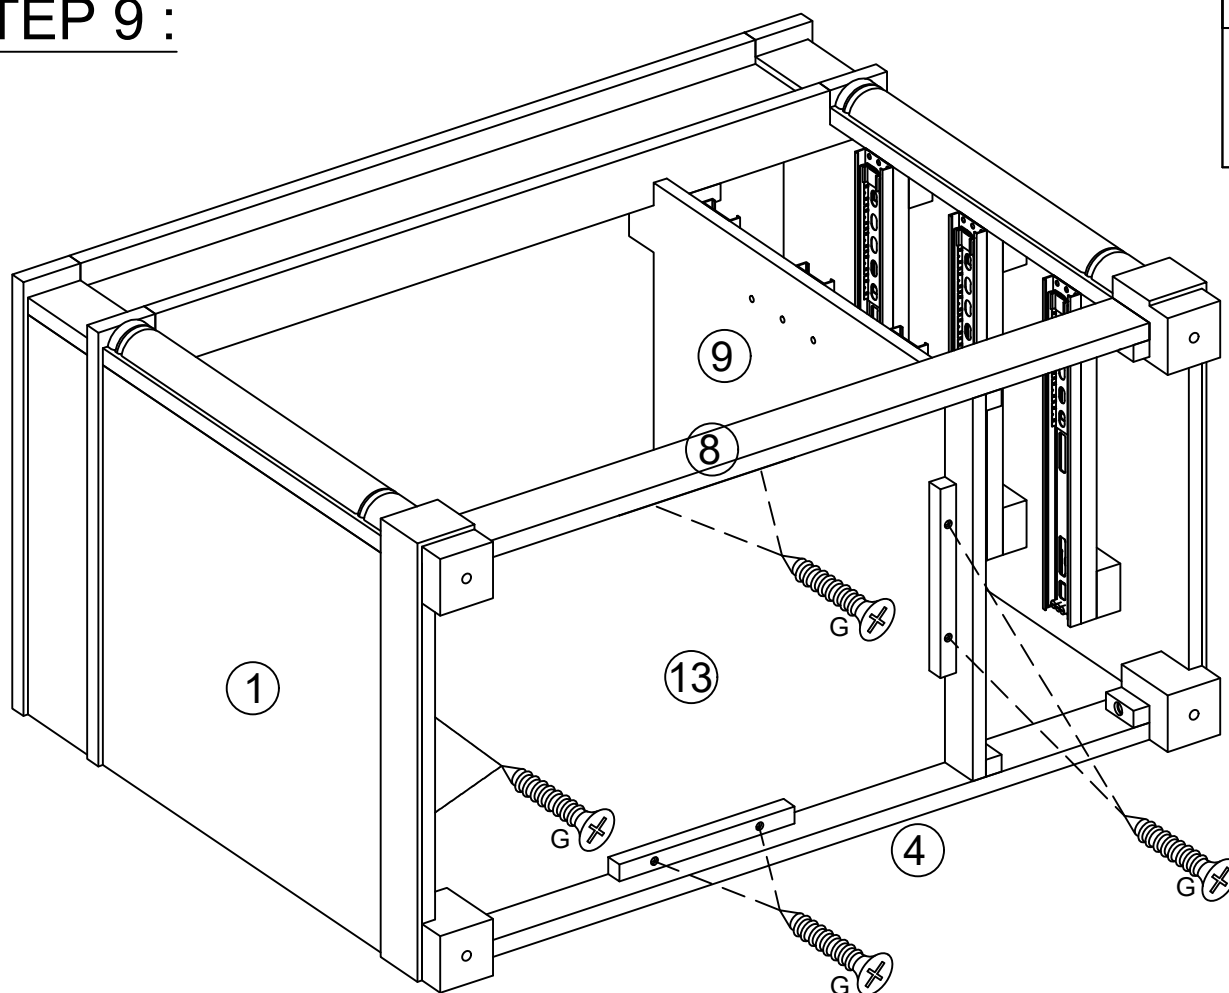


## STEP 10 :

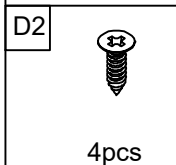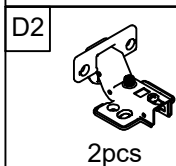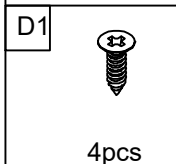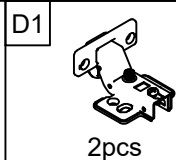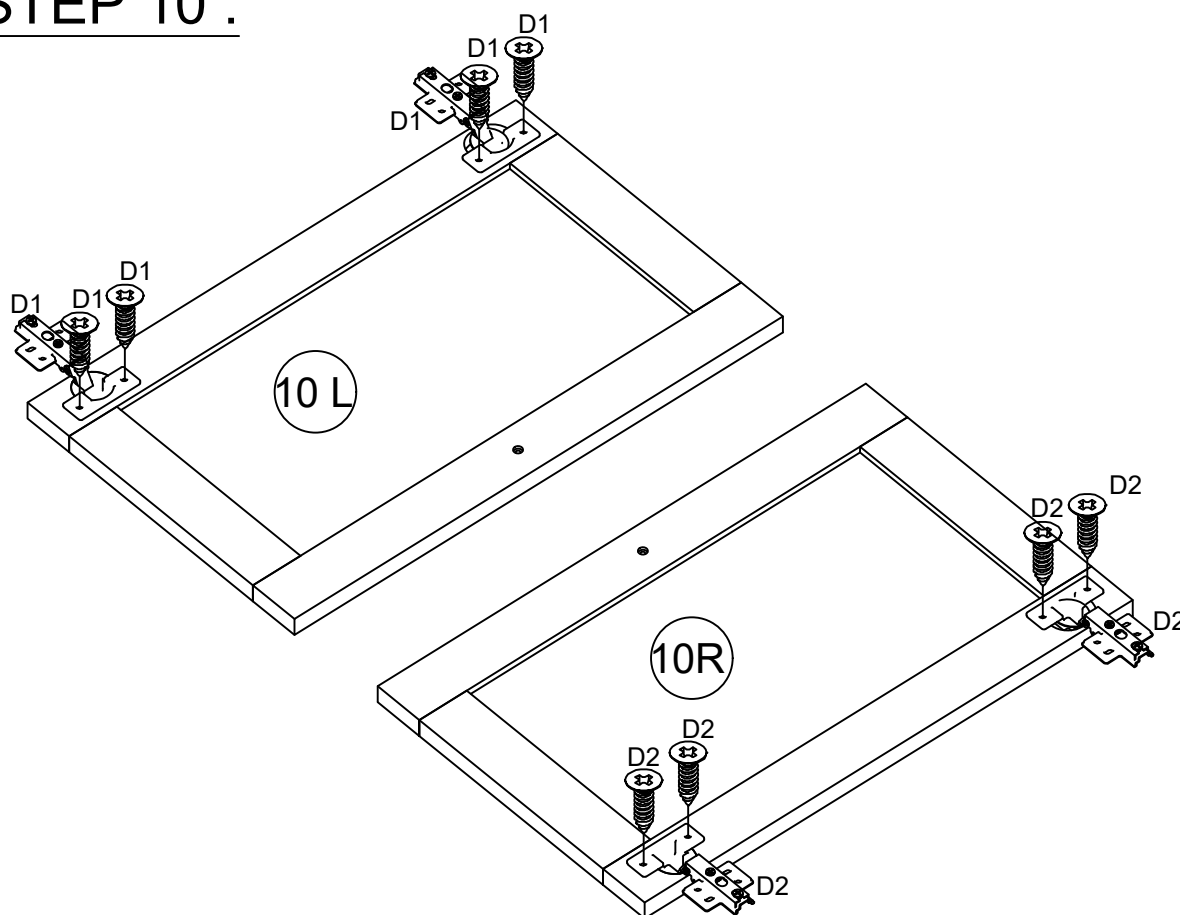

## STEP 11 :

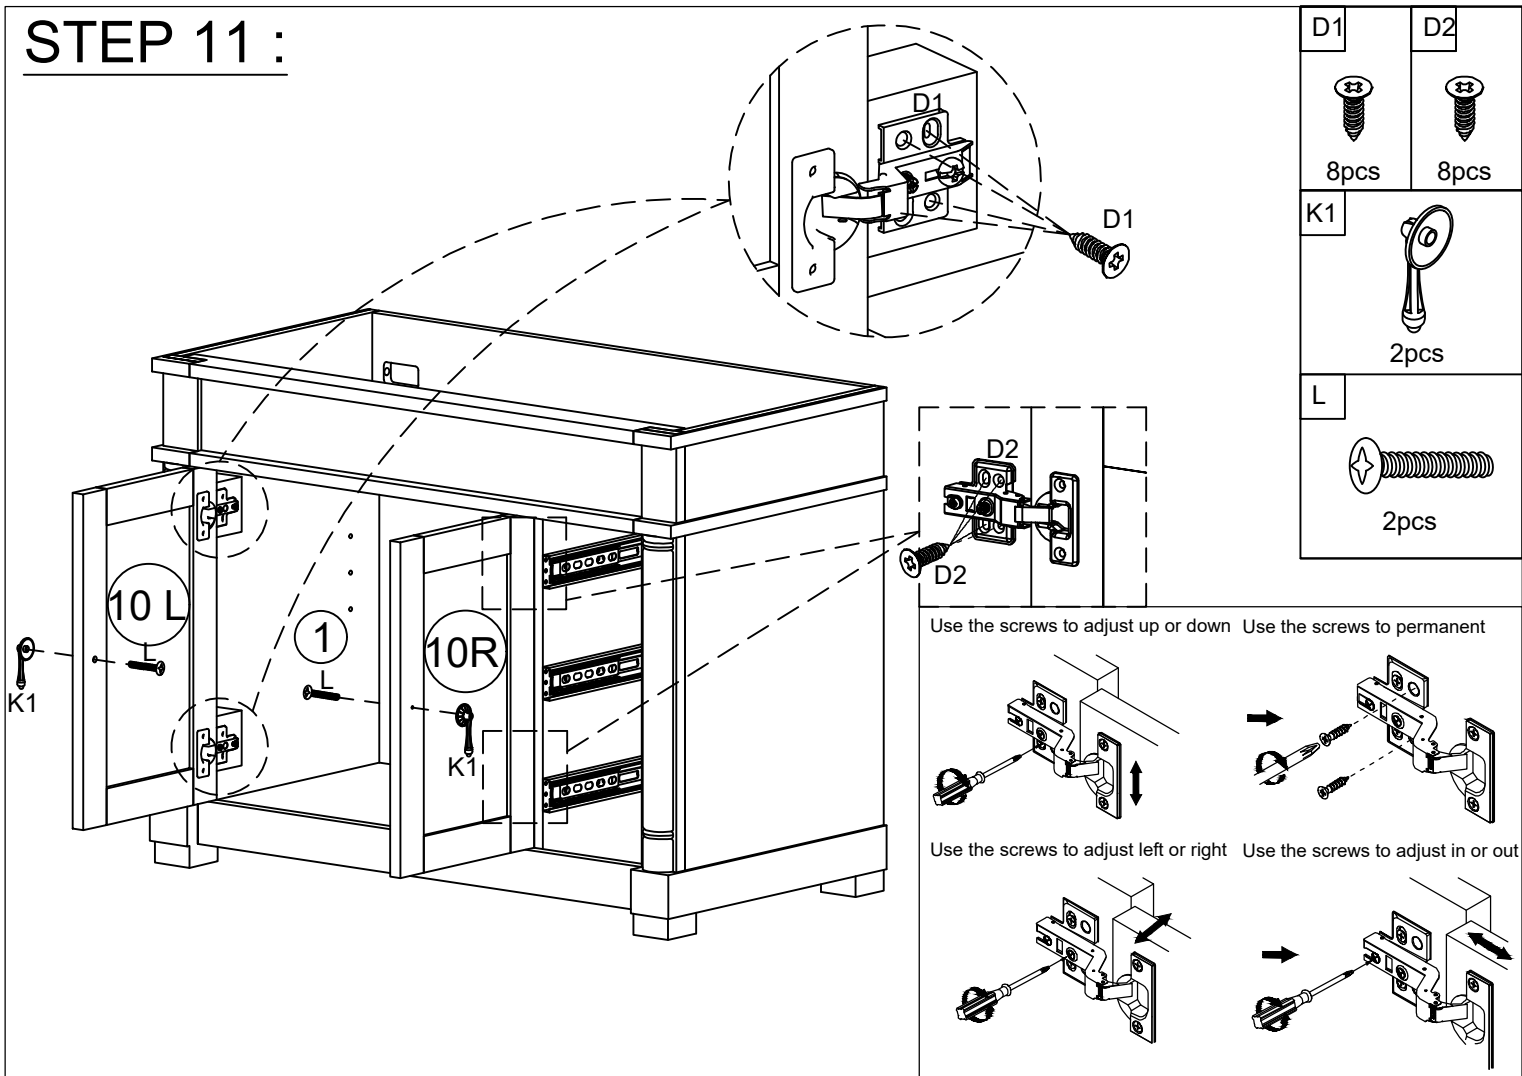

## STEP 12 :


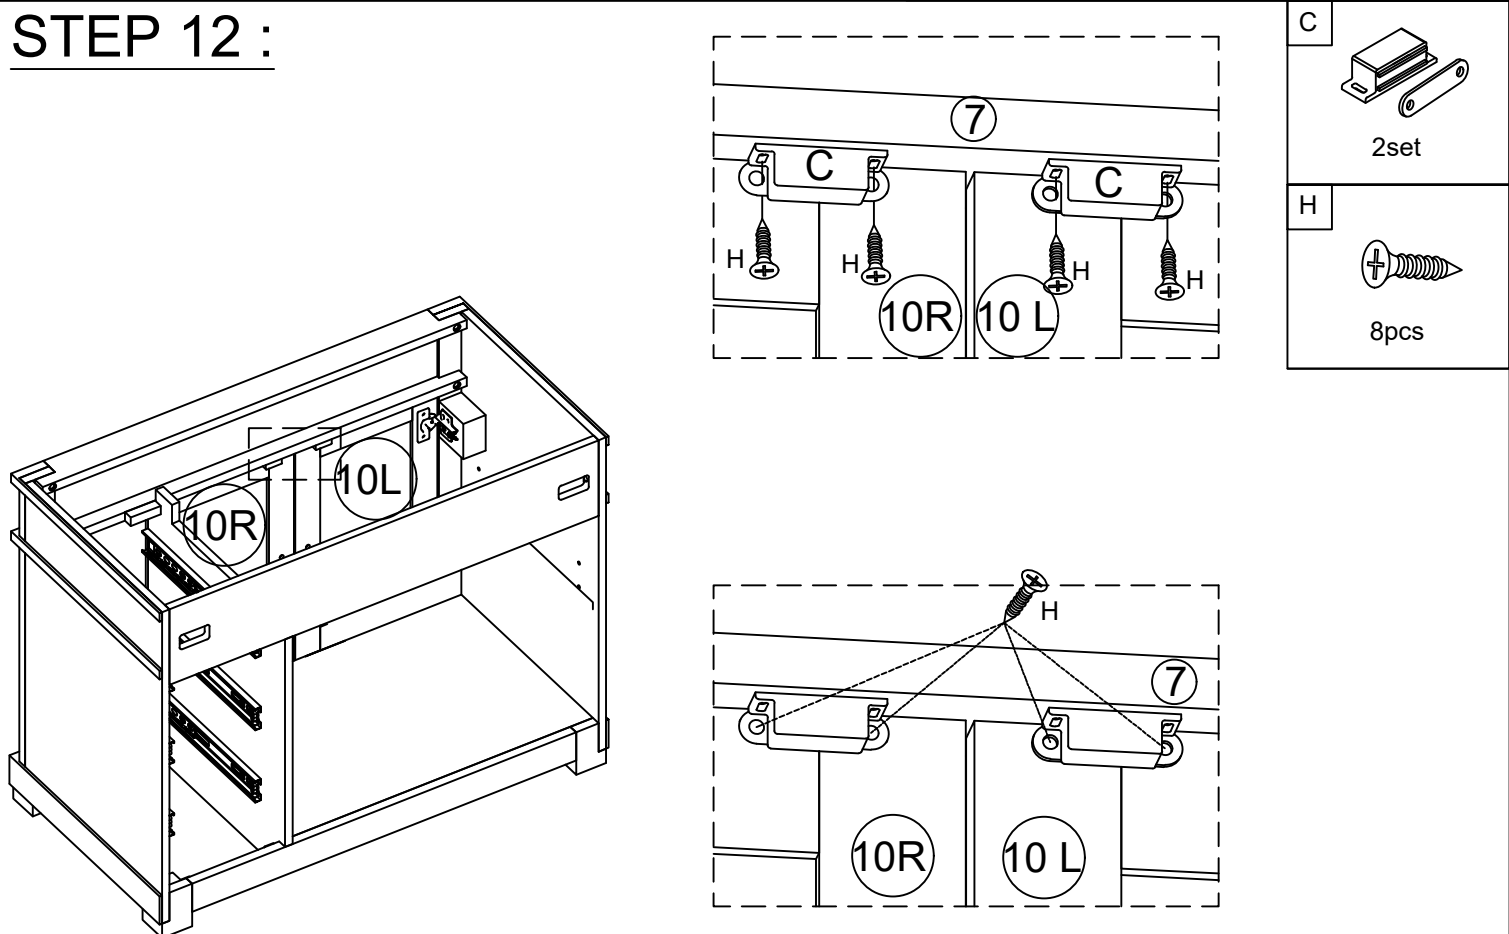


## STEP 13 :

F



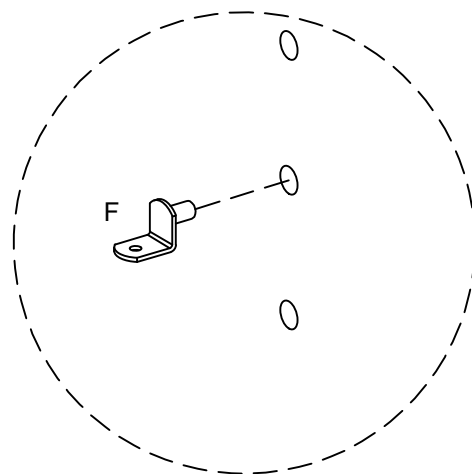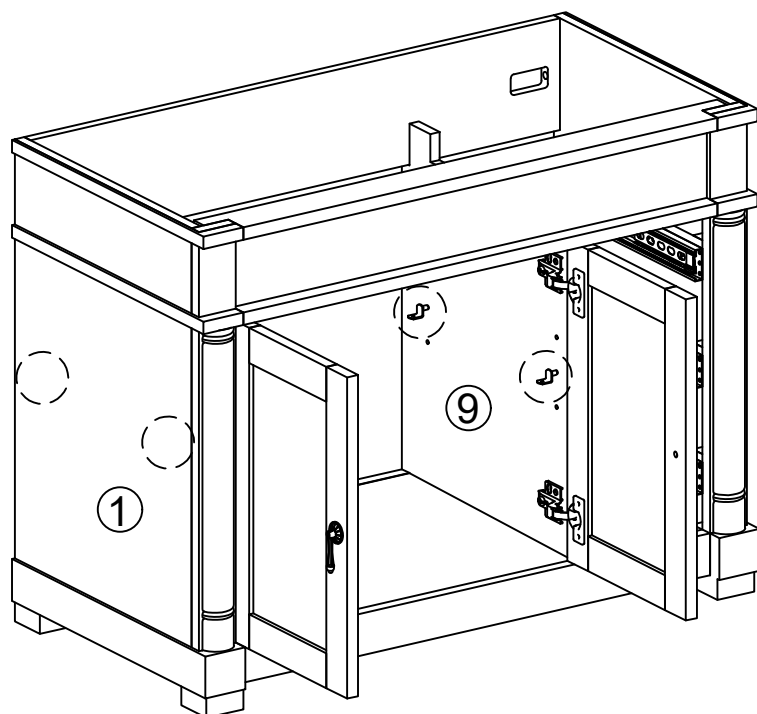4pcs






## STEP 14 :


H



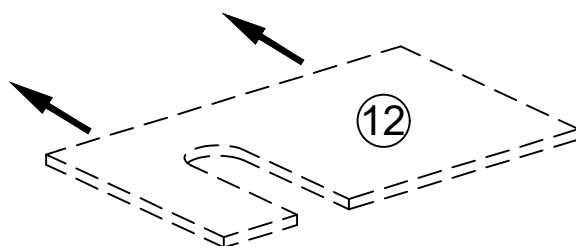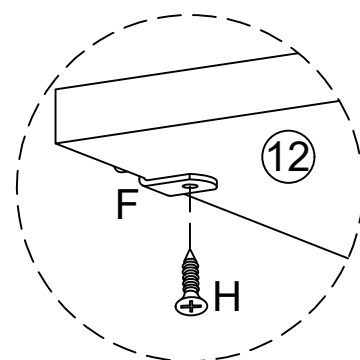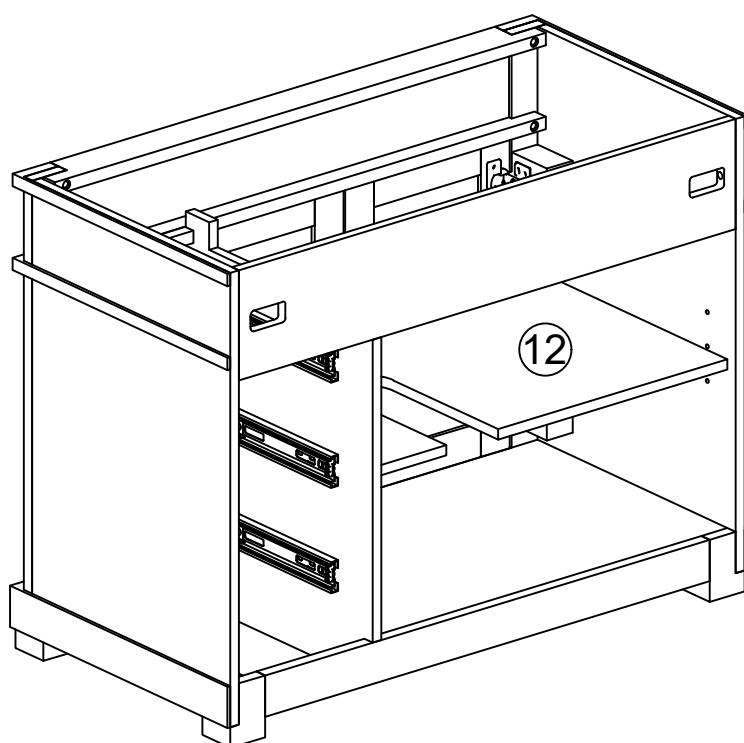4pcs



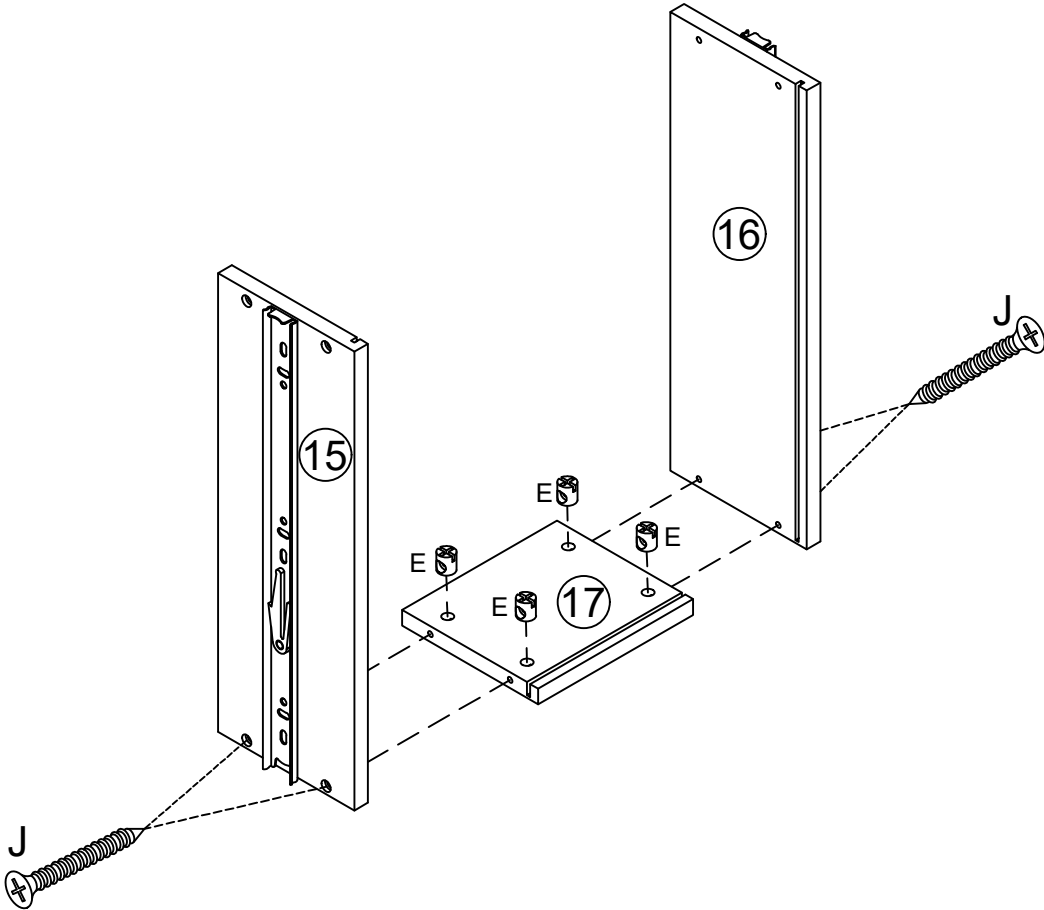STEP 15 :




E



12pcs


J



12pcs

X 3

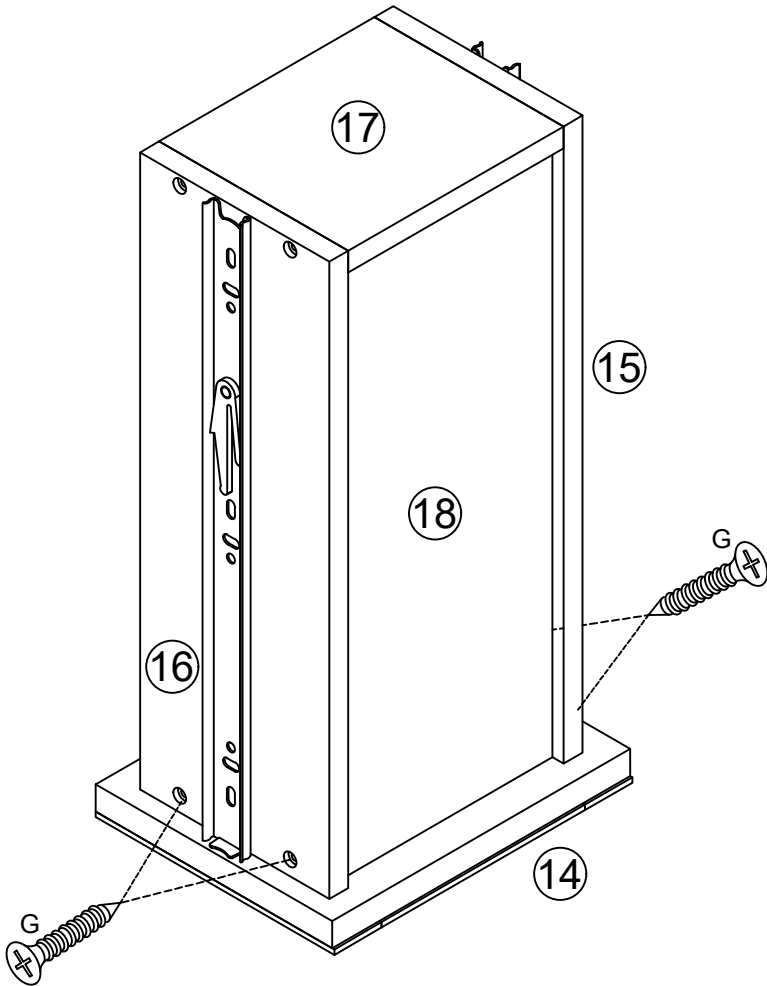STEP 16 :




G



12pcs




X 3

### STEP 17 :

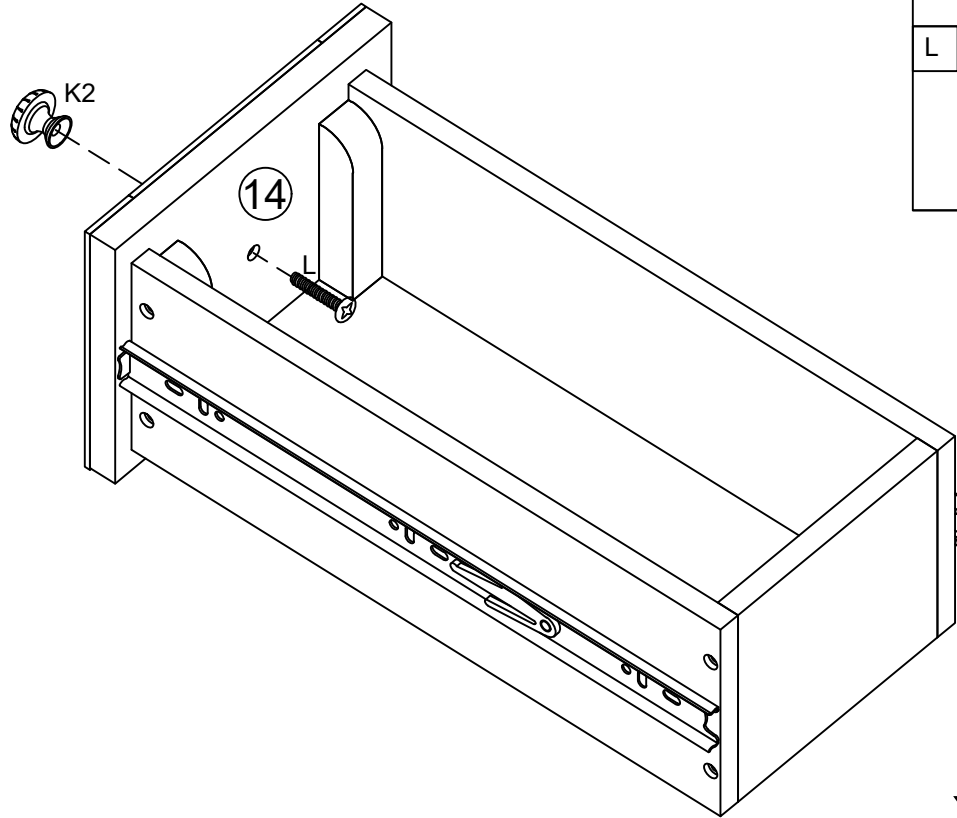


**X 3**
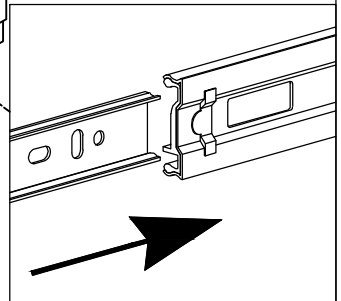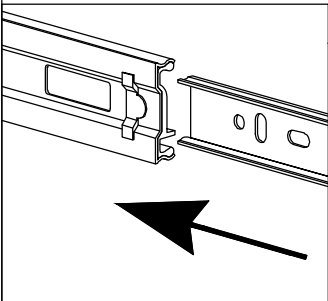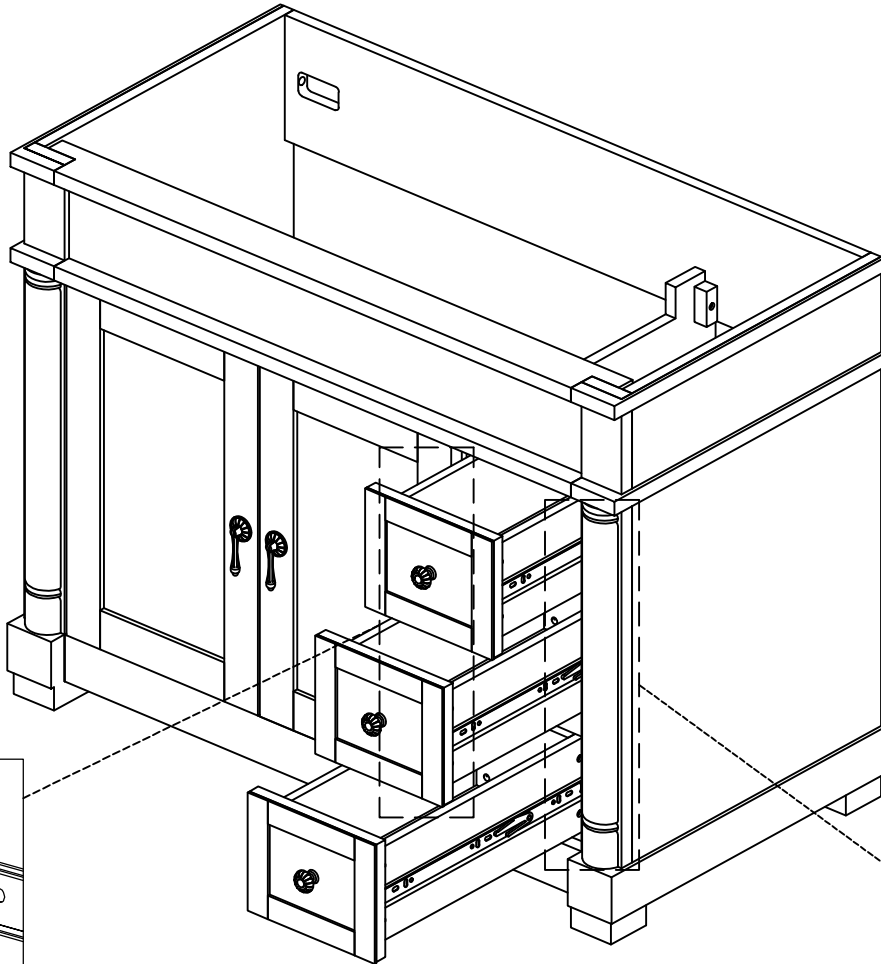
### STEP 18 :




## STEP 19 :

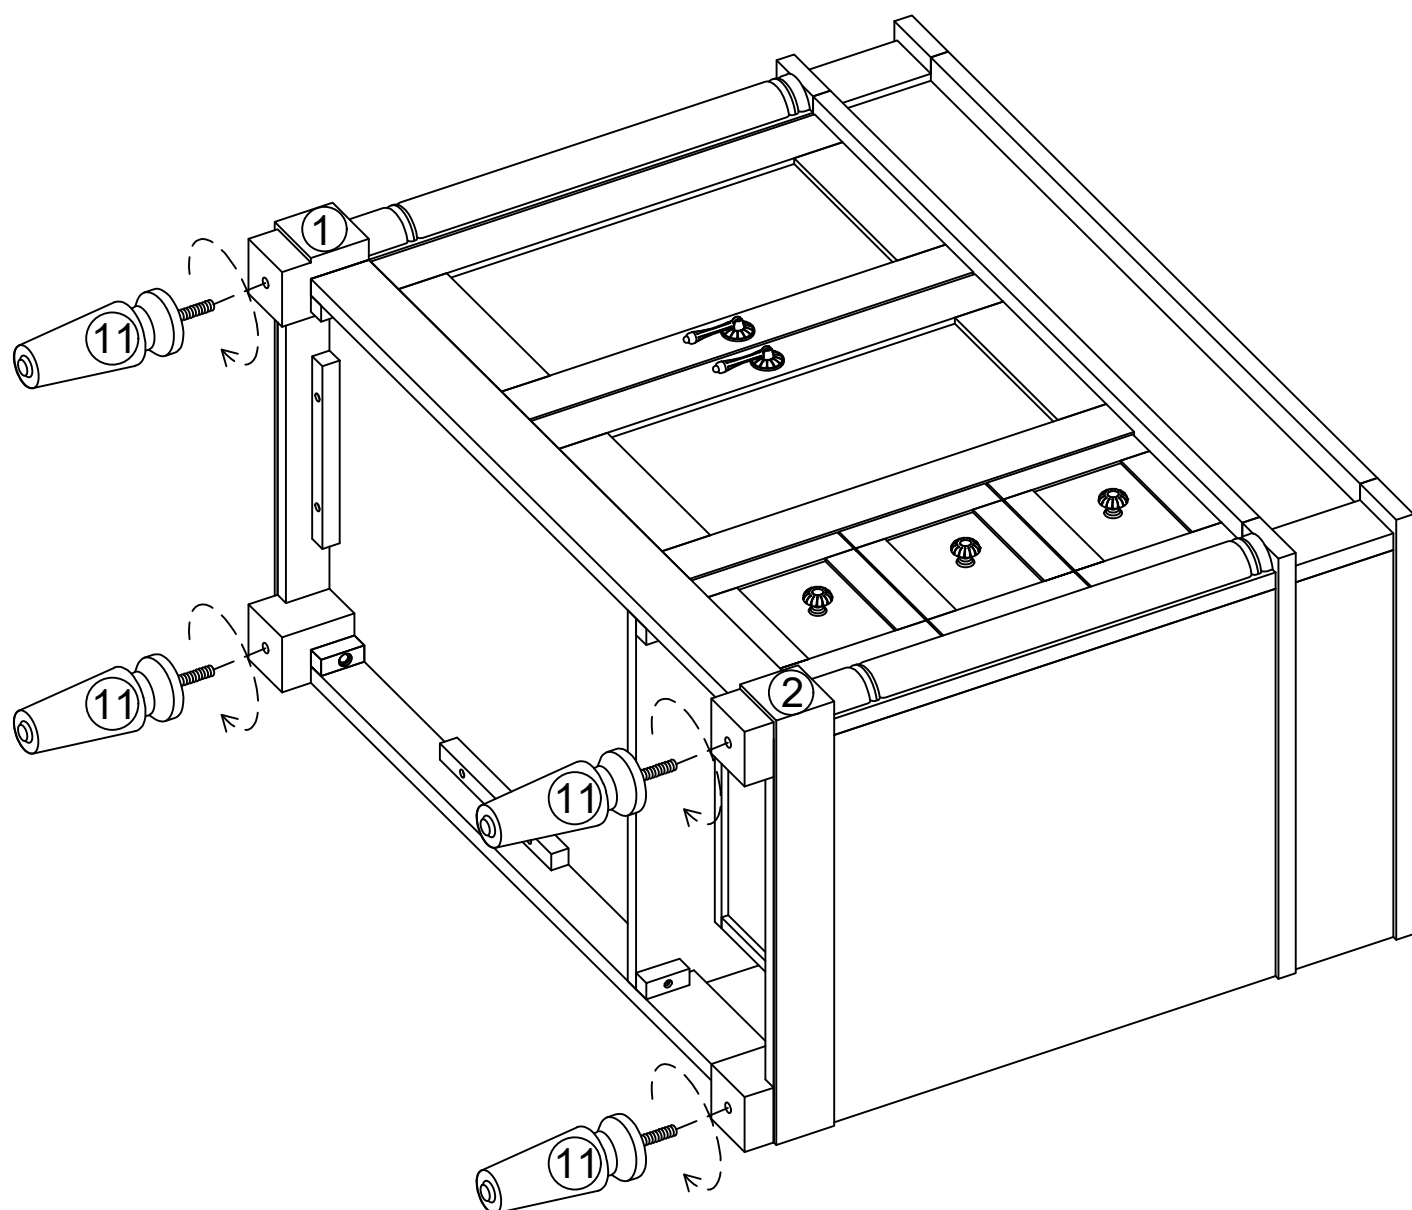




# STEP 20 :

M




2set

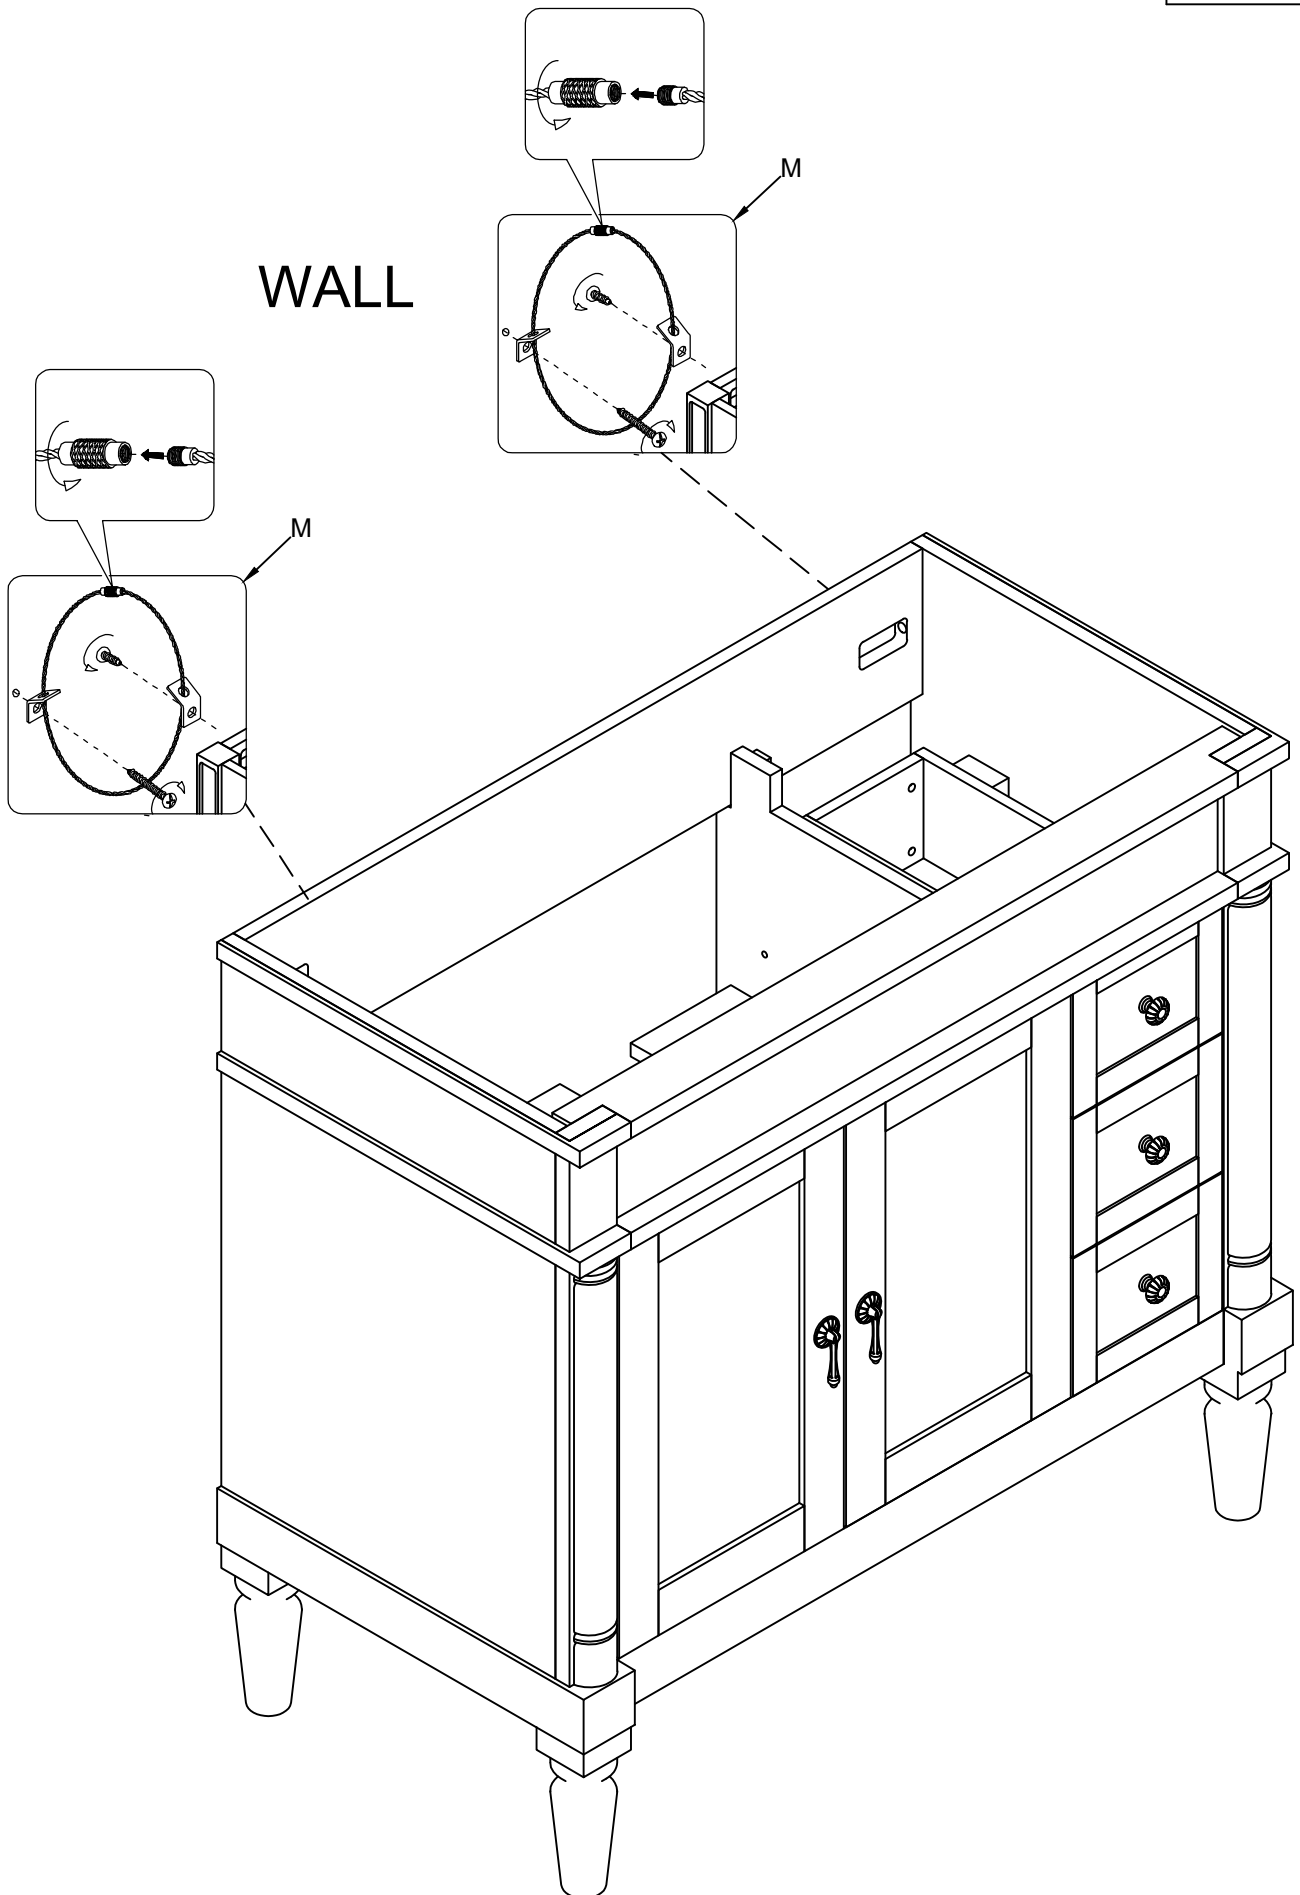WALL




## STEP 22 :

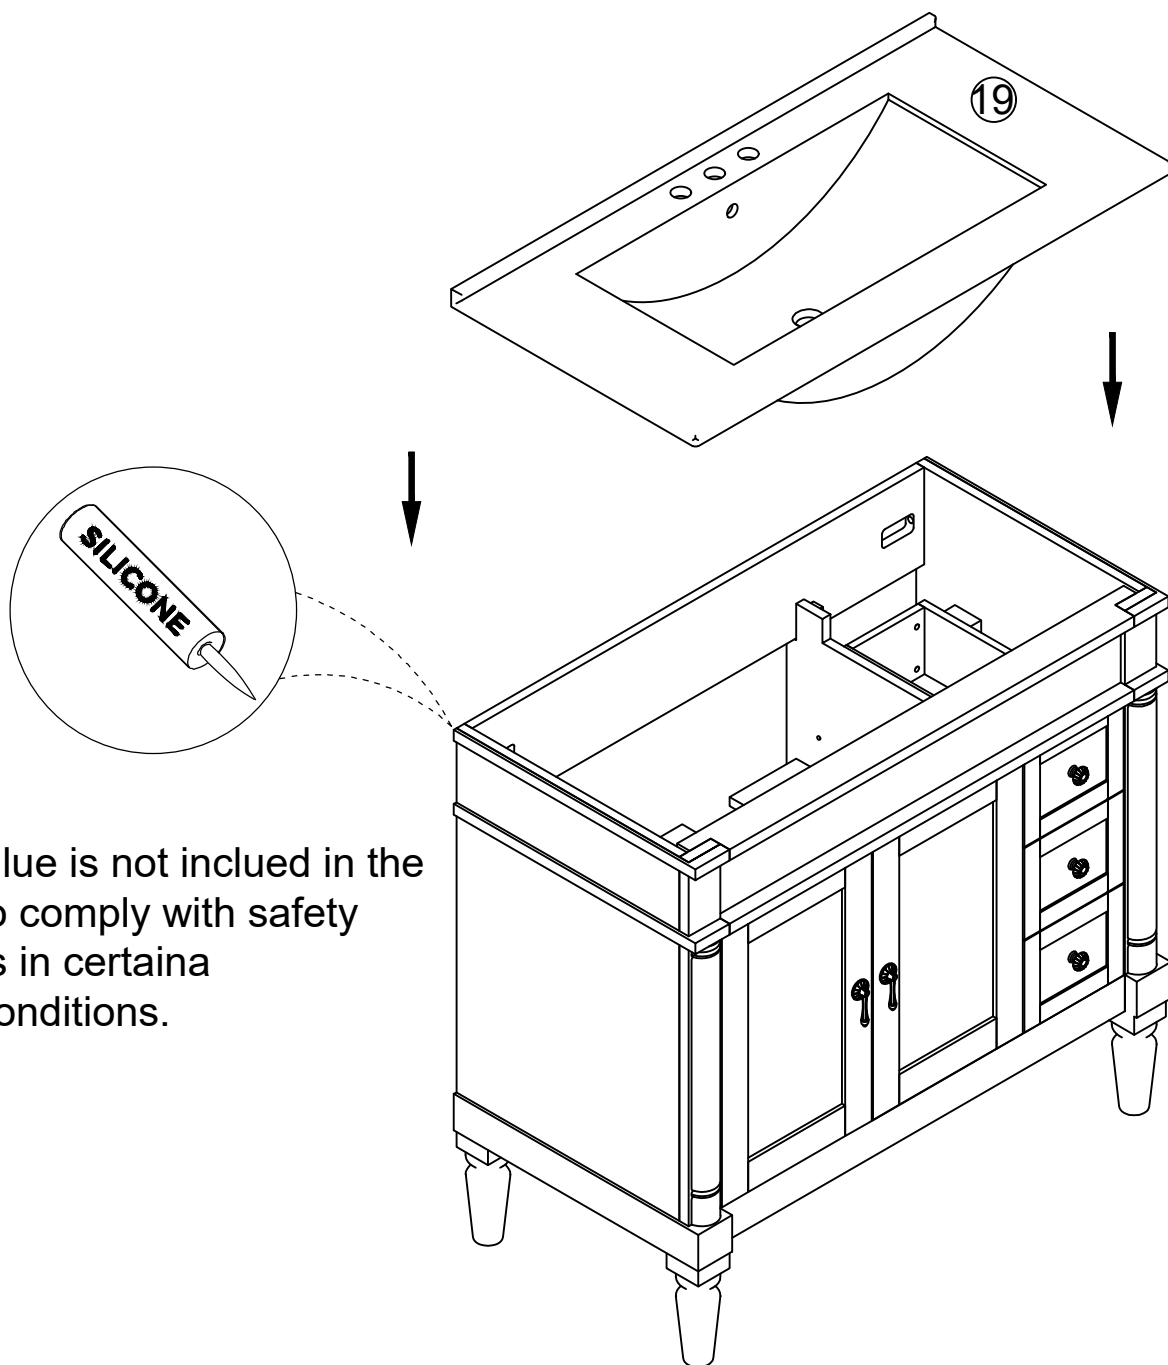Install the sink on the cabinet with glue  
Let stand for 24 hours




\*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

## STEP 23 :

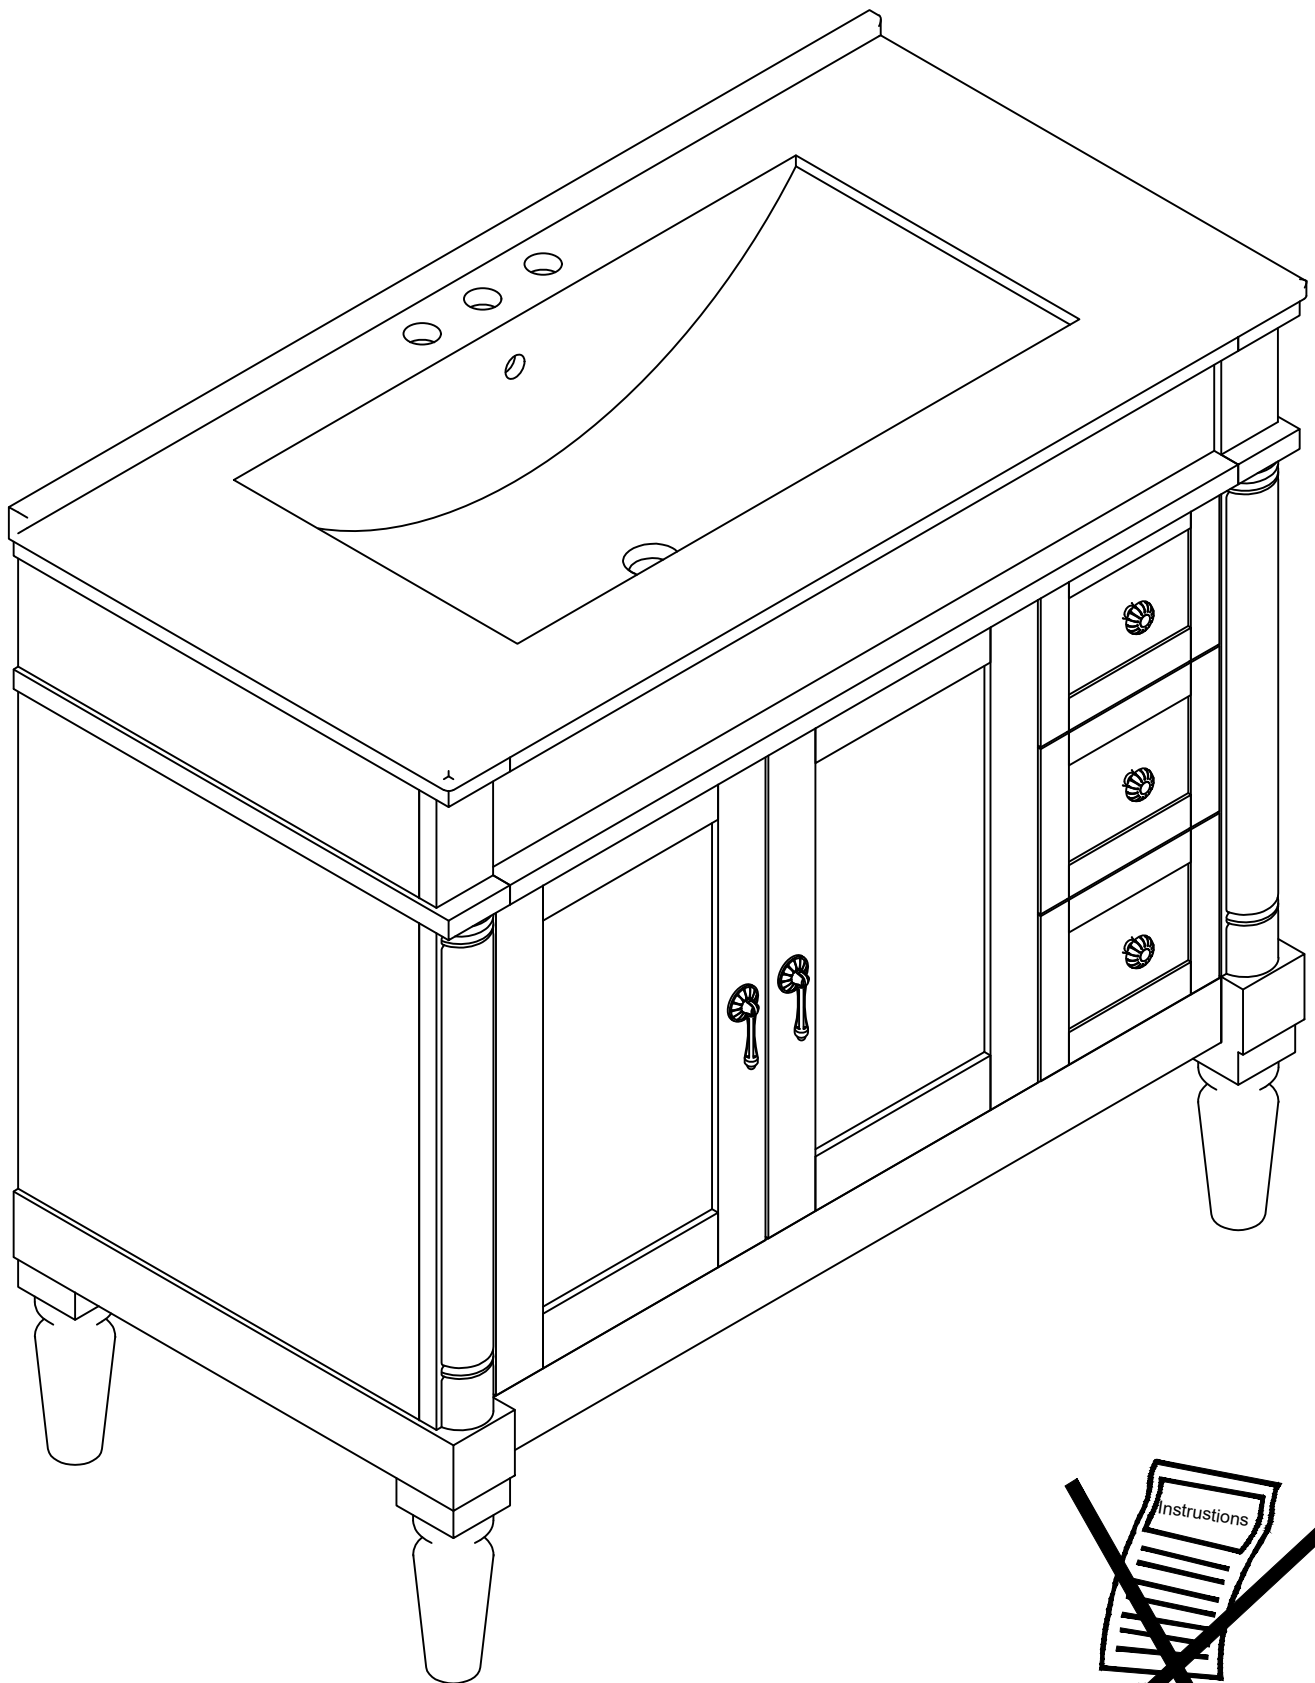


# HINGE ADJUSTMENTS

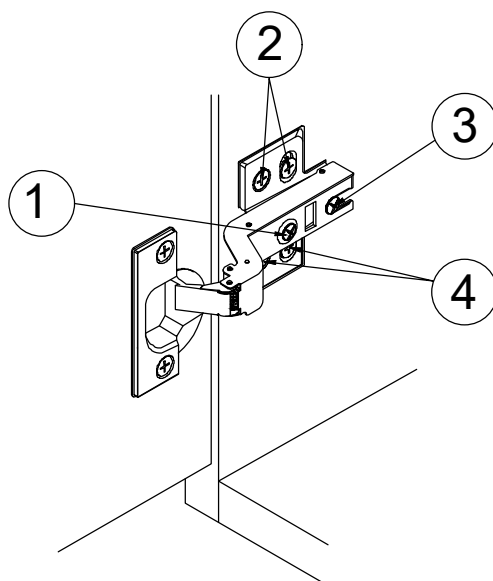


## ① Sideways / Tilt adjustment

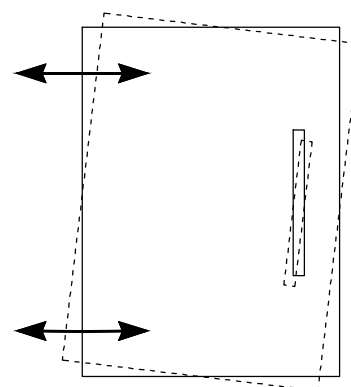Turn the screw  
clockwise to move the door further away from  
the side of the cabinet  
anticlockwise to move the door closer to the  
side of the cabinet



## ② ④ Height adjustment

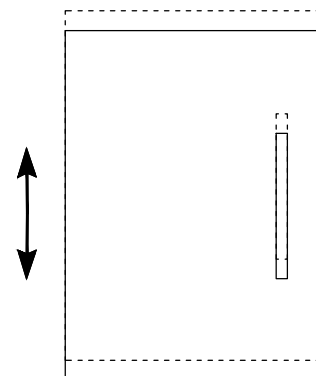While supporting the weight of the door, turn the  
screws  
clockwise to move the door up  
anticlockwise to move the door down



## ③ Forward and back adjustment

If the gap between the back of the door and the  
cabinet is too small, and the door may not close  
fully. Turn the screw  
clockwise to decrease the gap between the  
door and the cabinet  
anticlockwise to increase the gap between the  
door and the cabinet

