


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET


SKU - N729P299364


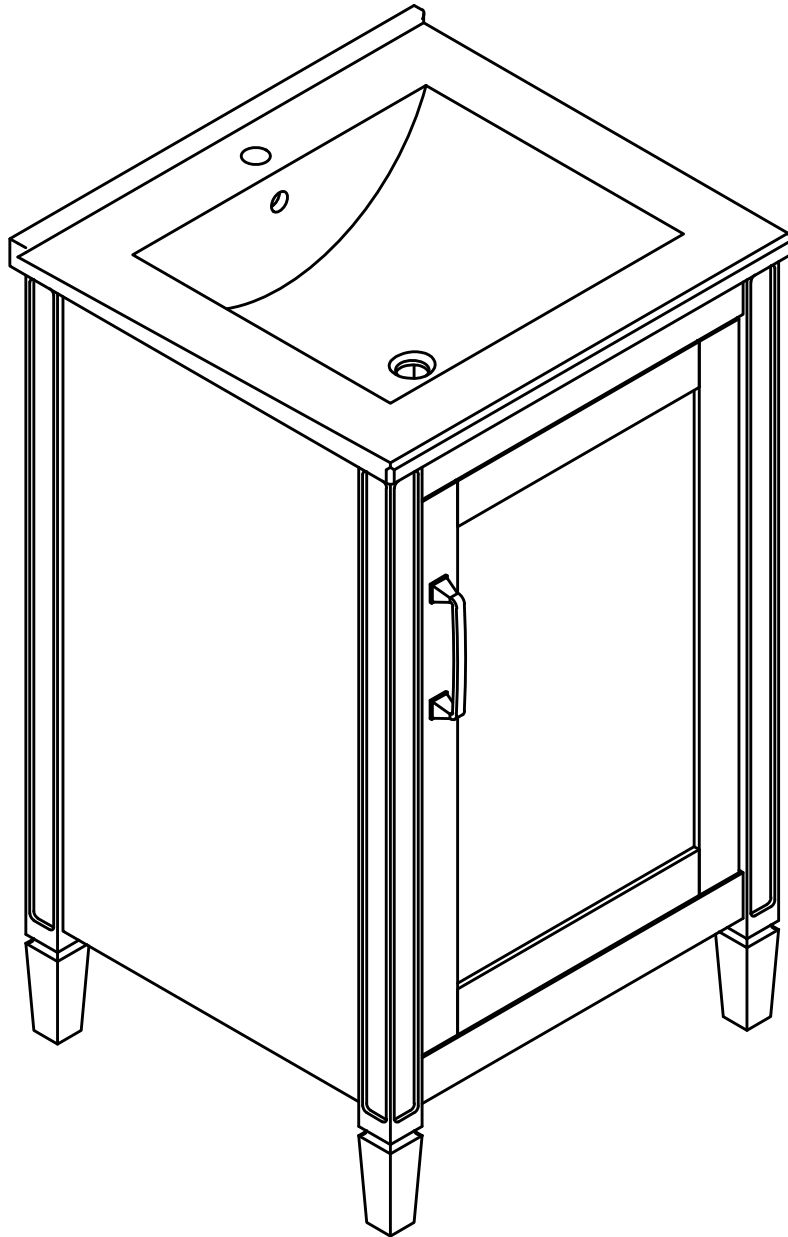


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

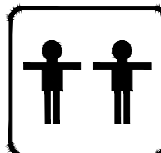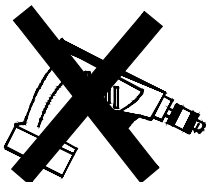


+

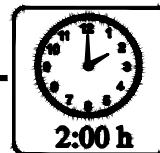

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.











Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

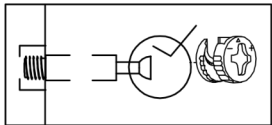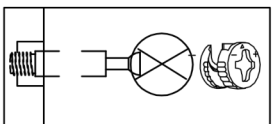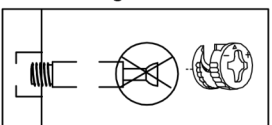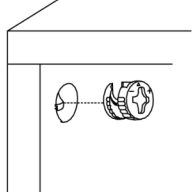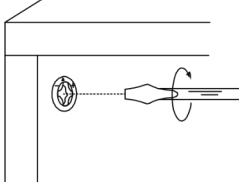 	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
 	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
 	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
 <p>Connect the panels together.</p>	
 <p>ARROW SIGN</p>	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
 	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>


Detail View

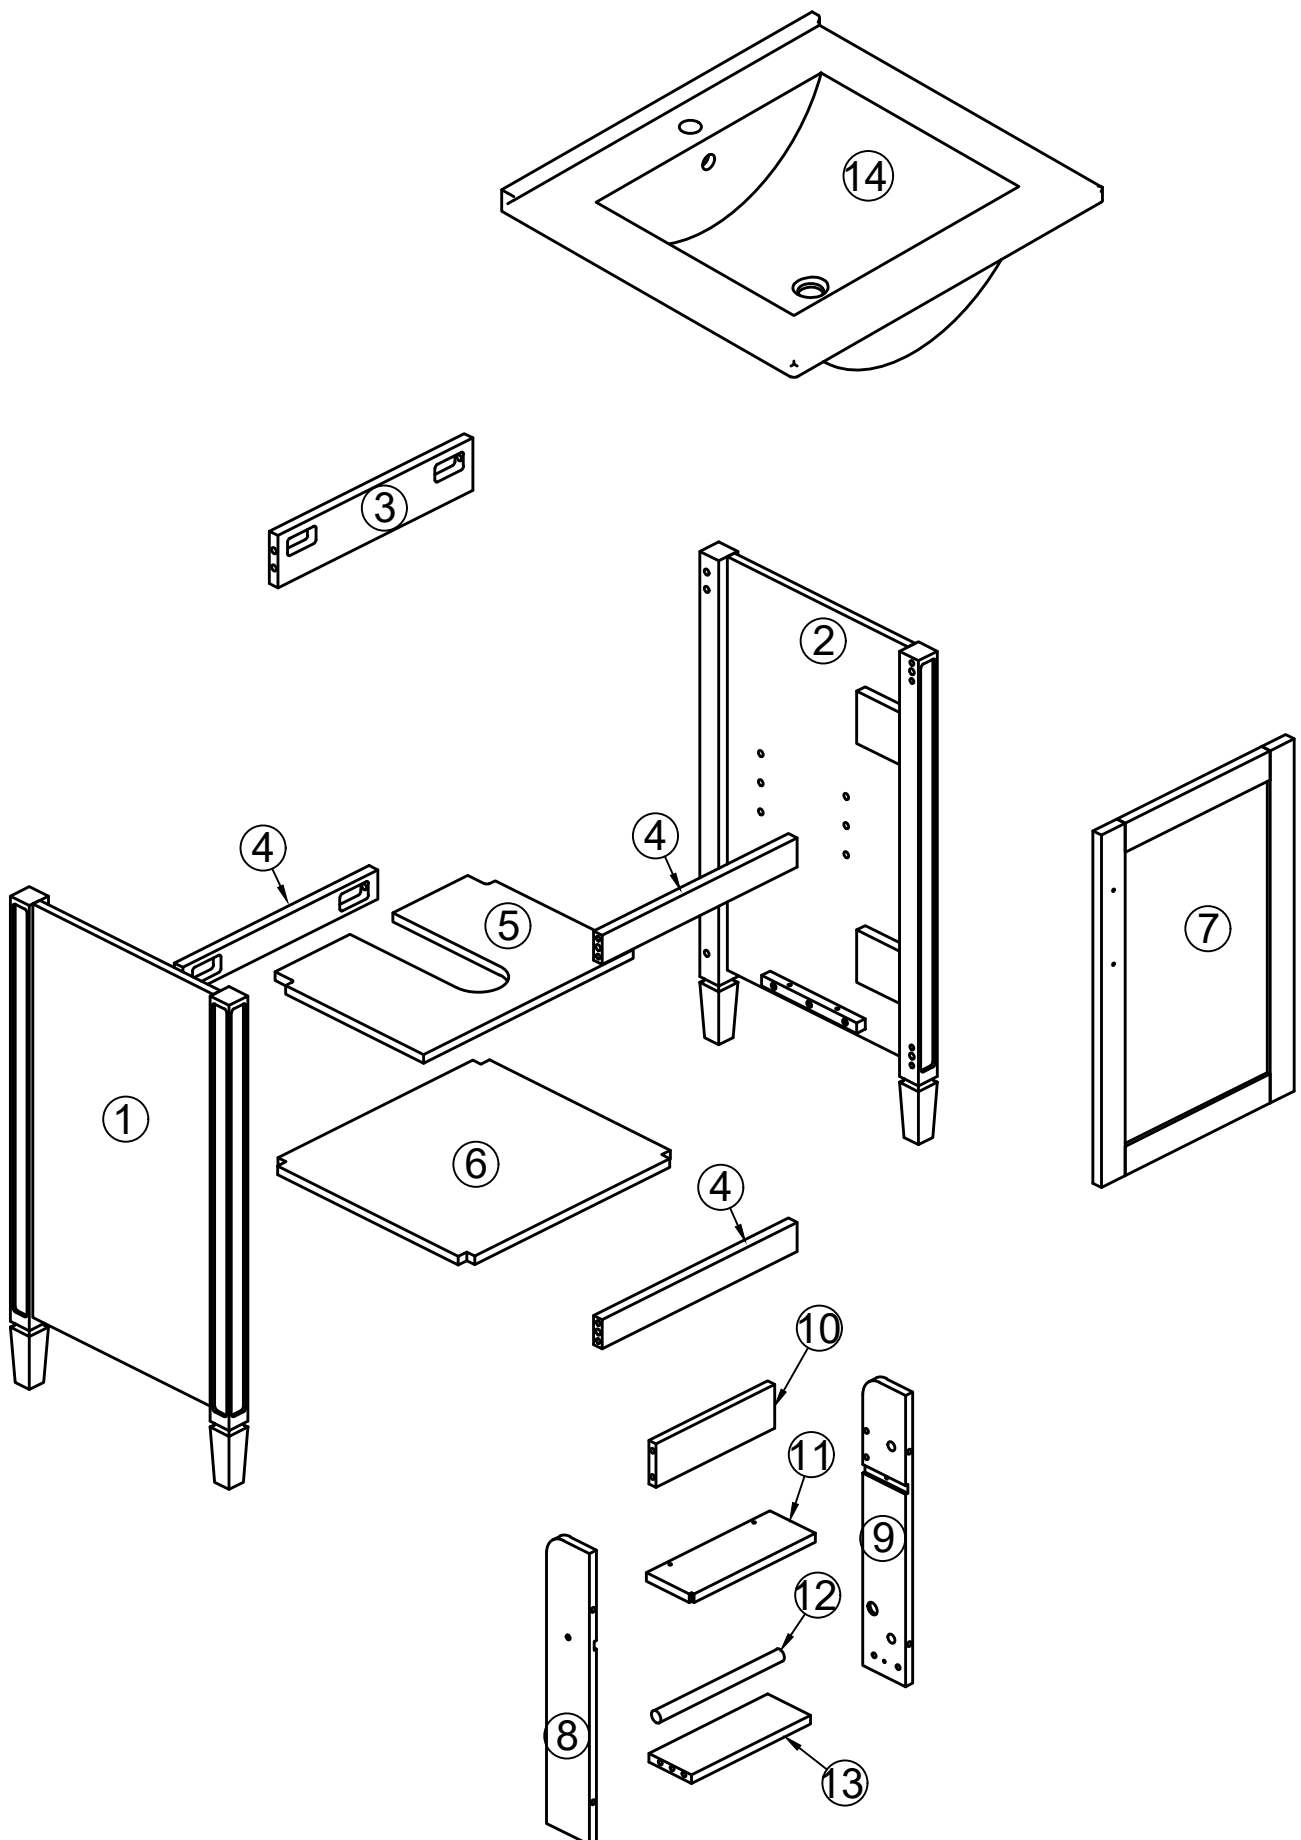

Identifying the Hardware - Identify the hardware using the illustrations below.


Part Lists: N729P299364

1

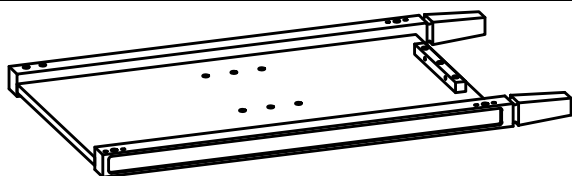


Side Frame (L) - 1pc

2

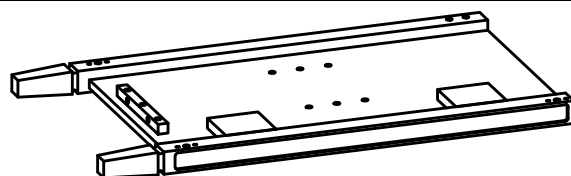


Side Frame (R) - 1pc

3

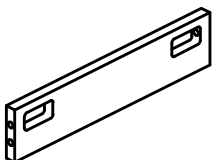


Top Rear Crossbar - 1pc

4

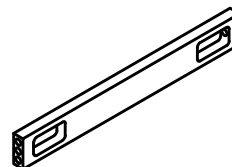


Front and Rear Crossbar - 3pcs

5

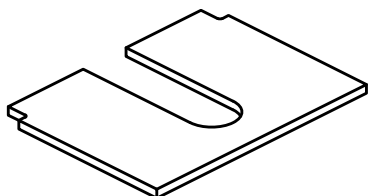


Adjustable Shelf - 1pc

6

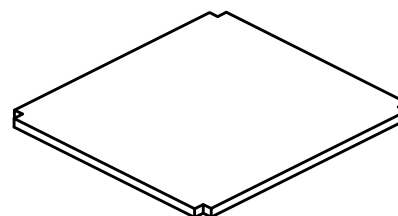

Bottom Panel - 1pc

7

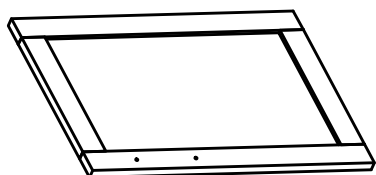


Door Cabinet - 1pc

8




Side Tray (L) - 1pc

9




Side Tray (R) - 1pc

10



Top Tray - 1pc

11




Midle Tray - 1pc

12




Round Bar - 1pc

13






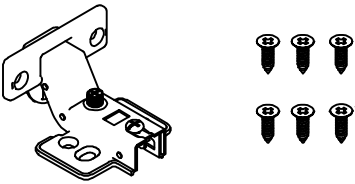
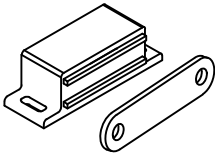
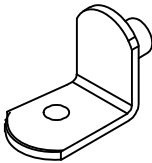




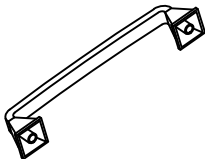

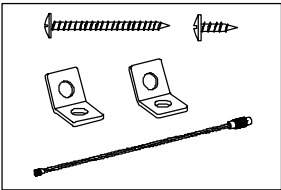
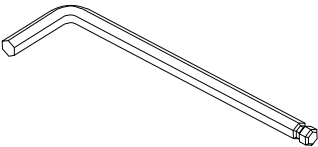
Bottom Tray - 1pc

14

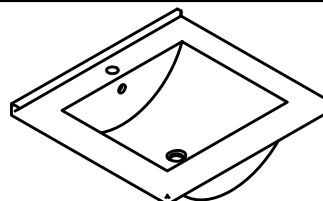


Sink (1pc)

Hardware Lists: N729P299364
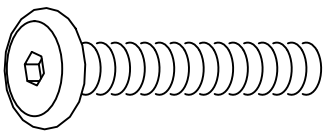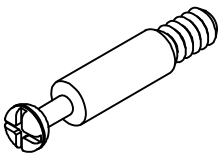
<div data-bbox="57 215 92 255">A</div>  <p>Ø13xØ1/4*30mm</p>	<div data-bbox="563 215 598 255">B</div>  <p>Ø6*32mm</p>	<div data-bbox="1072 215 1107 255">C</div>  <p>Ø14.5*9mm</p>
<p>Hex-Head bolt (8pcs)</p>	<p>Three in one bolts (6pcs)</p>	<p>Three in one locks (6pcs)</p>
<div data-bbox="57 571 92 611">D</div>  <p>Damping hinge (2set)</p>	<div data-bbox="563 571 598 611">E</div>  <p>Inhale the magnet (2set)</p>	<div data-bbox="1072 571 1107 611">F</div>  <p>Shelf Pin (4pcs)</p>
<p>Damping hinge (2set)</p>	<p>Inhale the magnet (2set)</p>	<p>Shelf Pin (4pcs)</p>
<div data-bbox="57 927 92 967">G</div>  <p>Ø8xØ4*25mm</p>	<div data-bbox="563 927 598 967">H</div>  <p>Ø6xØ3*12mm</p>	<div data-bbox="1072 927 1107 967">I</div>  <p>Ø10 x 30mm</p>
<p>Round head screw (12pcs)</p>	<p>Round head screw (8pcs)</p>	<p>Wooden dowel (2pcs)</p>
<div data-bbox="57 1283 92 1323">J</div>  <p>Ø8 x 30mm</p>	<div data-bbox="563 1283 598 1323">K</div>  <p>Handle (1pc)</p>	<div data-bbox="1072 1283 1107 1323">L</div>  <p>Ø5/32*19mm</p>
<p>Wooden dowel (20pcs)</p>	<p>Handle (1pc)</p>	<p>Handle screw (2pcs)</p>
<div data-bbox="57 1639 92 1680">M</div>  <p>Anti fall Hardware (2sets)</p>	<div data-bbox="563 1639 598 1680">N</div>  <p>K4mm</p>	
<p>Anti fall Hardware (2sets)</p>	<p>Allen key (1pc)</p>	

STEP 1 :

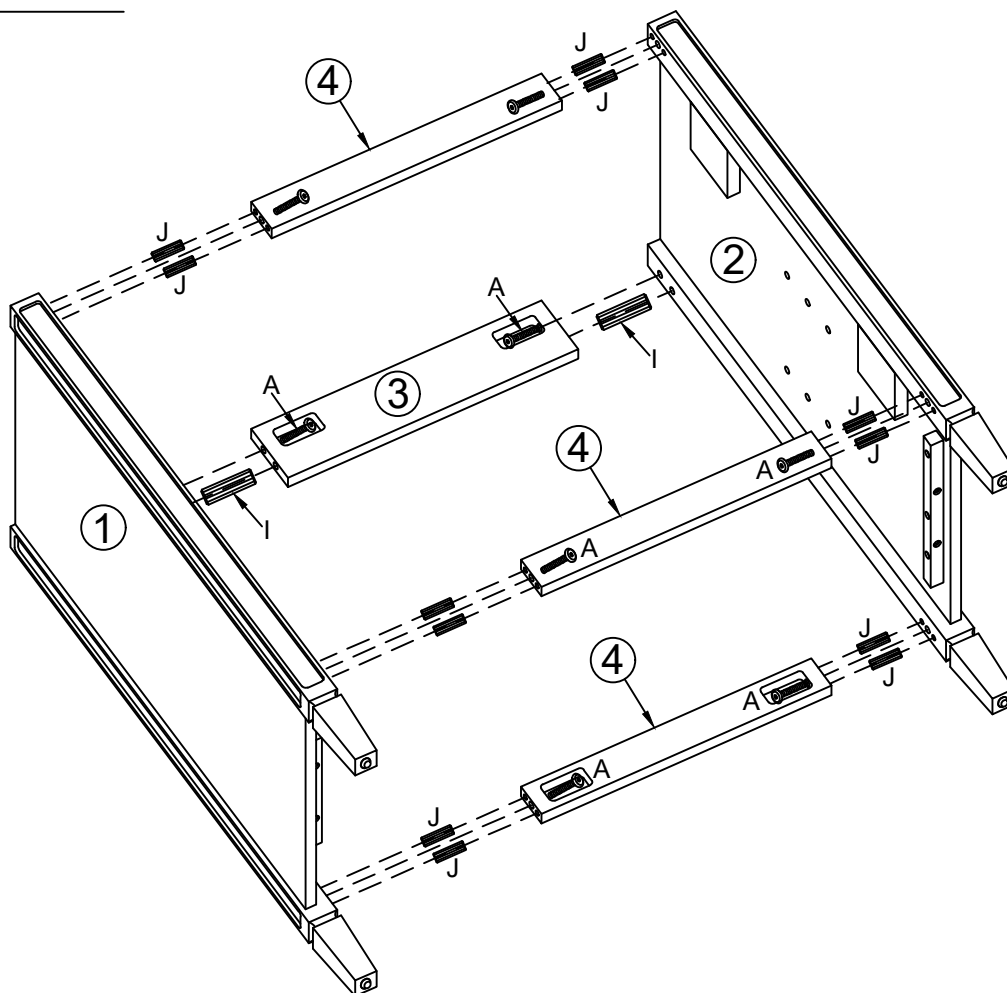

A



8pcs

I




2pcs

J



12pcs

STEP 2 :


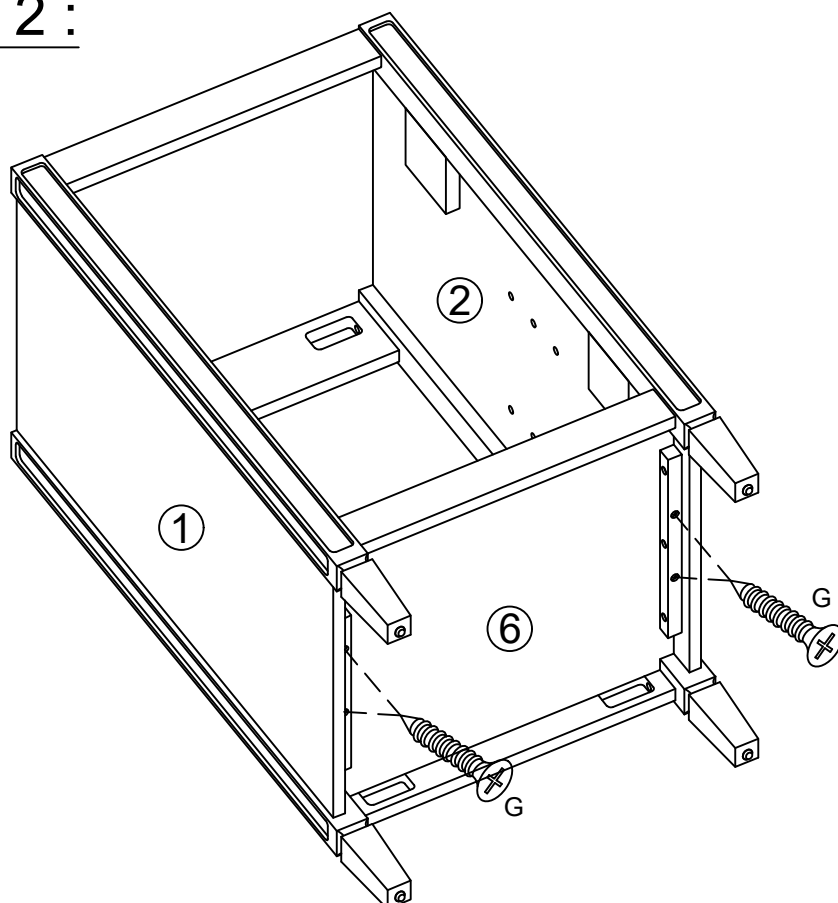


G






4pcs





STEP 3 :

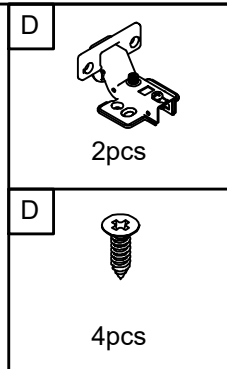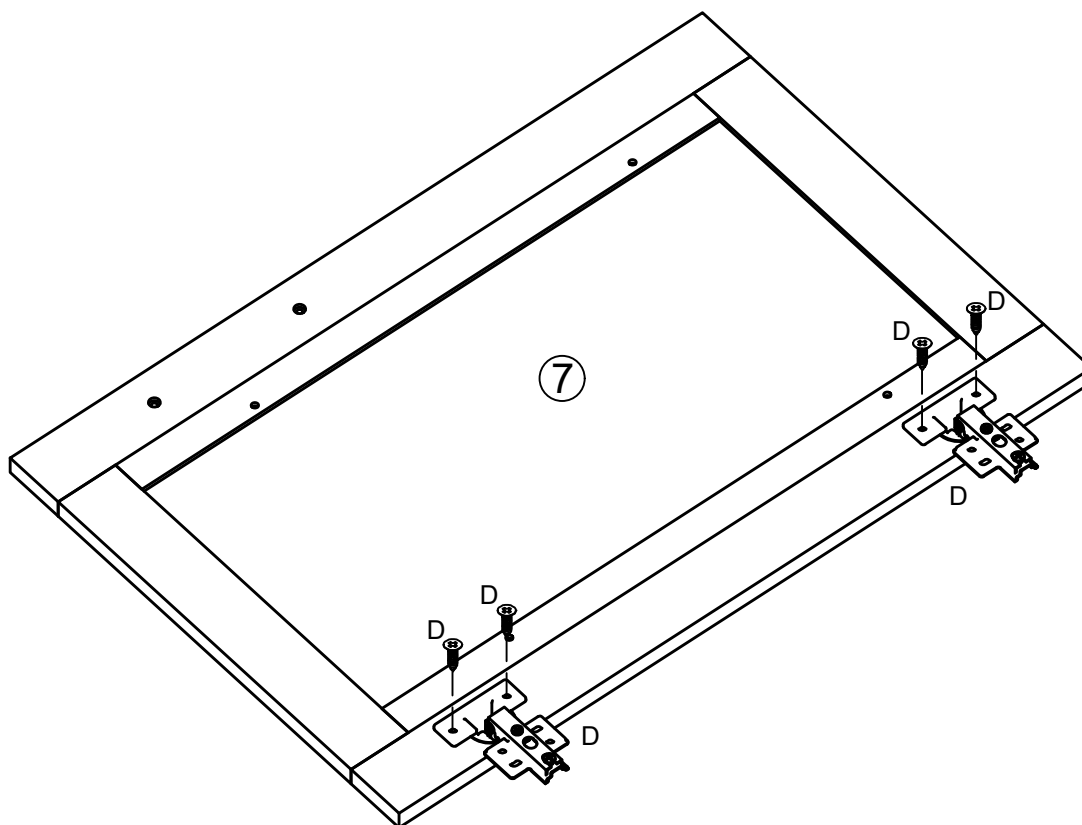




STEP 4 :

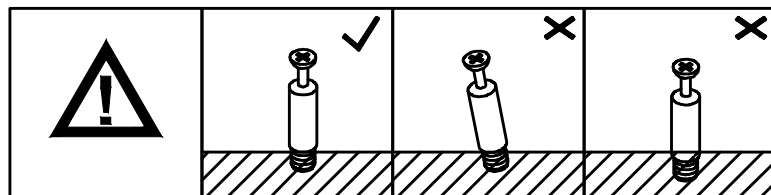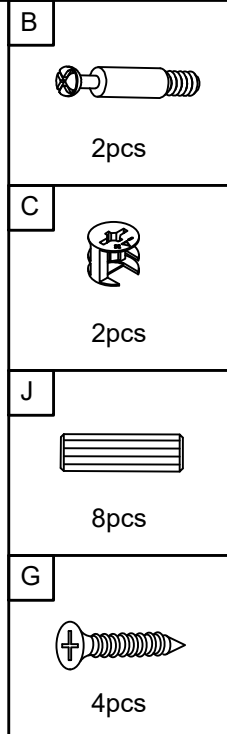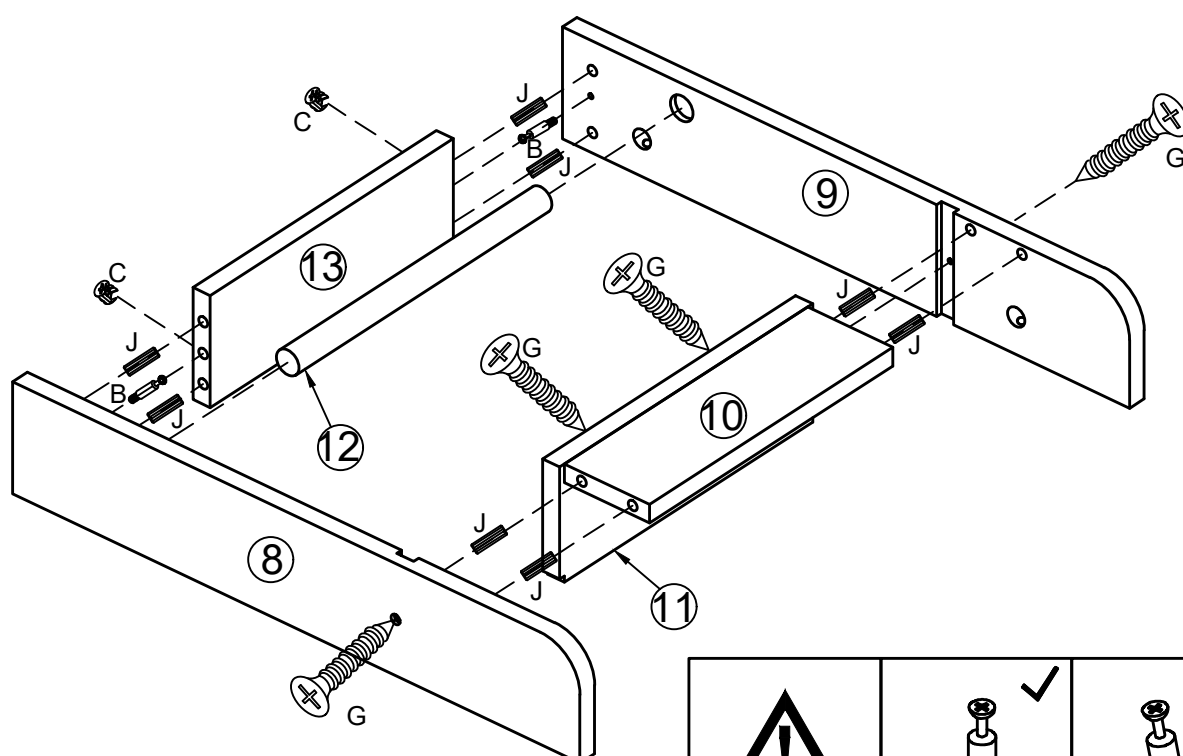



STEP 5 :

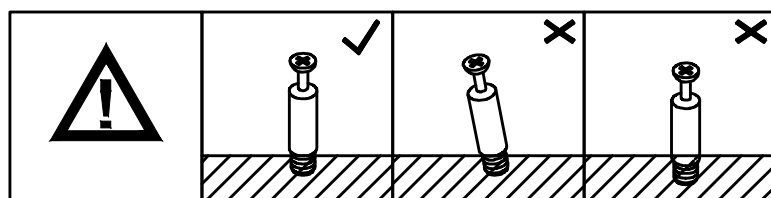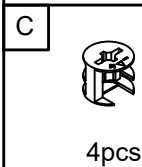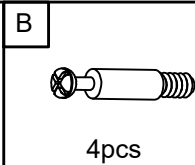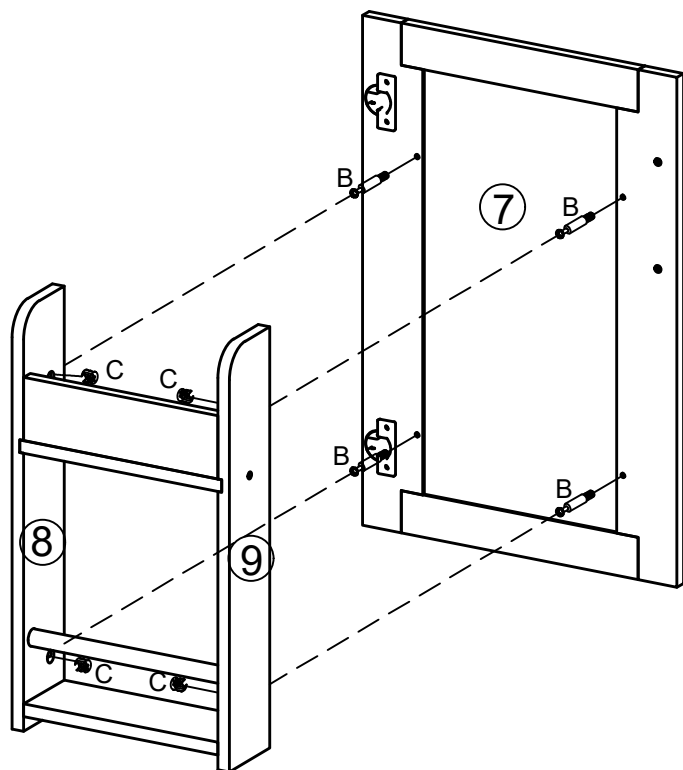



STEP 6 :

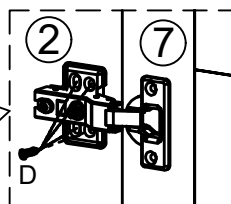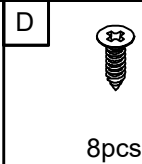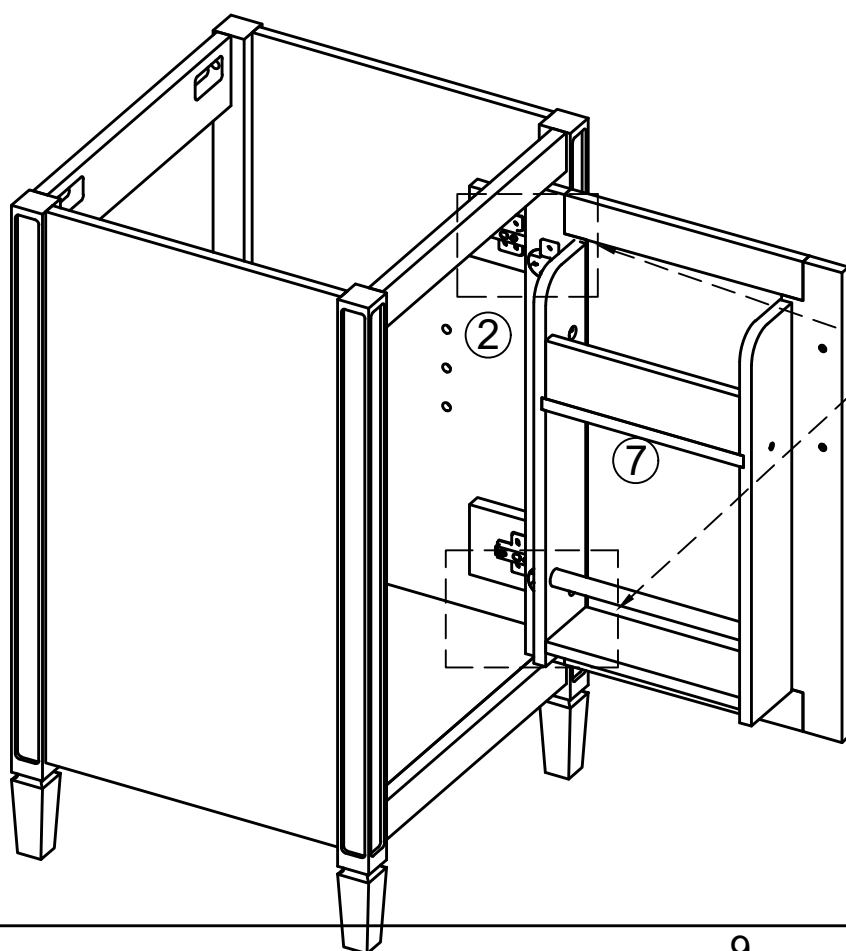


Use the screws to adjust up or down Use the screws to permanent

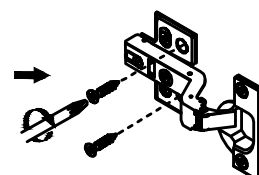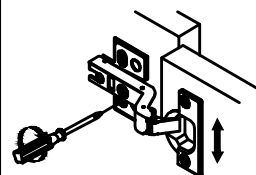


Use the screws to adjust left or right Use the screws to adjust in or out

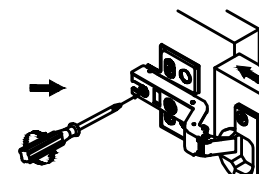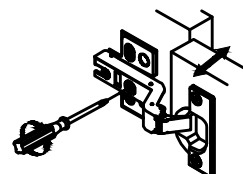

STEP 7 :

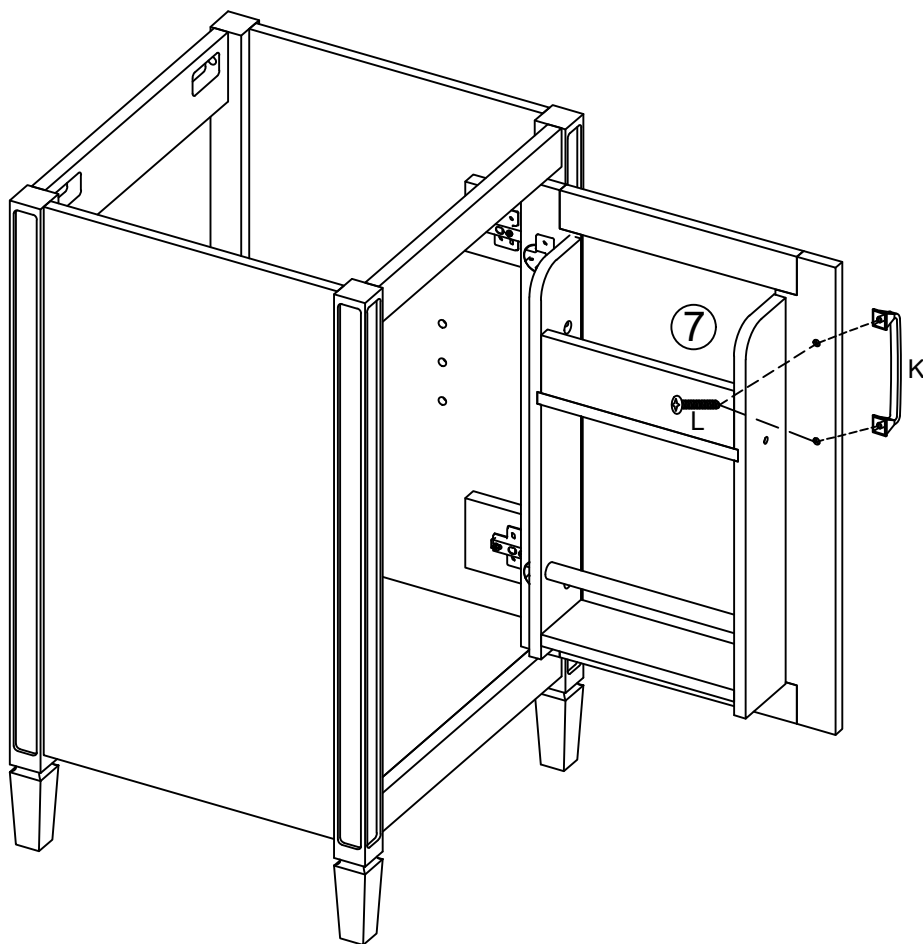

K






1pc

L




2pcs

STEP 8 :

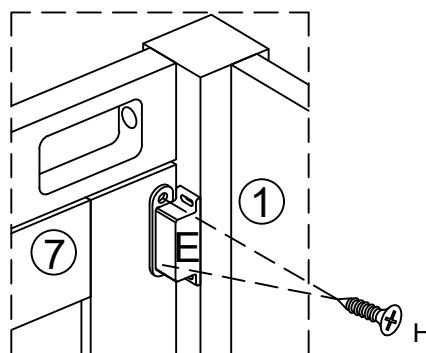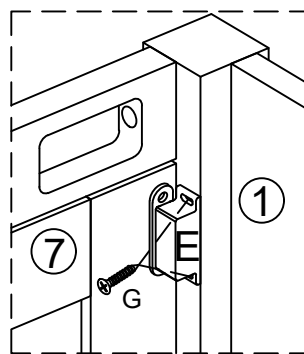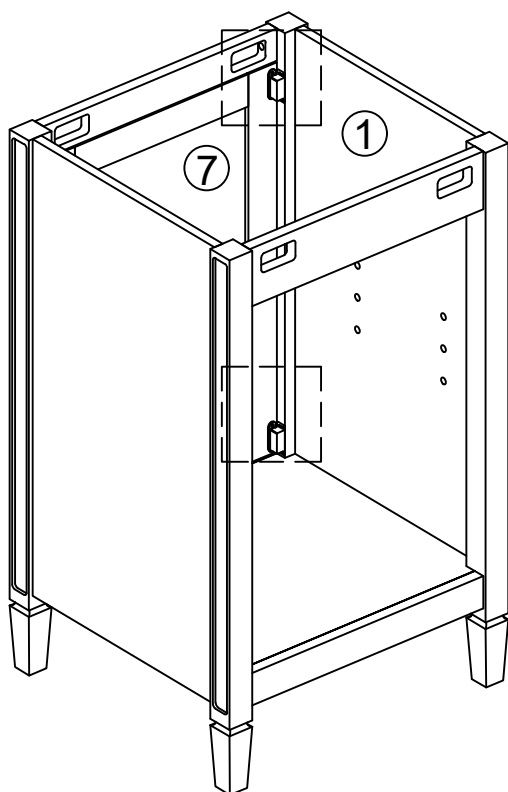


E



2set

G



4pcs

H





4pcs

STEP 9 :

F



4pcs


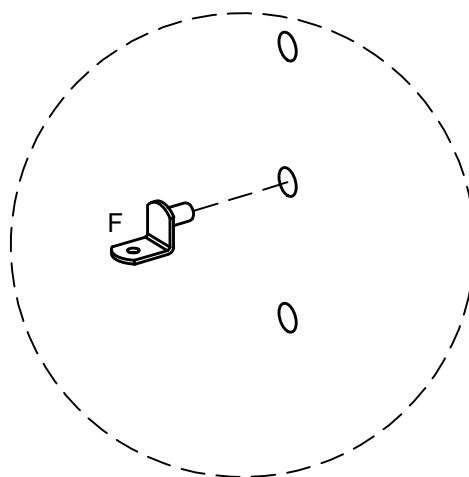
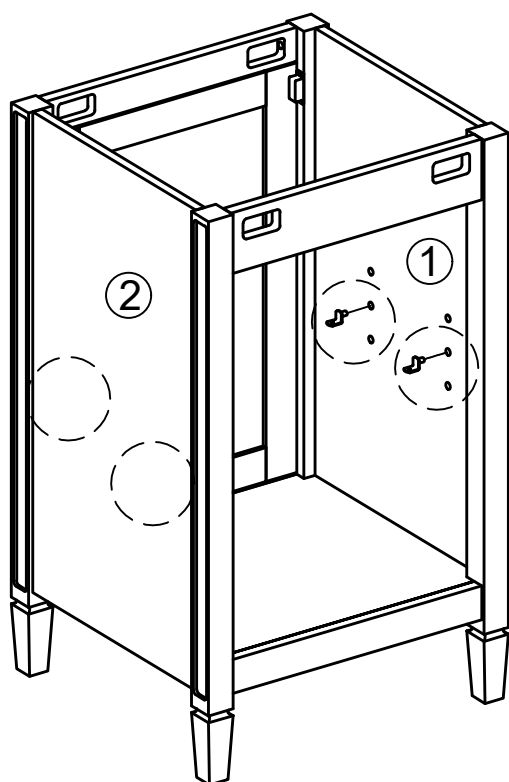


STEP 10 :

H




4pcs

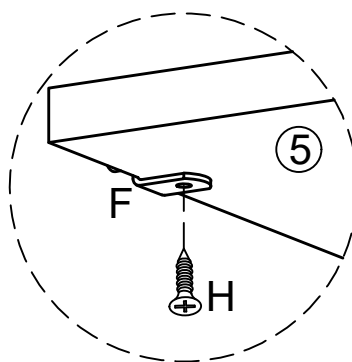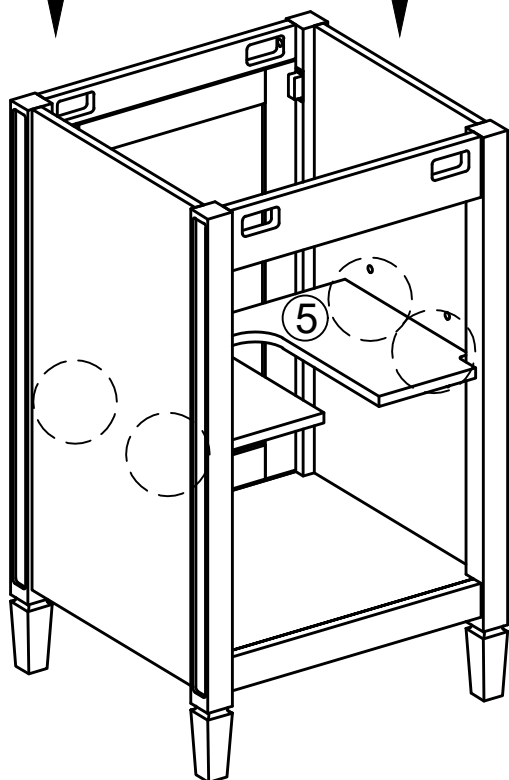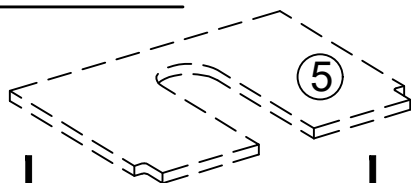


STEP 11 :

M




2set

WALL

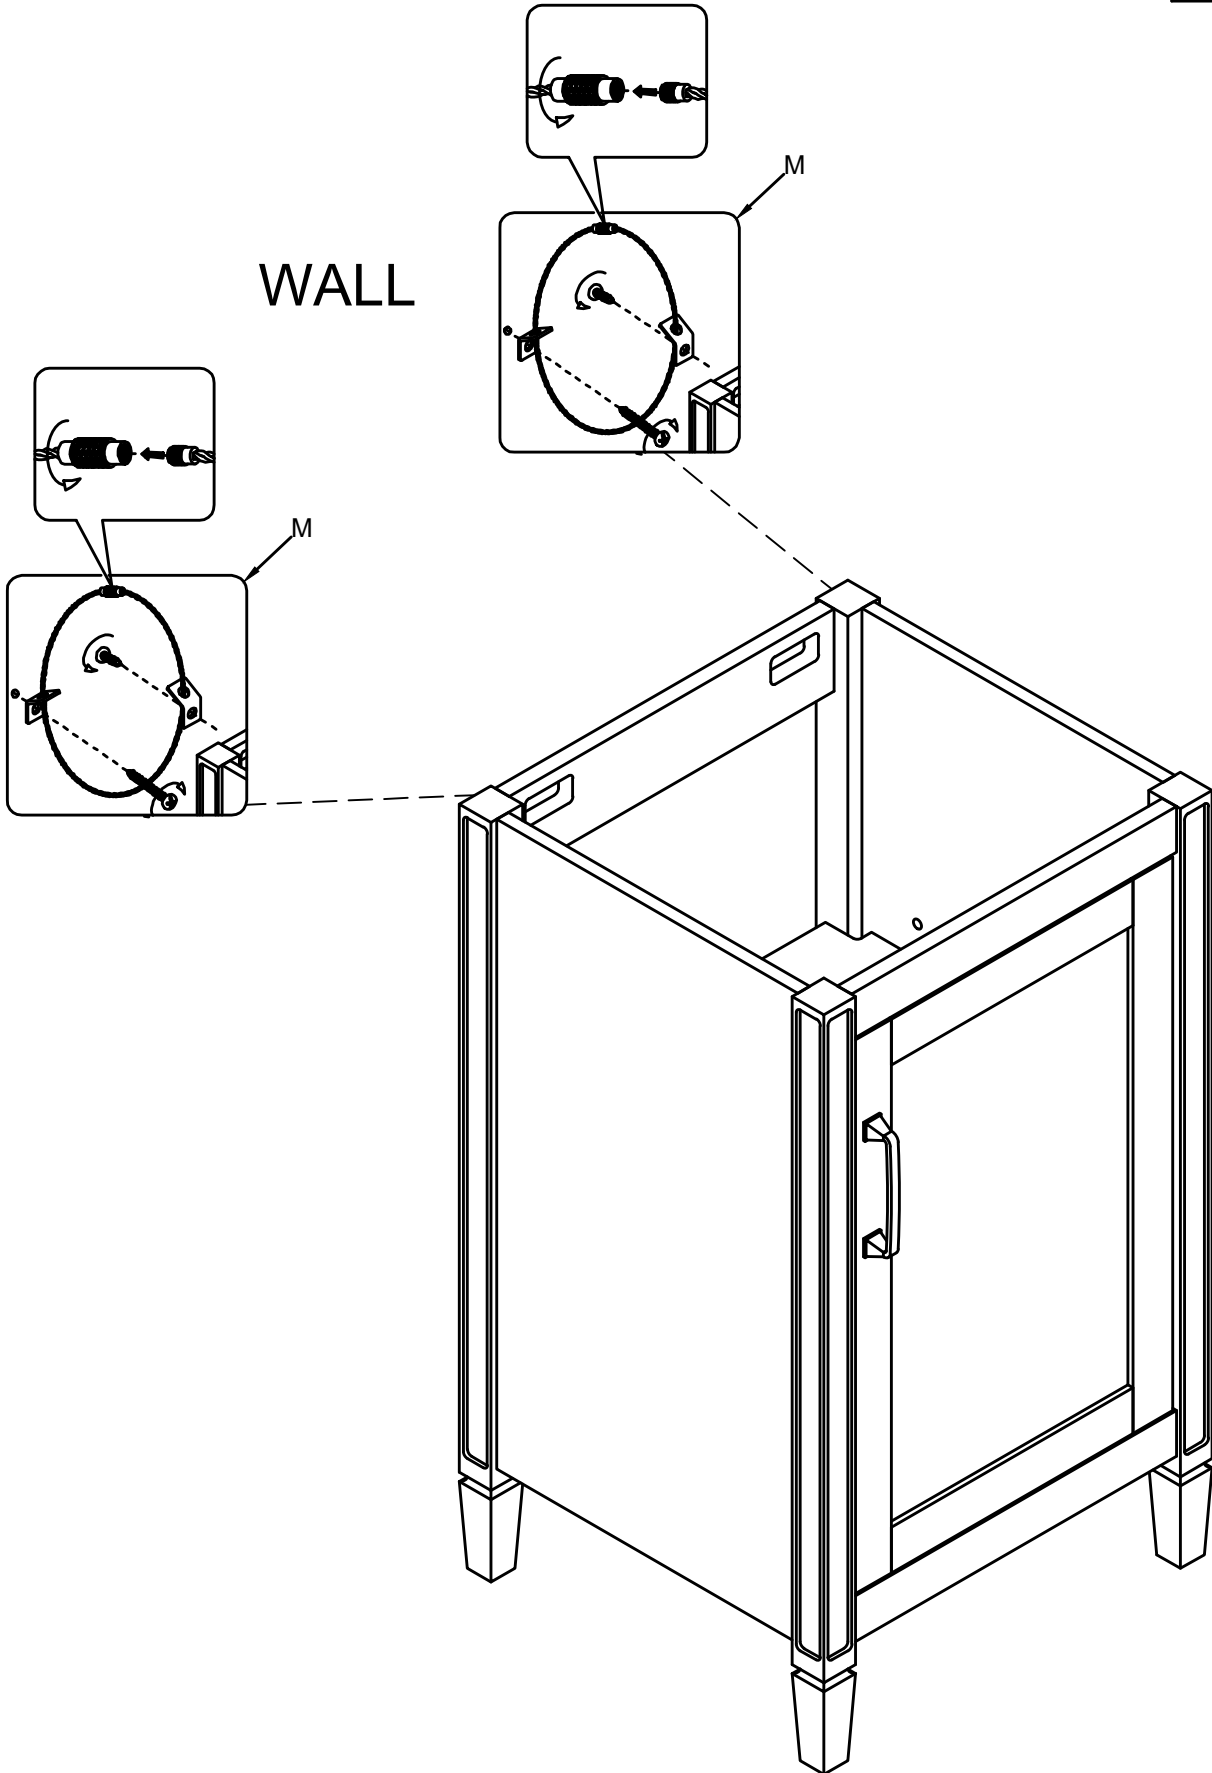


STEP 12 :

Install the sink on the cabinet with glue
Let stand for 24 hours

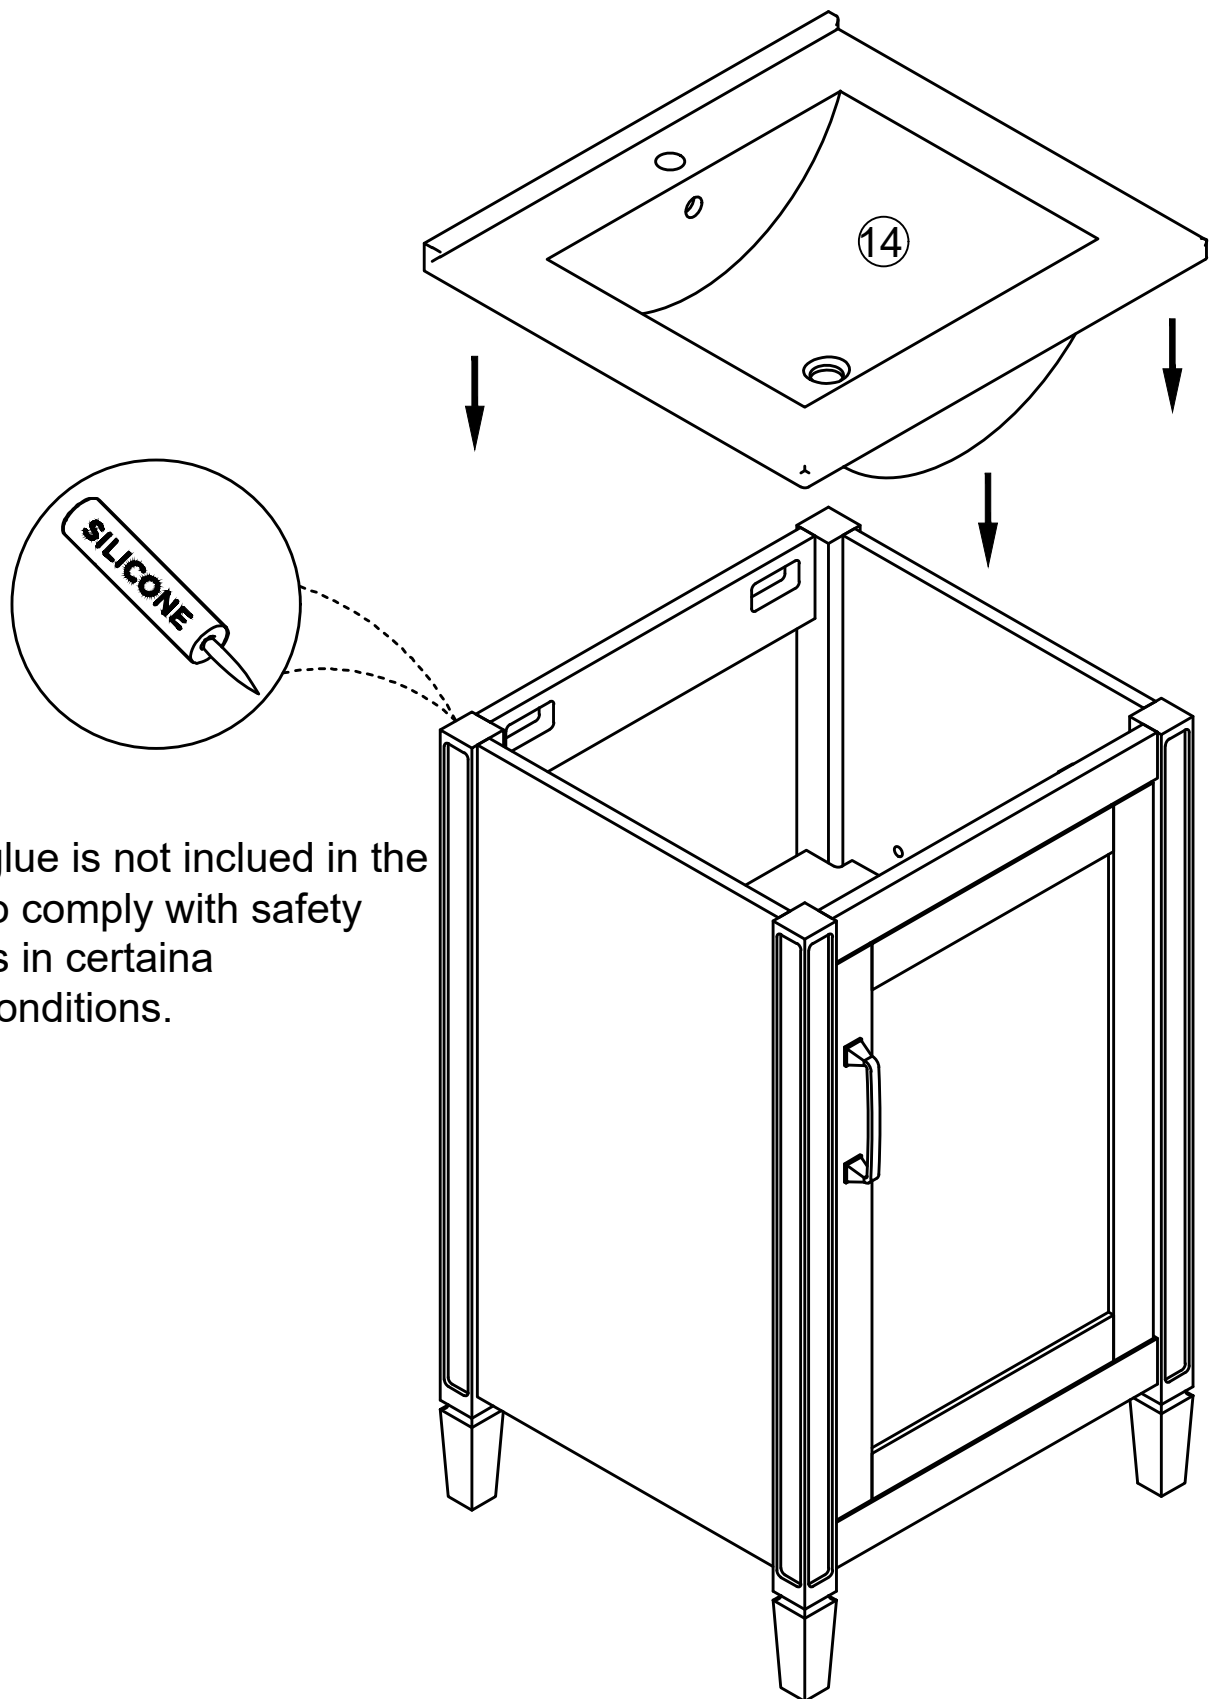


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP 13 :

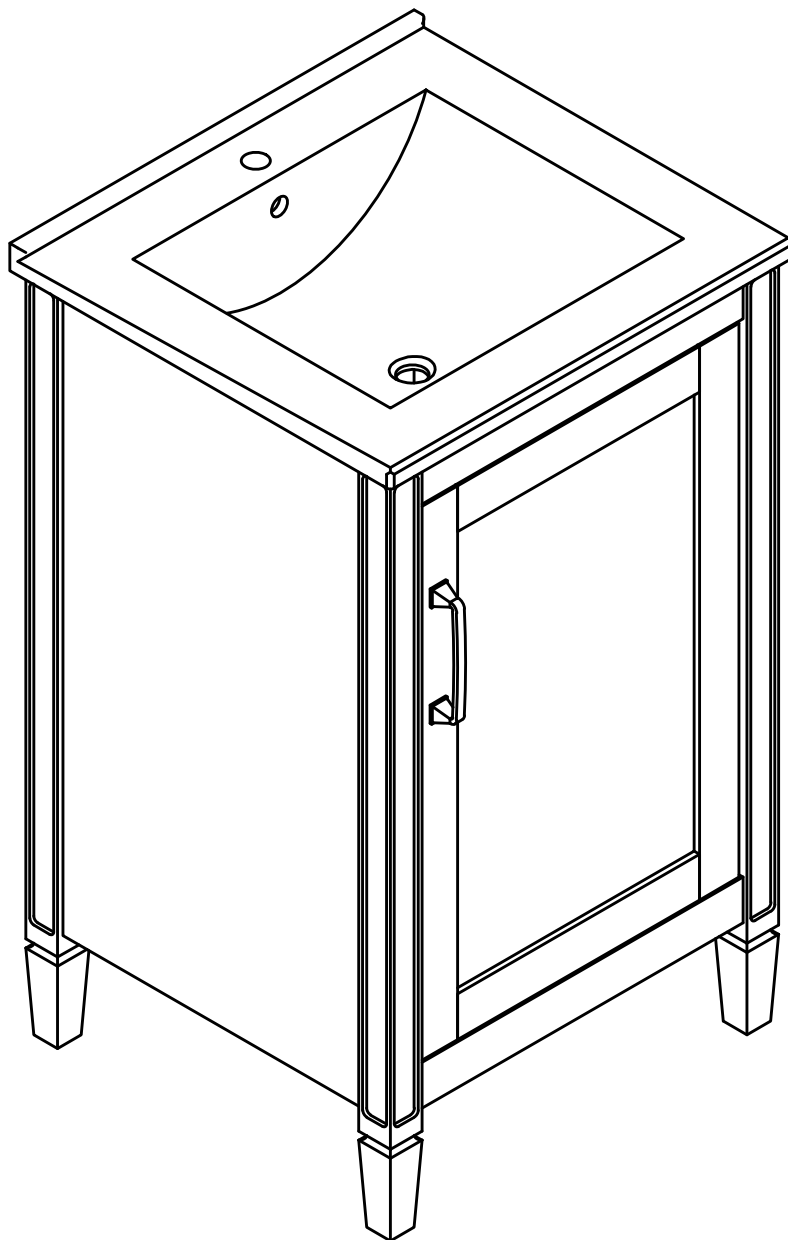


HINGE ADJUSTMENTS

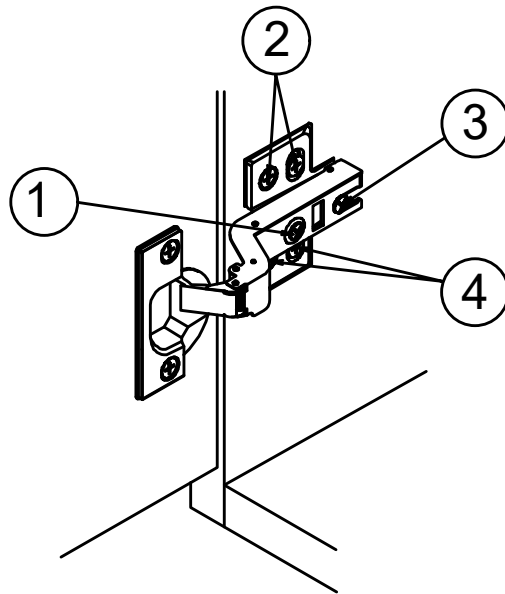


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

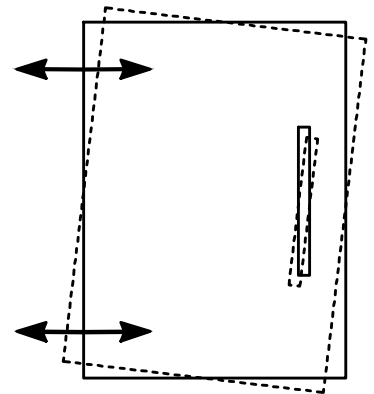

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

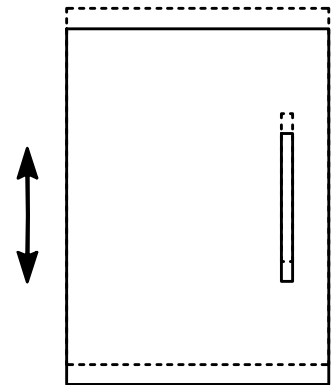

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

