
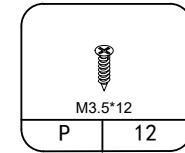
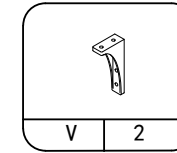
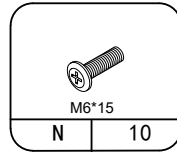
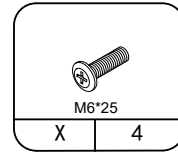
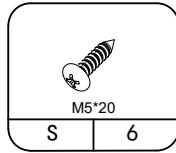
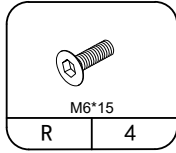
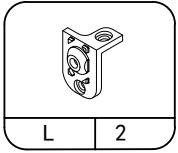
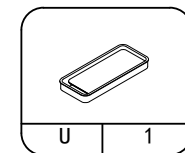
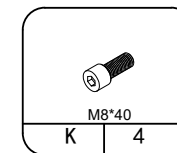
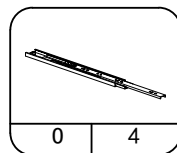
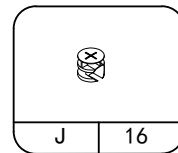
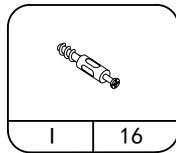
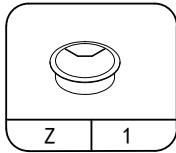
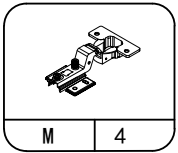
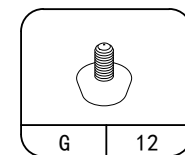
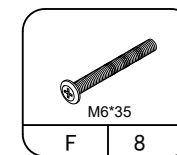
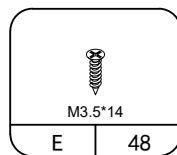
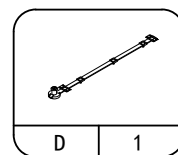
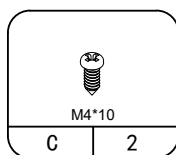
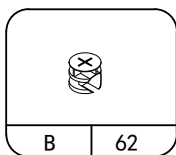
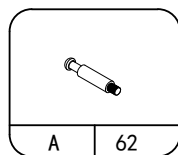
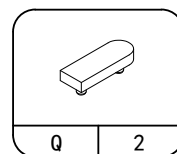
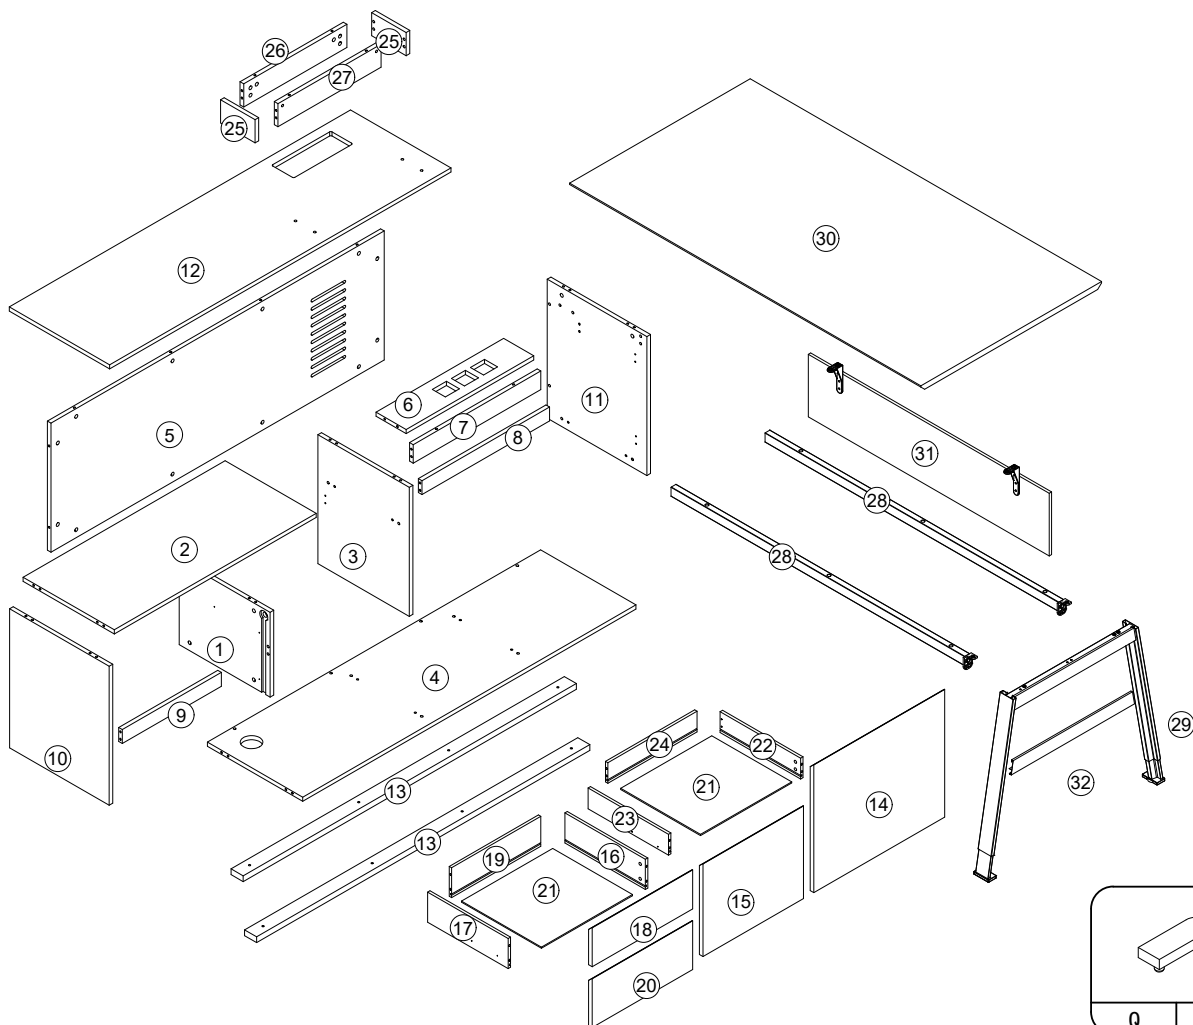


# HKOFDK008








# INSTALLATION INSTRUCTIONS

YOU MAY NEED (NOT SUPPLIED)

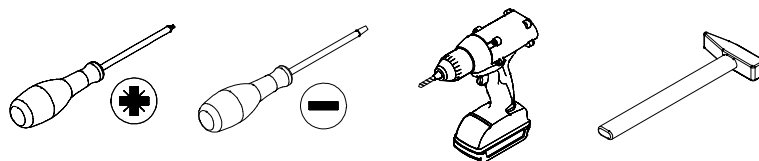




spare parts(screws) have been included in the package in case you have the needs!

# STEP1

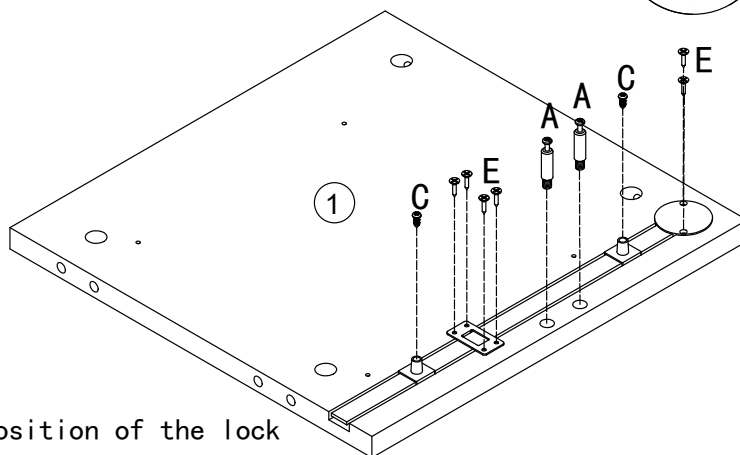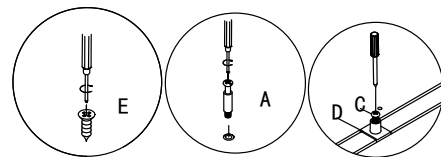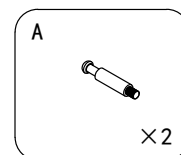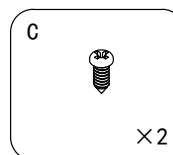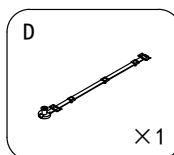
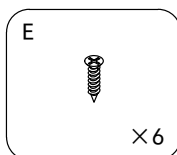
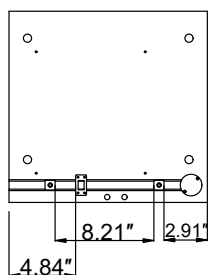


The installation position of the lock piece should be adjusted based on the actual site conditions.




# STEP2

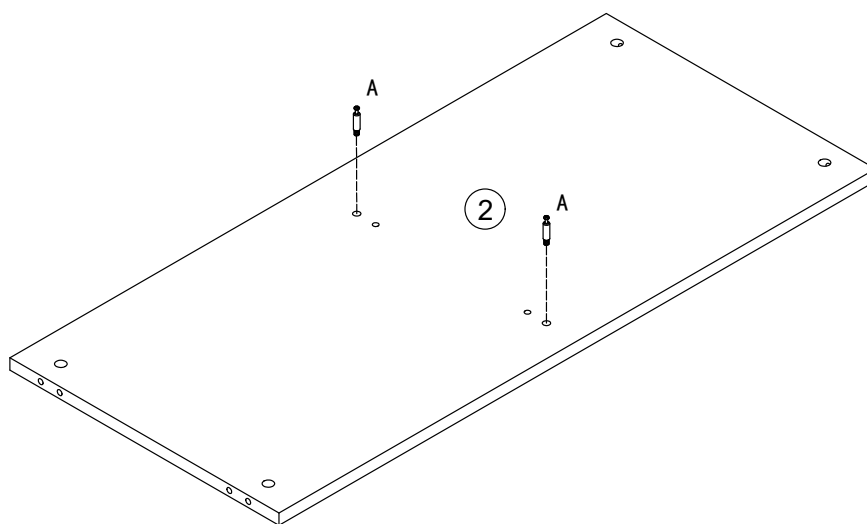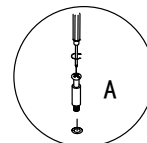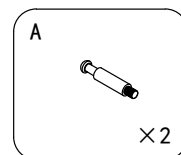



## STEP3

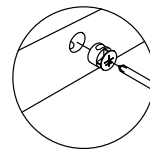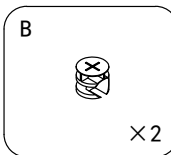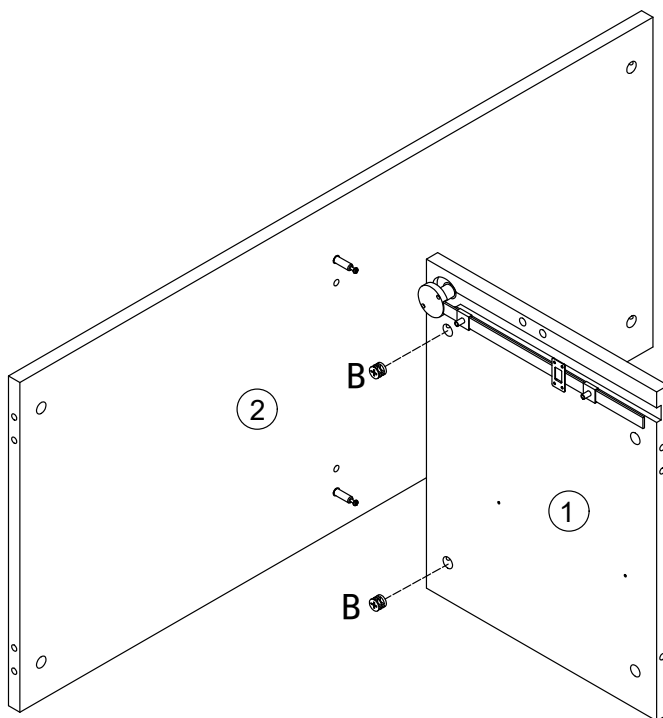



## STEP4

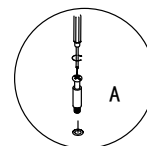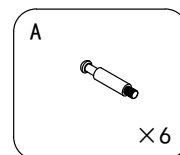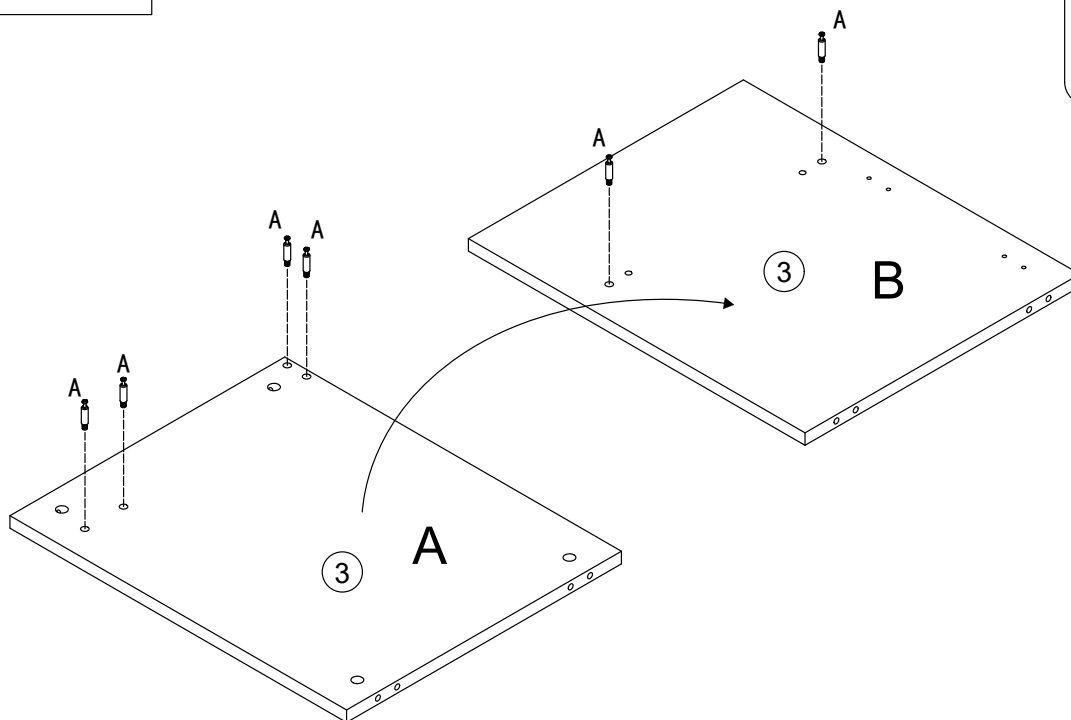




## STEP5

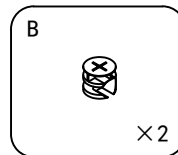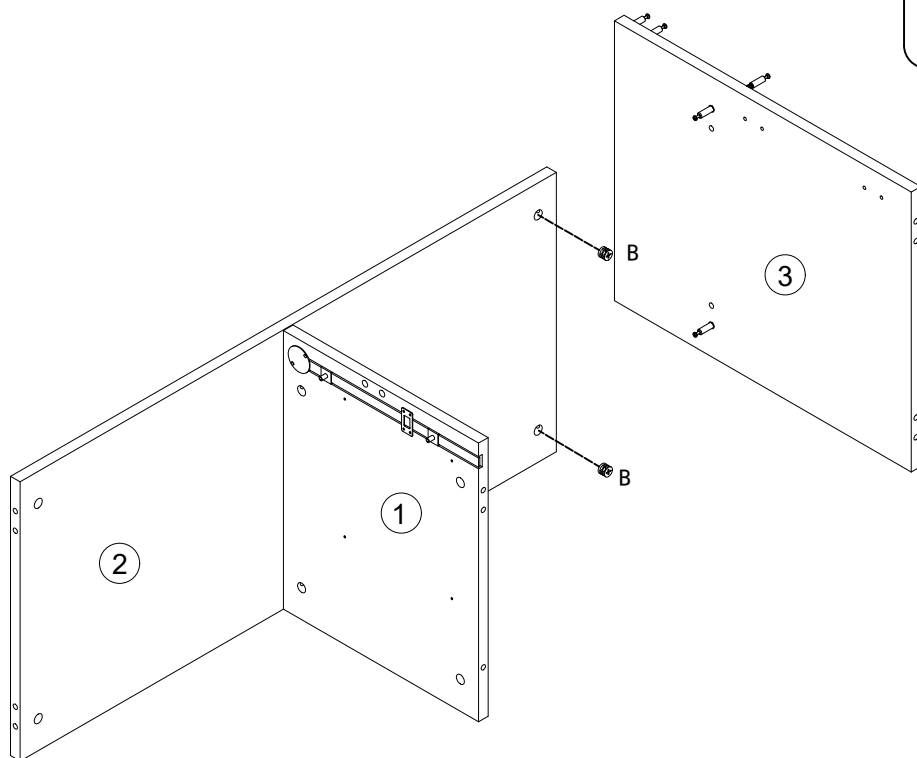




## STEP6

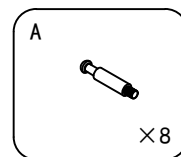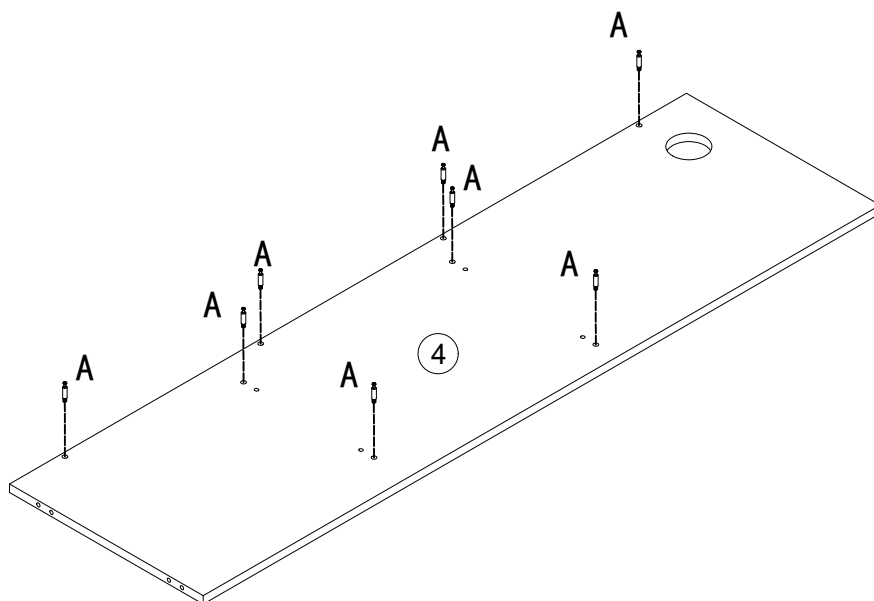






# STEP7

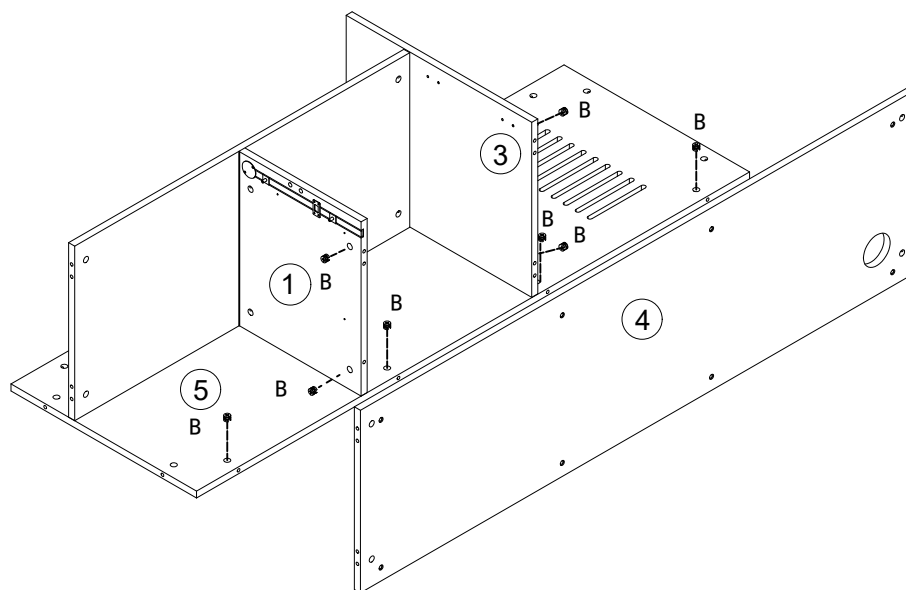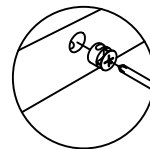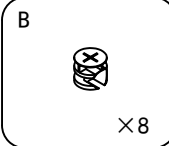




# STEP8

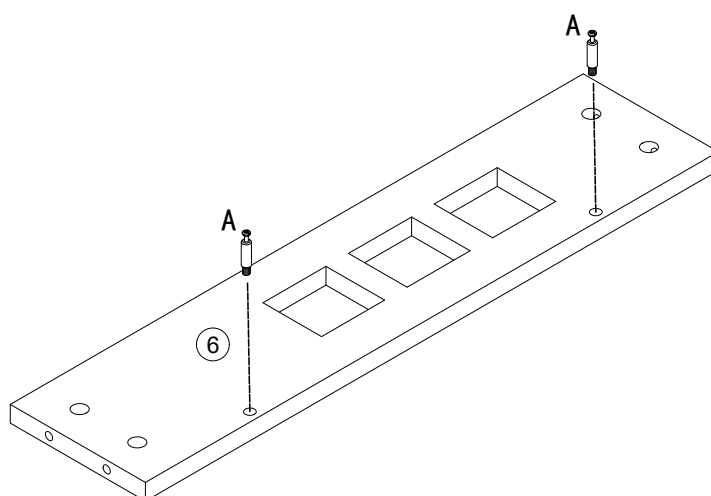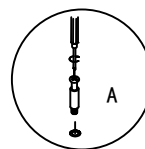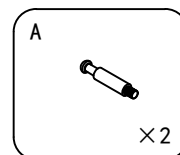




## STEP9

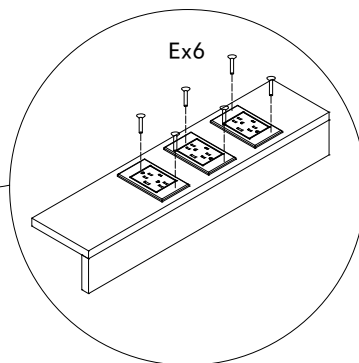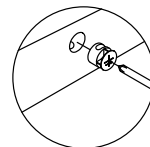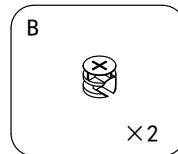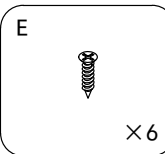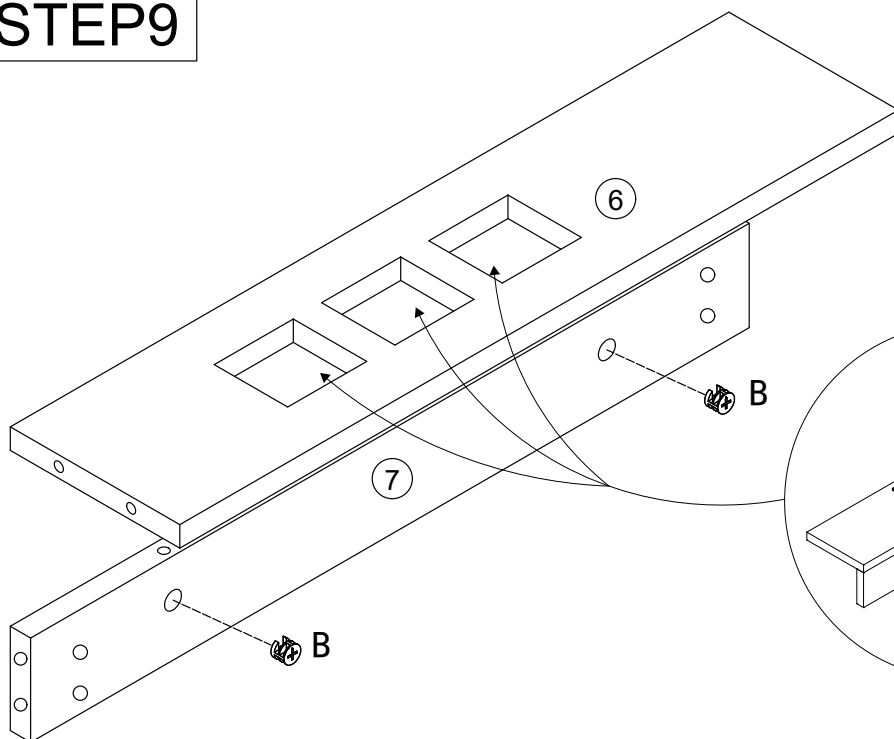




## STEP10

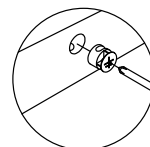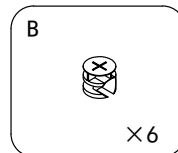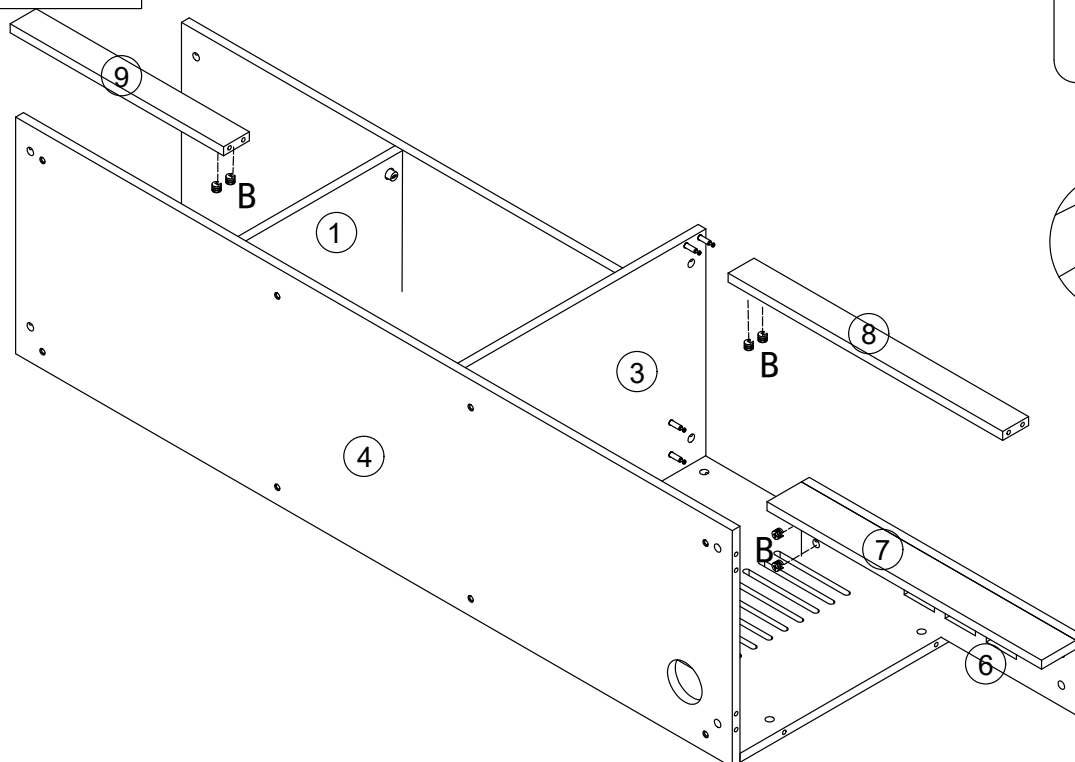

# STEP11

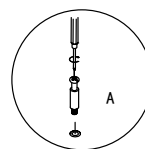
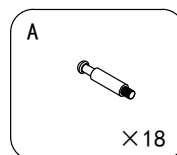
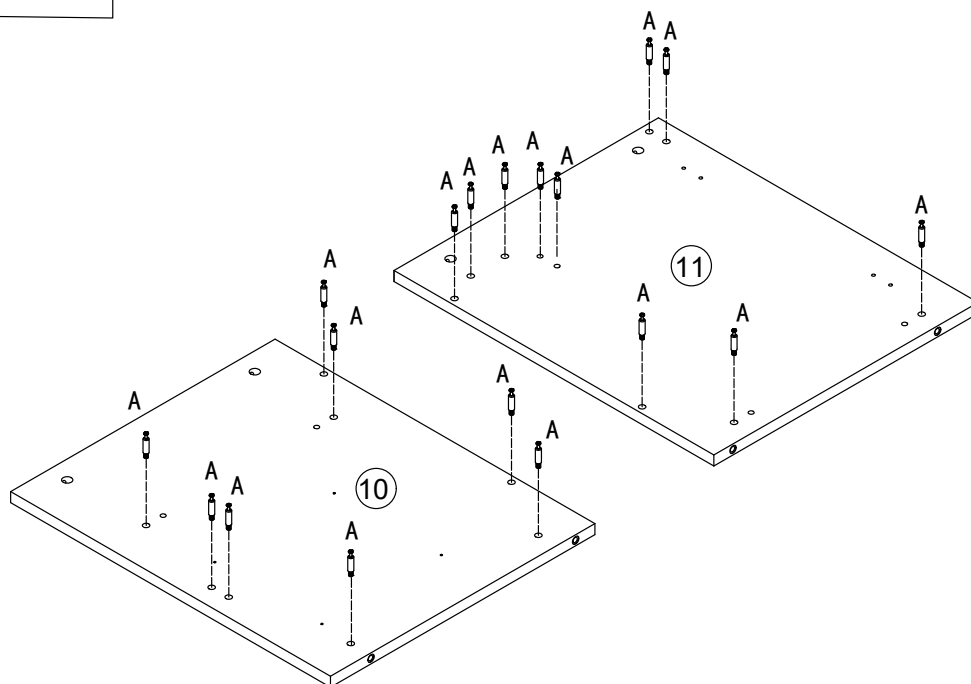


# STEP12

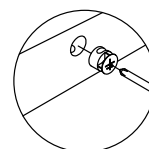
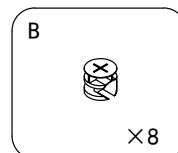
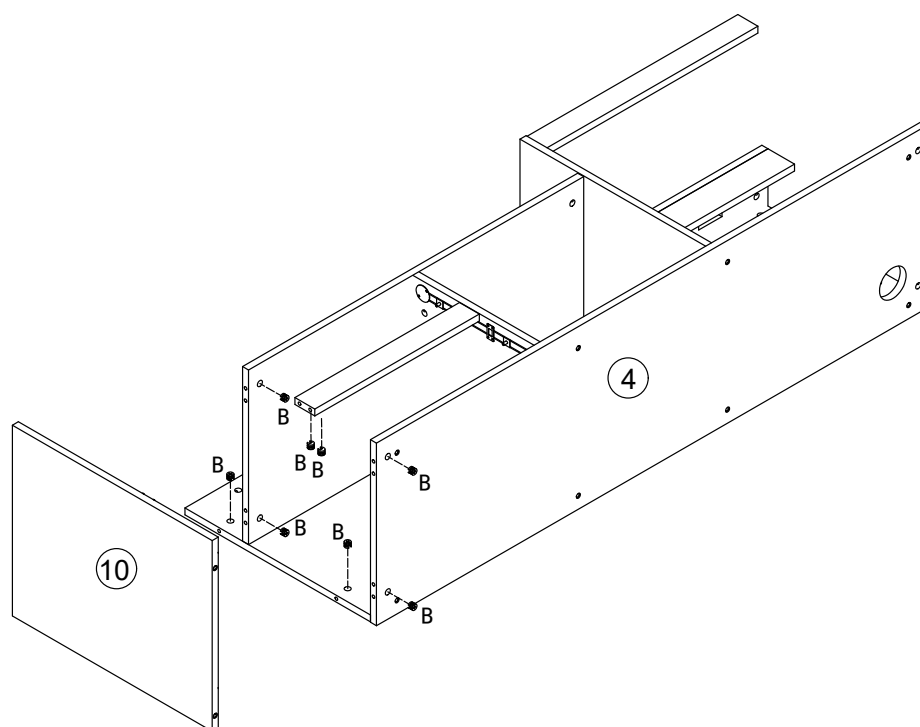







# STEP13

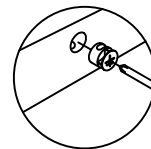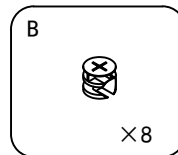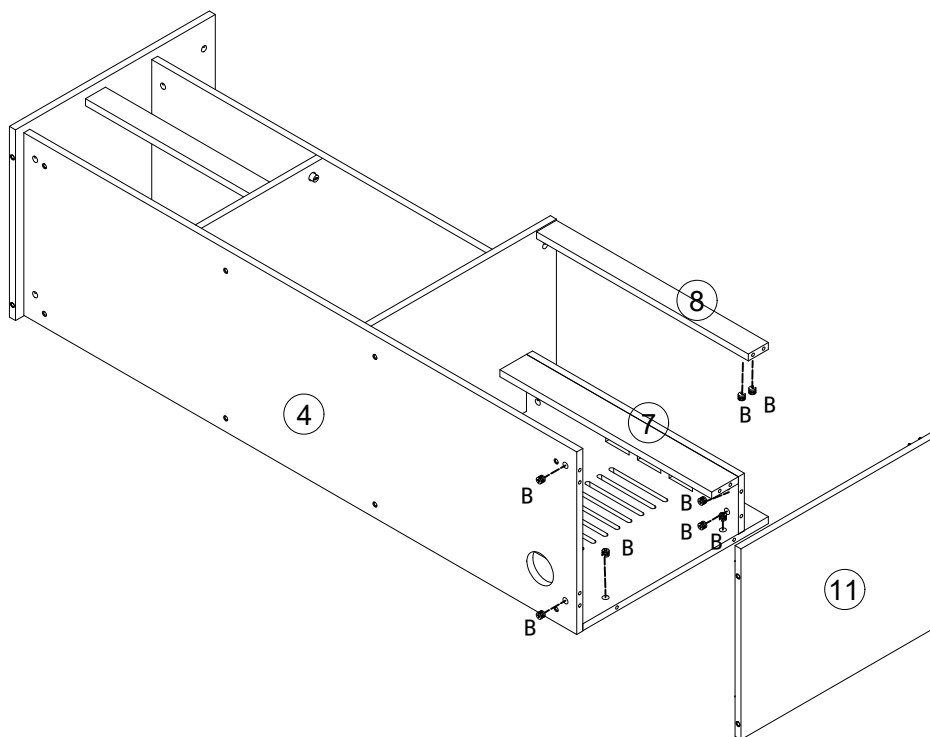



# STEP14

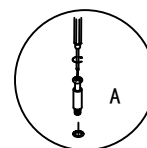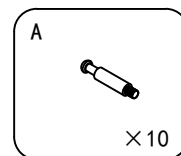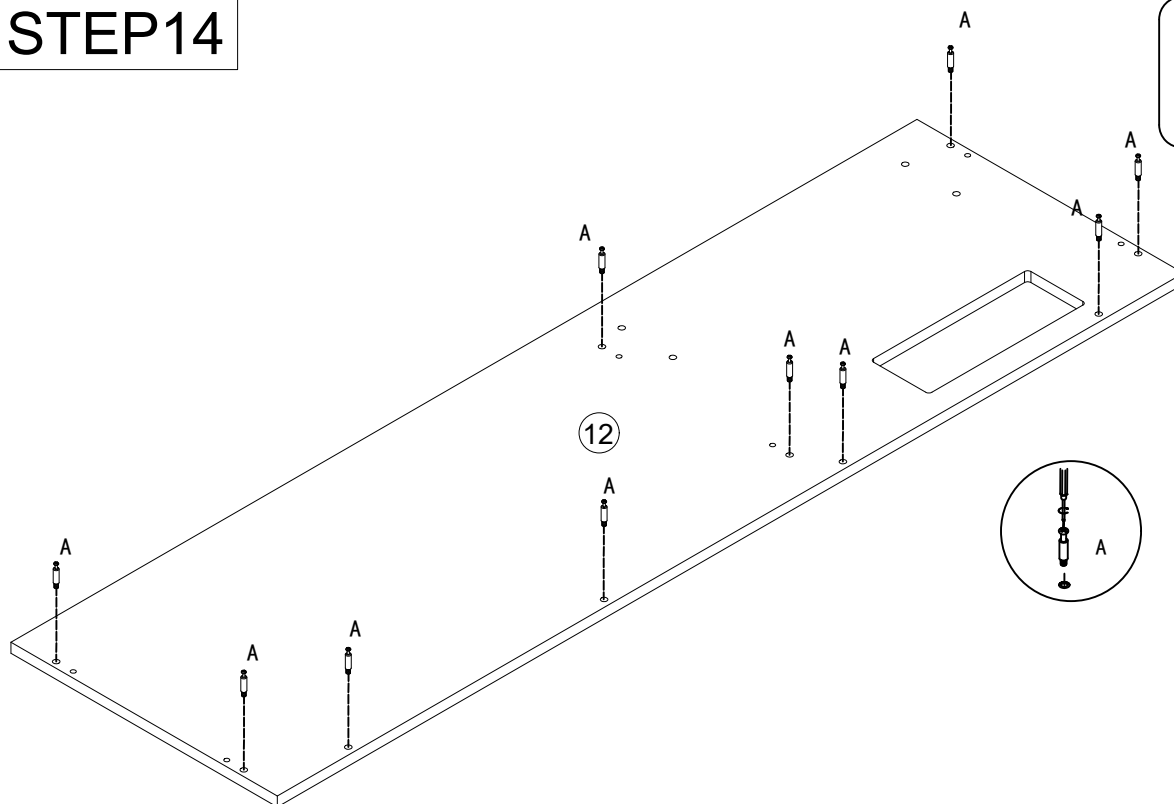


# STEP15

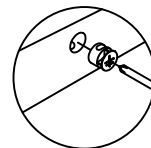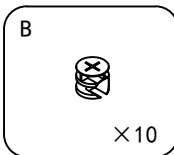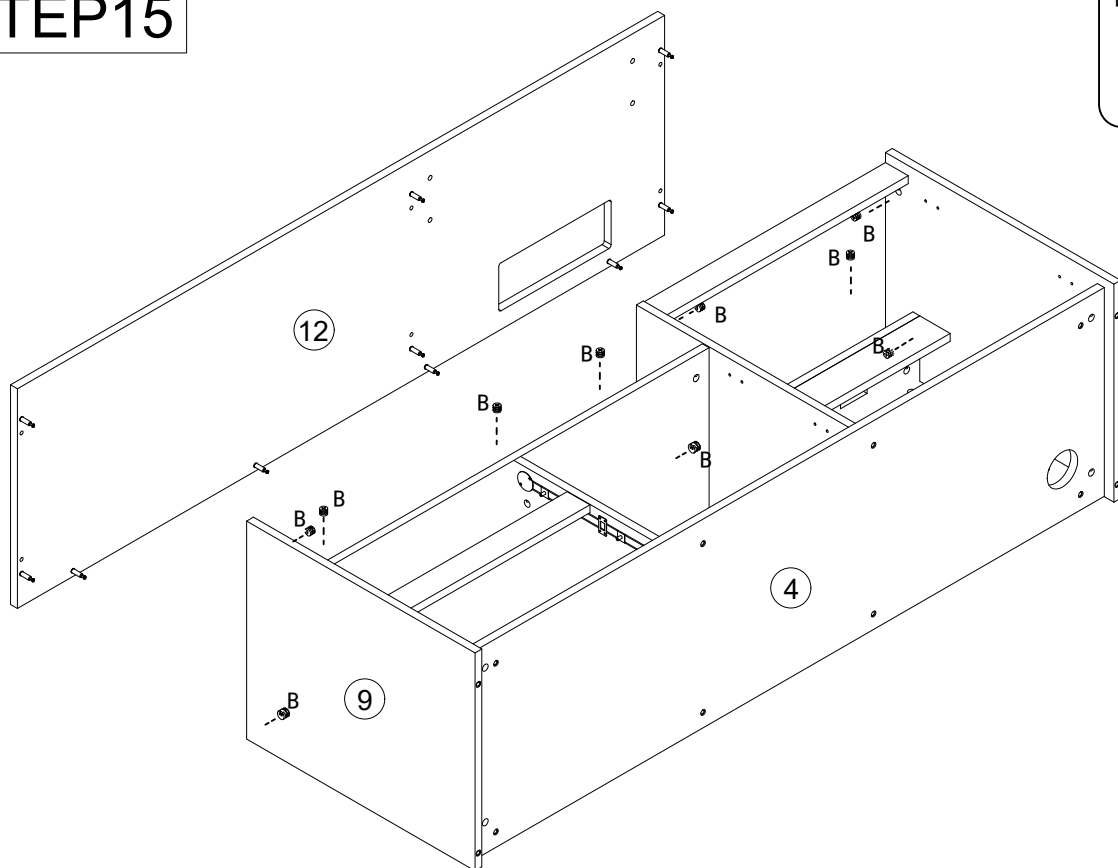


# STEP16

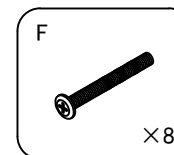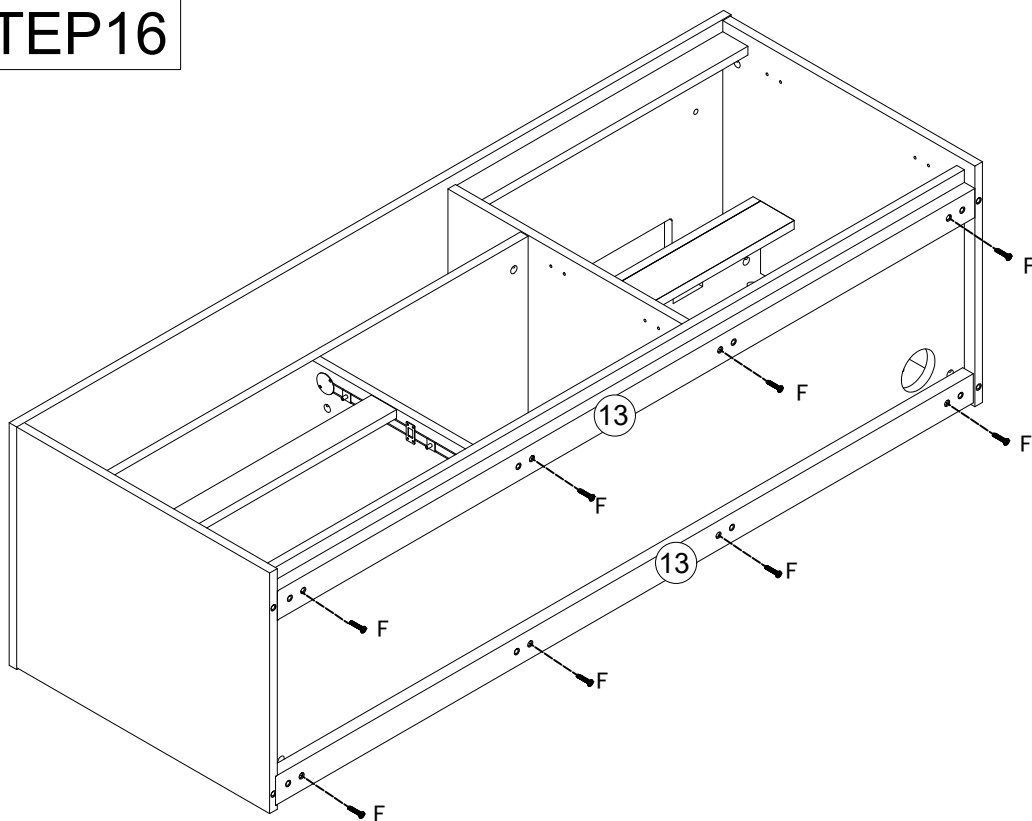





## STEP17

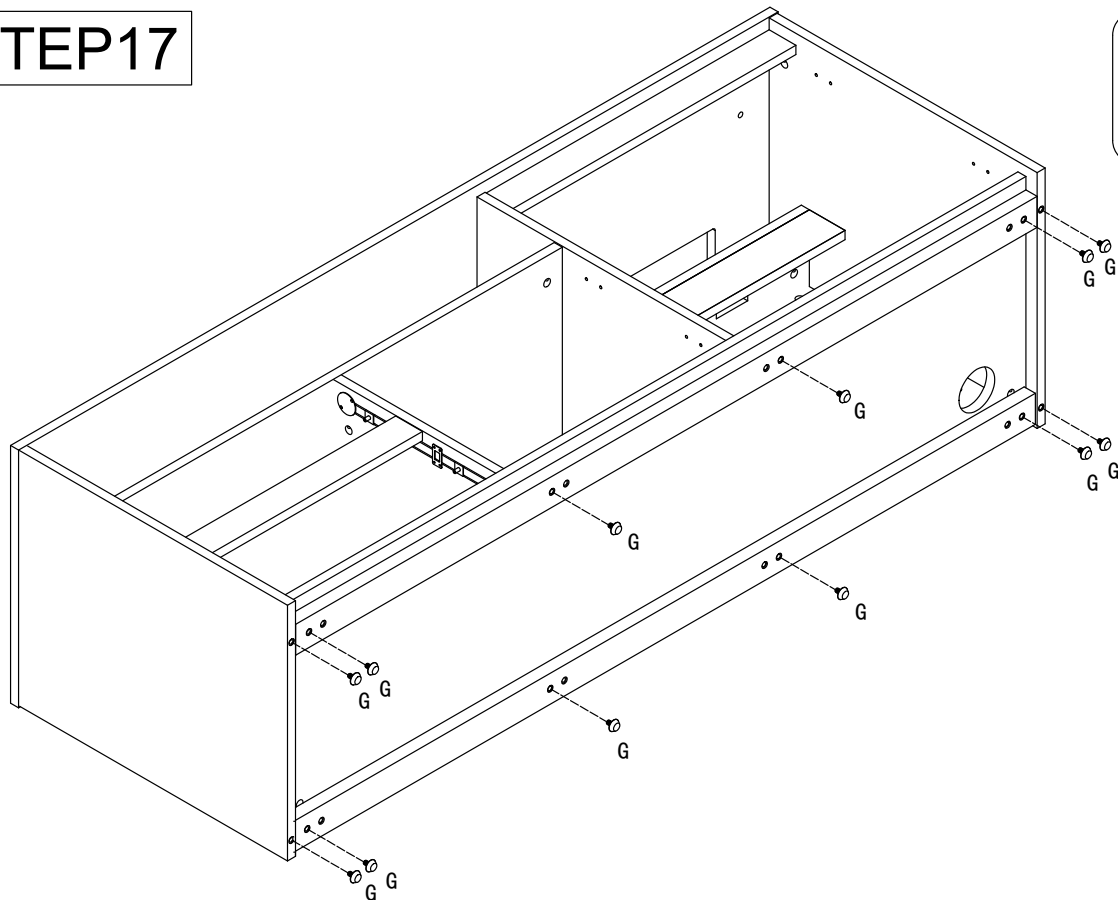




## STEP18

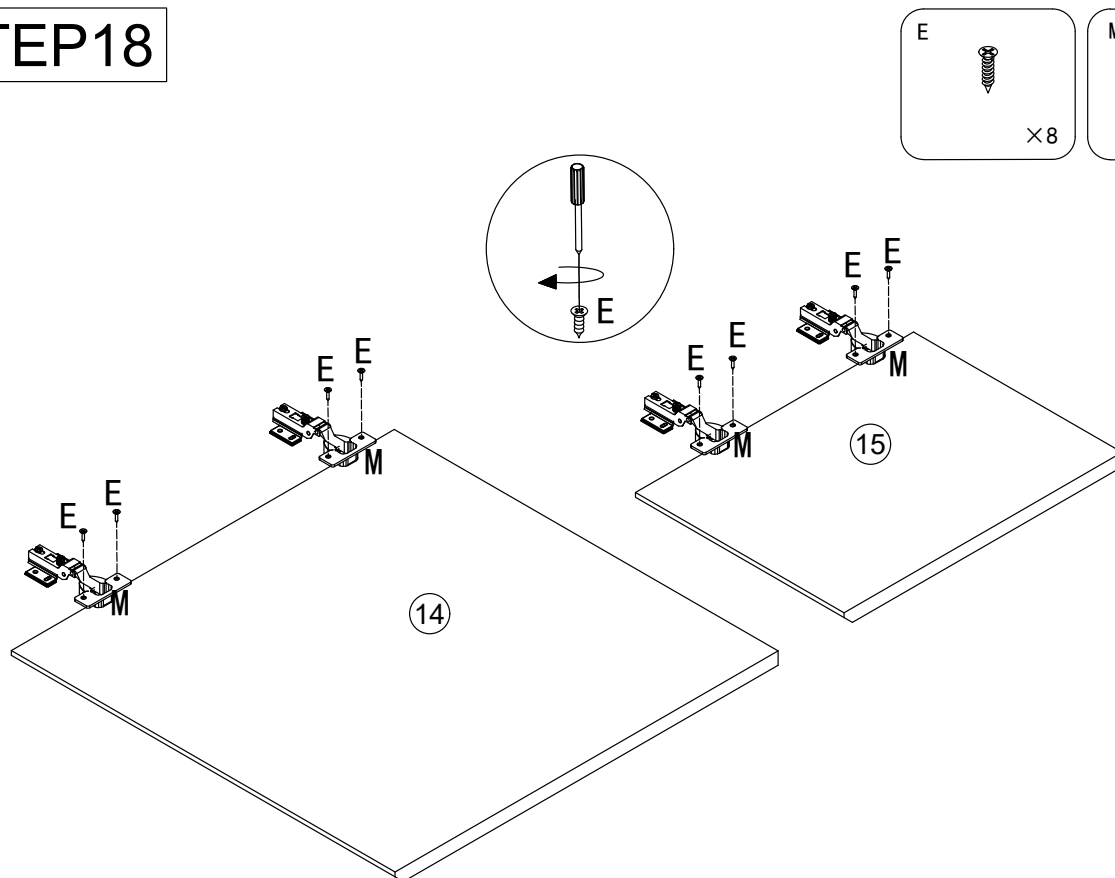





# STEP19

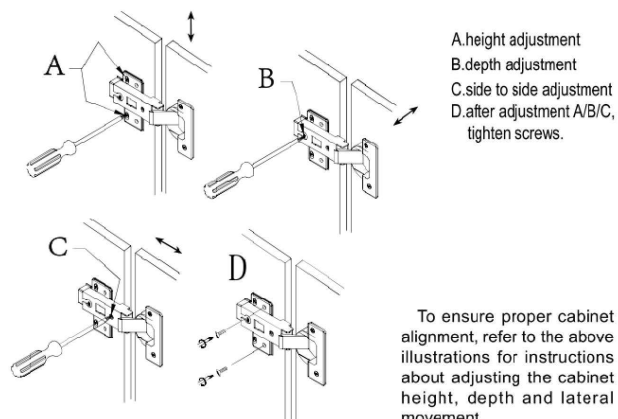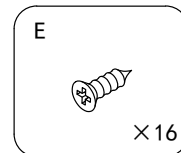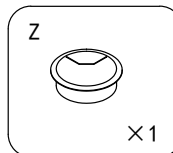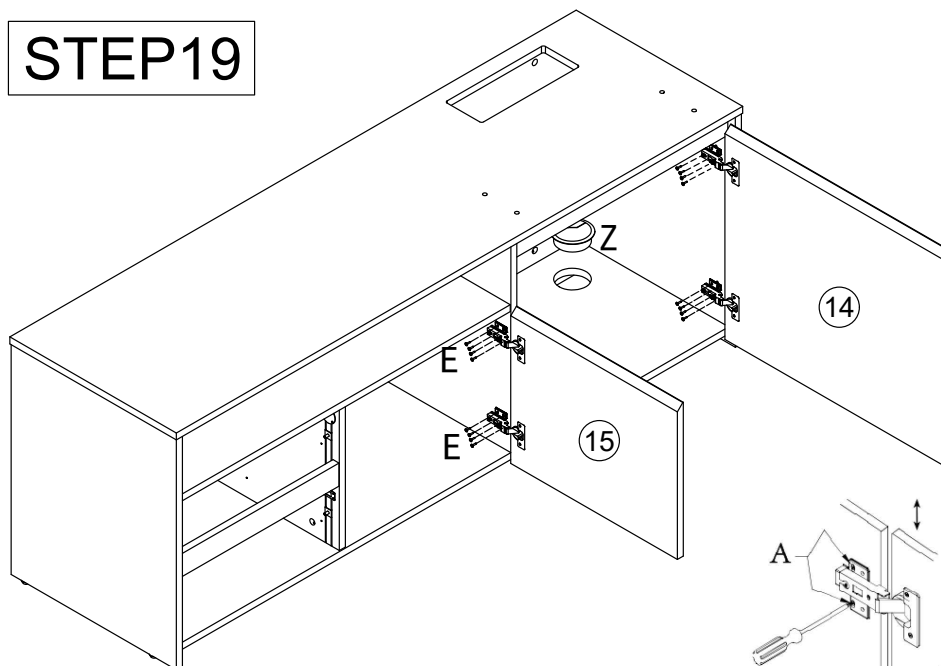






# STEP20

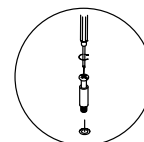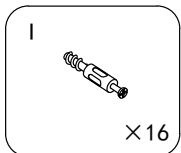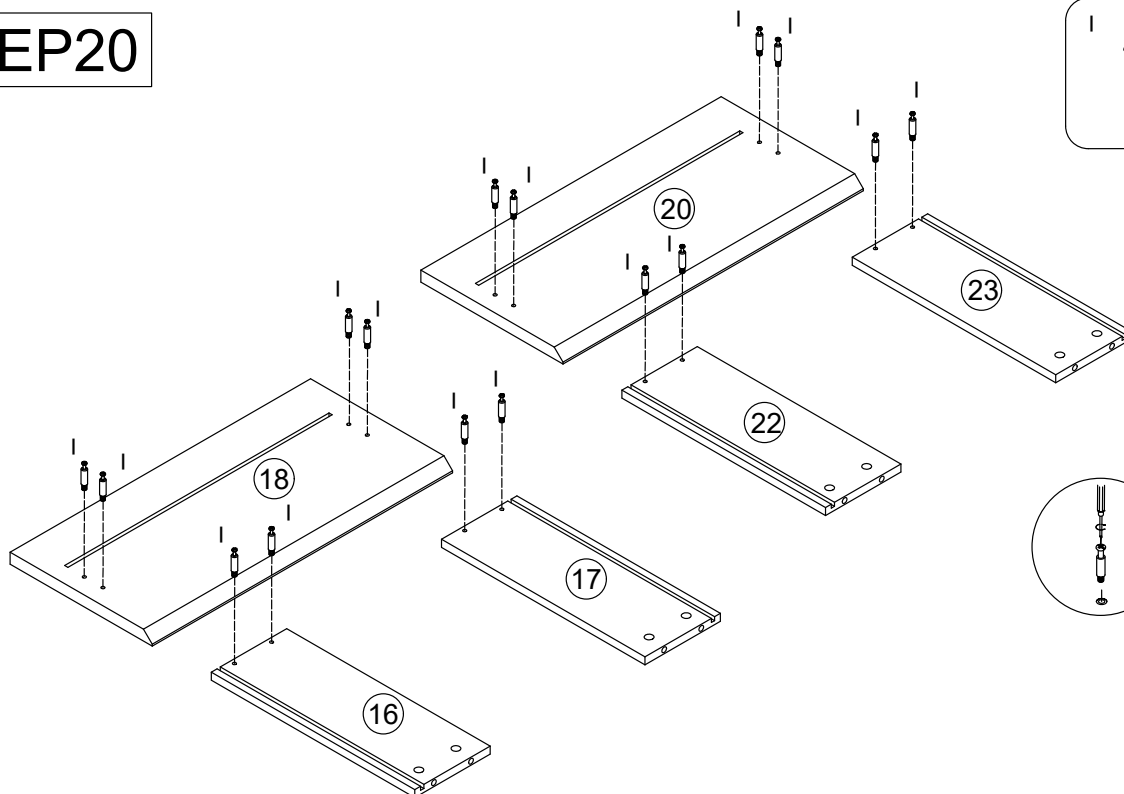





## STEP21

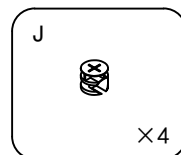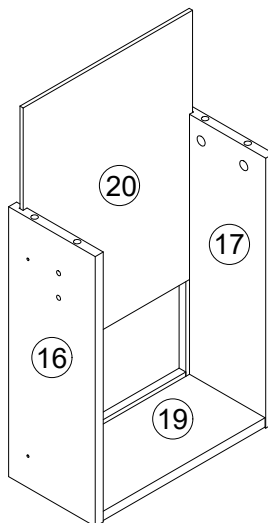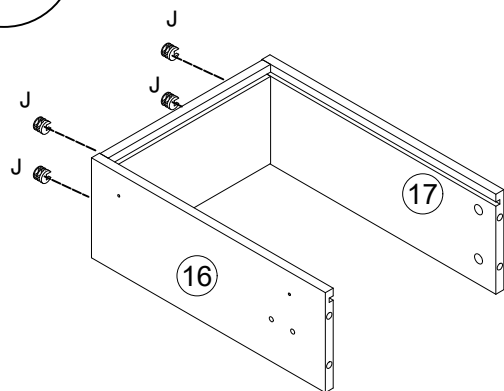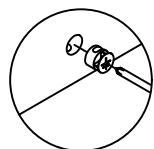





## STEP22

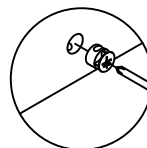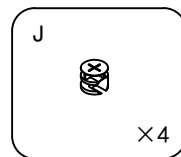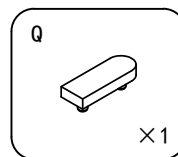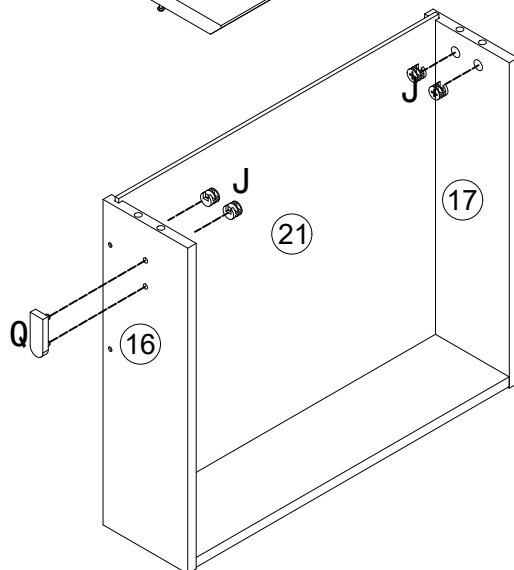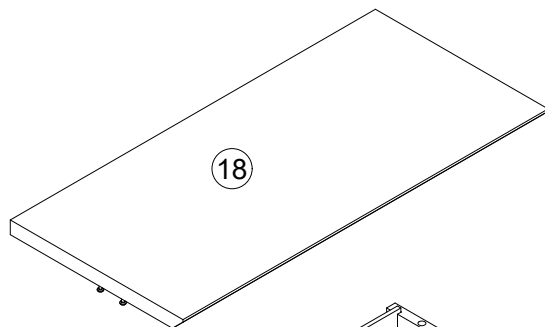



## STEP23

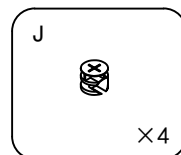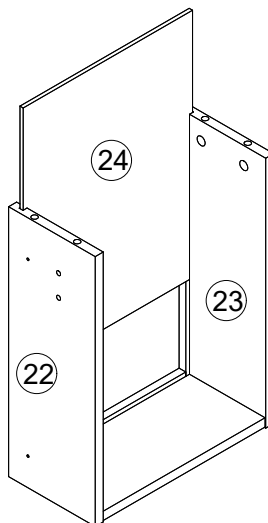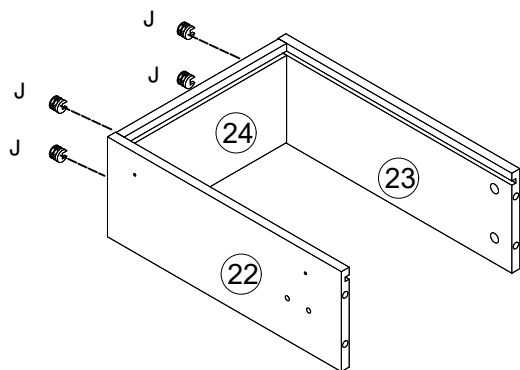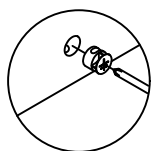







## STEP24

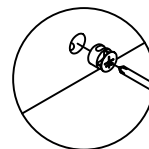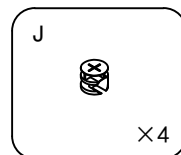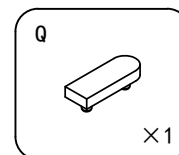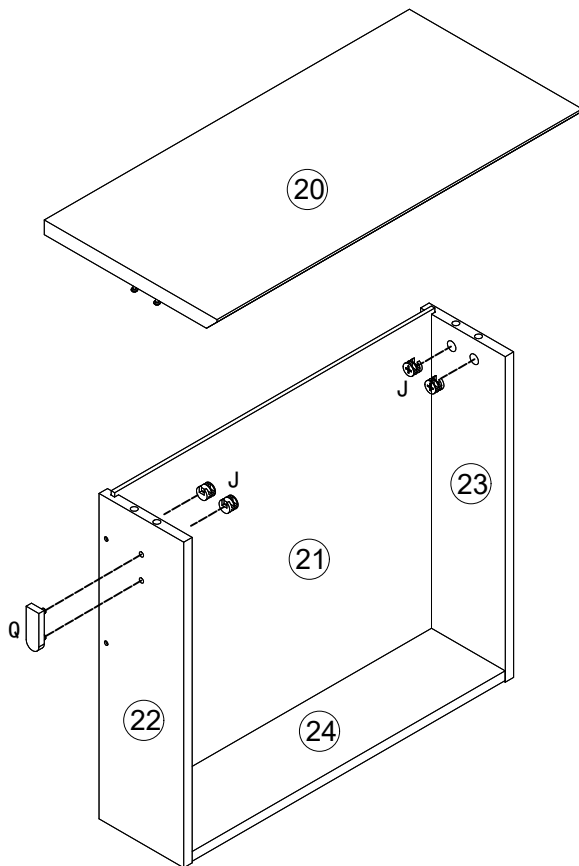

# STEP25



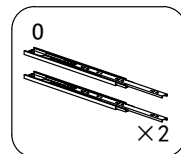
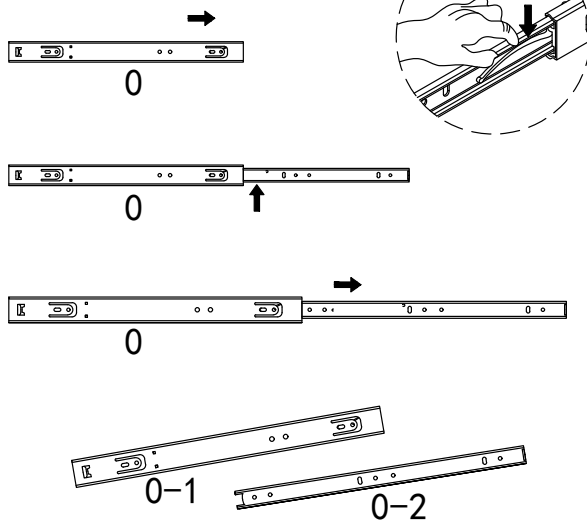


# STEP26

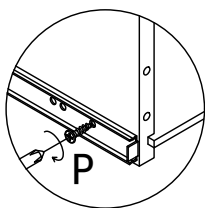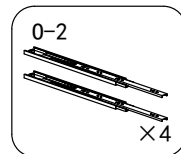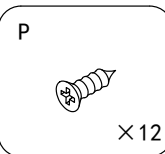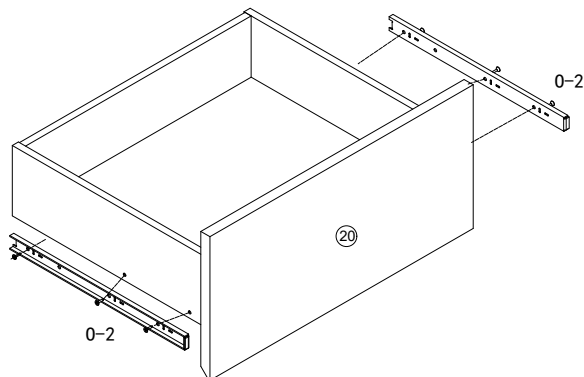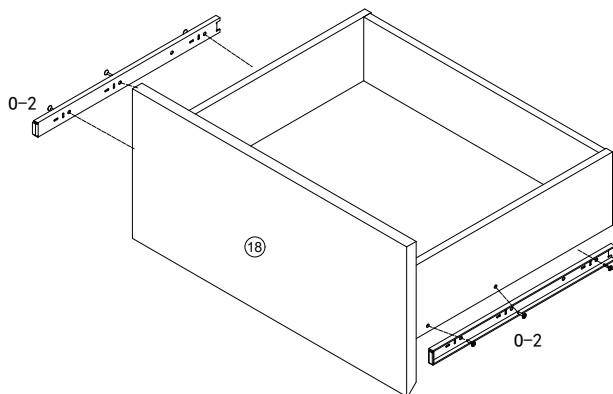


The steps for installing the slide rail on the upper and lower drawers are the same.

## STEP27

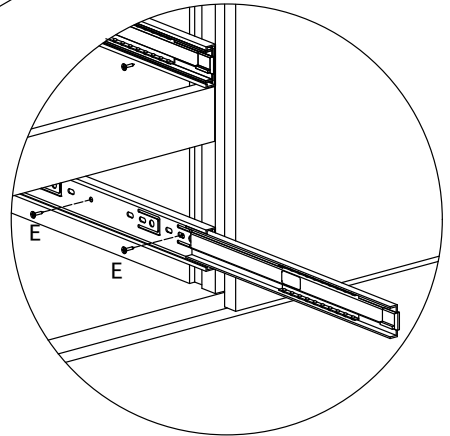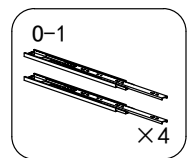
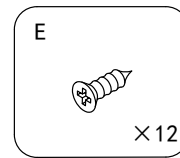
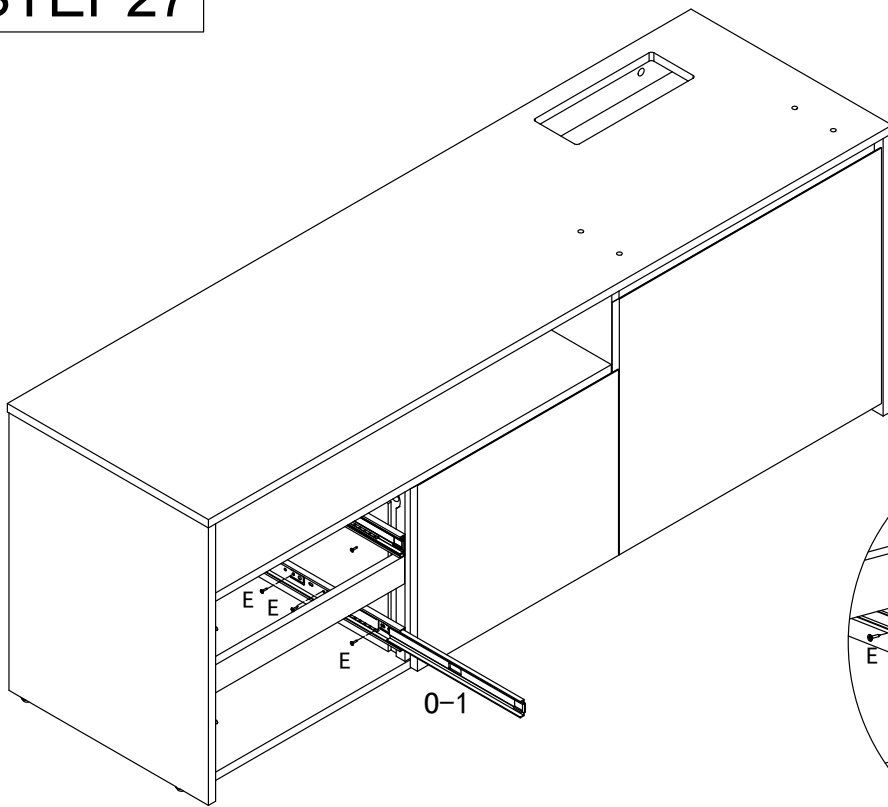


## STEP28

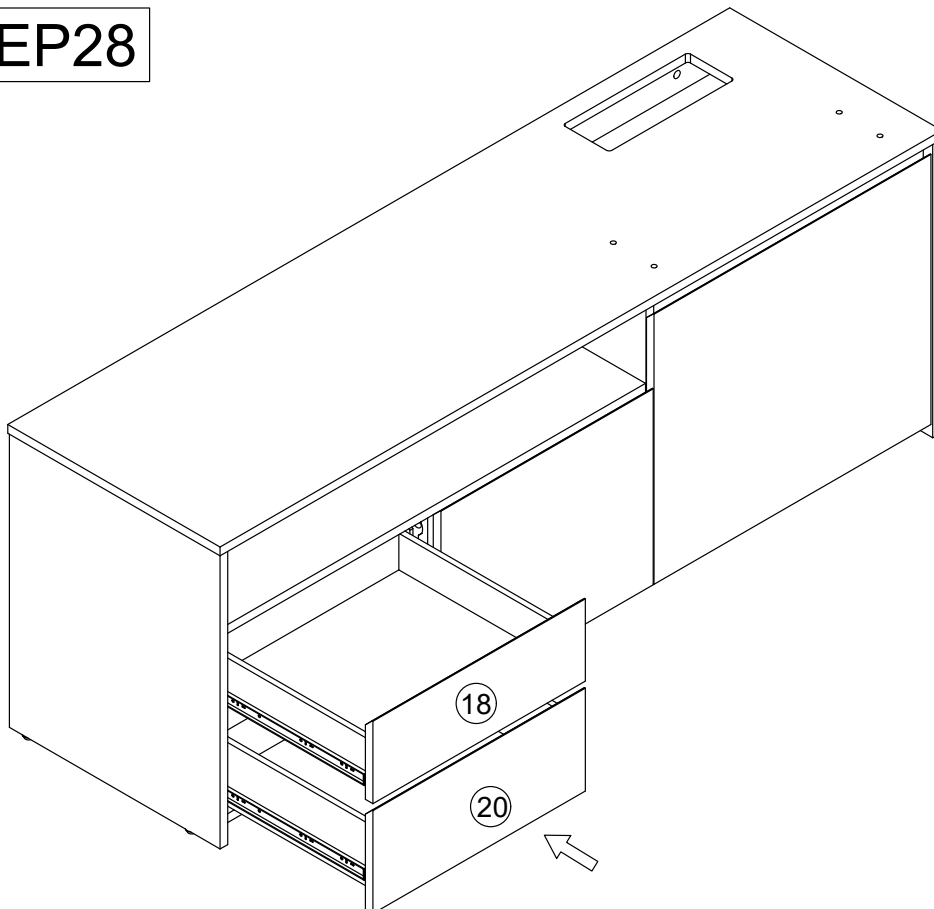






# STEP29

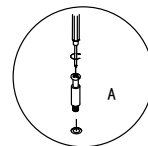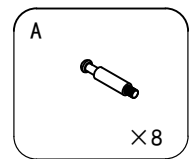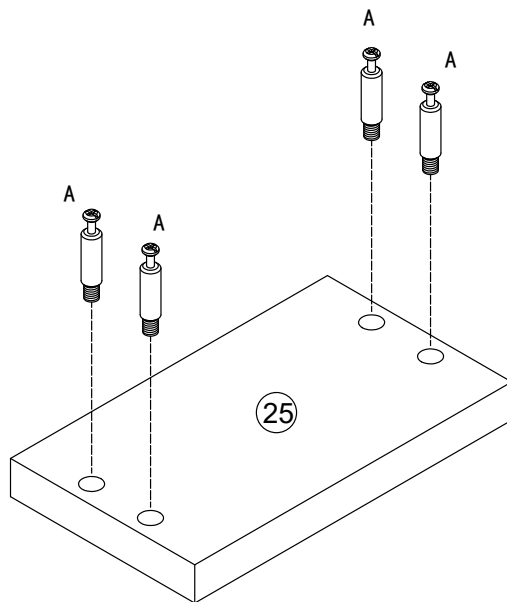


×2


# STEP30

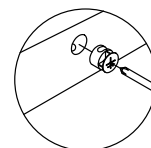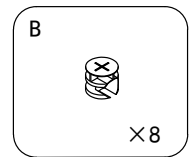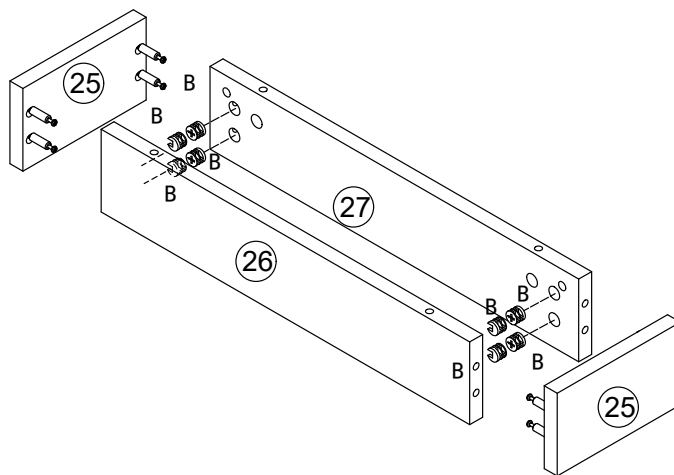


## STEP31

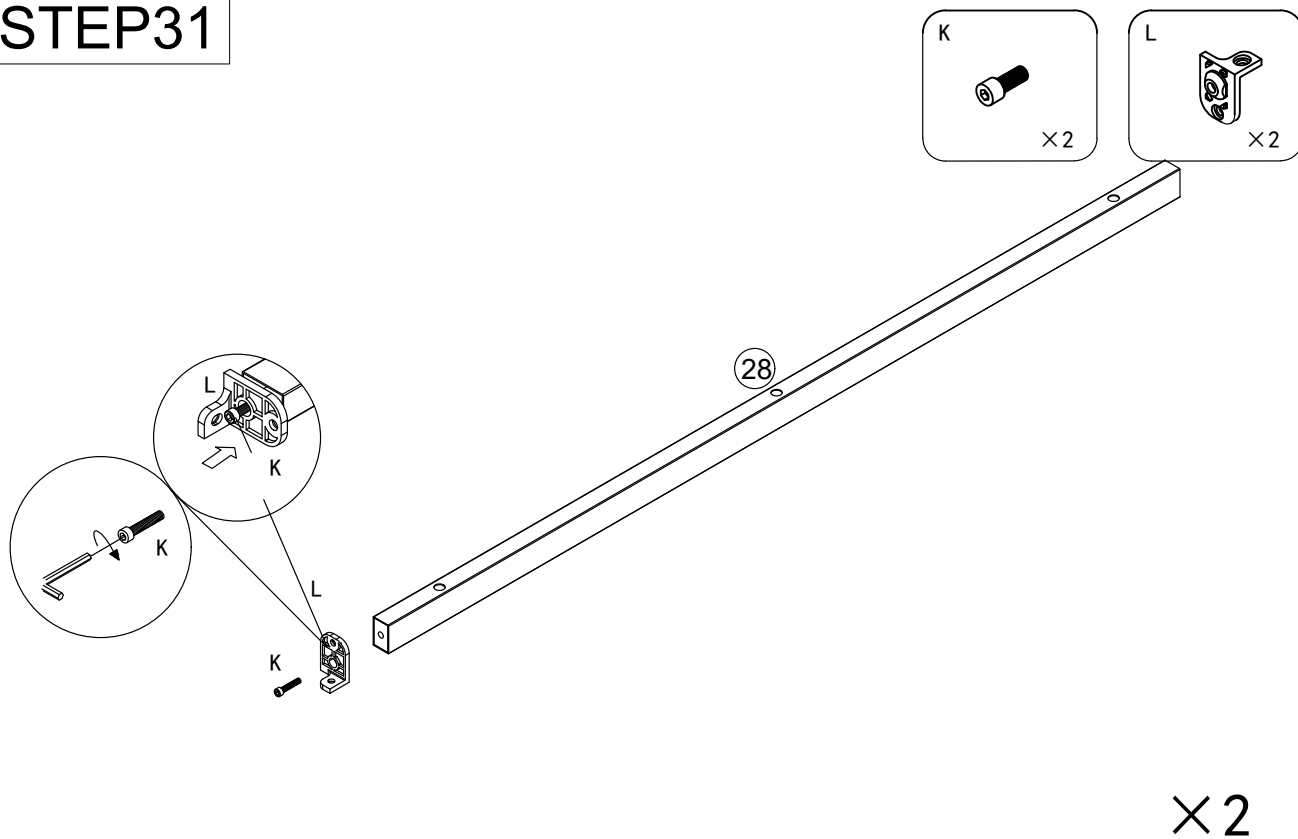


## STEP32

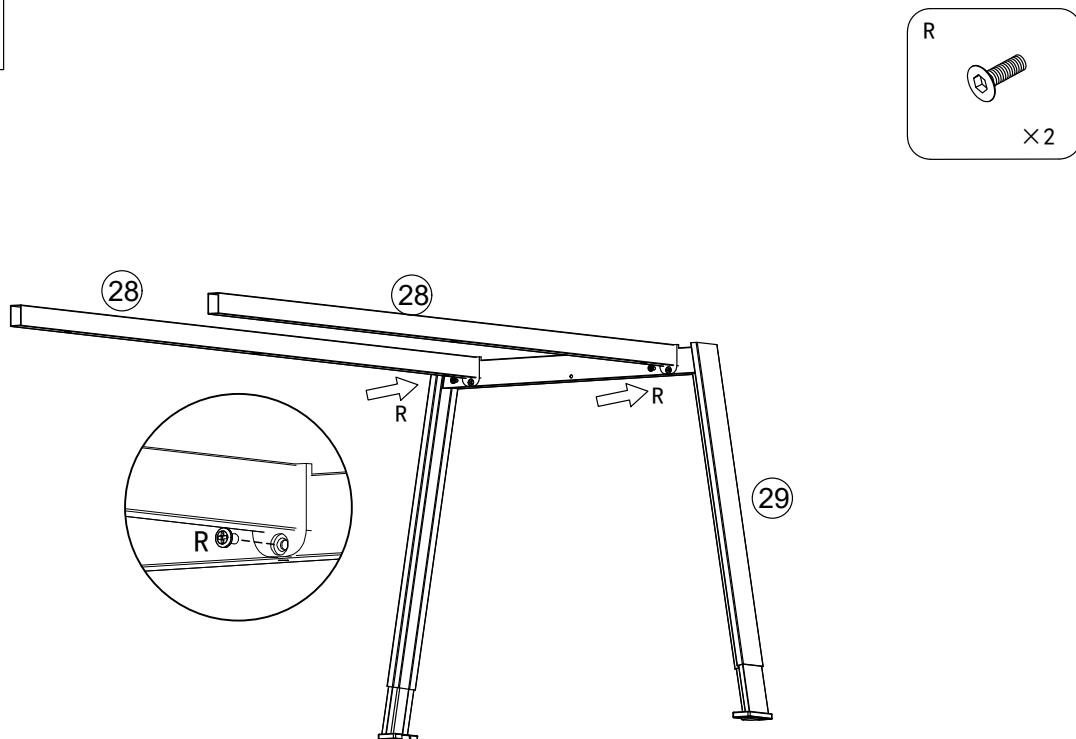




## STEP33

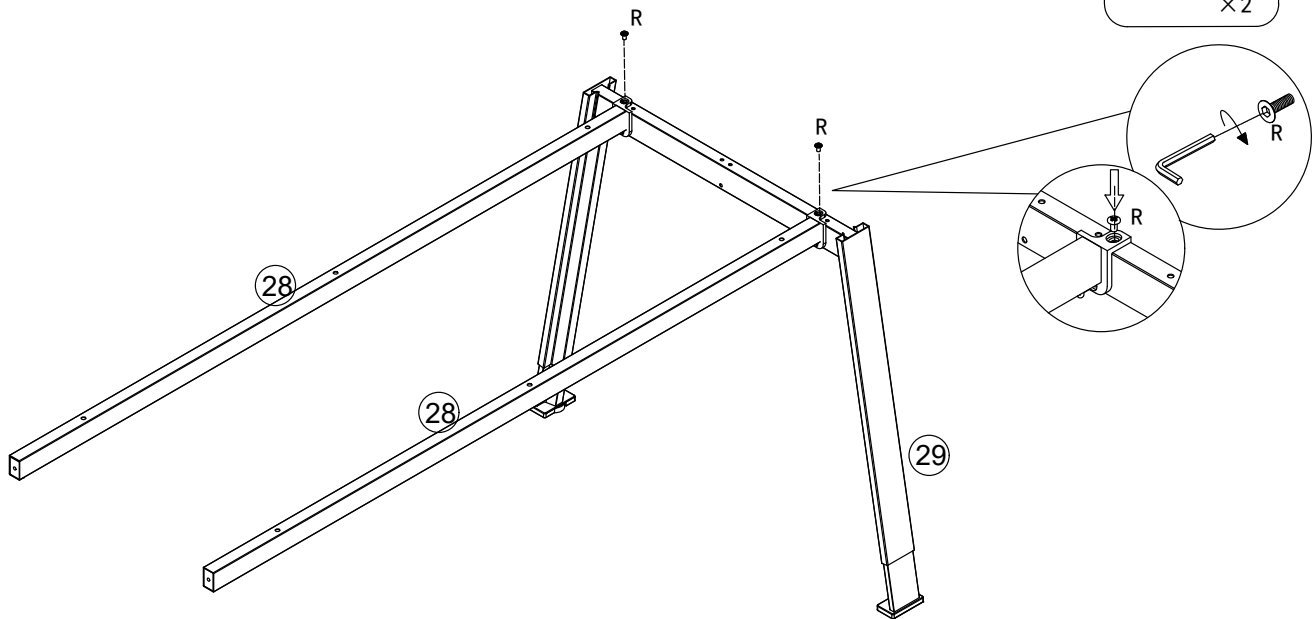




## STEP34

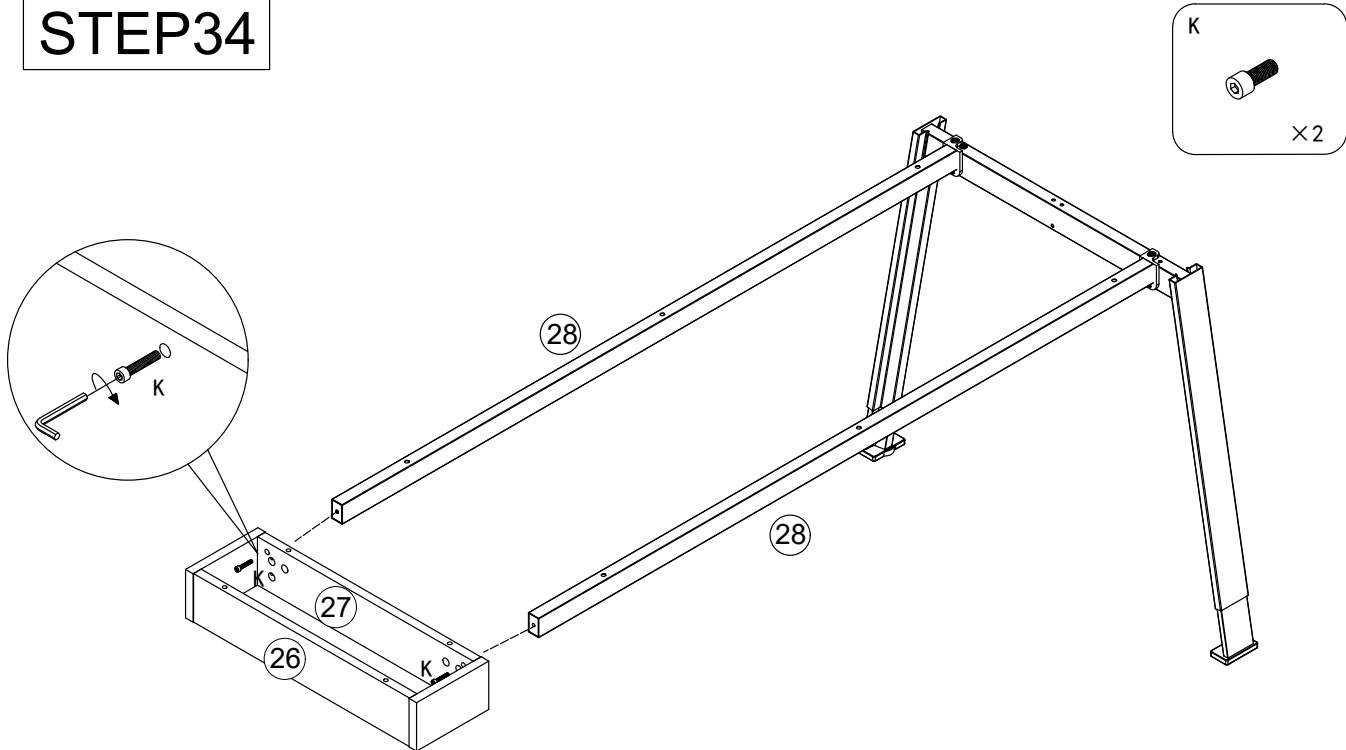



# STEP35

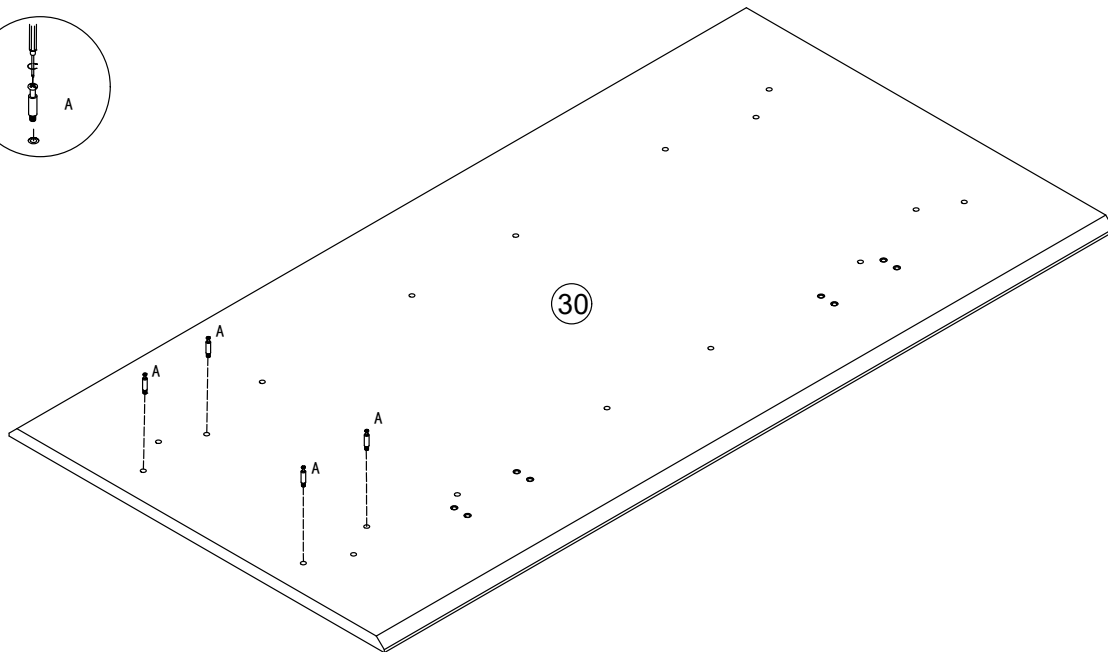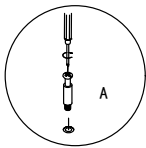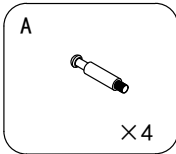




# STEP36

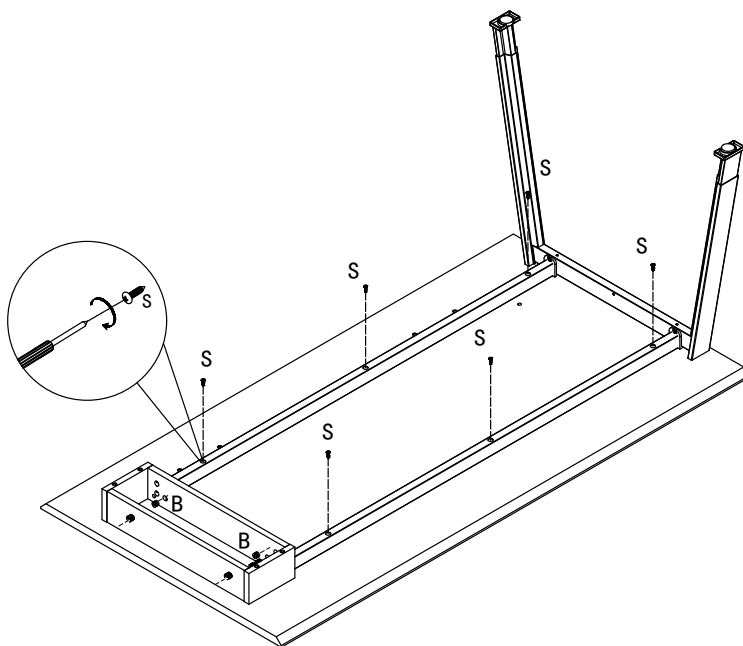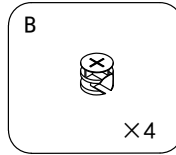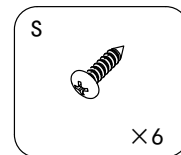


# STEP37

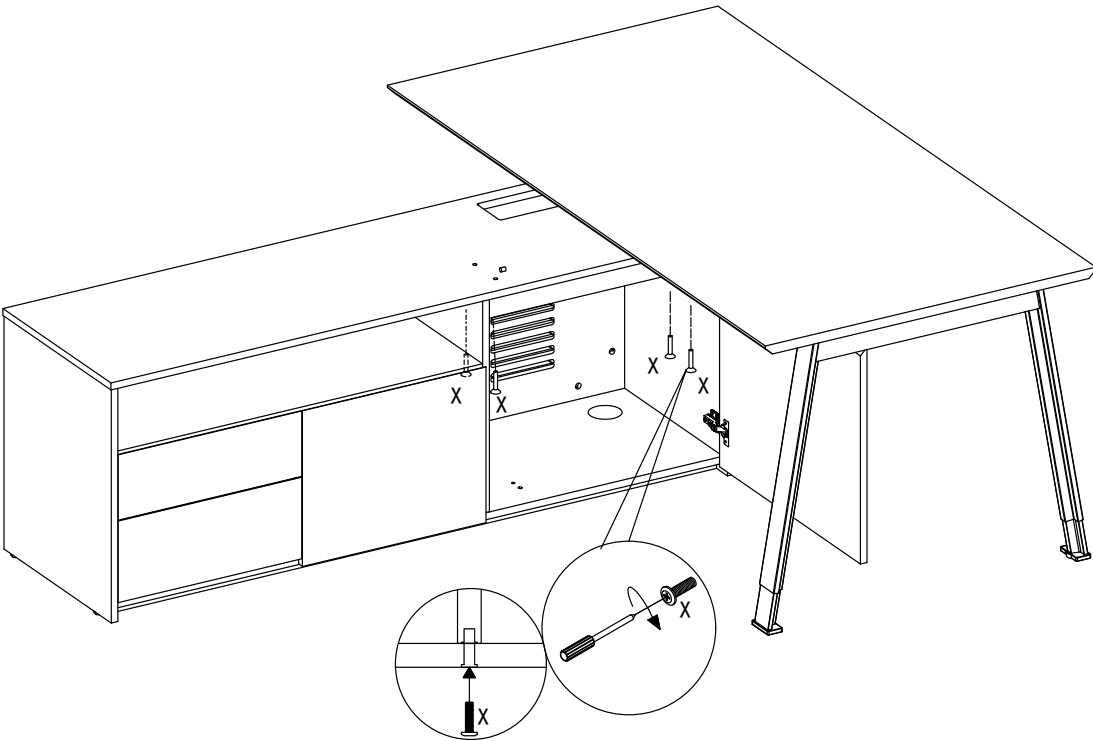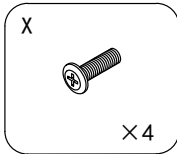


# STEP38

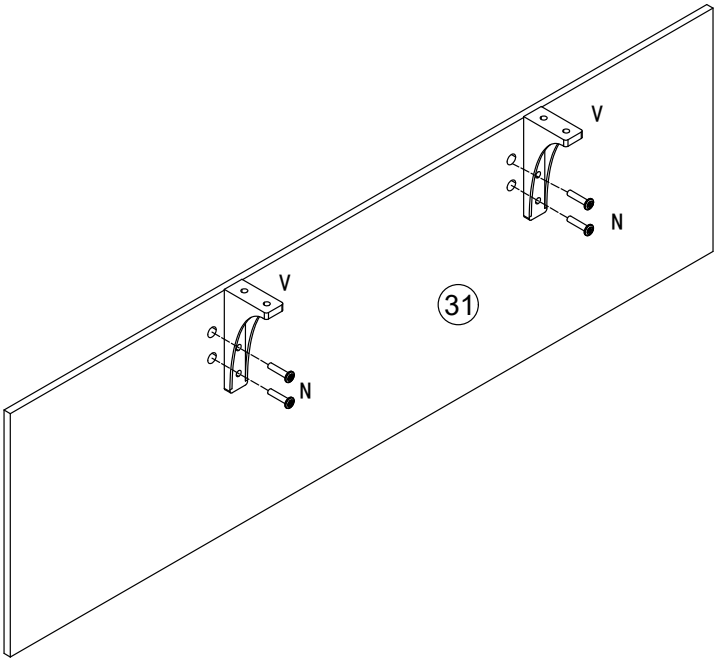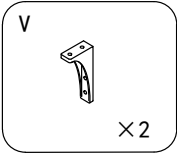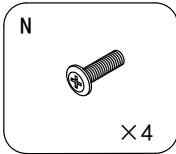

## STEP39

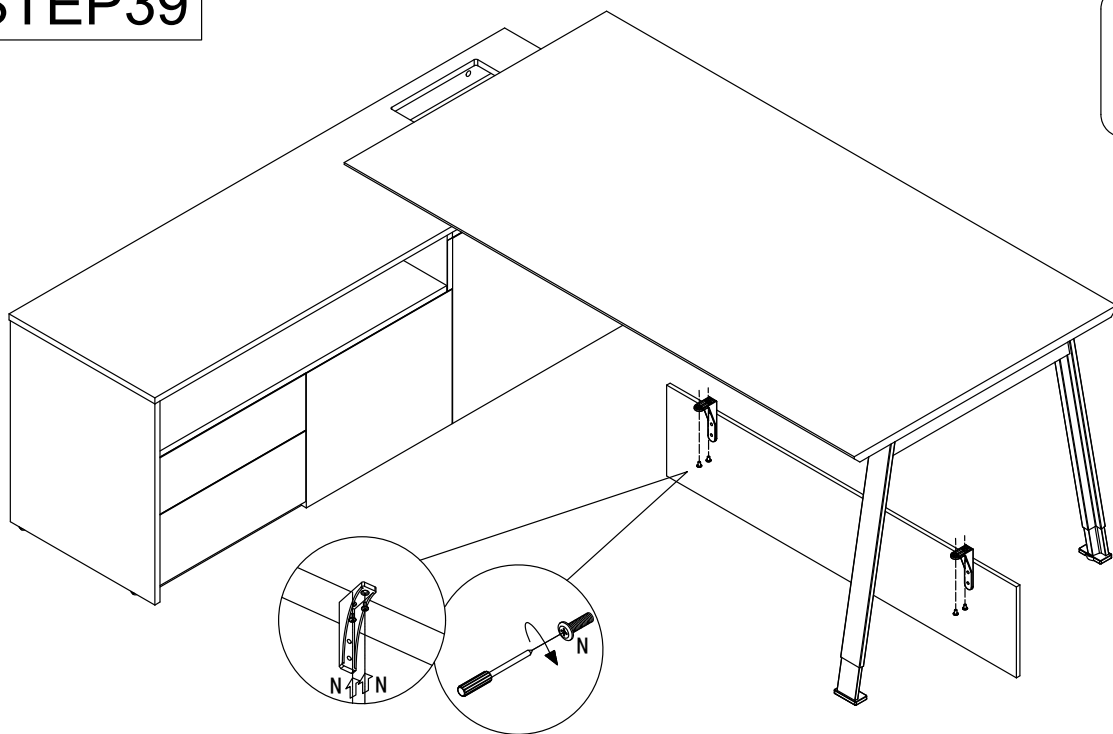


## STEP40

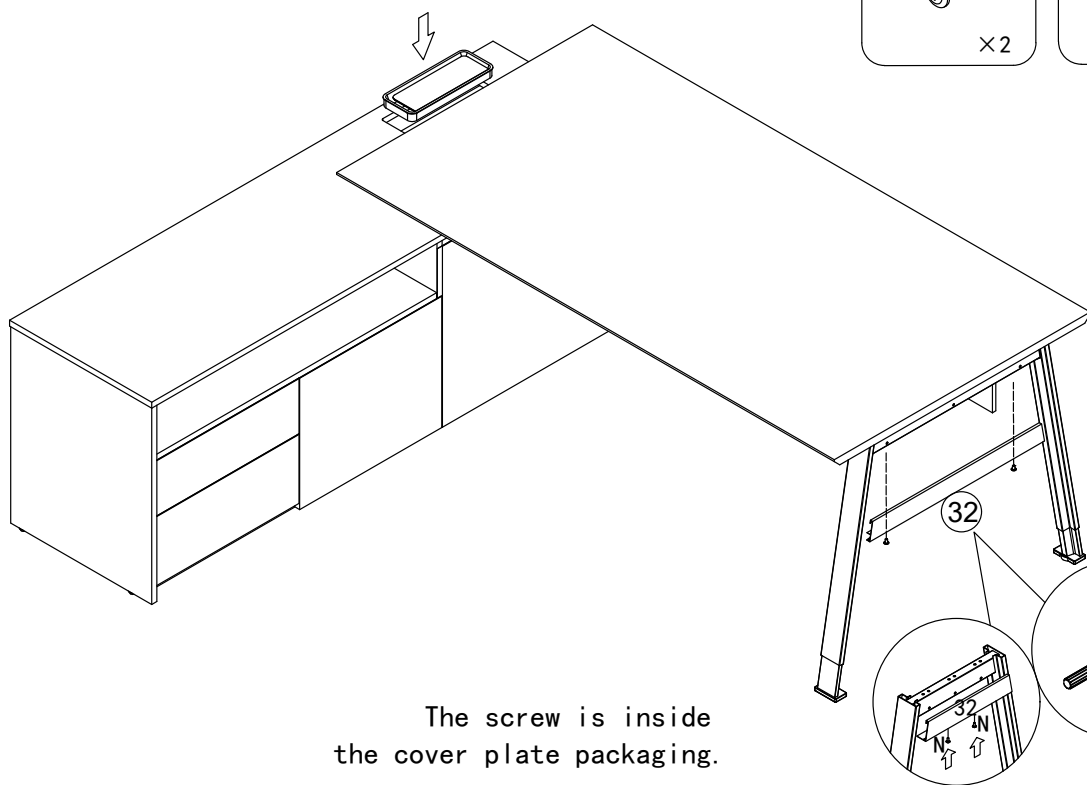


The screw is inside  
the cover plate packaging.


# RING-MEI PATCH USAGE INSTRUCTIONS

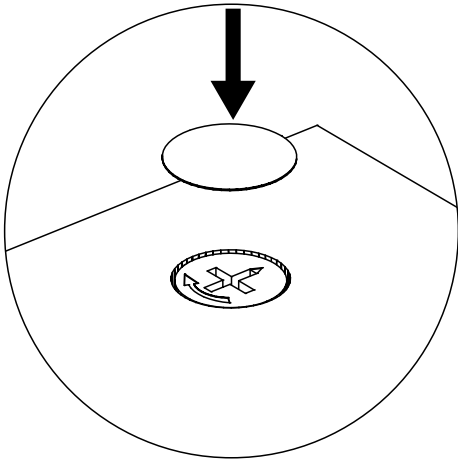


1. Peel off the protective film of the Ring-Mei Patch and align it with the hole (ensure the patch size matches the hole, with the patch slightly larger than the hole edges).

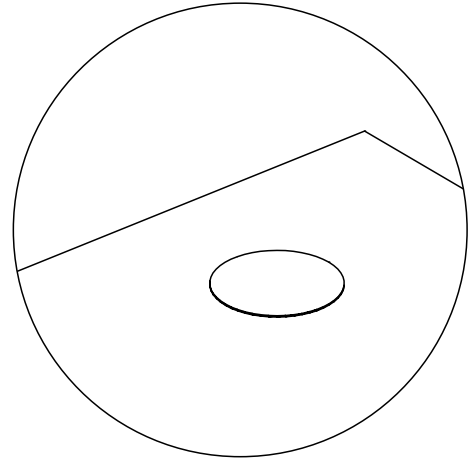

2. Press the center of the patch and smooth it outward (illustrated with dynamic lines indicating finger pressure).

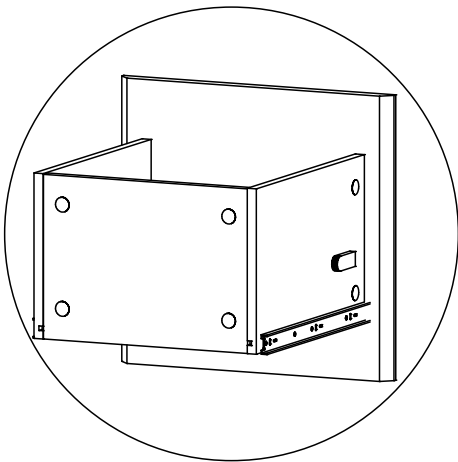

3. Final result: The hole is completely covered with smooth edges and no air bubbles.

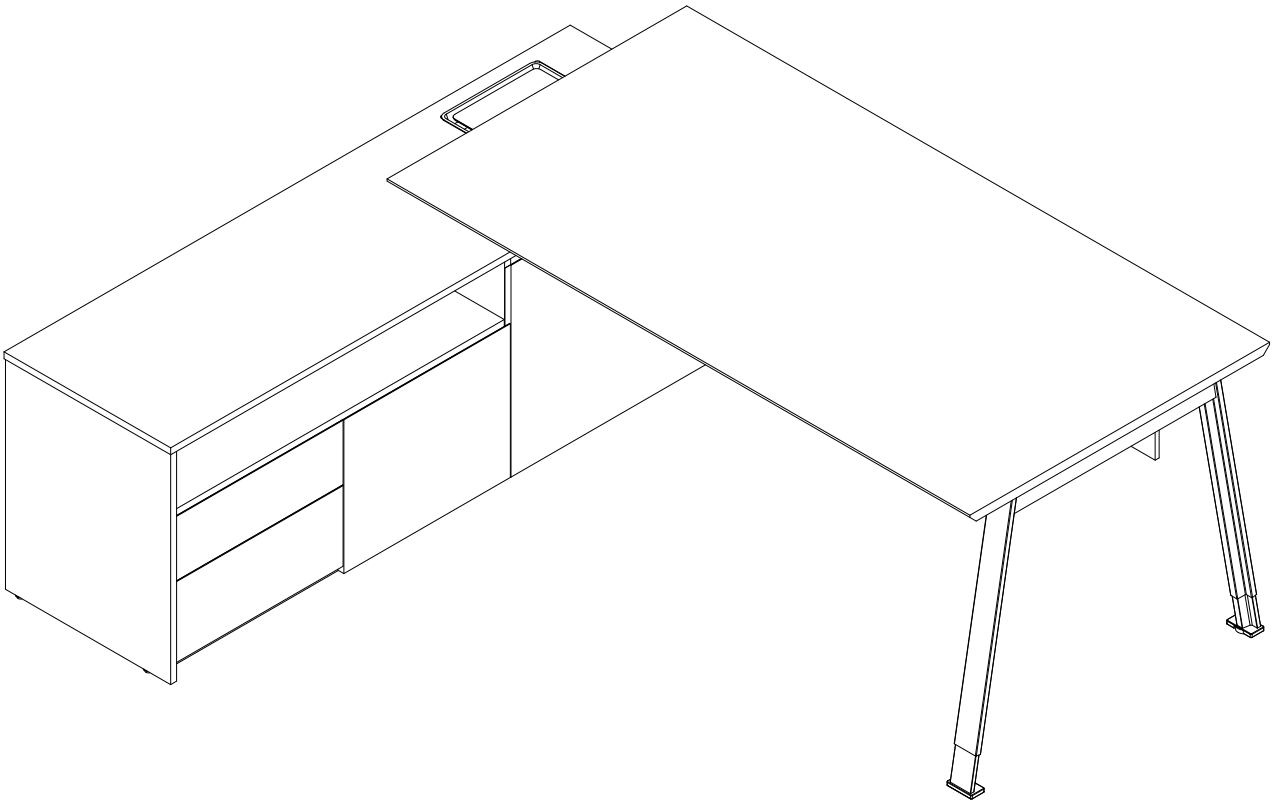

Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Please contact at: [christyningxing@nxubay.com](mailto:christyningxing@nxubay.com) or via Phone#3233938260 at EST 9AM-13PM

Many thanks and welcome to our shop again!