



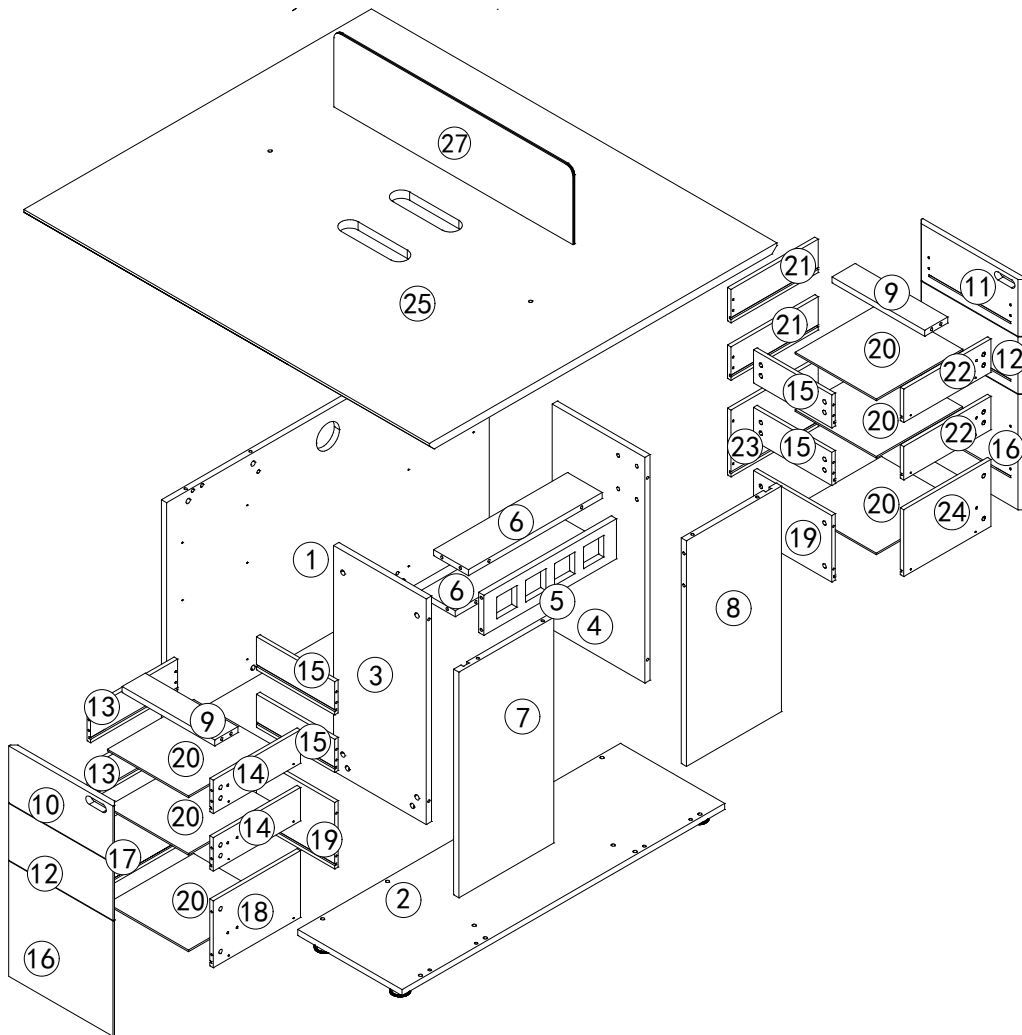

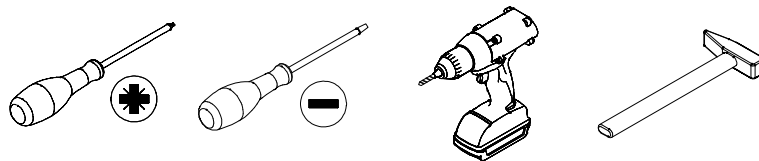















HKOFDK007

INSTALLATION INSTRUCTIONS





YOU MAY NEED (NOT SUPPLIED)



													
A	12	B	36	C	60	D (R)	12	E	48	F	48	G	6
													
H	5	I	2	J	1	K	1	L	2	M	2	N	2
													
P	12	S	2	(Q) T	2	Y (0)	4						




spare parts(screws) have been included in the package in case you have the needs!

STEP1

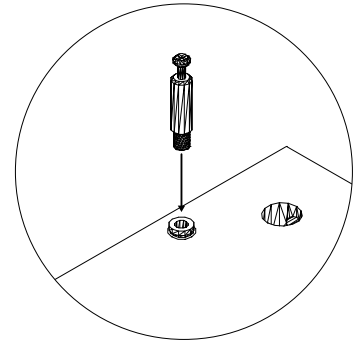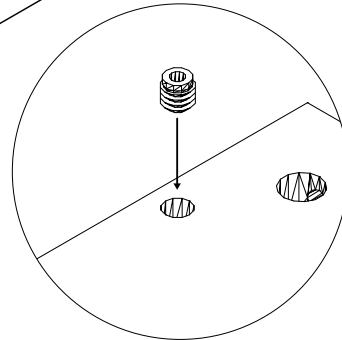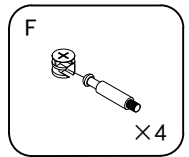
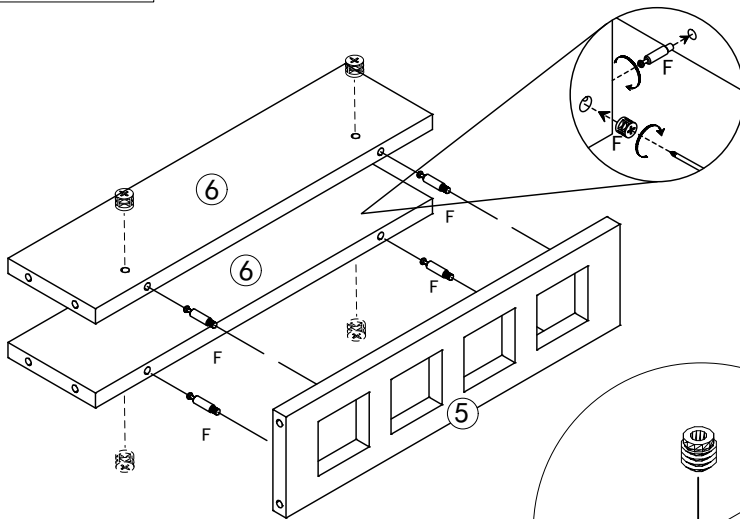


First remove the plastic head and press it into the hole, and then tighten the screw. This approach to general all the F.

STEP2

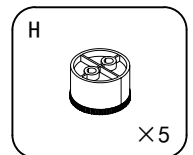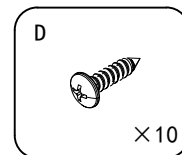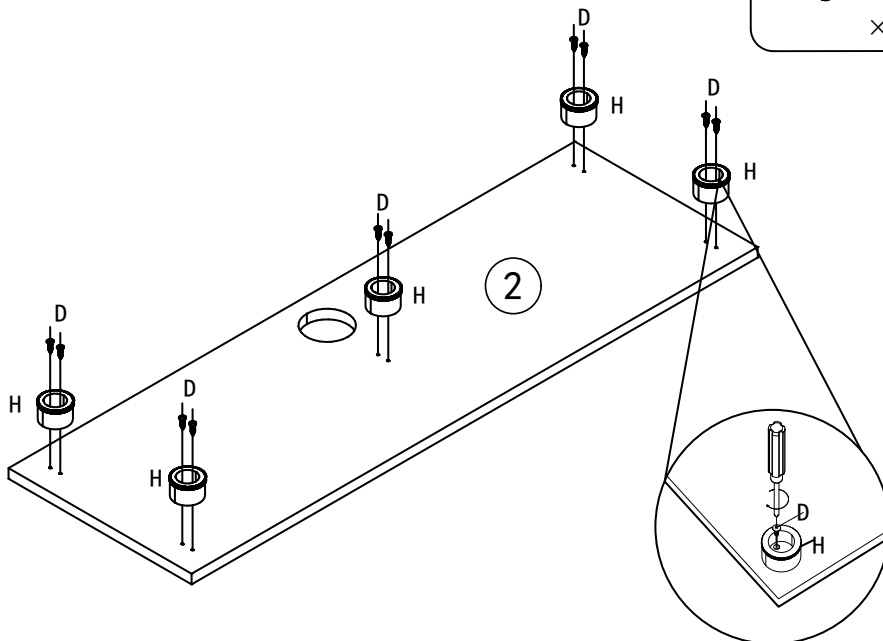





Suggested Installation Position for Lock Piece of HKOFDK006/HKOFDK007

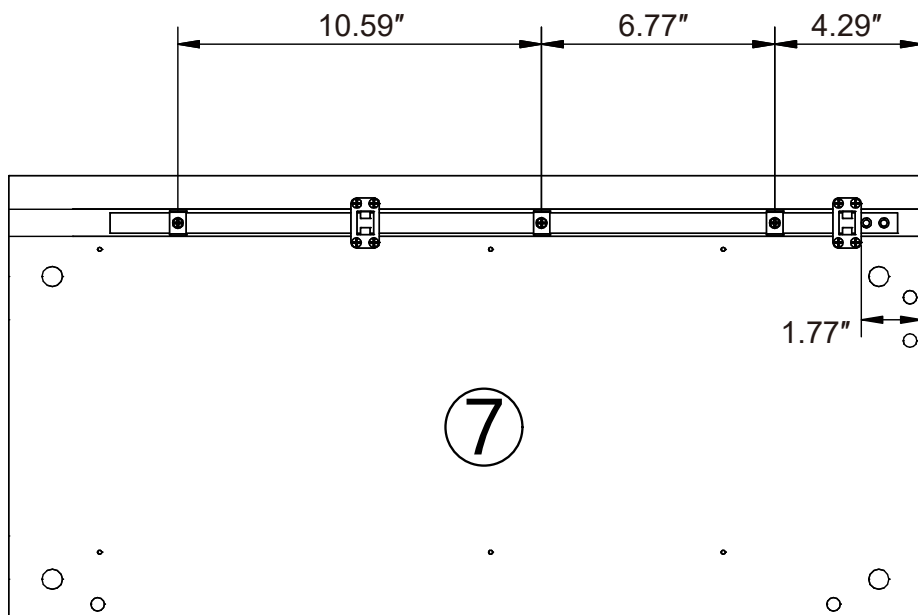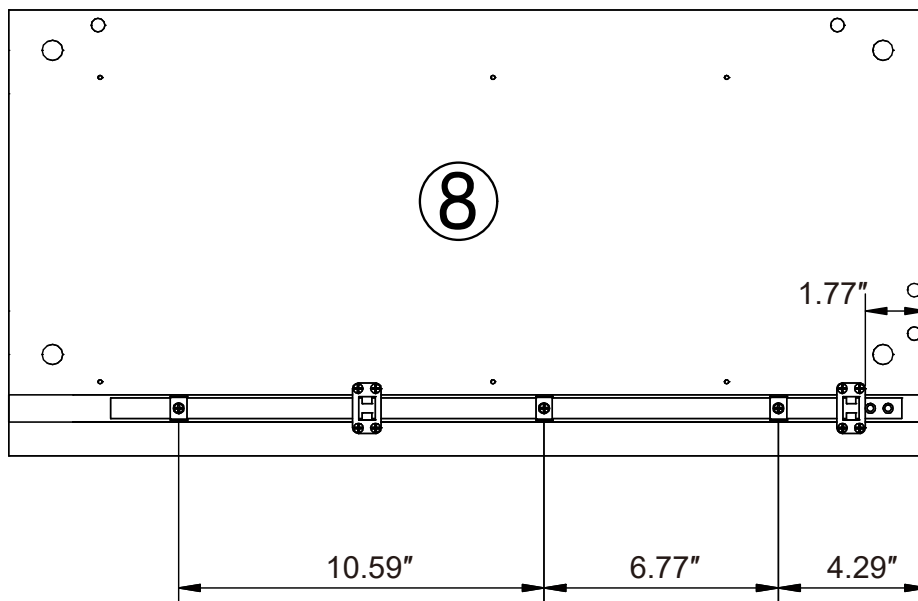

Recommended installation dimensions for the lock strip.
Adjustments can be made based on actual conditions.

STEP3

These three screws and the accessories are packaged together.

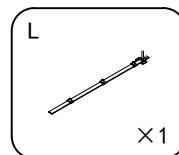
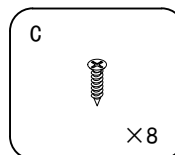
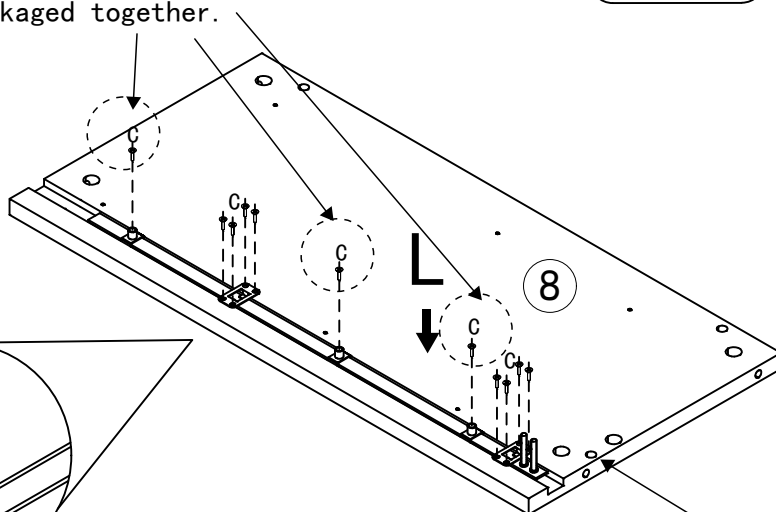
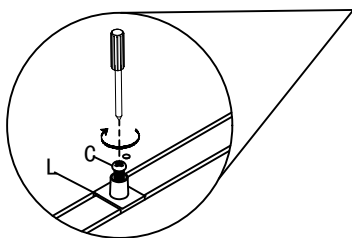


The hole is facing up.

The installation position of the lock piece should be adjusted based on the actual site conditions.

STEP4




These three screws and the accessories are packaged together.

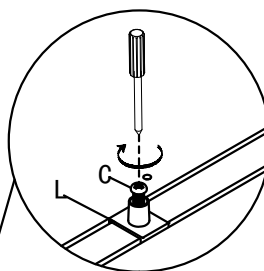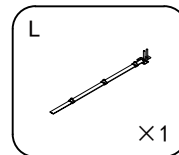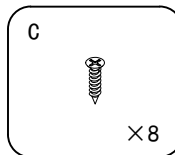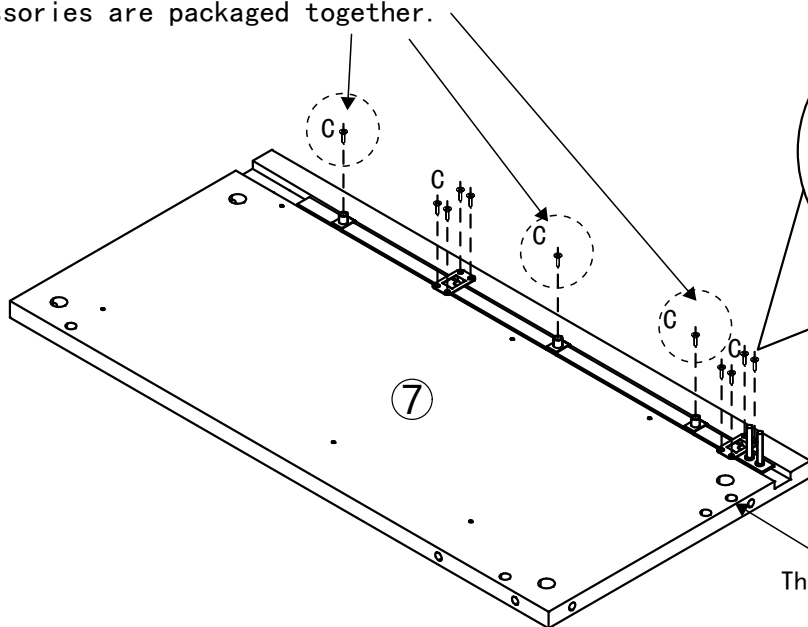





The hole is facing up.

The installation position of the lock piece should be adjusted based on the actual site conditions.


STEP5

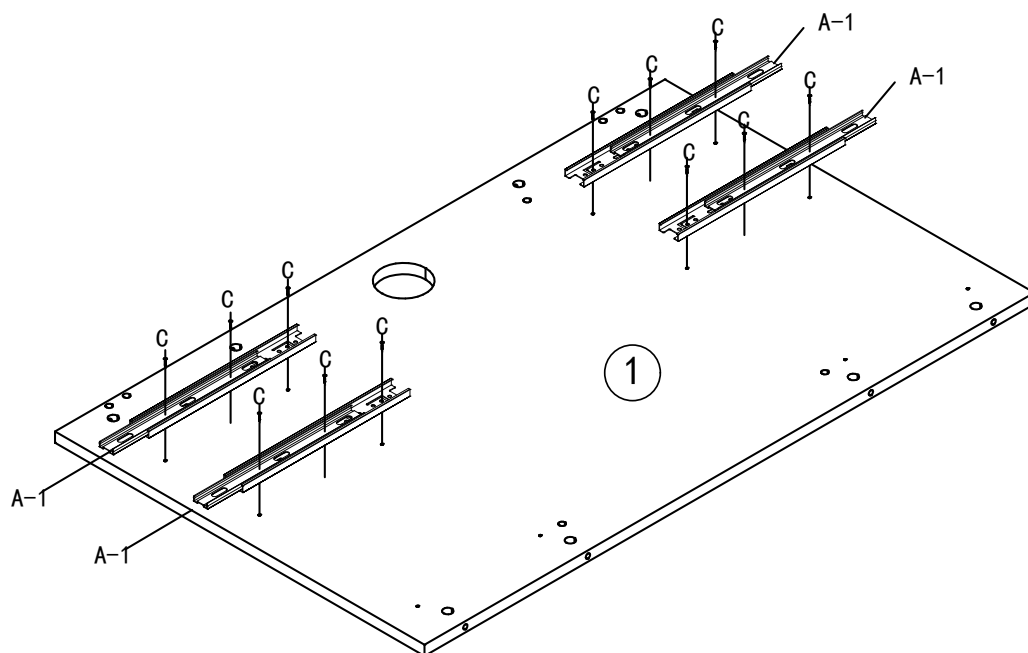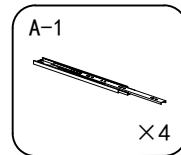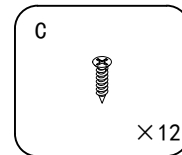


STEP6

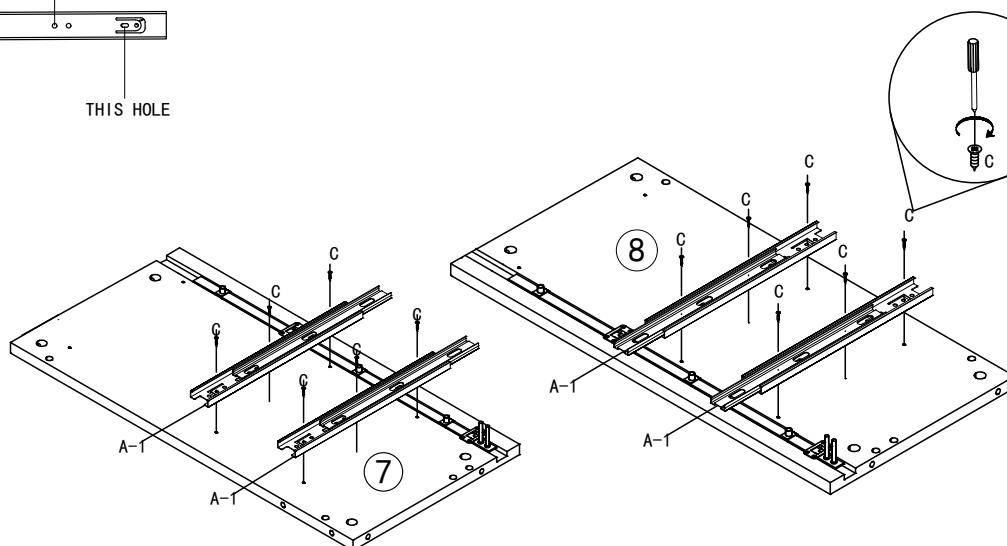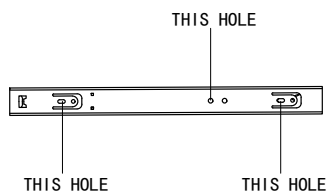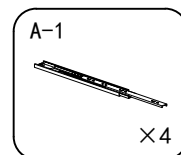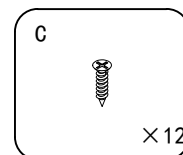



STEP7

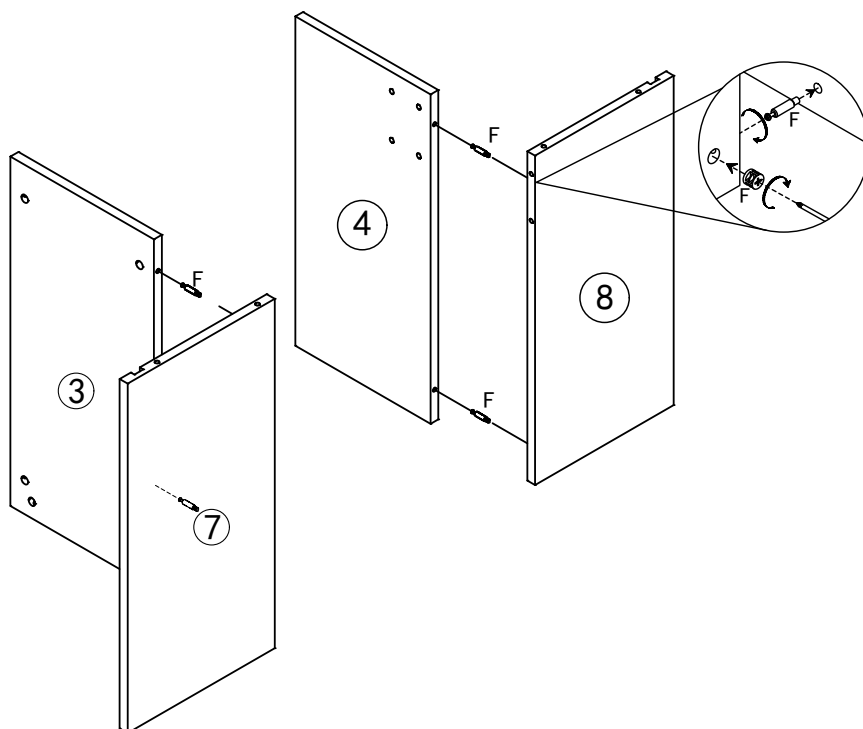



STEP8

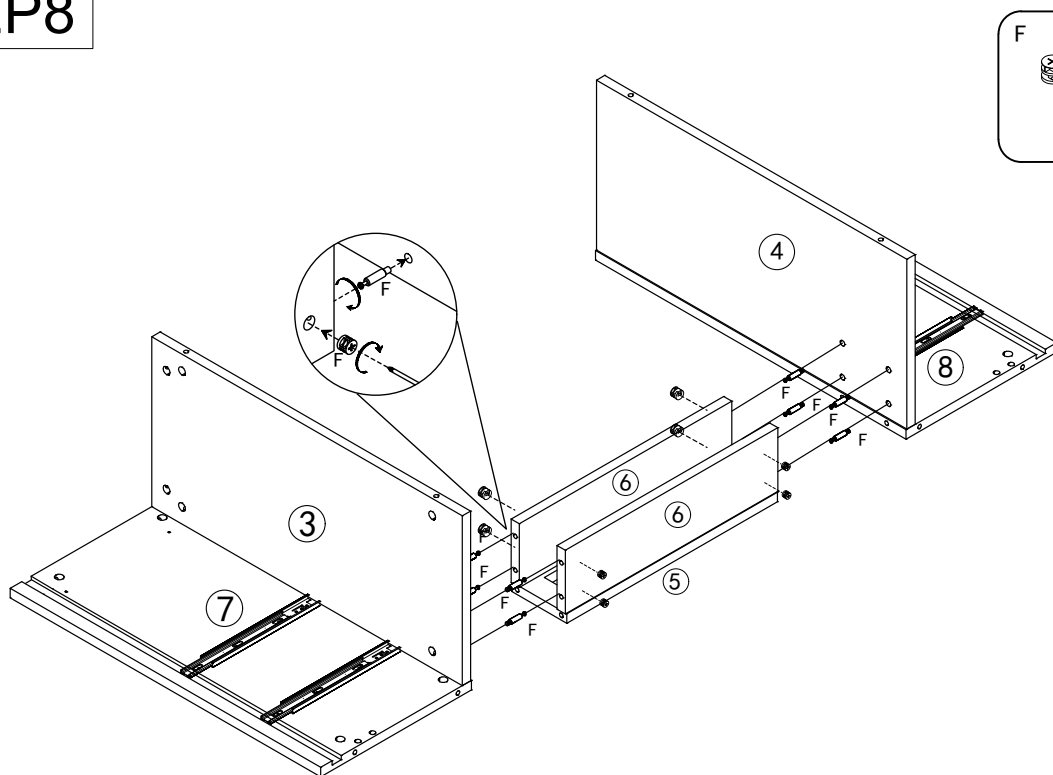


STEP9

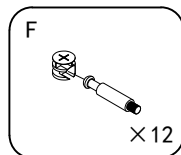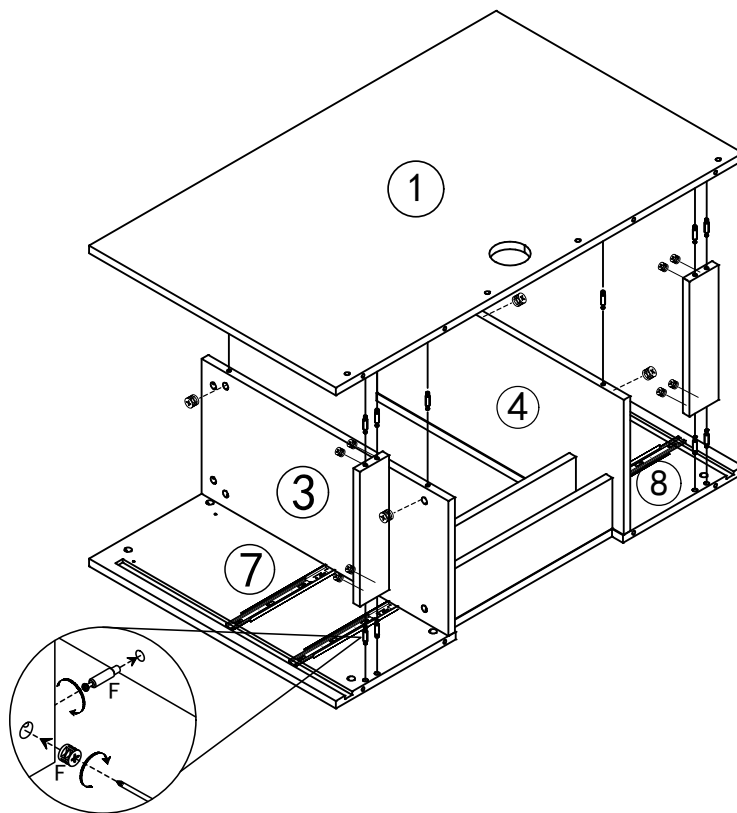

STEP10

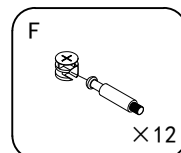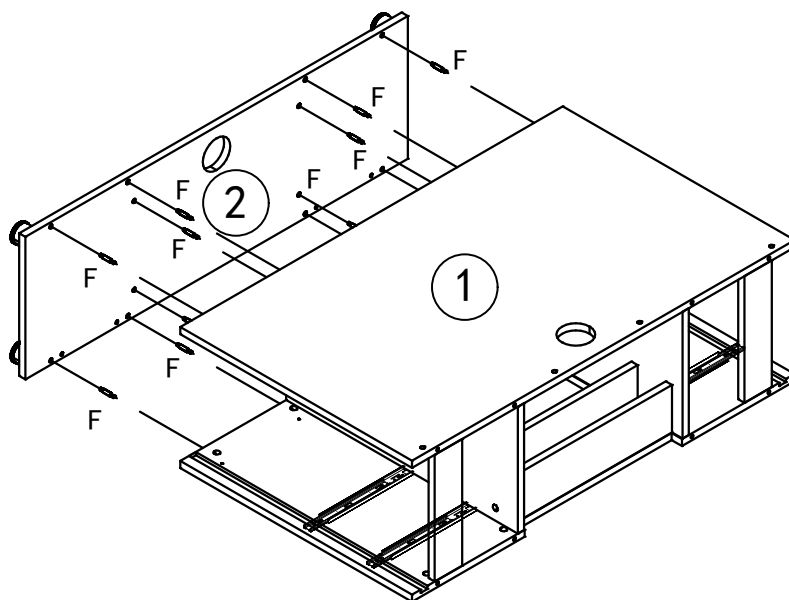


STEP11


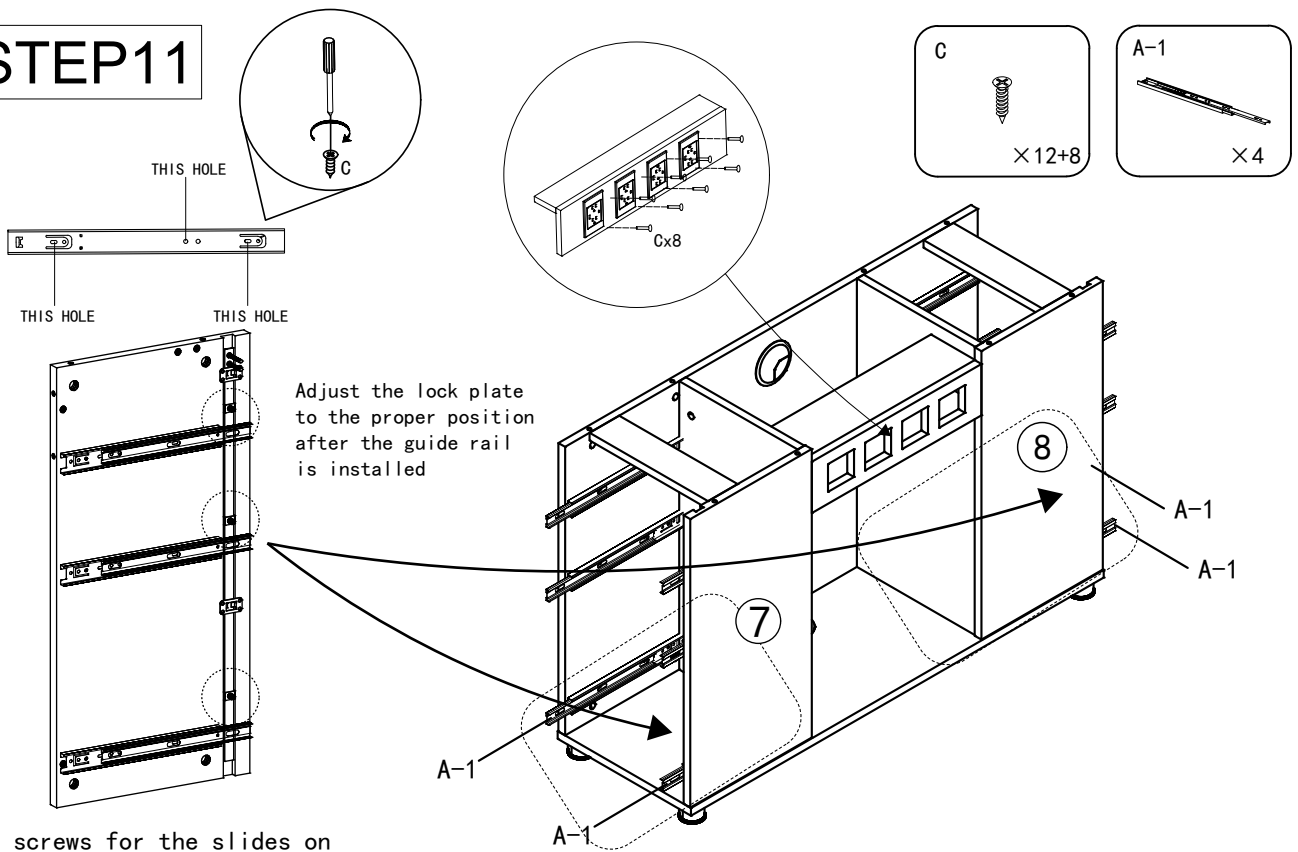


The screws for the slides on the bottom row should be tightened after the side cabinet is assembled.



STEP12

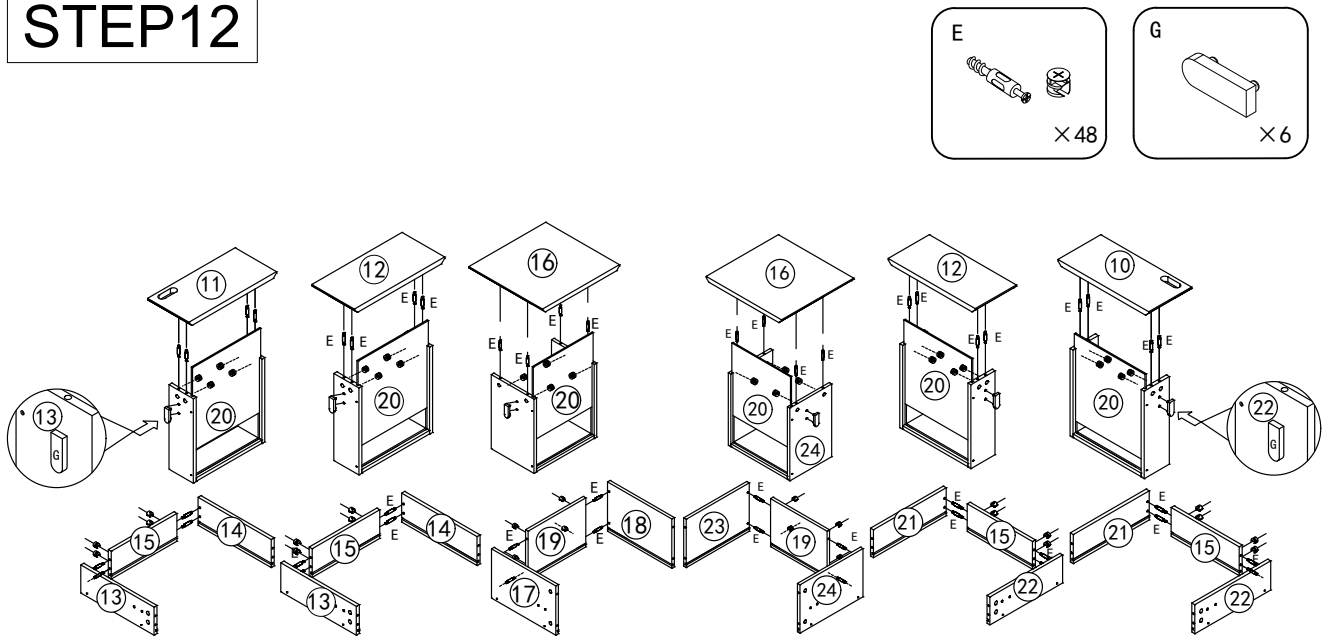


Lock Installation Steps

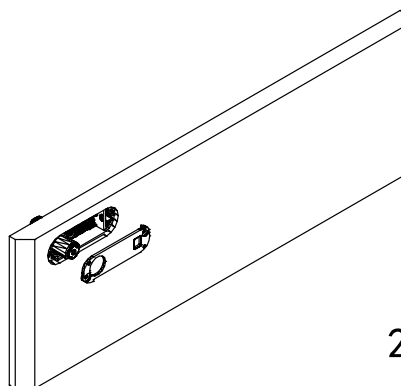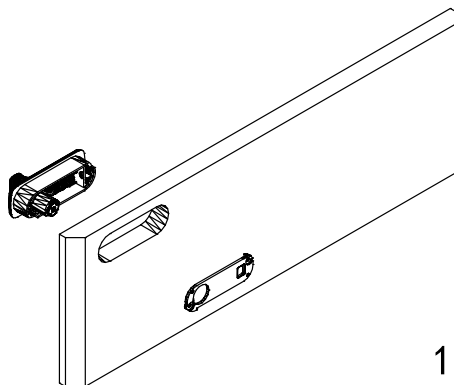


The screws of the lock need to be removed in advance.

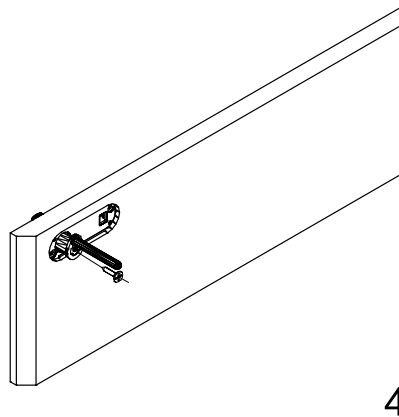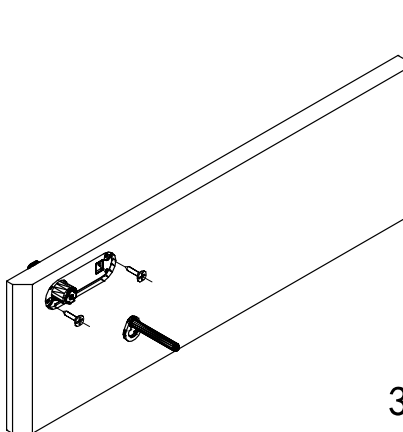


STEP13

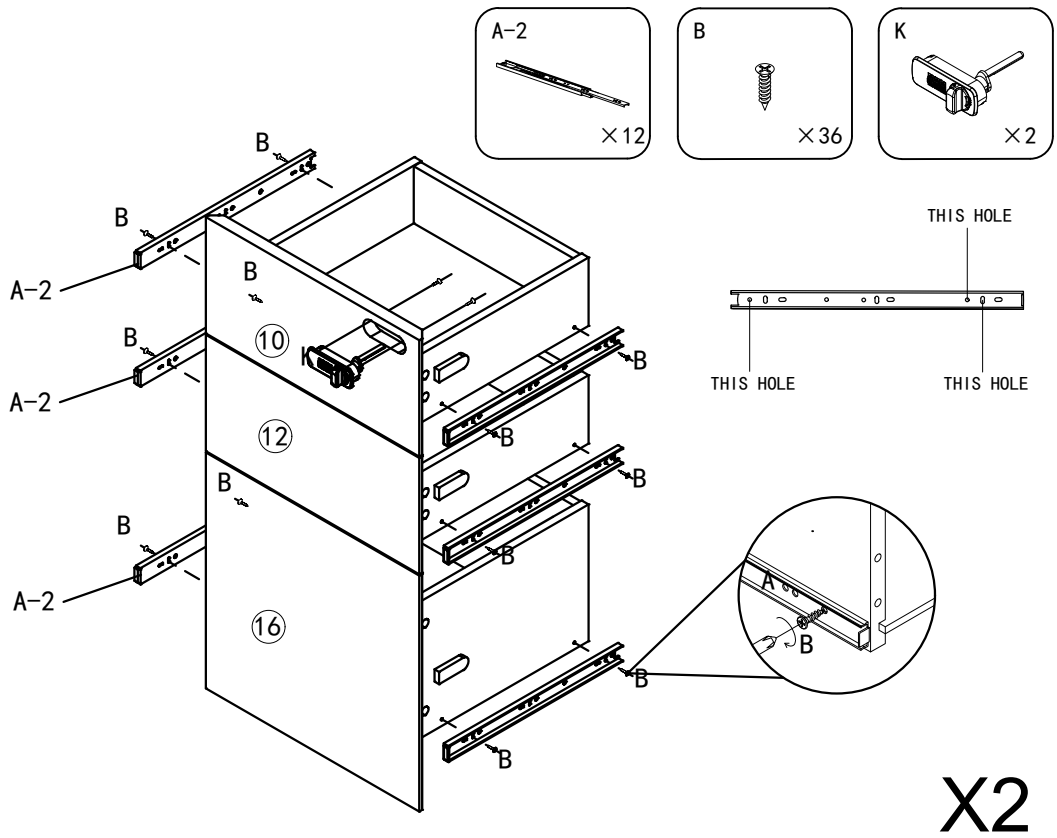


STEP14

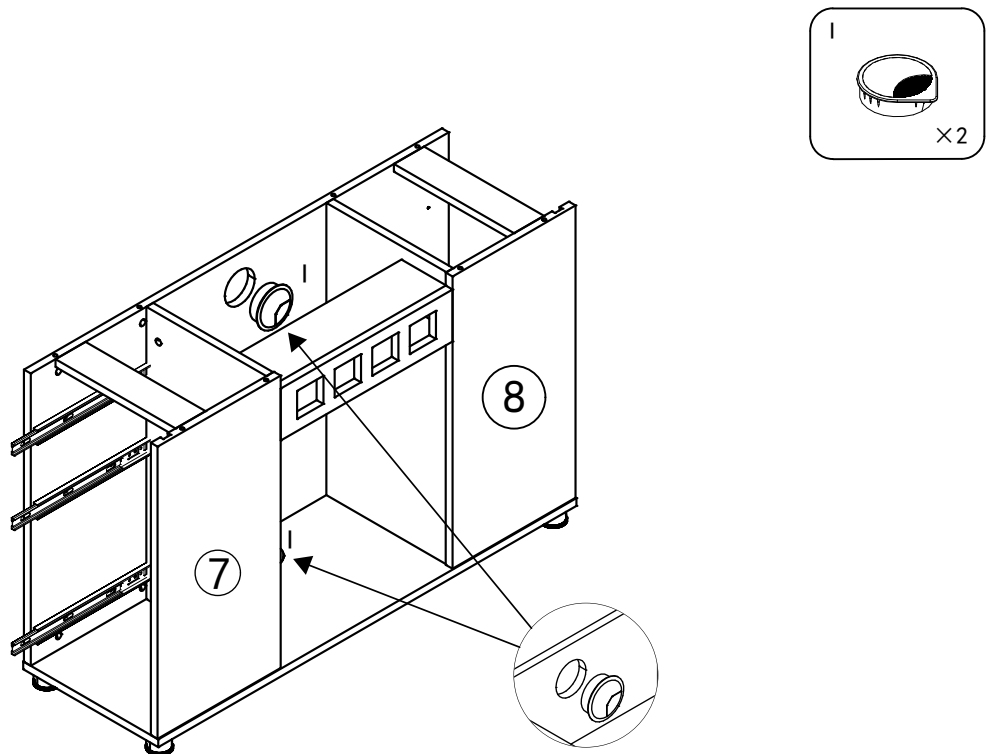


STEP15

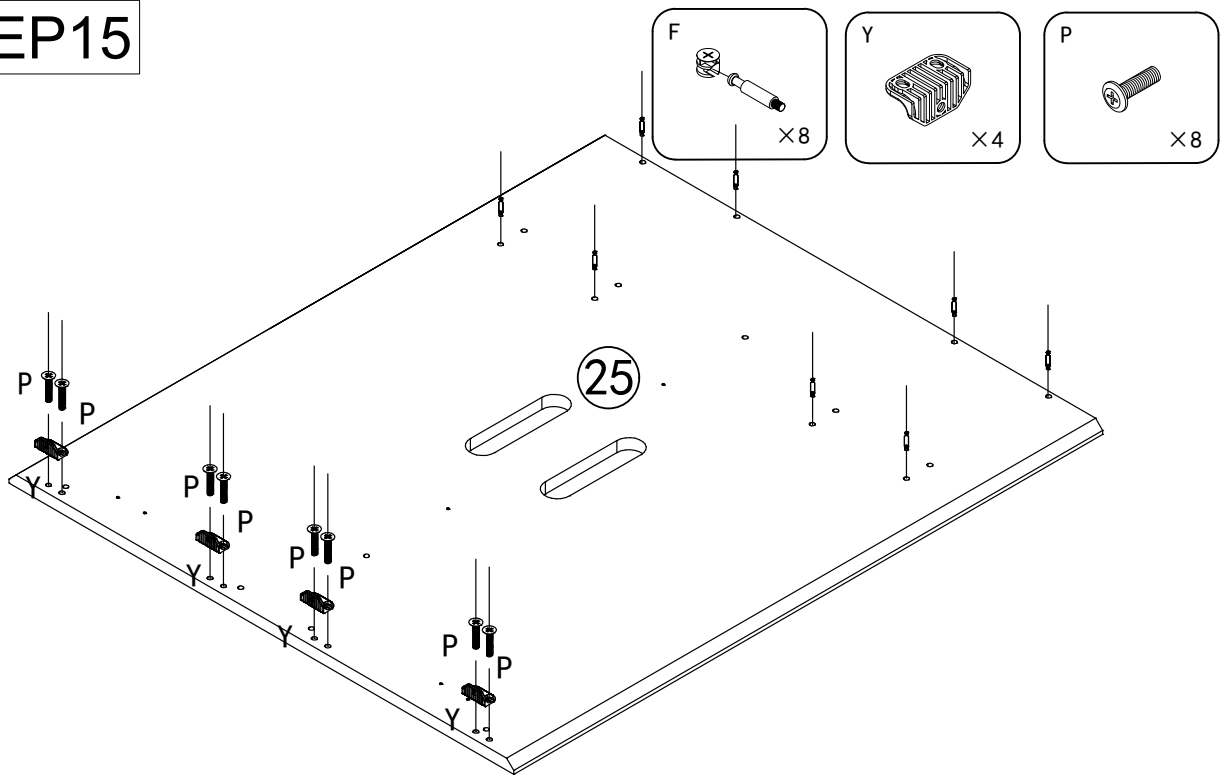


STEP16

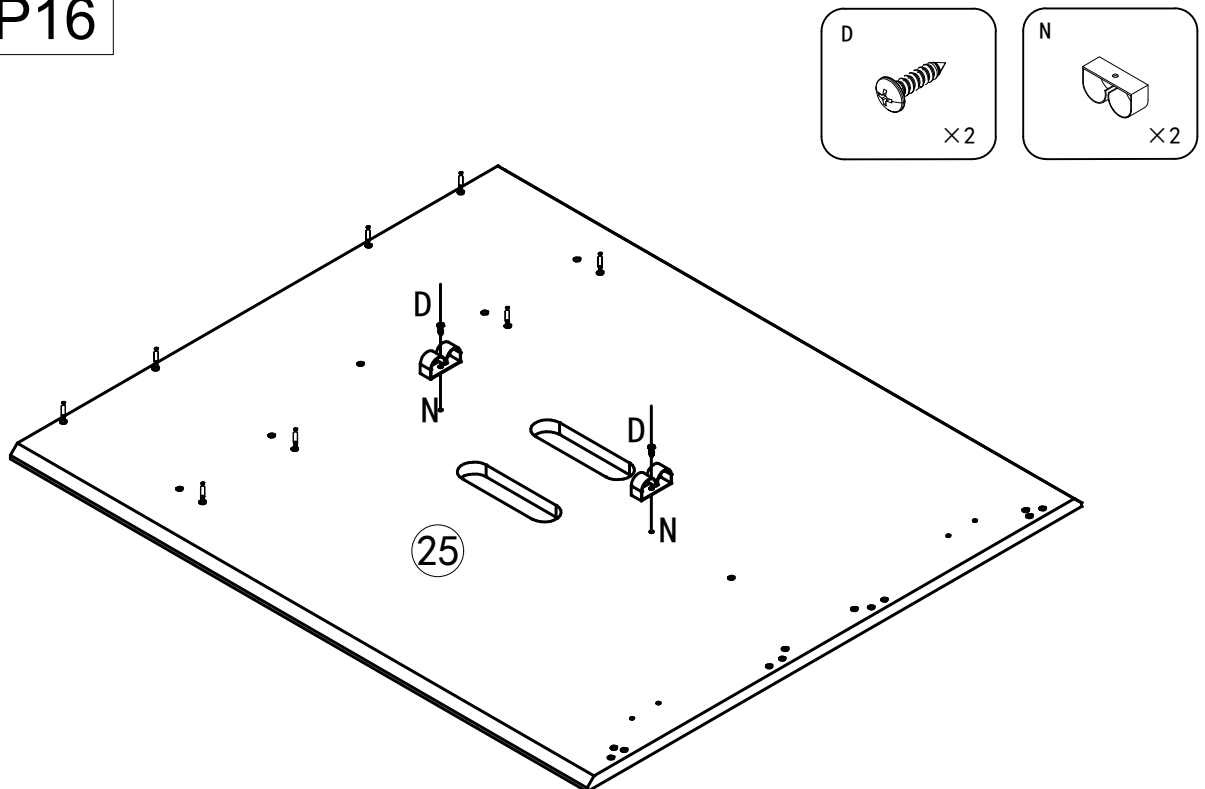

STEP17


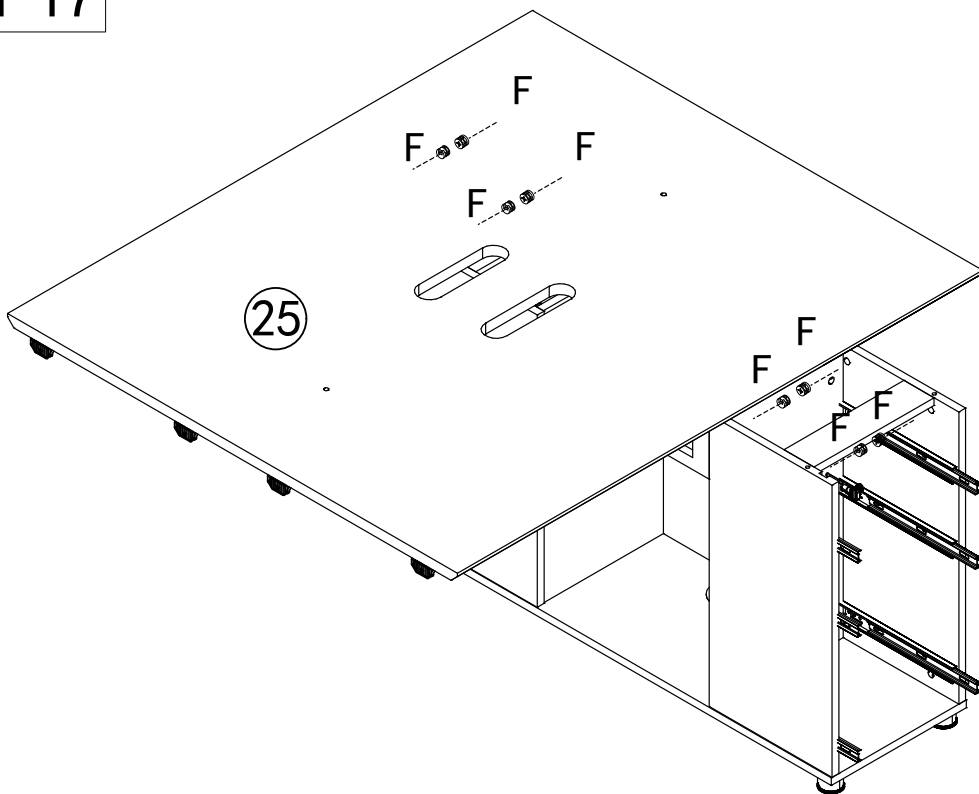


STEP18




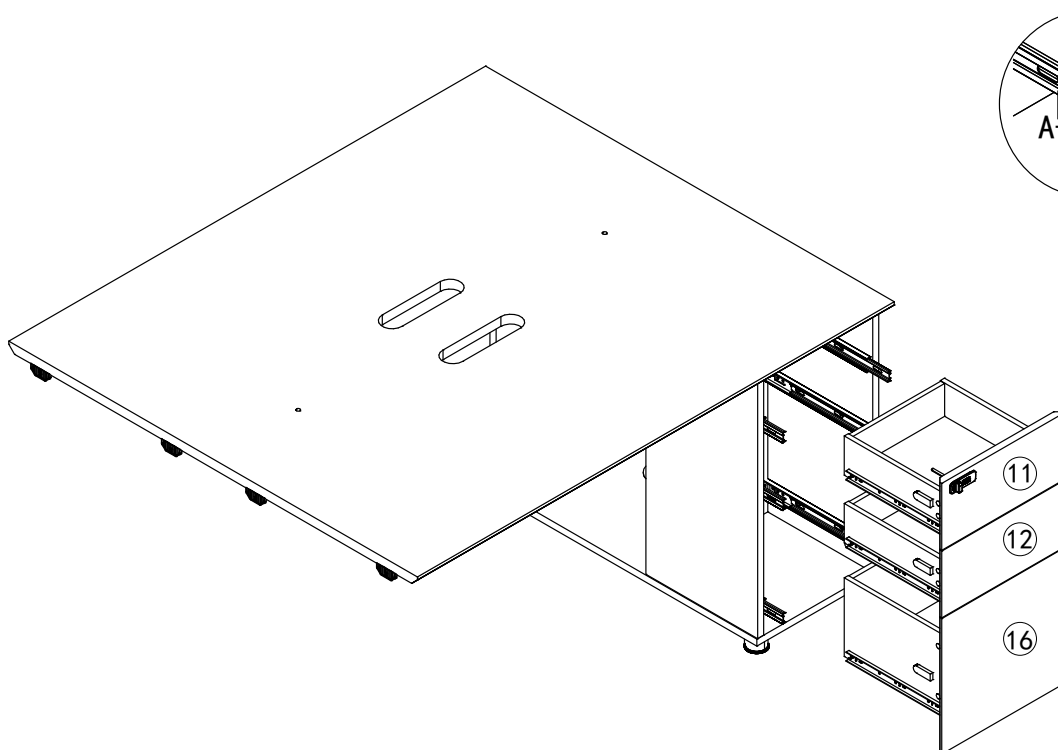


X2

STEP19

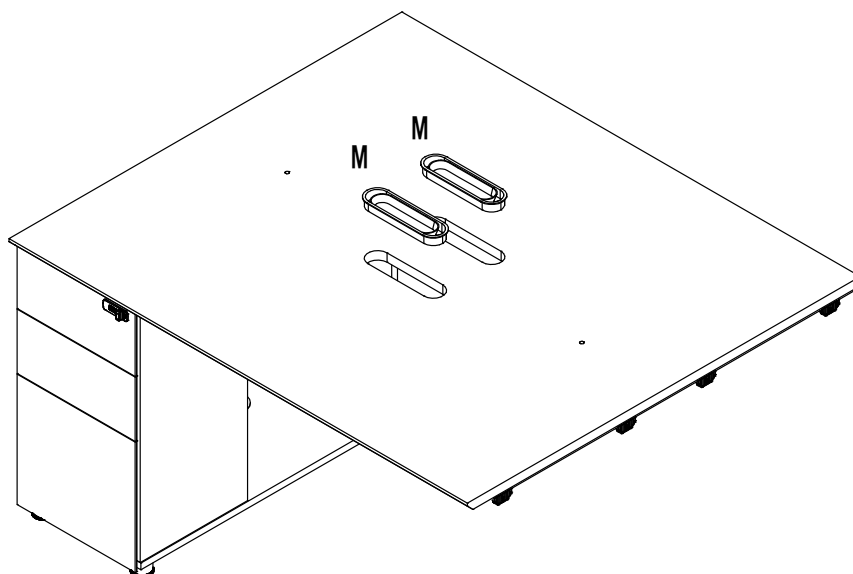
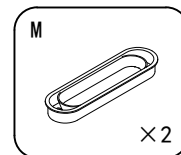


STEP20

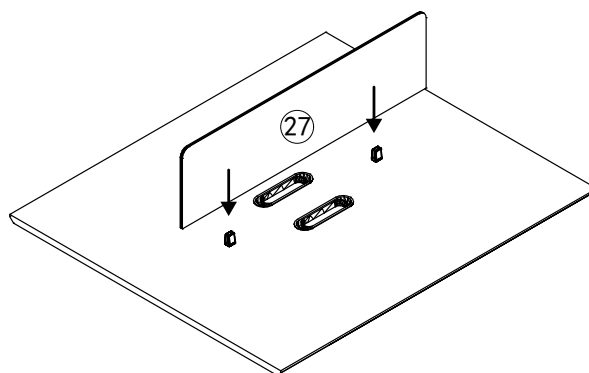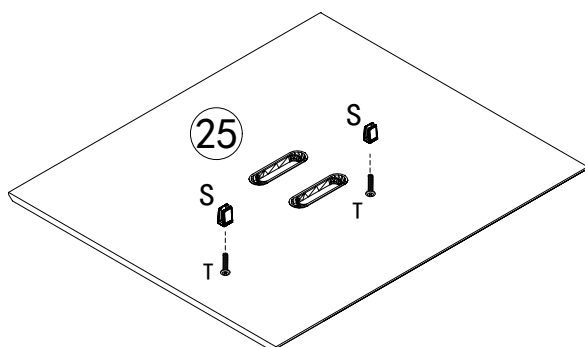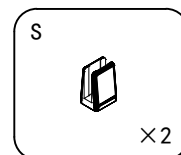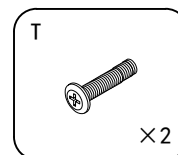

Install the screen
into the screen clip.

STEP21

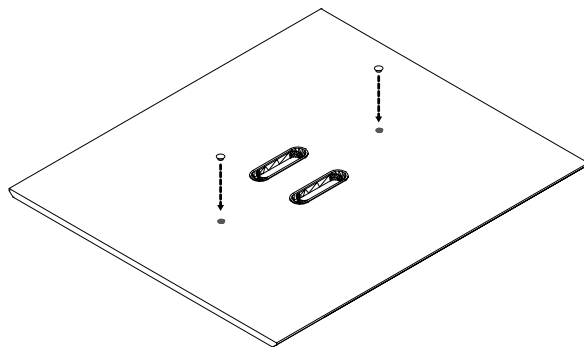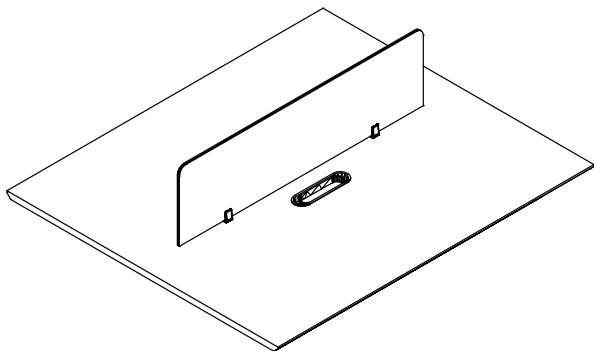


If the installation of a screen is not required, the hole cover can be installed over the hole on the countertop.

MODES OF COMBINATION


P



×4

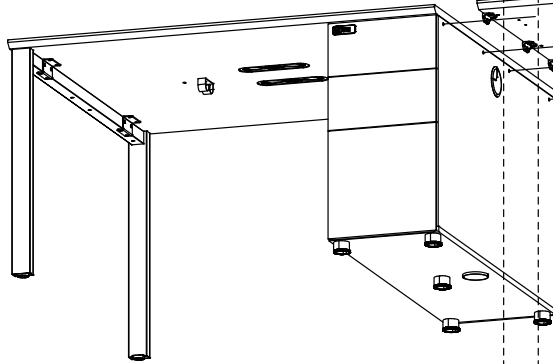


HKOFDK006

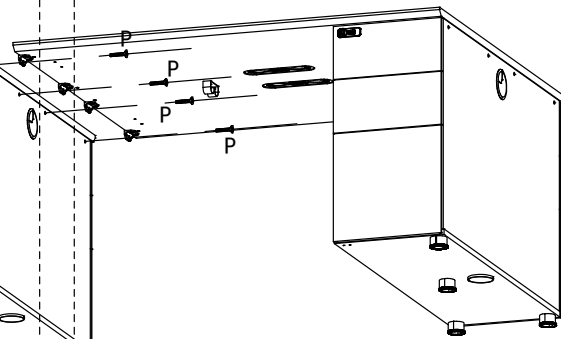

HKOFDK007


MODES OF COMBINATION

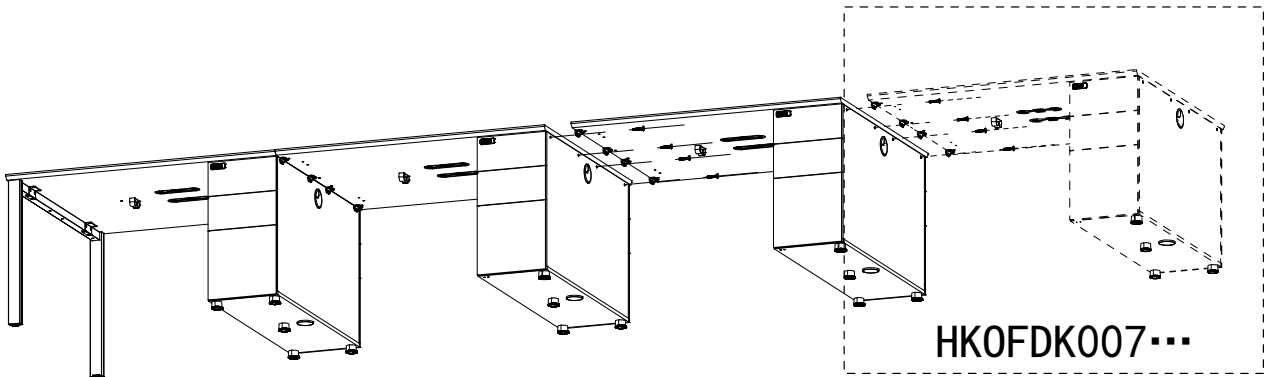


HKOFDK007...

Can be freely combined as needed.


RING-MEI PATCH USAGE INSTRUCTIONS

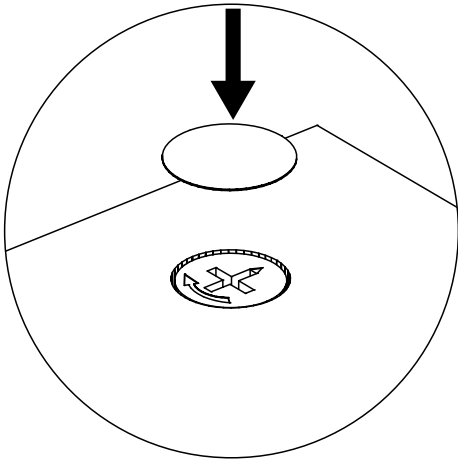


1. Peel off the protective film of the Ring-Mei Patch and align it with the hole (ensure the patch size matches the hole, with the patch slightly larger than the hole edges).

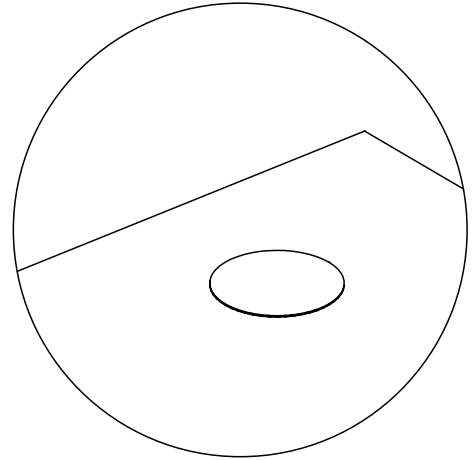

2. Press the center of the patch and smooth it outward (illustrated with dynamic lines indicating finger pressure).

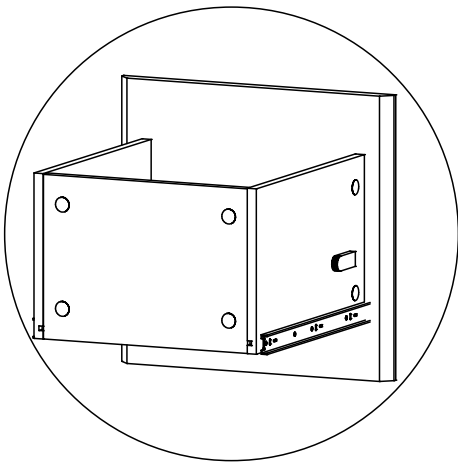

3. Final result: The hole is completely covered with smooth edges and no air bubbles.

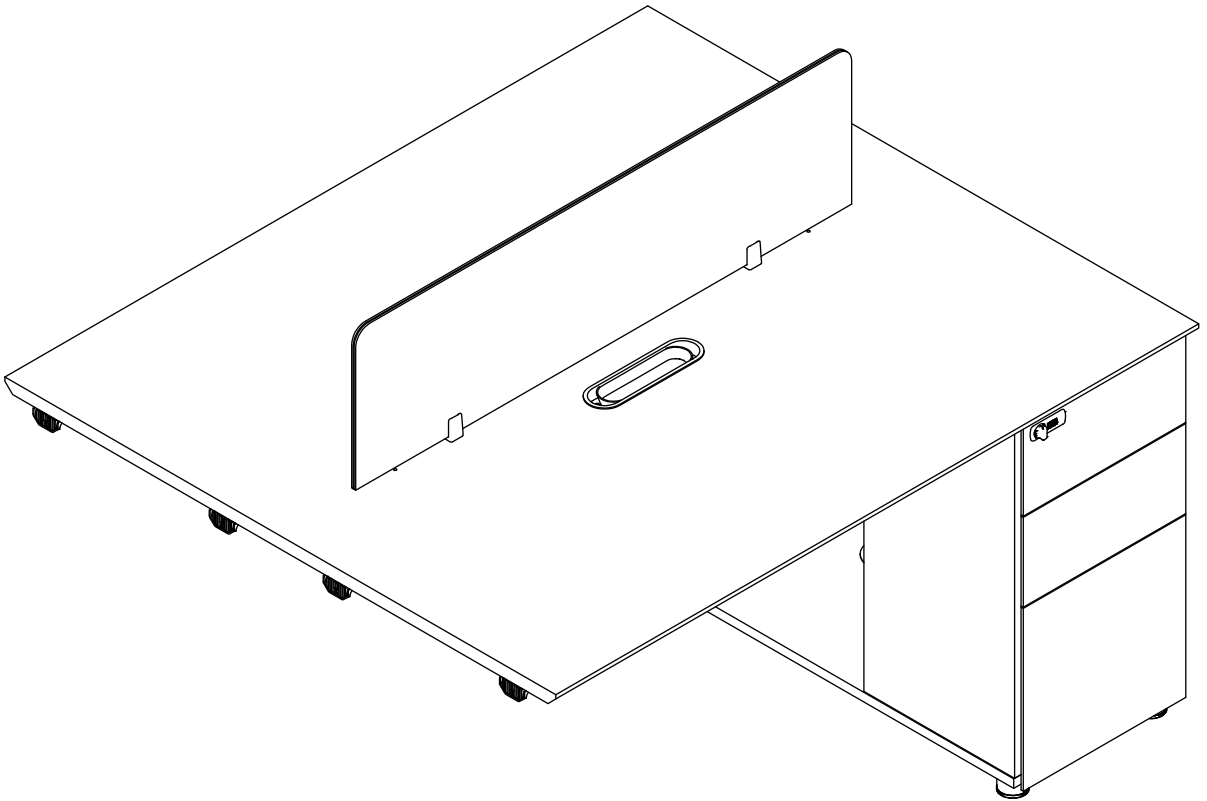

Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Please contact at: christyningxing@nxubay.com or via Phone#3233938260 at EST 9AM-1PM

Many thanks and welcome to our shop again!