

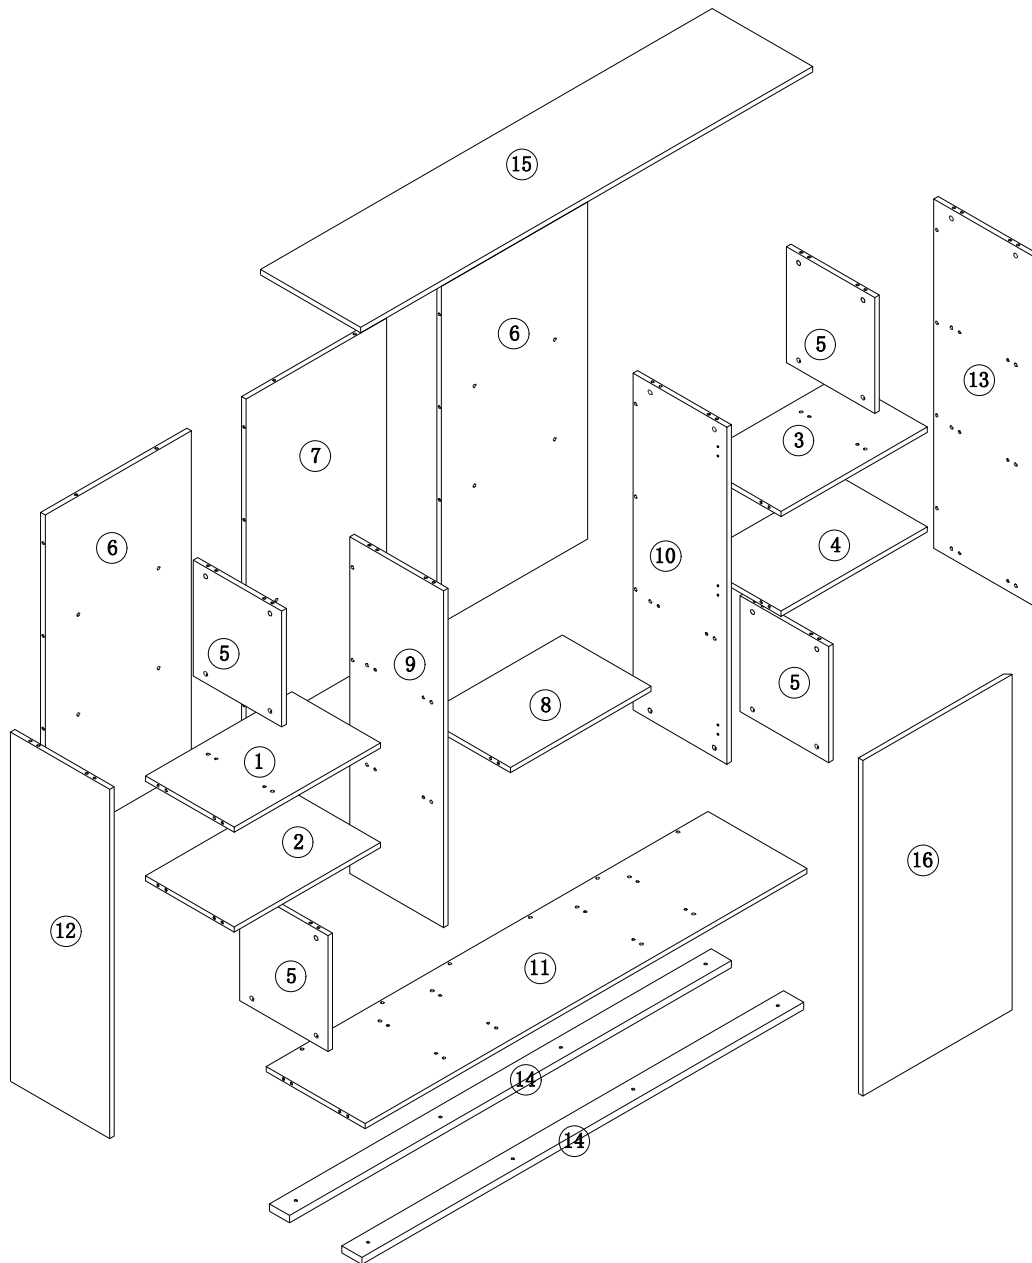


HKOFBC003

INSTALLATION INSTRUCTIONS

YOU MAY NEED (NOT SUPPLIED)

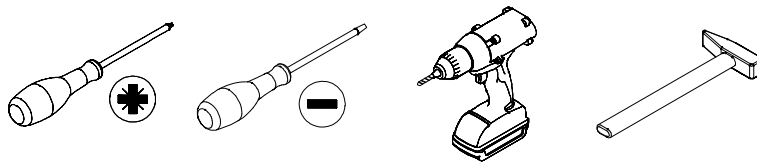


A

98



B


98



M6*35


C

8




D

12

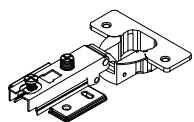

E

3



F


1



M3.5*14

G

20





H



1

spare parts(screws) have been included in the package in case you have the needs!


STEP1

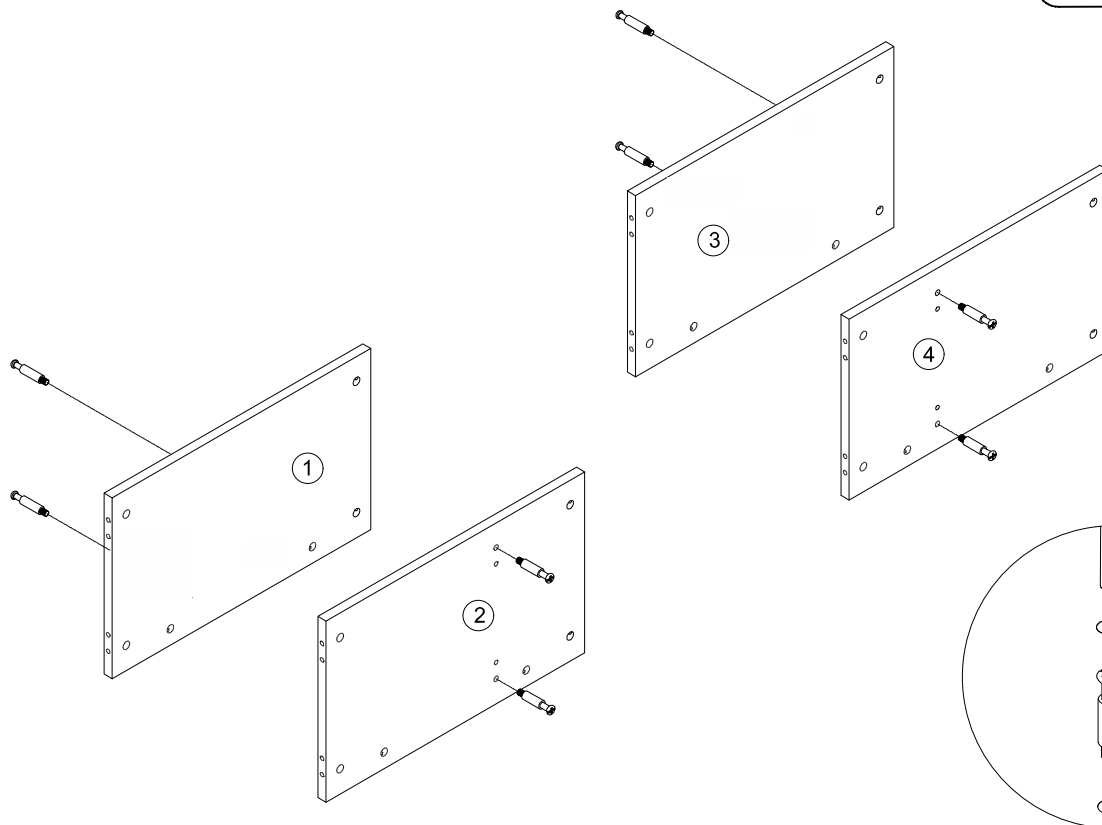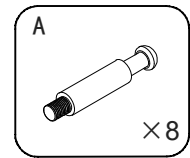


STEP2

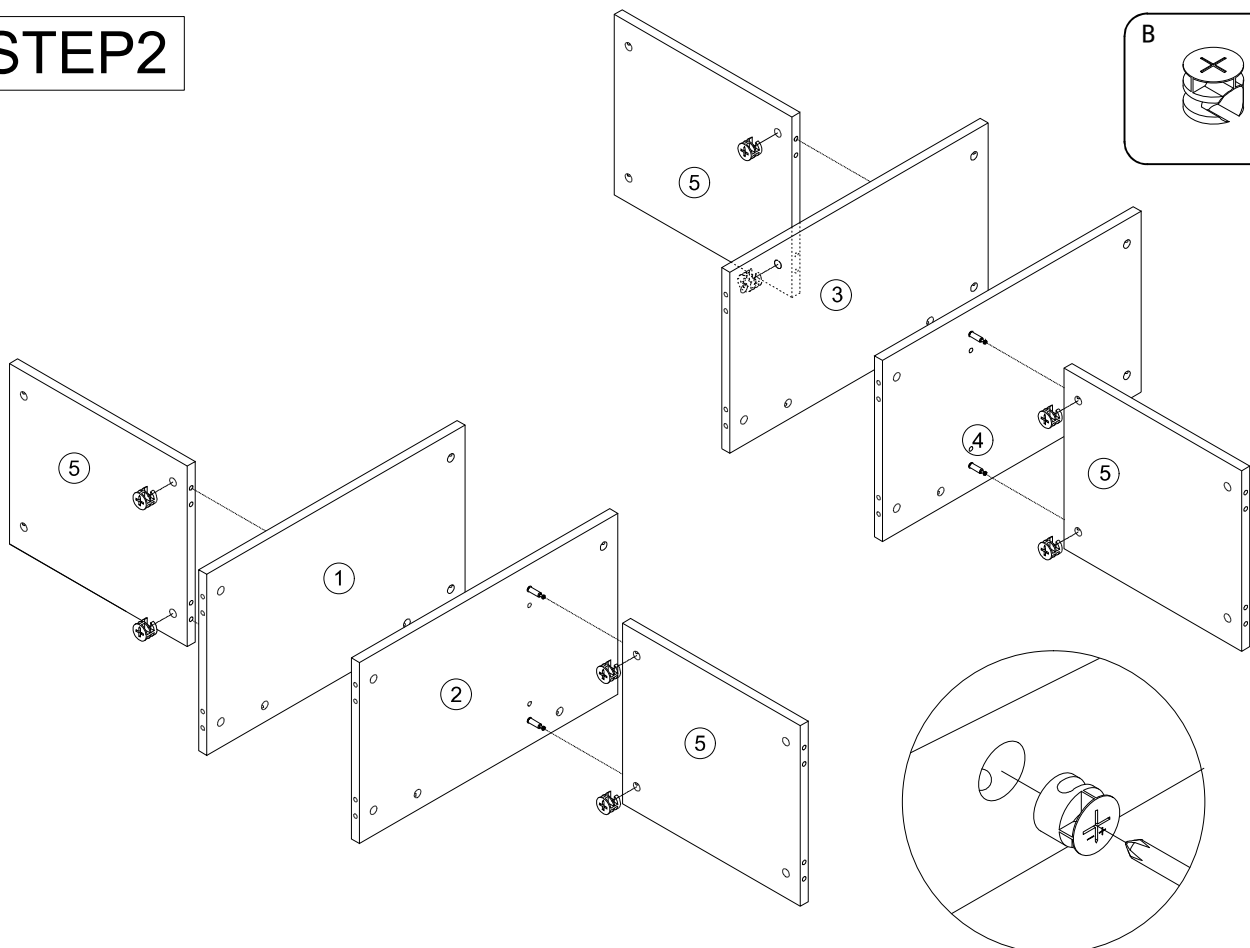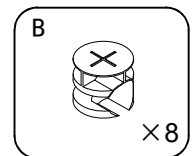




STEP3

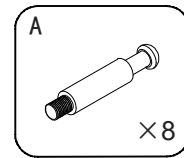



X2

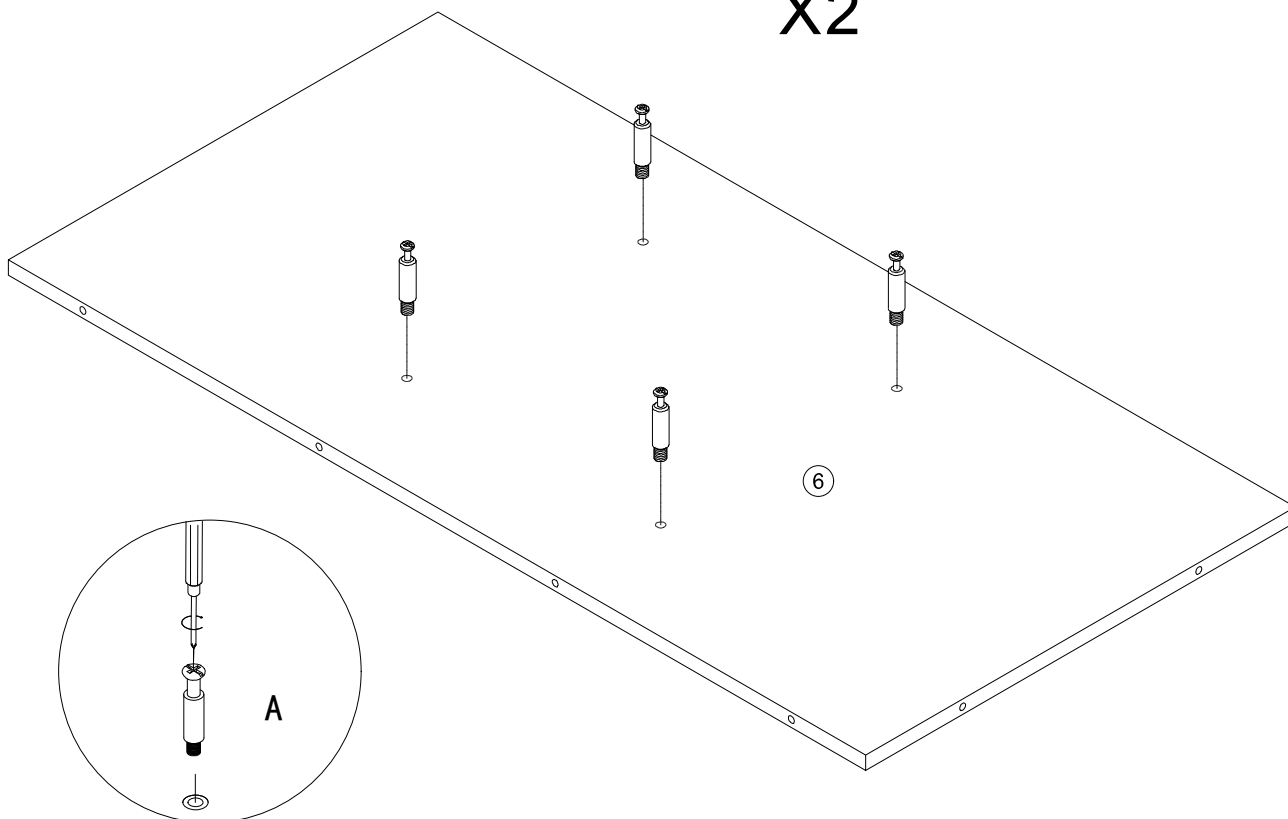



STEP4

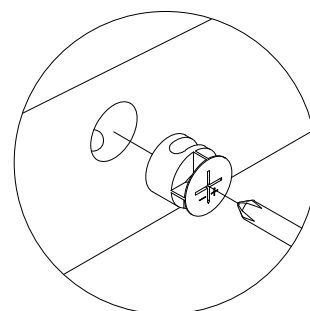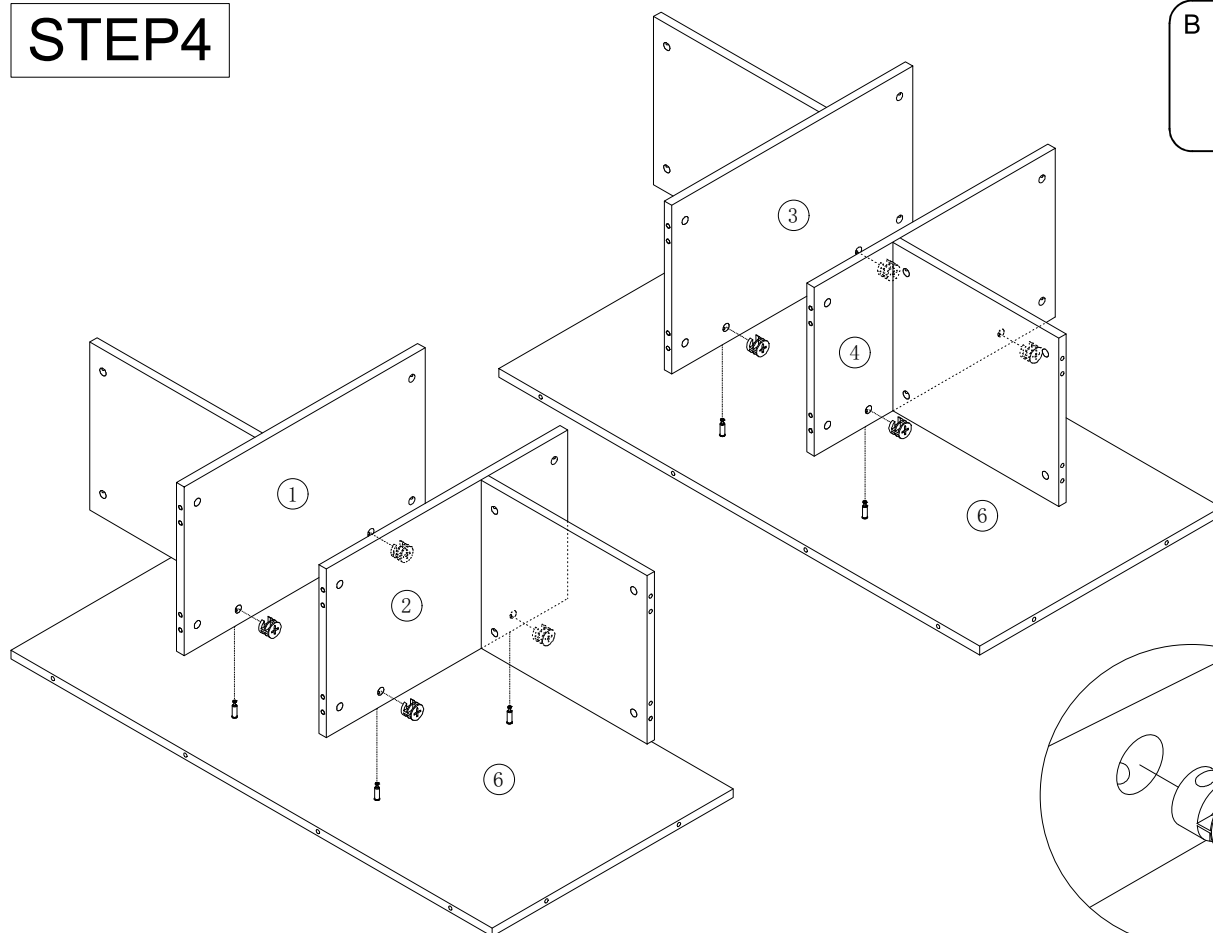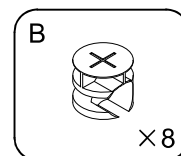



STEP5

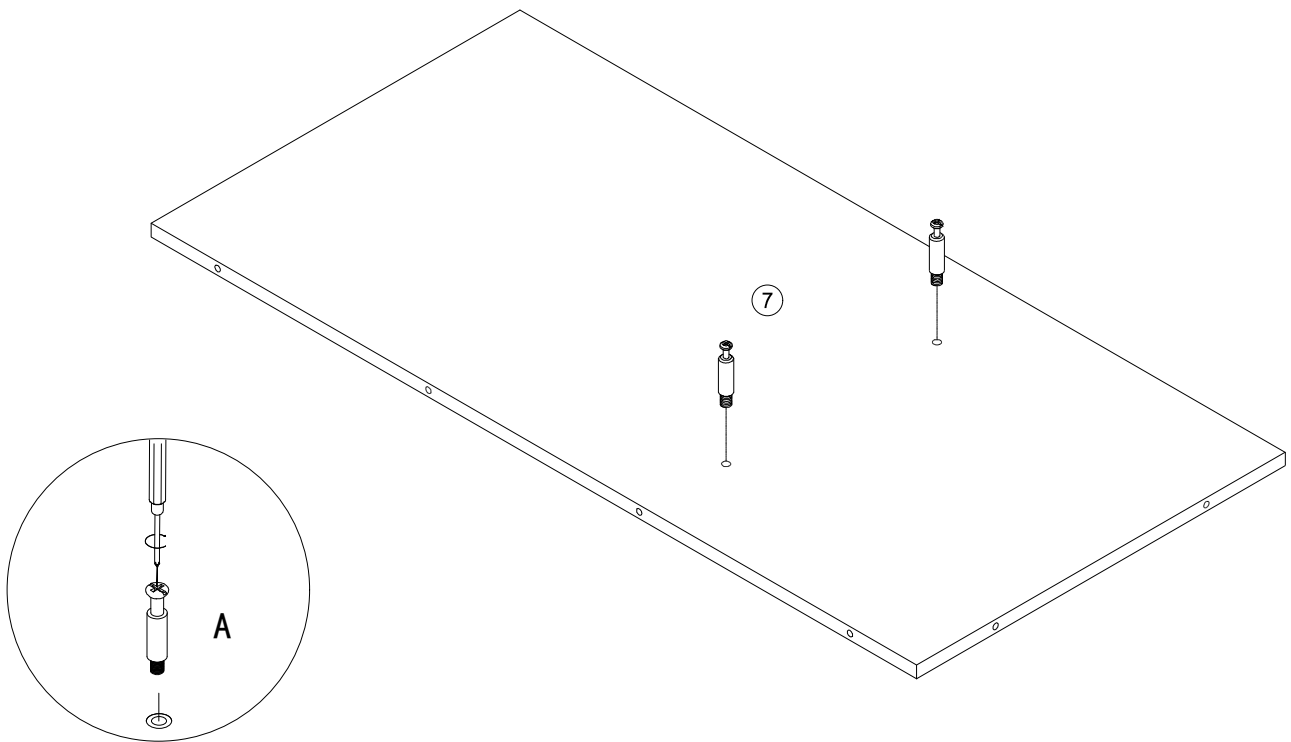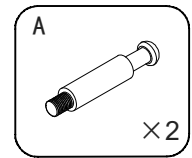



STEP6

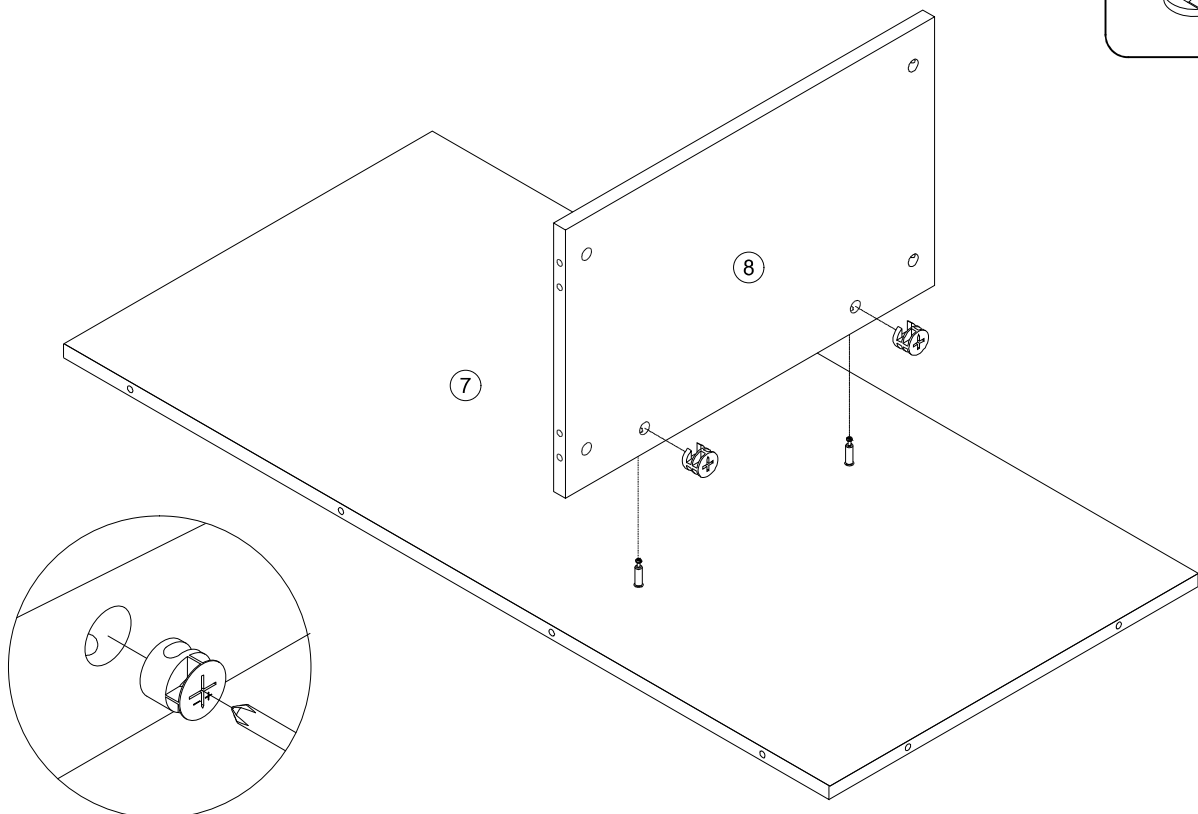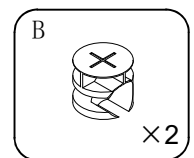



STEP7

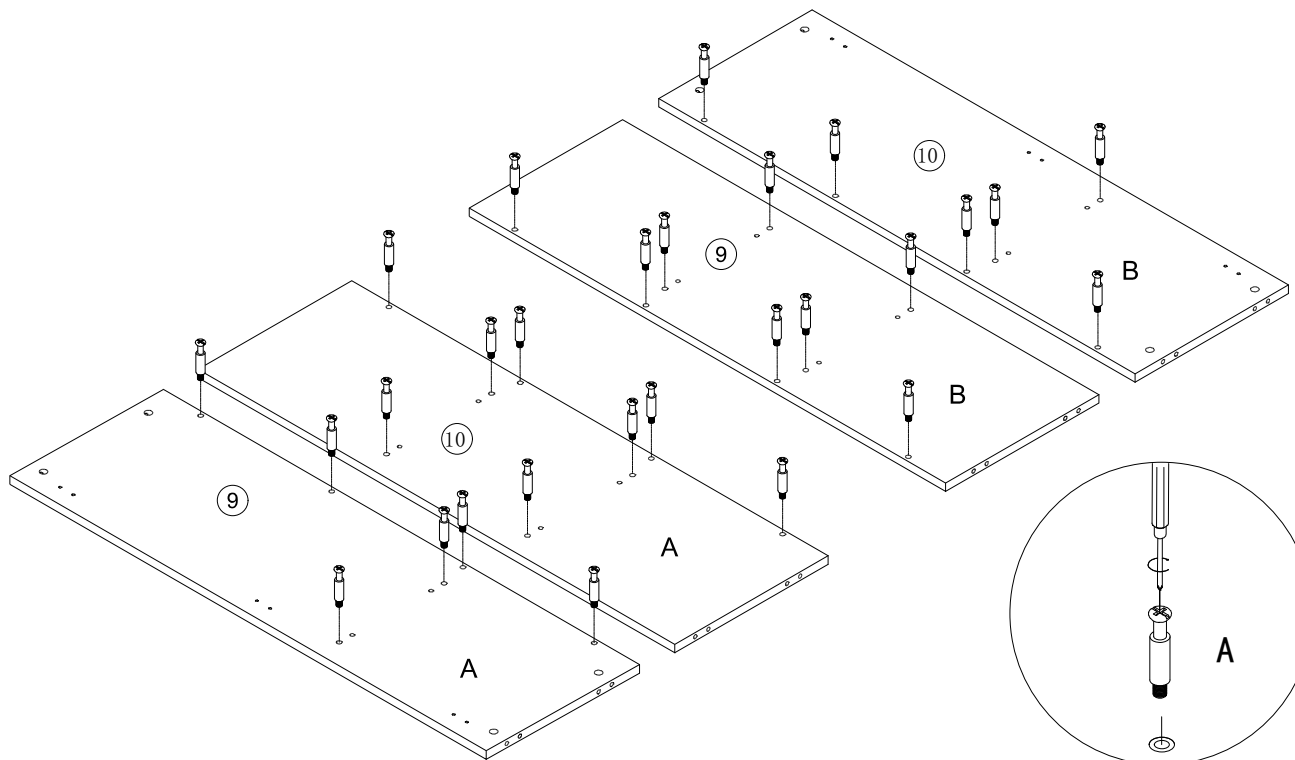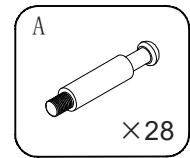



STEP8

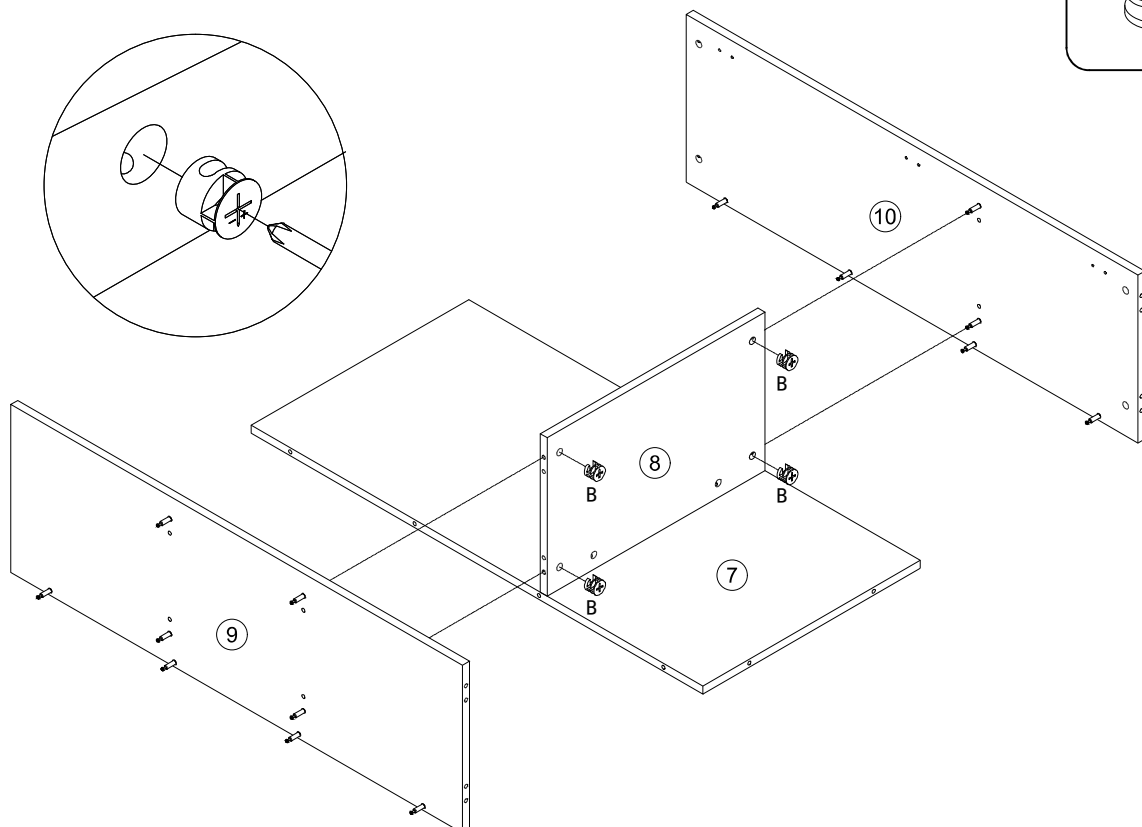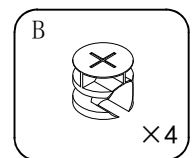


STEP9

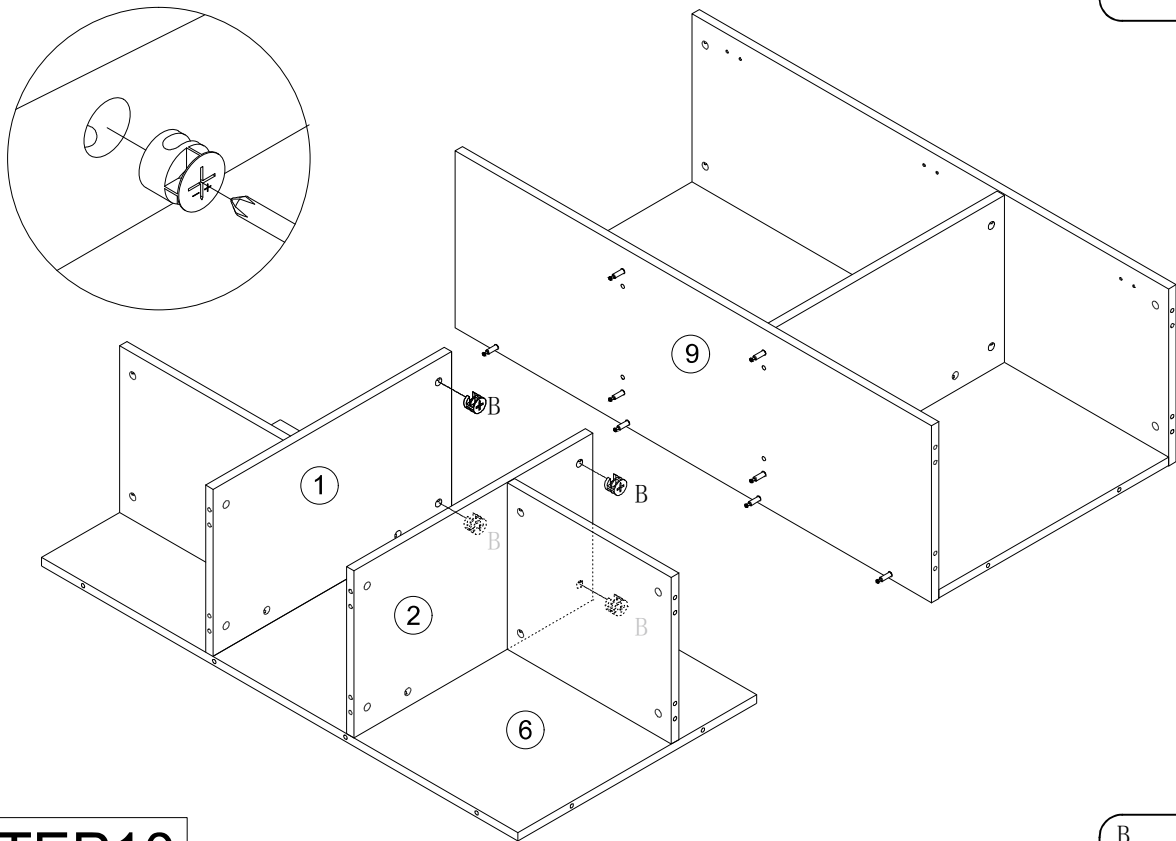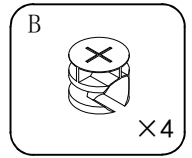


STEP10

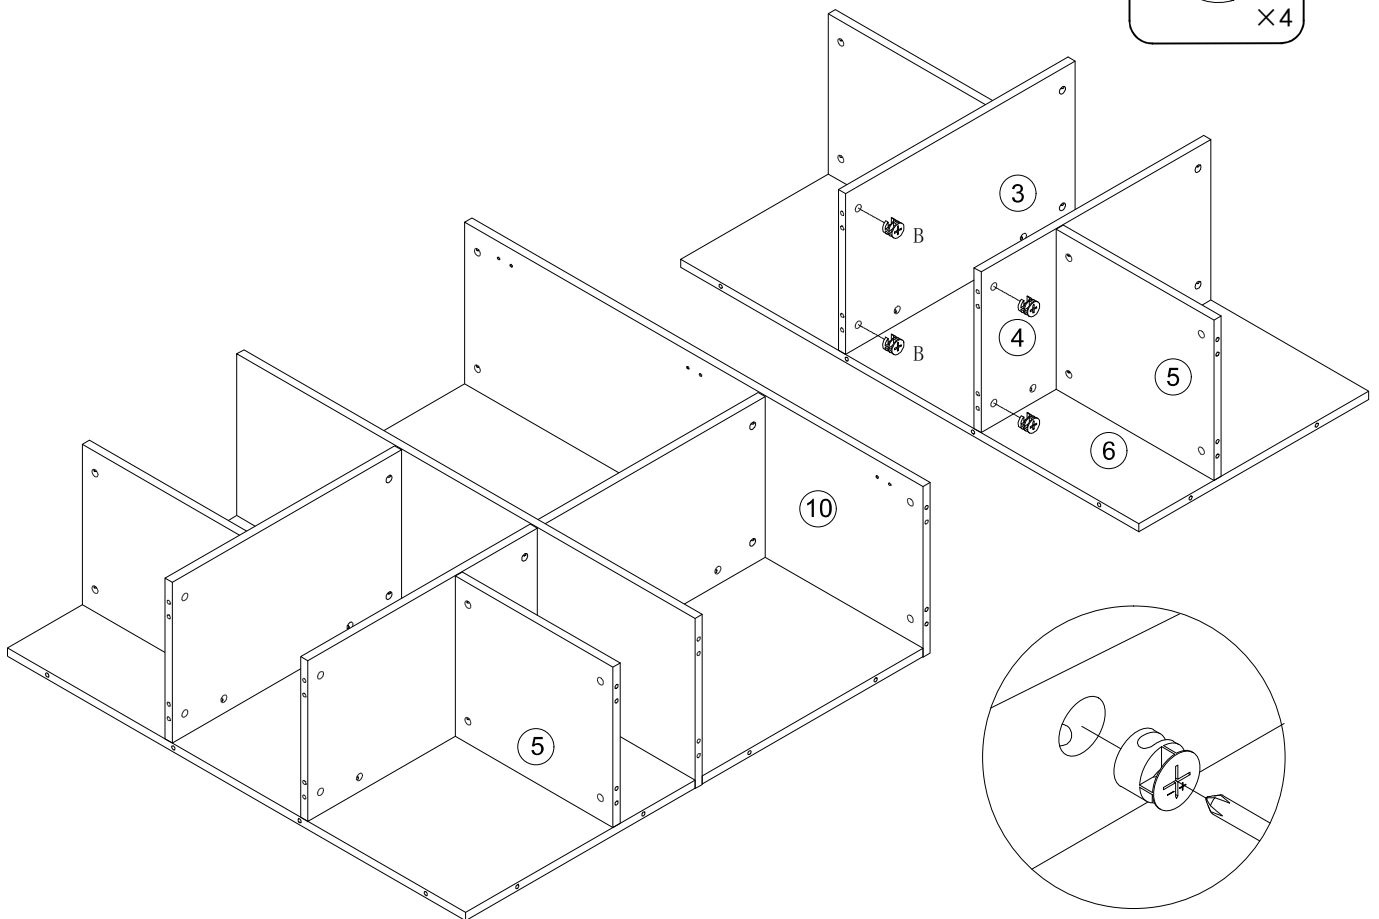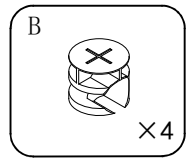


STEP11

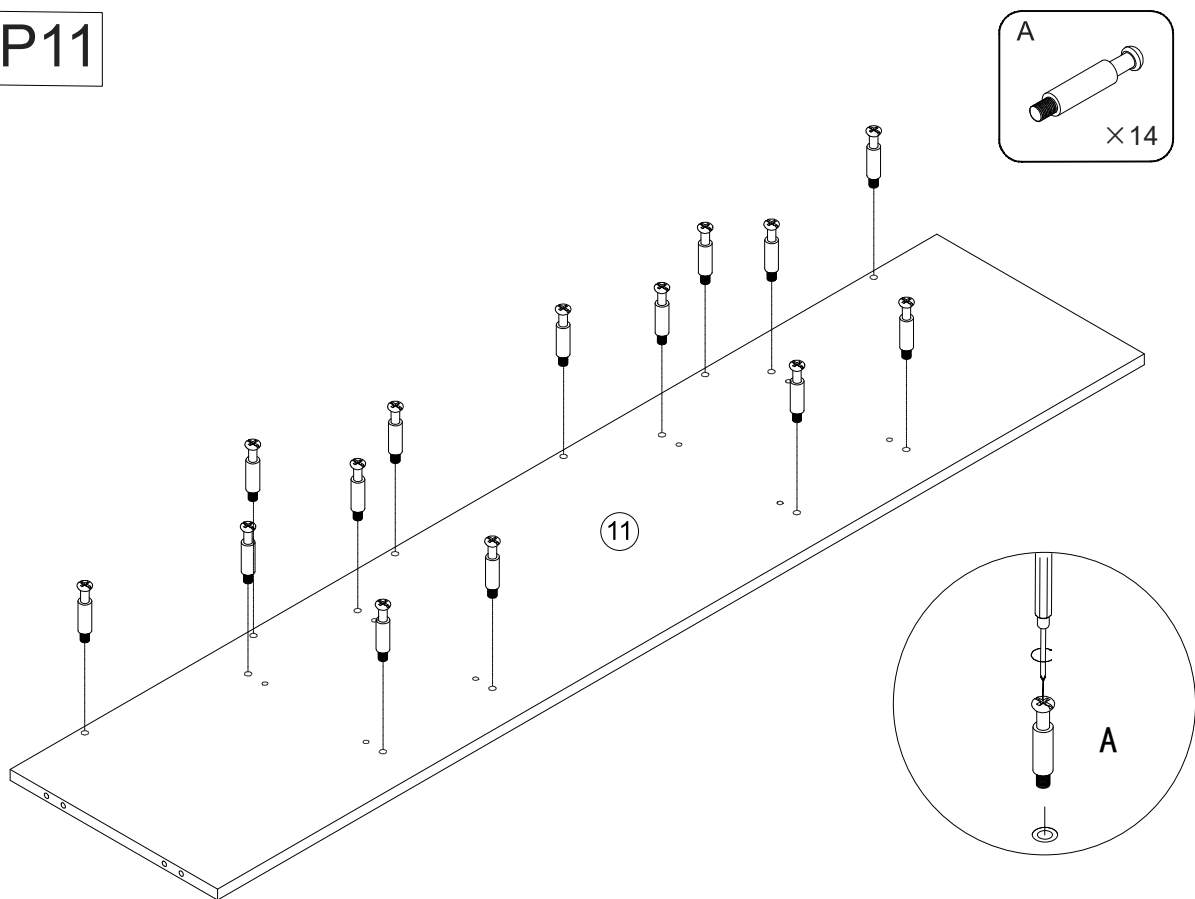


STEP12

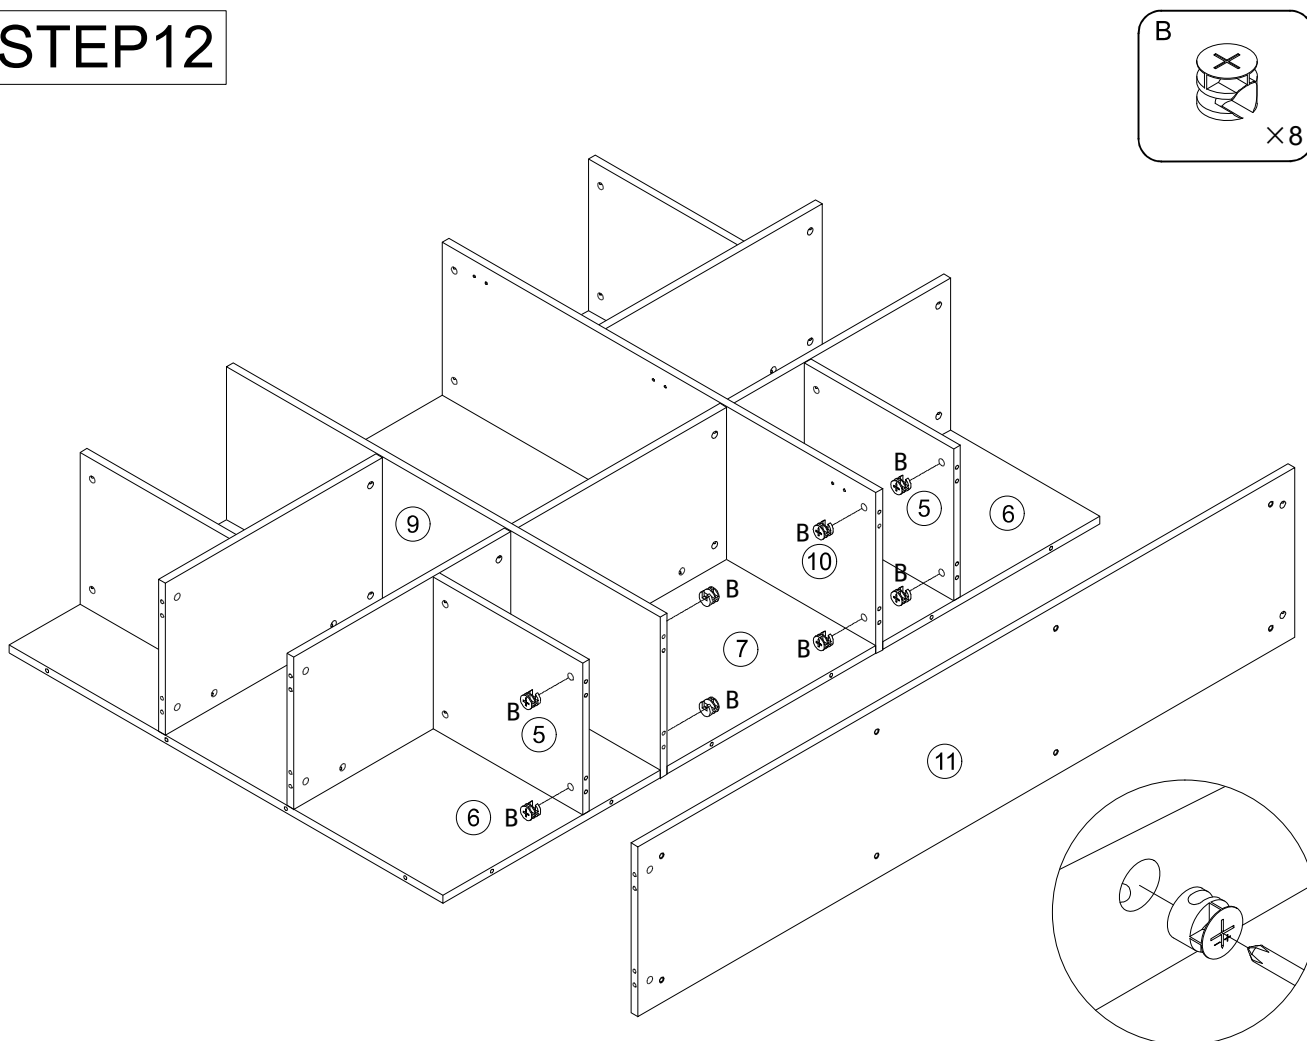



STEP13

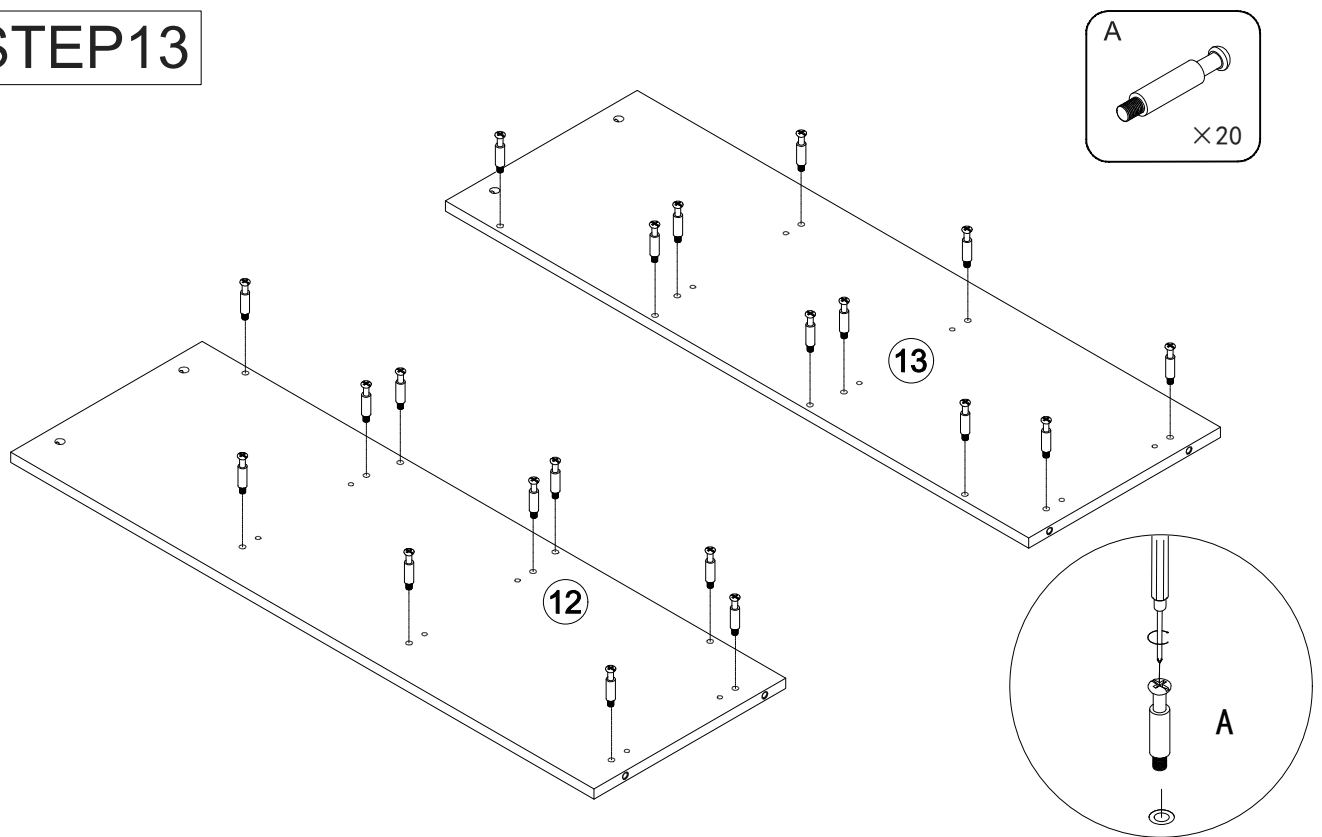



STEP14

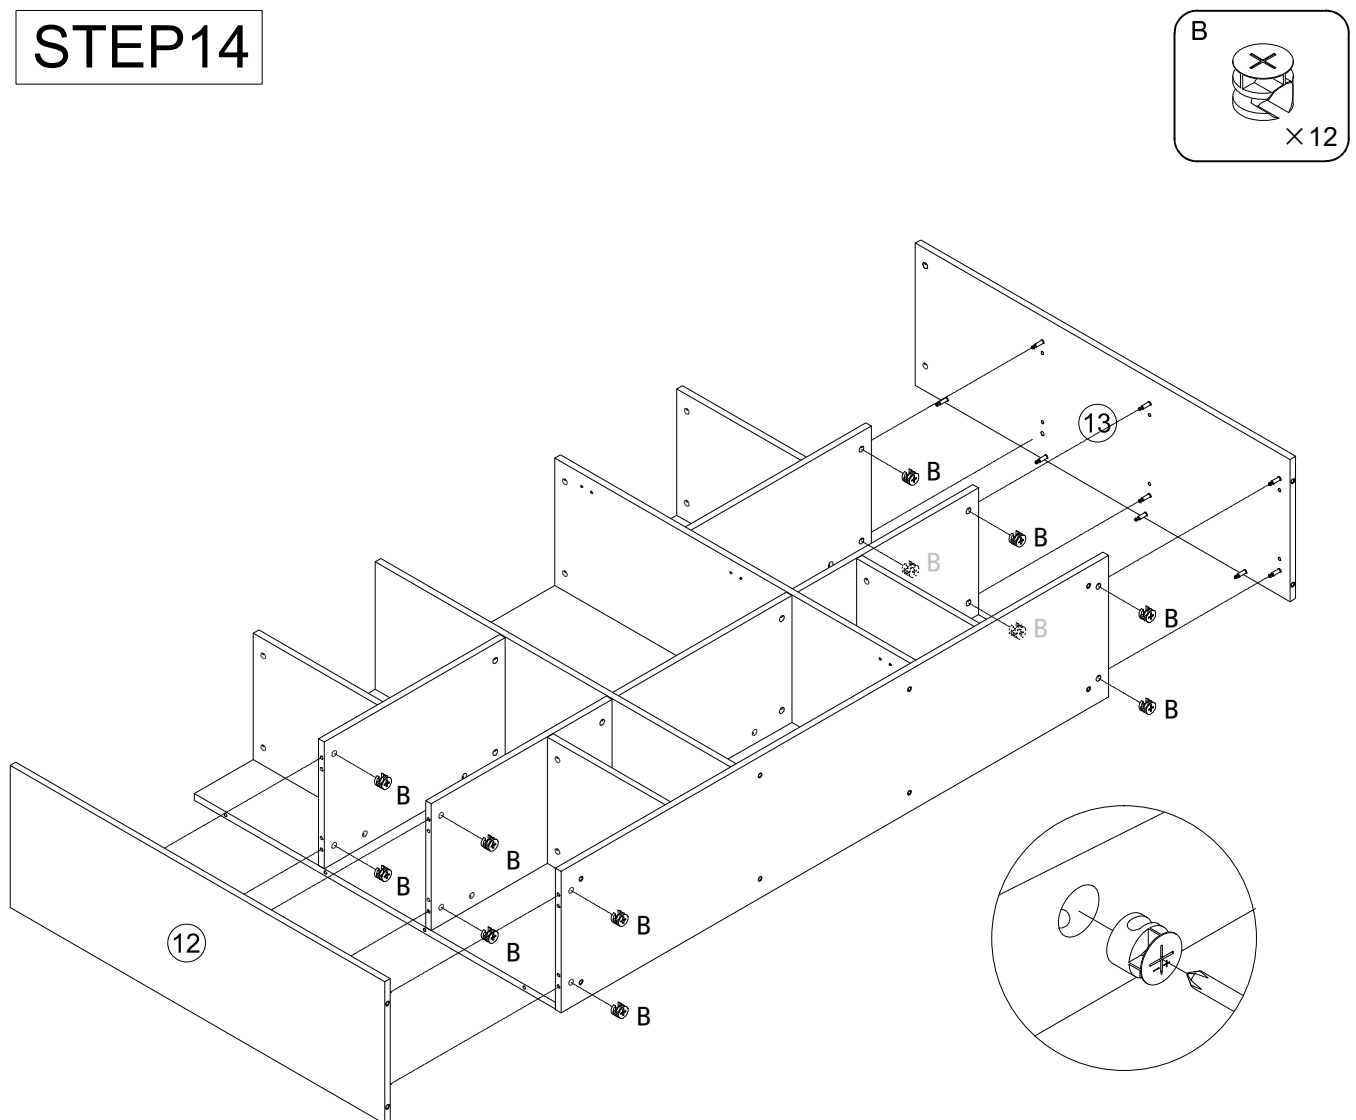





STEP15

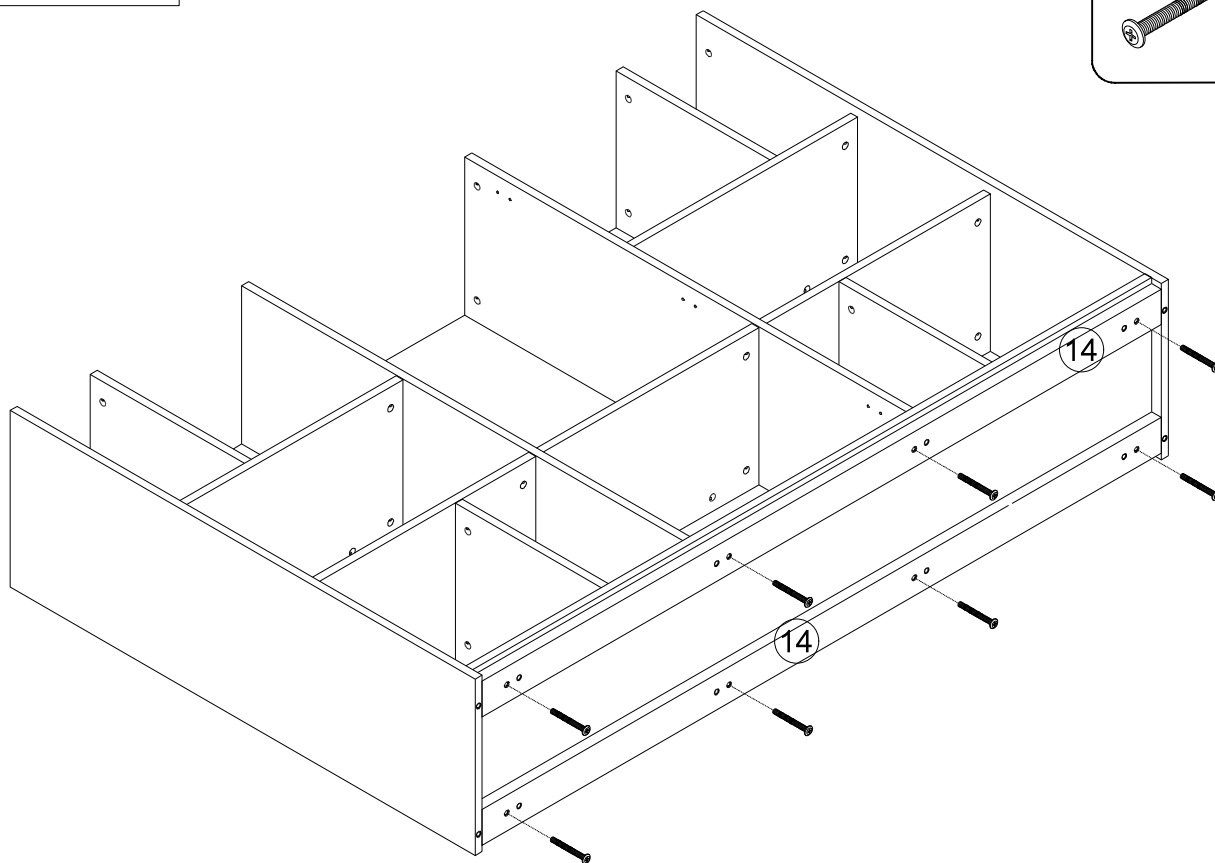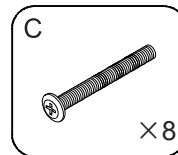



STEP16

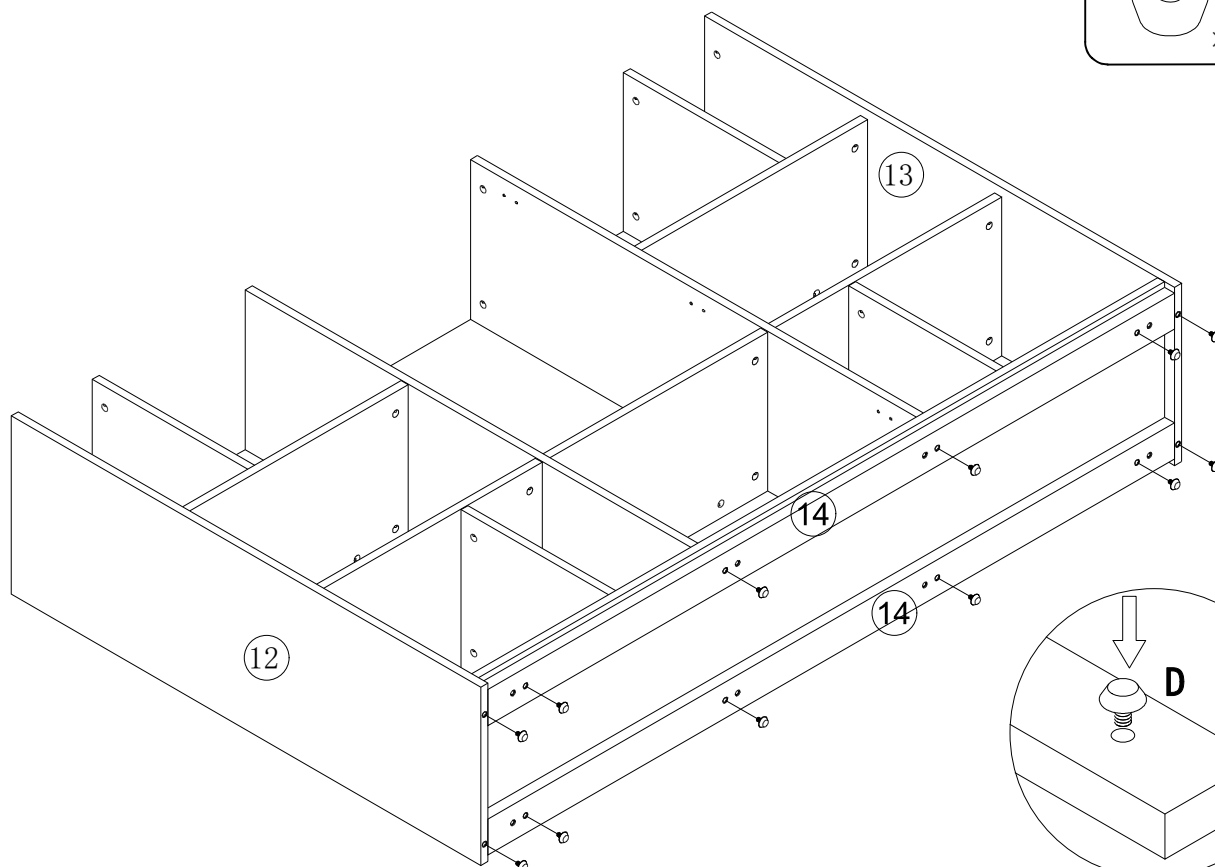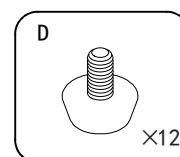




STEP17

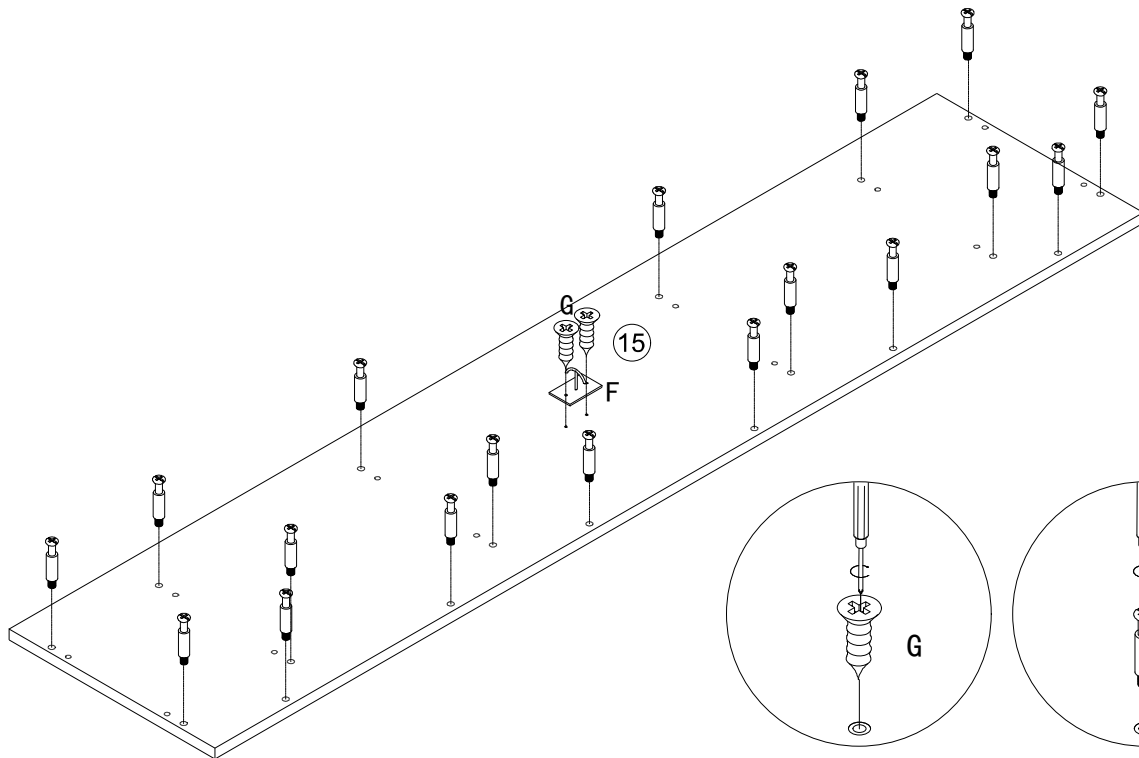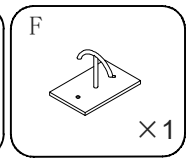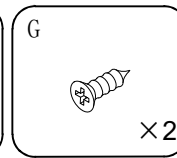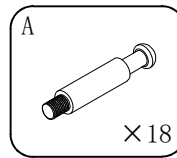





STEP18

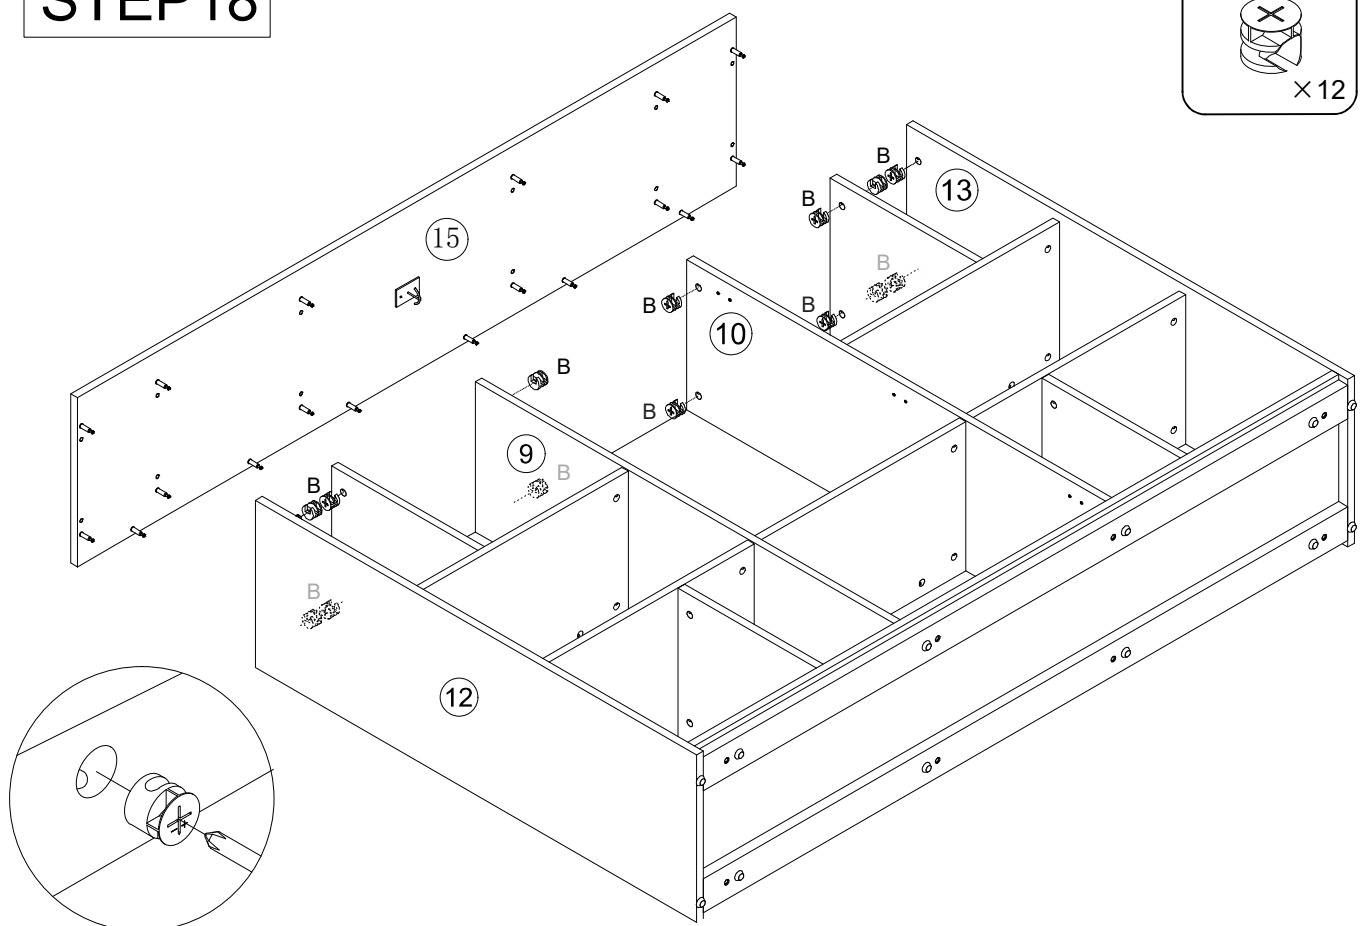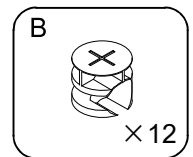


STEP19

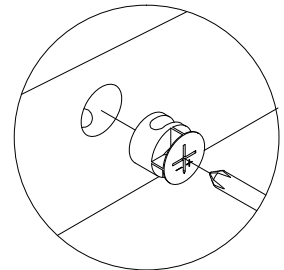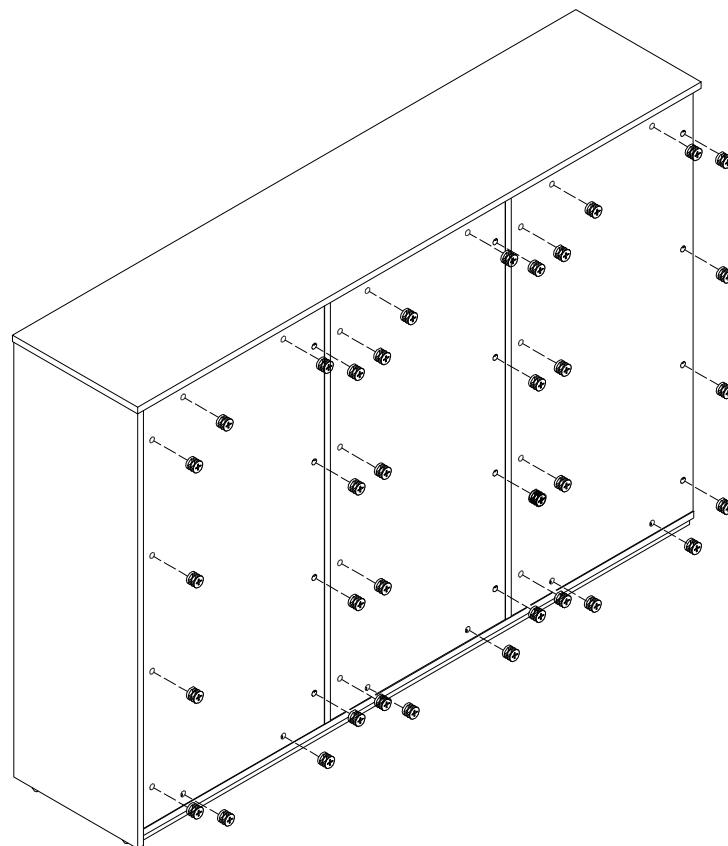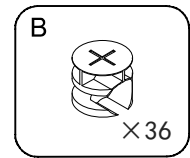

STEP20

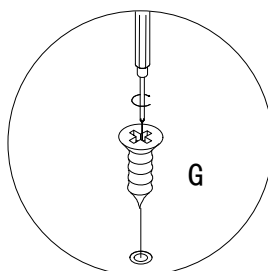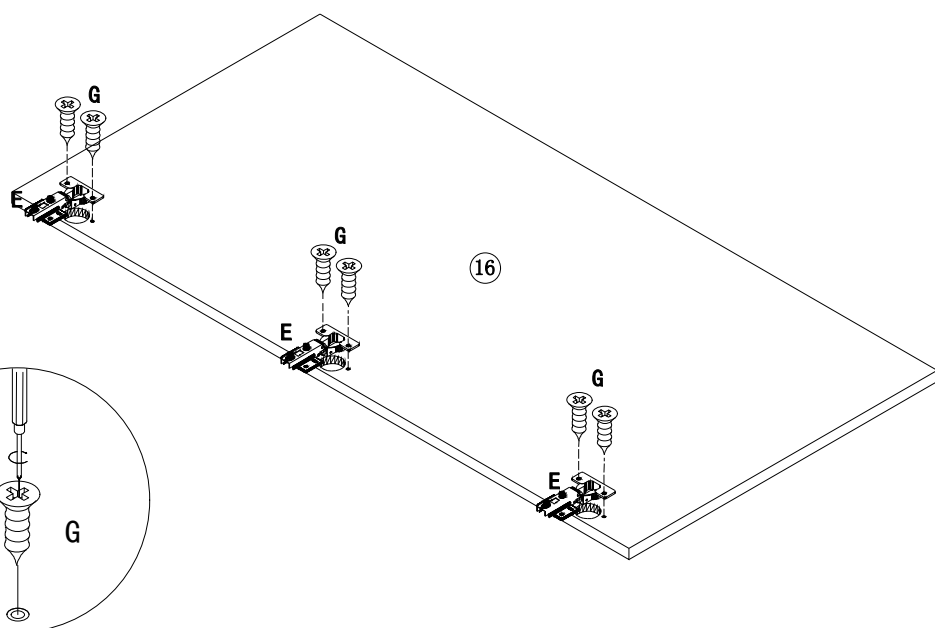
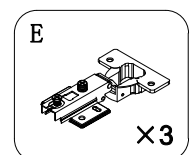
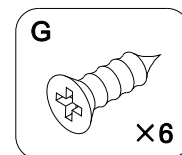


STEP21

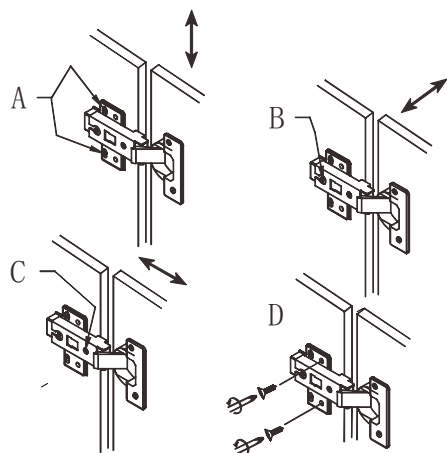


- A.Height adjustment C.Side to side adjustment
B.Depth adjustment D.After adjustment A/B/C,tighten screws.


● To ensure proper cabinet alignment, refer to the above illustrations for instructions about adjusting the cabinet height, depth and lateral movement.

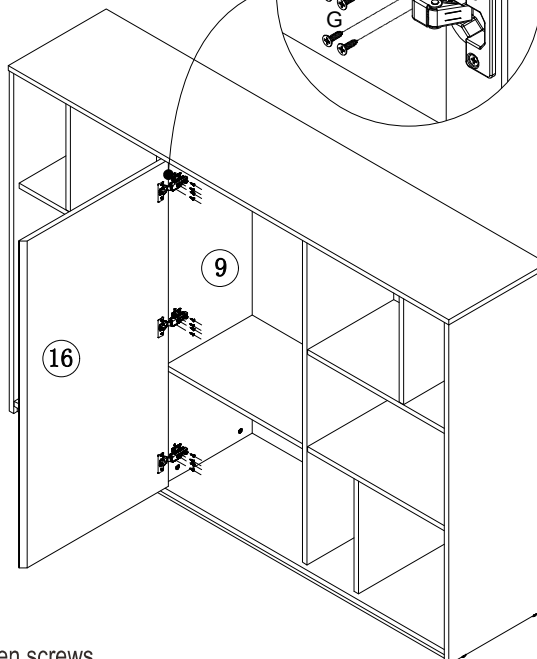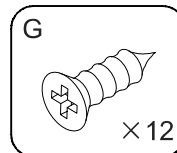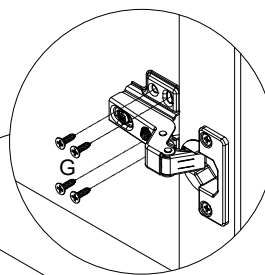


STEP22

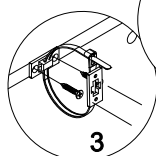



Step 3: Secure the anti-tilt plastic component to the wall using M3.5*20 self-tapping screws.

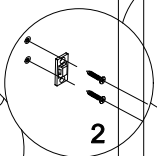


Step 2: Use M3.5*30 self-tapping screws to install the anti-tilt plastic component onto the wall.

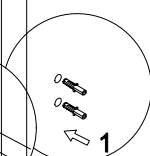


Step 1: Drill holes in the wall and insert the anti-tilt pre-embedded rubber plugs.

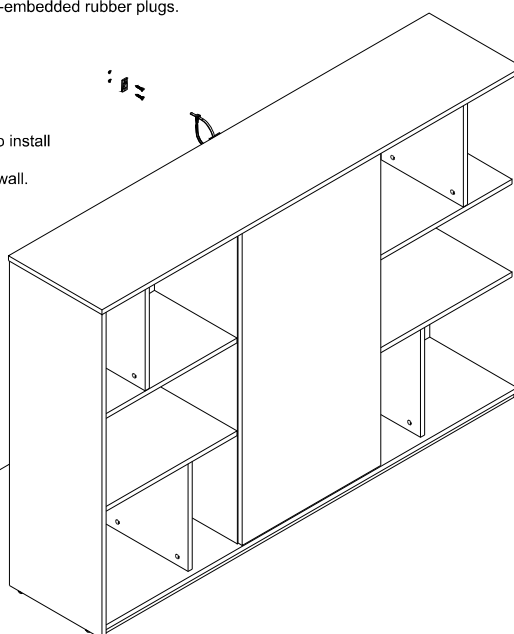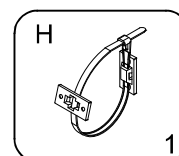


RING-MEI PATCH USAGE INSTRUCTIONS

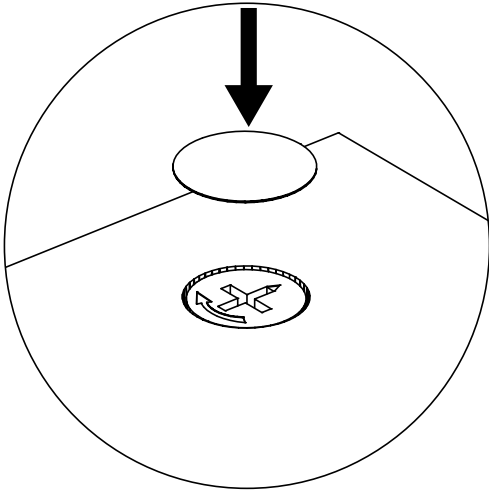


1. Peel off the protective film of the Ring-Mei Patch and align it with the hole (ensure the patch size matches the hole, with the patch slightly larger than the hole edges).

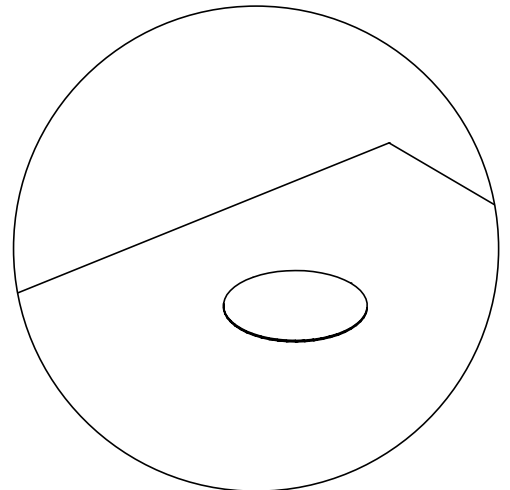

2. Press the center of the patch and smooth it outward (illustrated with dynamic lines indicating finger pressure).

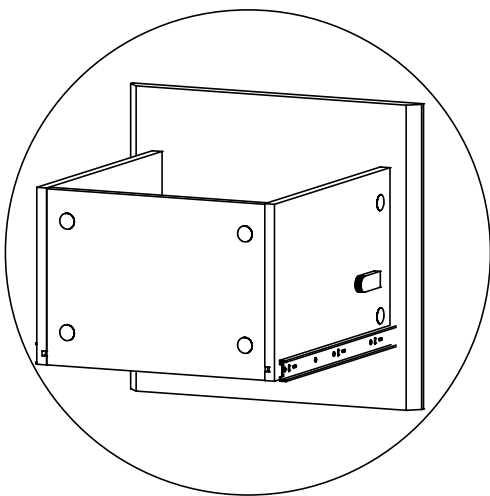

3. Final result: The hole is completely covered with smooth edges and no air bubbles.

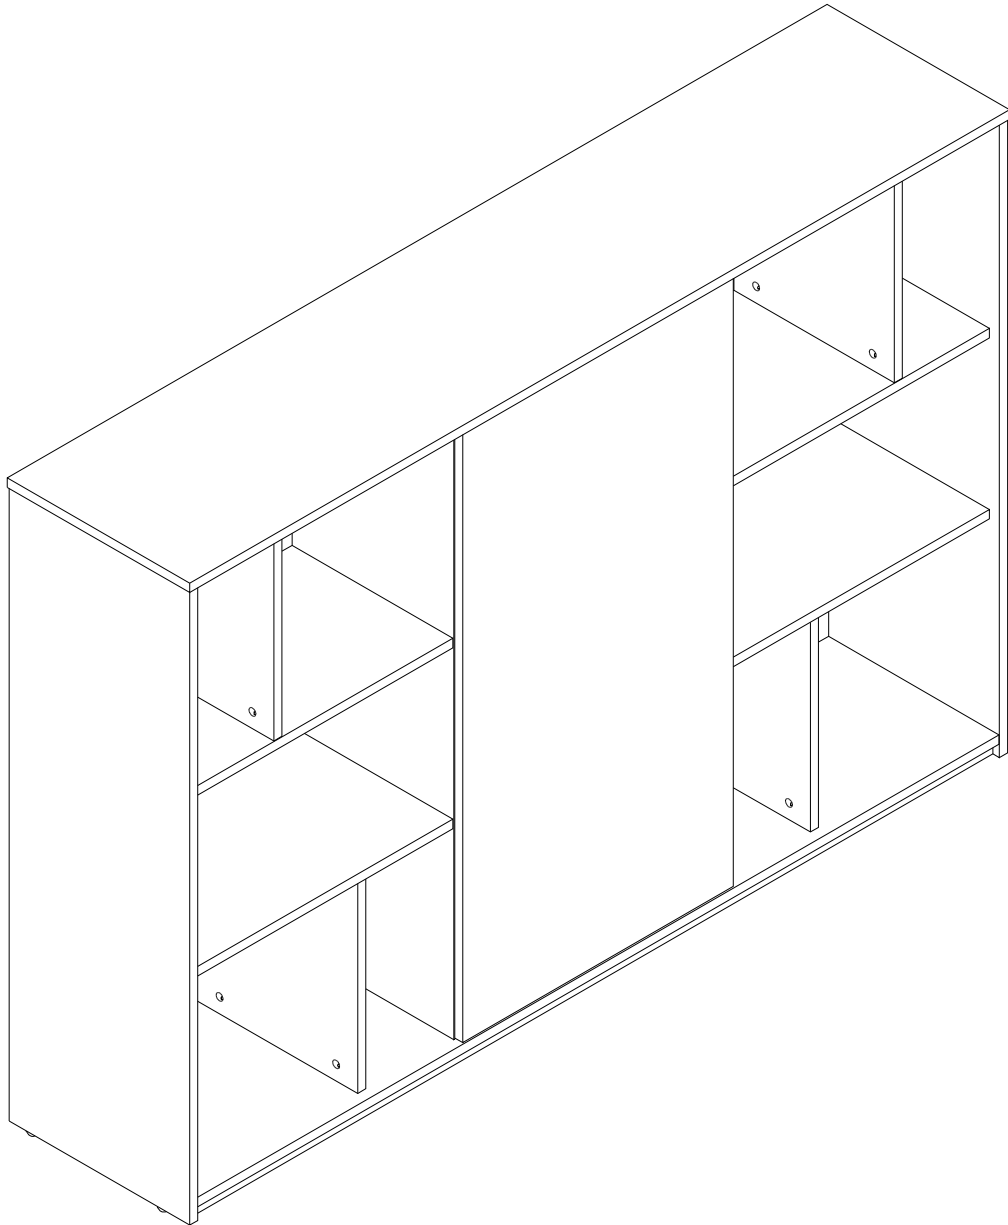

Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Please contact at: christyningxing@nxubay.com or via Phone#3233938260 at EST 9AM-13PM

Many thanks and welcome to our shop again!