

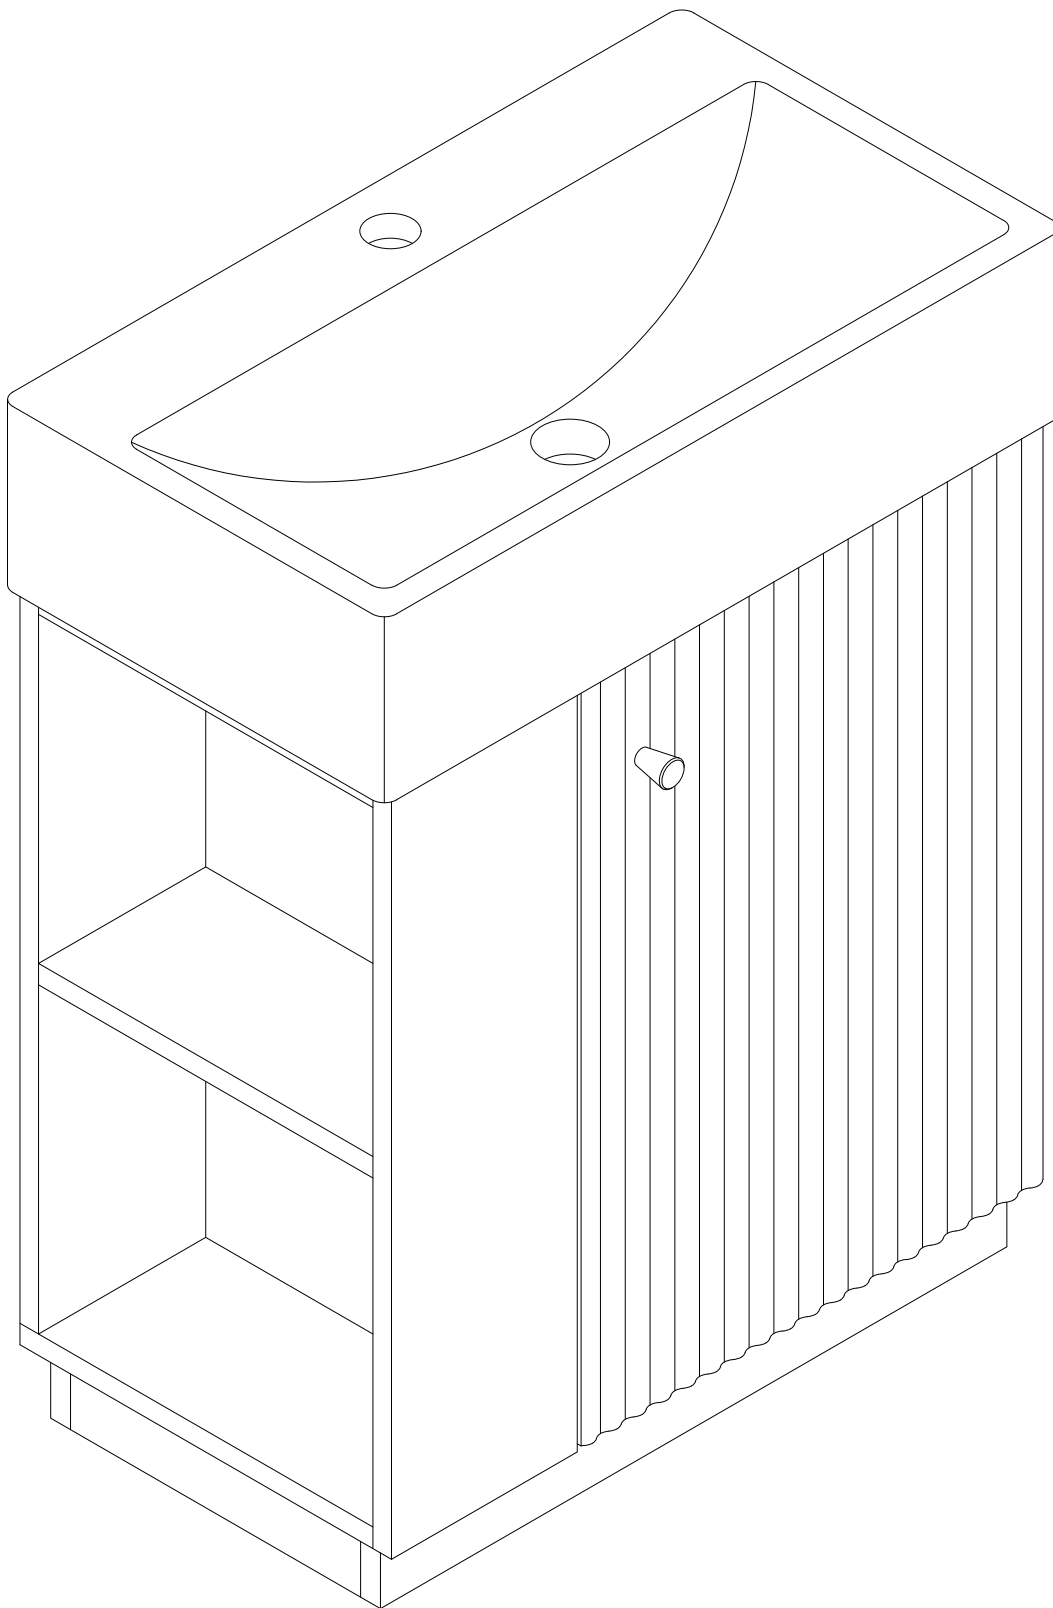
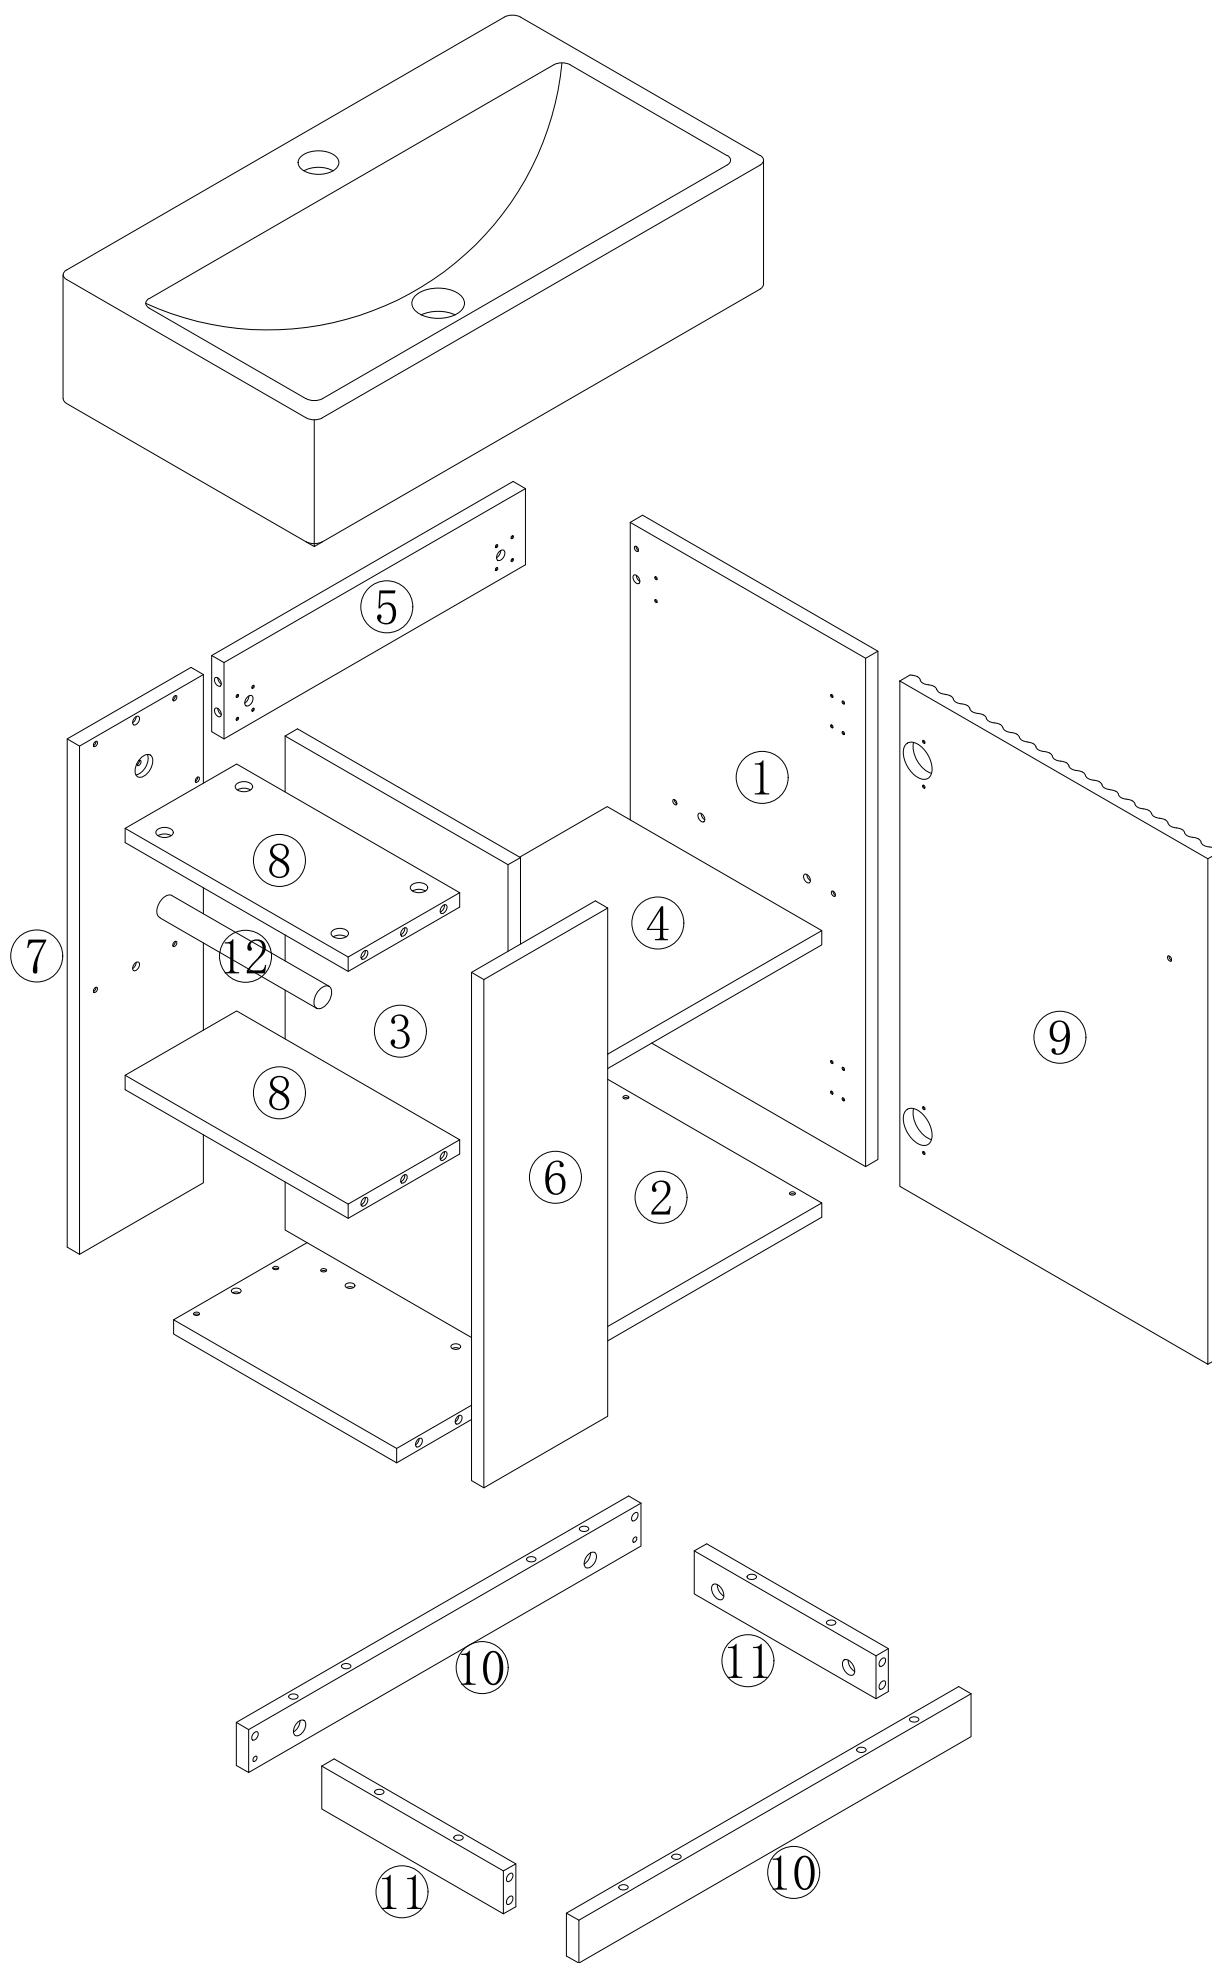
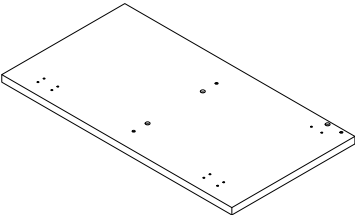
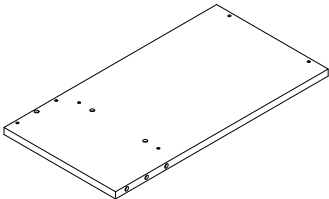
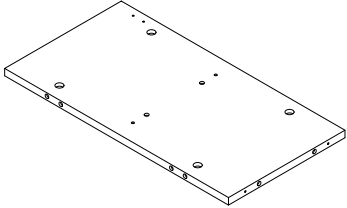
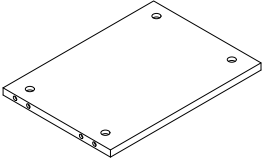
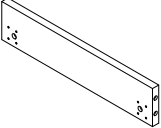
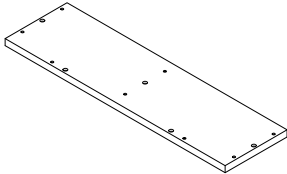
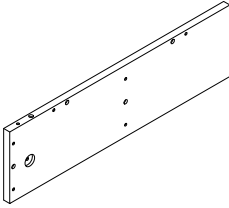

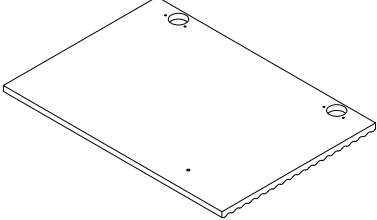
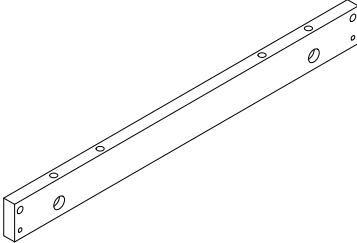


ASSEMBLY INSTRUCTION


N729P285503








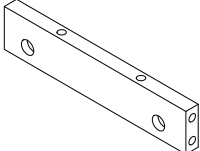





			
① x1	② x1	③ x1	④ x1
			
⑤ x1	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1	⑩ x2	⑪ x2	⑫ x1










TOOLS

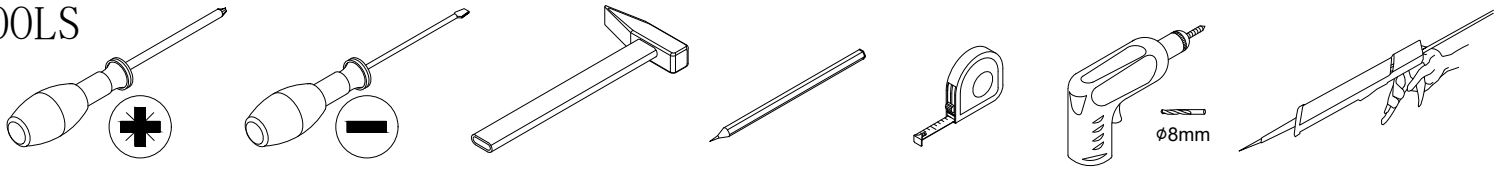

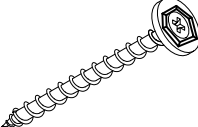A * 28	B * 28	C * 30	D * 12	E * 12
				
M6 X 35mm	Ø15 x 12mm	Ø8 x 30mm	M4 x 14mm	M4 x 14mm
F * 7	G * 1	H * 1	I * 2	J * 2
				
M4 x 35mm	M4 x 20mm			Ø35
K * 2	L * 4	M * 2	N * 4	
				
Ø8 x 40mm		M6 x 60mm		





Step 1

A * 24	E * 4	J * 2
		
M6 X 35mm	M4 x 14mm	Ø35

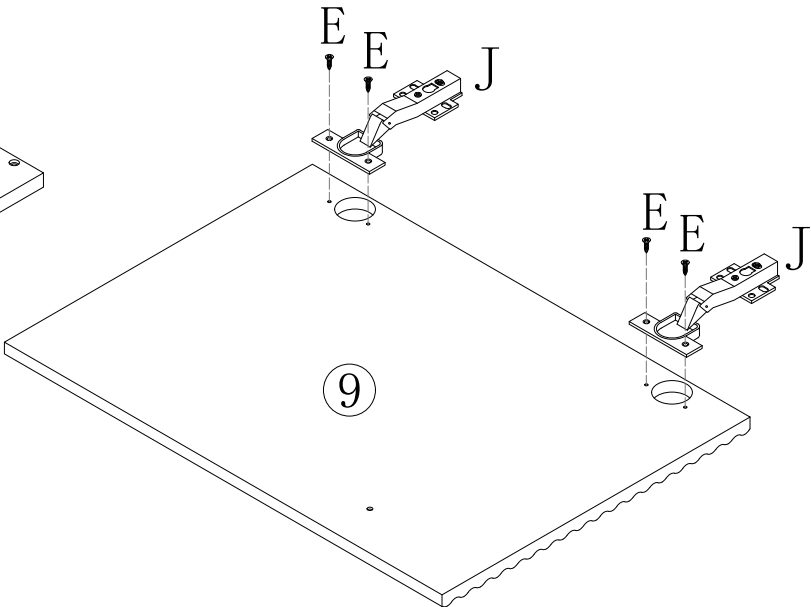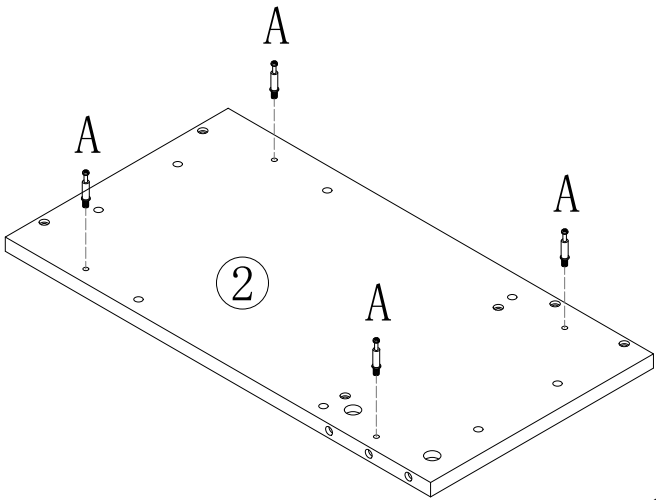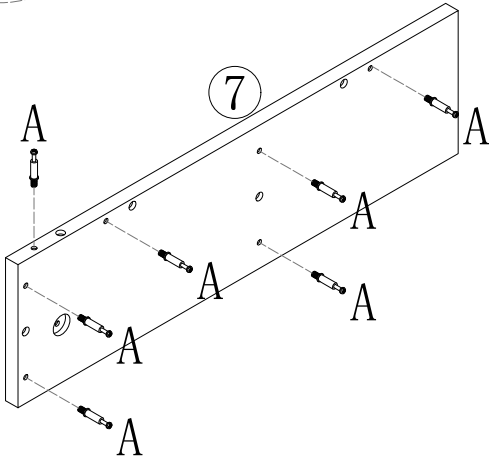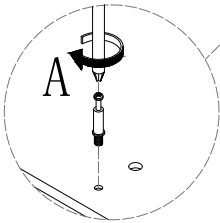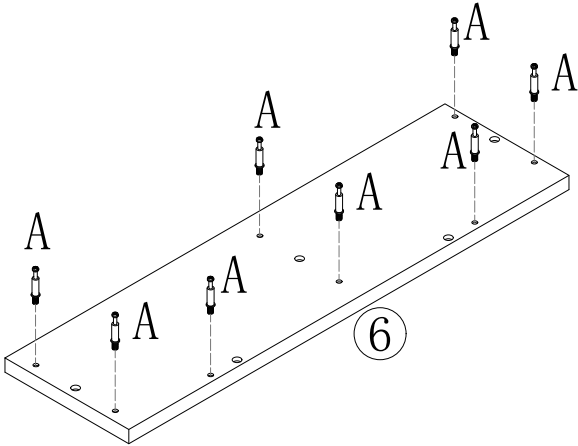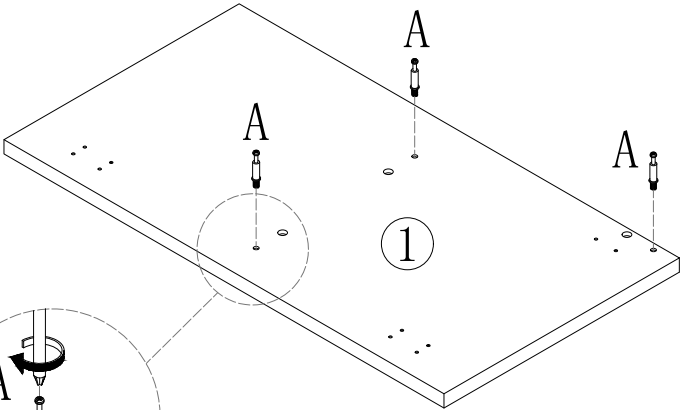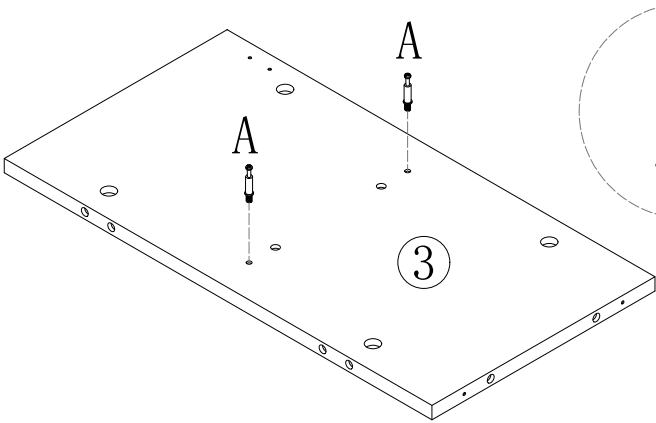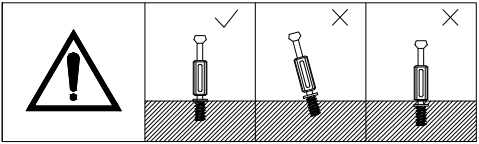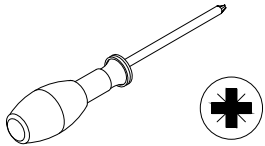










Step 2


C * 5	F * 4	B * 2
 Ø8 X 30mm	 M4 X 35mm	 Ø15 x 12mm

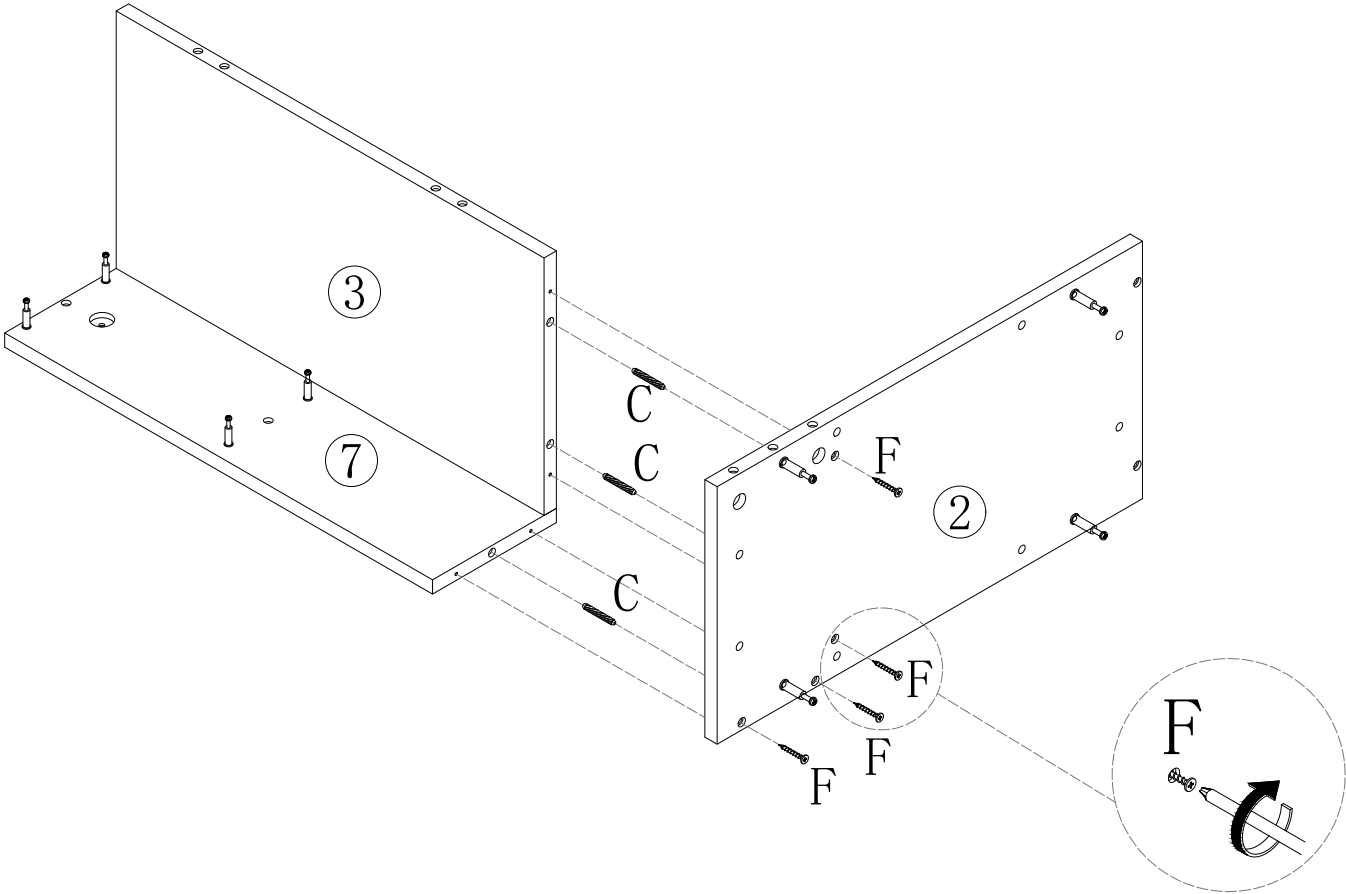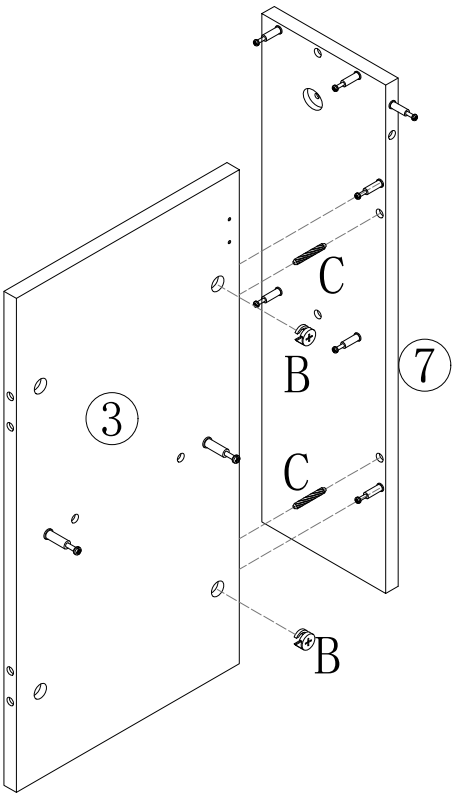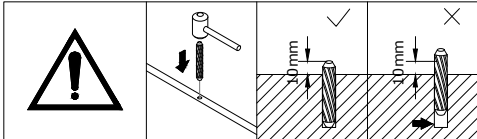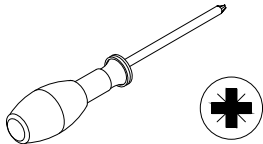


Step 3





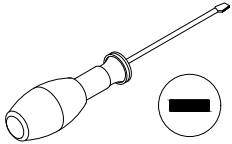
B * 4	C * 2	
 Ø15 x 12mm	 Ø8 x 30mm	


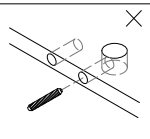
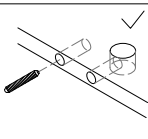


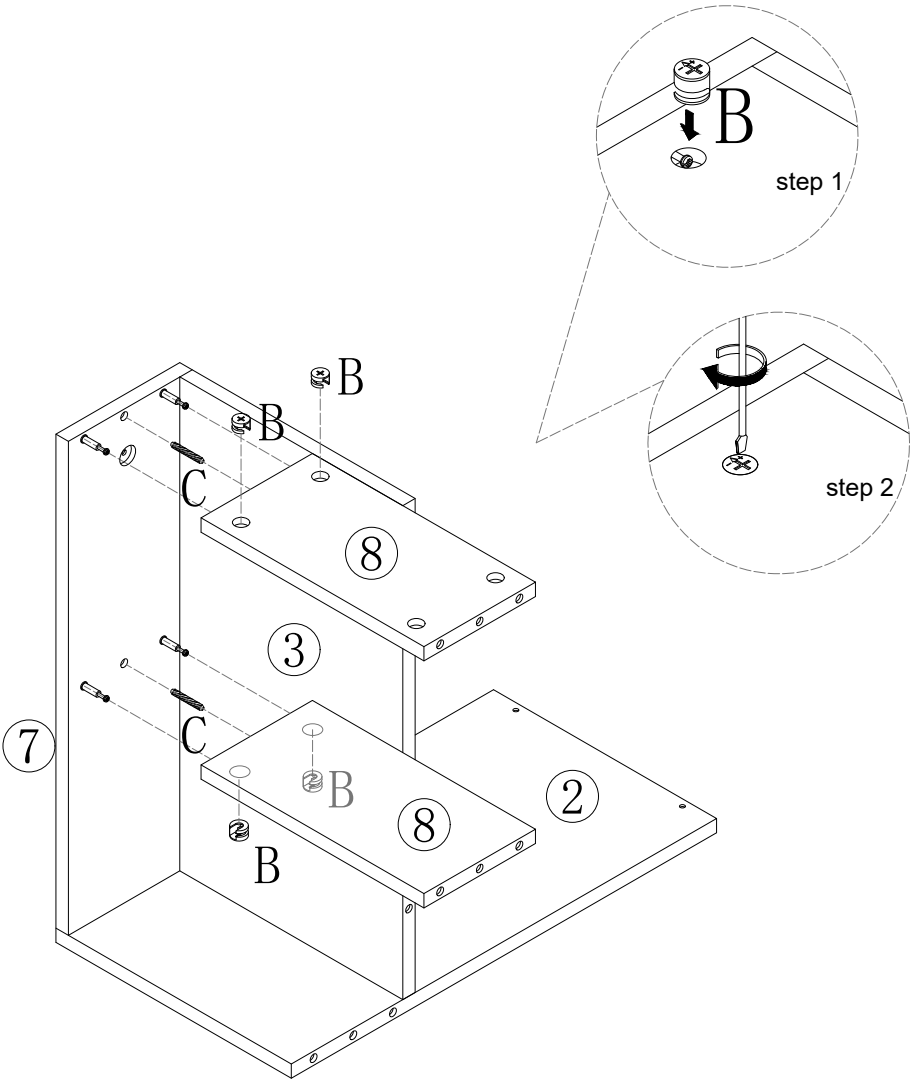


Step 4

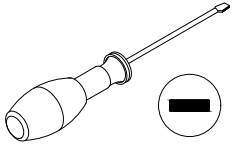
B * 8	C * 5	 ⚠
 Ø15 x 12mm	 Ø8 x 30mm	




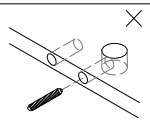
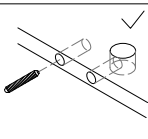







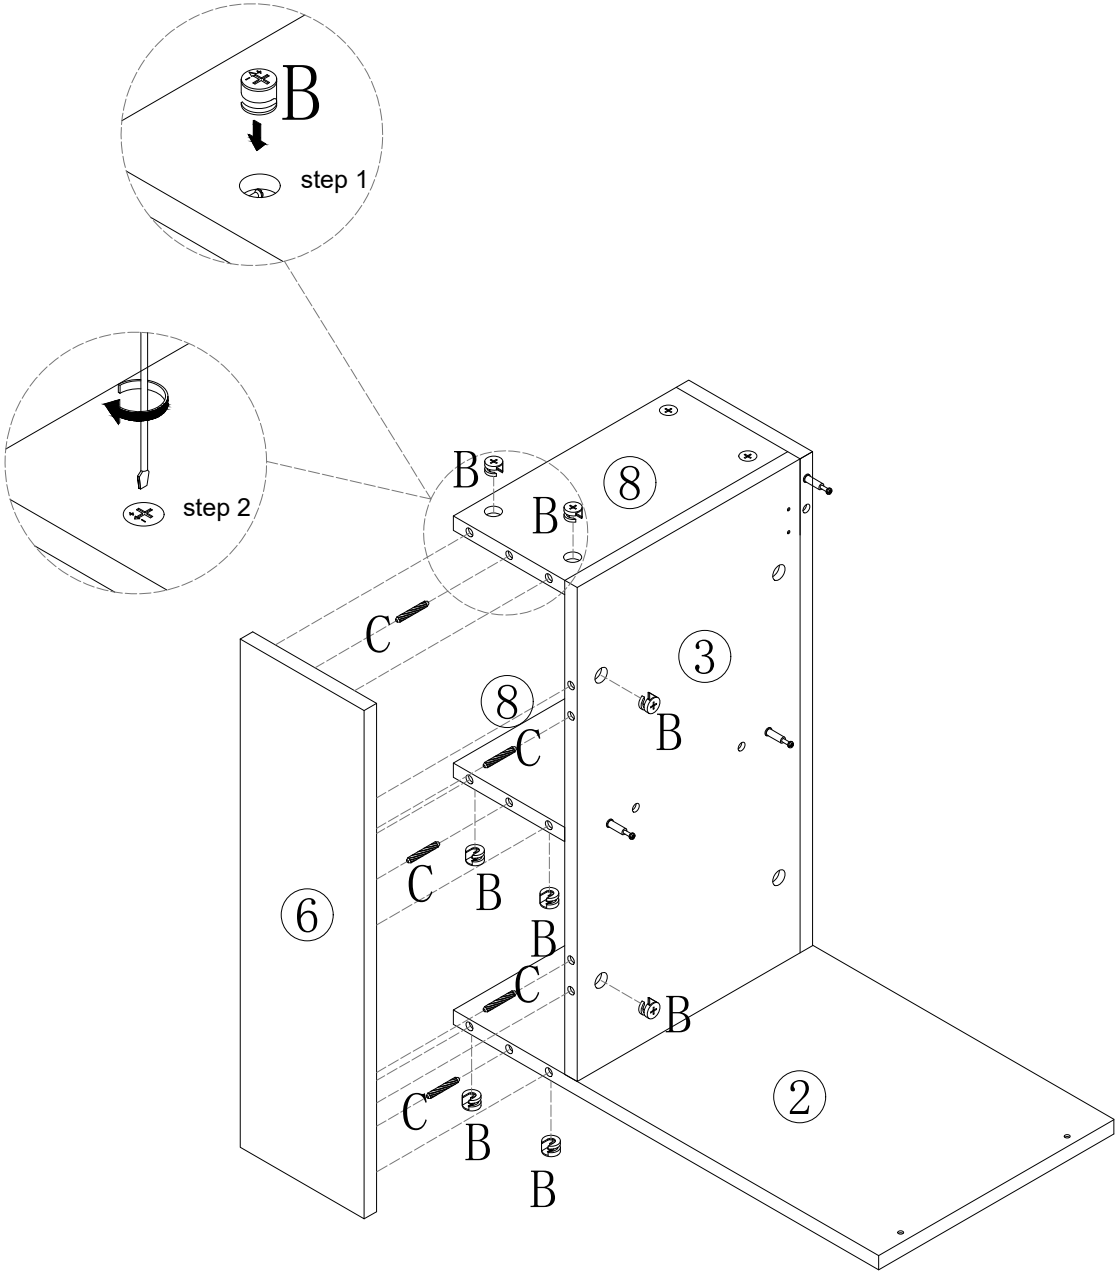


Step 5

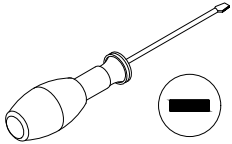B * 3	C * 3	
 Ø15 x 12mm	 Ø8 x 30mm	


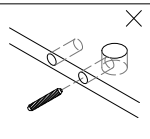
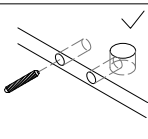




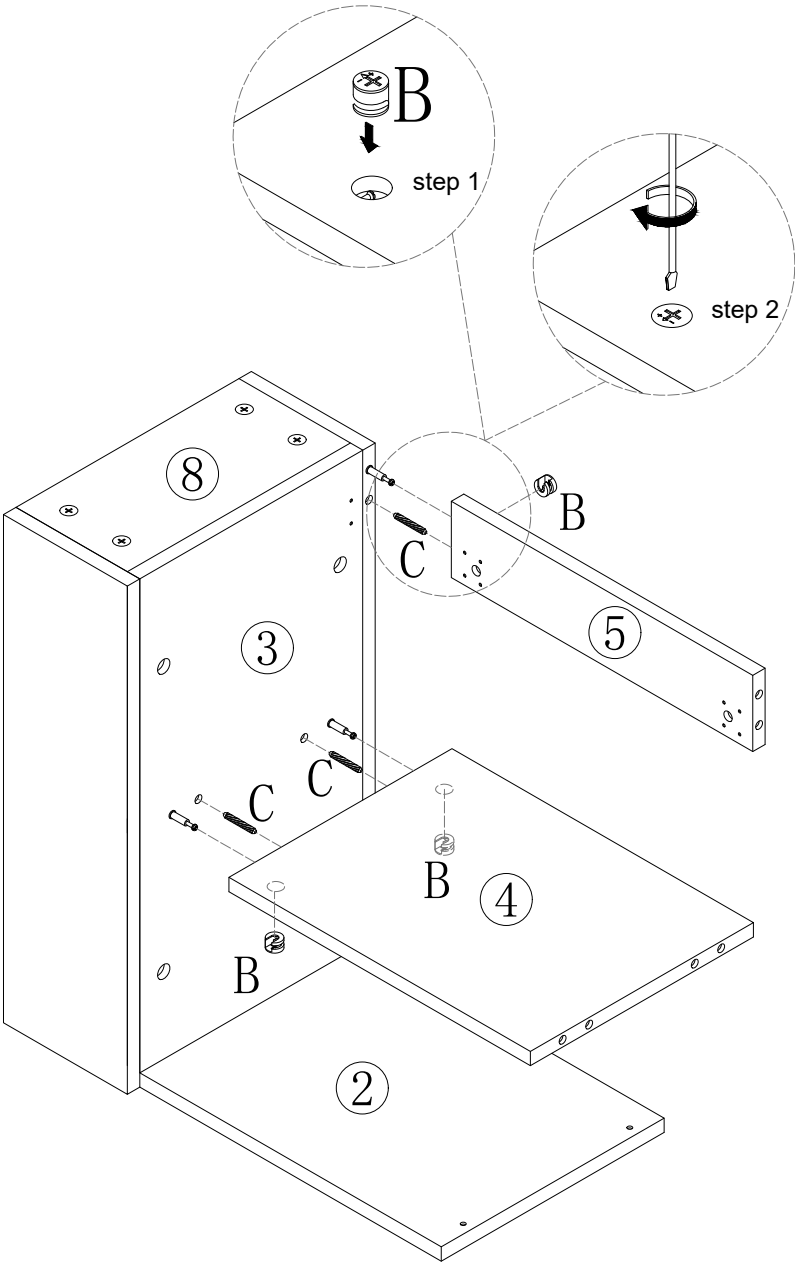

Step 6

B * 3	C * 3
 Ø15 x 12mm	 Ø8 x 30mm

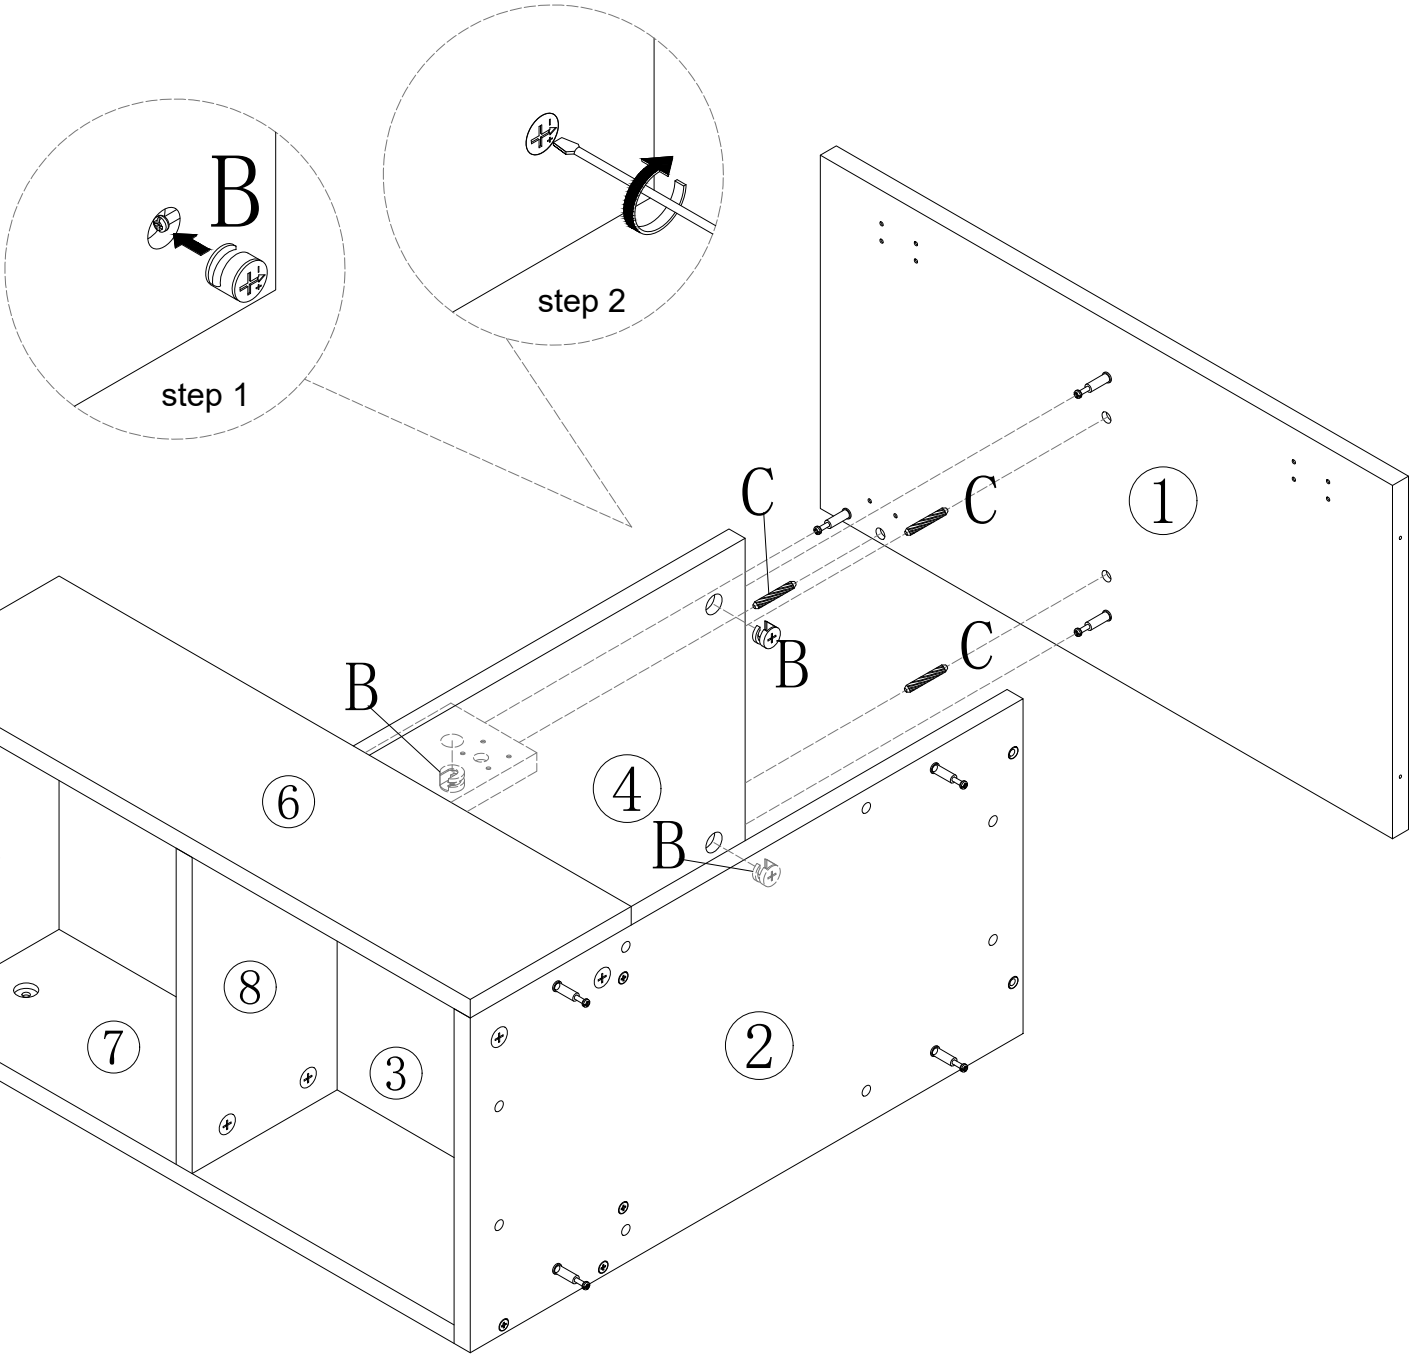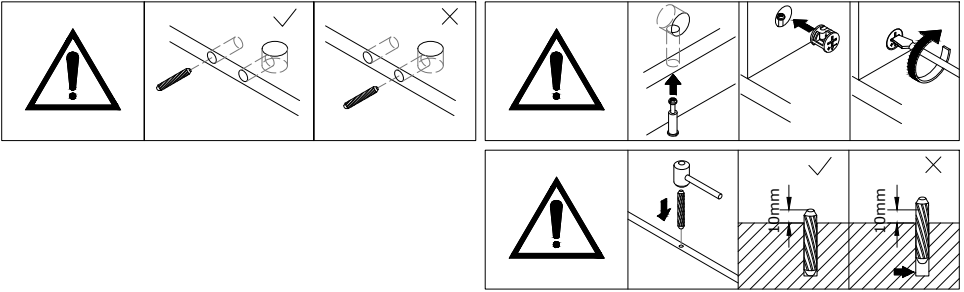
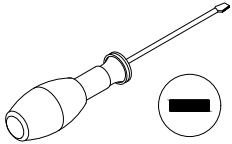


Step 7





























F * 2






M4 X 35mm

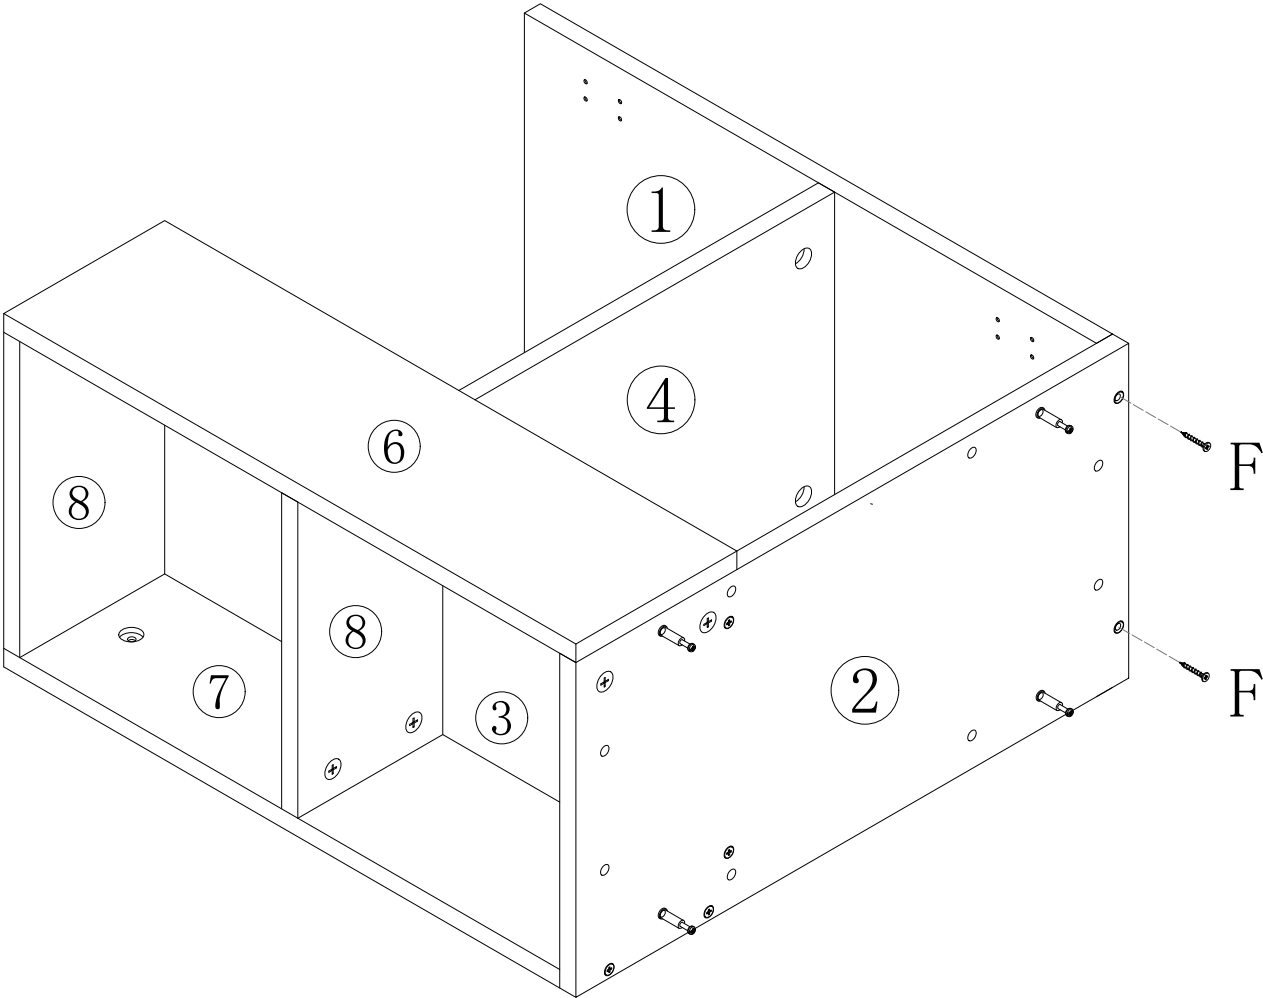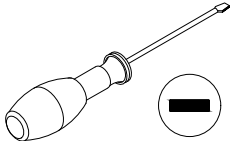



Step 8

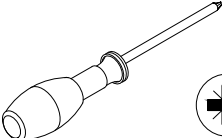A * 4  M6 X 35mm	B * 4  Ø15 x 12mm	C * 4  Ø8 x 30mm	L * 4 	 														
<table border="1"><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>																		
																		
																		

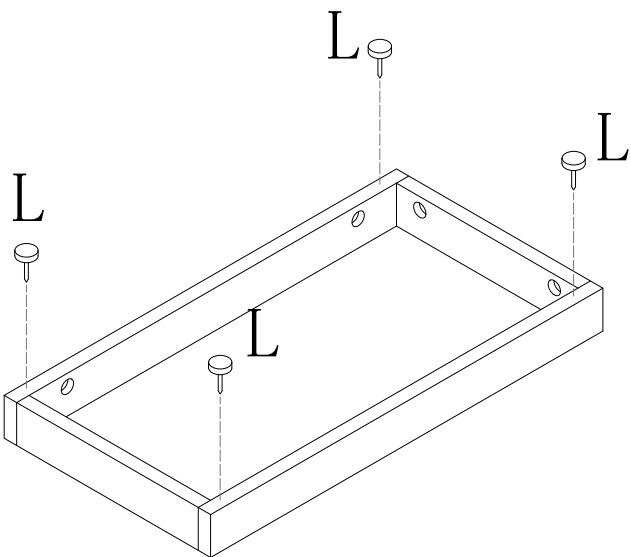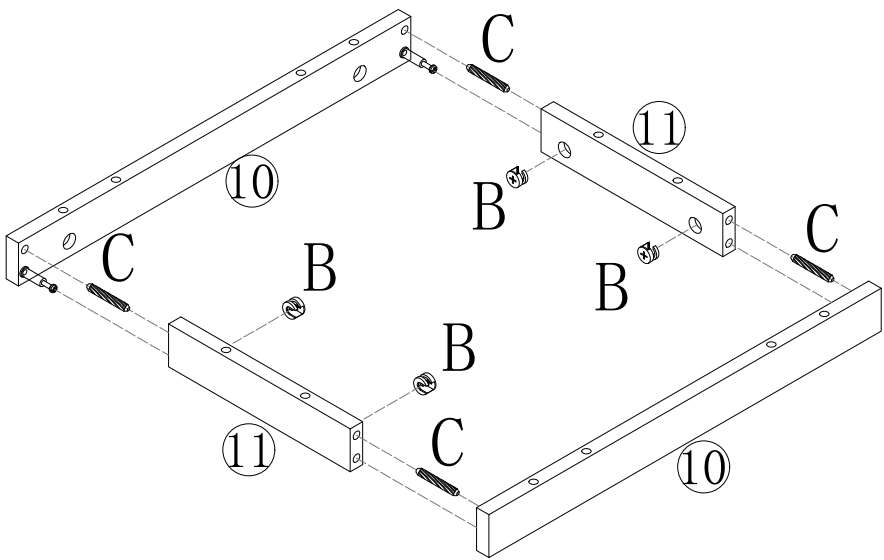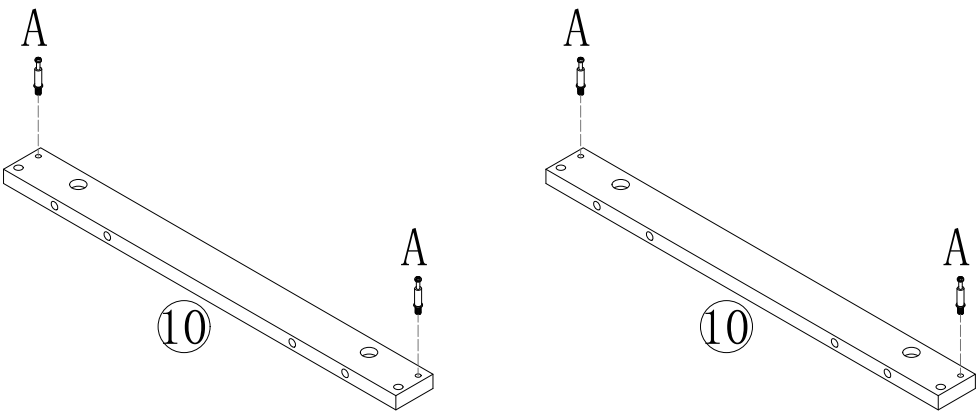



Step 9

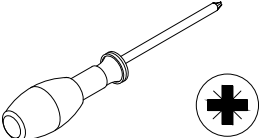B * 4	C * 8	 
 Ø15 x 12mm	 Ø8 x 30mm	

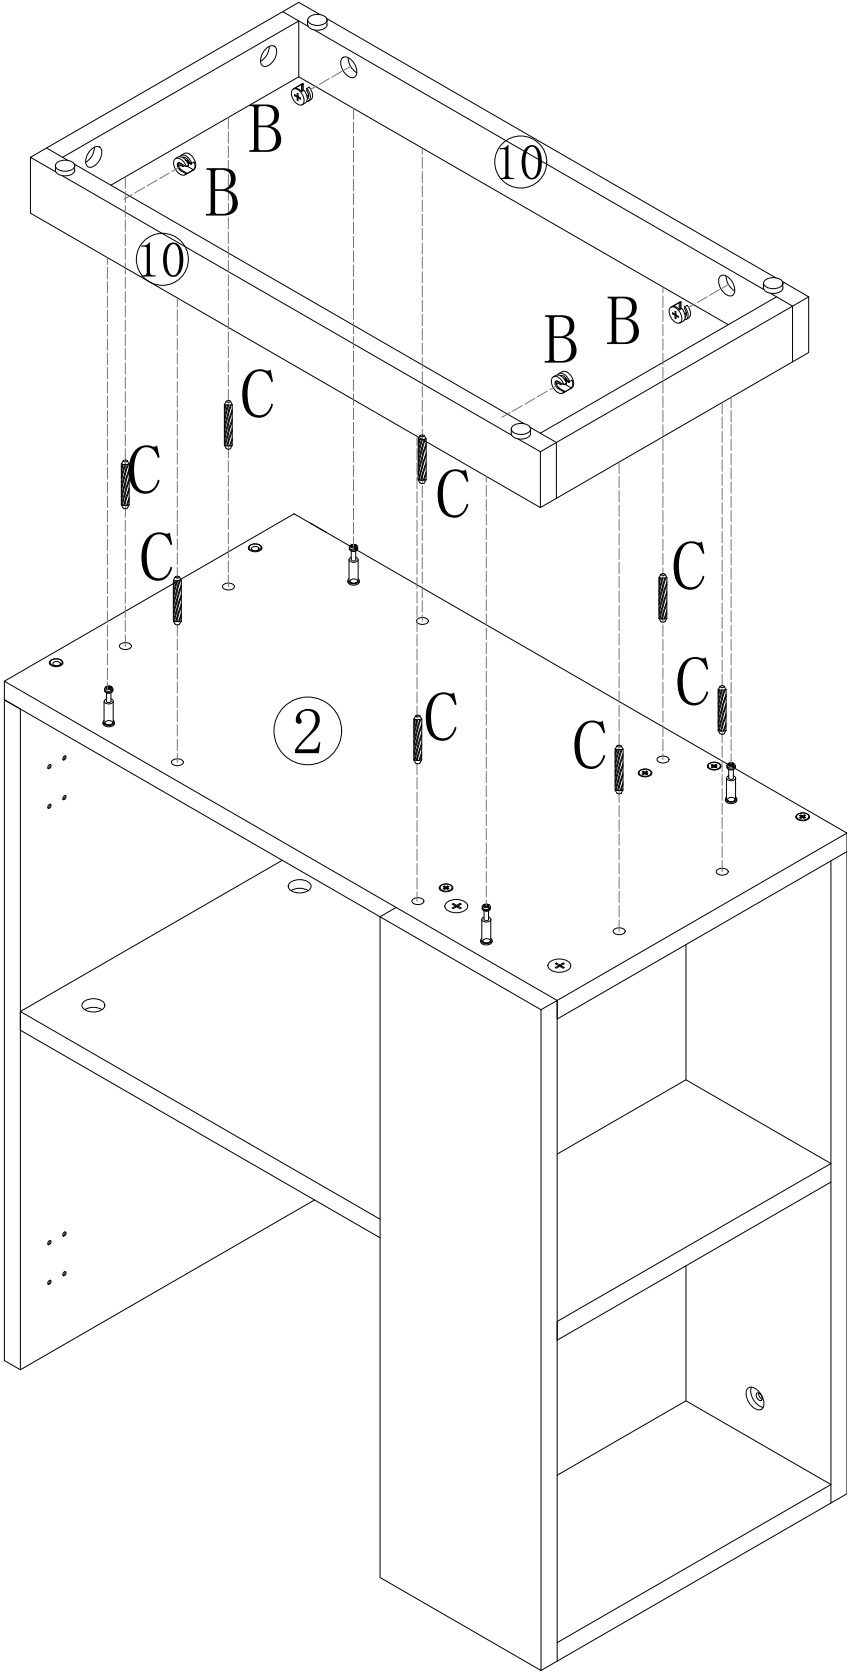

Step 10

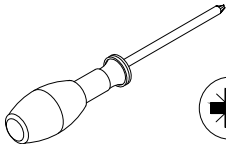D * 12	I * 2	 
 M4 x 14mm		


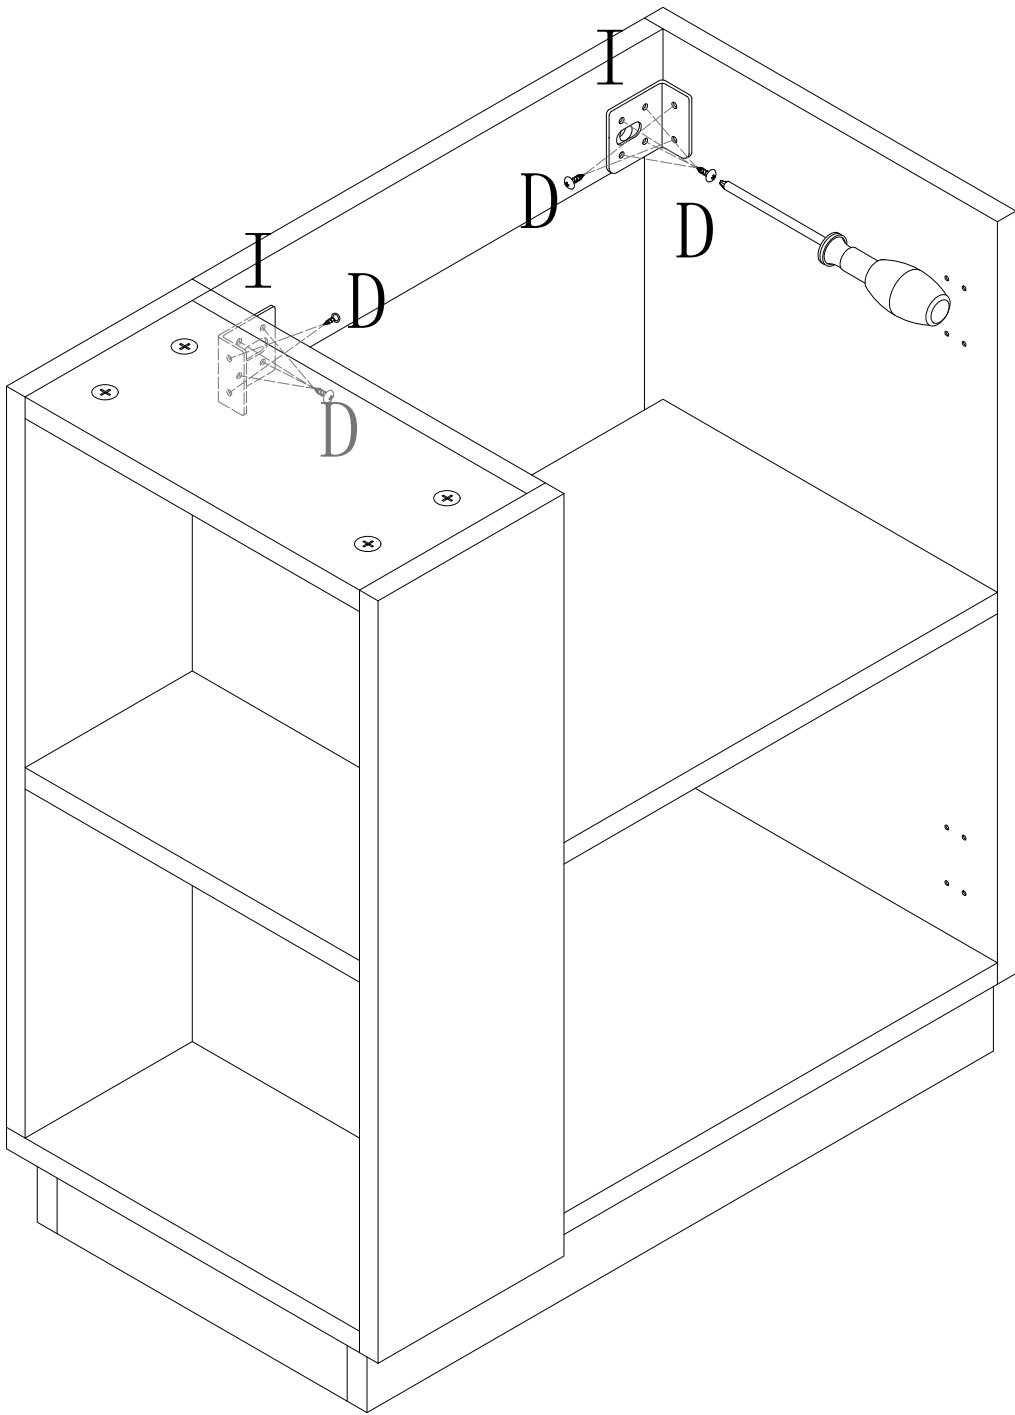


Step 11


F * 1




M4 X 35mm

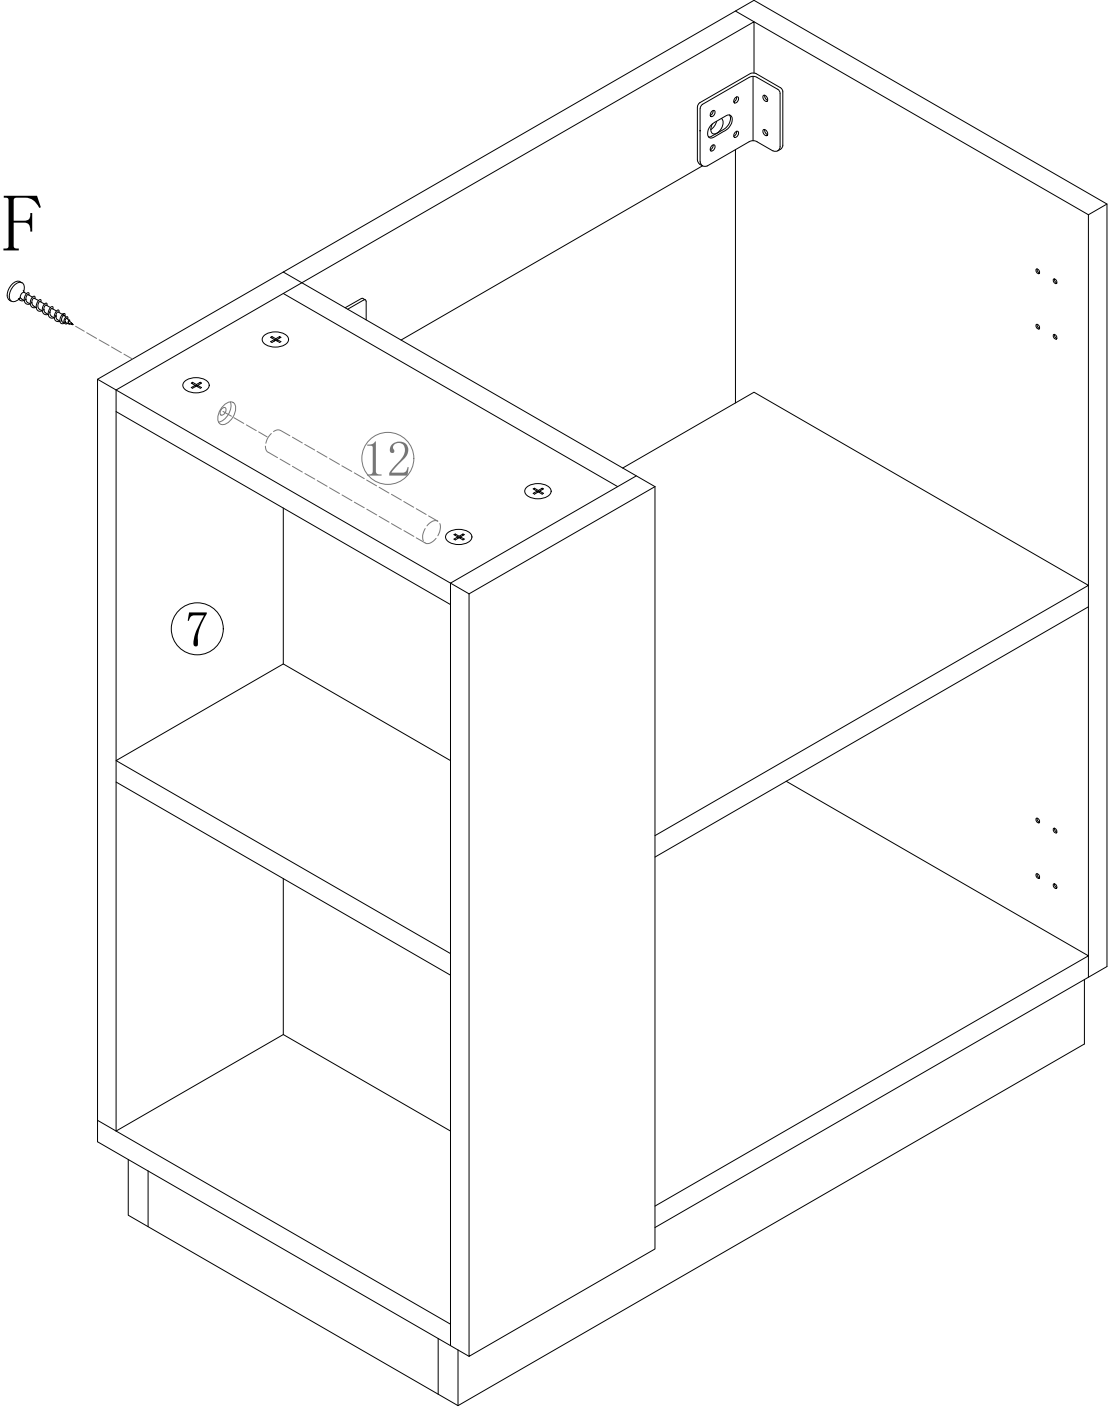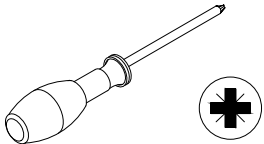

Step 12


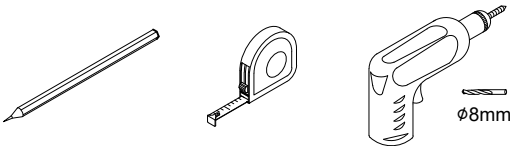


Wall

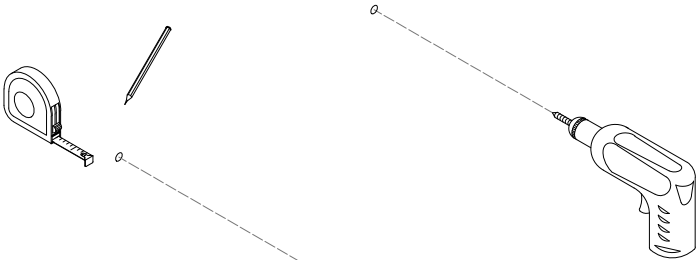


Please mark the location on the wall with a pencil, then punch the hole

Setp 13

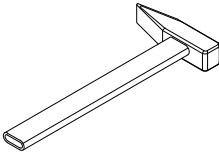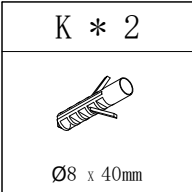



Wall

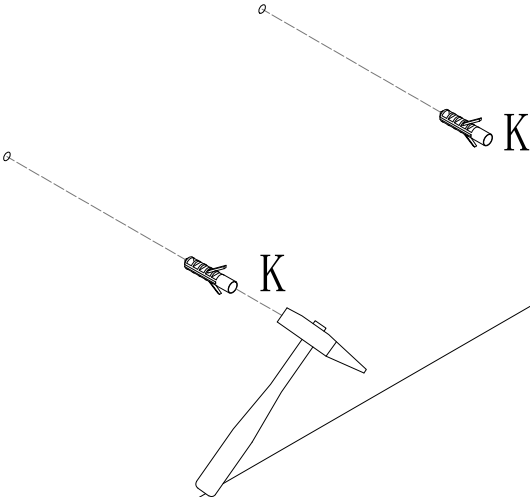



Step 14

M * 2



M6 x 60mm

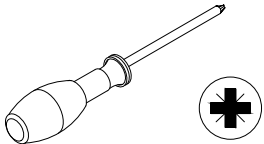


Wall

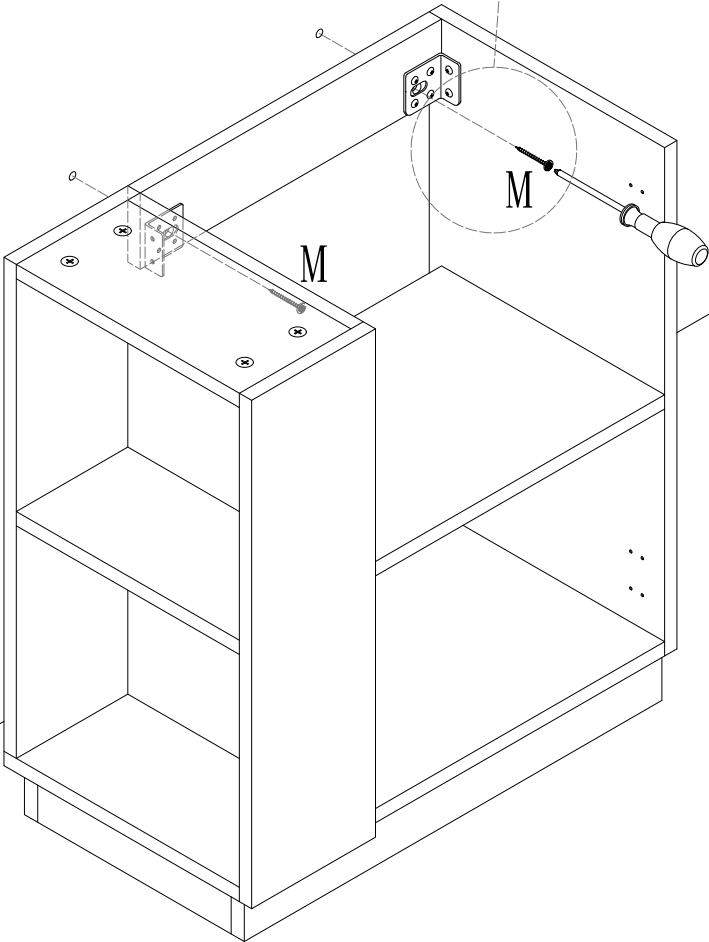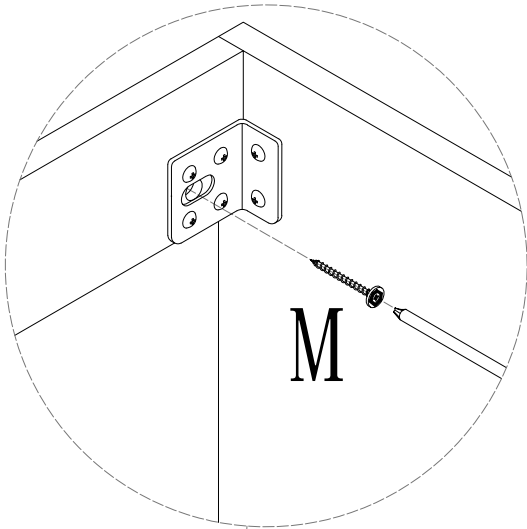



Step 15

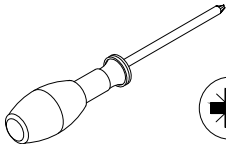E * 8	G * 1	H * 1	 
 M4 x 14mm	 M4 x 20mm		

Wall

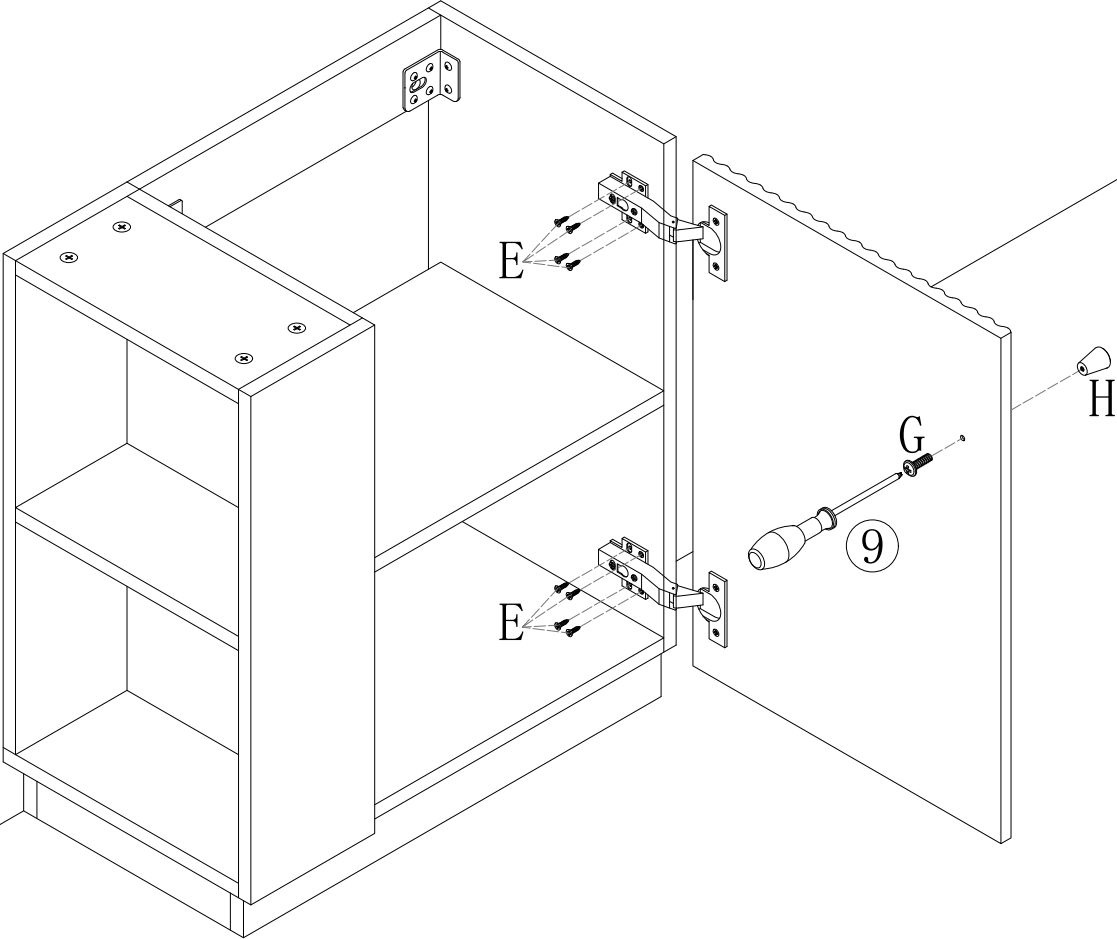


Step 16

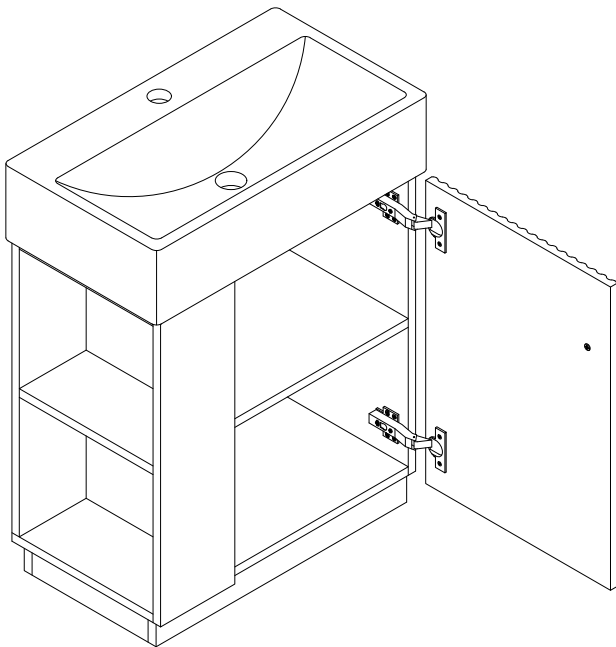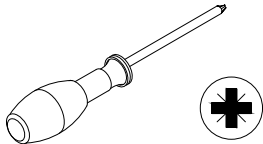


Adjust door following the direction.


Adjust the door up and down to match the cabinet.

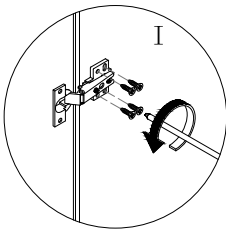

I:loosen the screw.

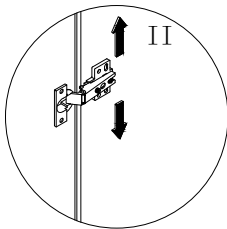

II:Adjust the upper and lower position.

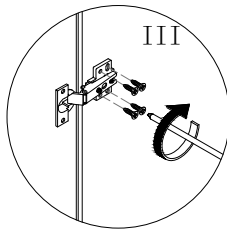


II:tighten the screw.




When the door position is not standard,please adjust the door according to the right picture.

Adjust the door left and right to match the cabinet for suitable crack of the door

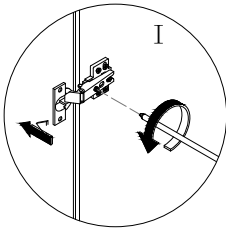

I:loosen the screw to keep hinge apply force toward the direction of arrow.

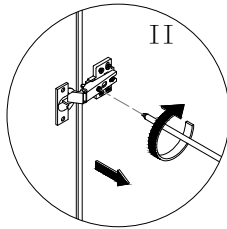


II:tighten the screw to keep hinge apply force toward the direction of arrow.




Please place the cabinet on the flat floor before adjustment.

Adjust the door backwards and forwards to match the cabinet.

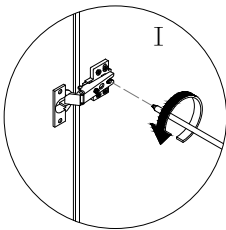


I:loosen the screw.

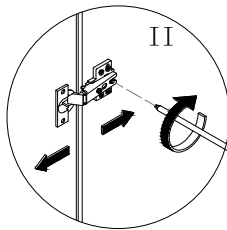


II:Adjust the distance between front and back.

Step 17


N * 4

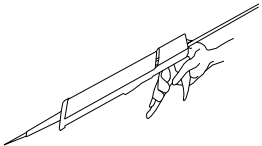



Wall

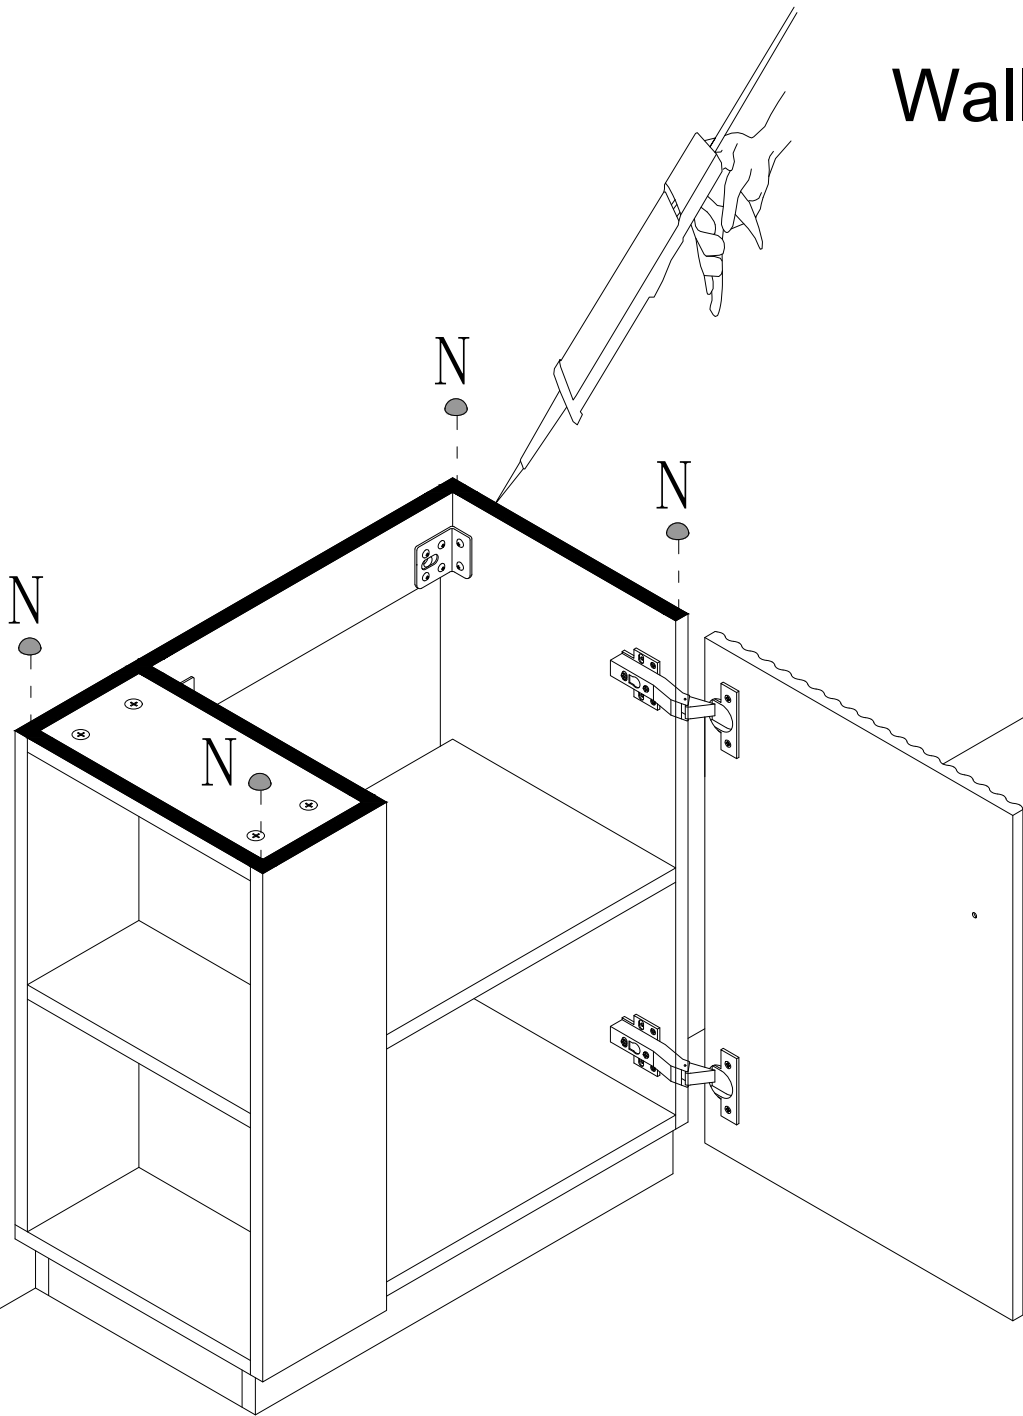

Step 18

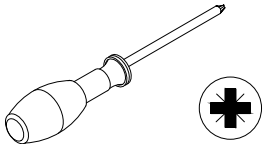

Wall

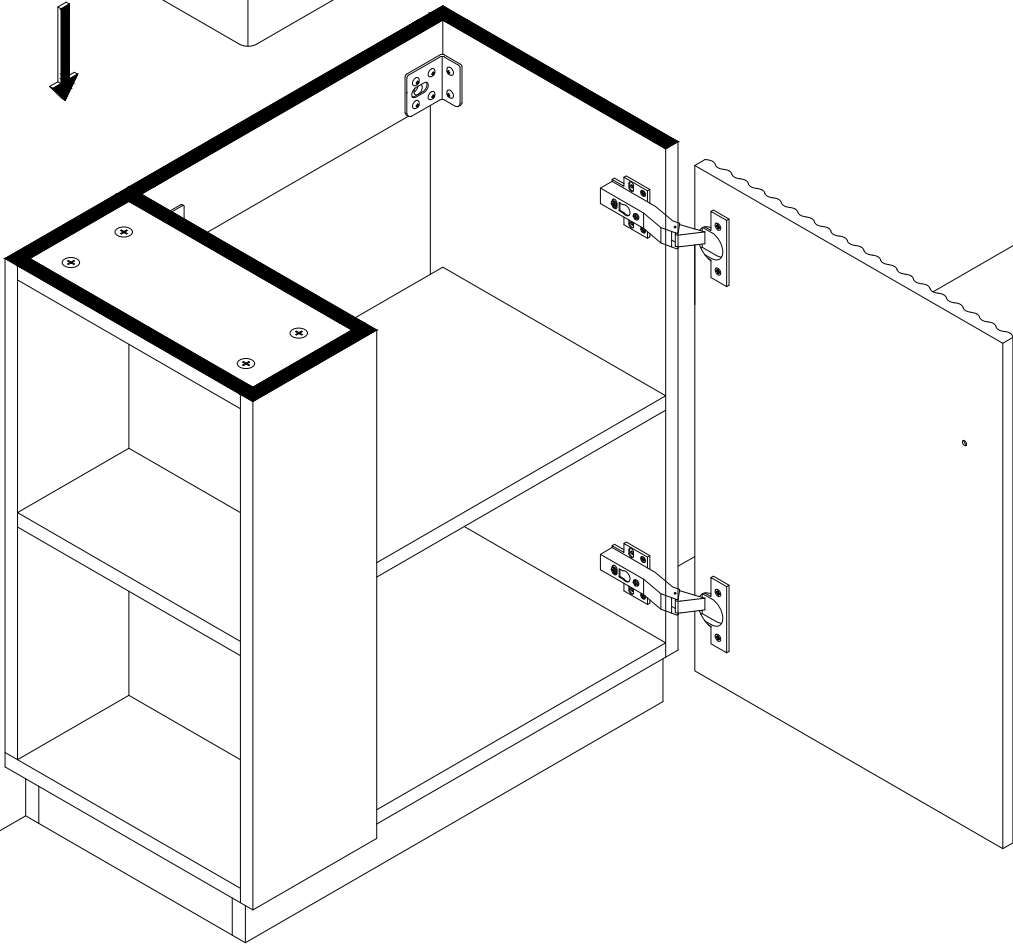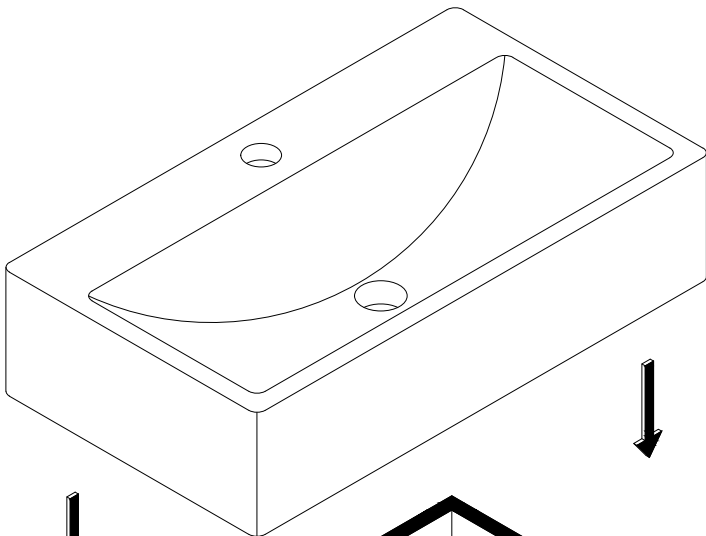

Step 19

