


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

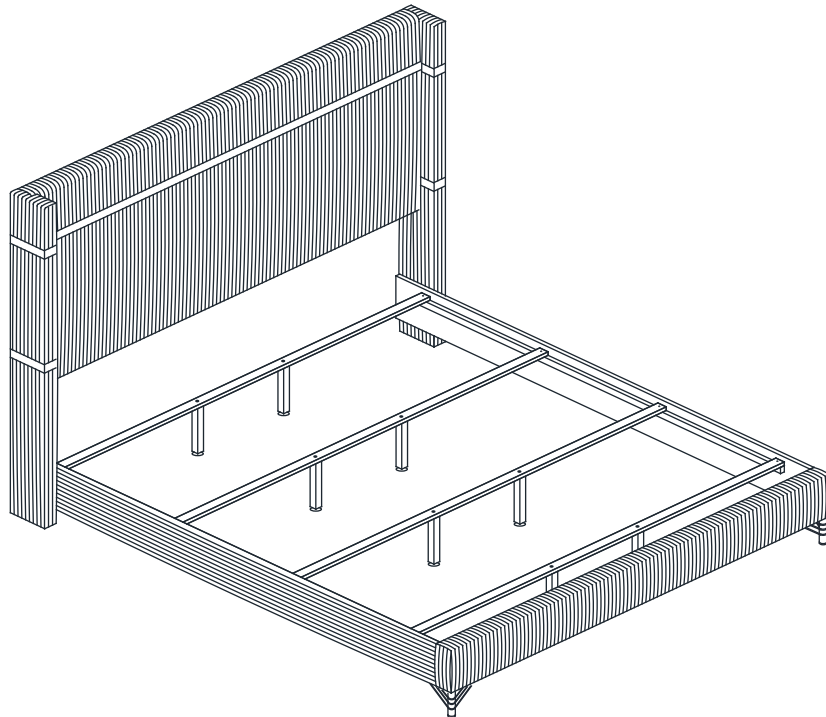

*Fine Furniture for every stage of life*

## 224991KE (B1&B2) *Eastern King Bed*

# ITEM: 224991KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

AF HEADBOARD PANEL

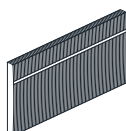


1PC

B LEFT HEADBOARD LEG  
(WITH "L" LABEL)




1PC

C RIGHT HEADBOARD LEG  
(WITH "R" LABEL)



1PC

D FOOTBOARD PANEL



1PC

E FOOTBOARD LEG



2PCS

F BED SLAT



4PCS


G BED SLAT SUPPORT  
WITH LEVELER



8PCS


### B2 (BOX 2)

H LEFT BED RAIL  
(WITH "H" LABEL)



1PC

I RIGHT BED RAIL  
(WITH "I" LABEL)



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

# ITEM: 224991KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224991KE (B2)

|   |                                                 |                                                                                     |       |    |                                                 |                                                                                       |      |
|---|-------------------------------------------------|-------------------------------------------------------------------------------------|-------|----|-------------------------------------------------|---------------------------------------------------------------------------------------|------|
| 1 | <b>BOLT 1</b><br>(M8 x 20MM - RBW)              |    | 4PCS  | 7  | <b>SMALL FLAT WASHER</b><br>(1/4" x 19 Ø - RBW) |    | 6PCS |
| 2 | <b>BOLT 2</b><br>(M8 x 35MM - RBW)              |   | 4PCS  | 8  | <b>BIG LOCK WASHER</b><br>(M8 x 13MM - RBW)     |   | 4PCS |
| 3 | <b>BOLT 4</b><br>(M6 x 35MM - RBW)              |  | 10PCS | 9  | <b>BIG FLAT WASHER</b><br>(M8 x 22MM - RBW)     |  | 4PCS |
| 4 | <b>BOLT 3</b><br>(M6 x 15MM - RBW)              |  | 6PCS  | 10 | <b>FLAT HEAD SCREW</b><br>(M4 x 32MM - RBW)     |  | 8PCS |
| 5 | <b>WOOD DOWEL</b><br>(M10 x 30MM - RBW)         |  | 4PCS  | 11 | <b>SMALL ALLEN WRENCH</b><br>(M4 x 100MM - BLK) |  | 1PC  |
| 6 | <b>SMALL LOCK WASHER</b><br>(1/4" x 12 Ø - RBW) |  | 6PCS  | 12 | <b>BIG ALLEN WRENCH</b><br>(M5 x 65MM - BLK)    |  | 1PC  |

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

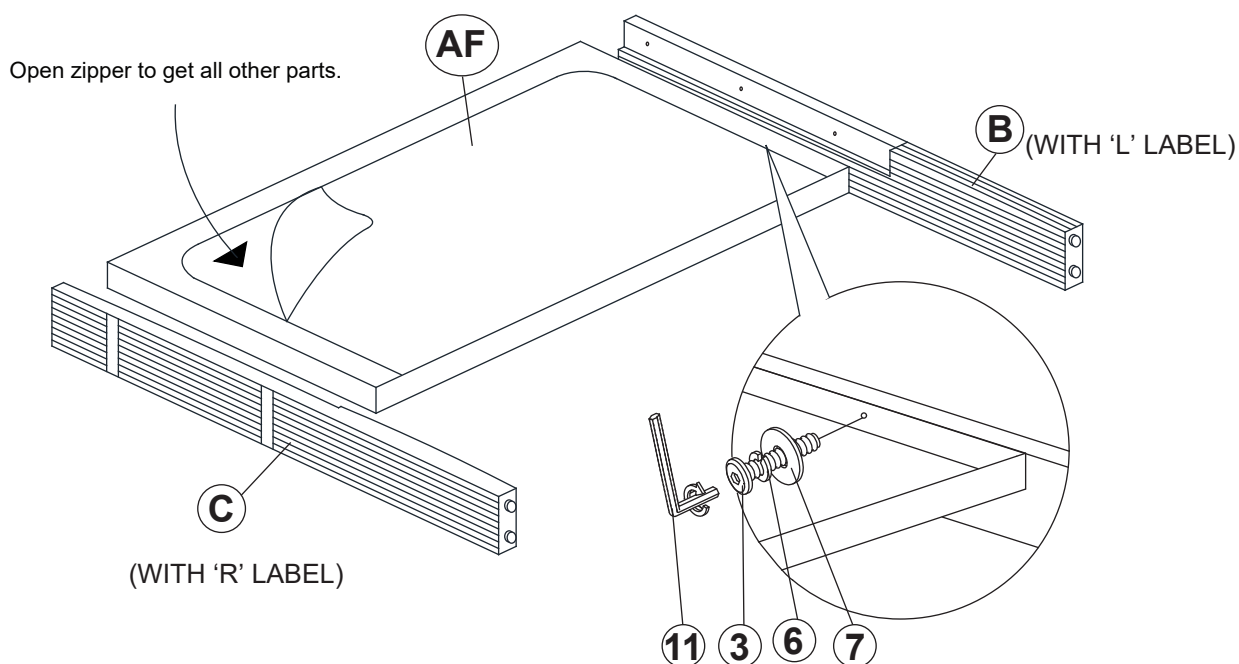

**\*\* BACK VIEW**

### STEP 2

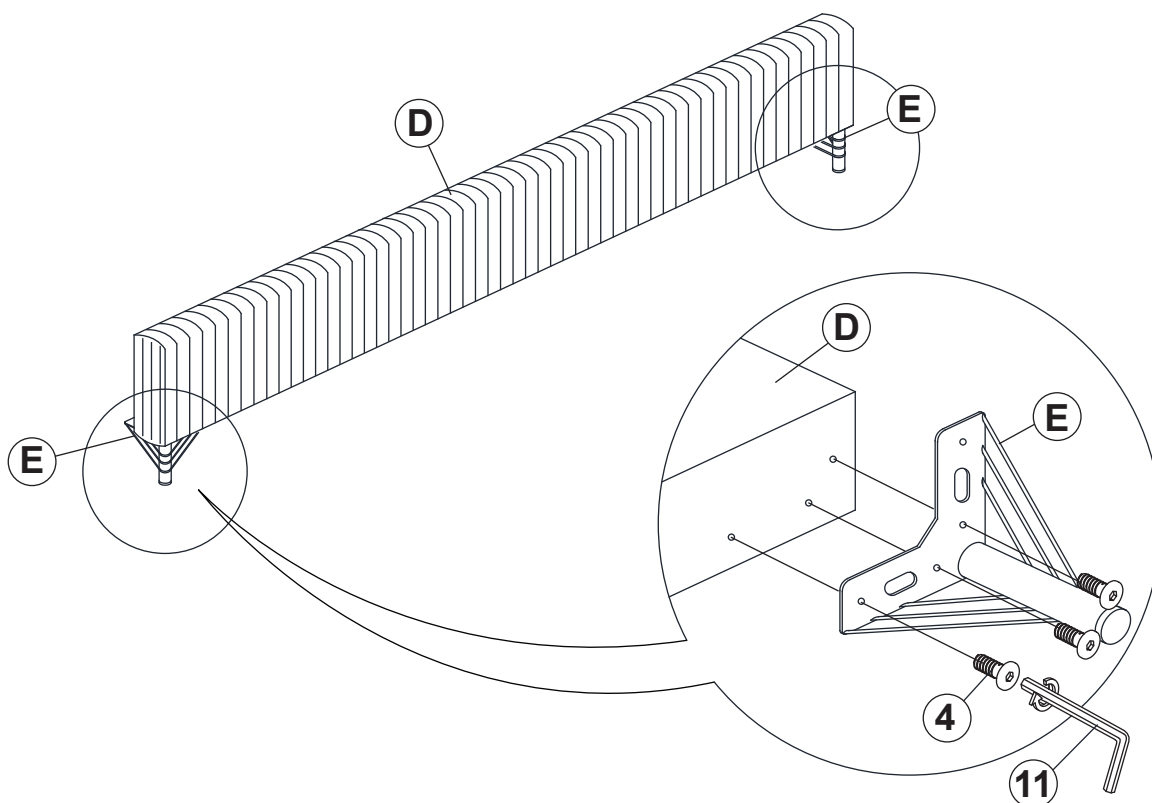


ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 3

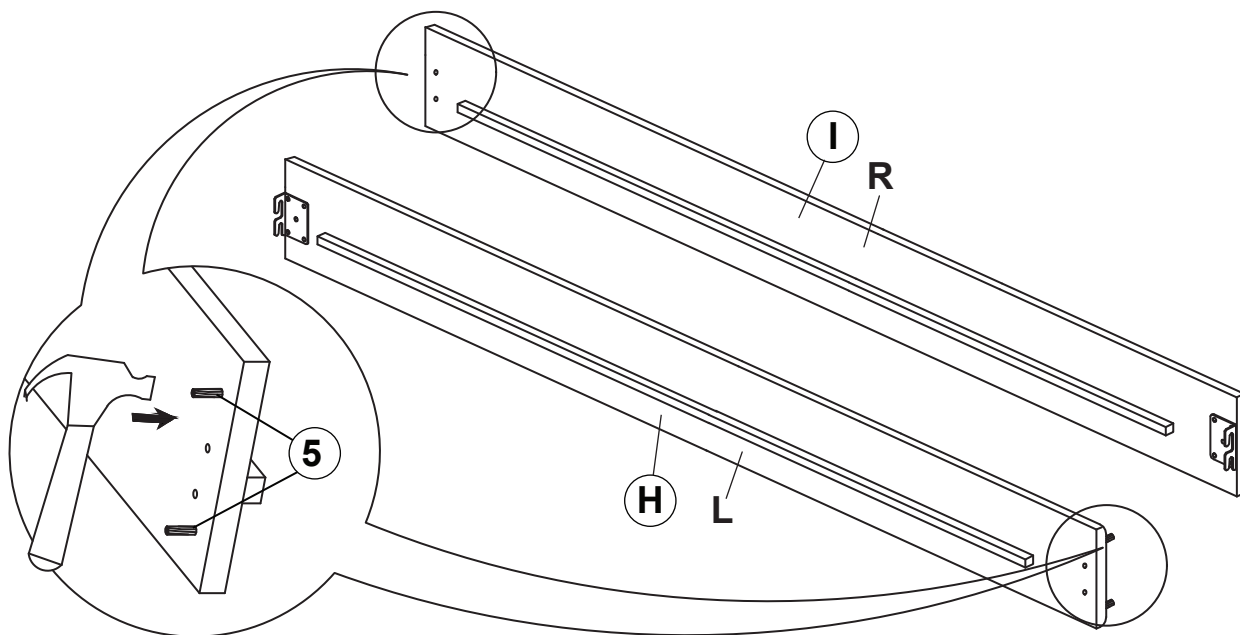

### STEP 4

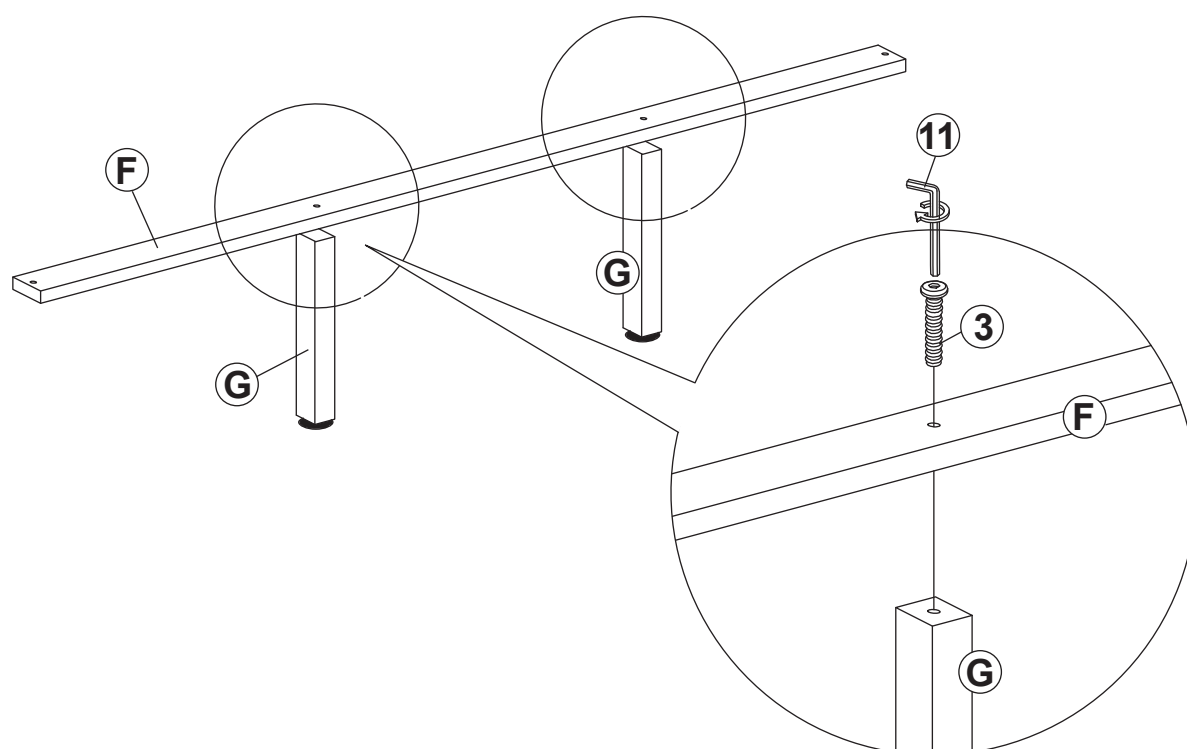


ITEM: **224991KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 5

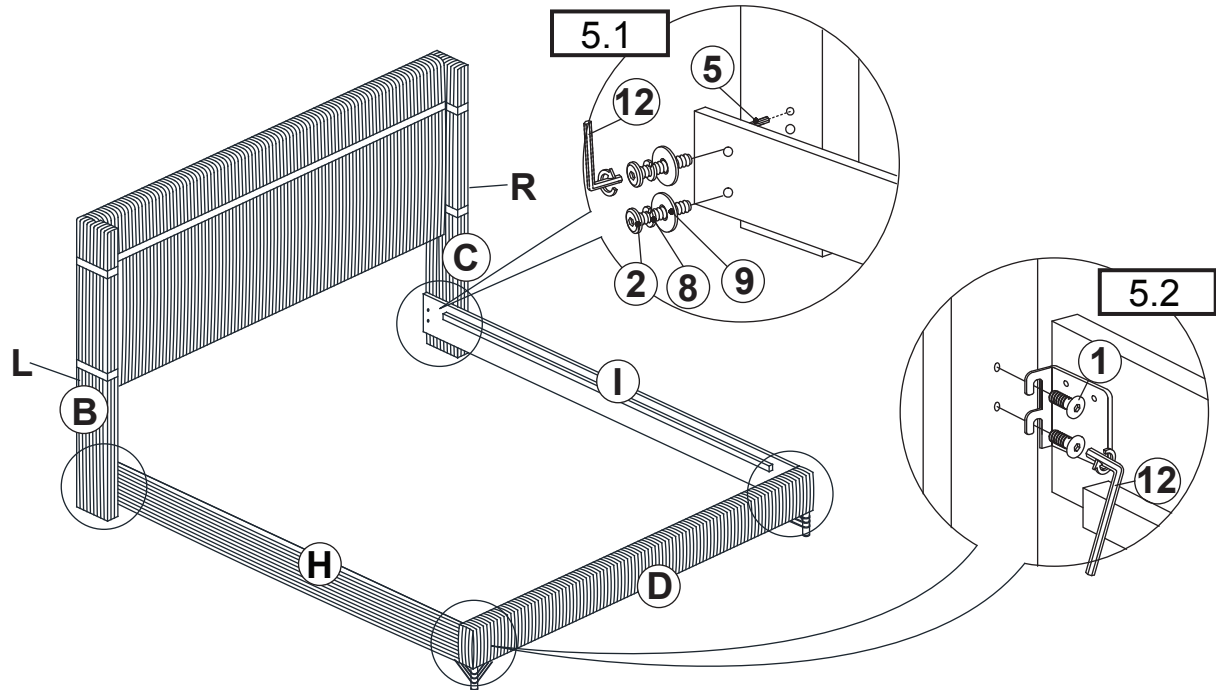


### STEP 6 COMPLETE

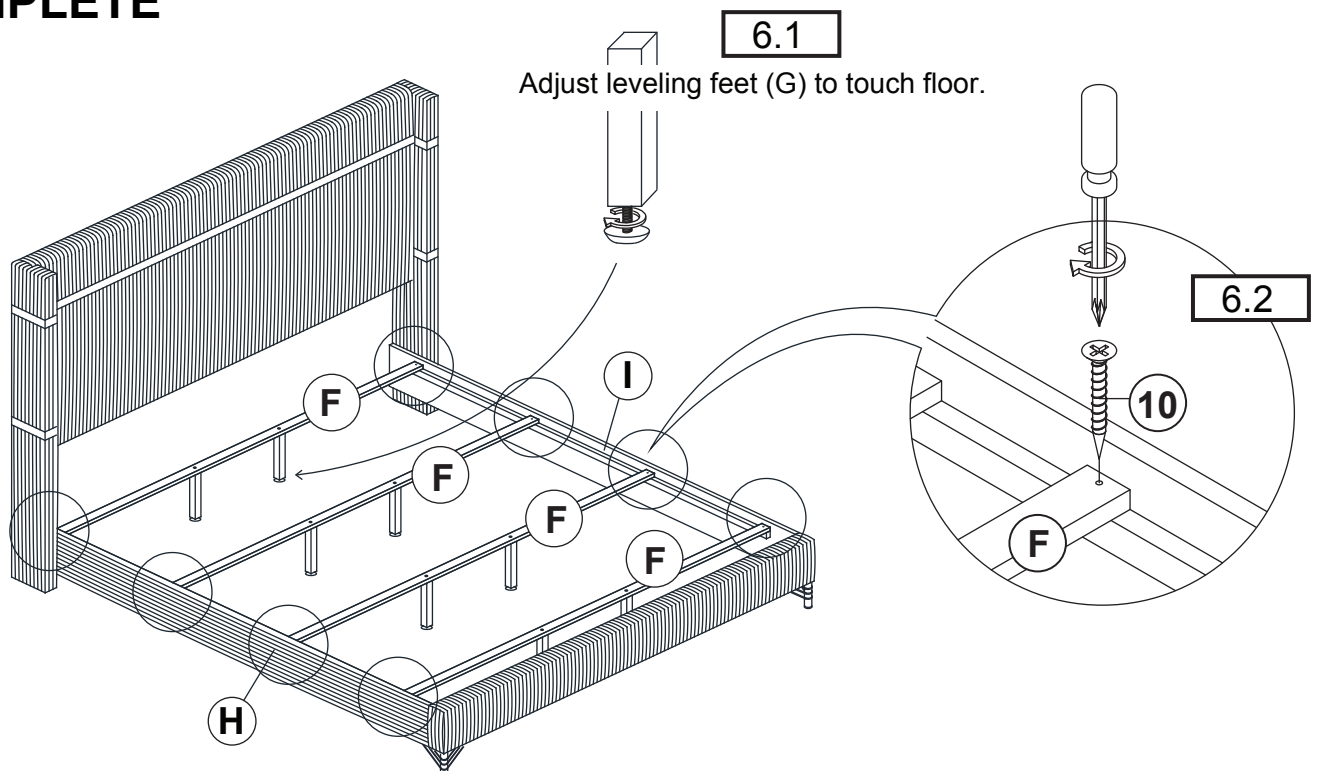

ITEM: **224991KE (B1&B2)**



Inner size: 76.50"W X 81.75"D

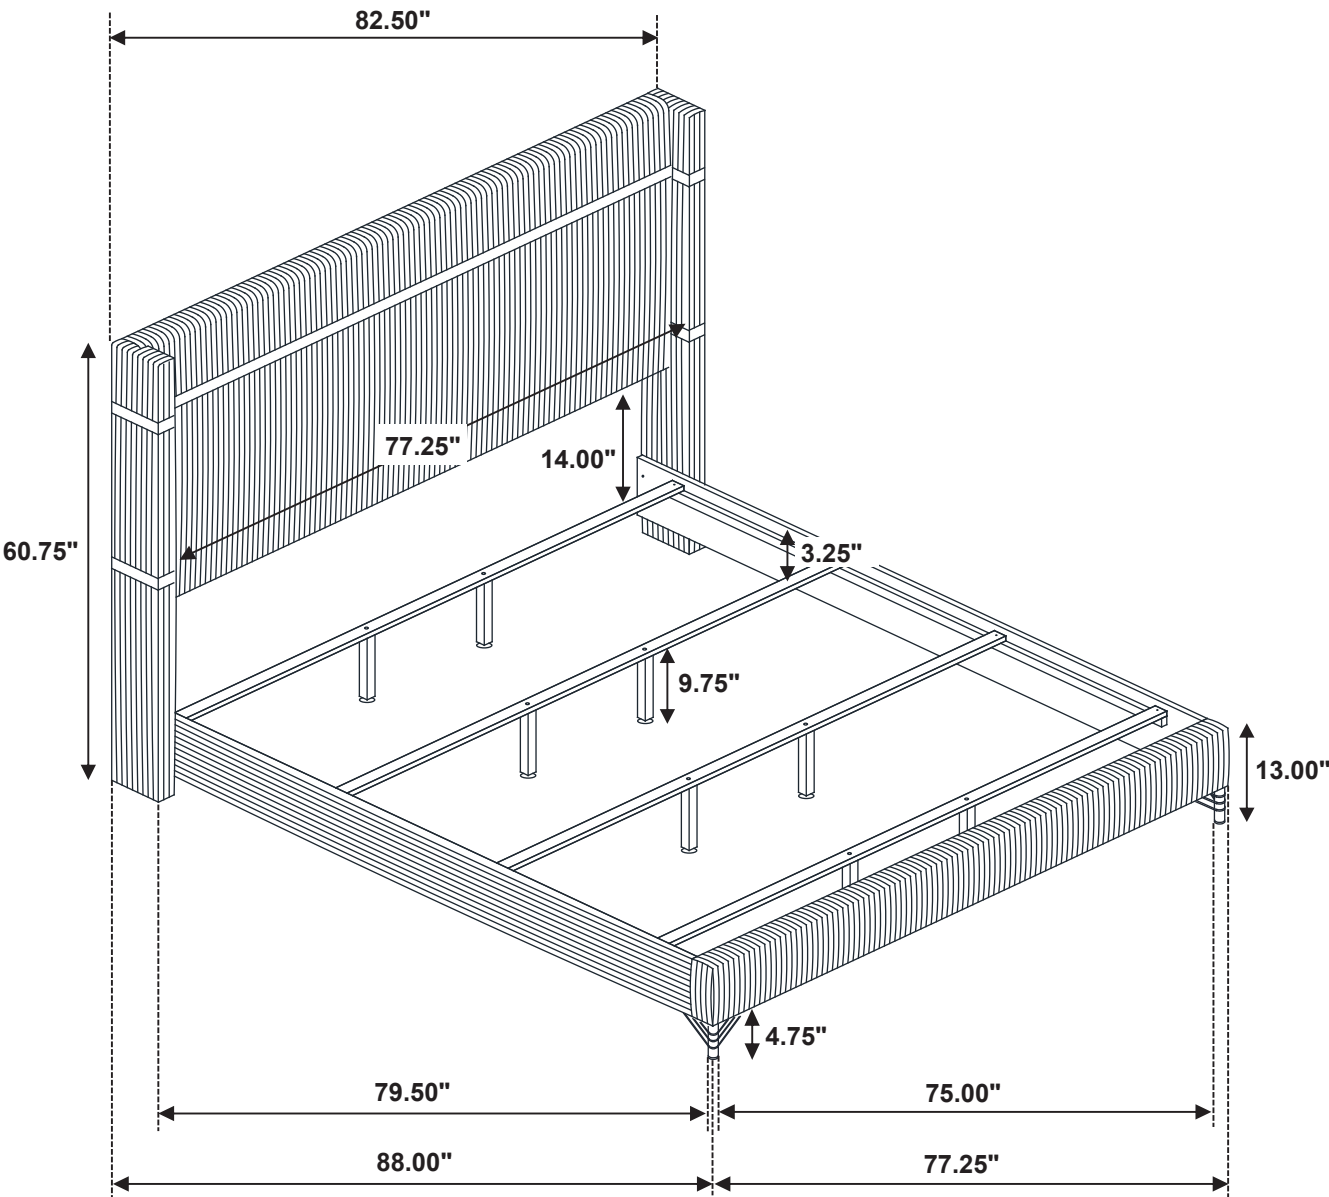

Note : Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224992**  
***Nightstand***

ITEM: **224992**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

**A**      **NIGHTSTAND**

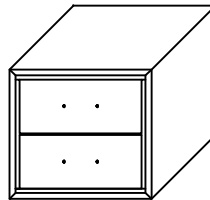

**1PC**

**B**      **METAL LEG**

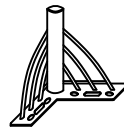

**4PCS**

## HARDWARE IDENTIFICATION

**1**      **BOLT**  
(M6 x 15MM - RBW)



**8PCS**

**2**      **FLAT WASHER**  
(1/4" x 19MM - RBW)



**8PCS**

**3**      **ALLEN WRENCH**  
(M4 x 65MM - BLK)



**1PC**

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224992**


## ASSEMBLY INSTRUCTIONS



### STEP 1

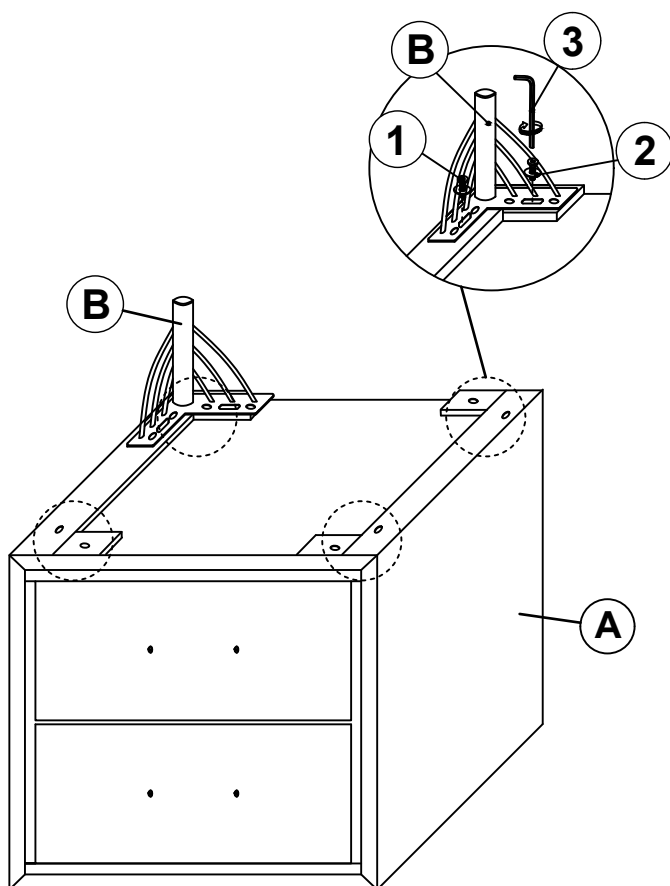


### STEP 2

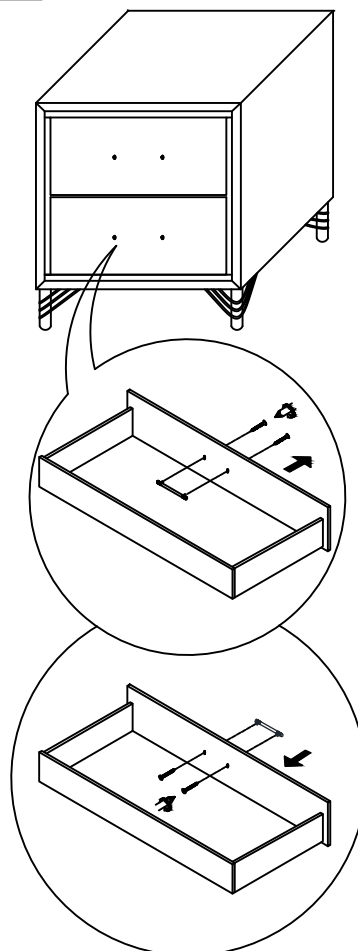

### STEP 3


## COMPLETE

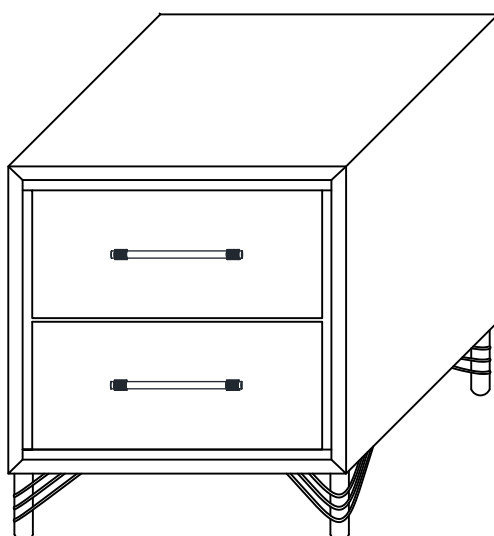

ITEM: **224992**



**Inner Size of Drawer : 15.00"W X 12.25"D X 5.00"H X 0.50"T**

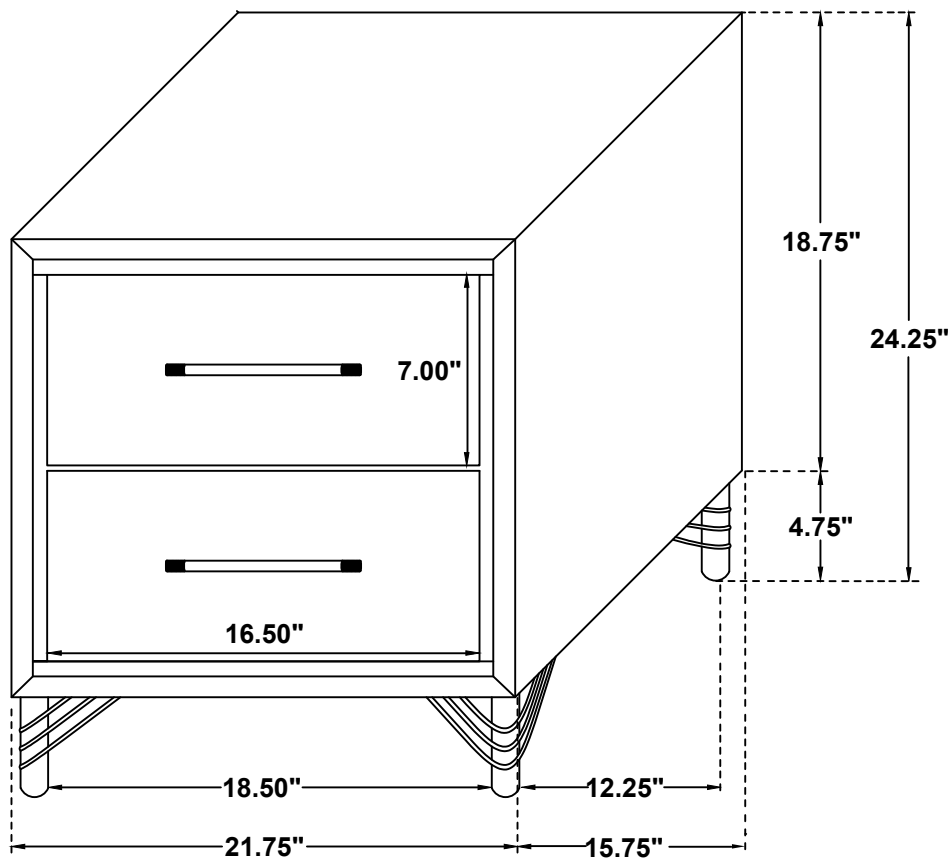

**Note : Dimension tolerance  $\pm 5\%$**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224993**  
**Dresser**

ITEM: **224993**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

**A DRESSER**

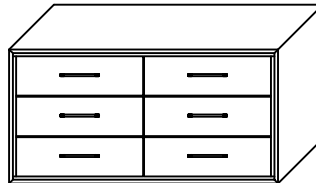

**1PC**

**B METAL LEG**



**4PCS**

**C CENTER SUPPORT LEG WITH LEVELER**



**1PC**

## HARDWARE IDENTIFICATION

**1 BOLT**  
(M6 x 15MM - RBW)



**12PCS**

**2 FLAT WASHER**  
(1/4" x 19MM - RBW)



**8PCS**

**3 ALLEN WRENCH**  
(M4 x 65MM - BLK)



**1PC**

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224993**



## ASSEMBLY INSTRUCTIONS





### STEP 1

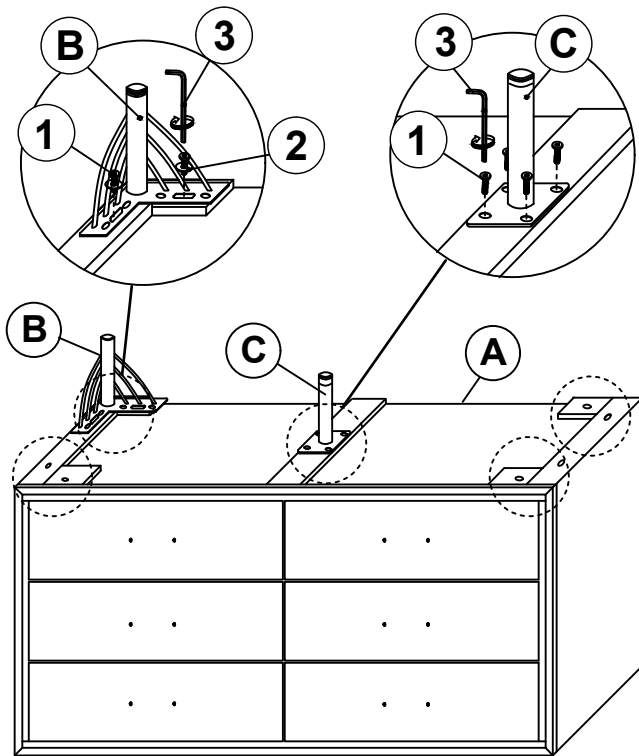

### STEP 2

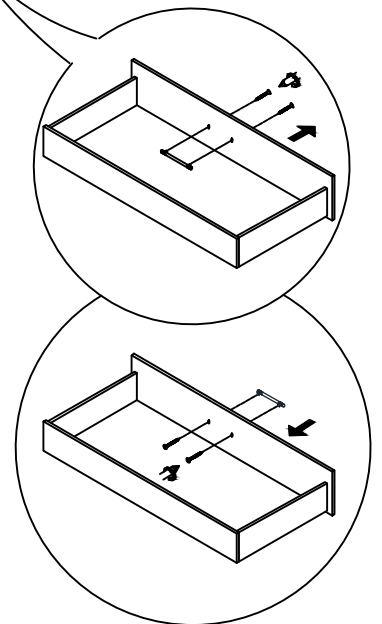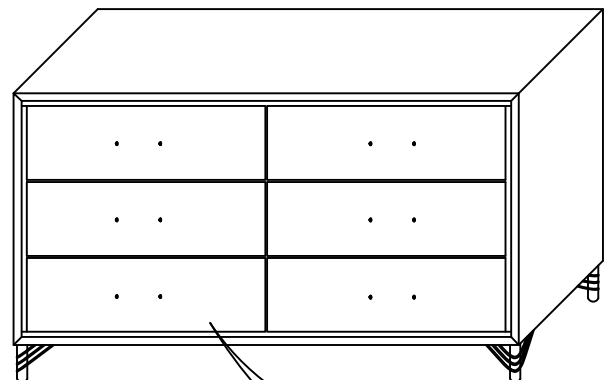

### STEP 3 COMPLETE

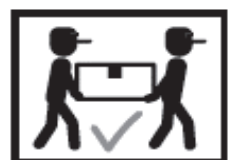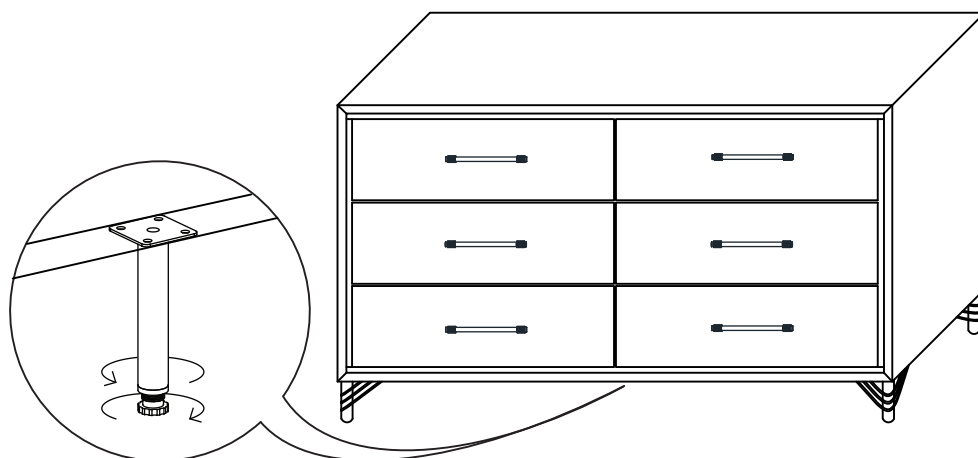

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

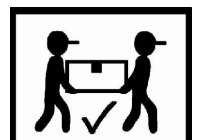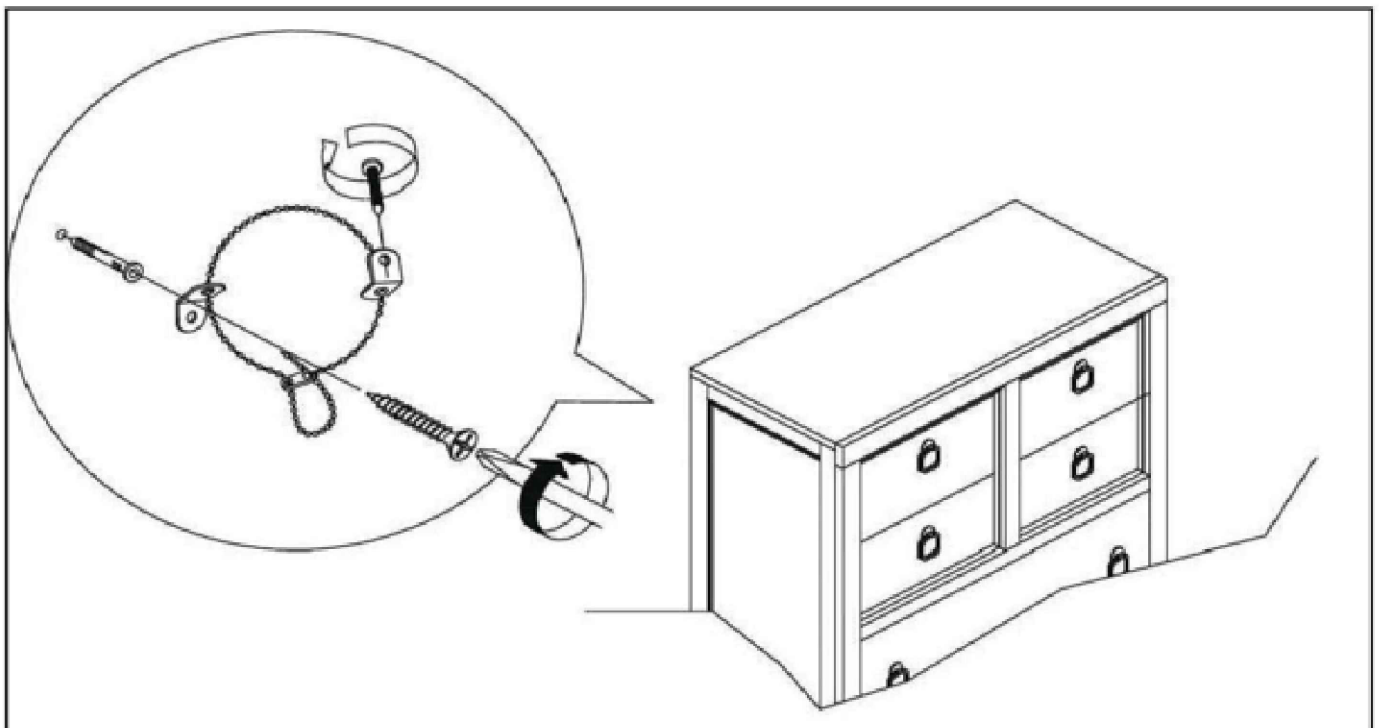

ITEM: **224993**



**Inner Size of Drawer : 23.00"W X 12.25"D X 5.00"H X 0.50"T**

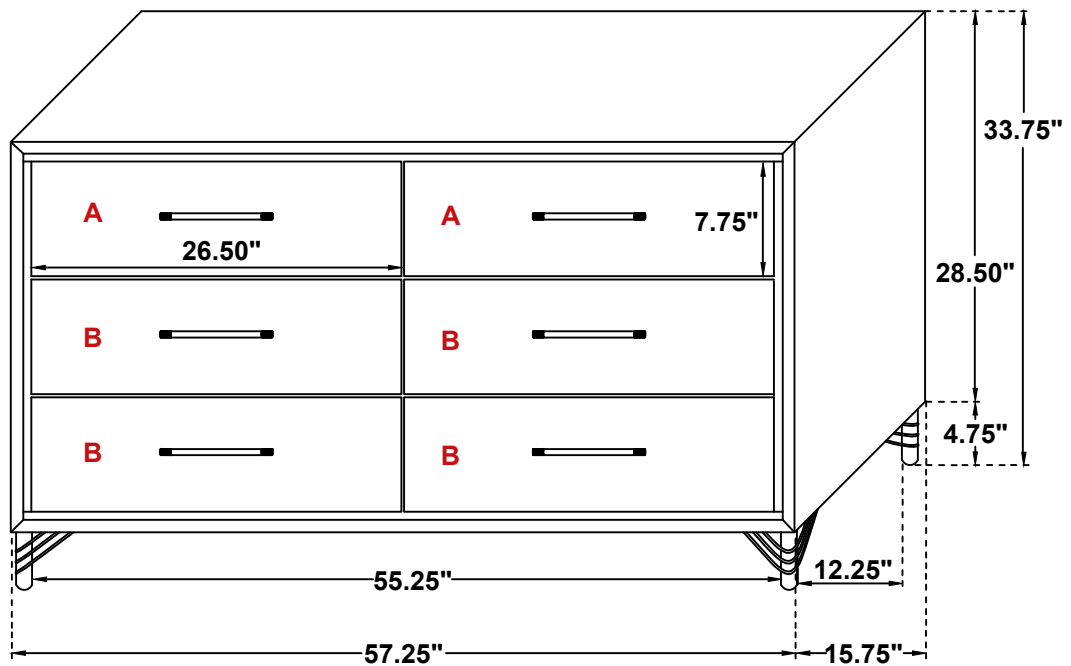

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224994**  
***Mirror***

ITEM: **224994**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A MIRROR

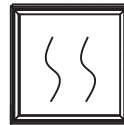

1PC

B MIRROR SUPPORT  
(PACKED WITH MIRROR)



2PCS

C DRESSER  
\*FROM BOX ITEM 224993



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40mm - RBW)



8PCS

2 LOCK WASHER  
(1/4" x 12Ø - RBW)



8PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH  
(M4 x 65mm - BLK)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224994**

## ASSEMBLY INSTRUCTIONS


### STEP 1

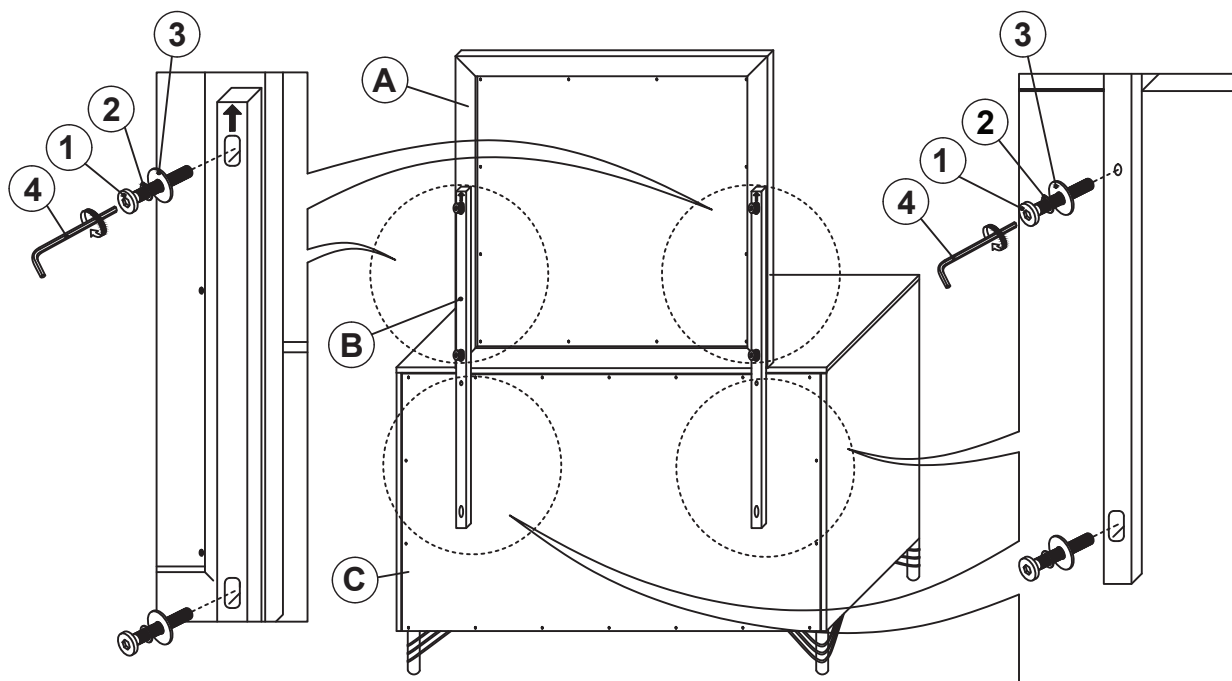


\* BACK VIEW

### STEP 2

### COMPLETE

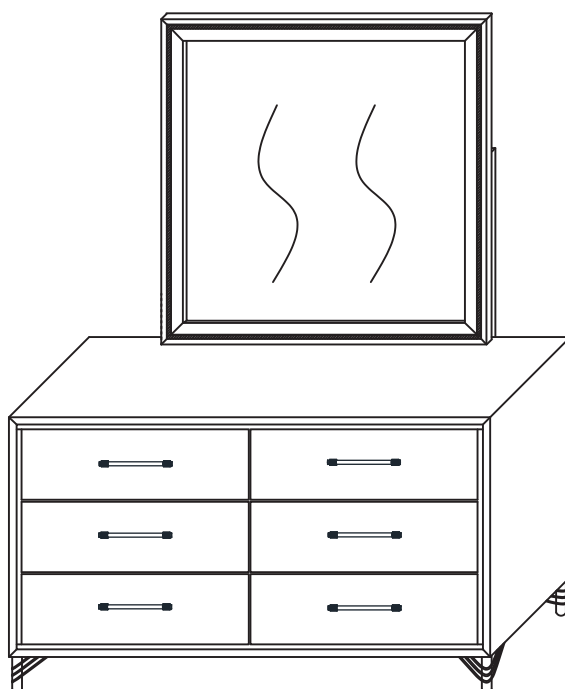

ITEM: **224994**

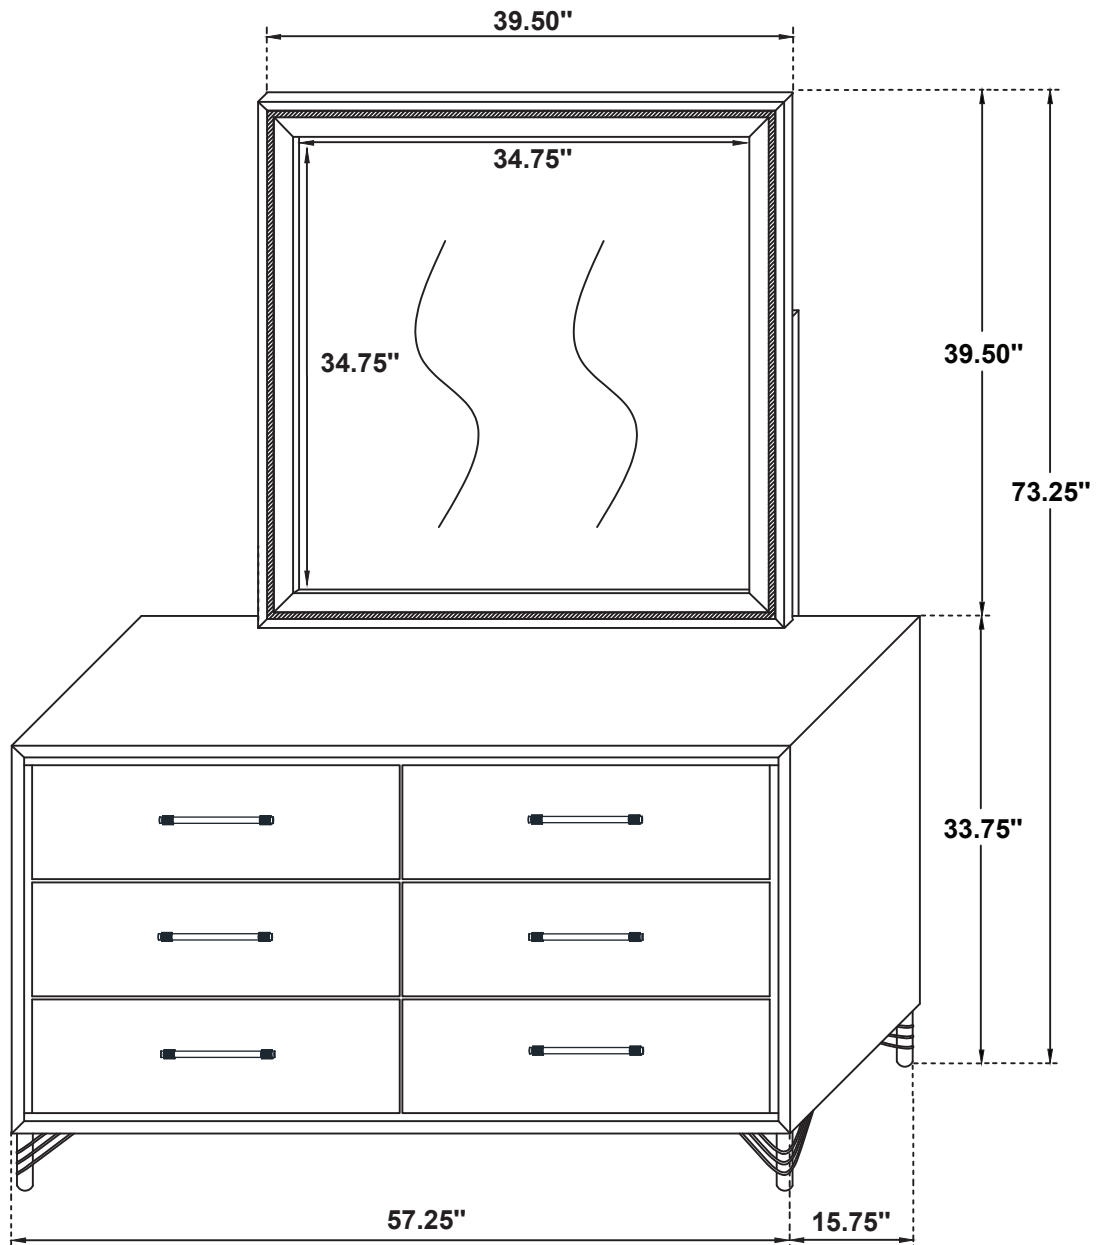

**Note : Dimension tolerance  $\pm$  5%**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224995**  
**Chest**

ITEM: **224995**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

**A**      **CHEST**

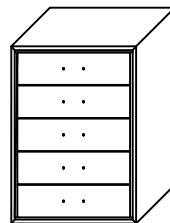

**1PC**

**B**      **METAL LEG**



**4PCS**

## HARDWARE IDENTIFICATION

**1**      **BOLT**  
(M6 x 15MM - RBW)



**8PCS**

**2**      **FLAT WASHER**  
(1/4" x 19MM - RBW)



**8PCS**

**3**      **ALLEN WRENCH**  
(M4 x 65MM - BLK)



**1PC**

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **224995**


## ASSEMBLY INSTRUCTIONS





### STEP 1

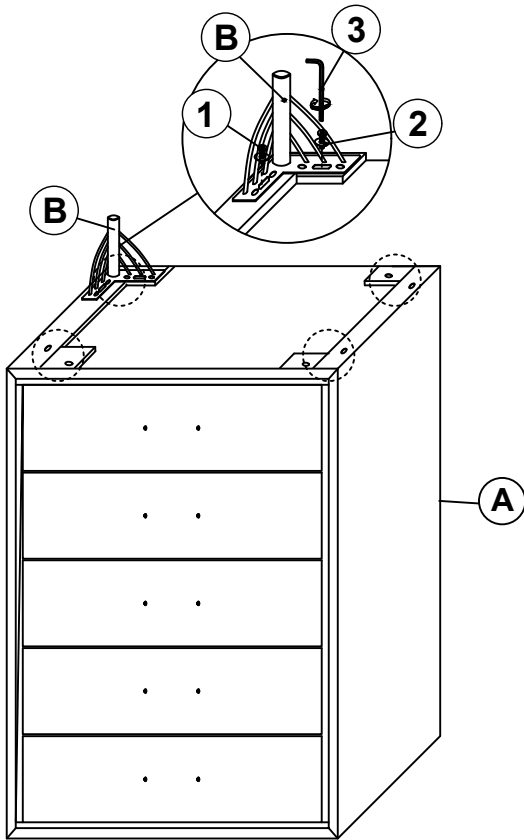

### STEP 2

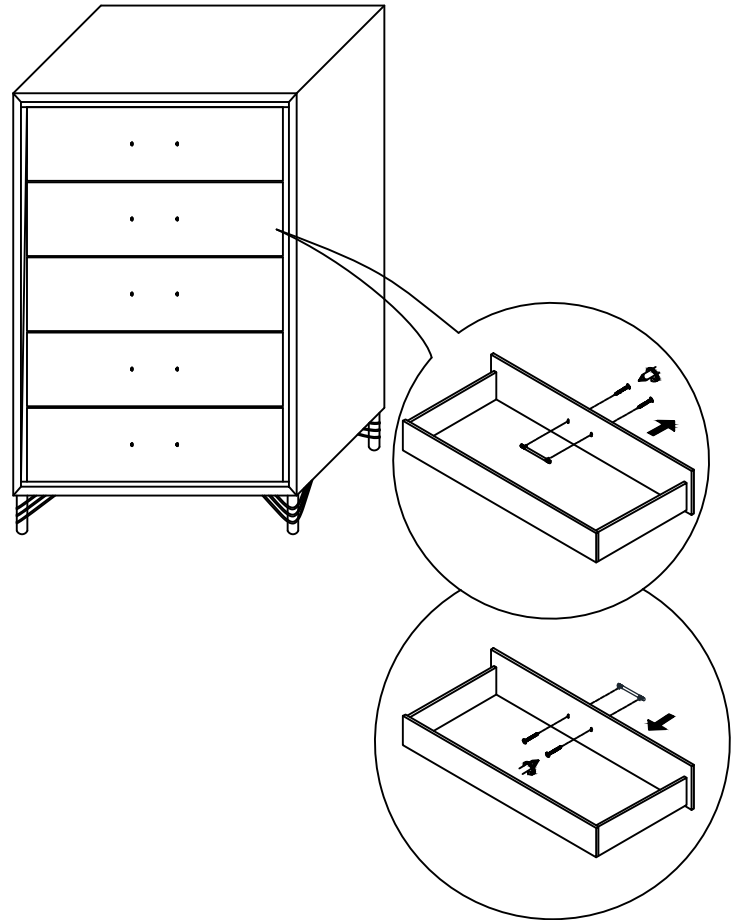

### STEP 3 **COMPLETE**

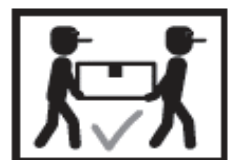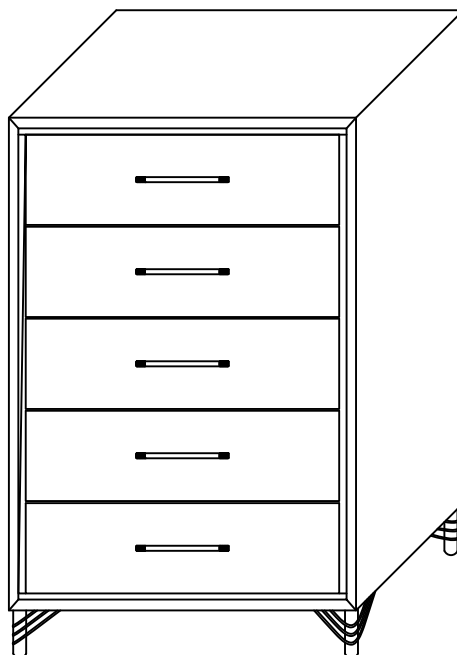

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

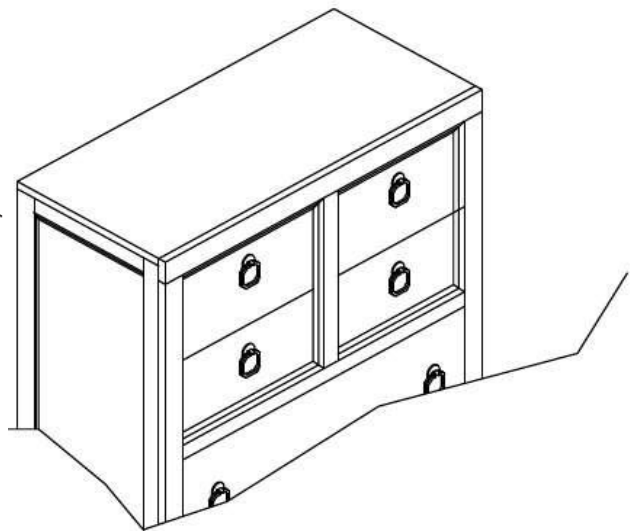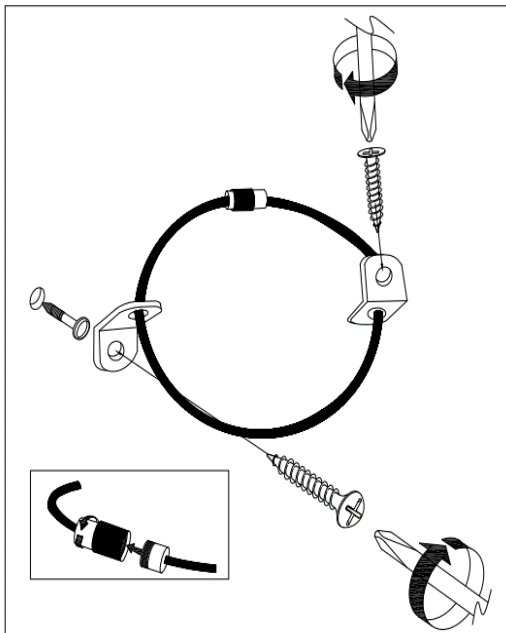

ITEM: **224995**



**Inner Size of Drawer: 23.00"W X 12.25"D X 5.00"H X 0.50"T**

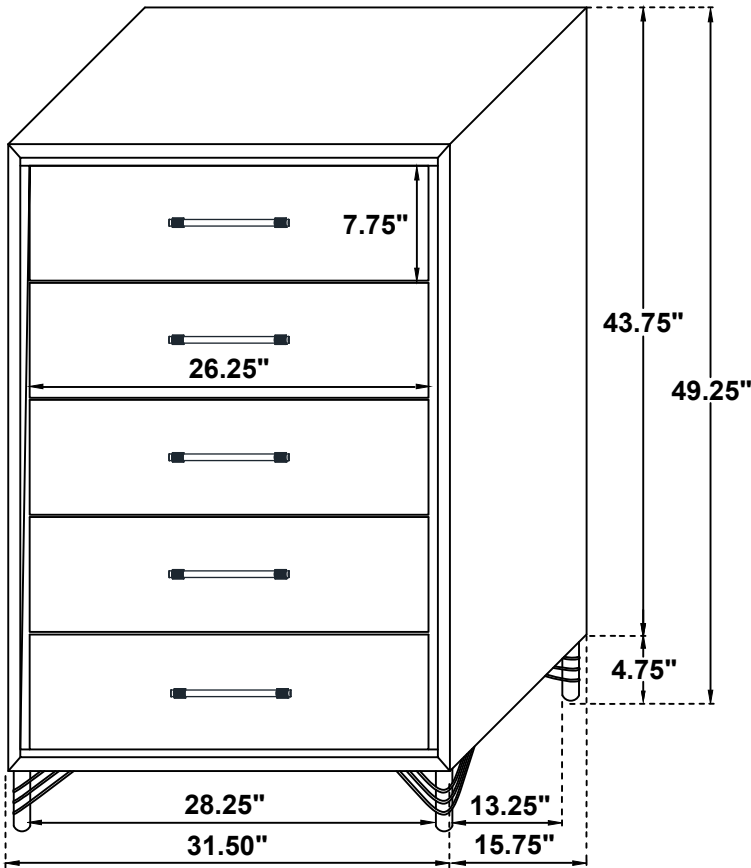

**Note : Dimension tolerance  $\pm$  5%**