



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223632**  
**Nightstand**

ITEM: **223632**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

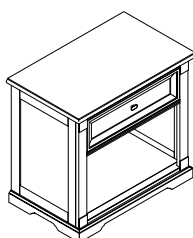

1PC

B BUN FOOT




4PCS

ITEM: **223632**


## ASSEMBLY INSTRUCTIONS



### STEP 1

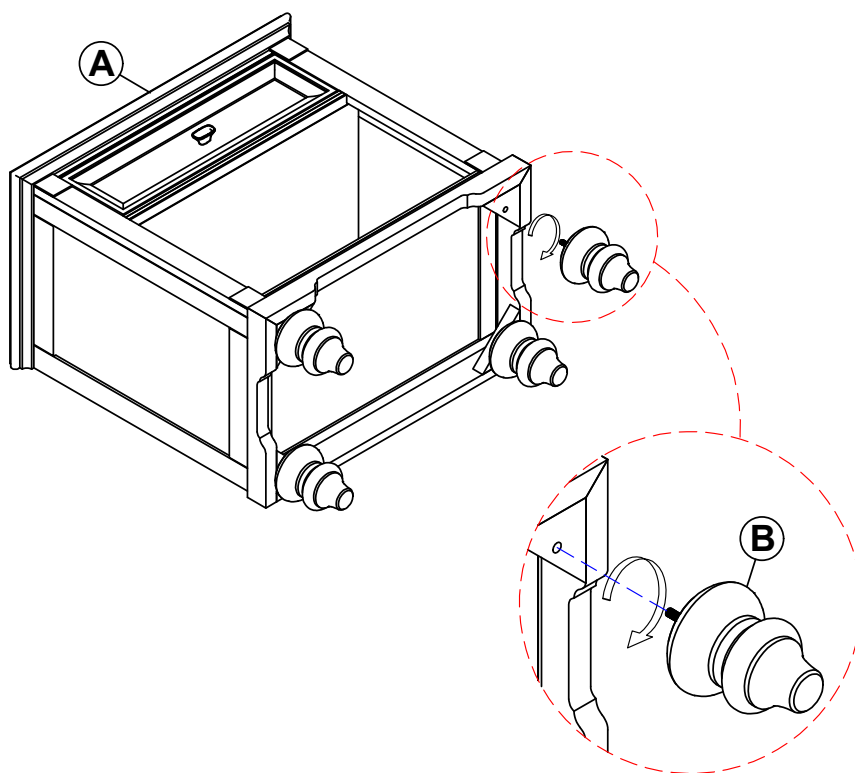

### STEP 2 COMPLETE

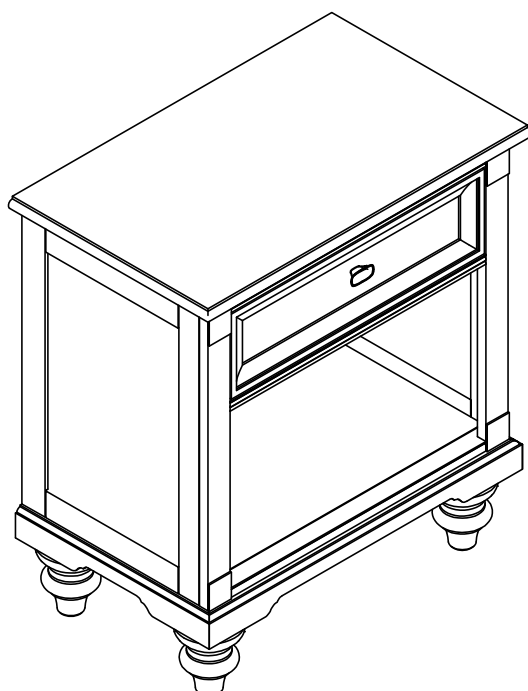

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

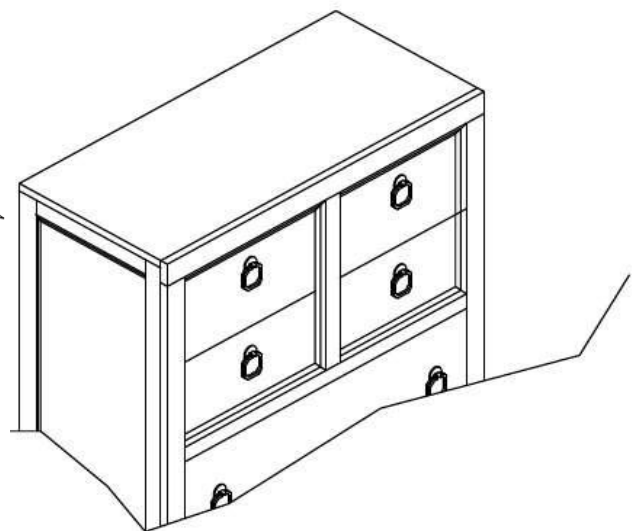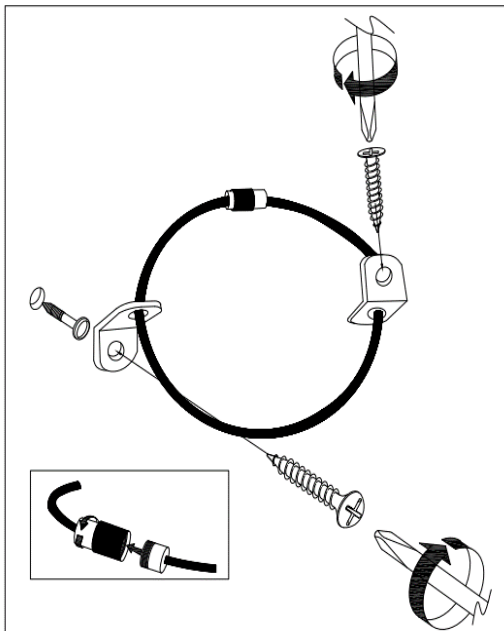

ITEM: **223632**



**Inner Size of Drawer: 19.75"W X 12.25"D X 5.00"H X 0.50"T**

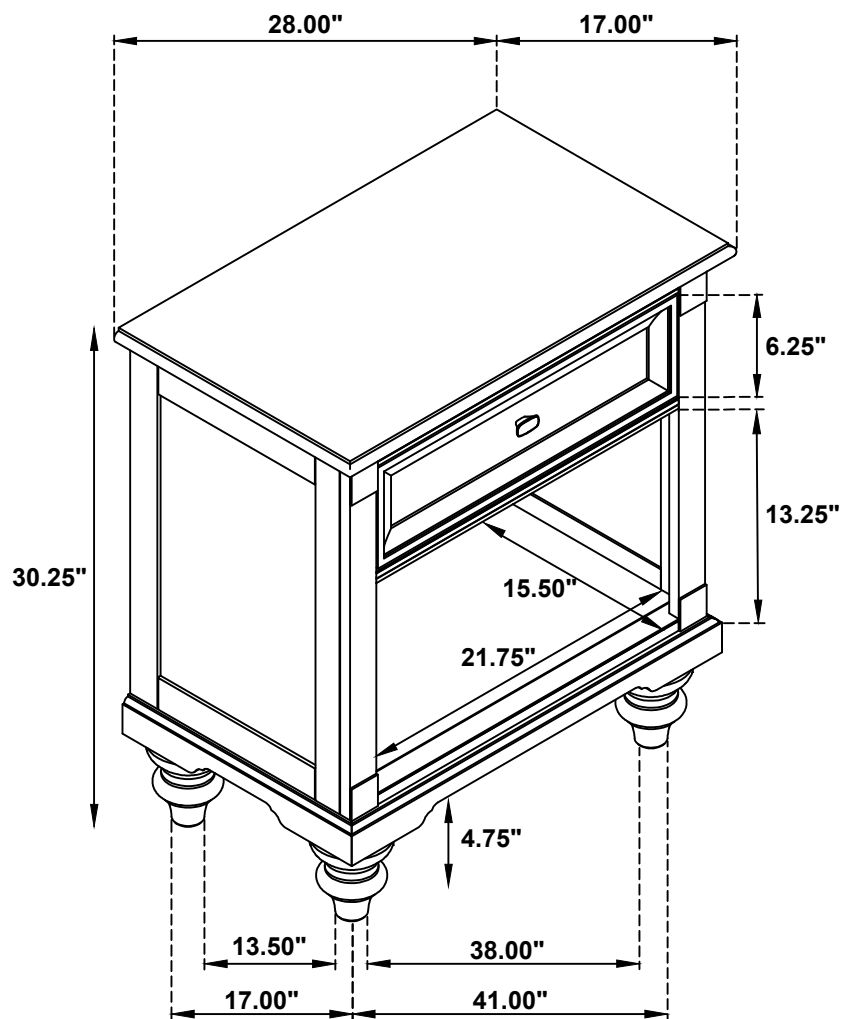

**Note: Dimension tolerance  $\pm 5\%$**



ASSEMBLY INSTRUCTIONS  
COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223633**  
**Dresser**

ITEM: **223633**



**ASSEMBLY INSTRUCTIONS**

**ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



**WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




**ASSEMBLY TIME**

**5 MINUTES**

**PARTS IDENTIFICATION**

**A      DRESSER**

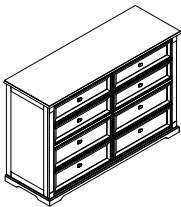

**1PC**

**B      BUN FOOT**



**4PCS**

**C      CENTER SUPPORT LEG  
WITH LEVELER**




**1PC**

ITEM: **223633**


## ASSEMBLY INSTRUCTIONS



### STEP 1

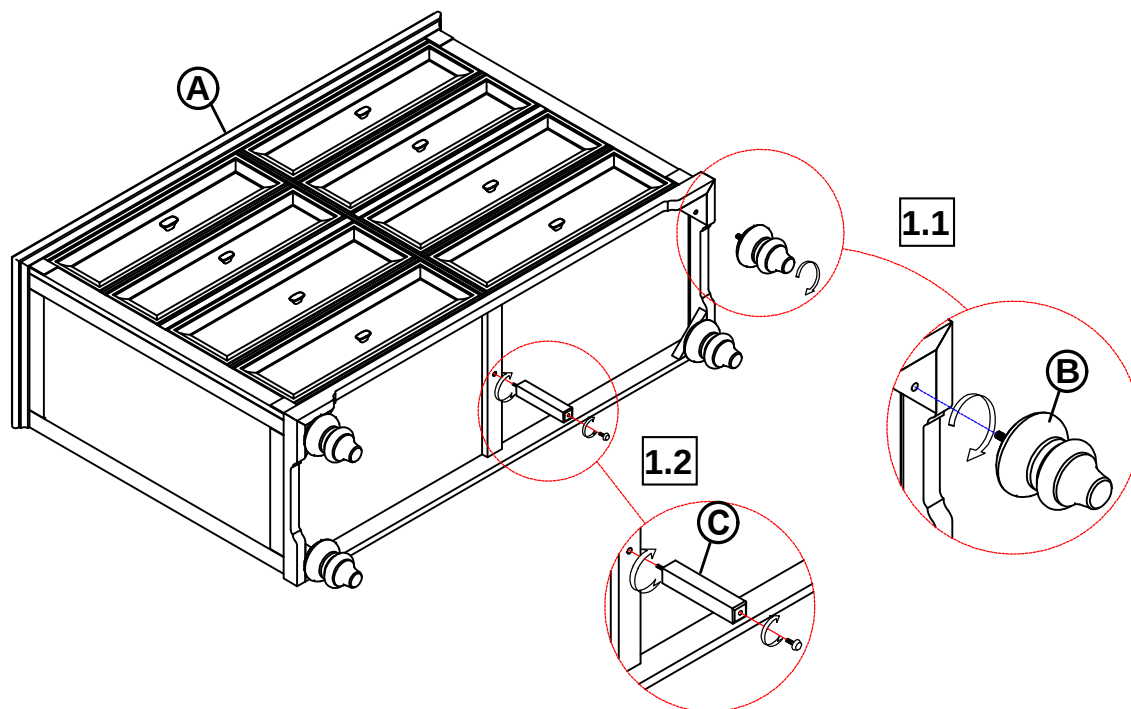

### STEP 2 COMPLETE

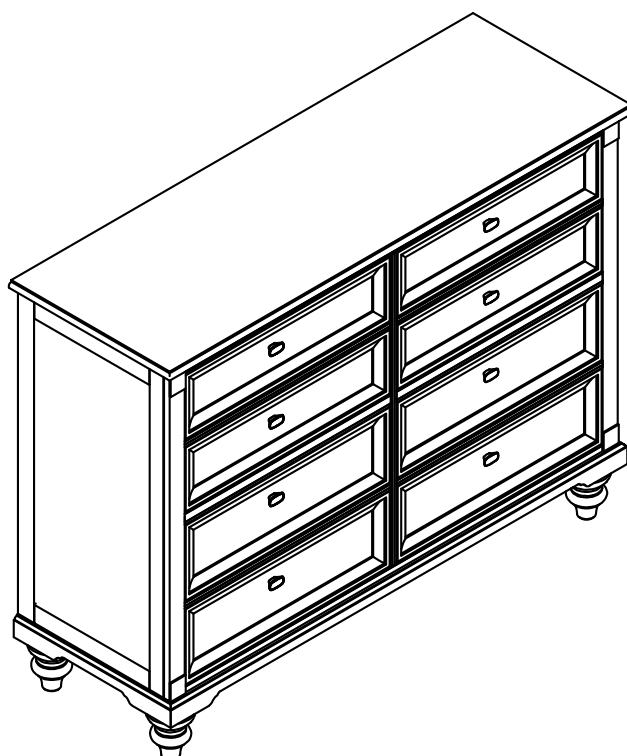

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

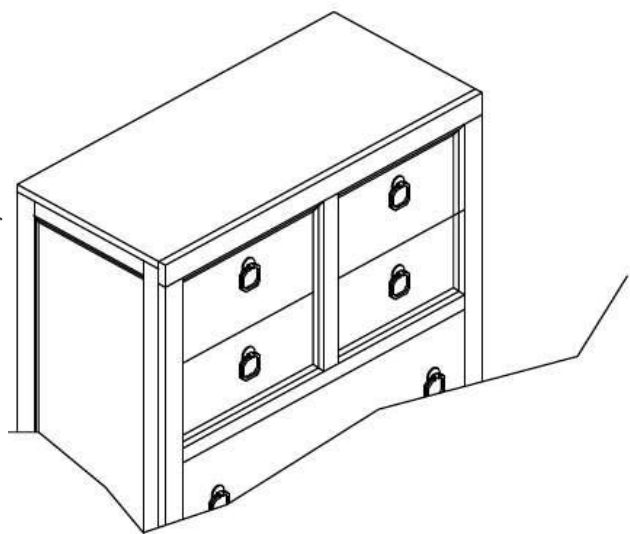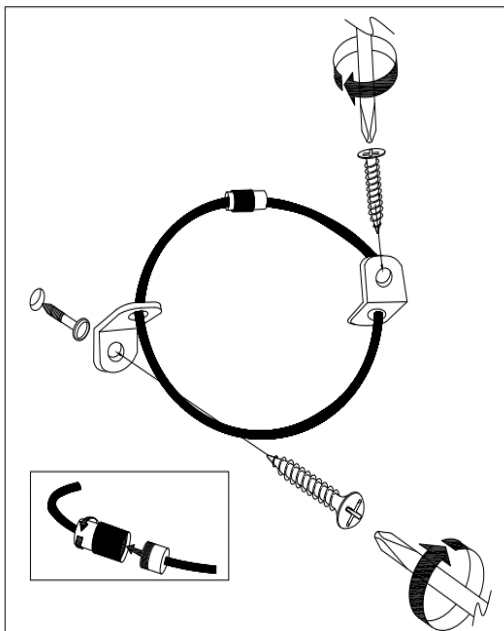


ITEM: **223633**



Inner Size of Drawer A: 23.50"W X 13.75"D X 5.00"H X 0.50"T

Inner Size of Drawer B: 23.50"W X 13.75"D X 6.25"H X 0.50"T

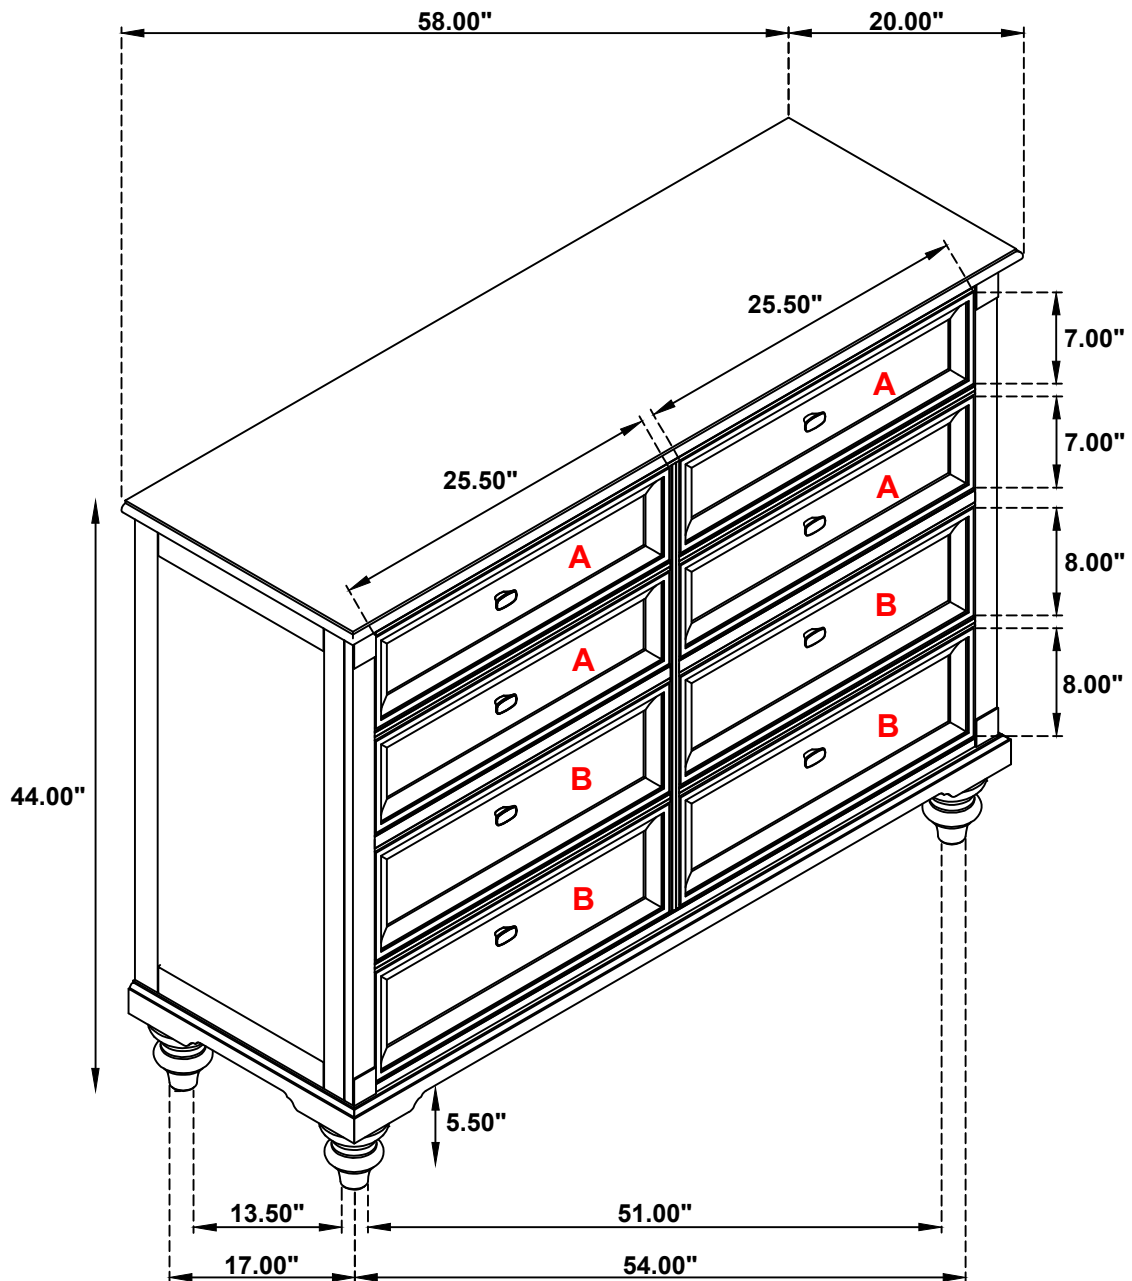

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223634**  
**Mirror**

ITEM: **223634**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A **DRESSER**  
FROM BOX ITEM #223633

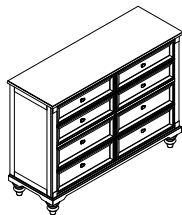

1PC

B **MIRROR**

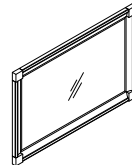

1PC


C **MIRROR SUPPORT**  
(PACKED WITH DRESSER)



2PCS


## HARDWARE IDENTIFICATION

1 **BOLT**  
(Φ1/4" x 38mm - RBW)



6PCS

2 **LOCK WASHER**  
(Φ1/4" - RBW)



6PCS

3 **FLAT WASHER**  
(Φ1/4" - RBW)



6PCS

4 **ALLEN WRENCH**  
(4MM - RBW)




1PC

ITEM: **223634**


## ASSEMBLY INSTRUCTIONS




### STEP 1

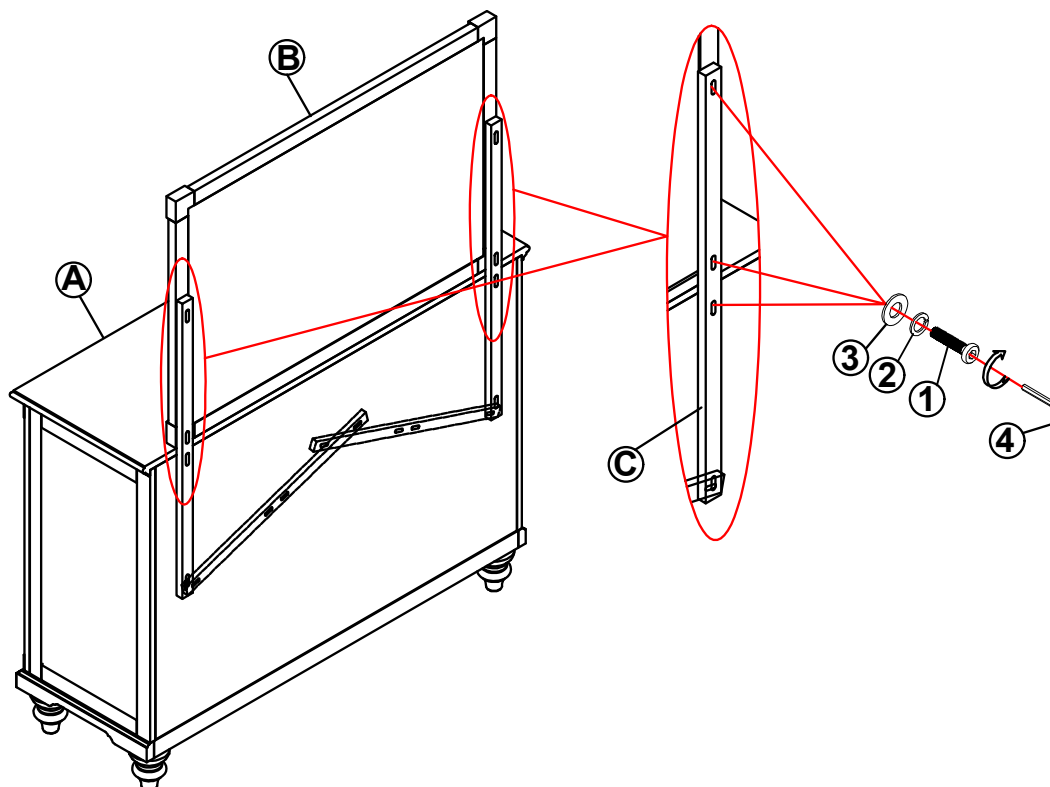

### STEP 2 COMPLETE

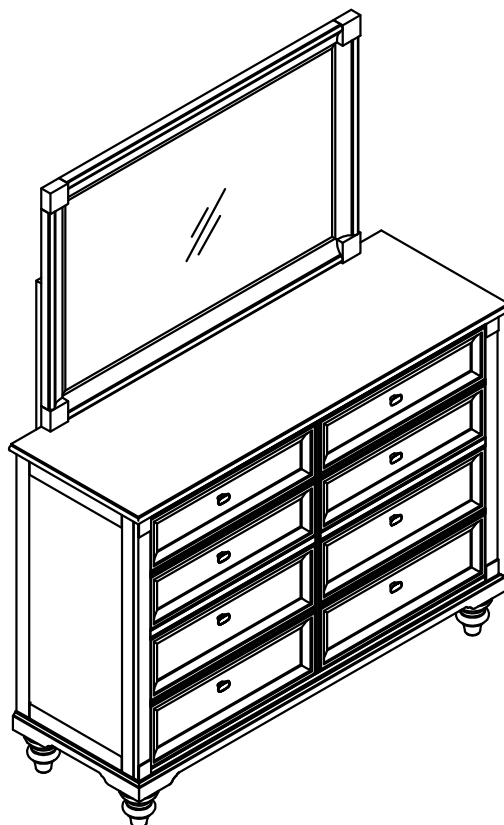

ITEM: **223634**

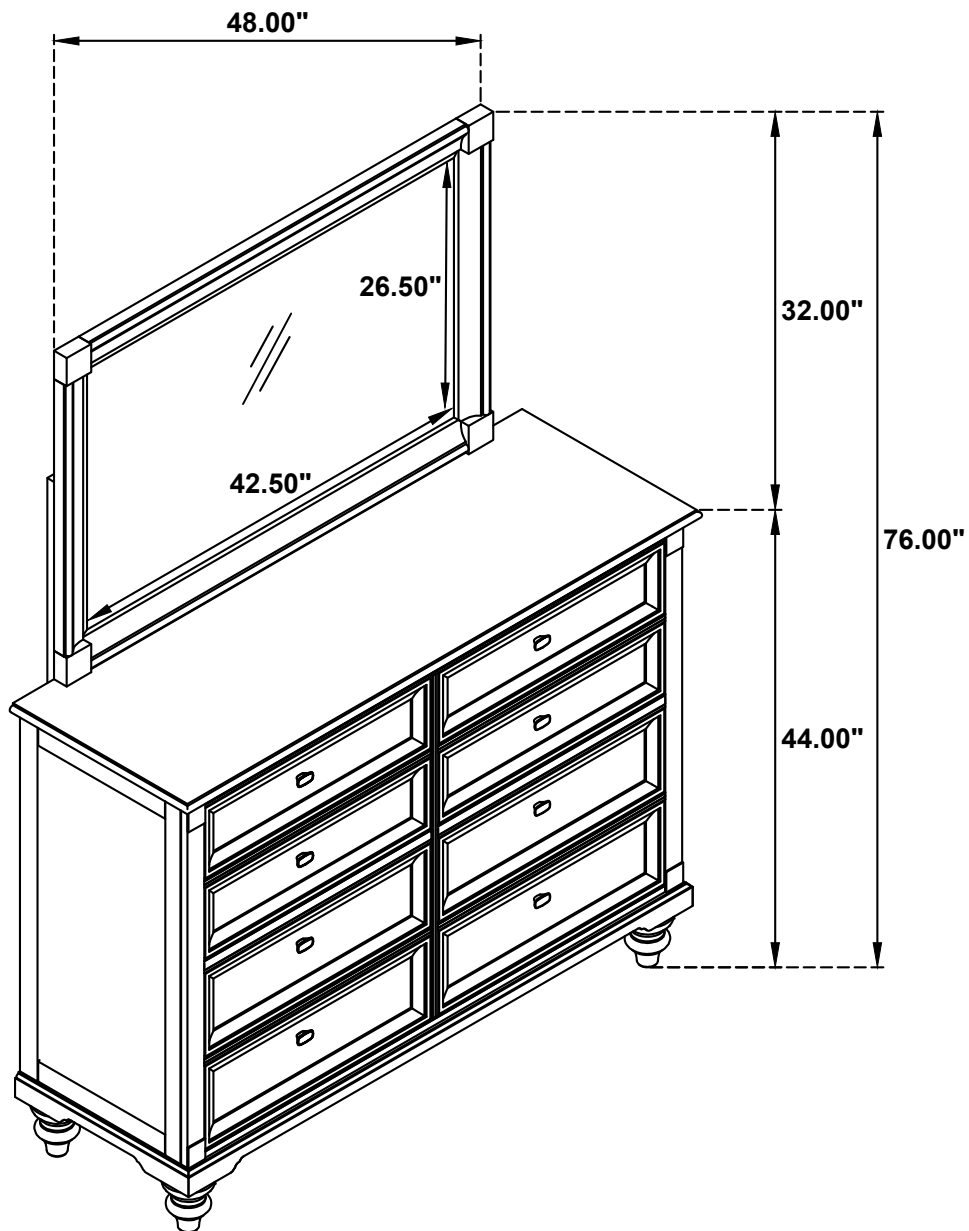

Note: Dimension tolerance  $\pm 5\%$



ASSEMBLY INSTRUCTIONS  
COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223635**  
**Chest**

ITEM: **223635**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A CHEST

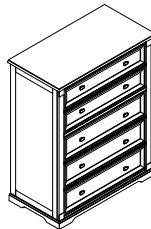

1PC

B BUN FOOT




4PCS


ITEM: **223635**

## ASSEMBLY INSTRUCTIONS

### STEP 1

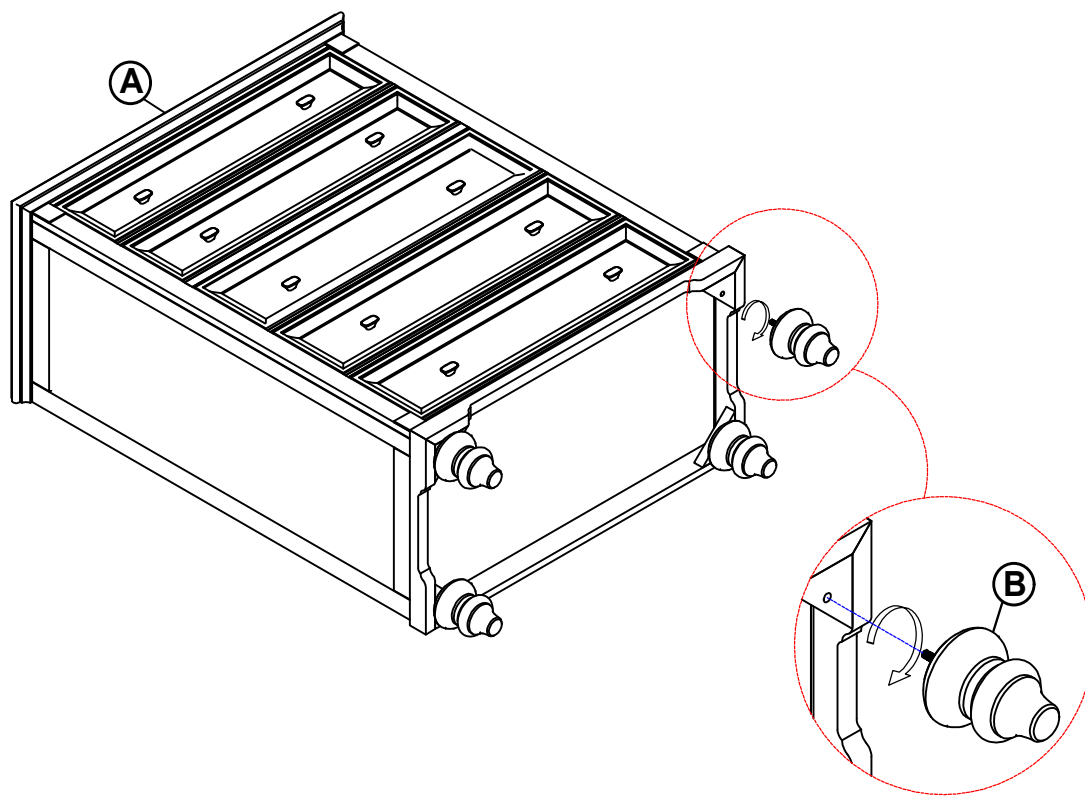

### STEP 2 COMPLETE

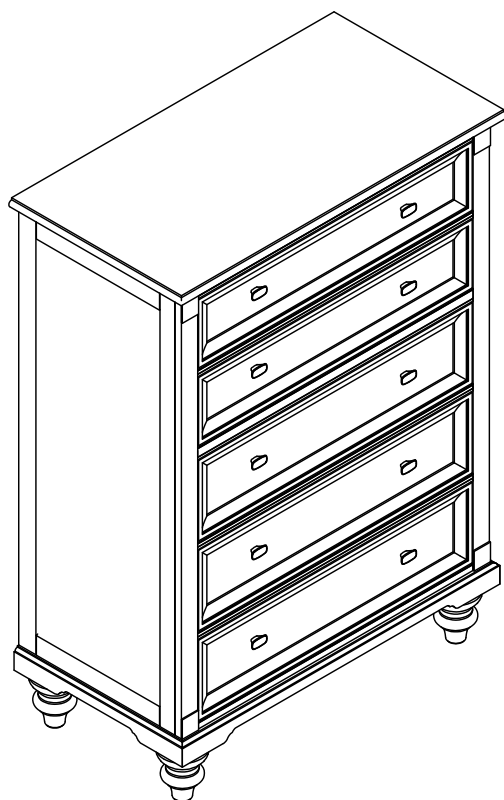

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

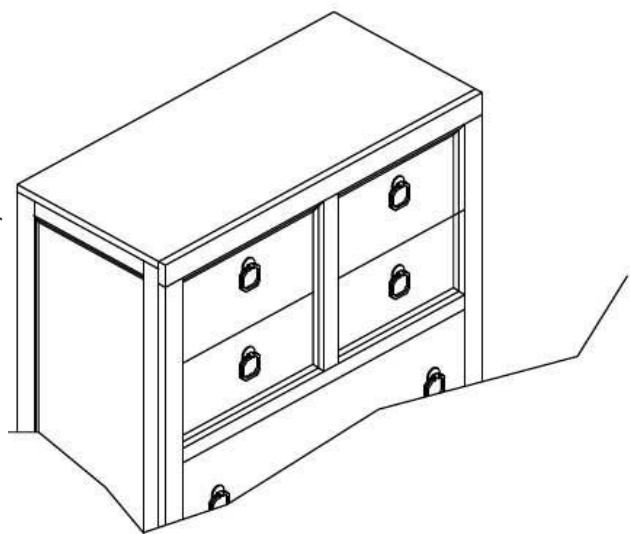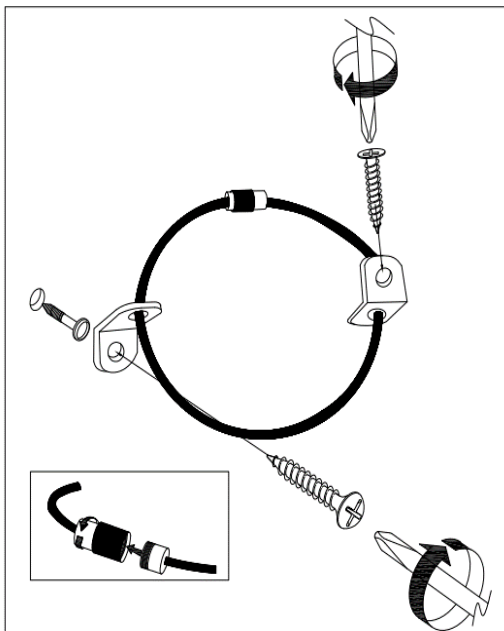


ITEM: **223635**



Inner Size of Drawer A: 30.00"W X 14.00"D X 5.00"H X 0.50"T


Inner Size of Drawer B: 30.00"W X 14.00"D X 6.25"H X 0.50"T

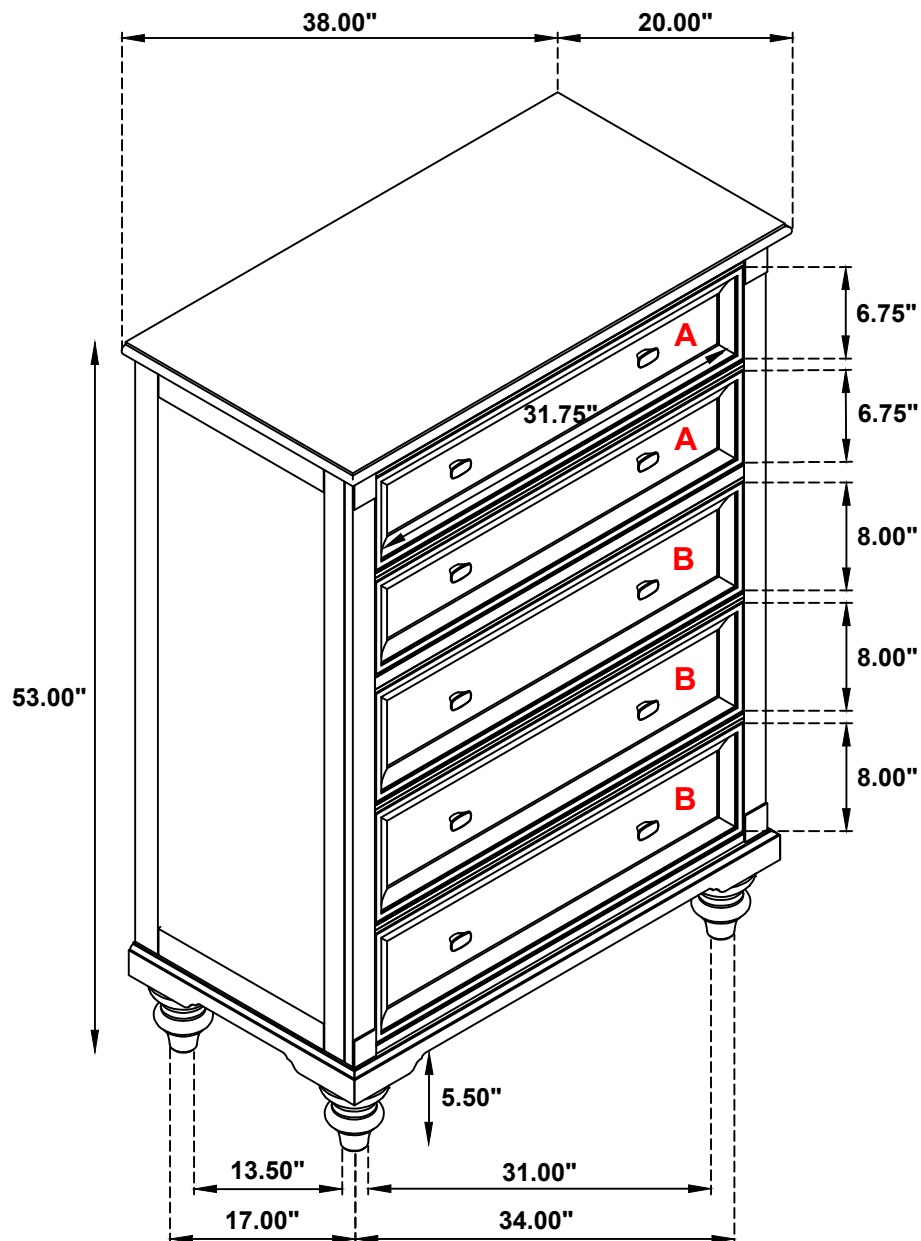

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

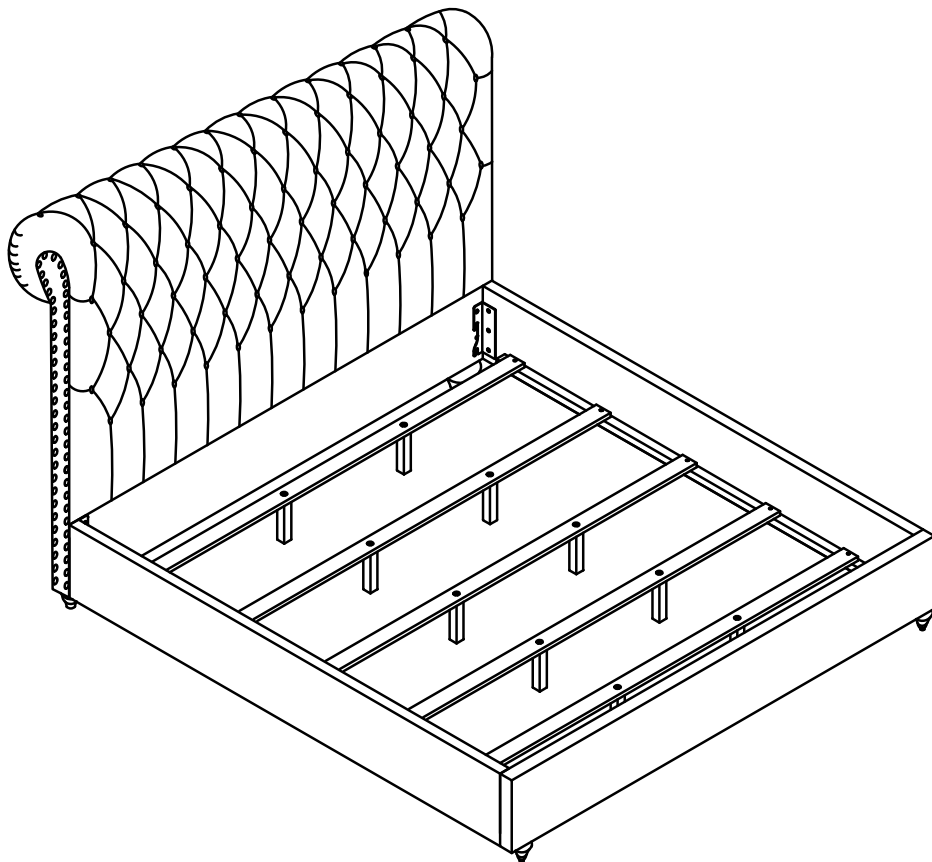

*Fine Furniture for every stage of life*

## **360341KE(B1&B2)** **Eastern King Bed**

# ITEM: 360341KE(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

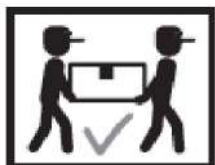


ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD PANEL

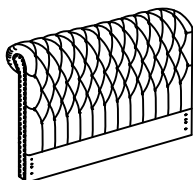

1PC

B HEADBOARD LEG



2PCS

### B2 (BOX 2)

C FOOTBOARD PANEL



1PC

D FOOTBOARD LEG



2PCS

E BED RAIL




2PCS

F BED SLAT



5PCS


G BED SLAT SUPPORT  
WITH LEVELER



10PCS

HB


360341KE(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

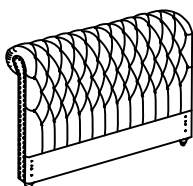

1PC

FB

360341KE(B2)  
FROM BOX 2  
FOOTBOARD  
COMPLETE



1PC

# ITEM: 360341KE(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 360341KE(B2)

|   |                                                                             |                                                                                     |       |   |                                                                            |                                                                                       |       |
|---|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------|---|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-------|
| 1 | <b>ALLEN WRENCH</b><br>(5mm - BLK)                                          |    | 1PC   | 2 | <b>BOLT</b><br>(Ø 5/16" x 32mm - BLK)                                      |    | 24PCS |
| 3 | <b>HEADBOARD CORNER BRACKET - RIGHT</b><br>(200mm x 60mm x 40mm x2mm - BLK) |   | 2PCS  | 4 | <b>HEADBOARD CORNER BRACKET - LEFT</b><br>(200mm x 60mm x 40mm x2mm - BLK) |   | 2PCS  |
| 5 | <b>LOCK WASHER</b><br>(Ø 5/16" - BLK)                                       |  | 24PCS | 6 | <b>FLAT WASHER</b><br>(Ø 5/16" - BLK)                                      |  | 24PCS |
| 7 | <b>FLAT HEAD SCREW</b><br>(M4 x 30mm - BLK)                                 |  | 10PCS |   |                                                                            |                                                                                       |       |


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **360341KE(B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

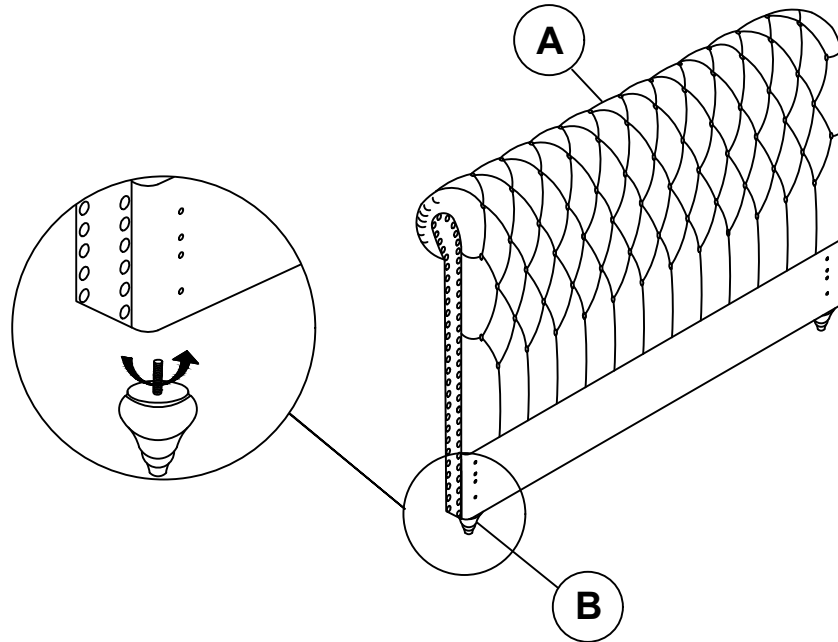


**STEP 2**

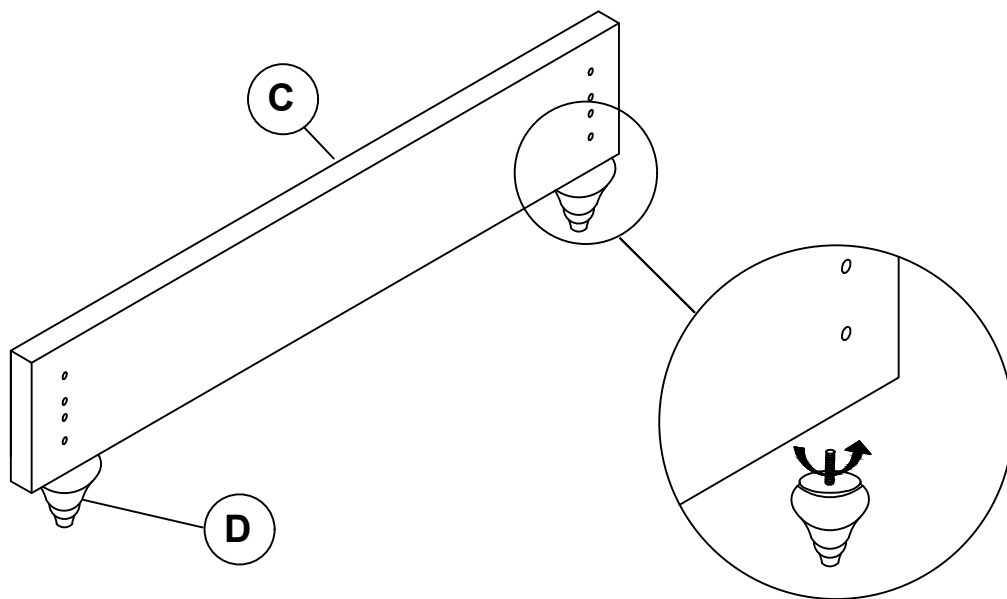


ITEM: **360341KE(B1&B2)**

## ASSEMBLY INSTRUCTIONS

### STEP 3

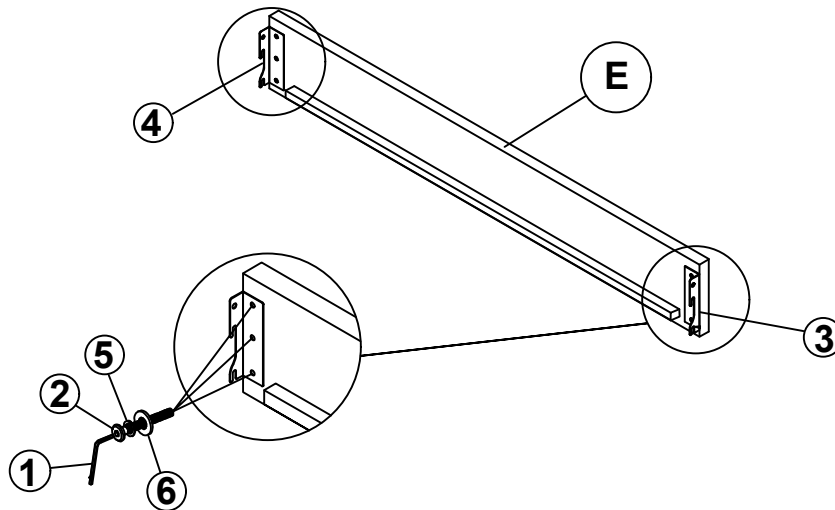

### STEP 4

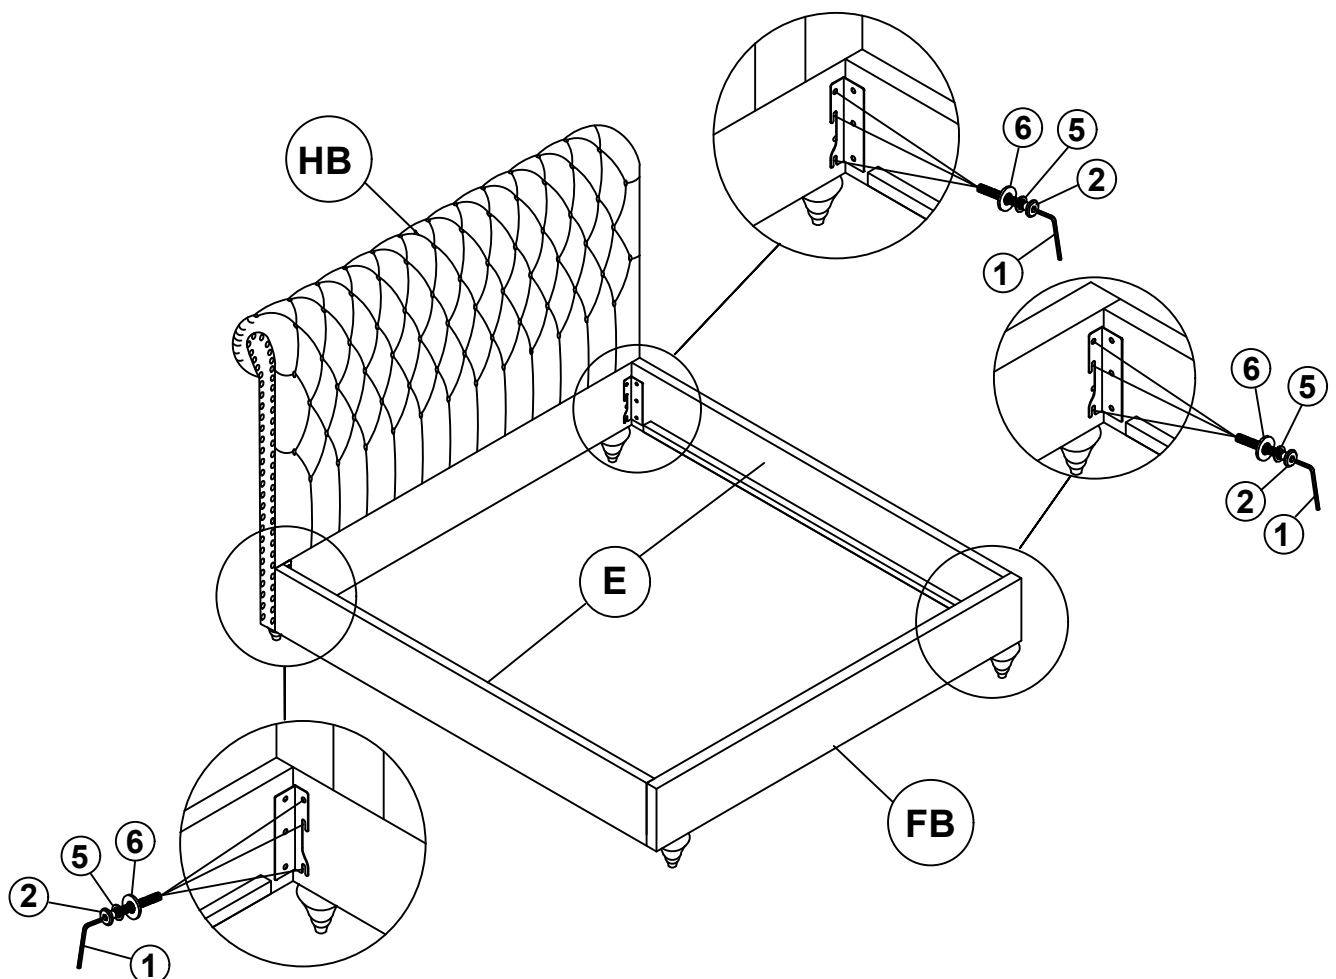


ITEM: **360341KE(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 5

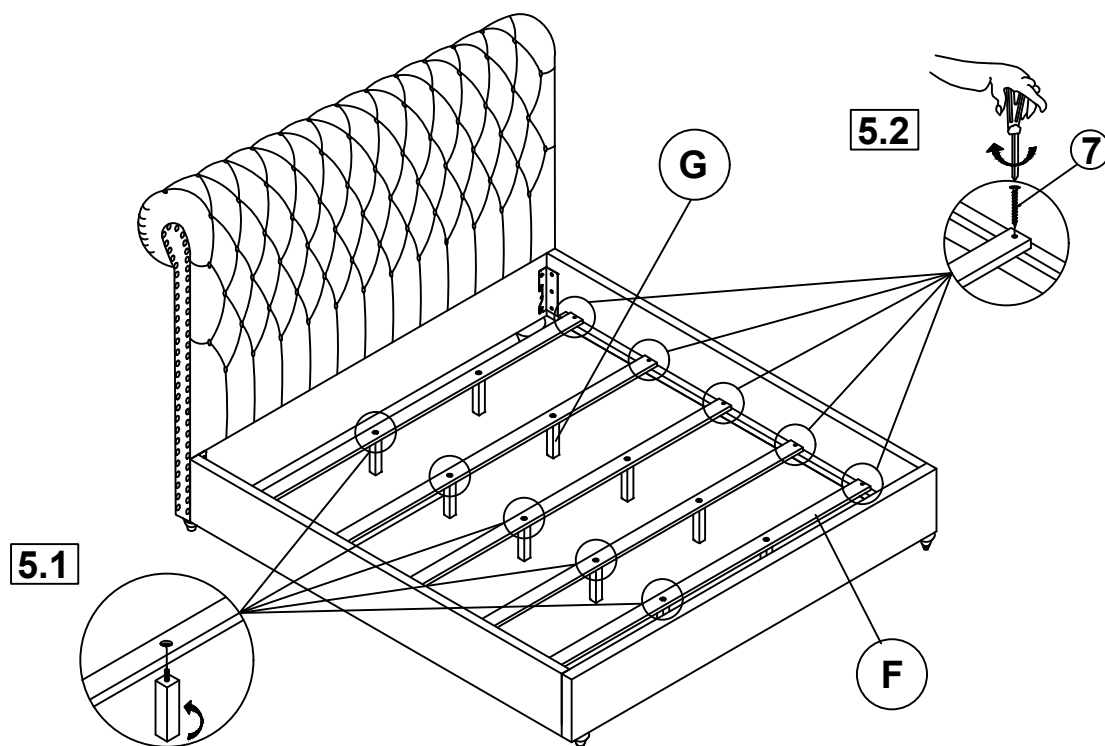


### STEP 6 COMPLETE

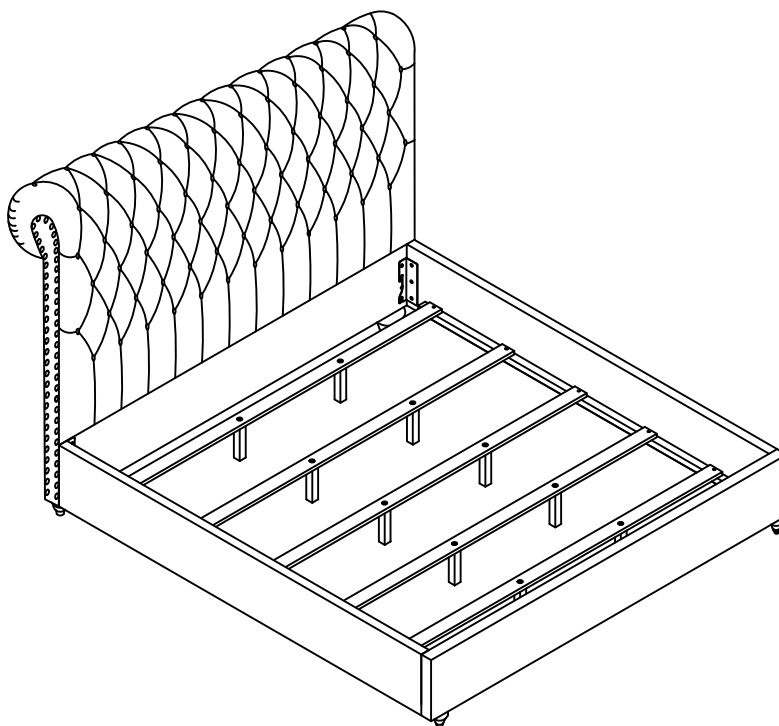

ITEM: **360341KE(B1&B2)**



Inner Size : 77.00"W x 81.00"D

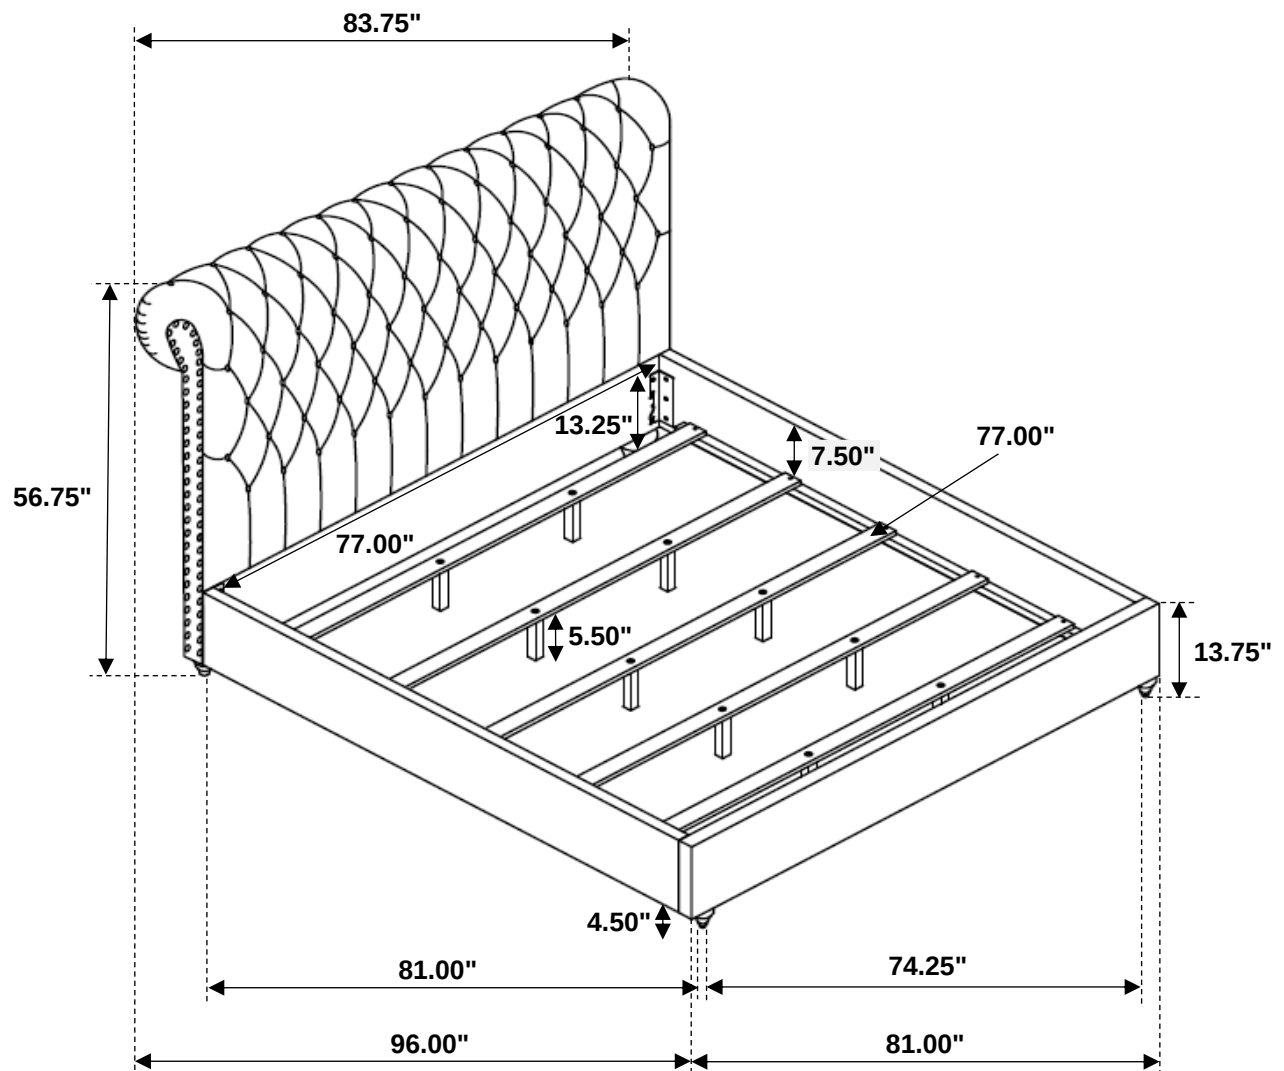

Note: Dimension tolerance  $\pm 5\%$