

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225041KE (B1-B3)
Eastern King Bed

ITEM: 225041KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC	B	HEADBOARD LEG		3PCS
C	CONCEAL PANEL		4PCS				

B2 (BOX 2)

D	FOOTBOARD		1PC
---	-----------	--	-----

B3 (BOX 3)

E	BED RAIL		2PCS	F	ROLL SLAT (13PCS)		1SET
G	CENTER RAIL		1PC	H	BED SLAT SUPPORT WITH LEVELER		10PCS
I	CENTER RAIL SUPPORT WITH LEVELER		3PCS				

HB	225041KE (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	FB	225041 KE (B2) FROM BOX 2 FOOTBOARD		1PC
----	--	--	-----	----	---	--	-----

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225041KE(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 225041KE (B3)

1	BOLT (Ø5/16" x 45MM- RBW)		12PCS	4	ALLEN WRENCH (4MM - RBW)		1PC
2	LOCK WASHER (Ø5/16" - RBW)		12PCS	5	FLAT HEAD SCREW (Ø4 x 30MM - RBW)		15PCS
3	FLAT WASHER (Ø5/16" - RBW)		12PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225041KE(B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

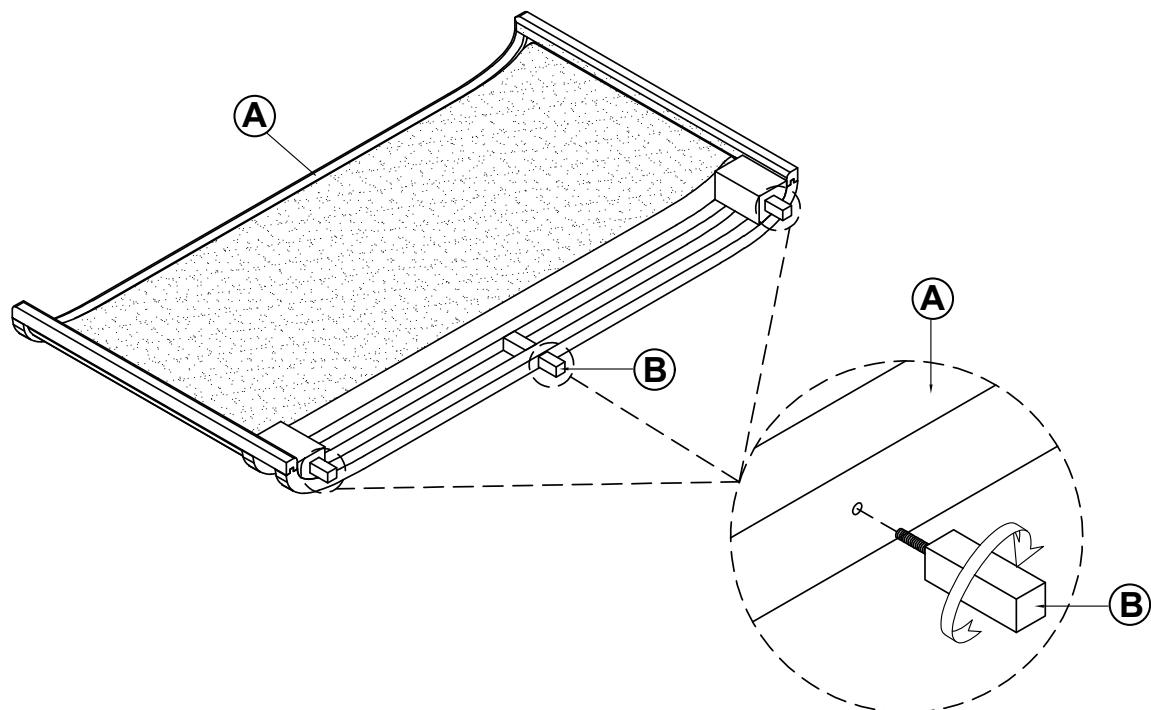

STEP 2

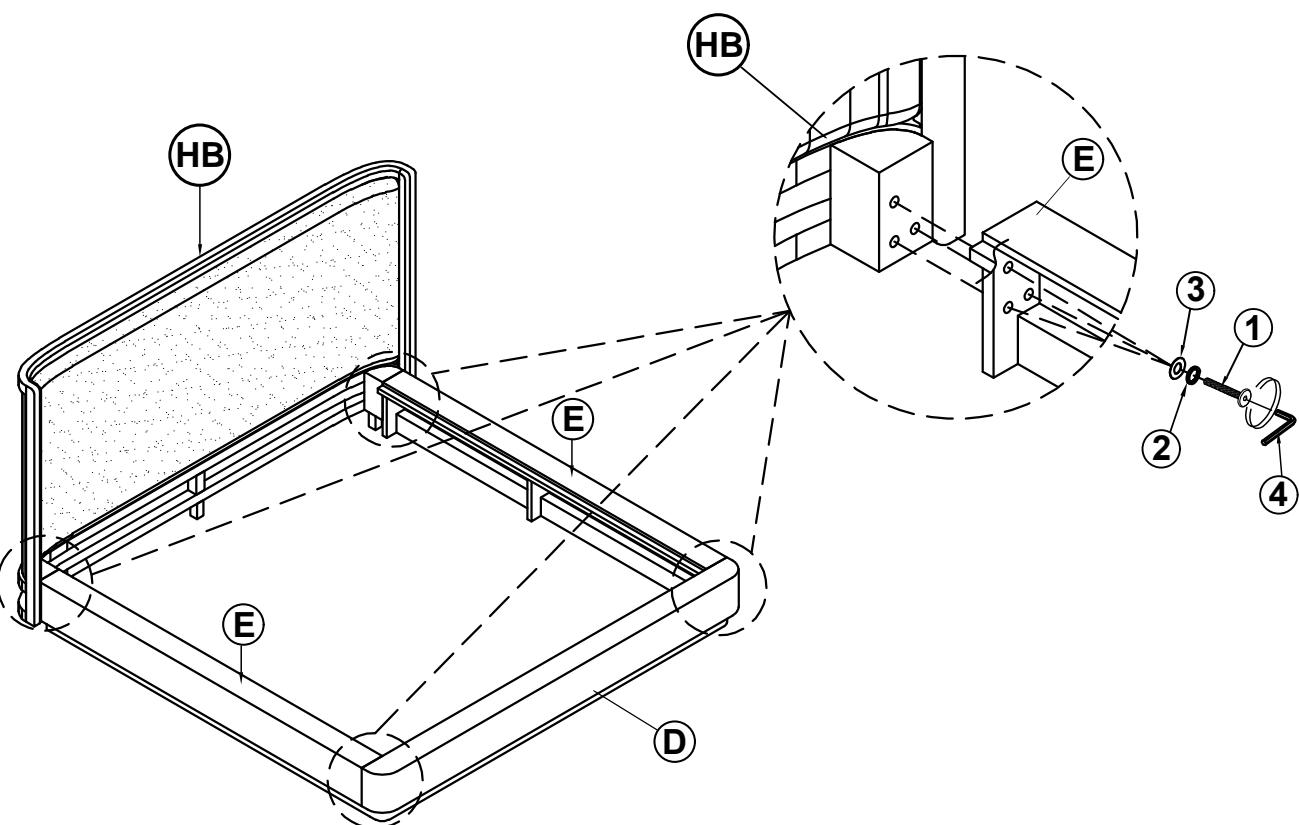


ITEM: 225041KE(B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 3

COASTER
FINE FURNITURE

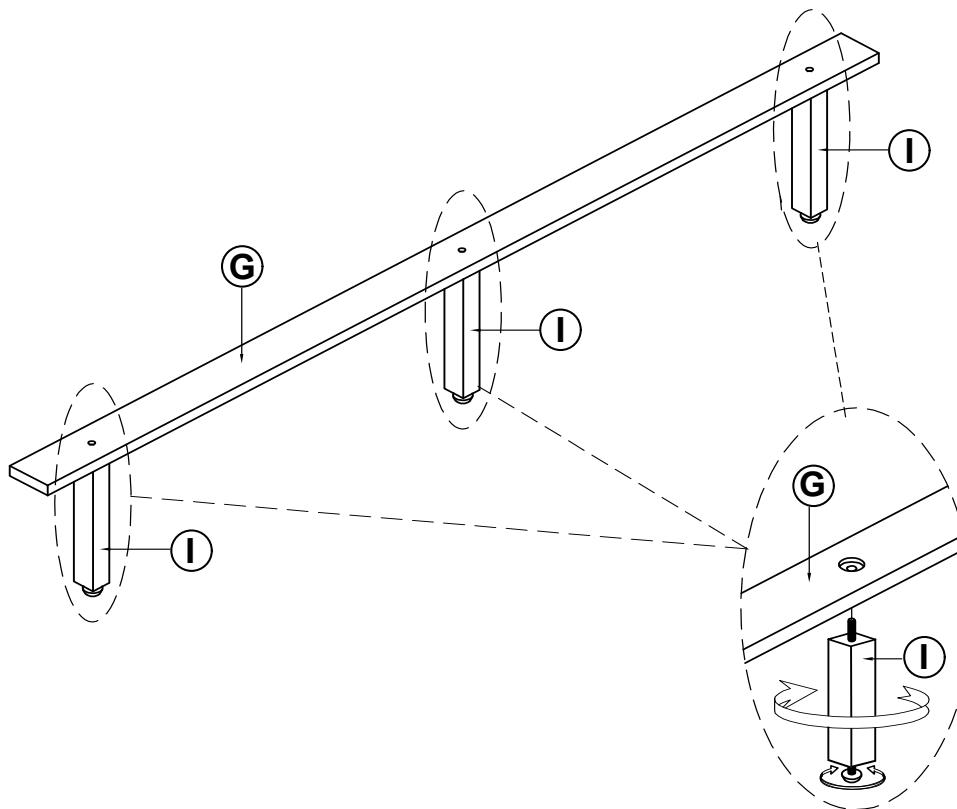

STEP 4

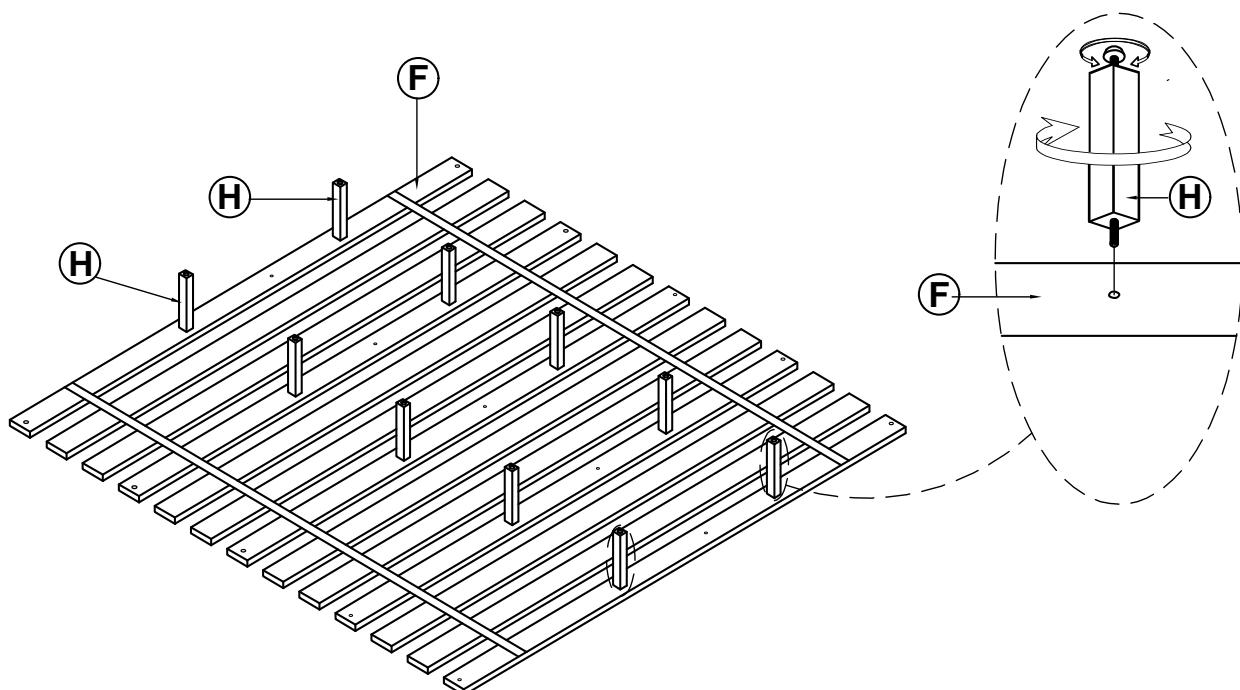


ITEM: 225041KE(B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 5

COASTER
FINE FURNITURE

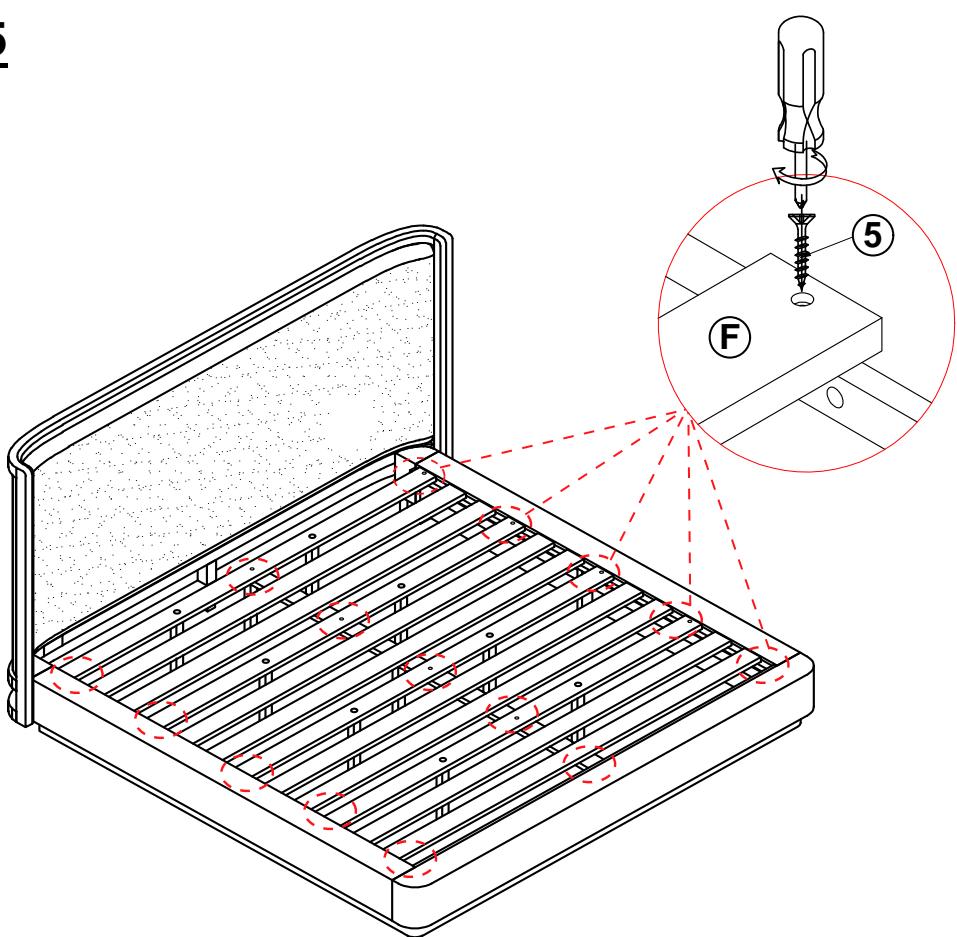

STEP 6

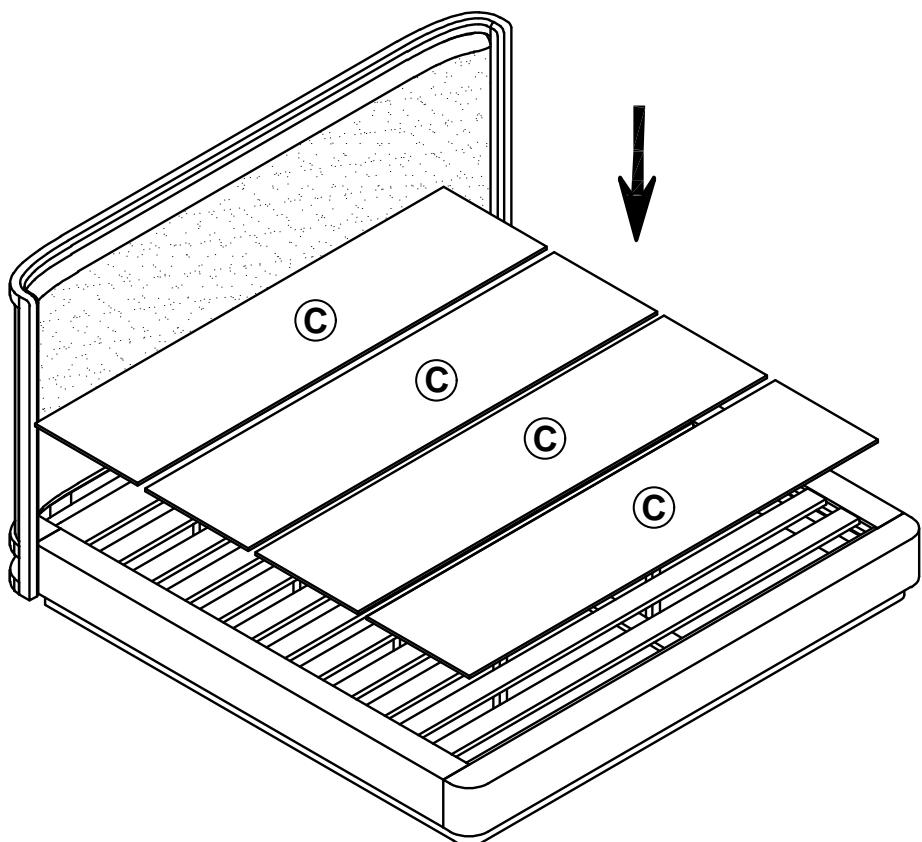



ITEM: 225041KE(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 7

COMPLETE


COASTER®
FINE FURNITURE

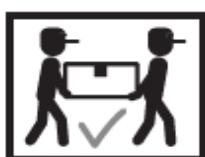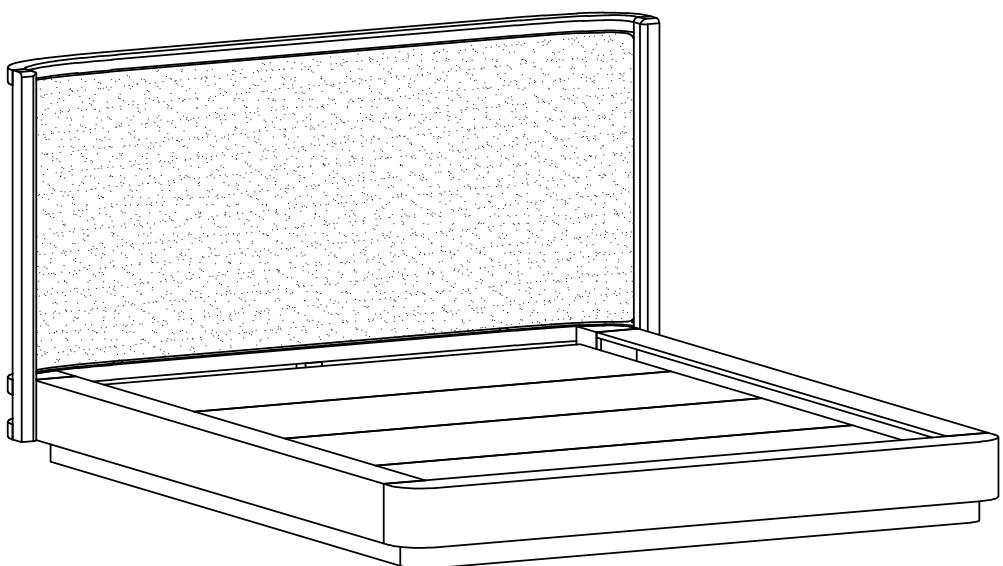

ITEM: 225041KE(B1-B3)

COASTER
FINE FURNITURE

Inner Size : 81.00"W X 77.00"D

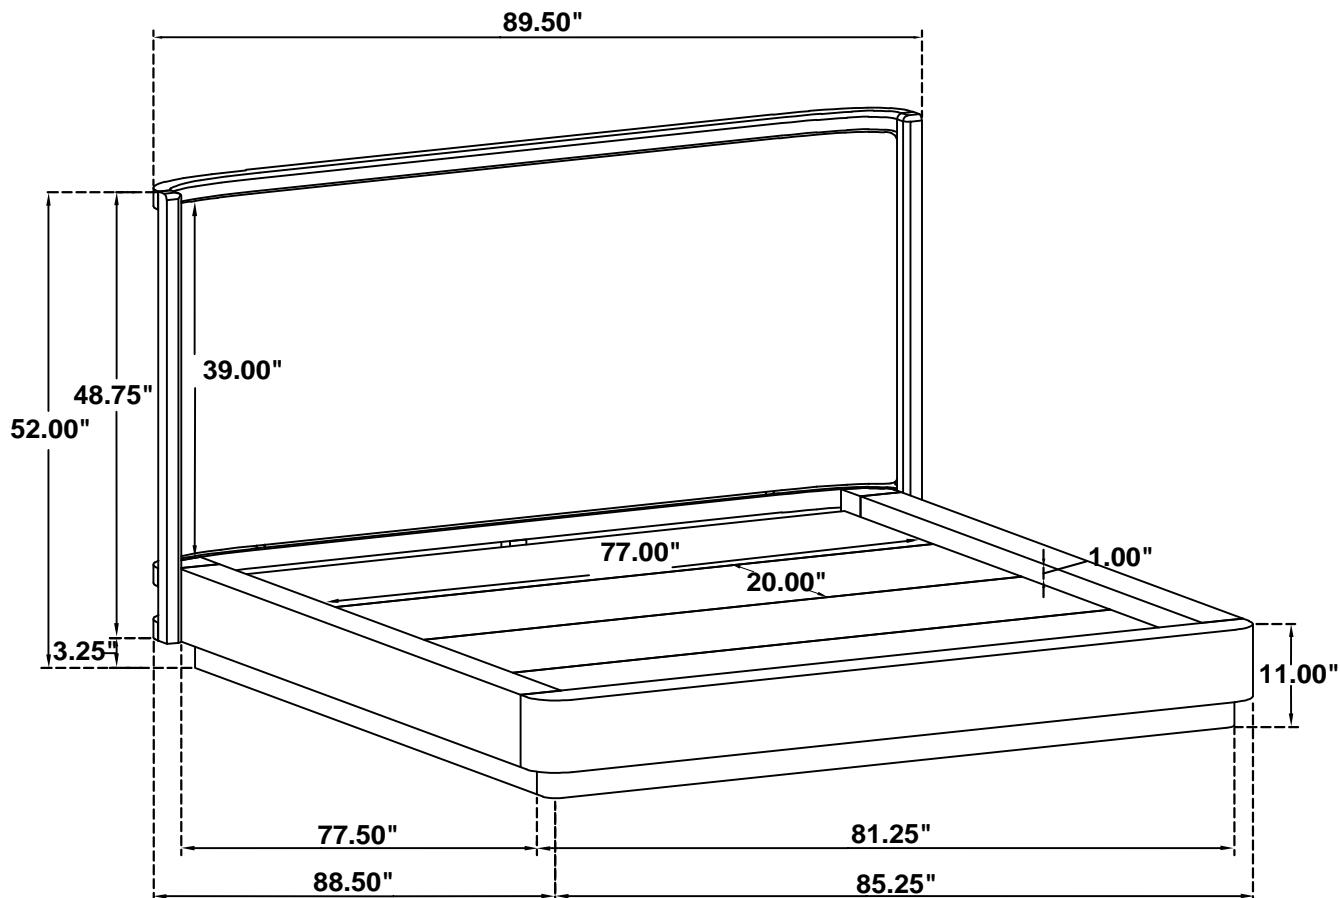

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225042
Nightstand

ITEM:225042


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

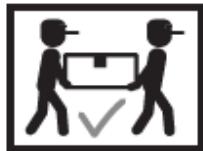


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

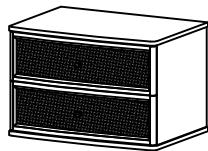A NIGHTSTAND


1PC

B RIGHT LEG WITH "R" LABEL

1PC


C LEFT LEG WITH "L" LABEL

1PC

D LEG SUPPORT

1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 45mm - RBW)

11PCS

3 FLAT WASHER
(Φ5/16" - RBW)

11PCS

2 LOCK WASHER
(Φ5/16" - RBW)

11PCS


4 ALLEN WRENCH
(4MM - RBW)

1PC


ITEM: 225042

ASSEMBLY INSTRUCTIONS


STEP 1

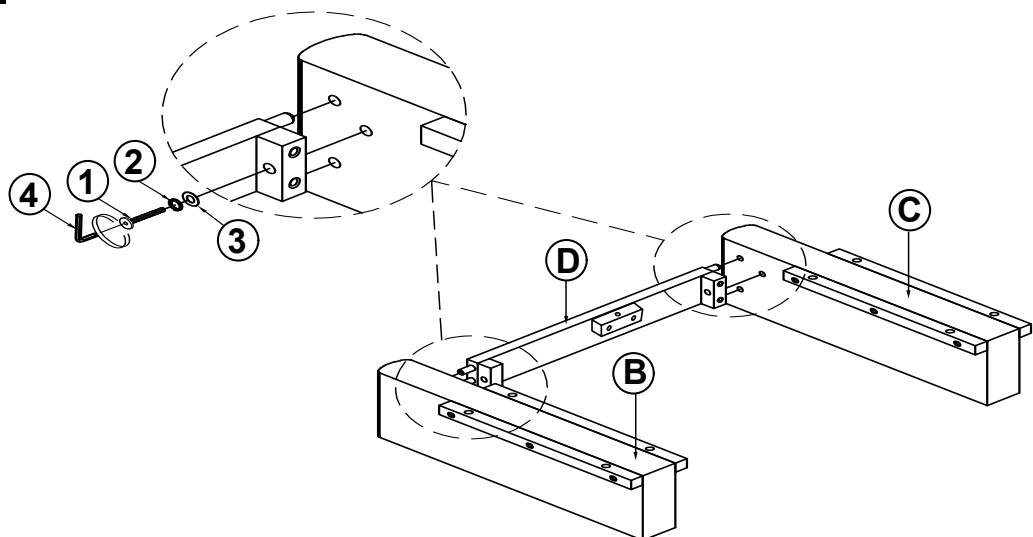

STEP 2

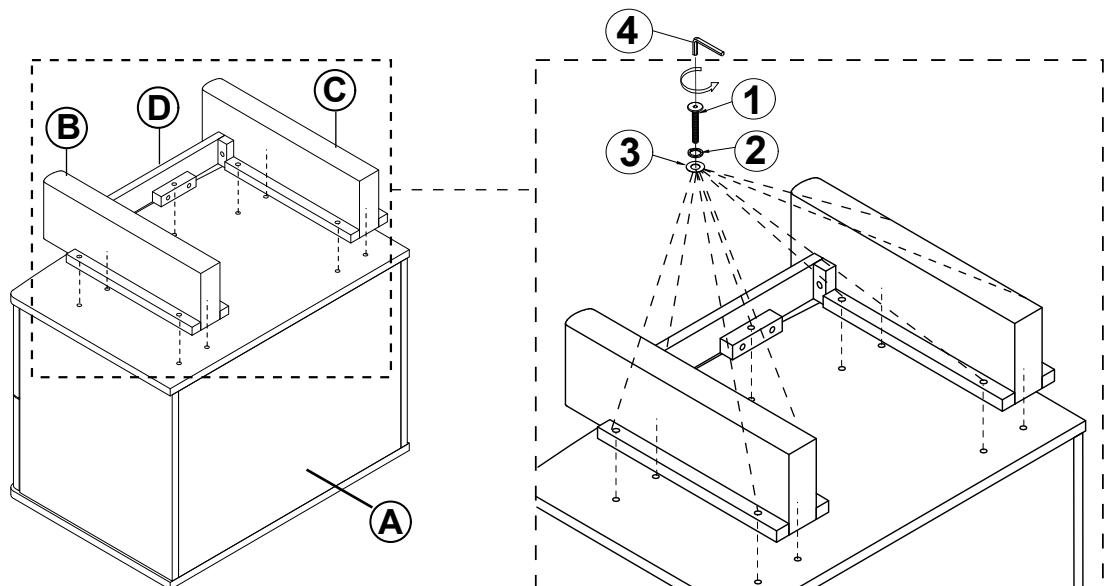


STEP 3 COMPLETE

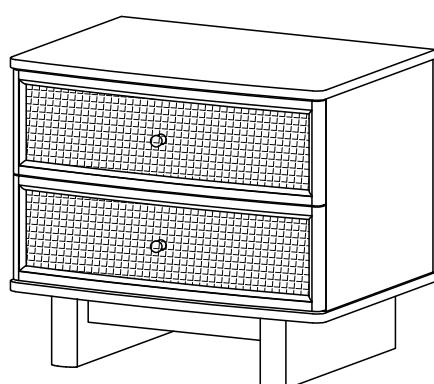

ITEM:225042

COASTER
FINE FURNITURE

Inner Size of Drawer : 23.25"W X 14.50"D X 5.50"H X 0.50"T

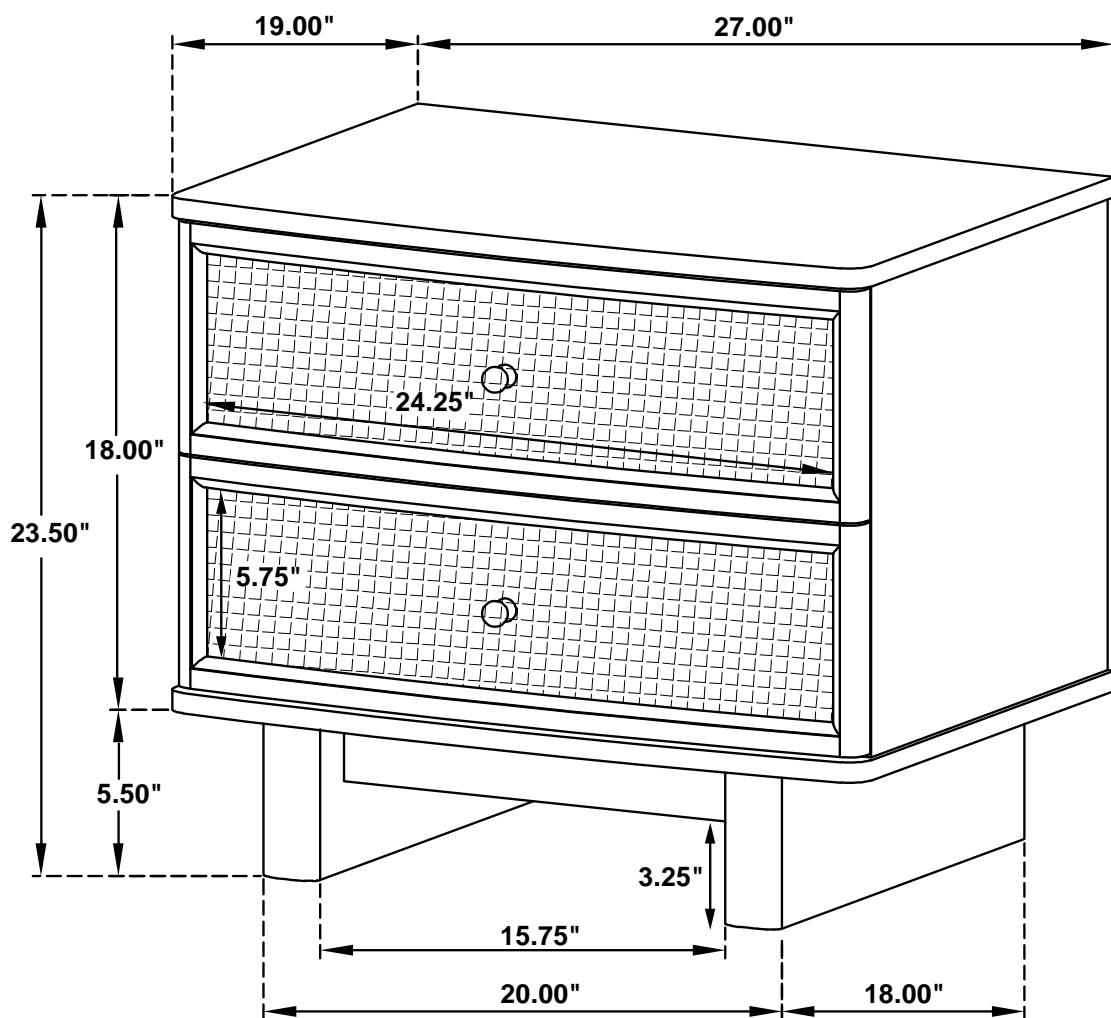

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225043
Dresser

ITEM:225043


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

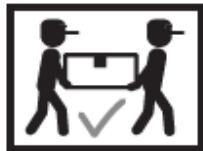


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

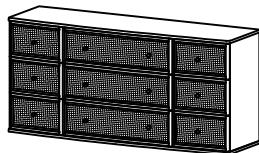A DRESSER


1PC

B RIGHT LEG WITH "R" LABEL

1PC

C LEFT LEG WITH "L" LABEL

1PC

D LEG SUPPORT

1PC


HARDWARE IDENTIFICATION

**1 BOLT
(Φ5/16" x 45mm - RBW)**

13PCS

**3 FLAT WASHER
(Φ5/16" - RBW)**

13PCS

**2 LOCK WASHER
(Φ5/16" - RBW)**

13PCS

**4 ALLEN WRENCH
(4MM - RBW)**


1PC

ITEM: 225043


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

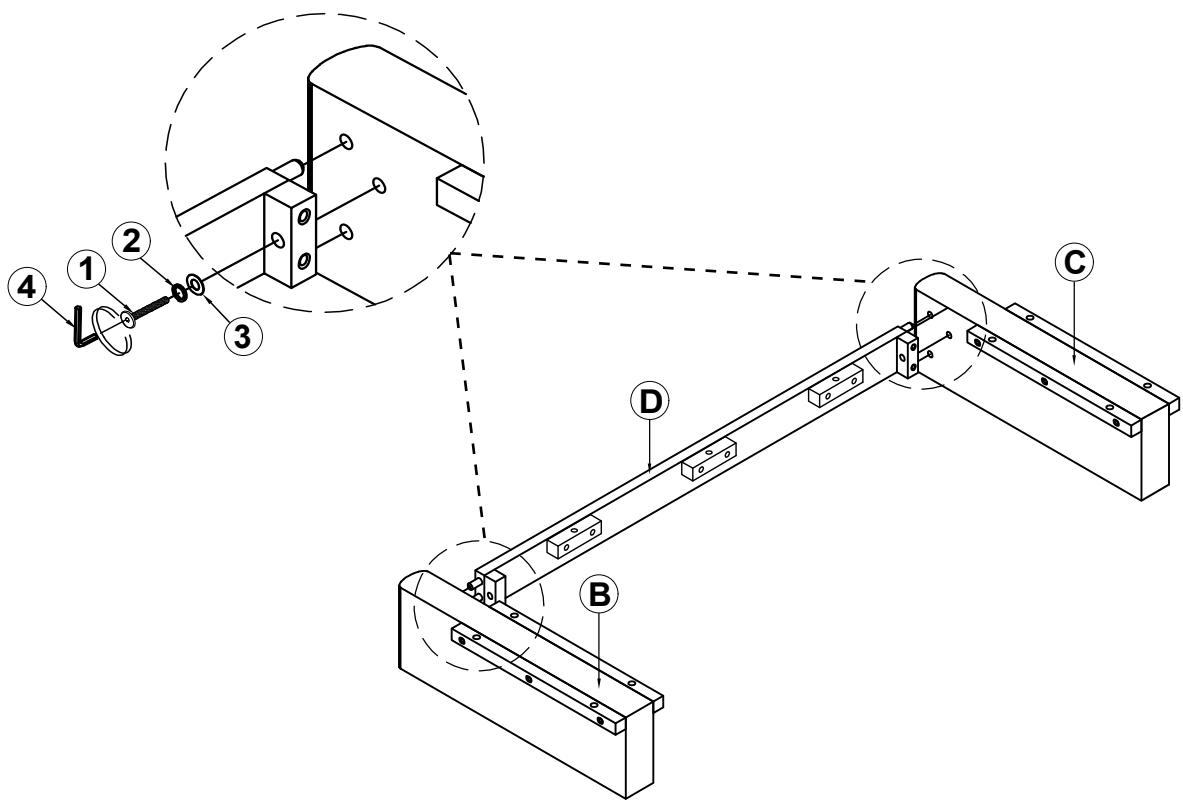

STEP 2


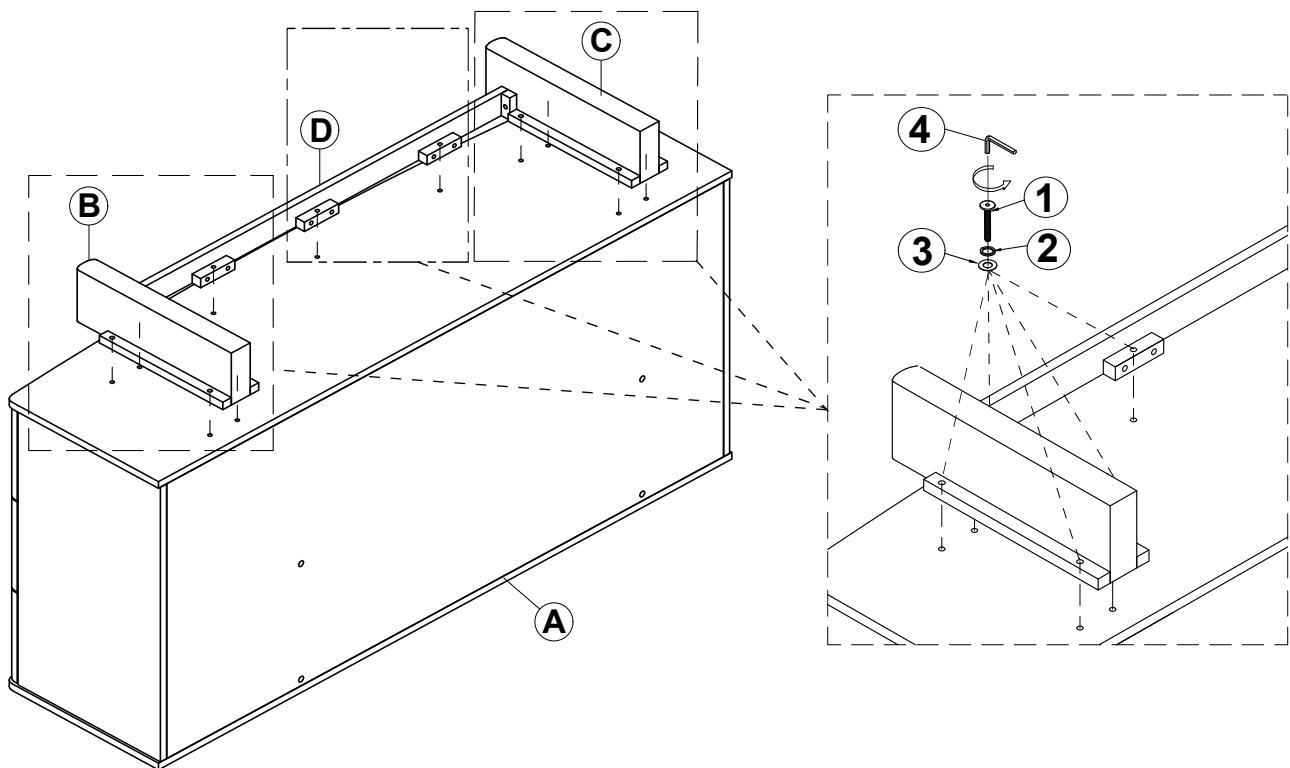


ITEM: 225043

ASSEMBLY INSTRUCTIONS



STEP 3
COMPLETE

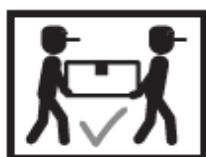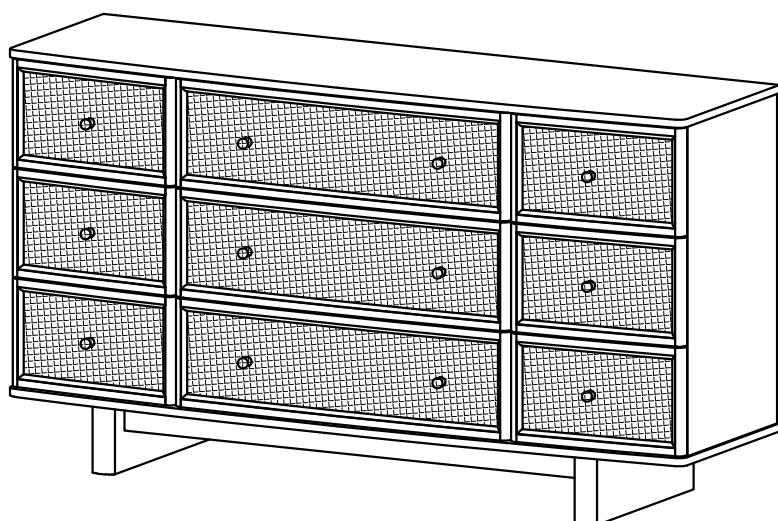

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

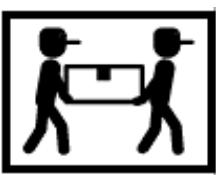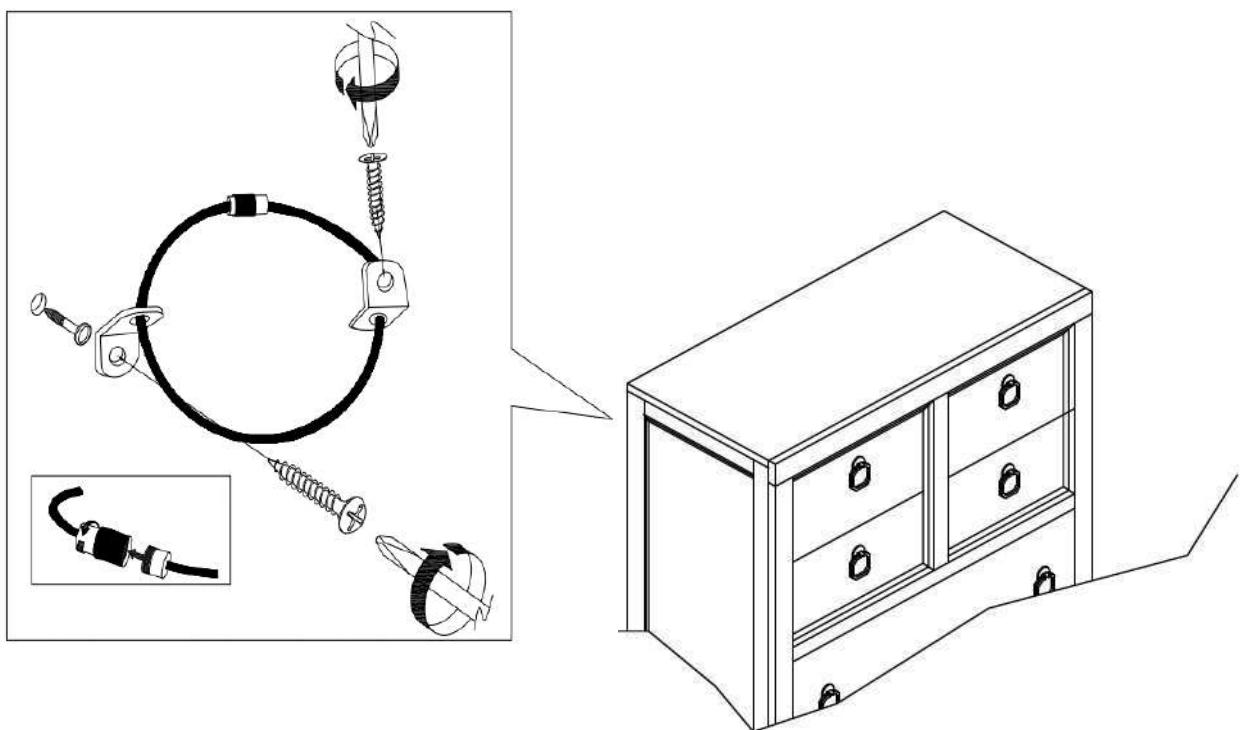

ITEM:225043

COASTER
FINE FURNITURE

Inner Size of Drawer A : 13.50"W X 14.00"D X 7.00"H X 0.50"T
Inner Size of Drawer B : 30.00"W X 14.25"D X 7.00"H X 0.50"T

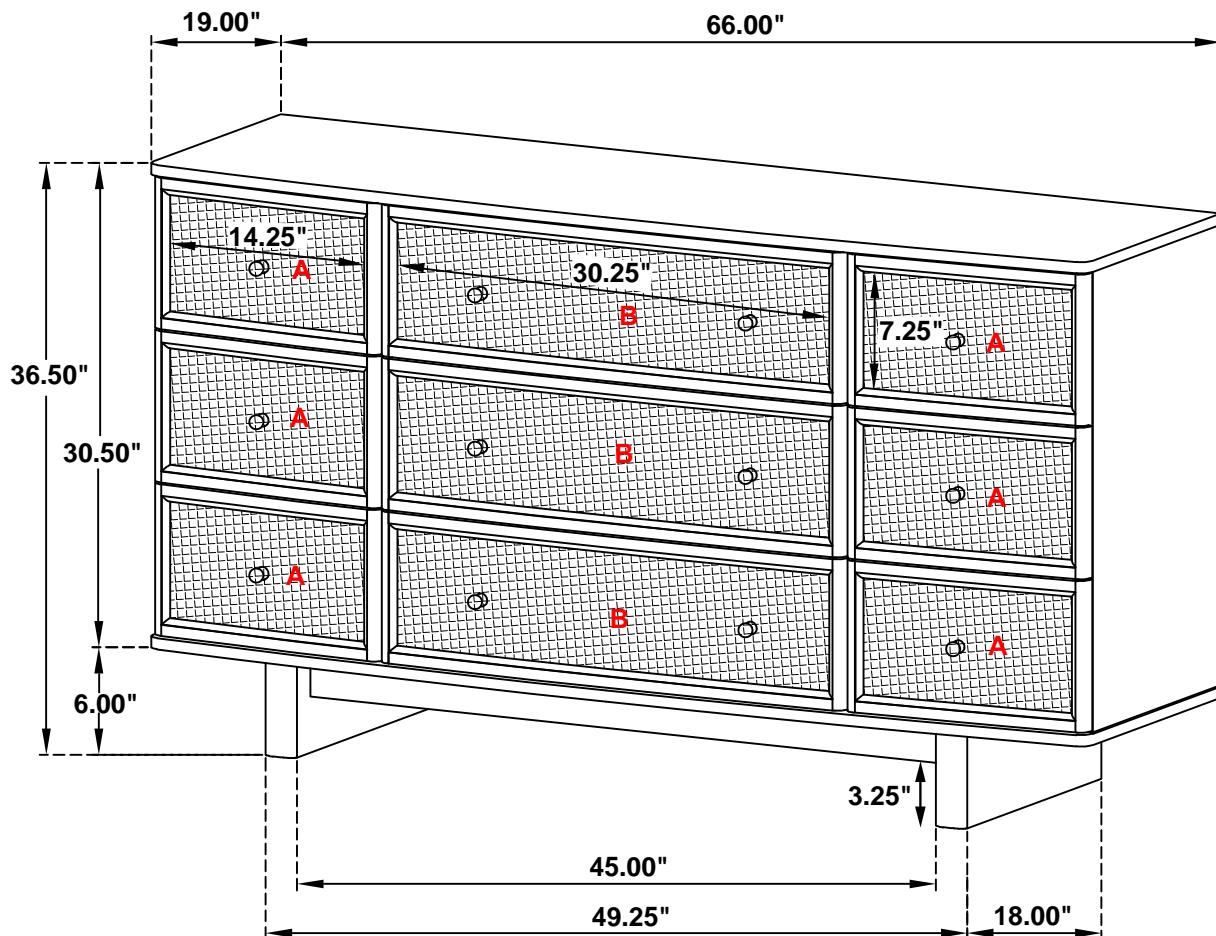

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225044
Mirror

ITEM:225044


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

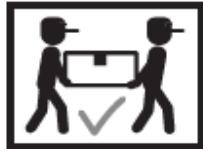


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A DRESSER
FROM BOX
ITEM #225043

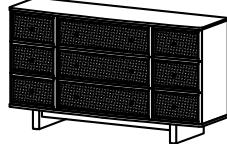


1PC

B MIRROR

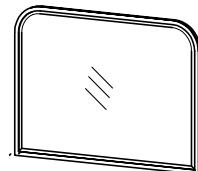

1PC

C MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(Φ1/4" x 38mm - RBW)




6PCS

3 FLAT WASHER
(Φ1/4" - RBW)



6PCS

2 LOCK WASHER
(Φ1/4" - RBW)



6PCS

4 ALLEN WRENCH
(4MM - RBW)




1PC

ITEM: 225044


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

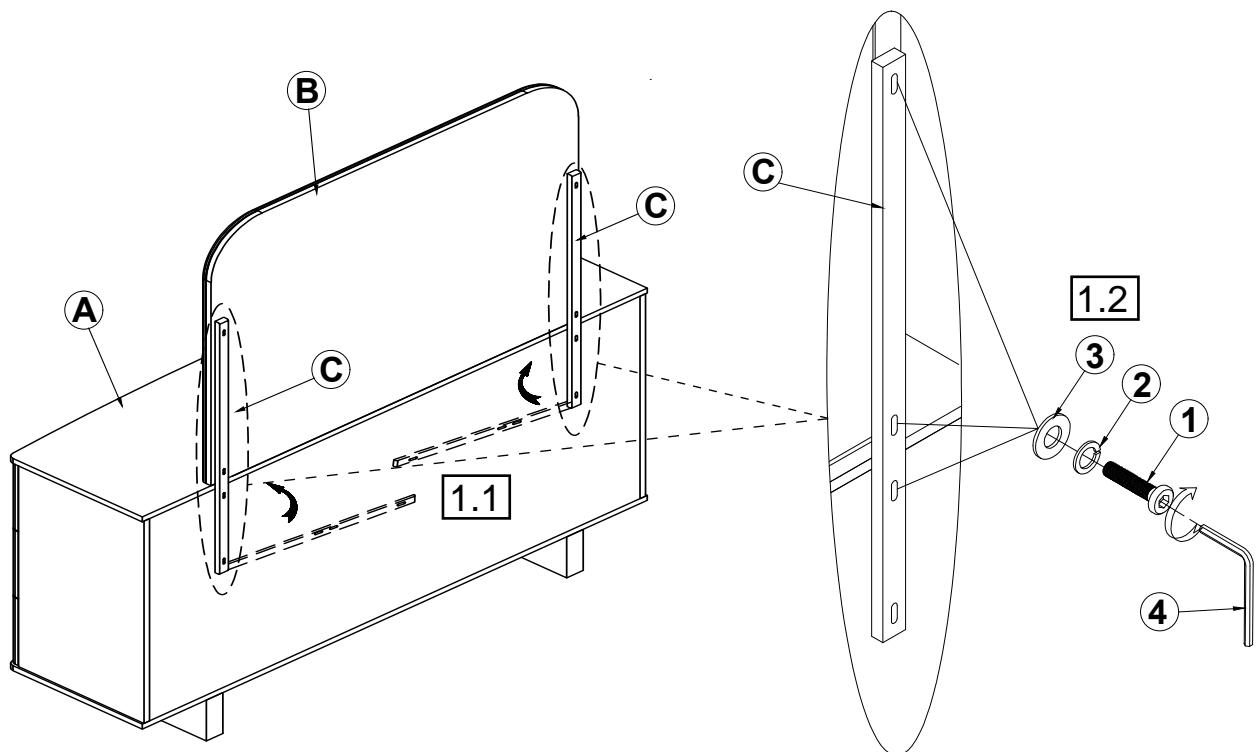


STEP 2 COMPLETE

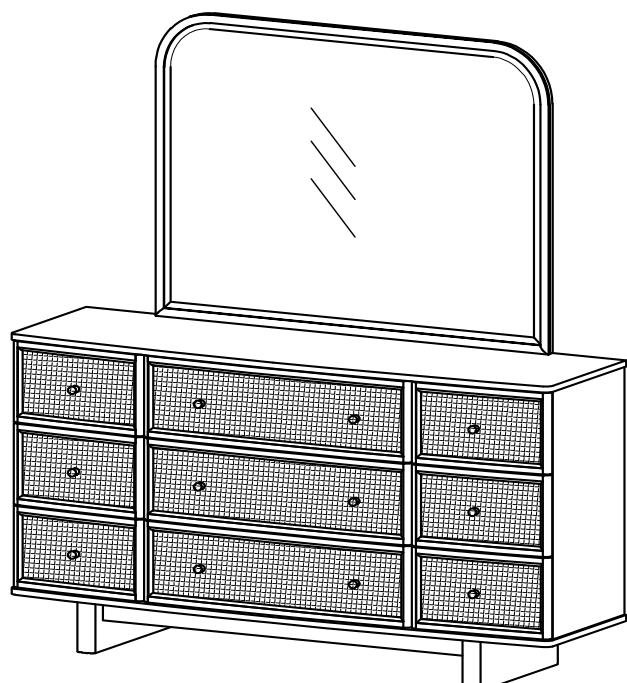

ITEM:225044

COASTER
FINE FURNITURE

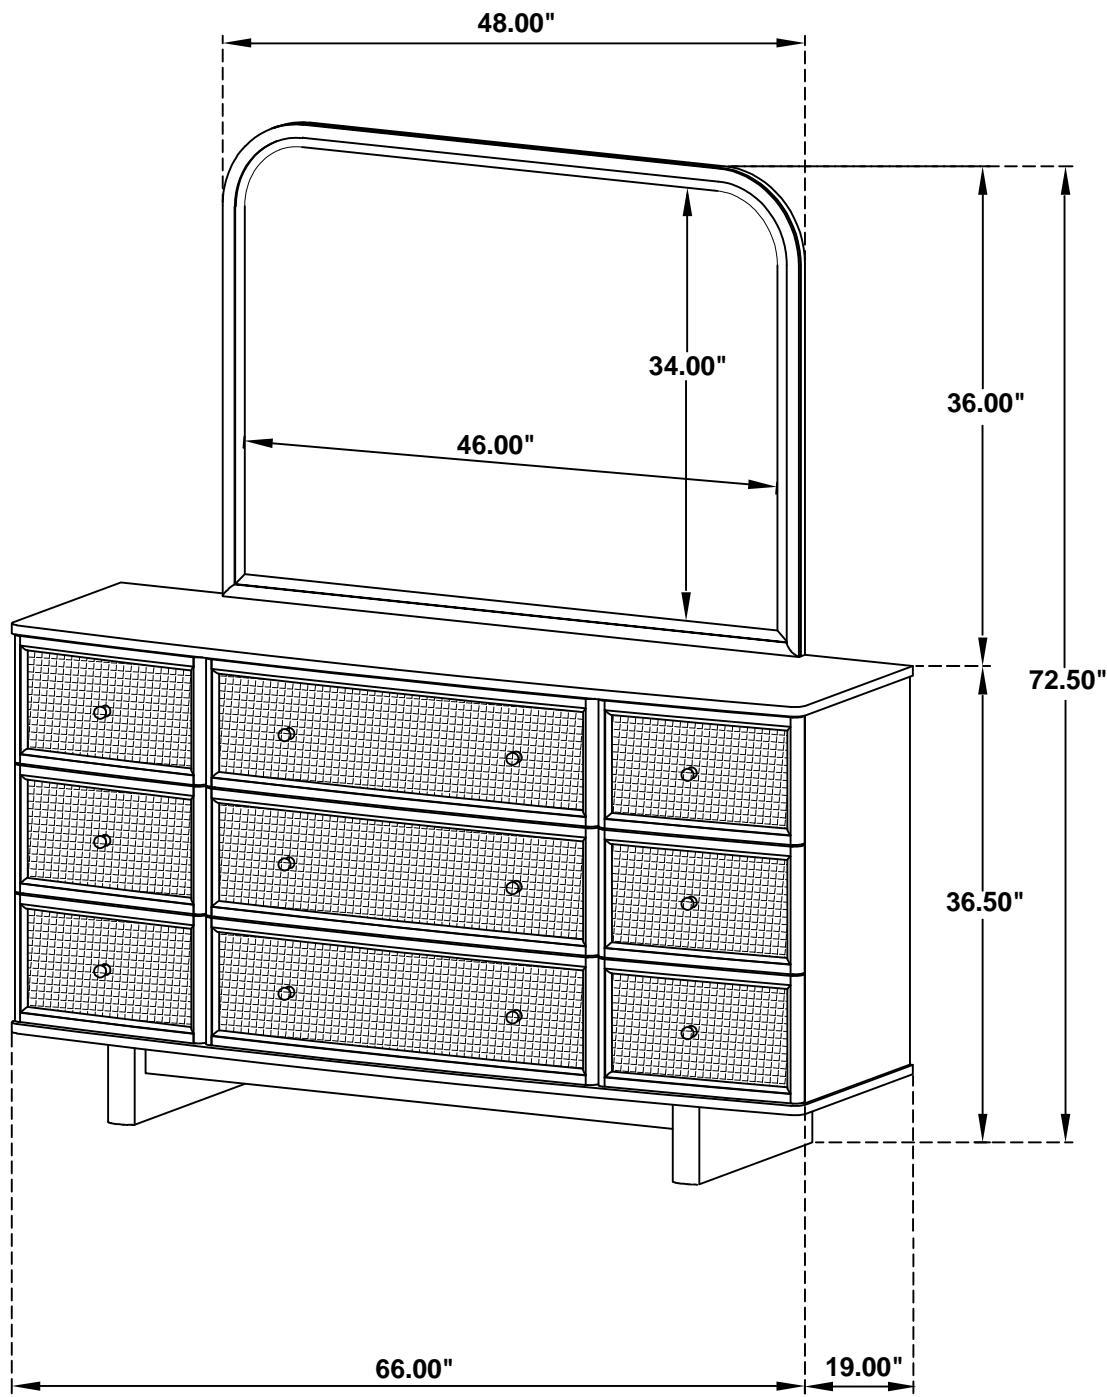

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225045
Chest

ITEM: 225045

COASTER
FINE FURNITURE


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

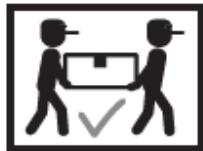


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A CHEST

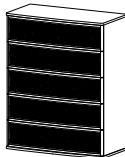


1PC

B RIGHT LEG
WITH "R" LABEL




1PC

C LEFT LEG
WITH "L" LABEL



1PC


D LEG SUPPORT



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 45mm - RBW)




12PCS

3 FLAT WASHER
(Φ5/16" - RBW)



12PCS

2 LOCK WASHER
(Φ5/16" - RBW)



12PCS

4 ALLEN WRENCH
(4MM - RBW)




1PC

ITEM: 225045


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

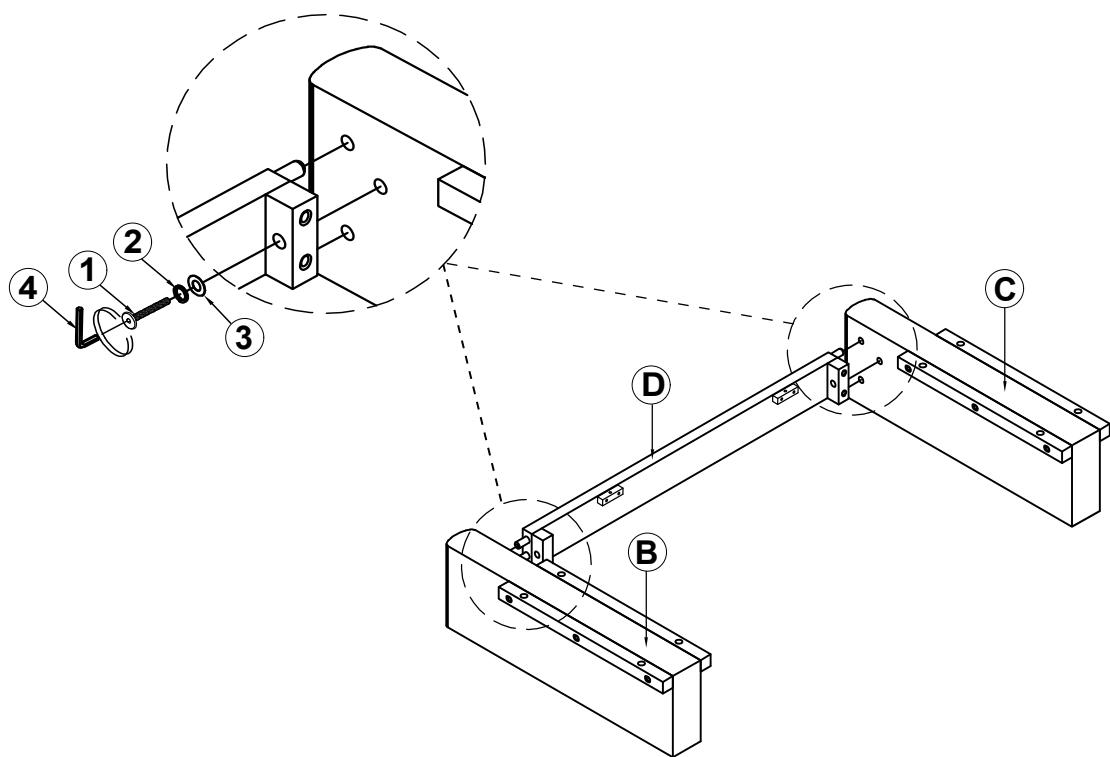



STEP 2

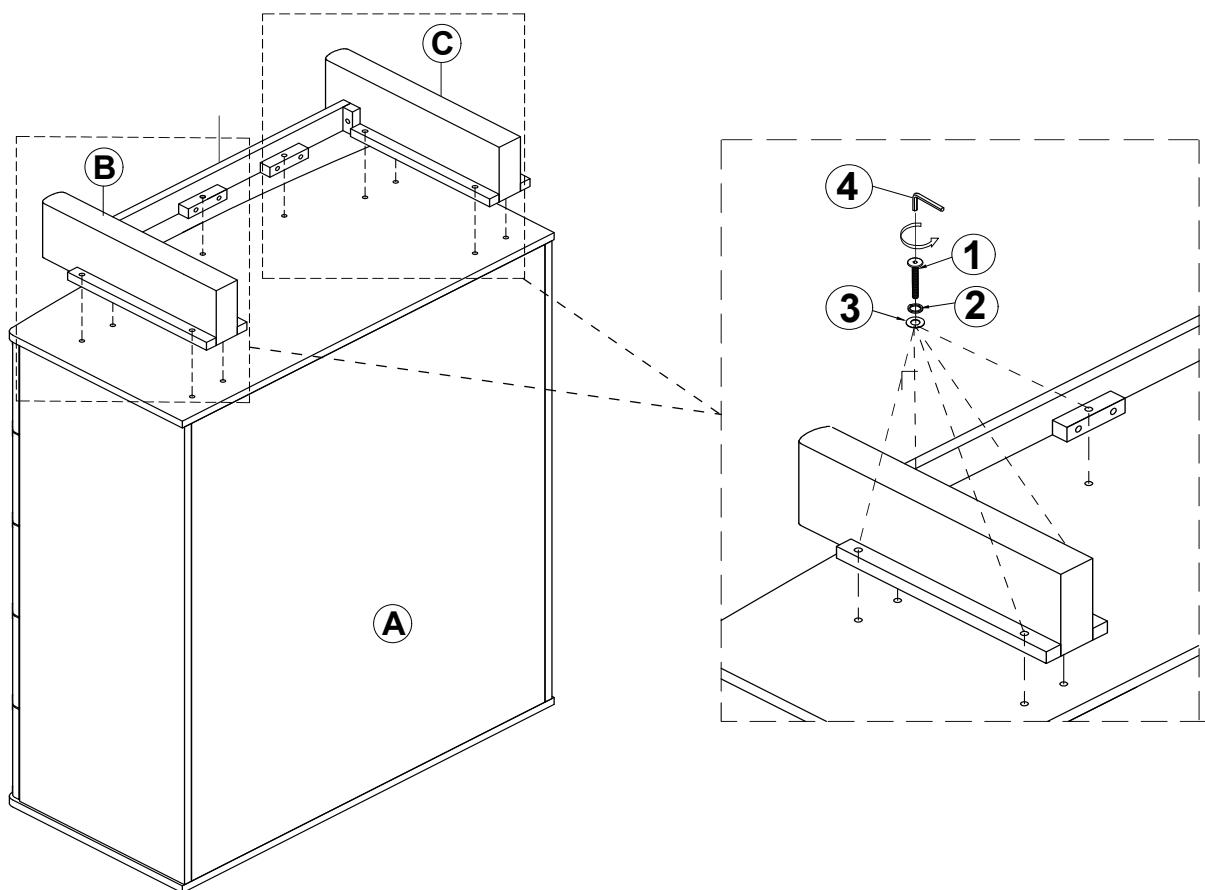

ITEM: 225045

ASSEMBLY INSTRUCTIONS

STEP 3
COMPLETE

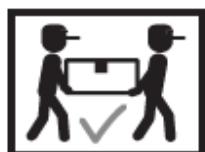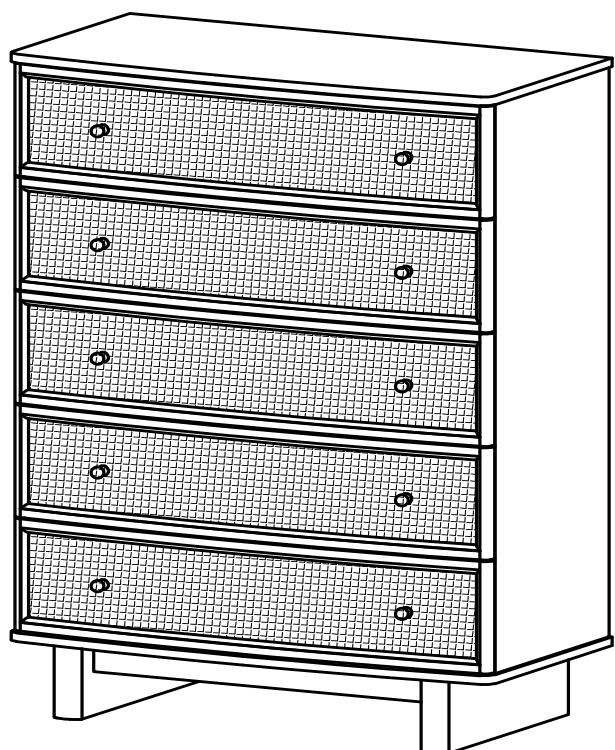

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

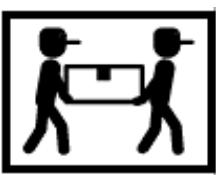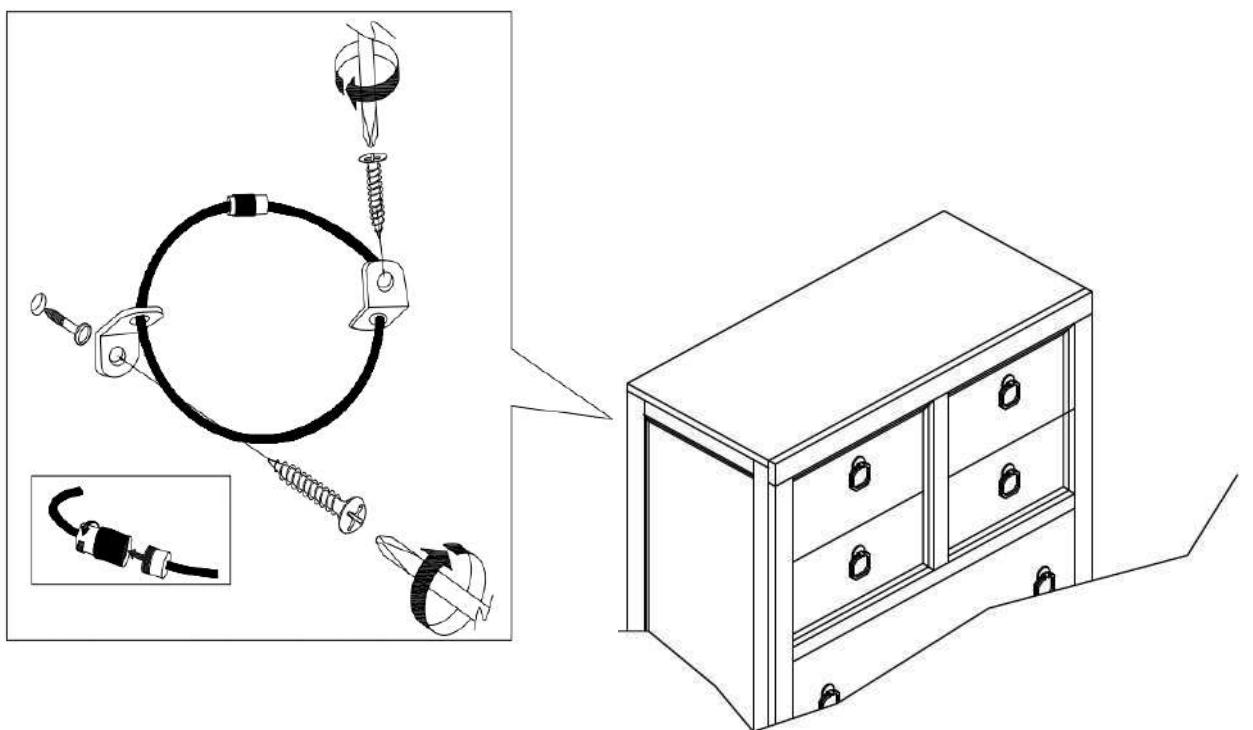

ITEM:225045



Inner Size of Drawer : 34.25"W X 14.50"D X 6.50"H X 0.50"T

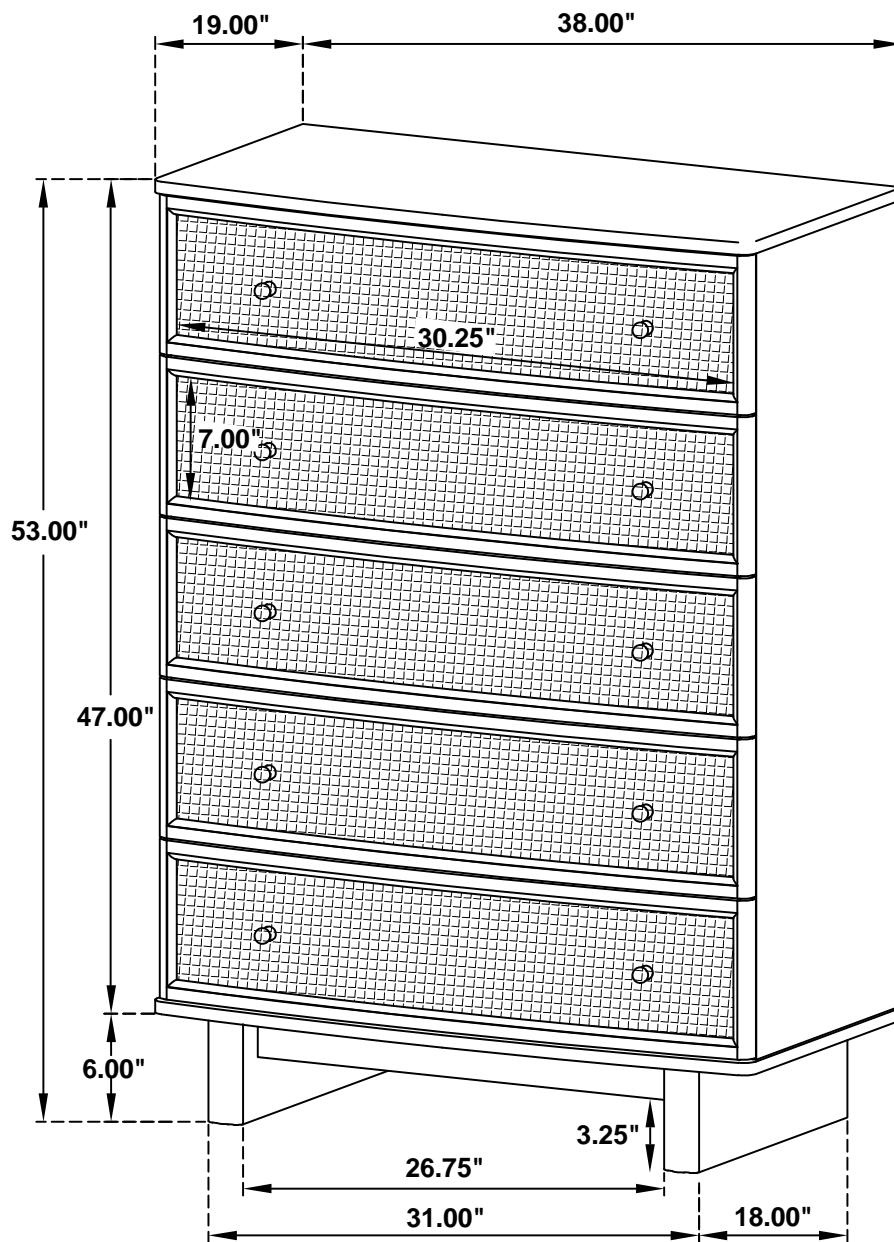

Note: Dimension tolerance $\pm 5\%$