


ASSEMBLY INSTRUCTIONS


36" BATHROOM VANITY



N710P280025C

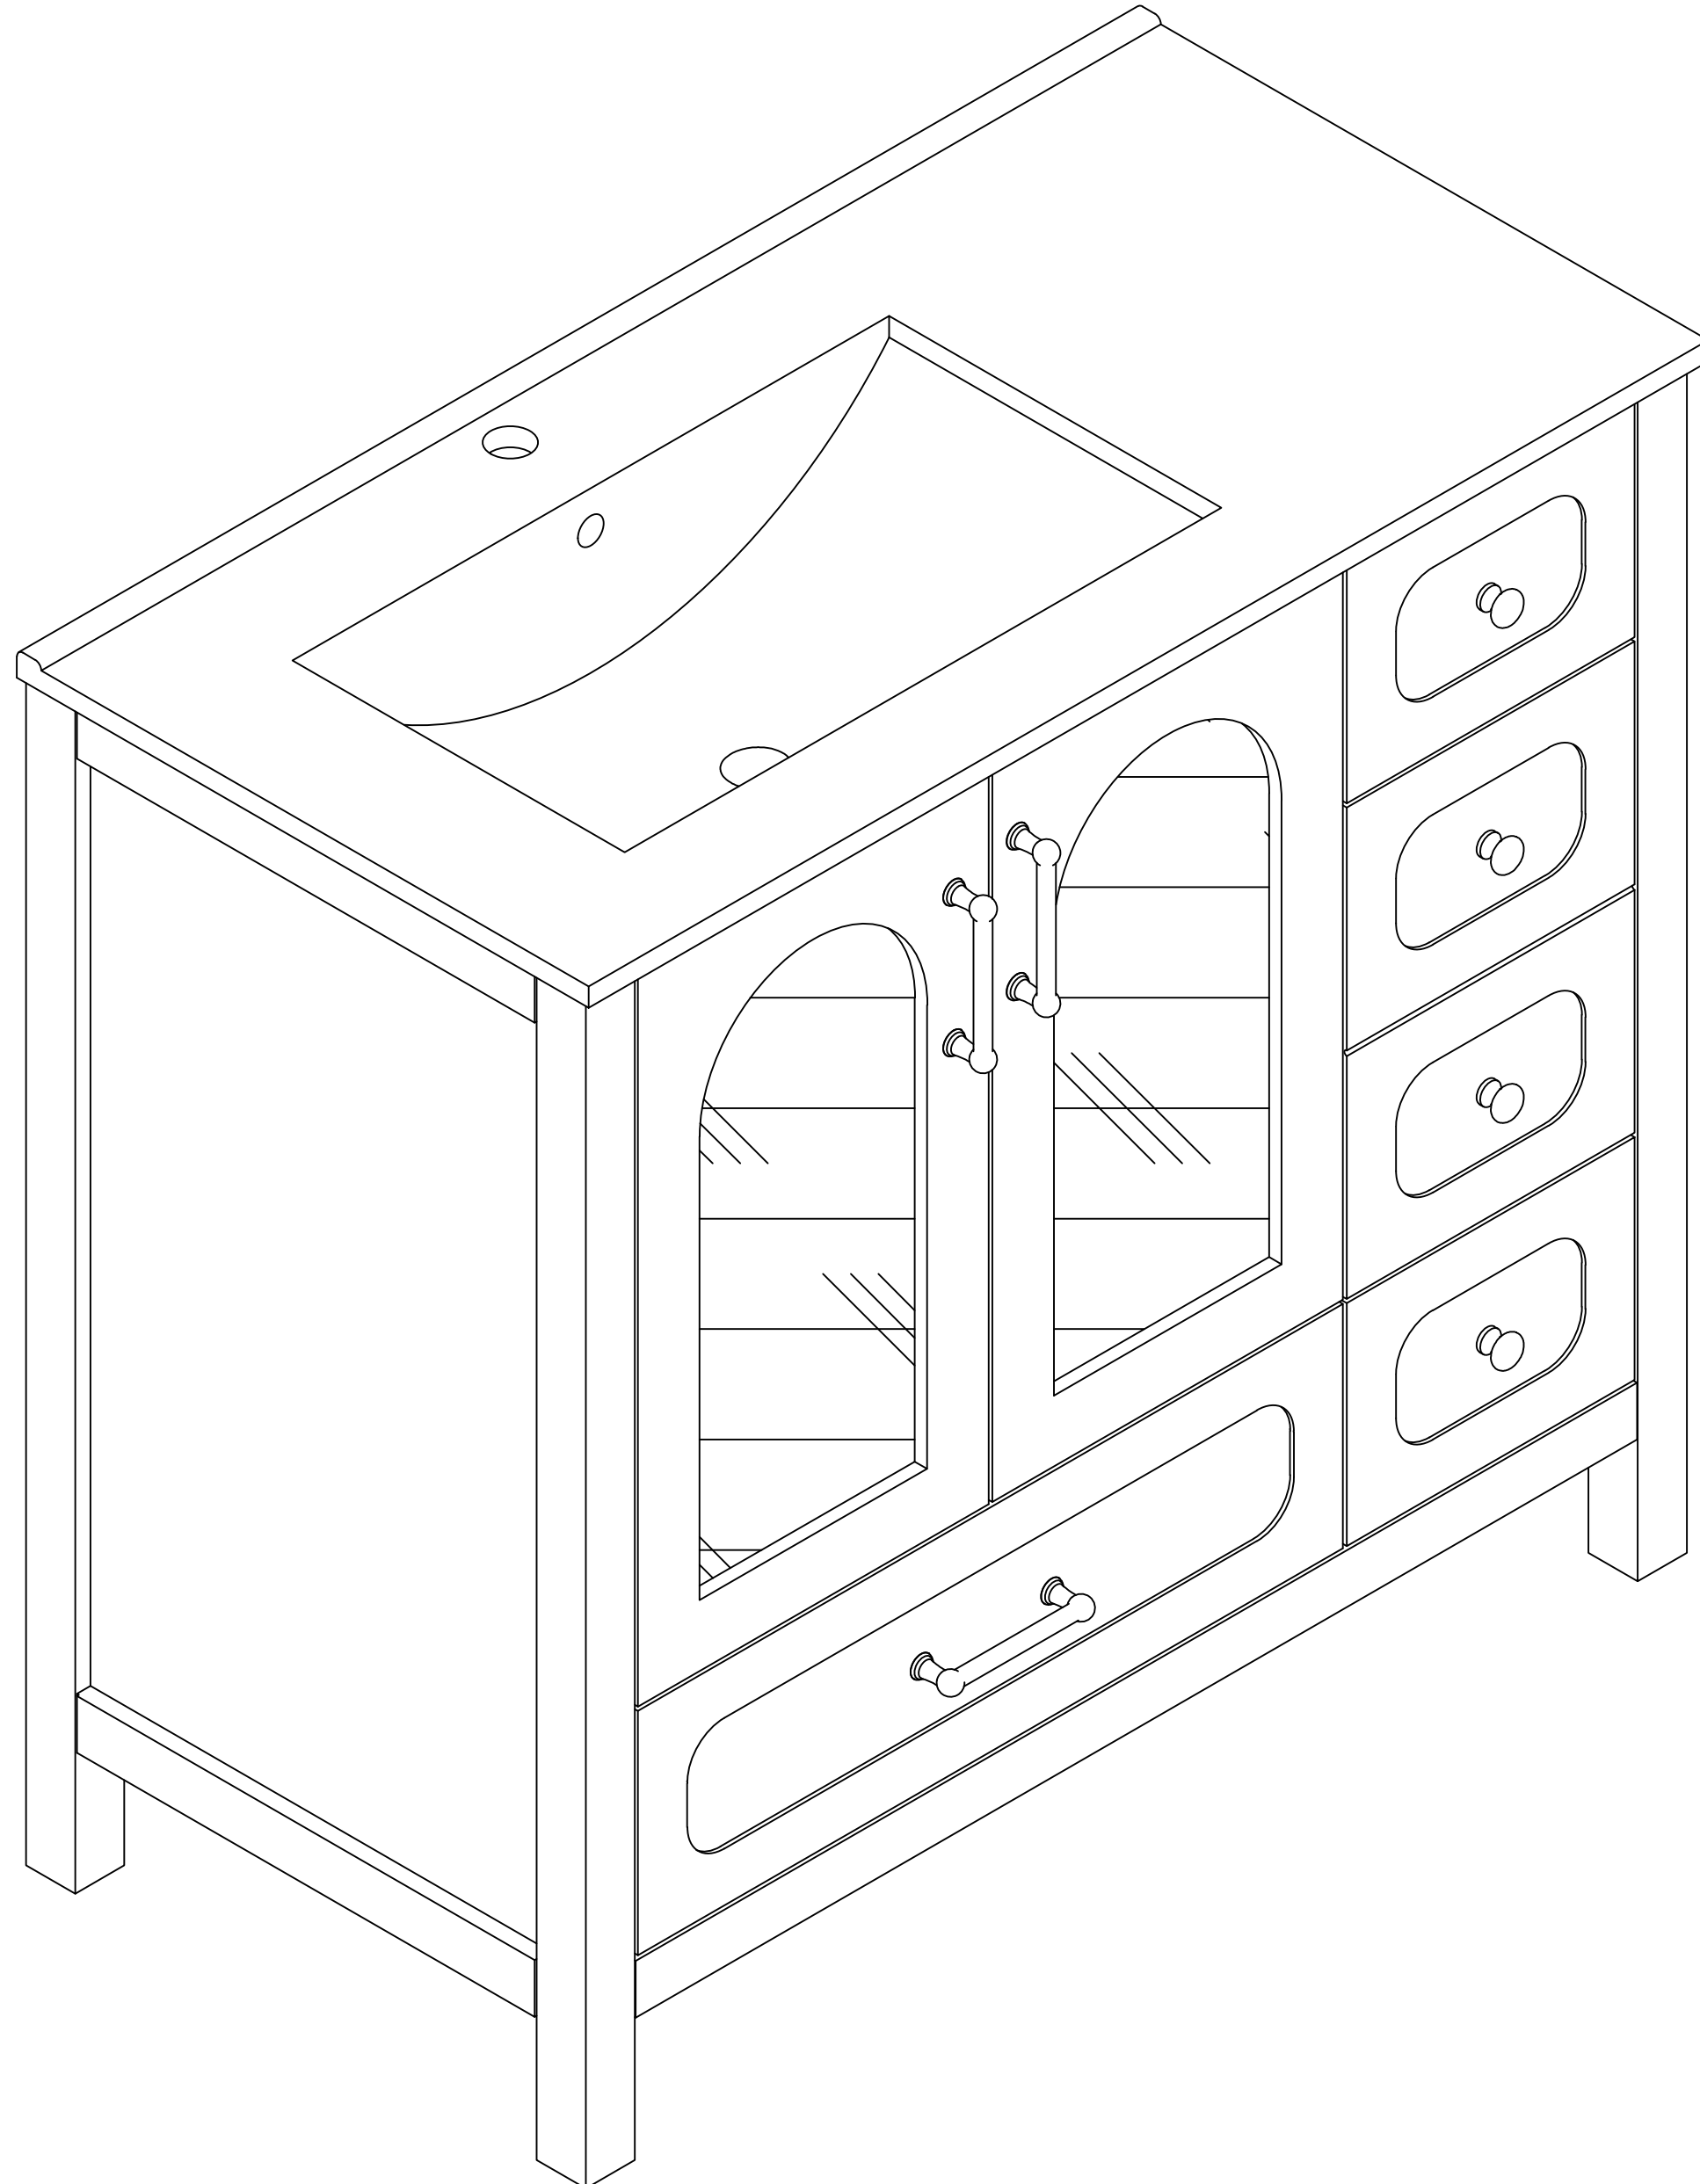


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

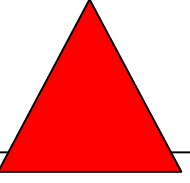
 * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
*Please assemble on a clean soft surface to avoid damage.

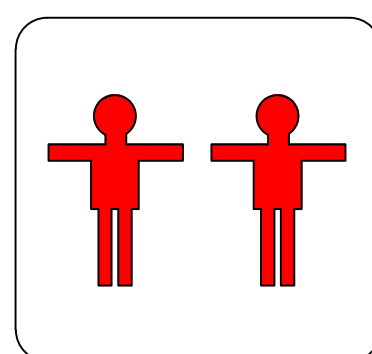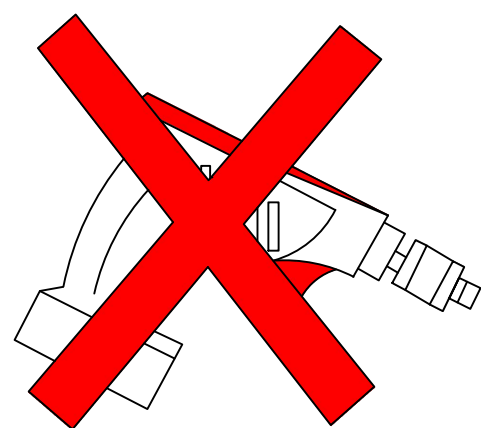


+

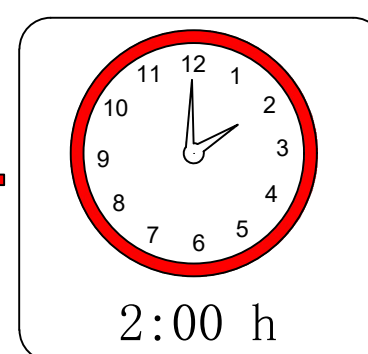

Tools Required

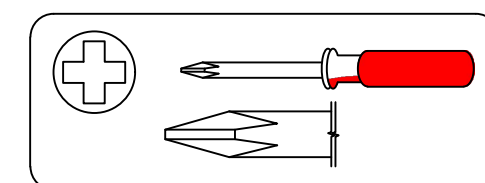

(Not included)

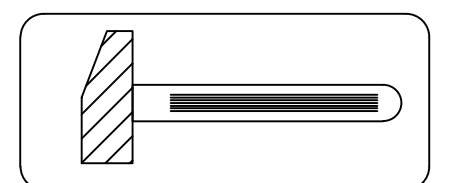

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


























- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions












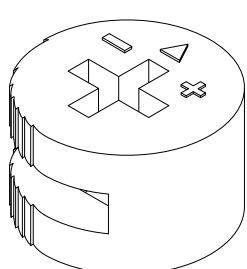
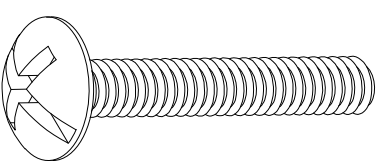
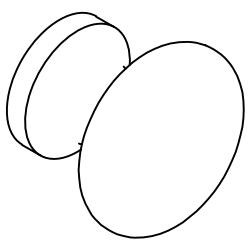
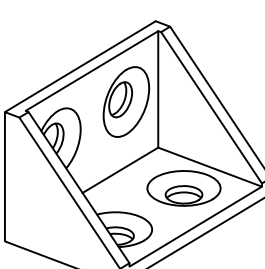
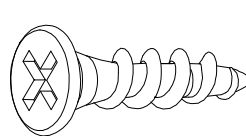
	<p>Diagram A</p>	<p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p>	<p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p>	<p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
<p>Connect the panels together.</p>		
<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>		
<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>		

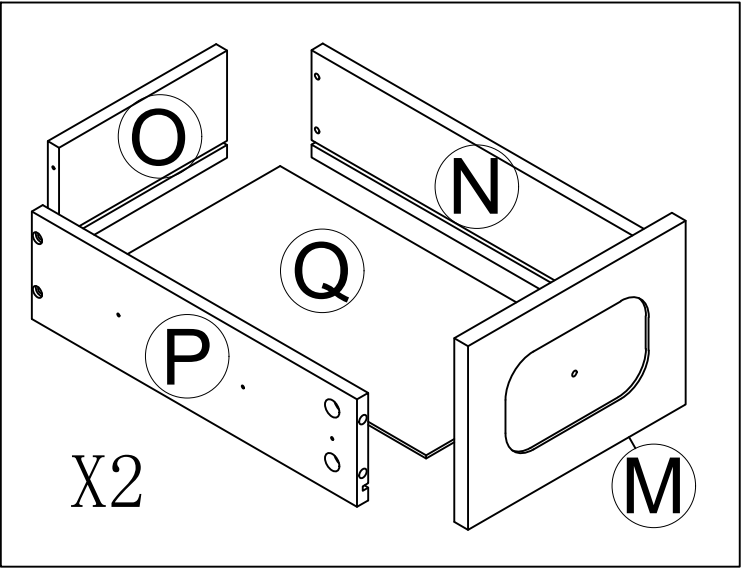


PRODUCT PARTS :

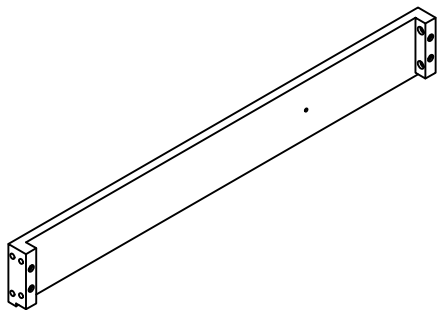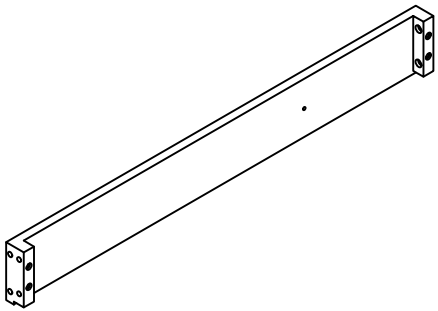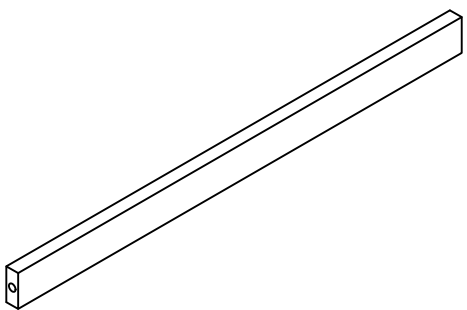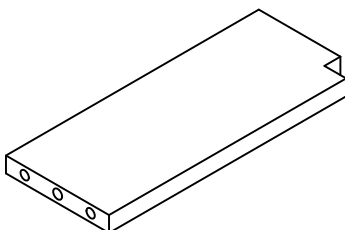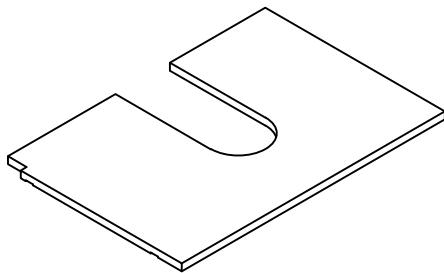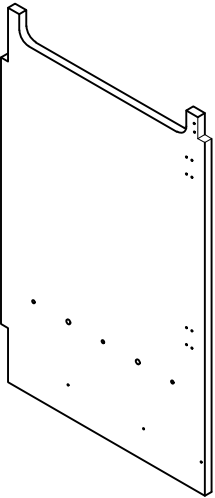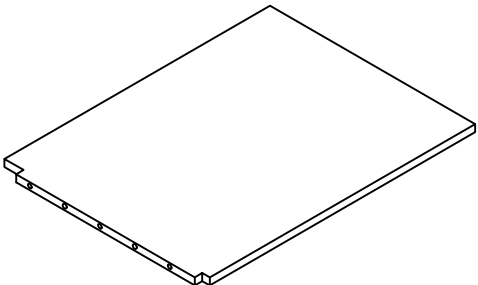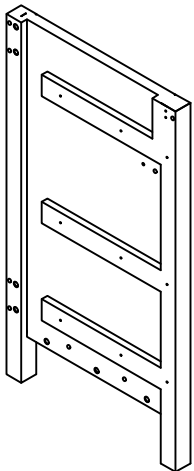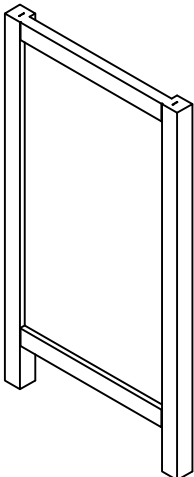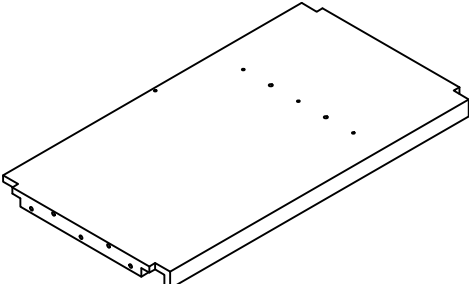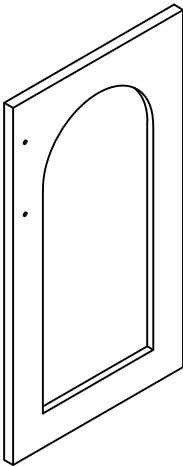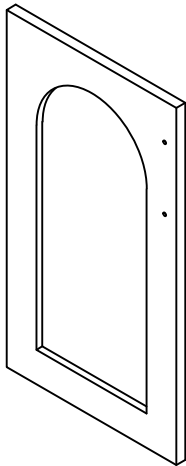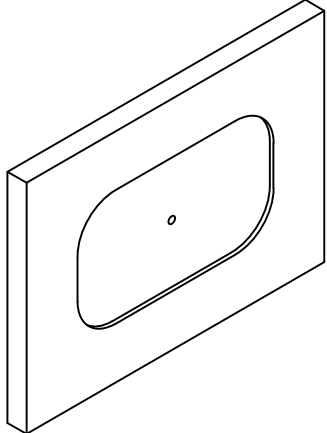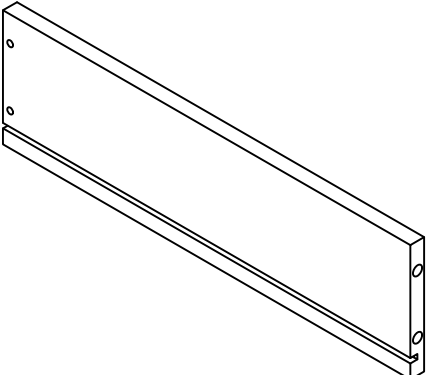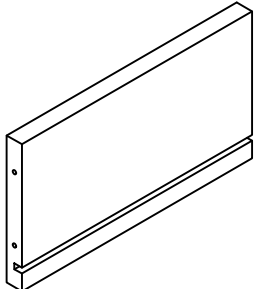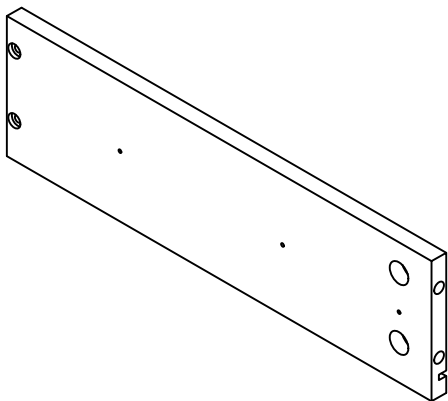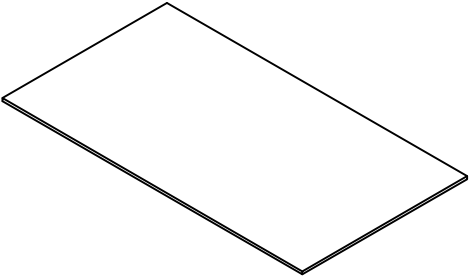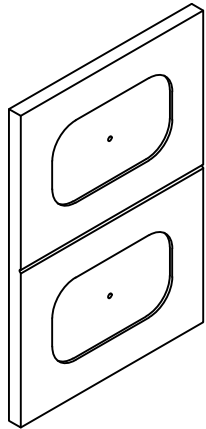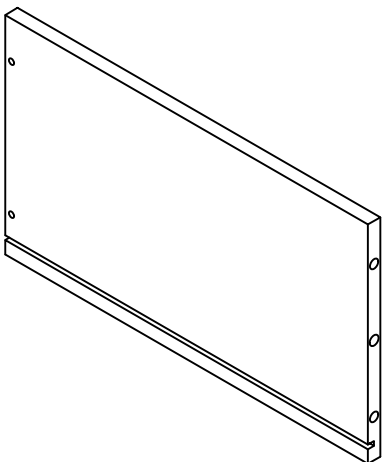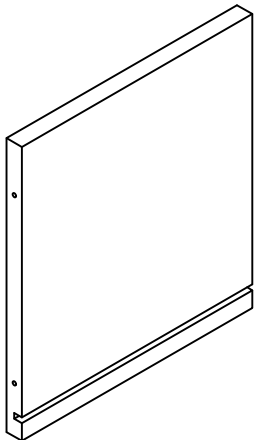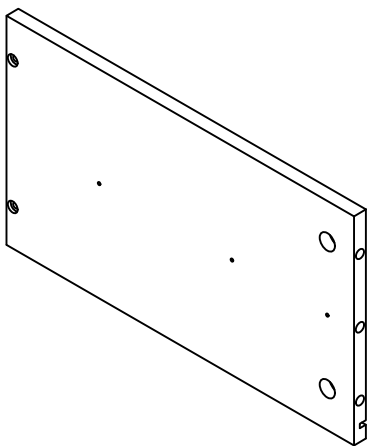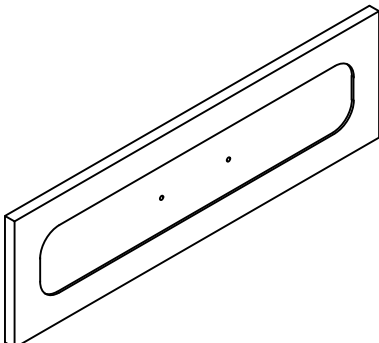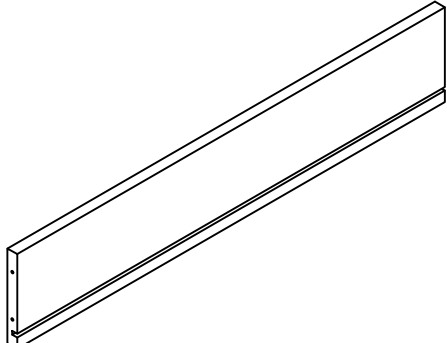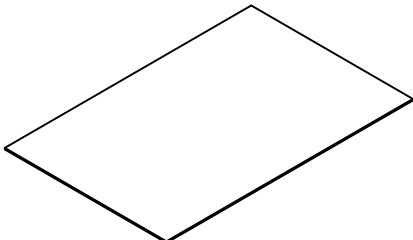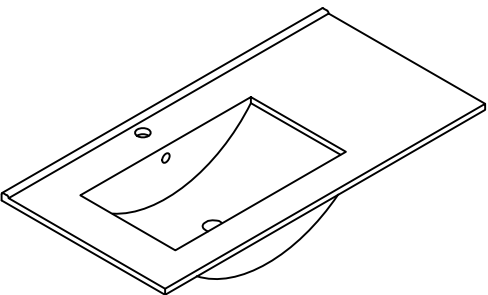
A	B	C	D	E	F
					
1PC	1PC	1PC	1PC	1PC	1PC
G	H	I	J	K	L
					
1PC	1PC	1PC	1PC	1PC	1PC
M	N	O	P	Q	R
					
2PCS	3PCS	2PCS	3PCS	3PCS	1PC
S	T	U	V	W	X
					
1PC	1PC	1PC	1PC	1PC	1PC
Y					
					
1PC					

HARDWARE :

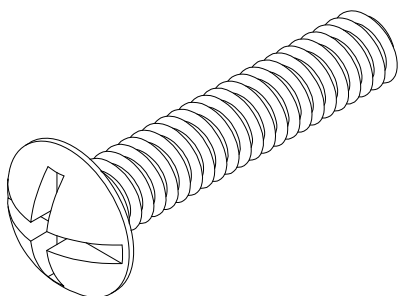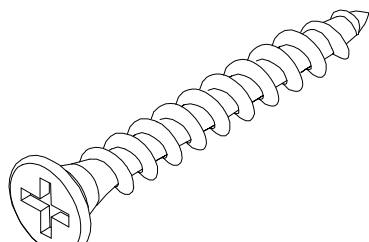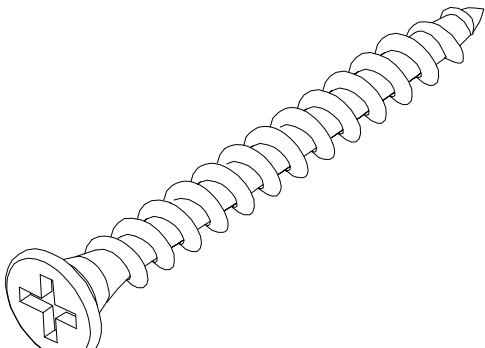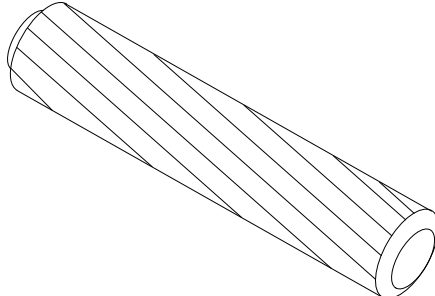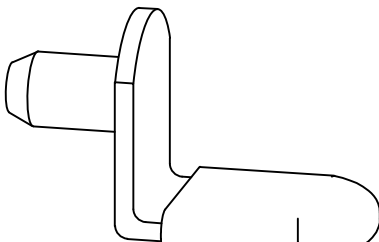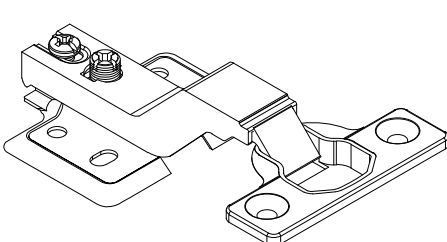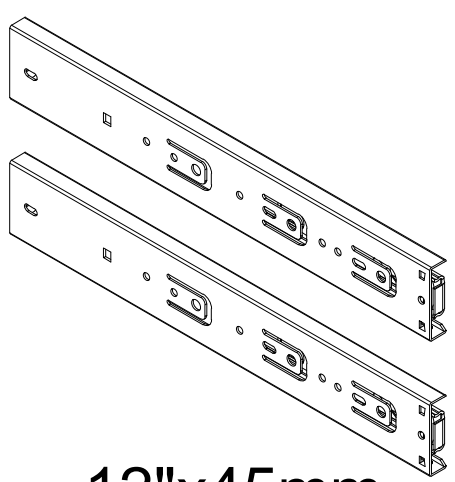
①	②	③	④	⑤	⑥
 1/4"x25mm	 Ø4x25mm	 Ø4x35mm	 Ø8x30mm		
14+1 PCS	16+1 PCS	6 PCS	24+2 PCS	4 PCS	4 PCS
⑦	⑧	⑨	⑩	⑪	⑫
	 Ø4x12mm	 12"x45mm	 Ø3x10mm	 Ø6x33mm	 Ø15x9mm
3 PCS	24+2 PCS	4 SET	48+2 PCS	25+2 PCS	25+2 PCS
⑬	⑭	⑮	⑯		
 5/32"x18mm		 20x20x33mm	 Ø3x12mm		
10 PCS	4 PCS	3 PCS	12 PCS		


STEP 1


4  8pcs
Ø8x30mm

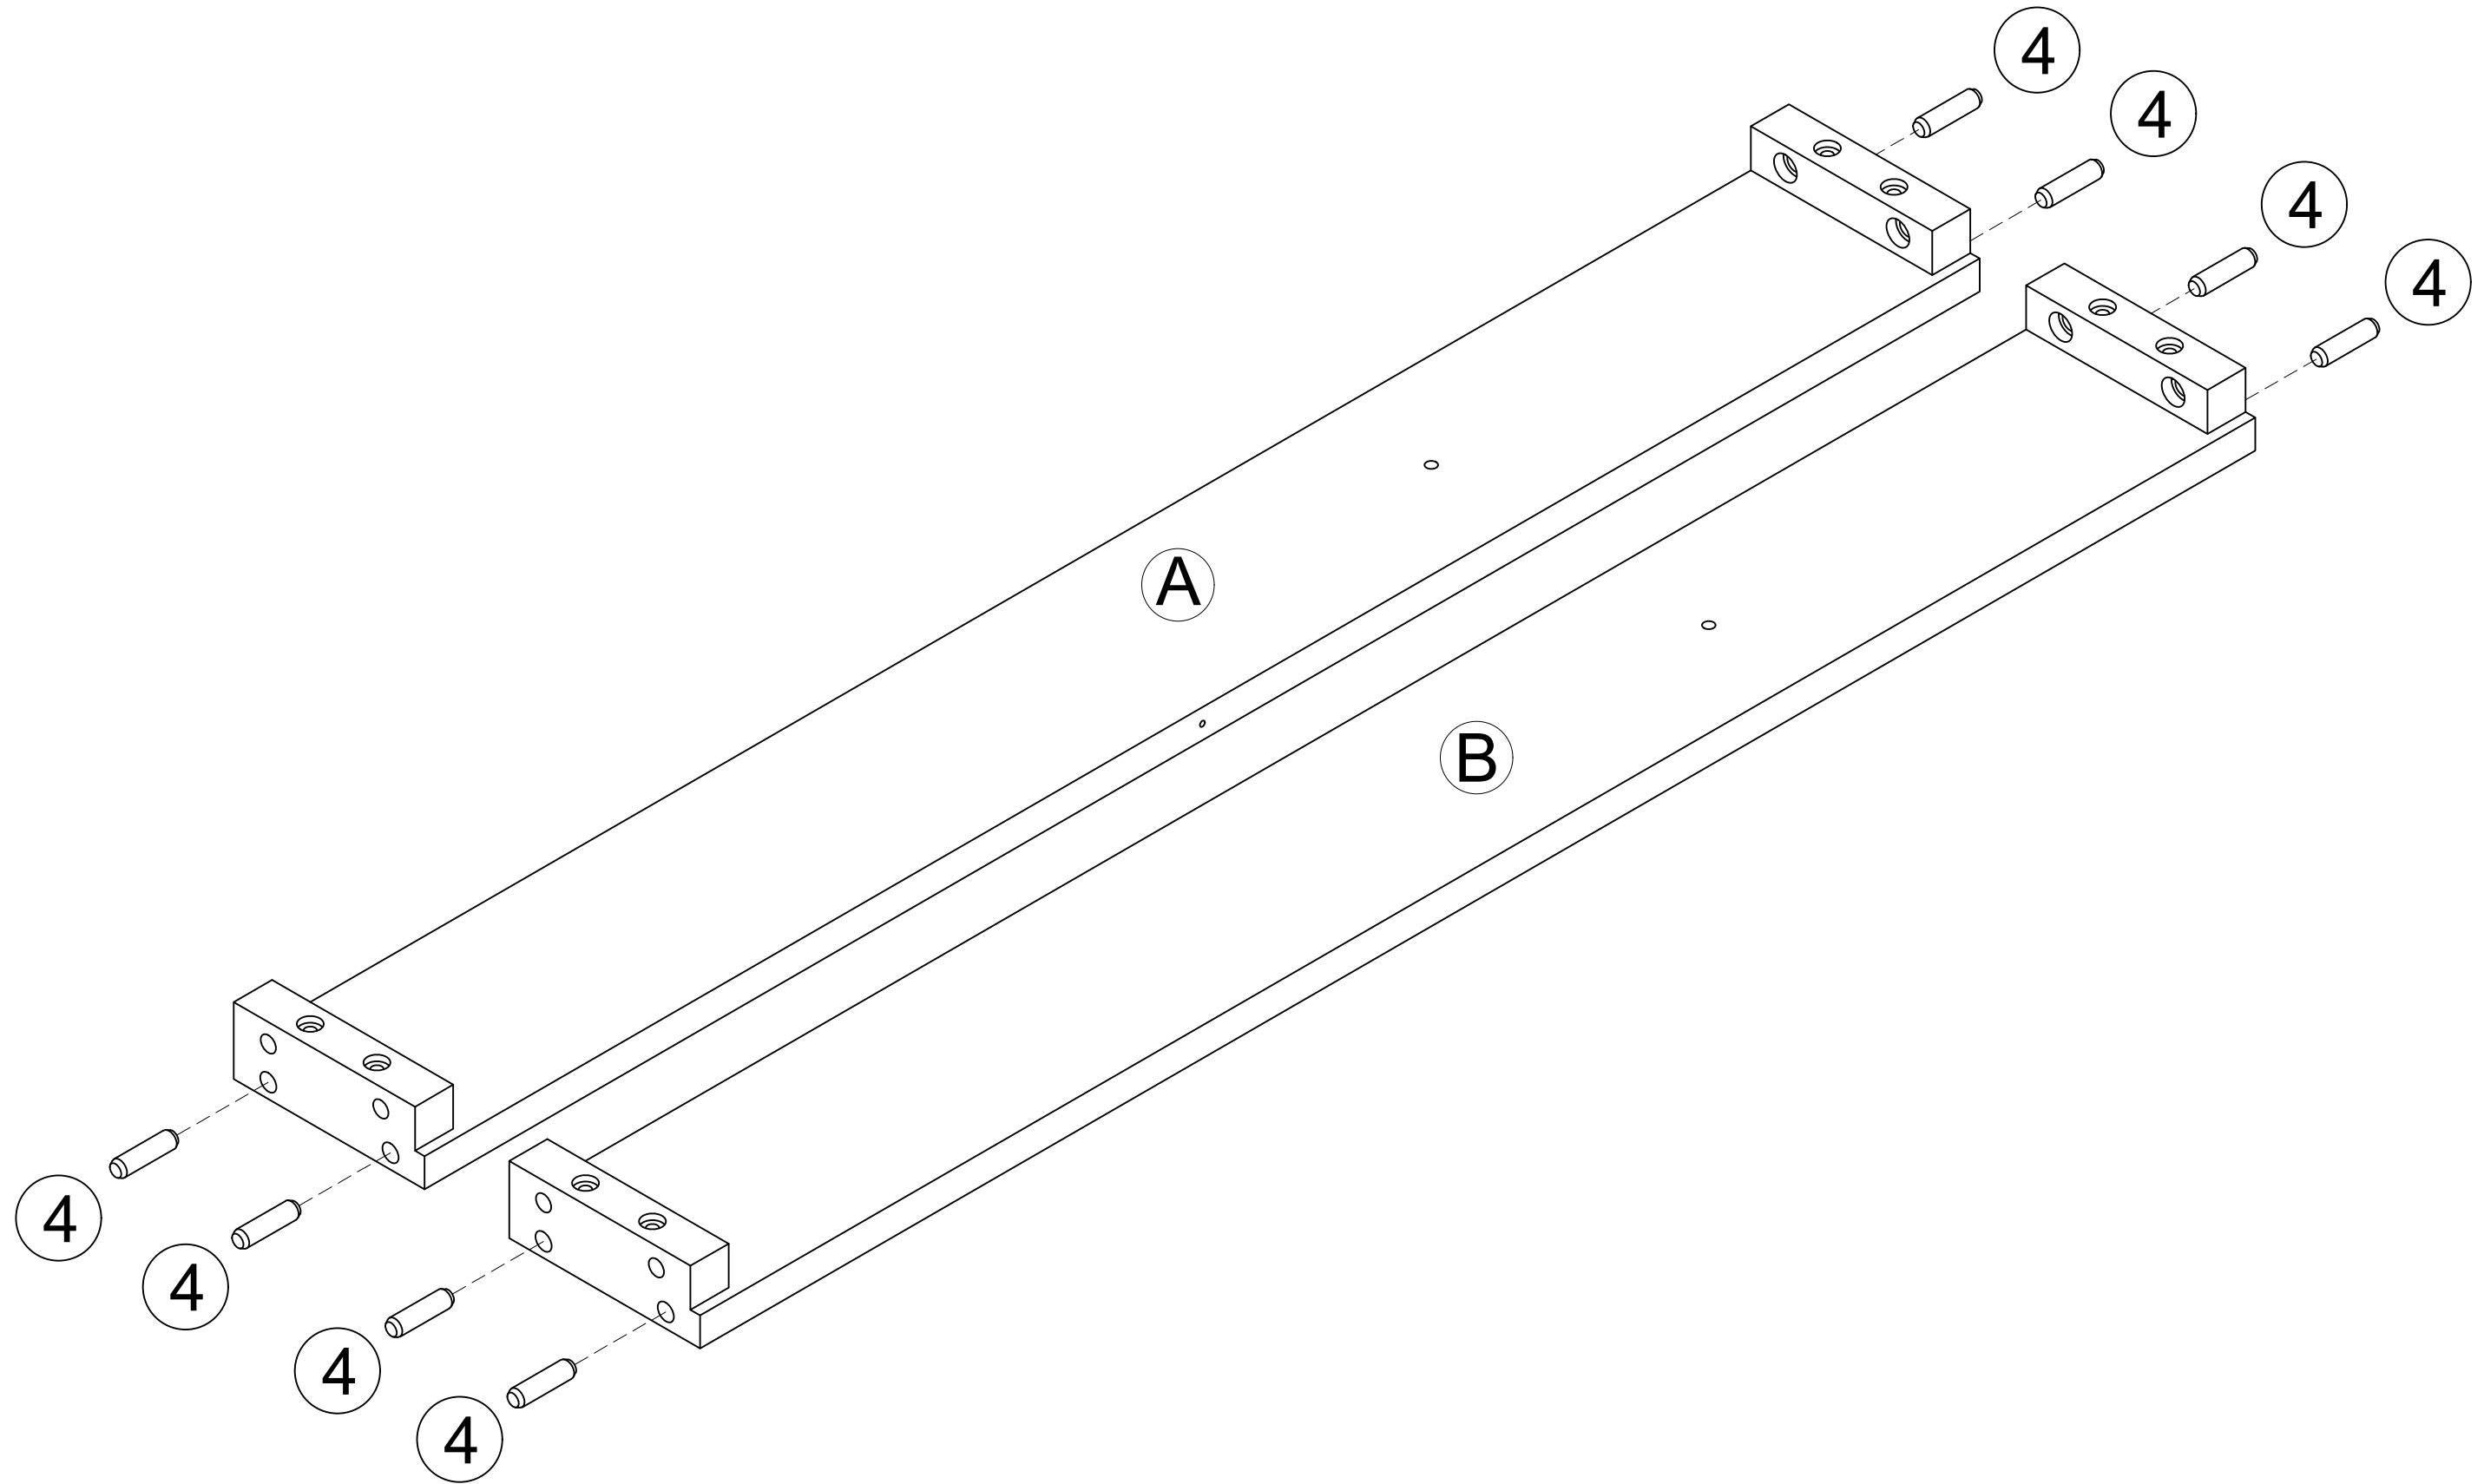


STEP 2


4  4pcs
Ø8x30mm


16  6pcs
Ø3x12mm

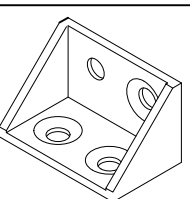15  3pcs
3pcs

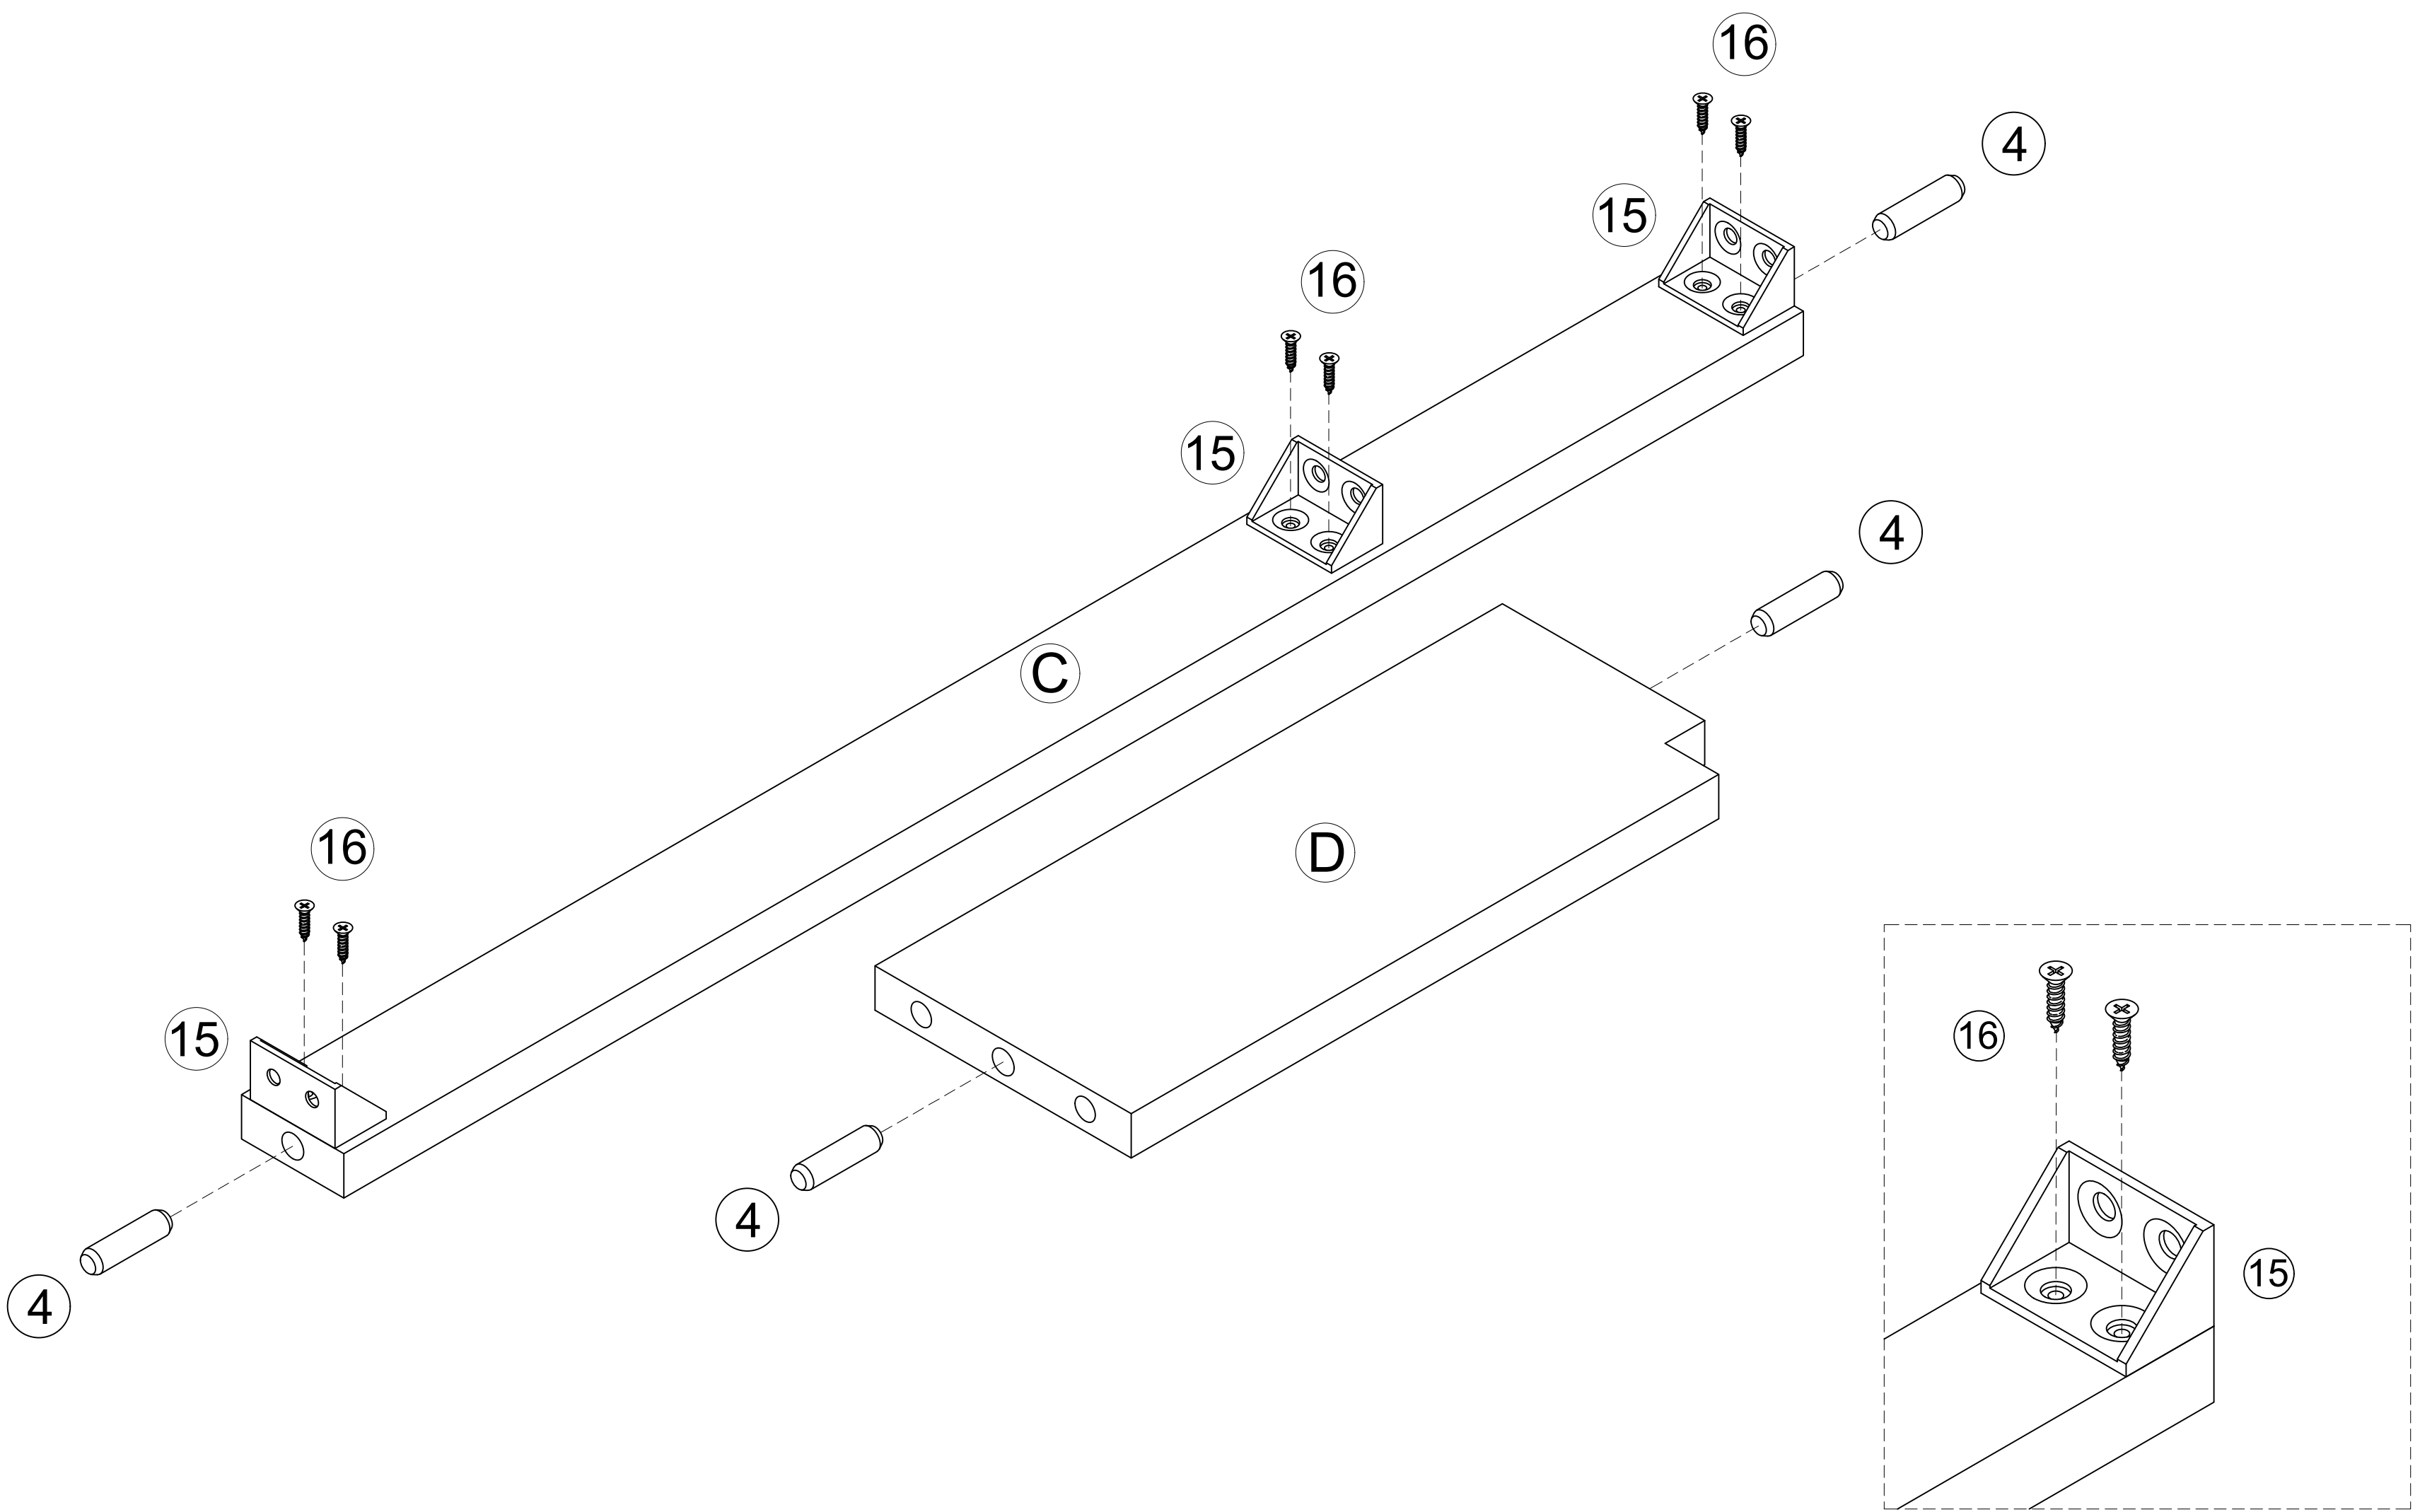


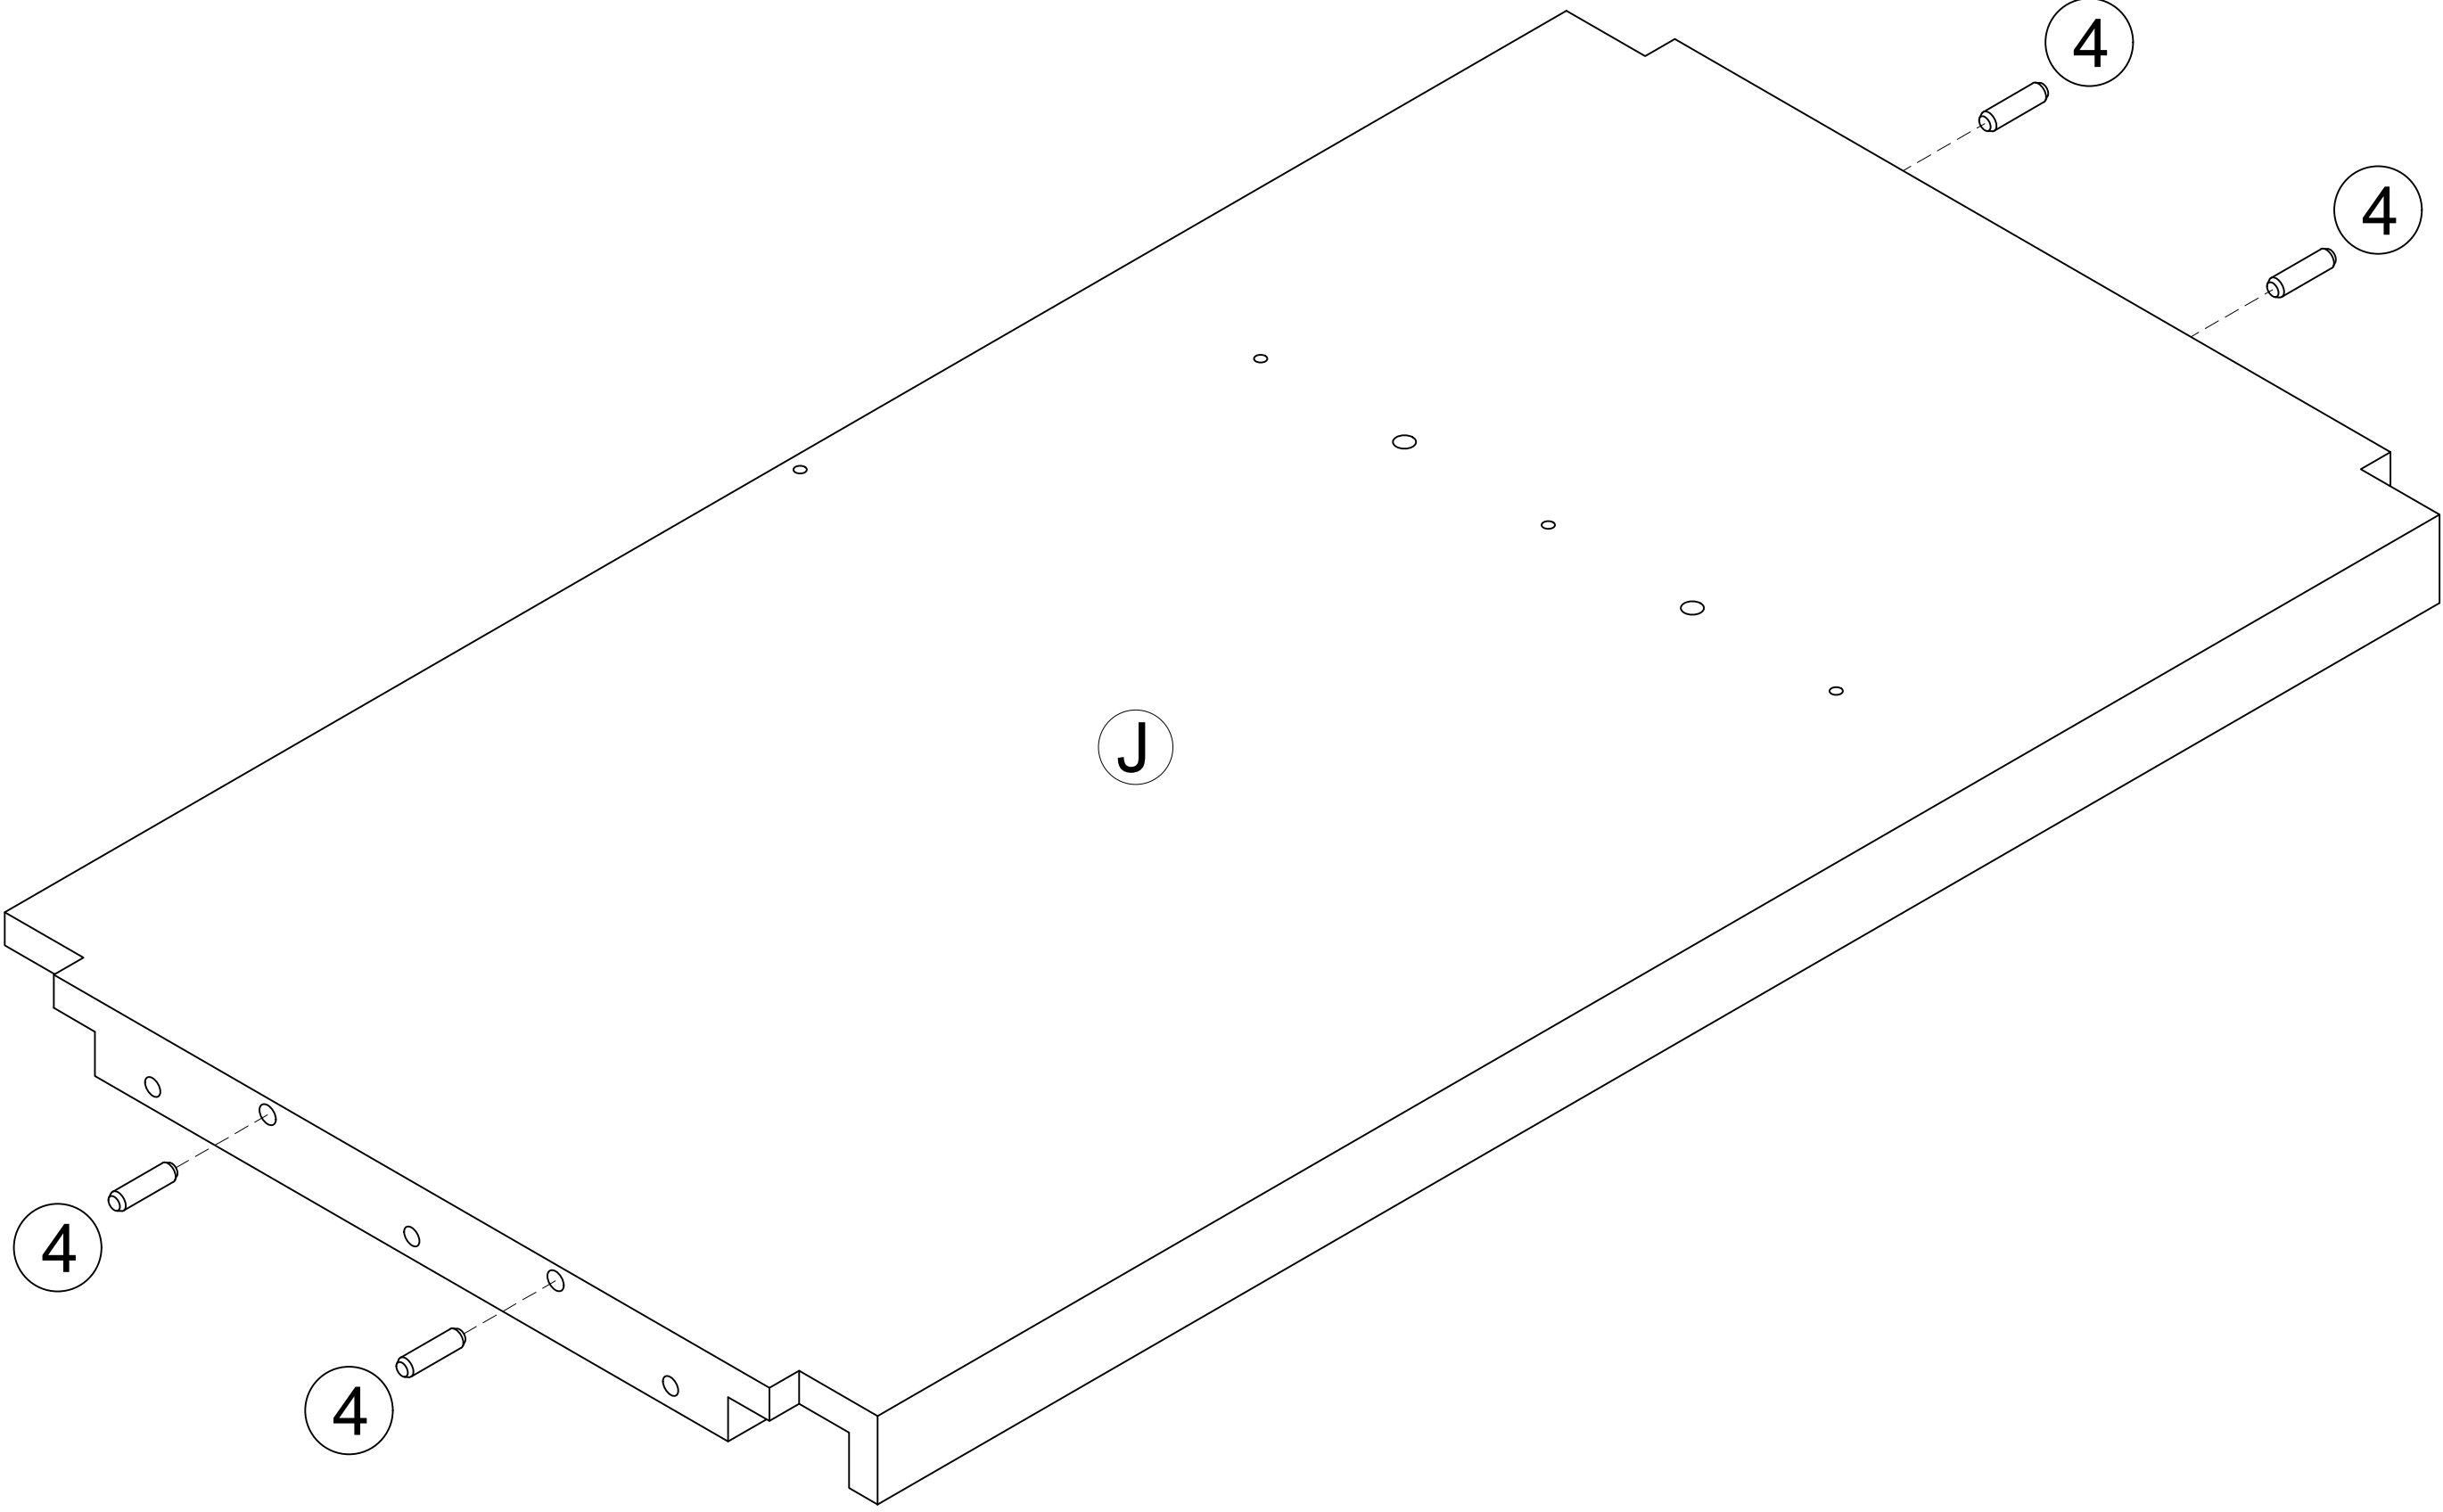
STEP 3

4  4pcs
Ø8x30mm

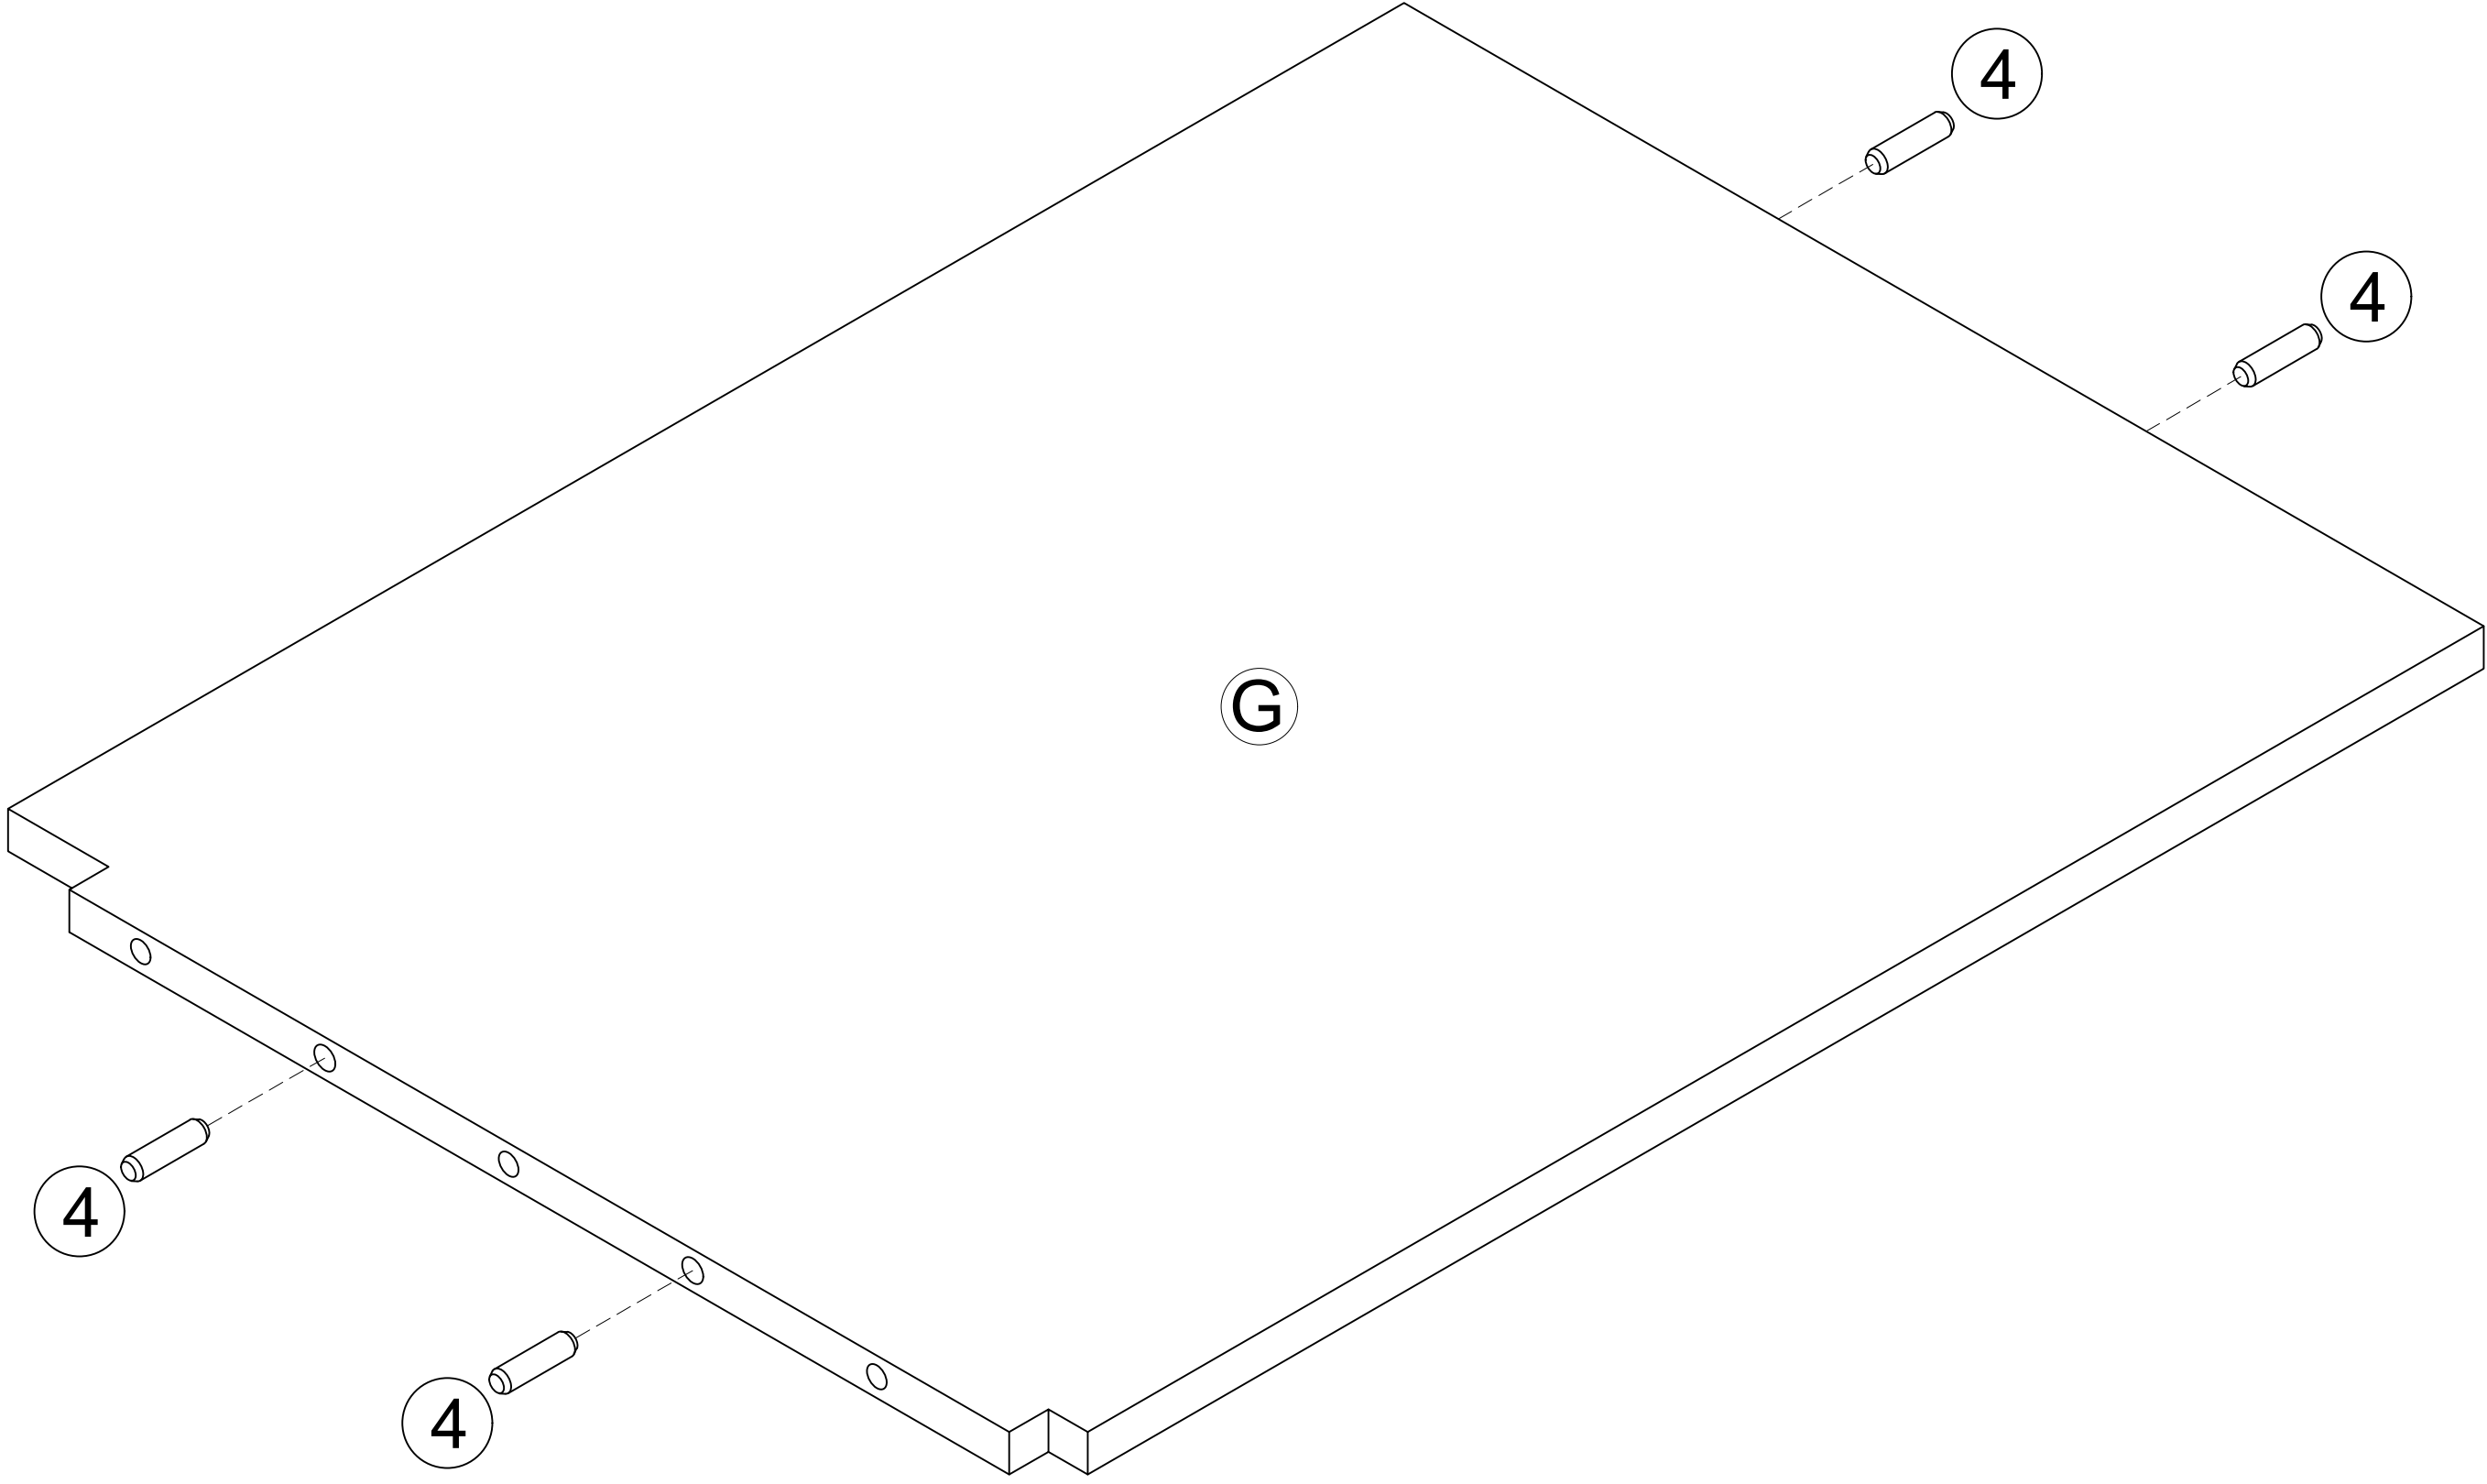


STEP 4

4  4pcs
Ø8x30mm




STEP 5

9 12"x45mm 1SET




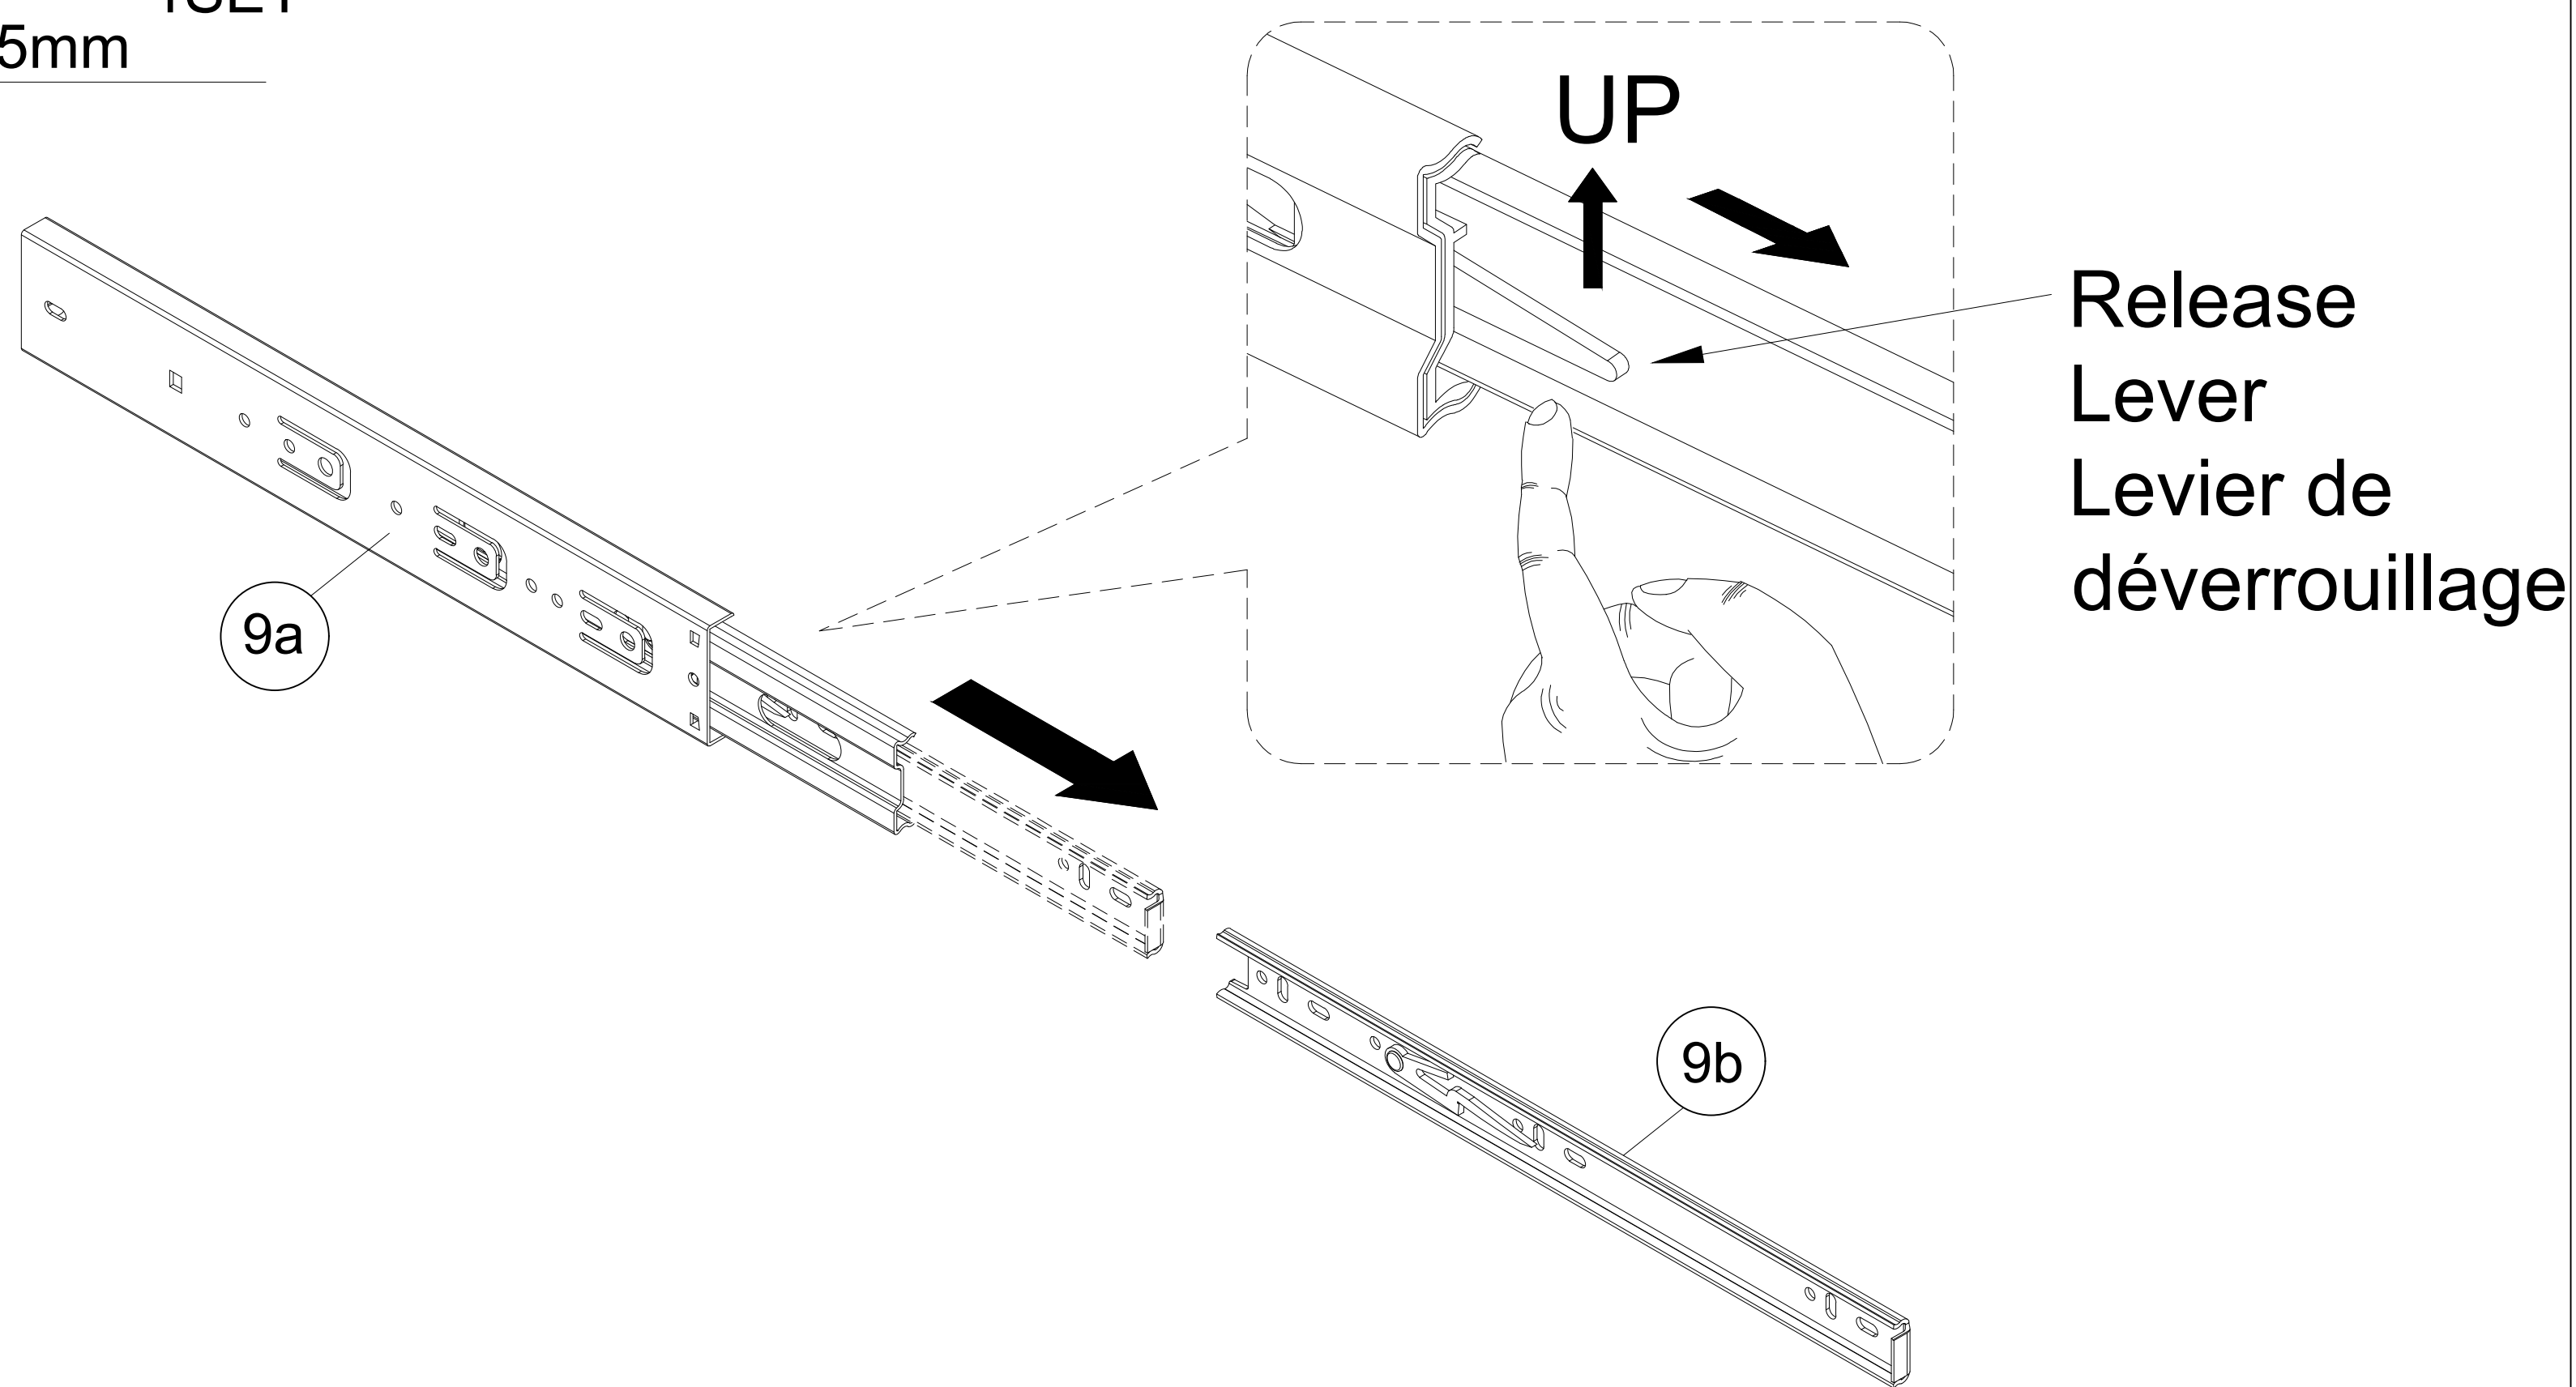


STEP 6

9a 12"x45mm 1pc 10 Ø3x10mm 3pcs 4 Ø8x30mm 2pcs 11 Ø6x33mm 3pcs

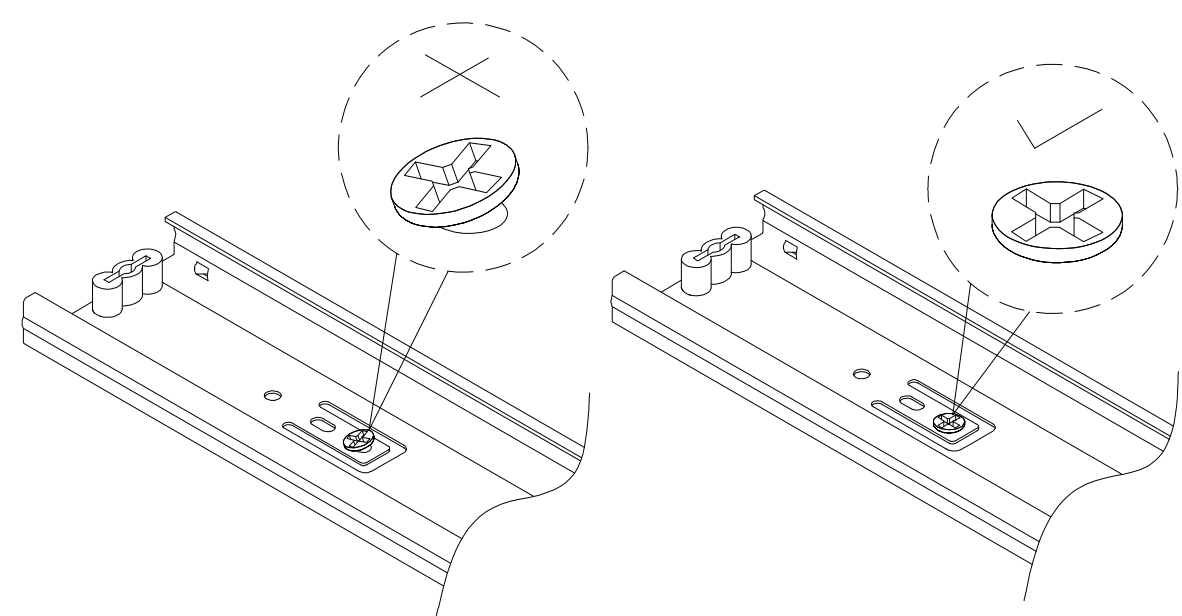


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

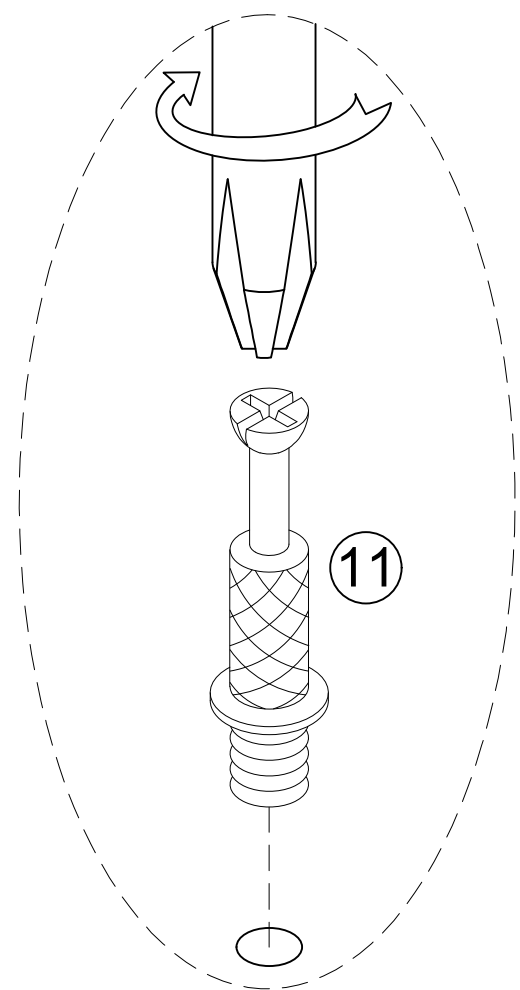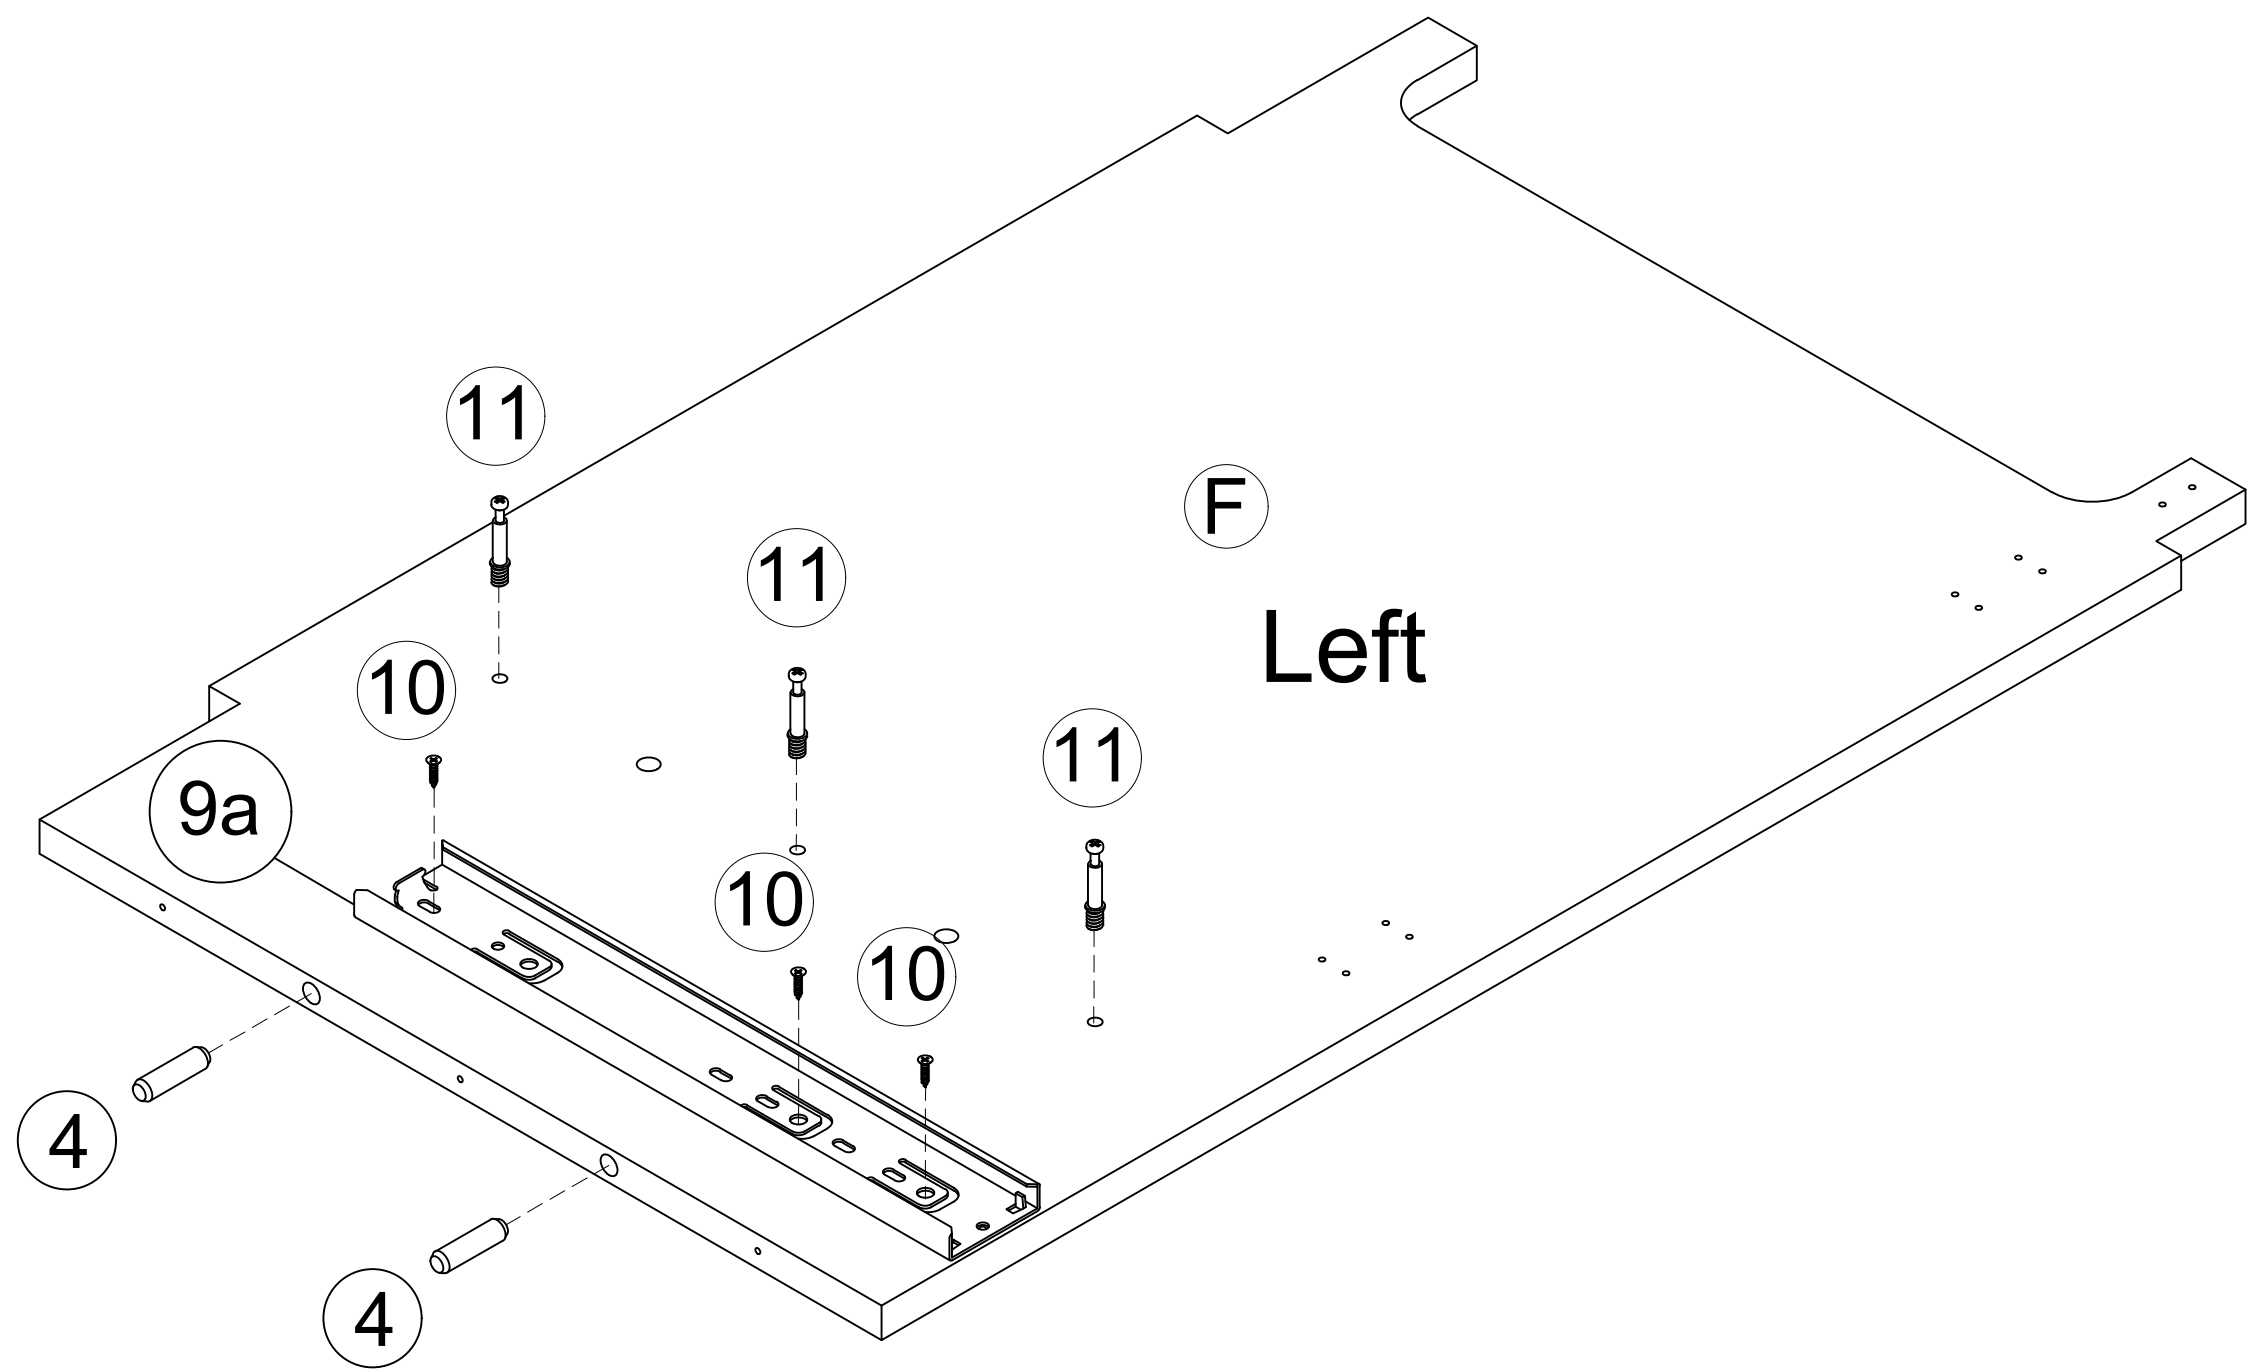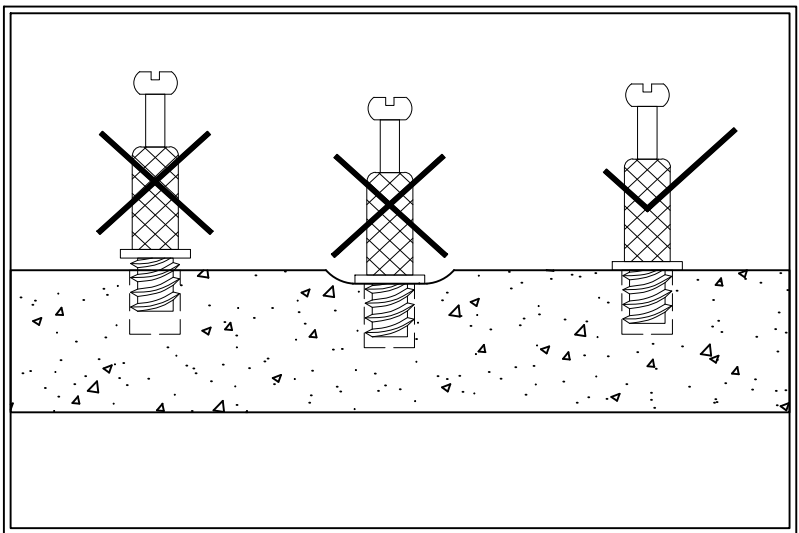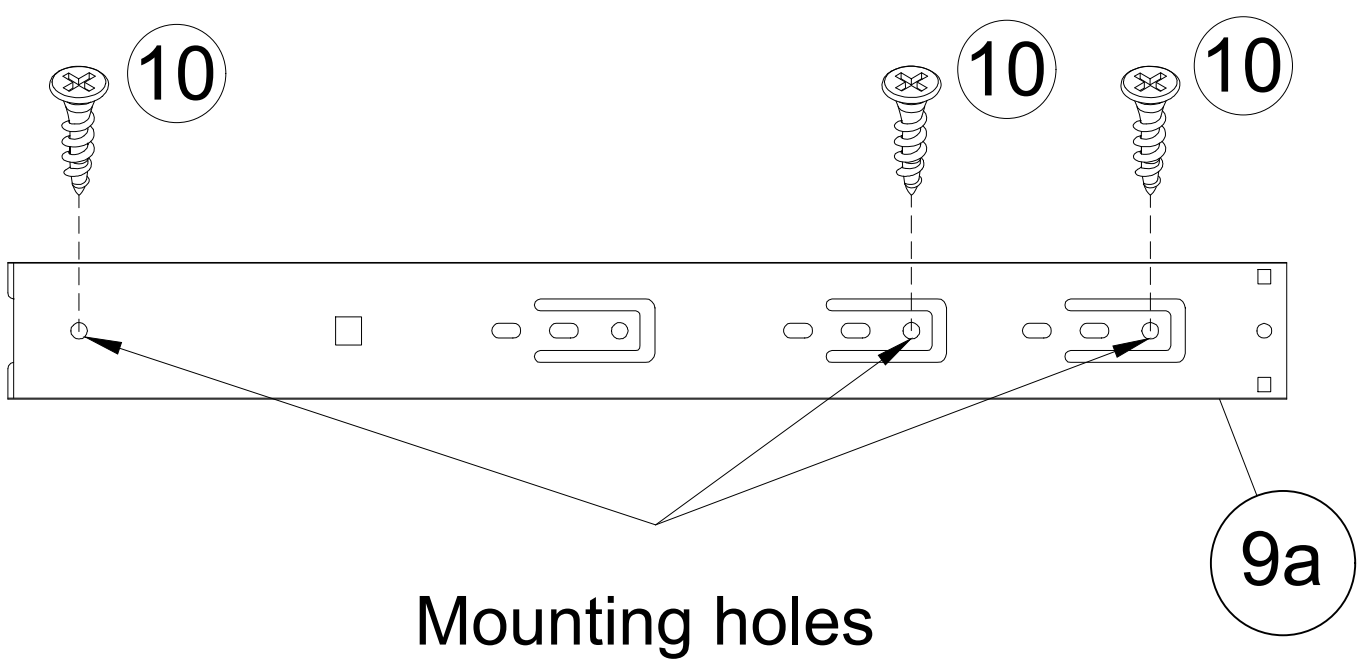


STEP 7

9 12"x45mm 3SET




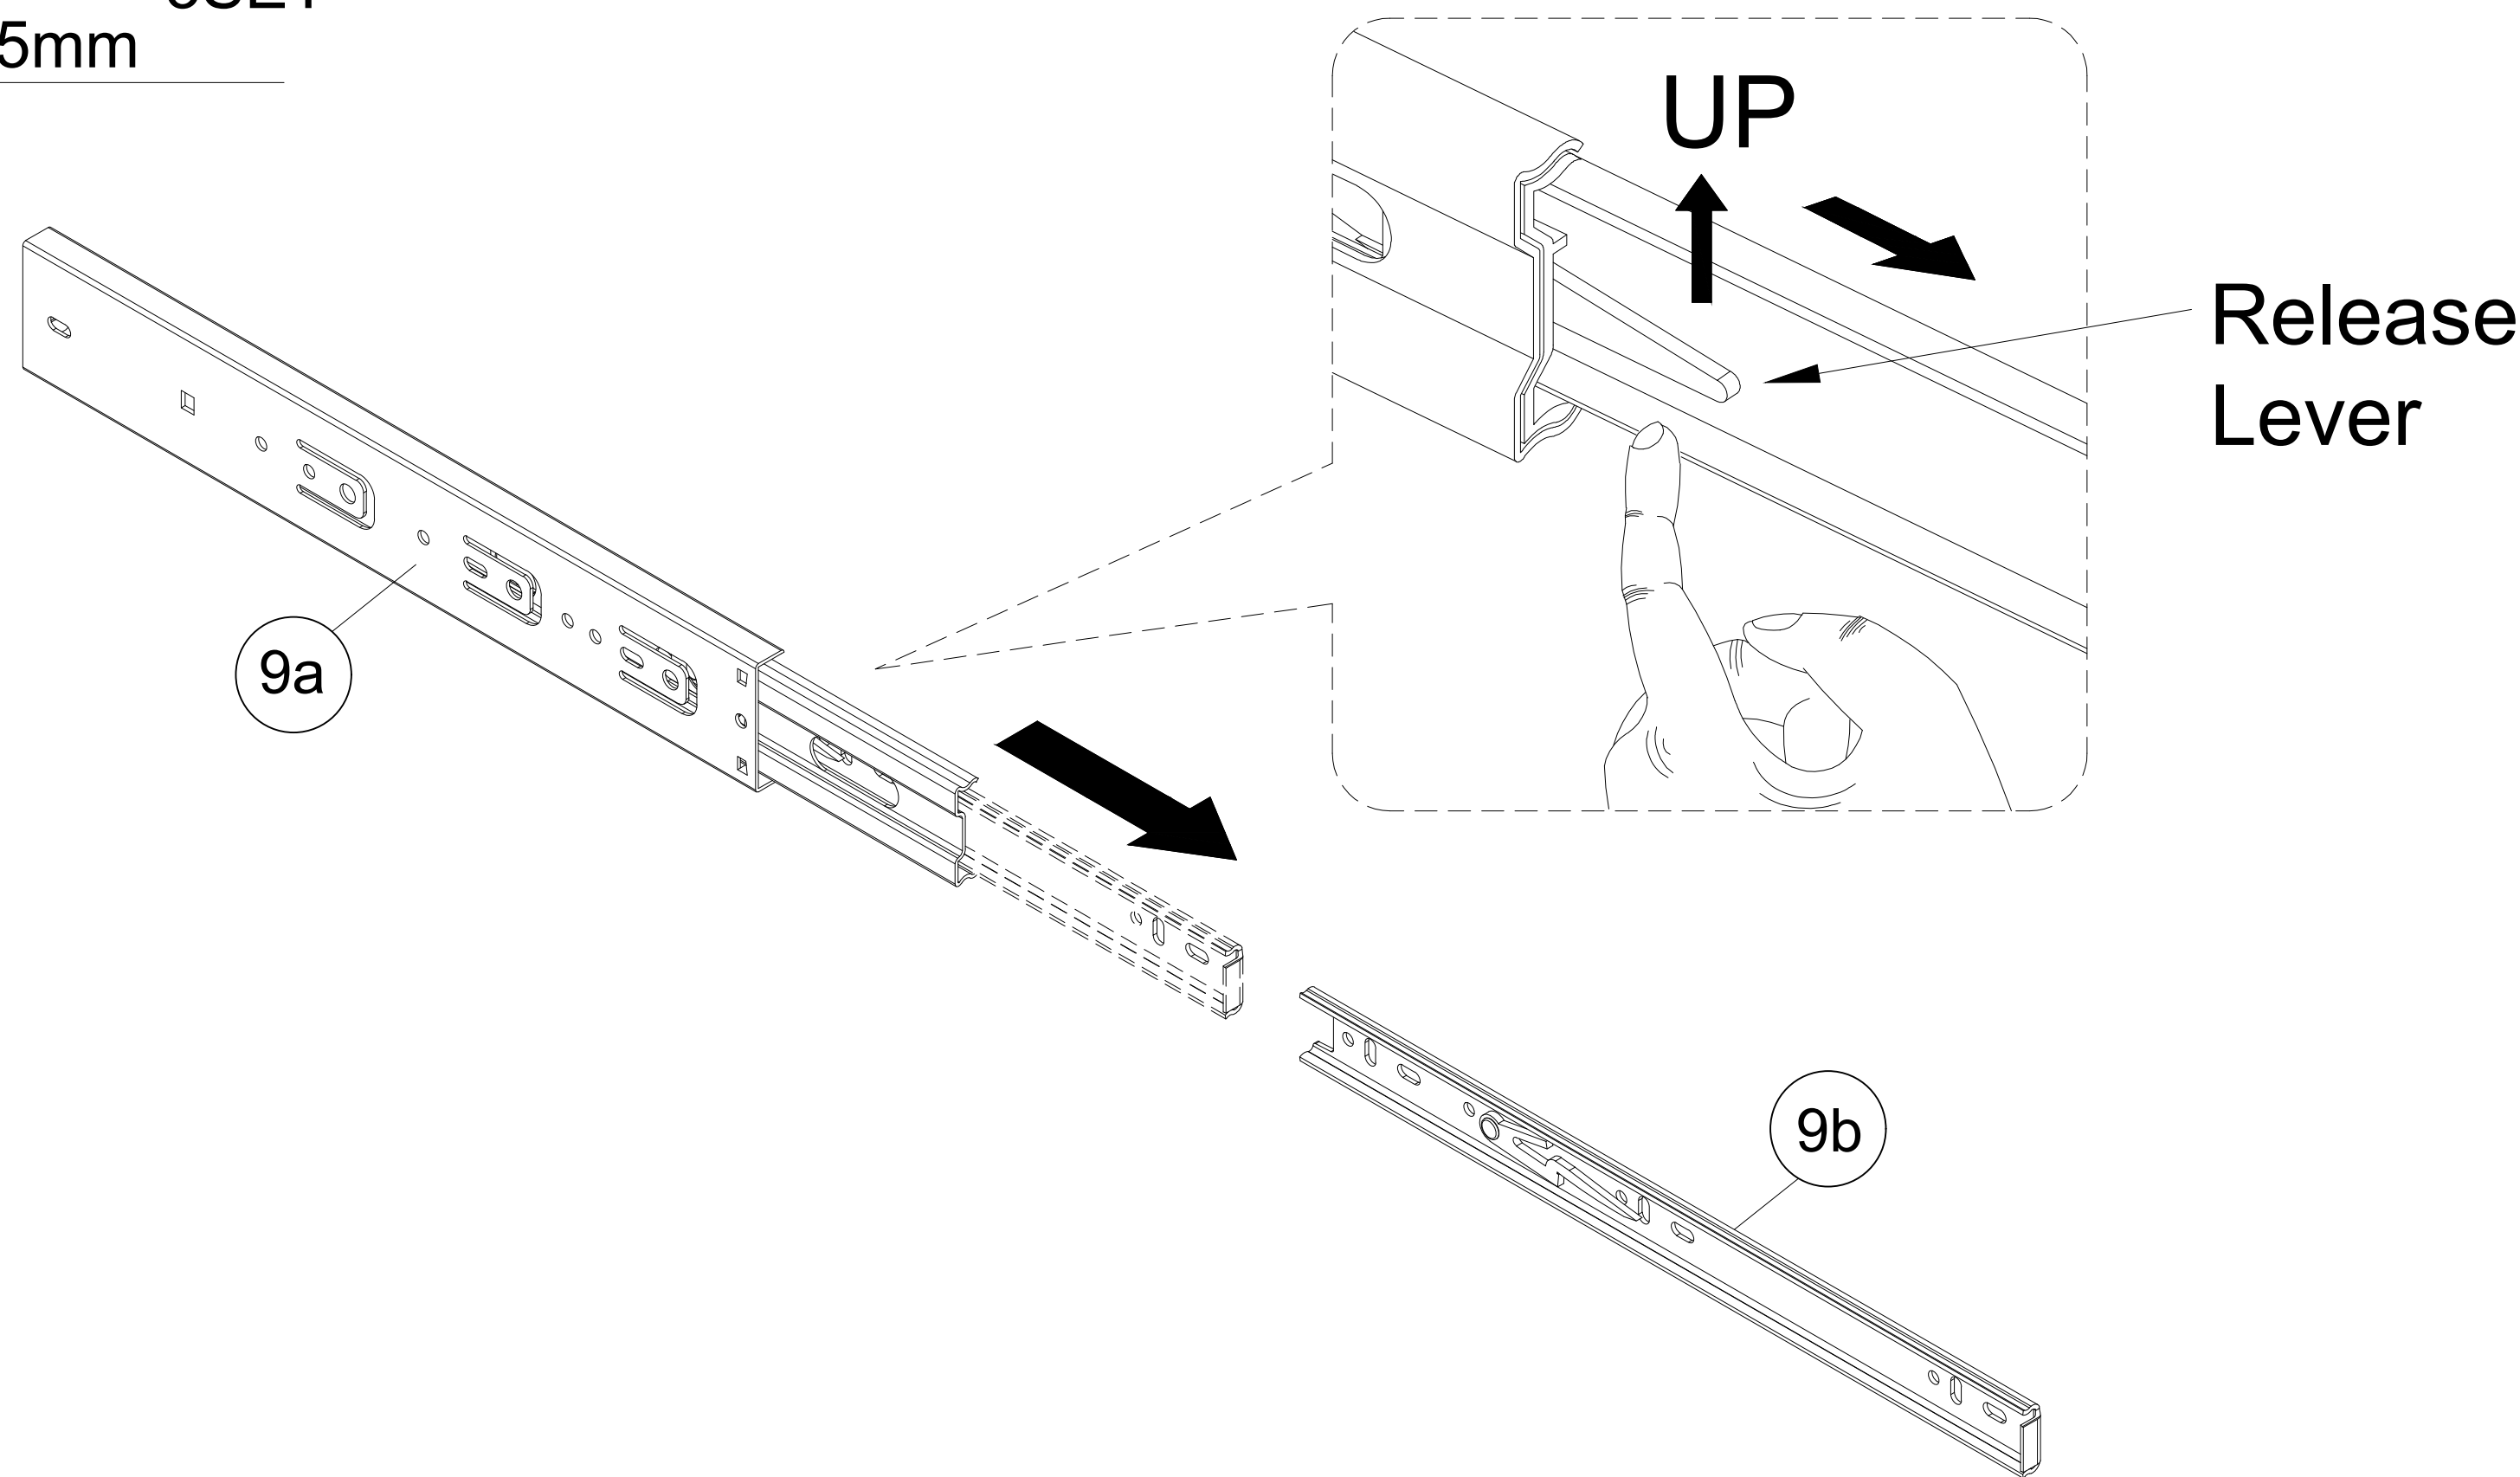


STEP 8

9a 12"x45mm 3pcs 10 Ø3x10mm 9pcs 11 Ø6x33mm 2pcs

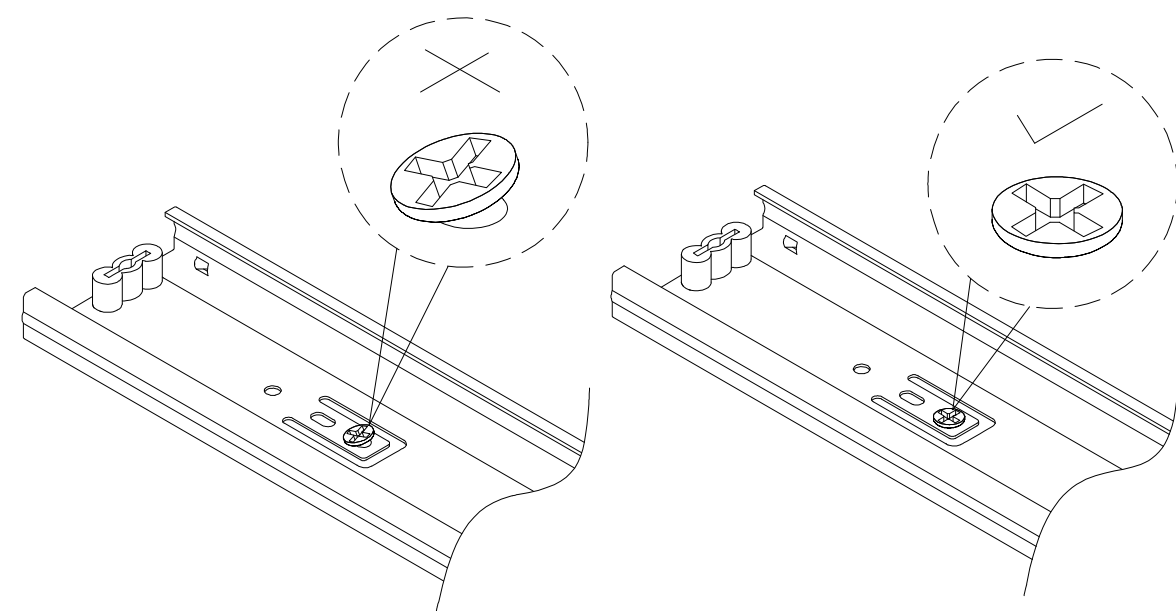



Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

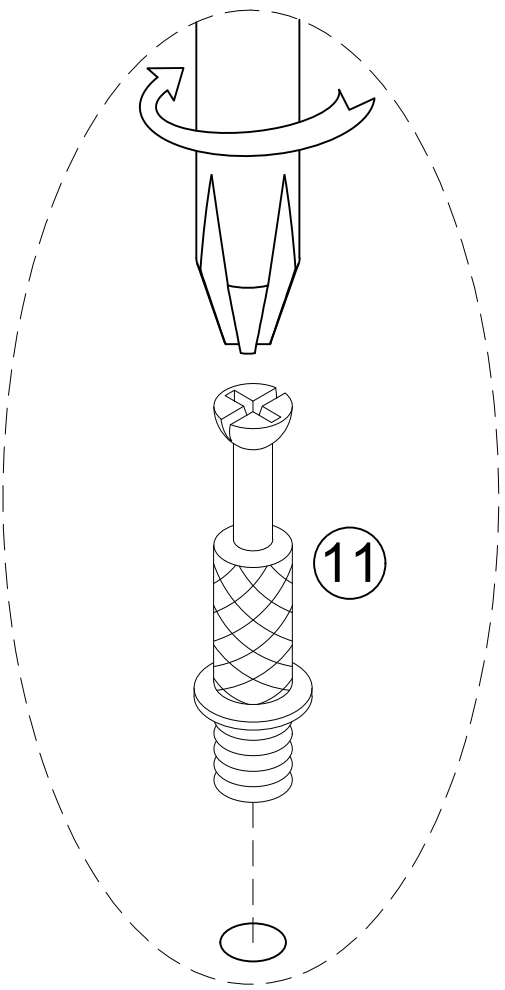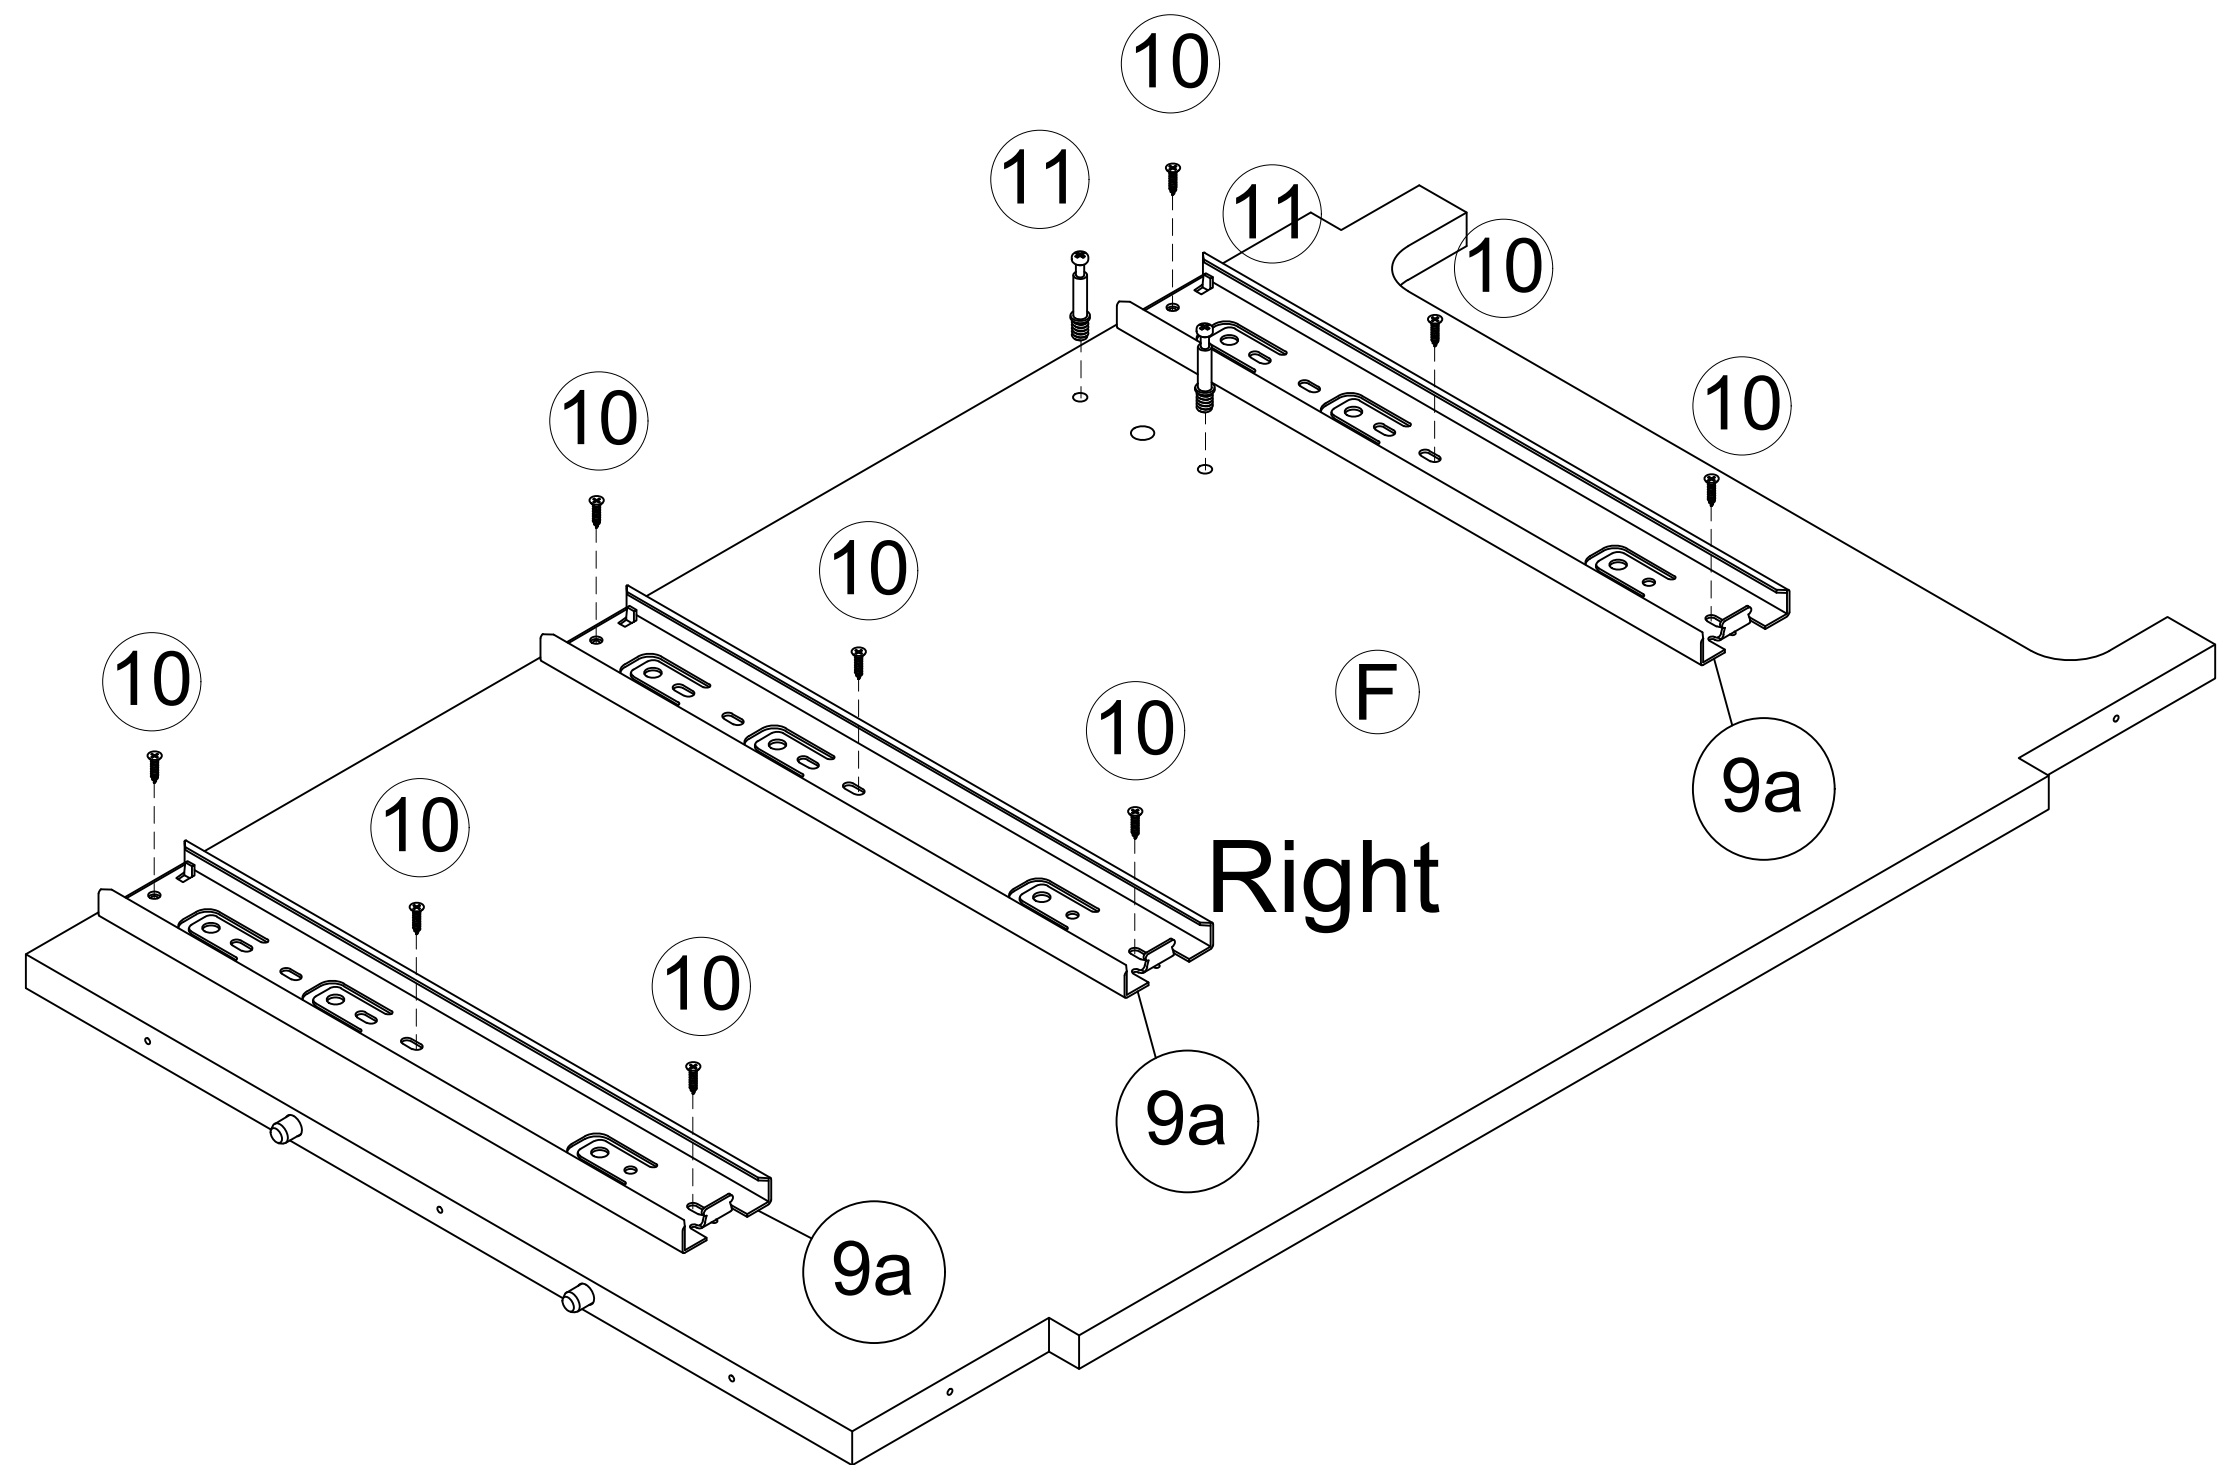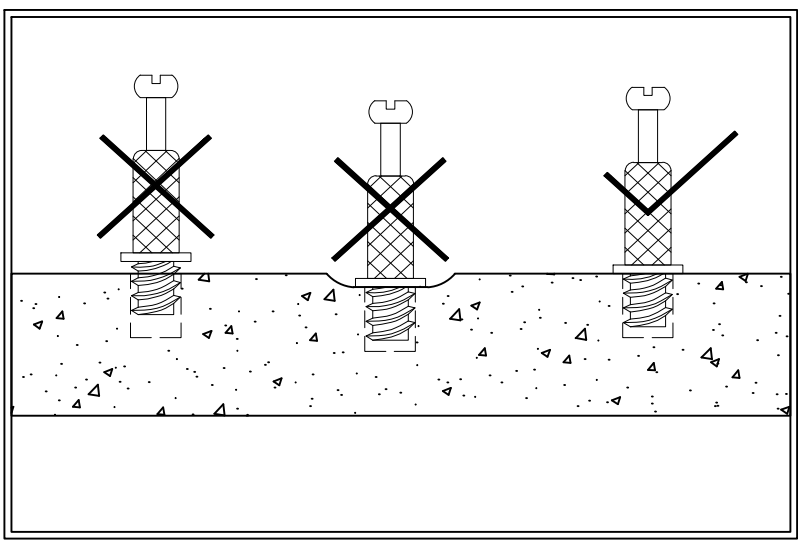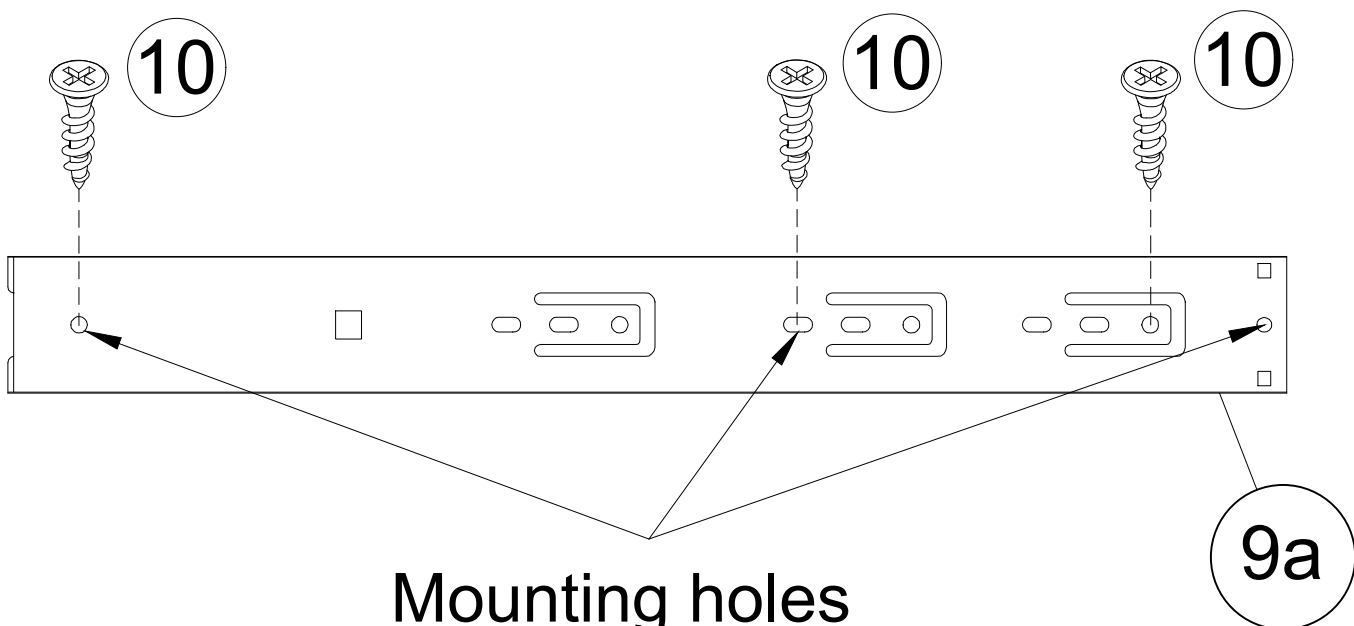

STEP 9


- 9


 1SET
12"x45mm

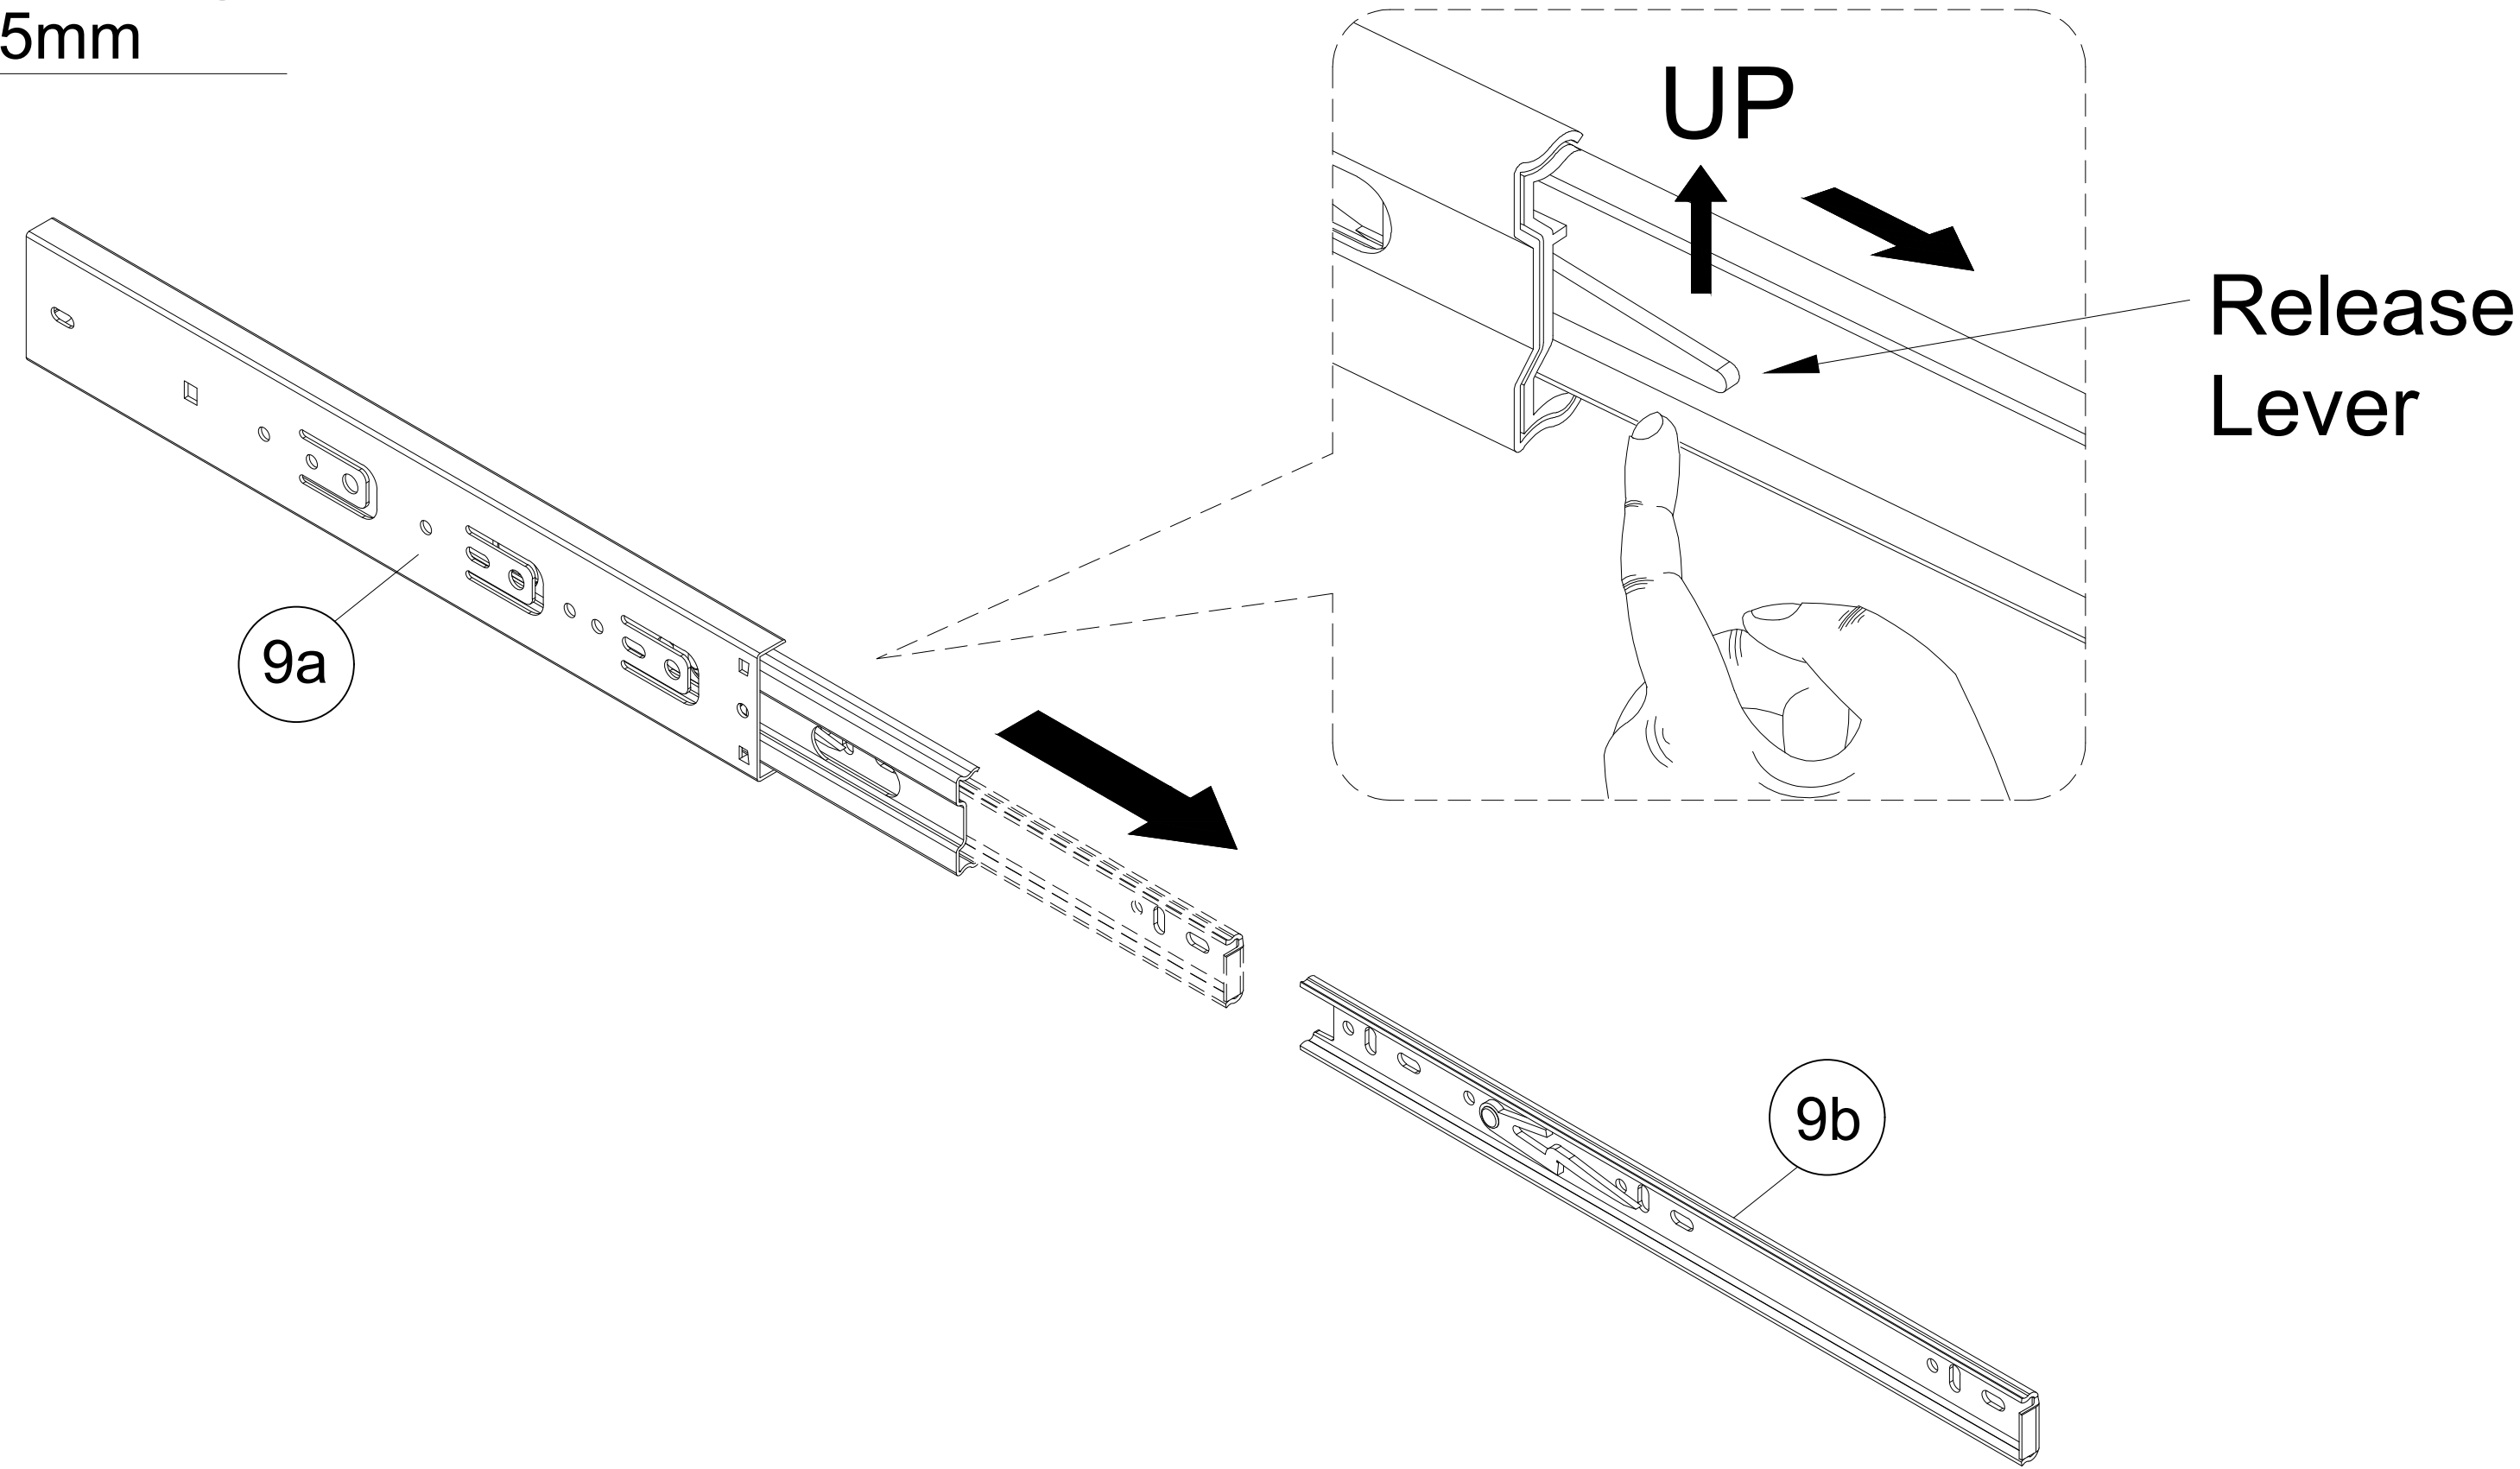


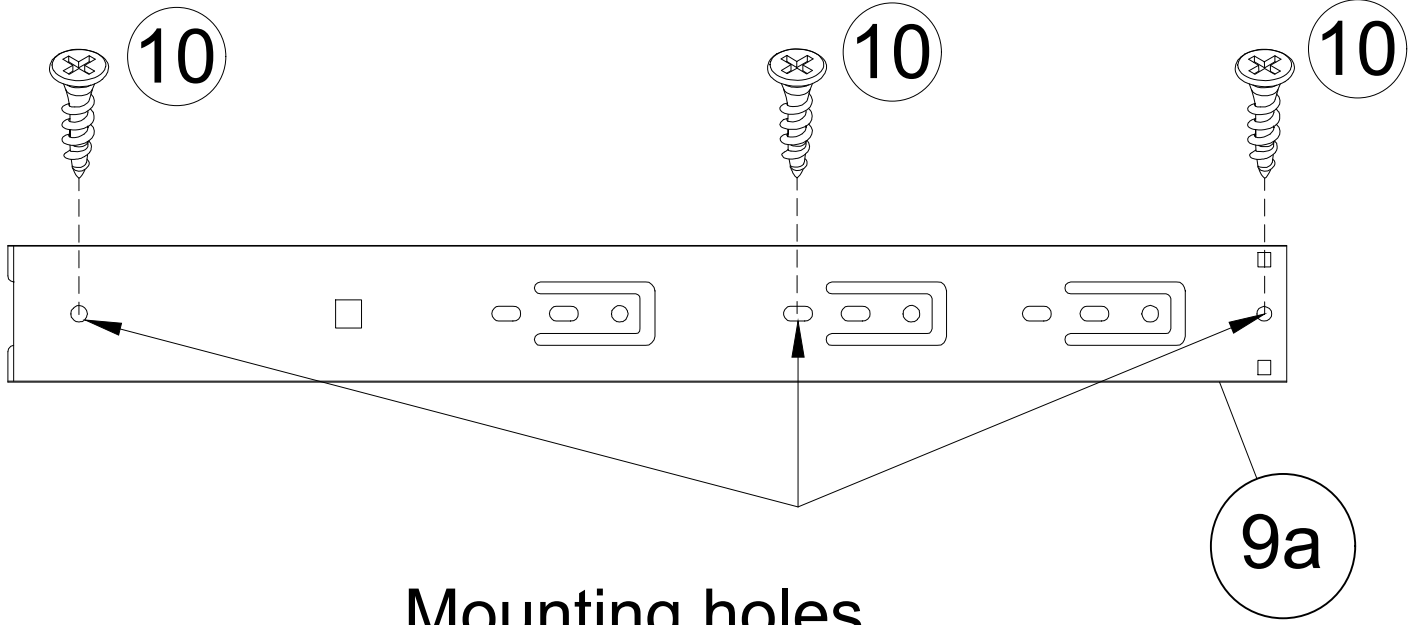
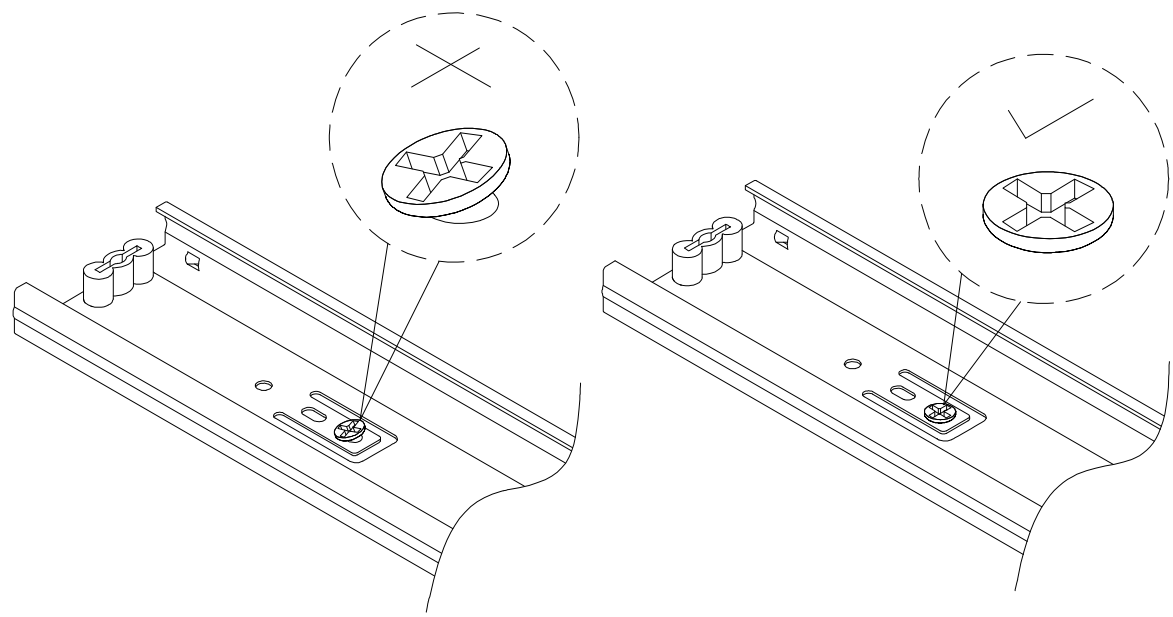
STEP 10

- 9a

 1pc
12"x45mm
- 10




 3pcs
Ø3x10mm
- 11

 3pcs
Ø6x33mm




Mounting holes

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

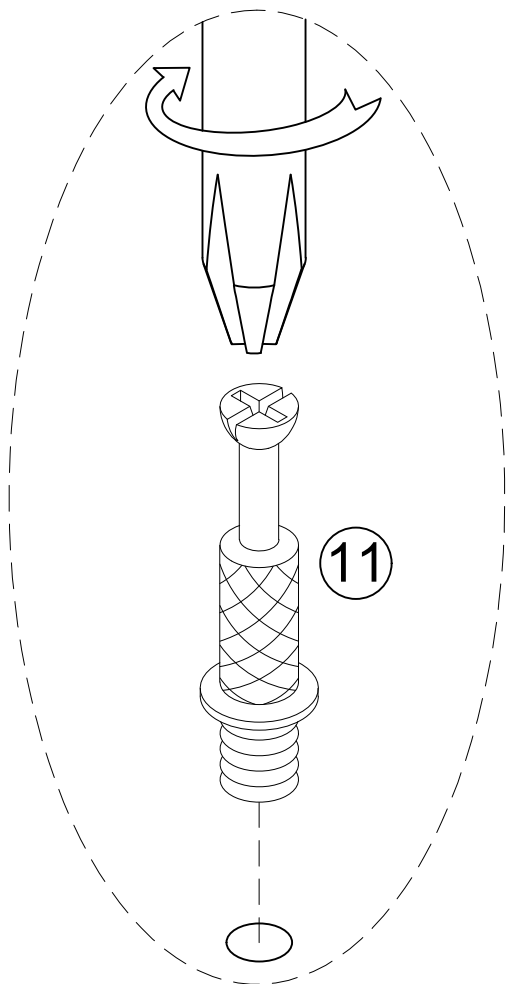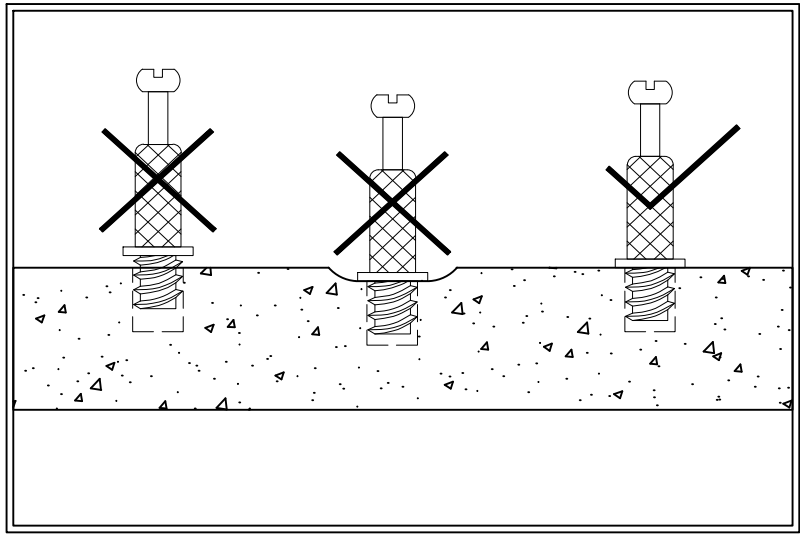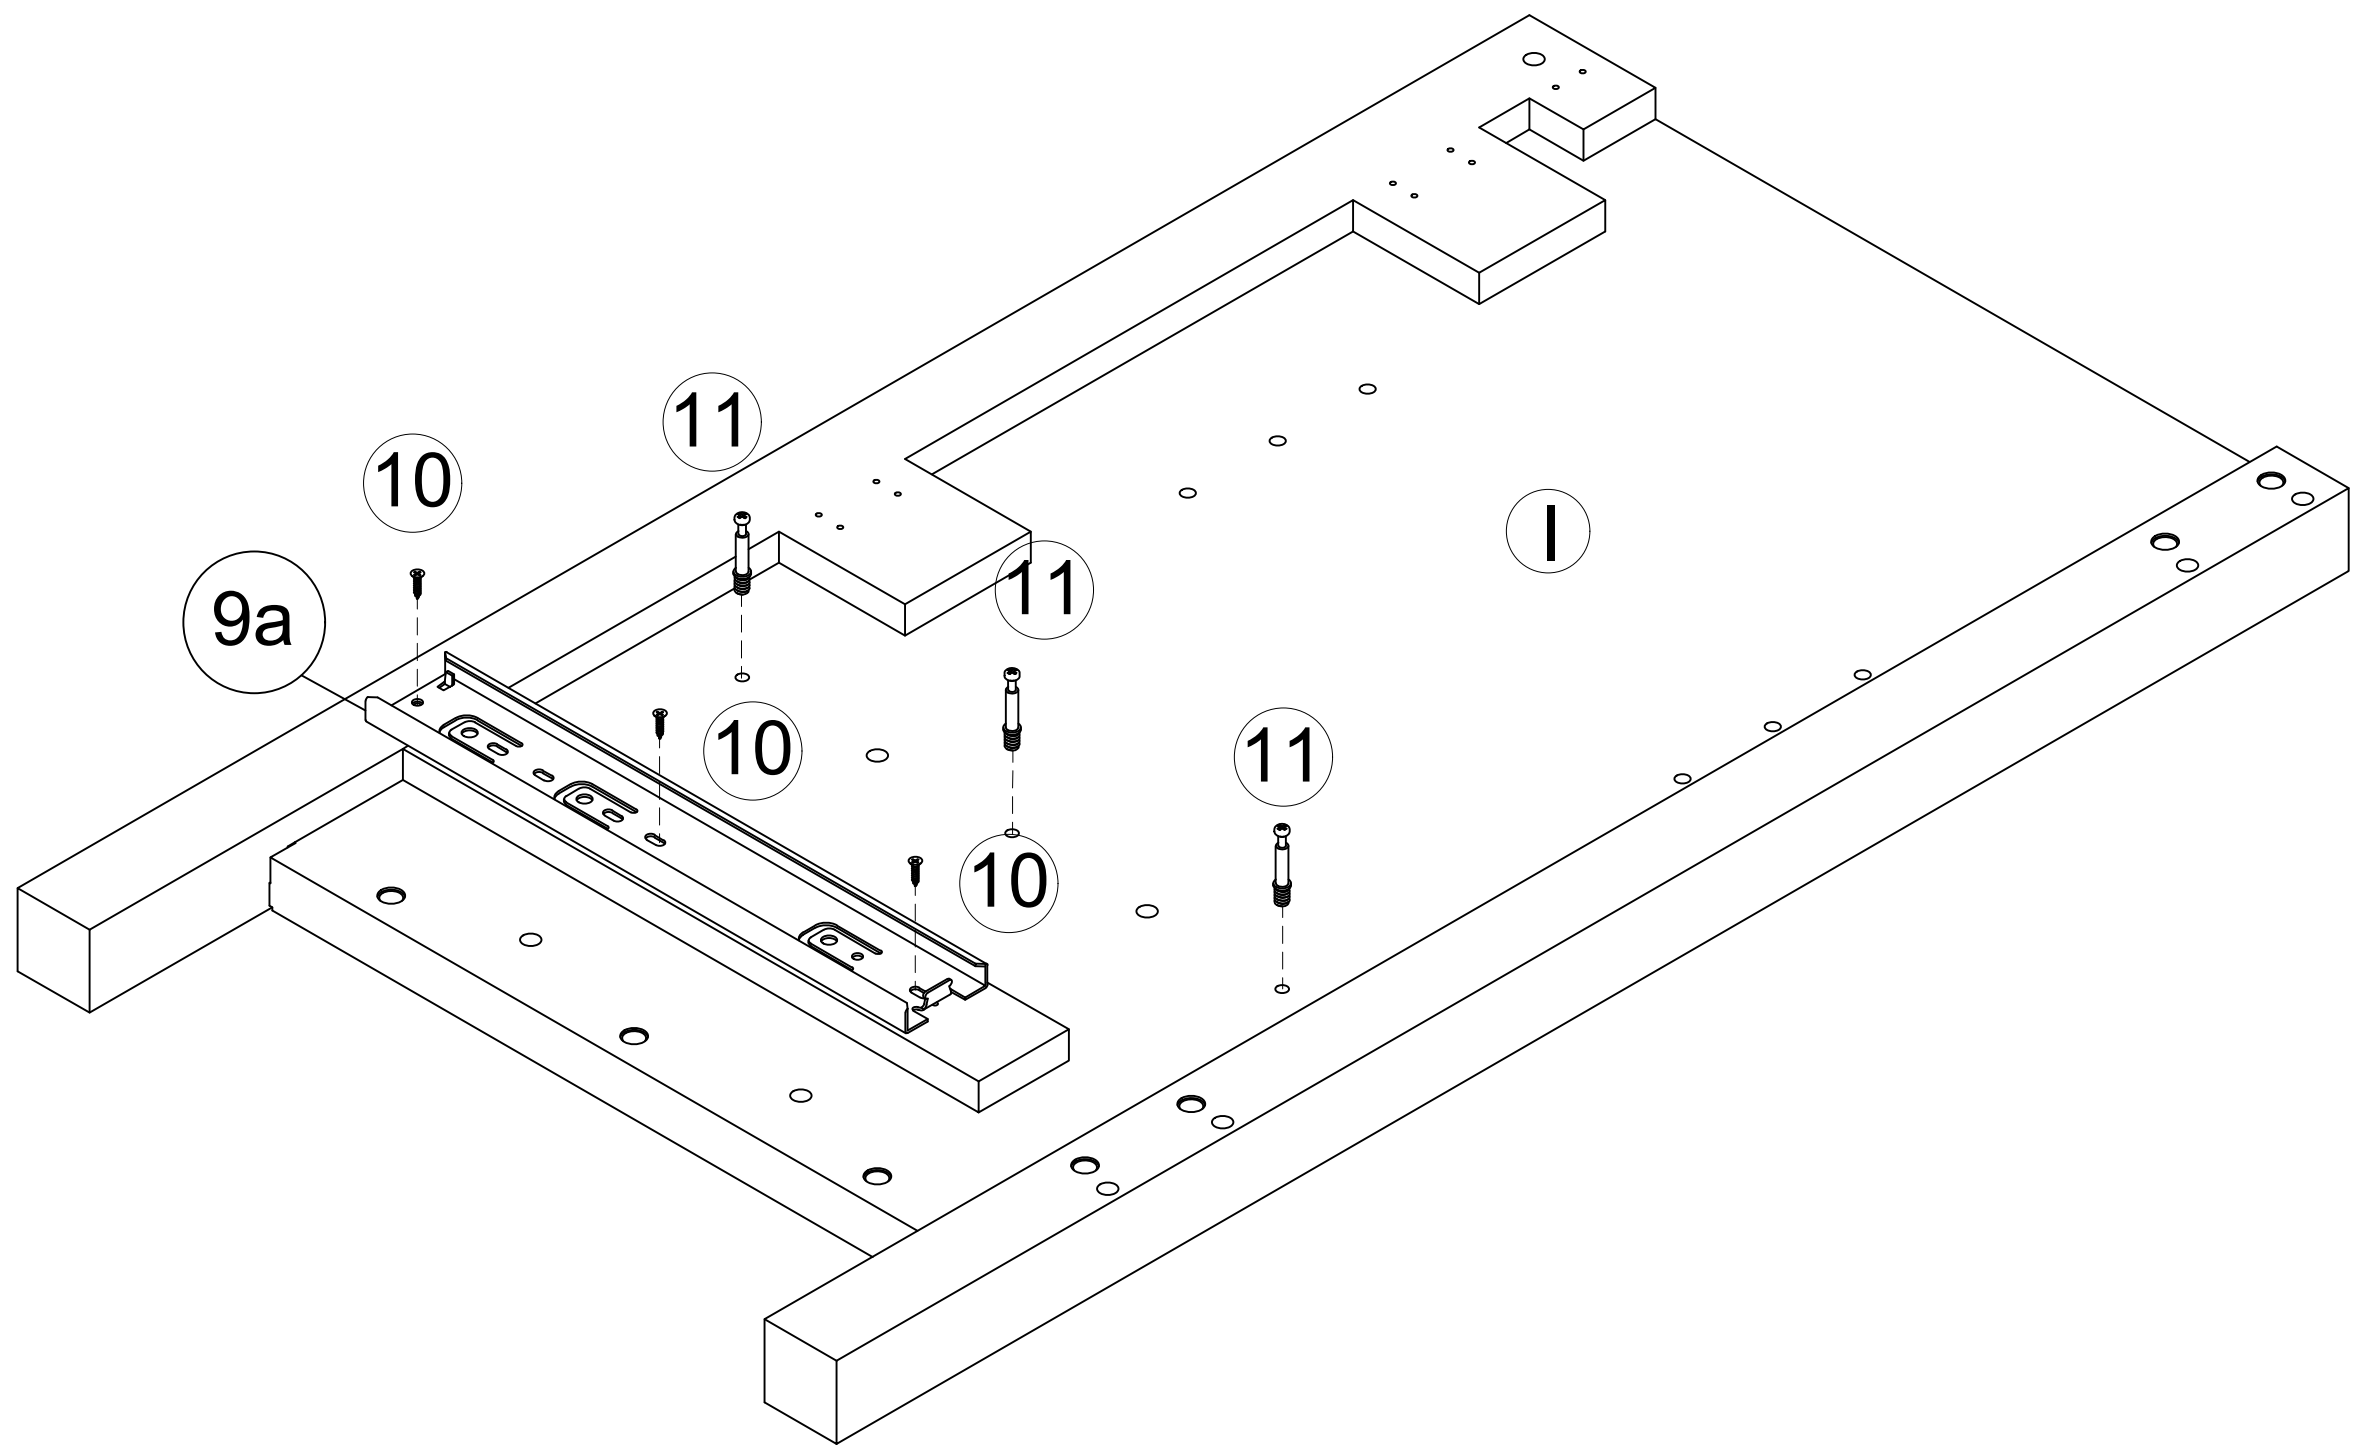


STEP 11

9



3SET

12"x45mm

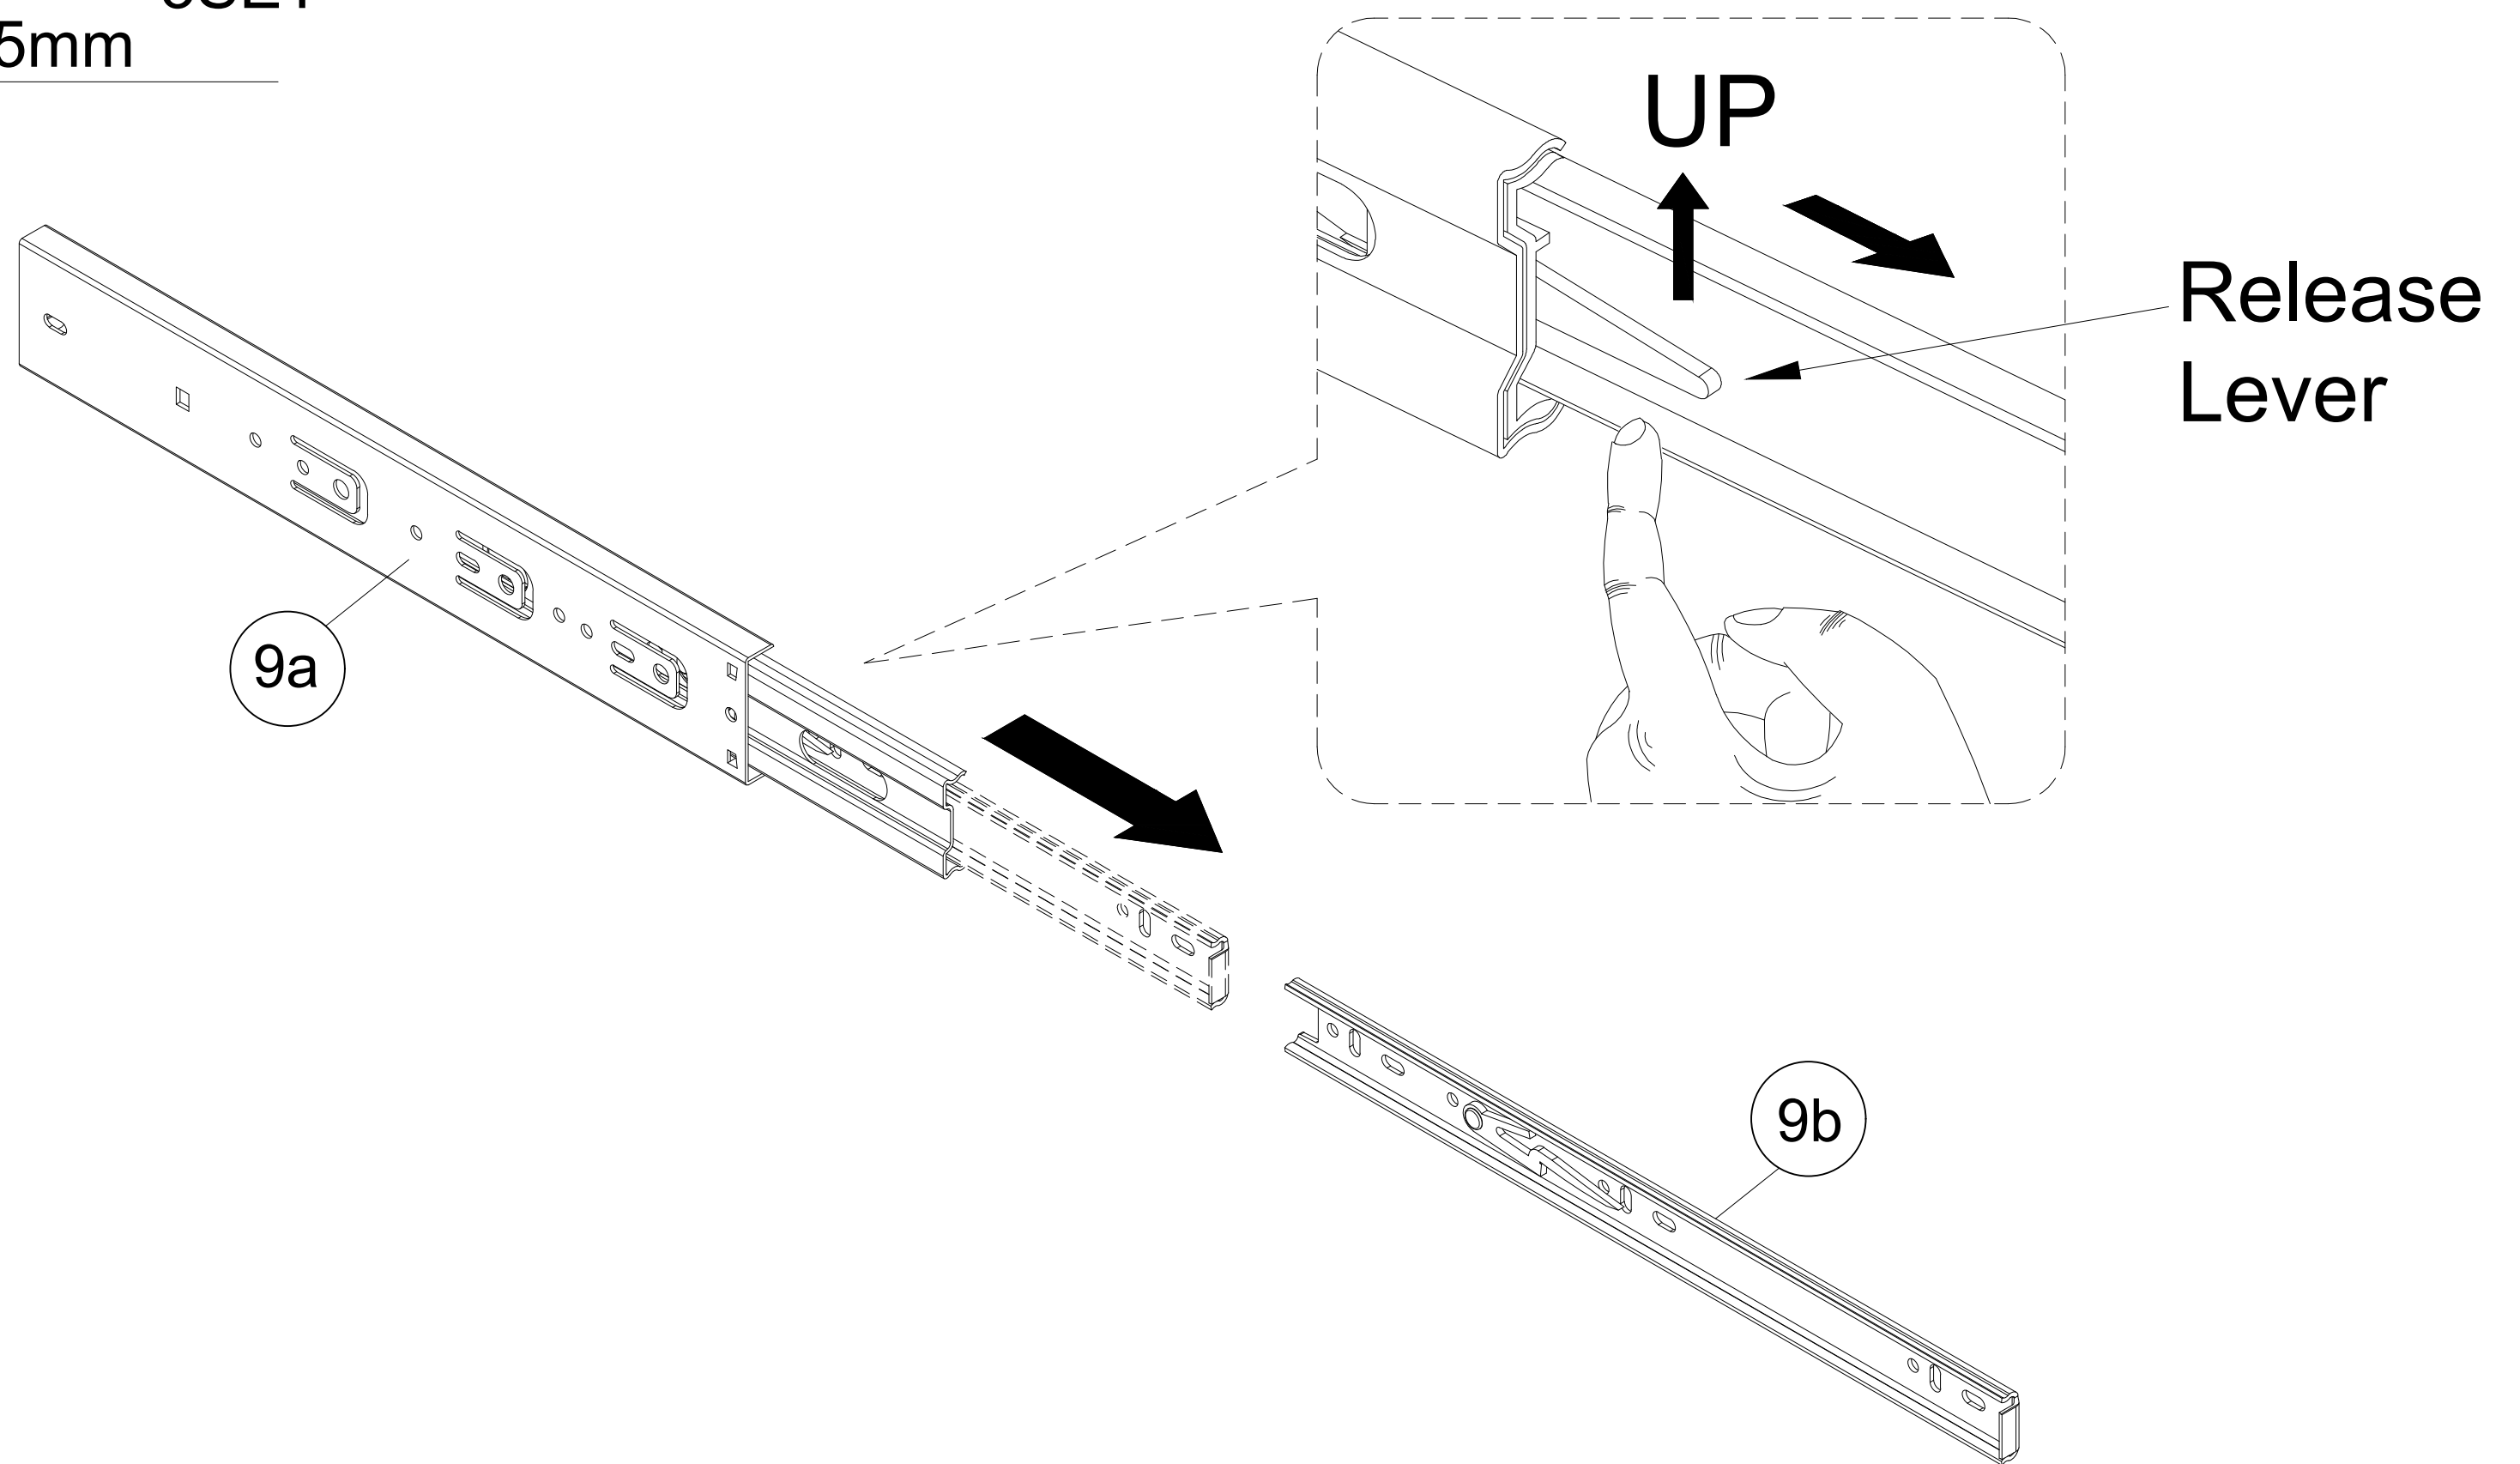


STEP 12

9a



3pcs


10



9pcs



Ø3x10mm

11






1 pc

Ø6x33mm

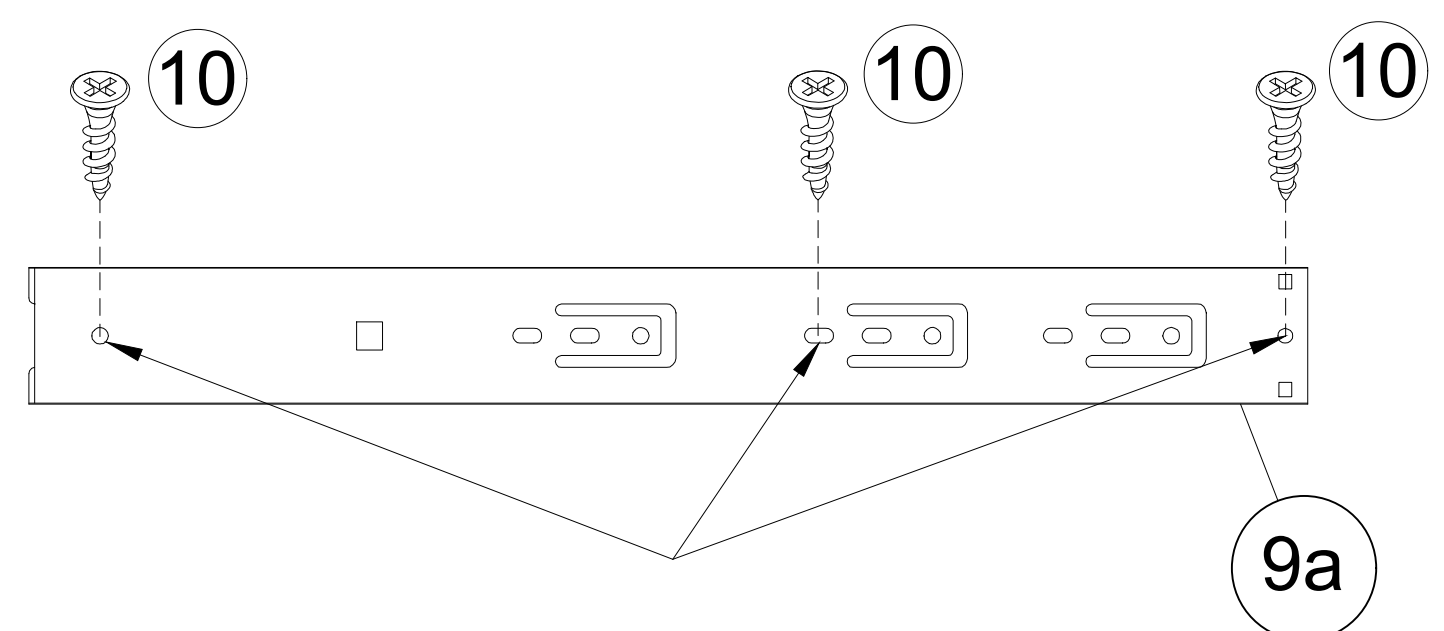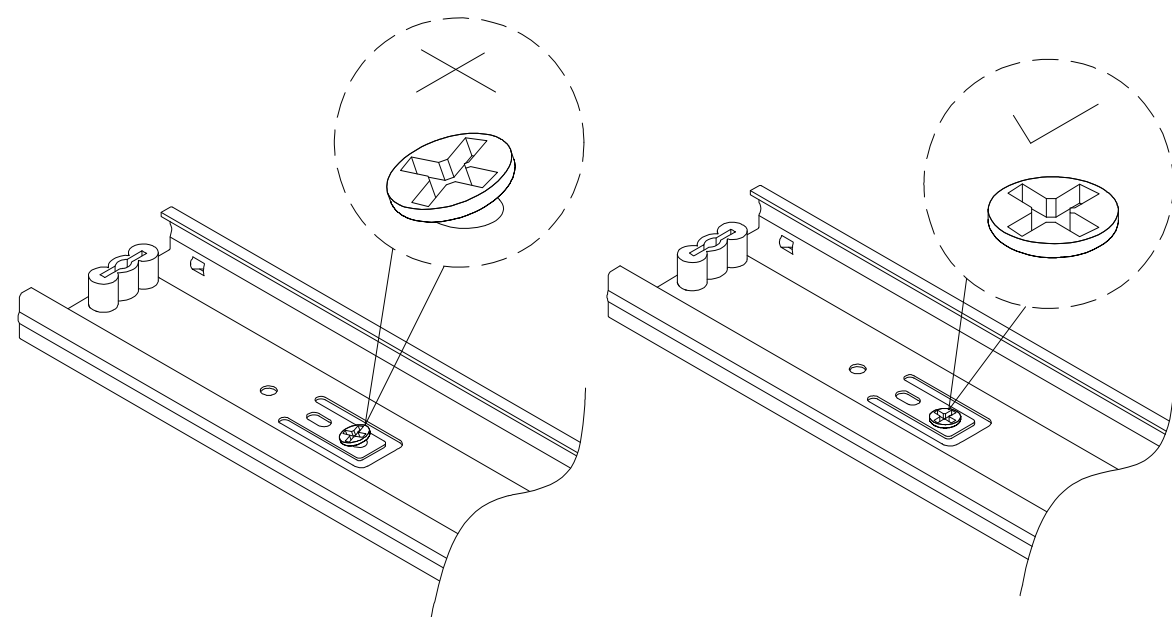


Please make sure that the screw is VERTICAL
so as not to affect the sliding of the drawer.

Mounting holes

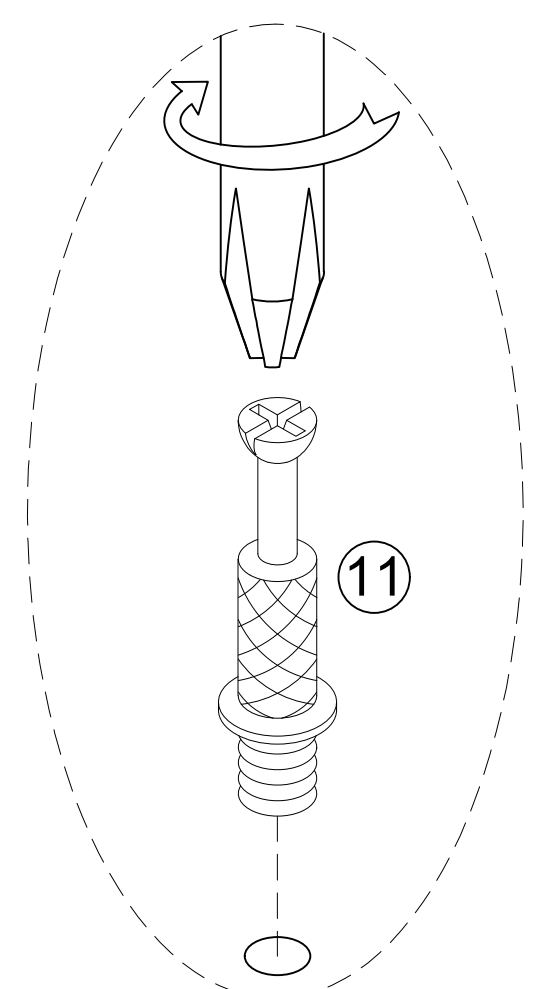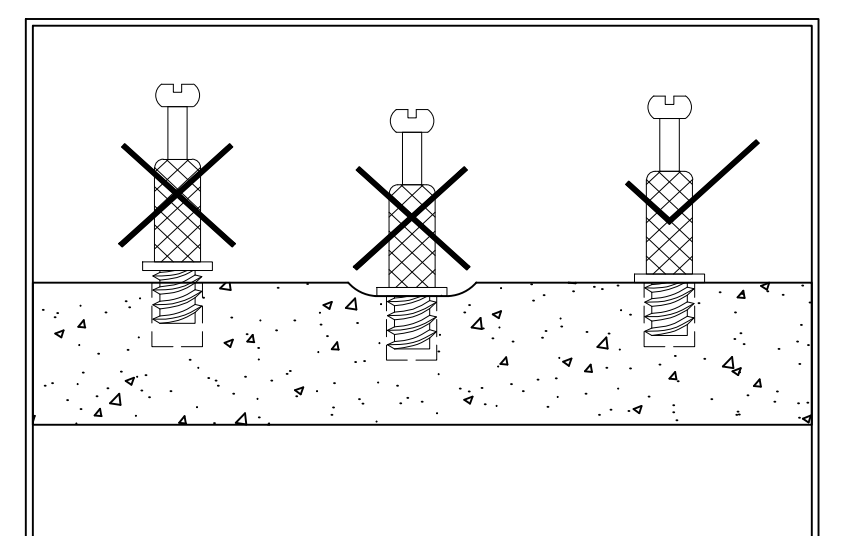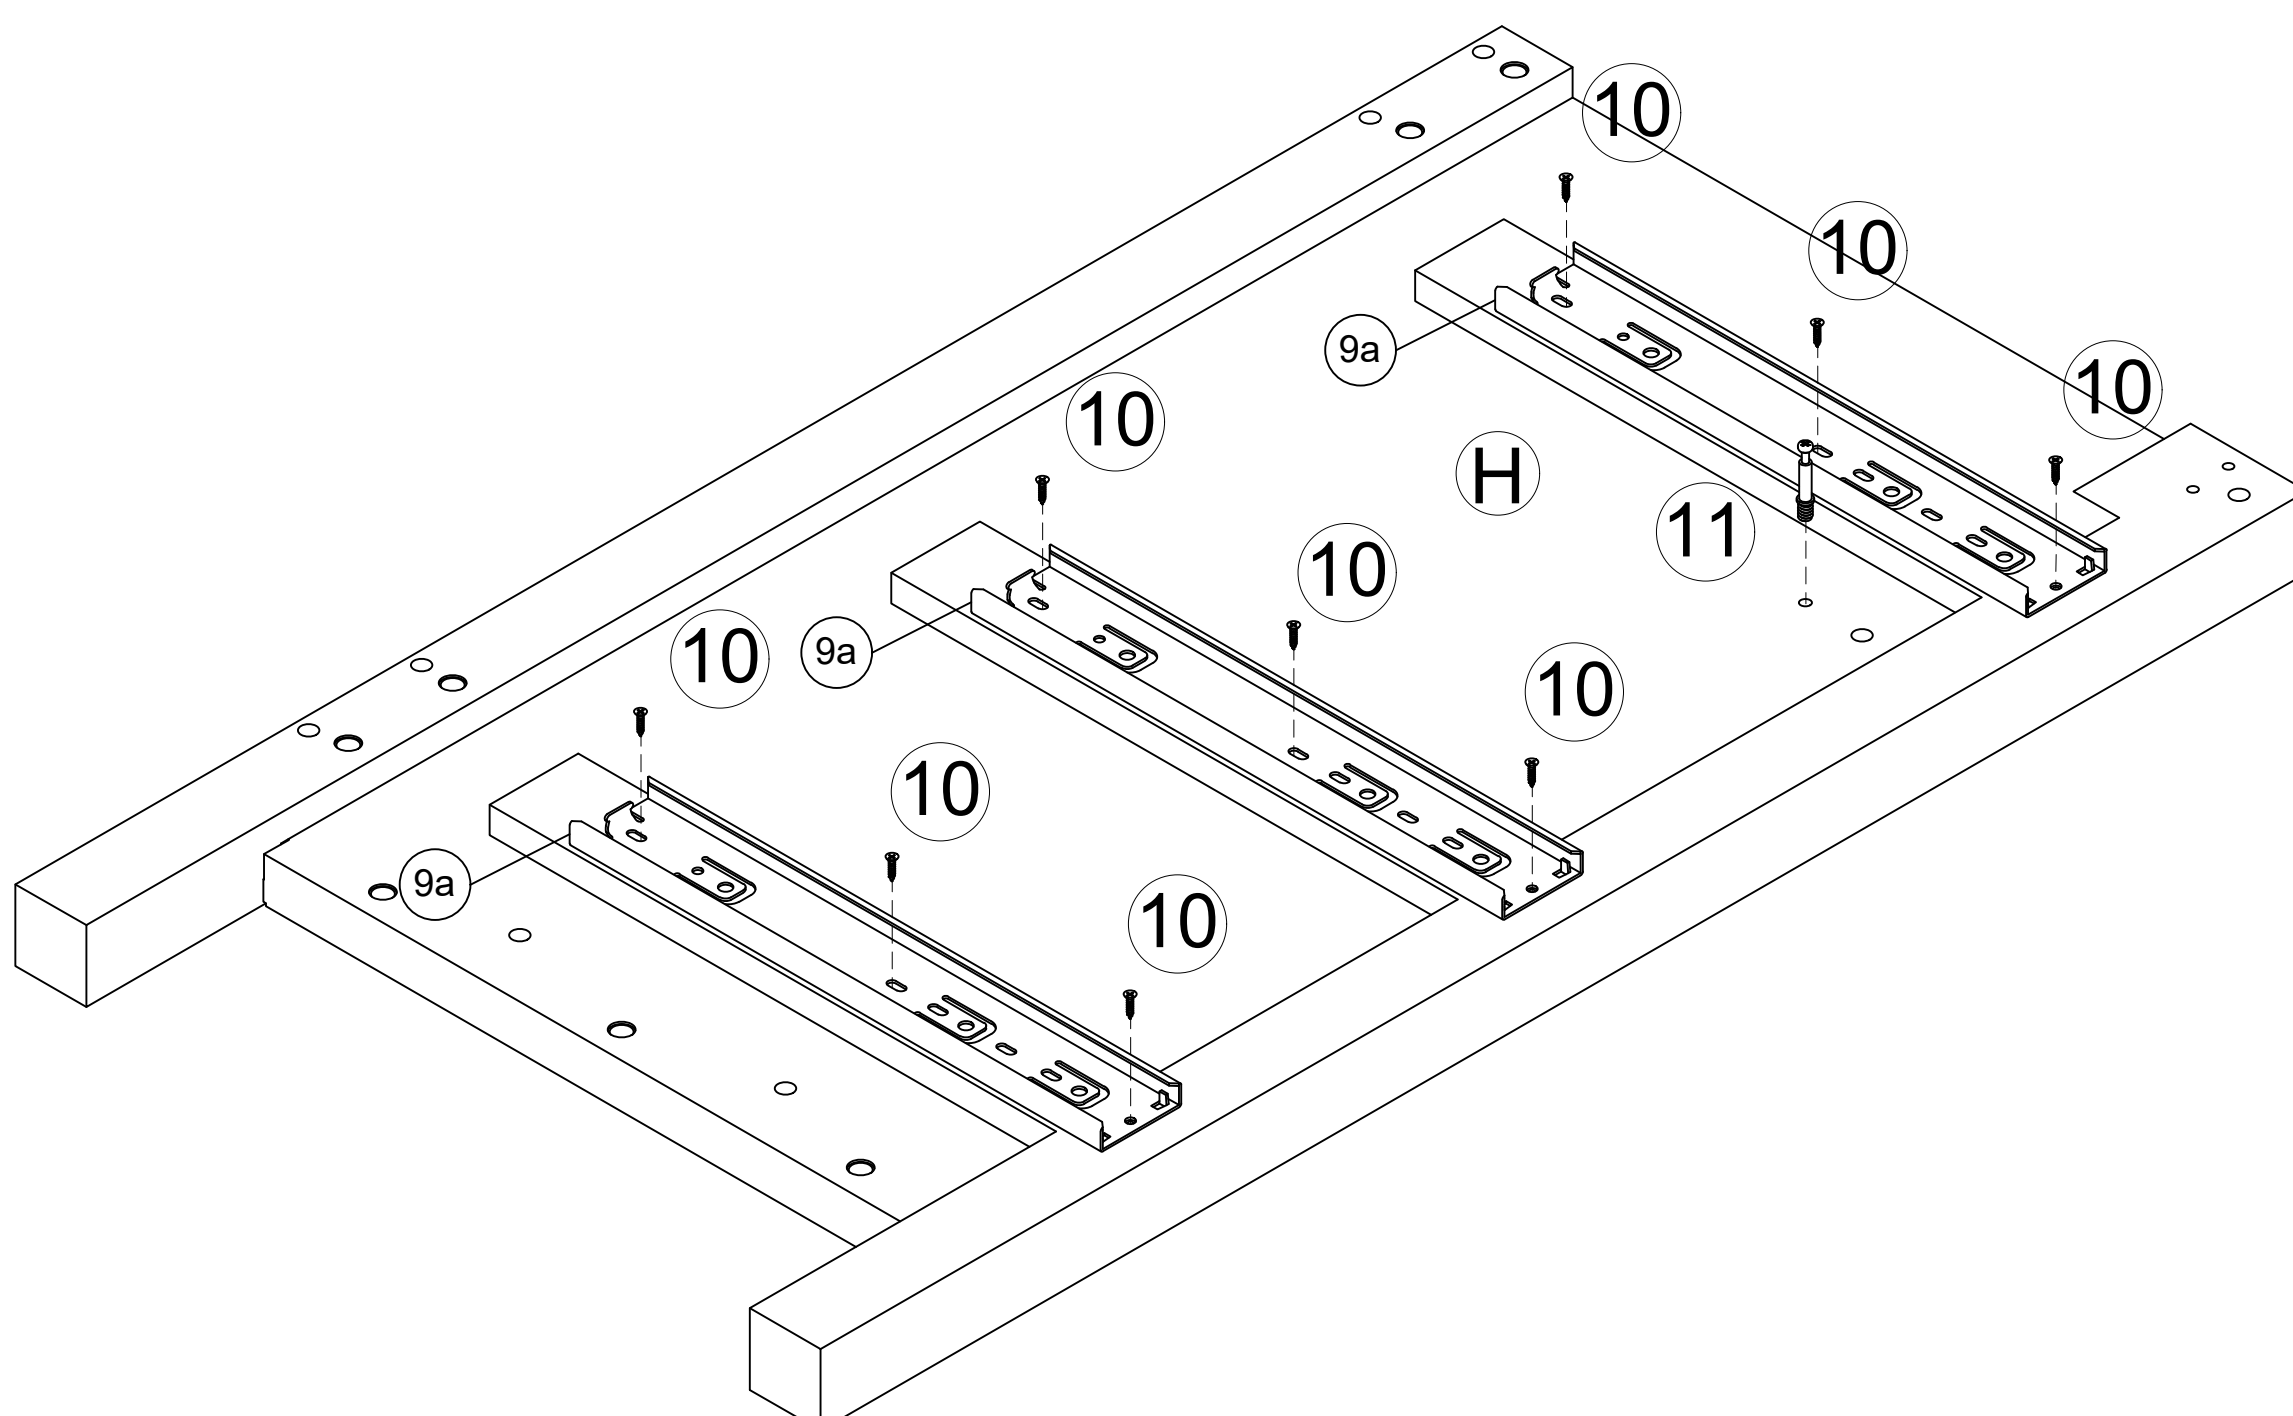


STEP 13

- 3




3pcs
- Ø4x35mm

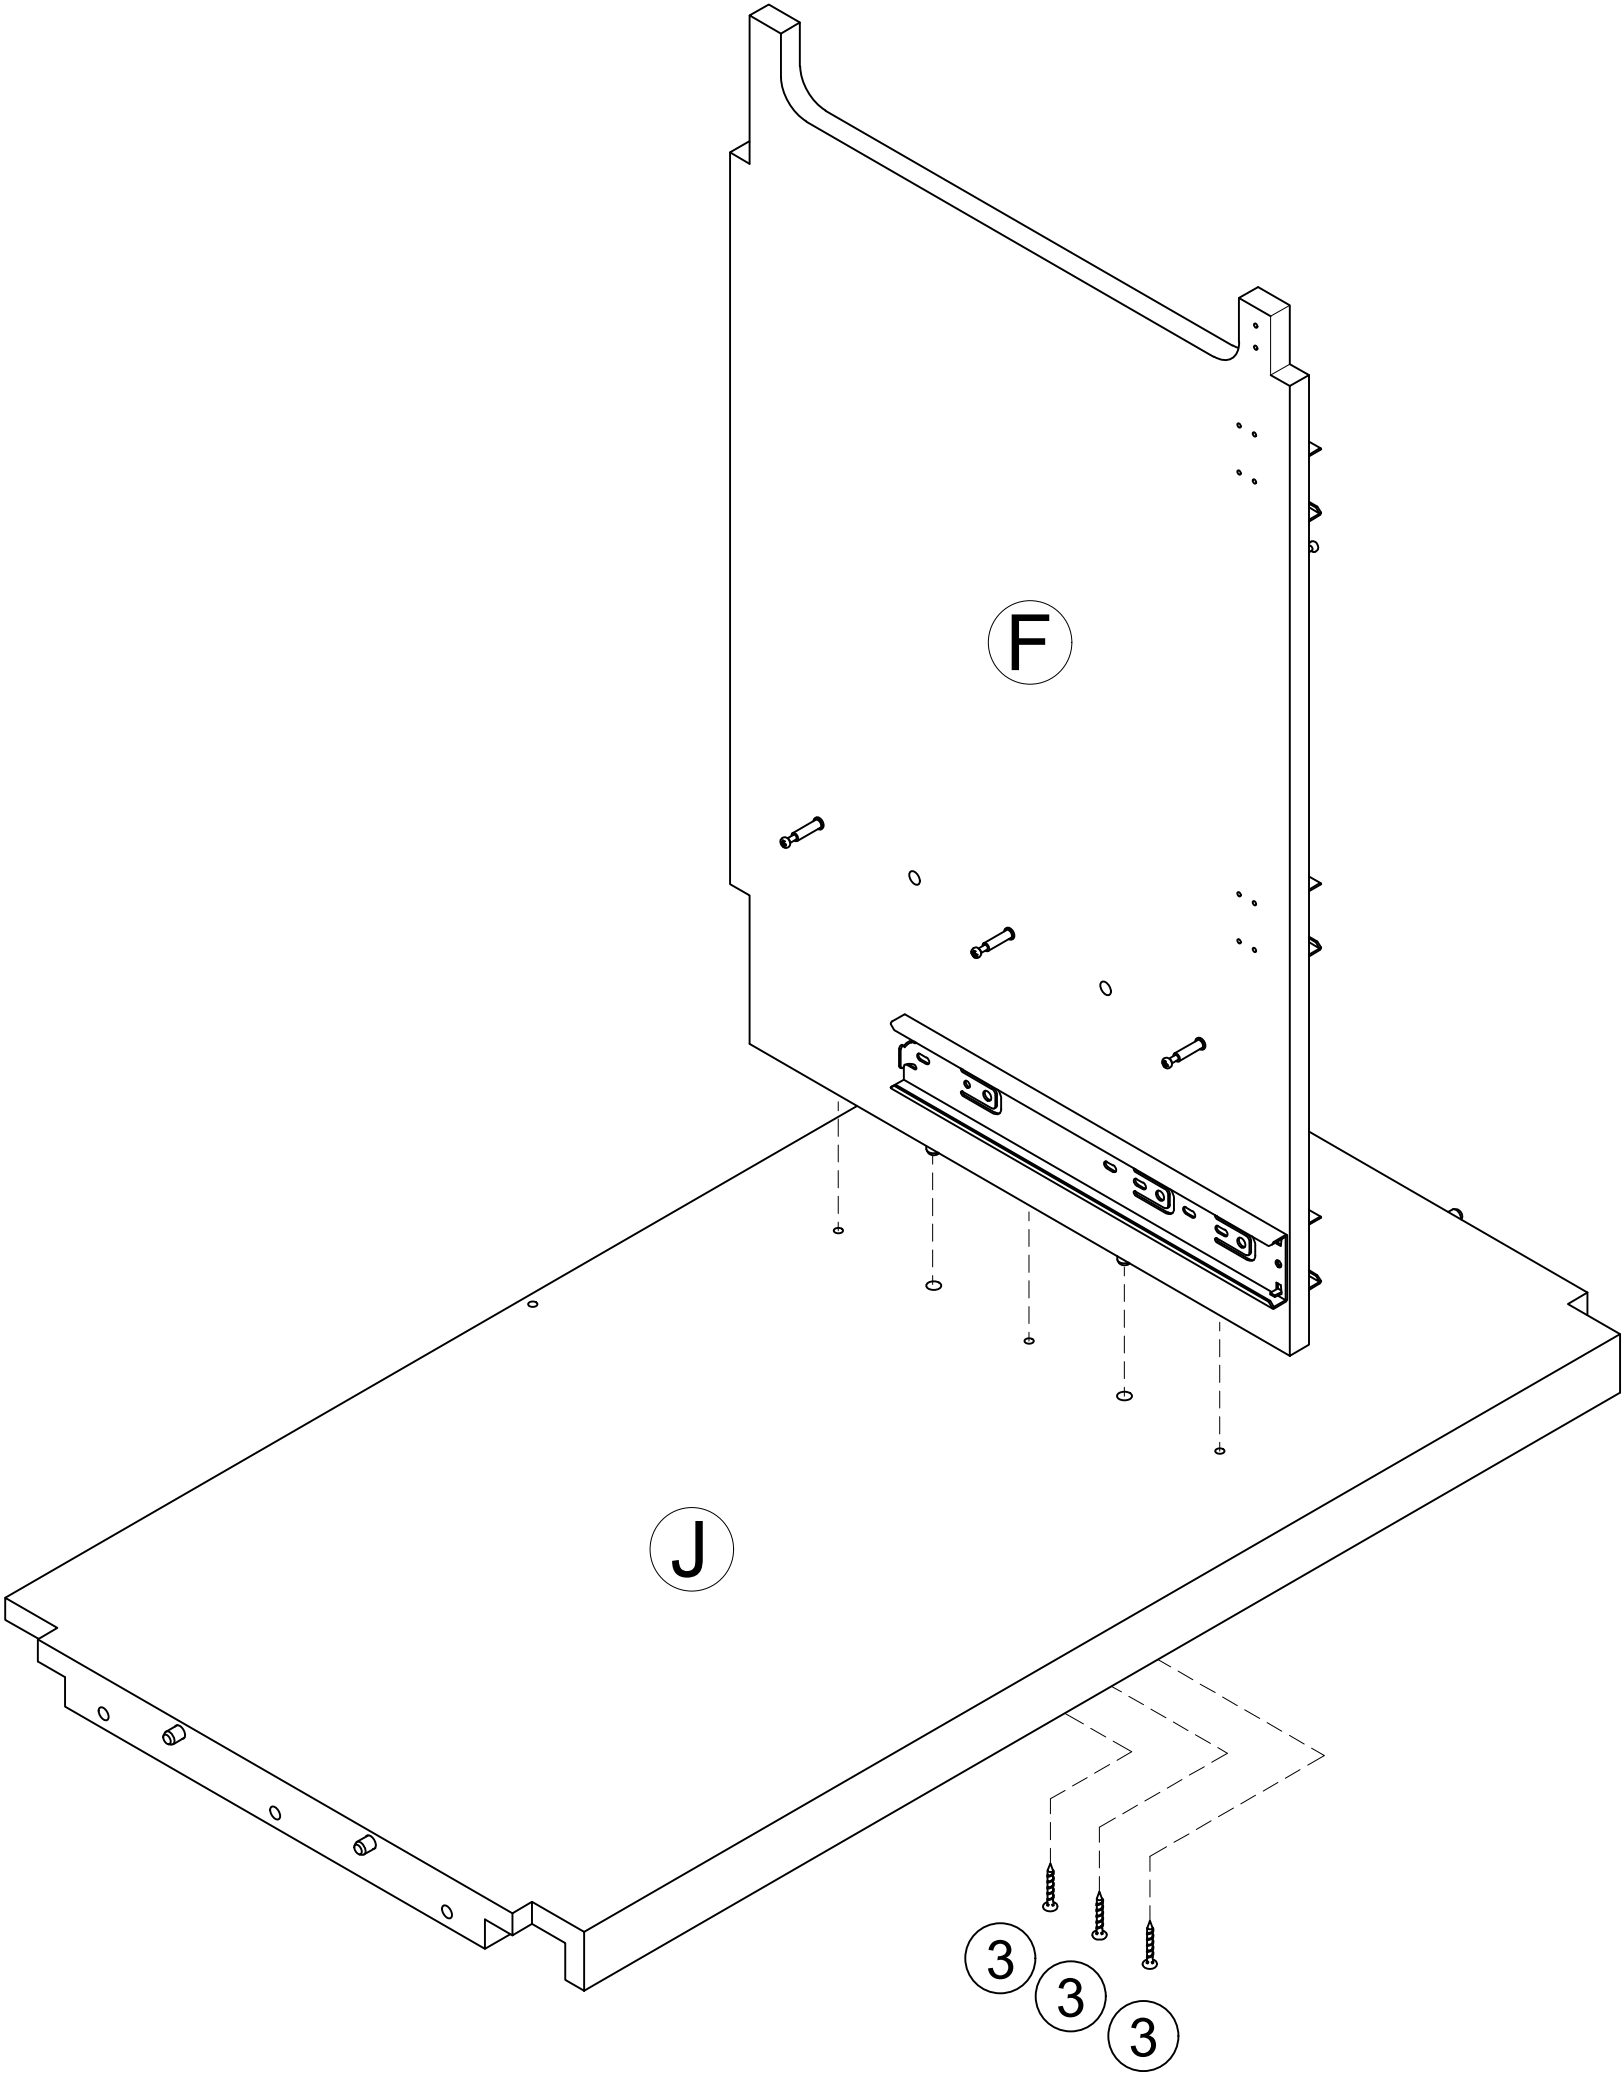


STEP 14



- 1



4pcs
- 1/4"x25mm
- 12




1pc
- Ø15x9mm

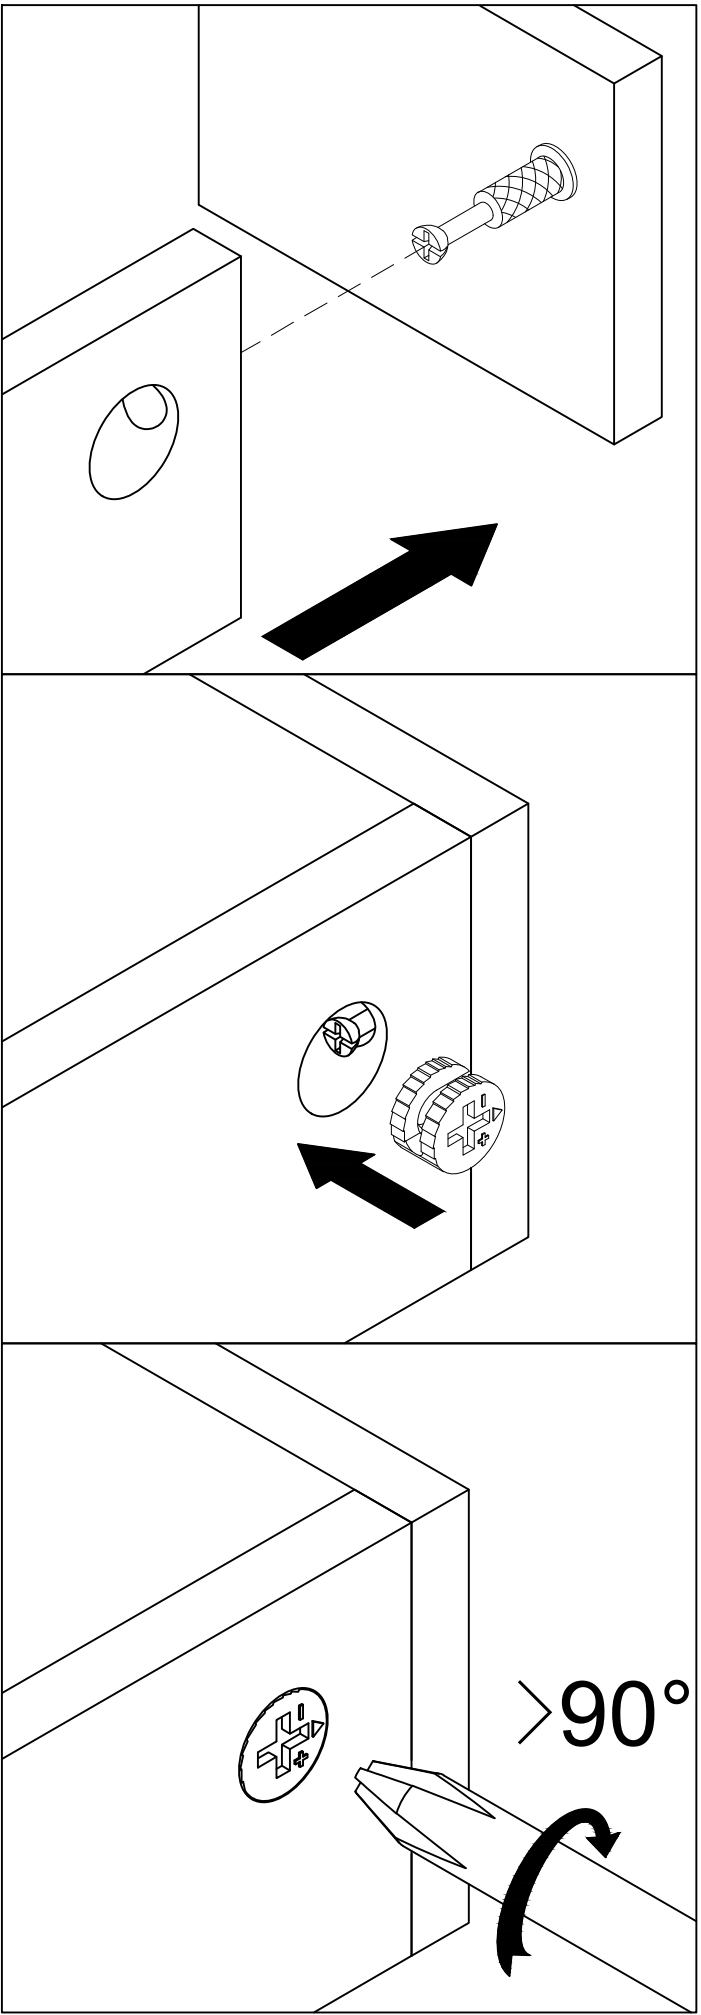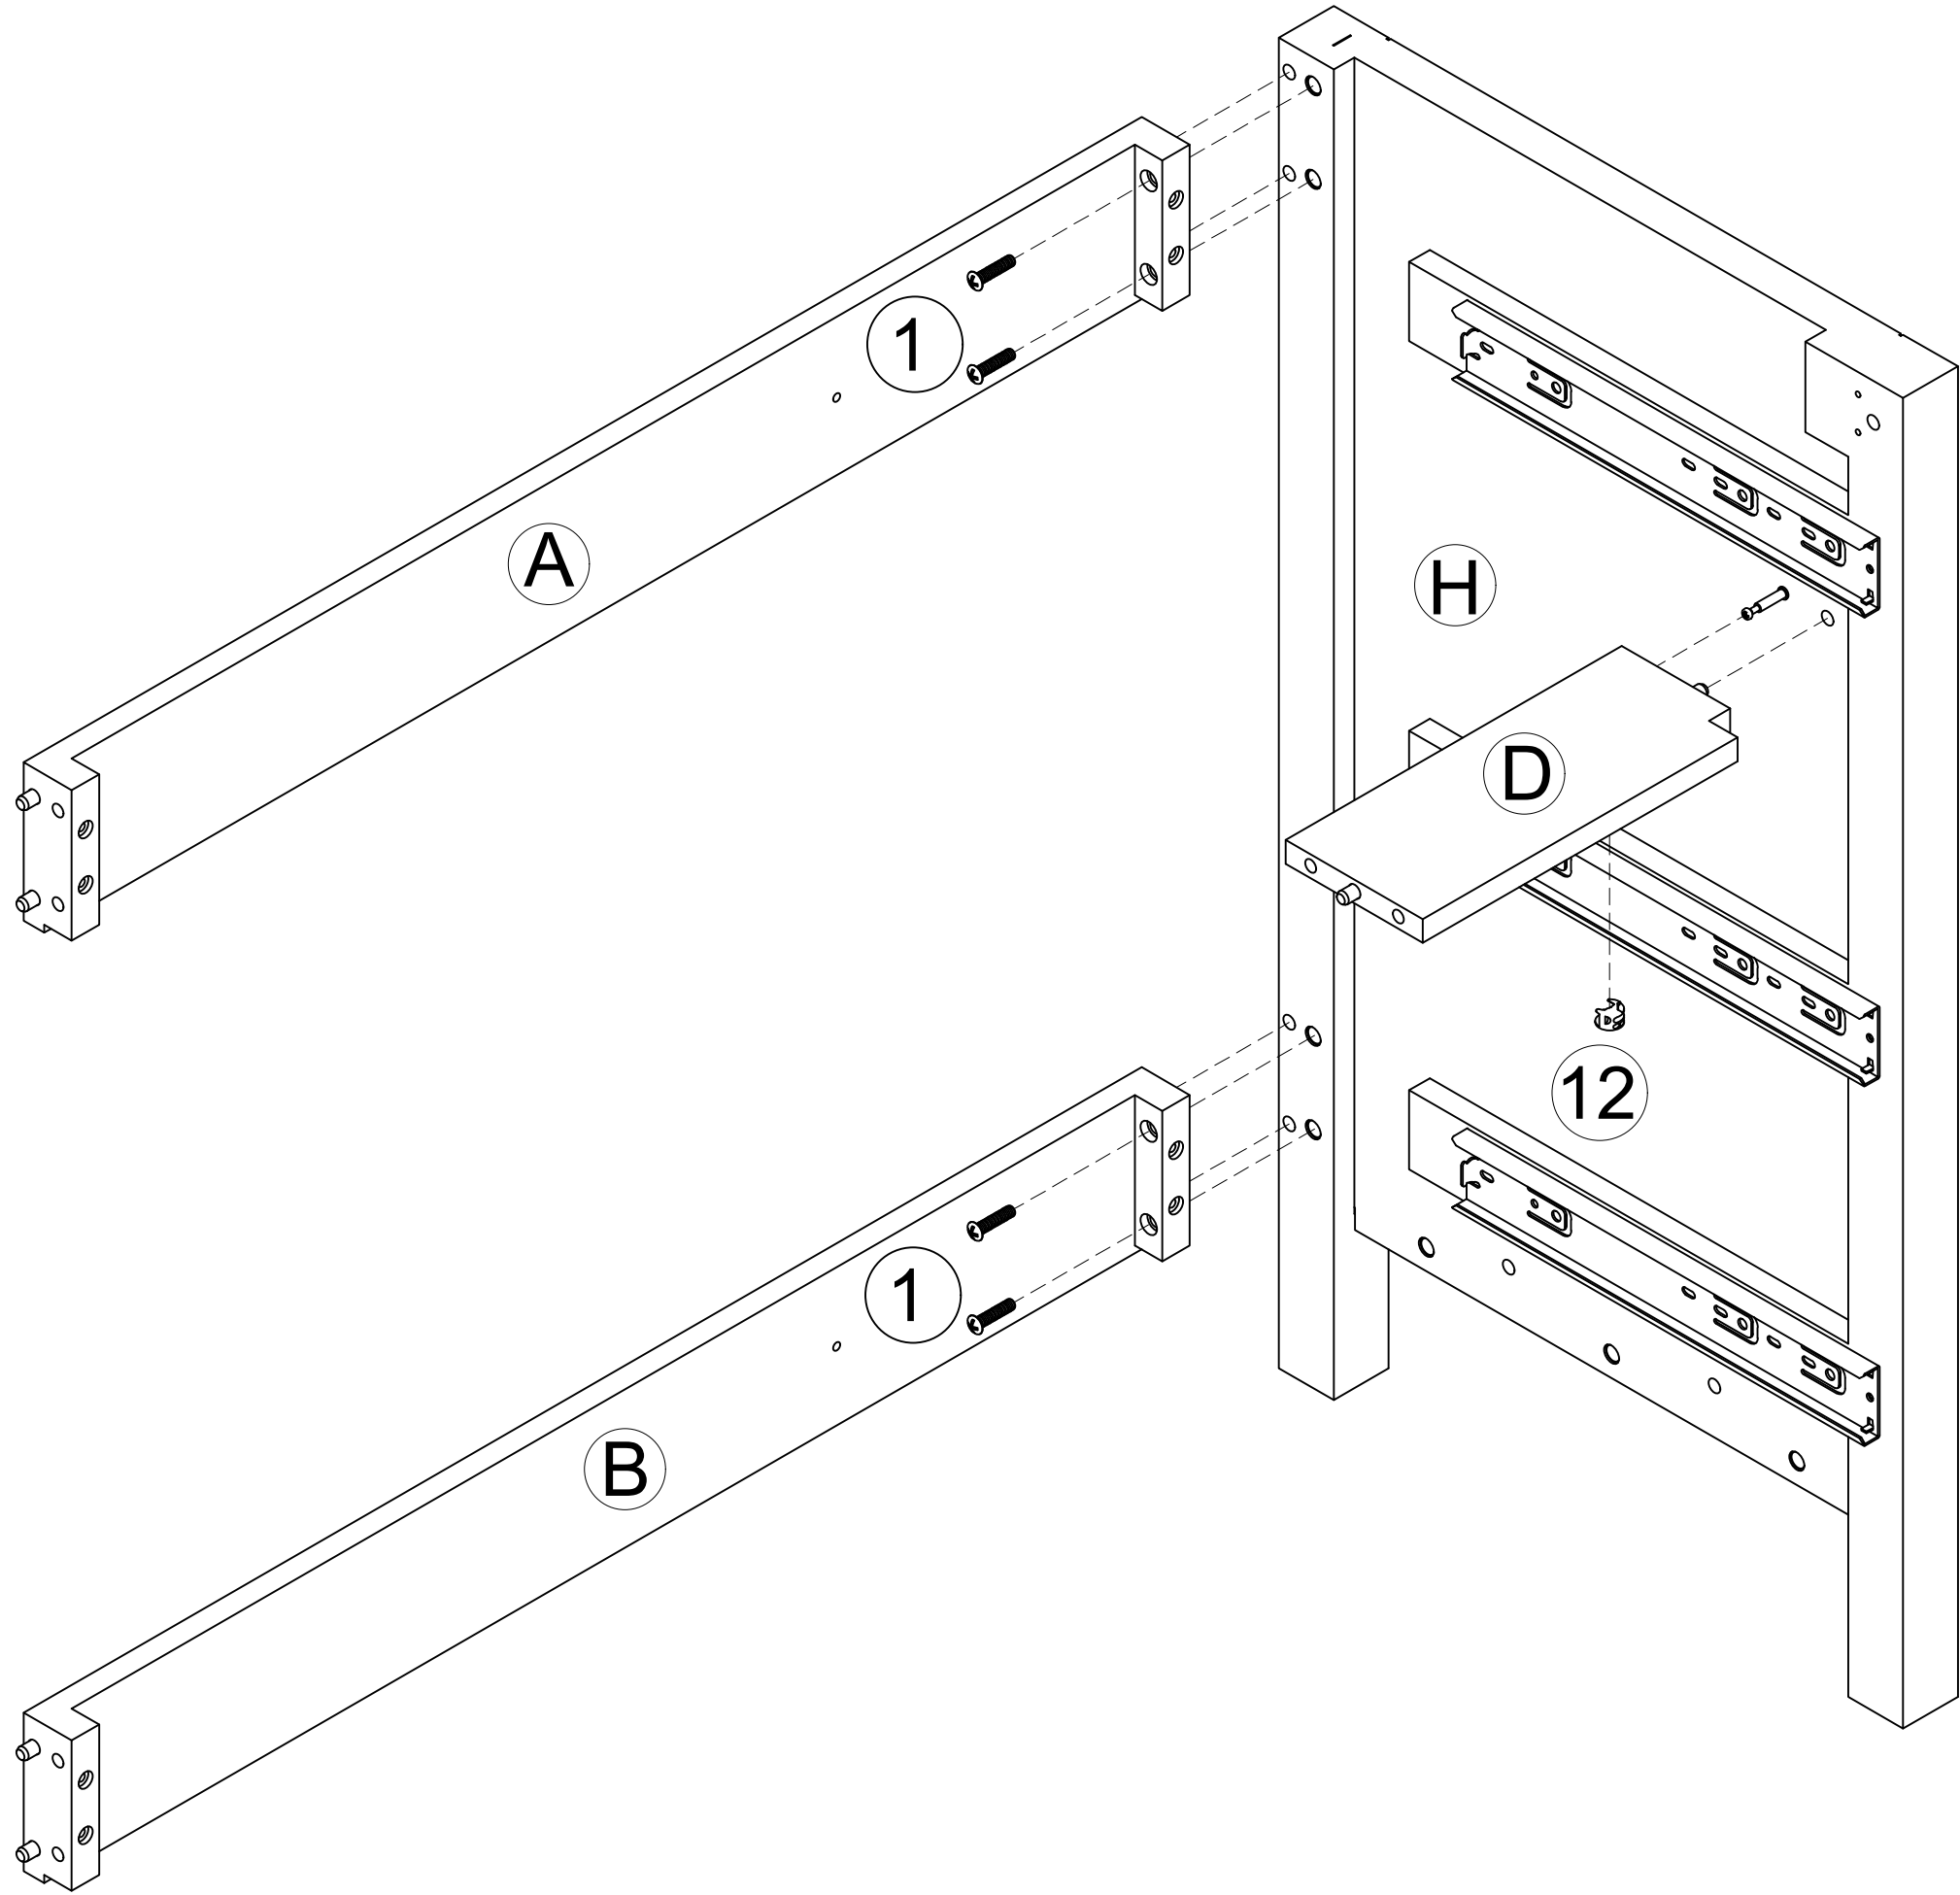


STEP 15

- 1




3pcs
- 12




2pcs
- 1/4"x25mm

Ø15x9mm

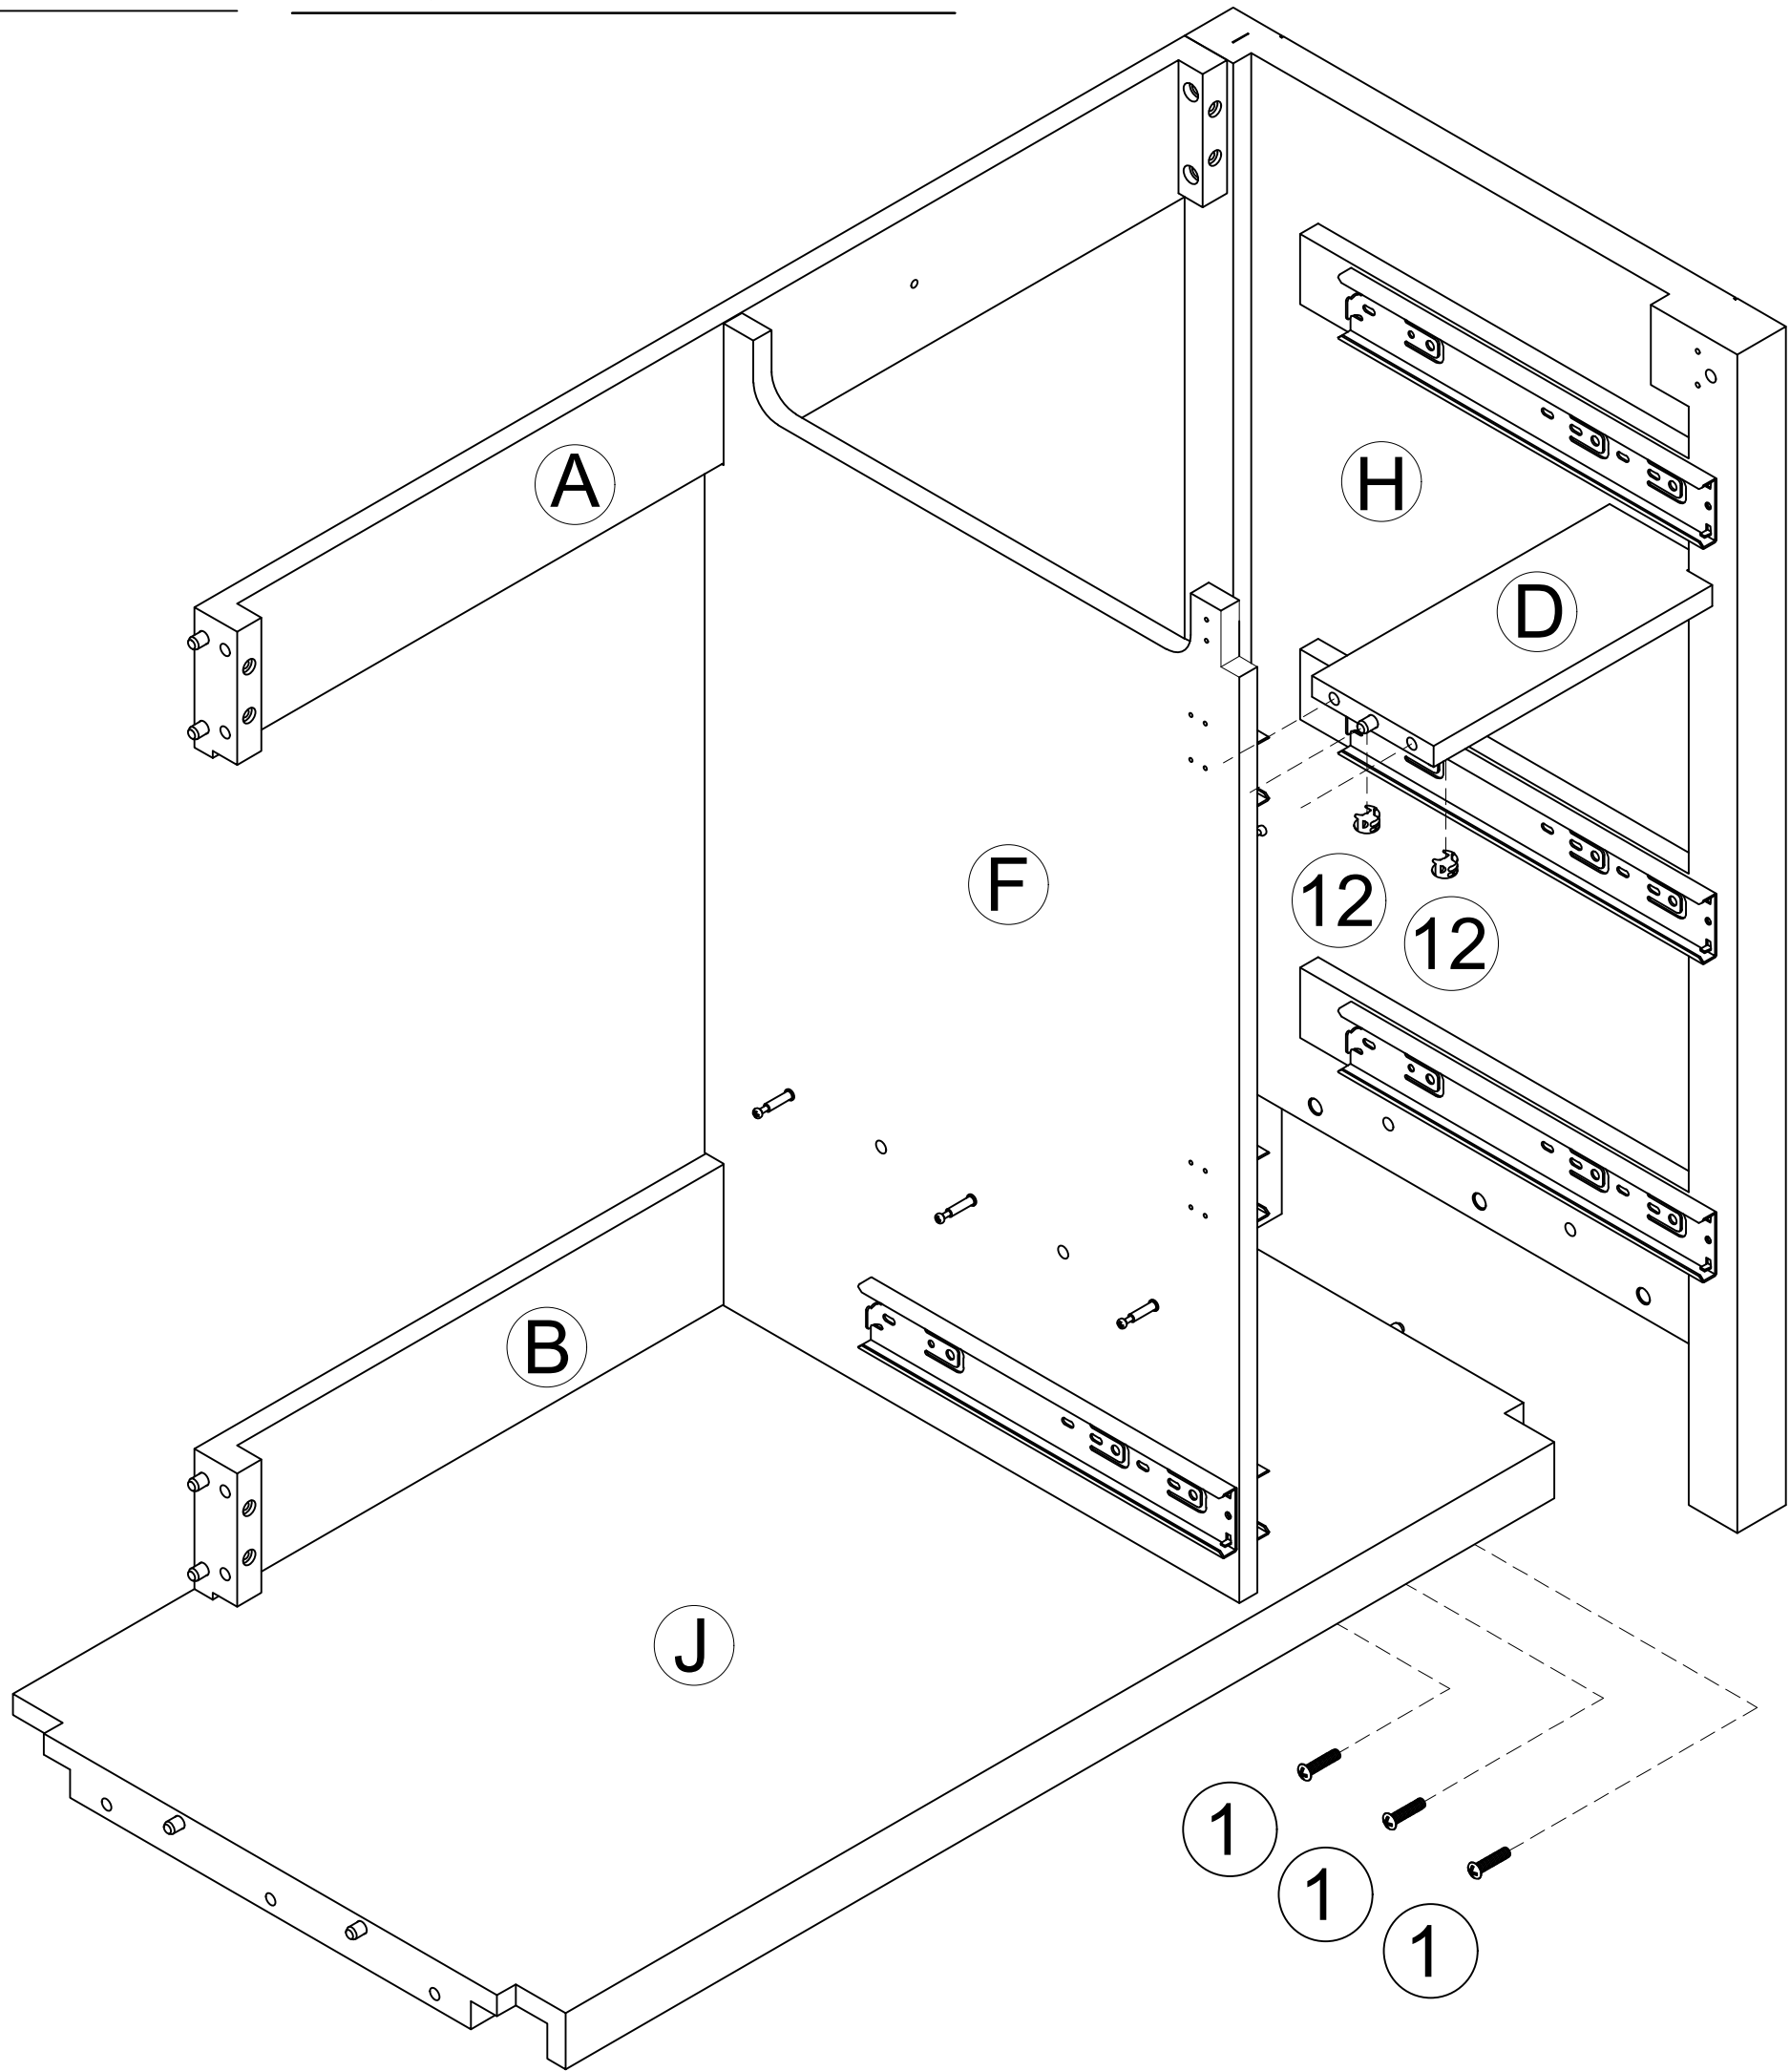


STEP 16

- 12





3pcs
- 16




4pcs
- Ø15x9mm

Ø3x12mm

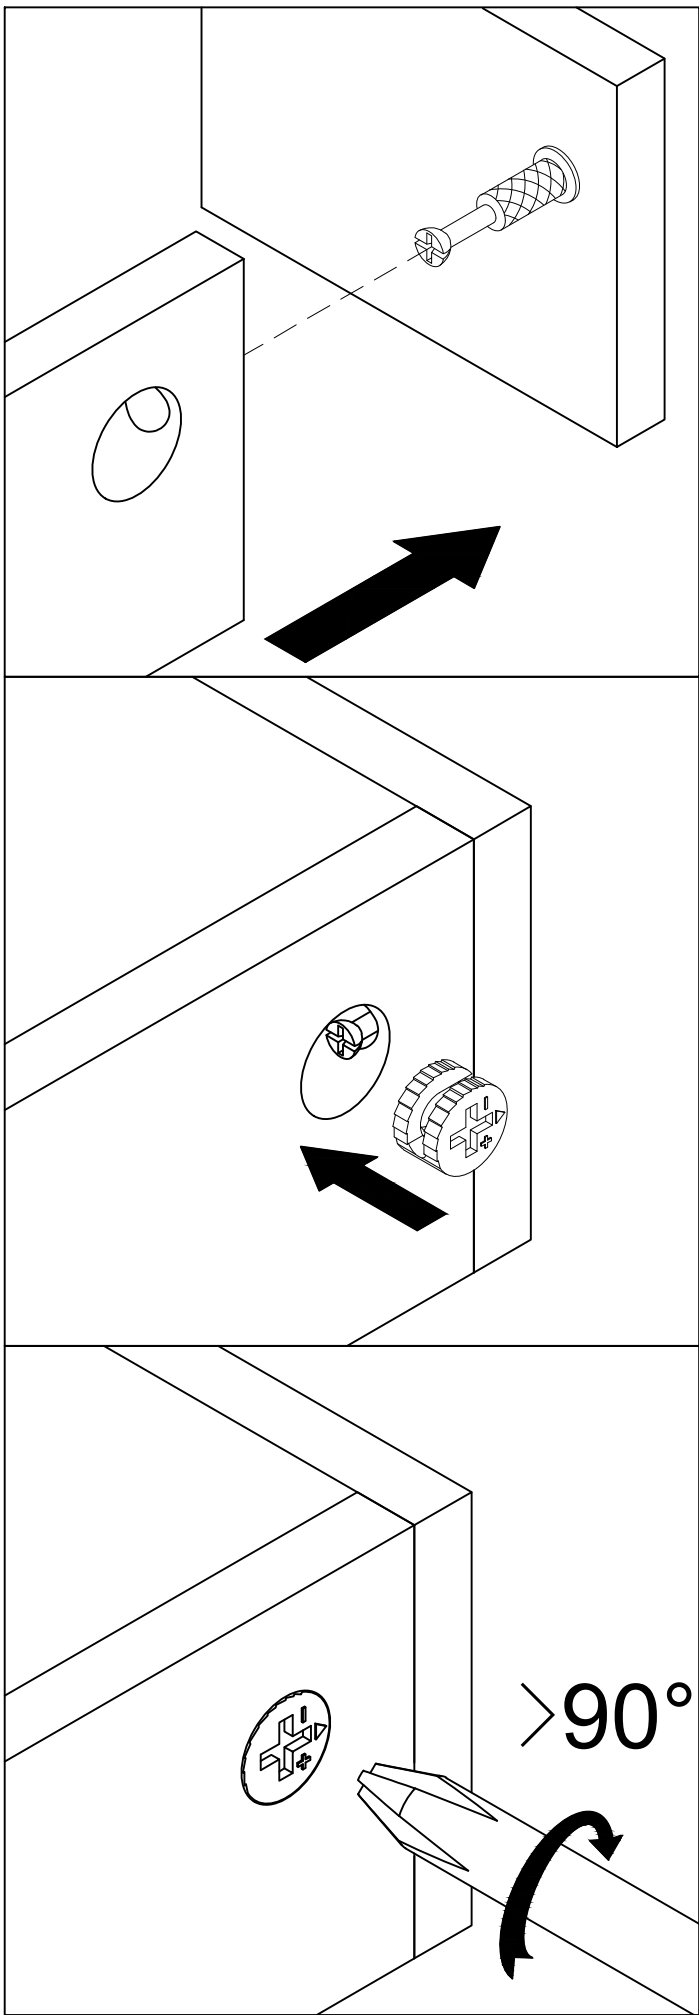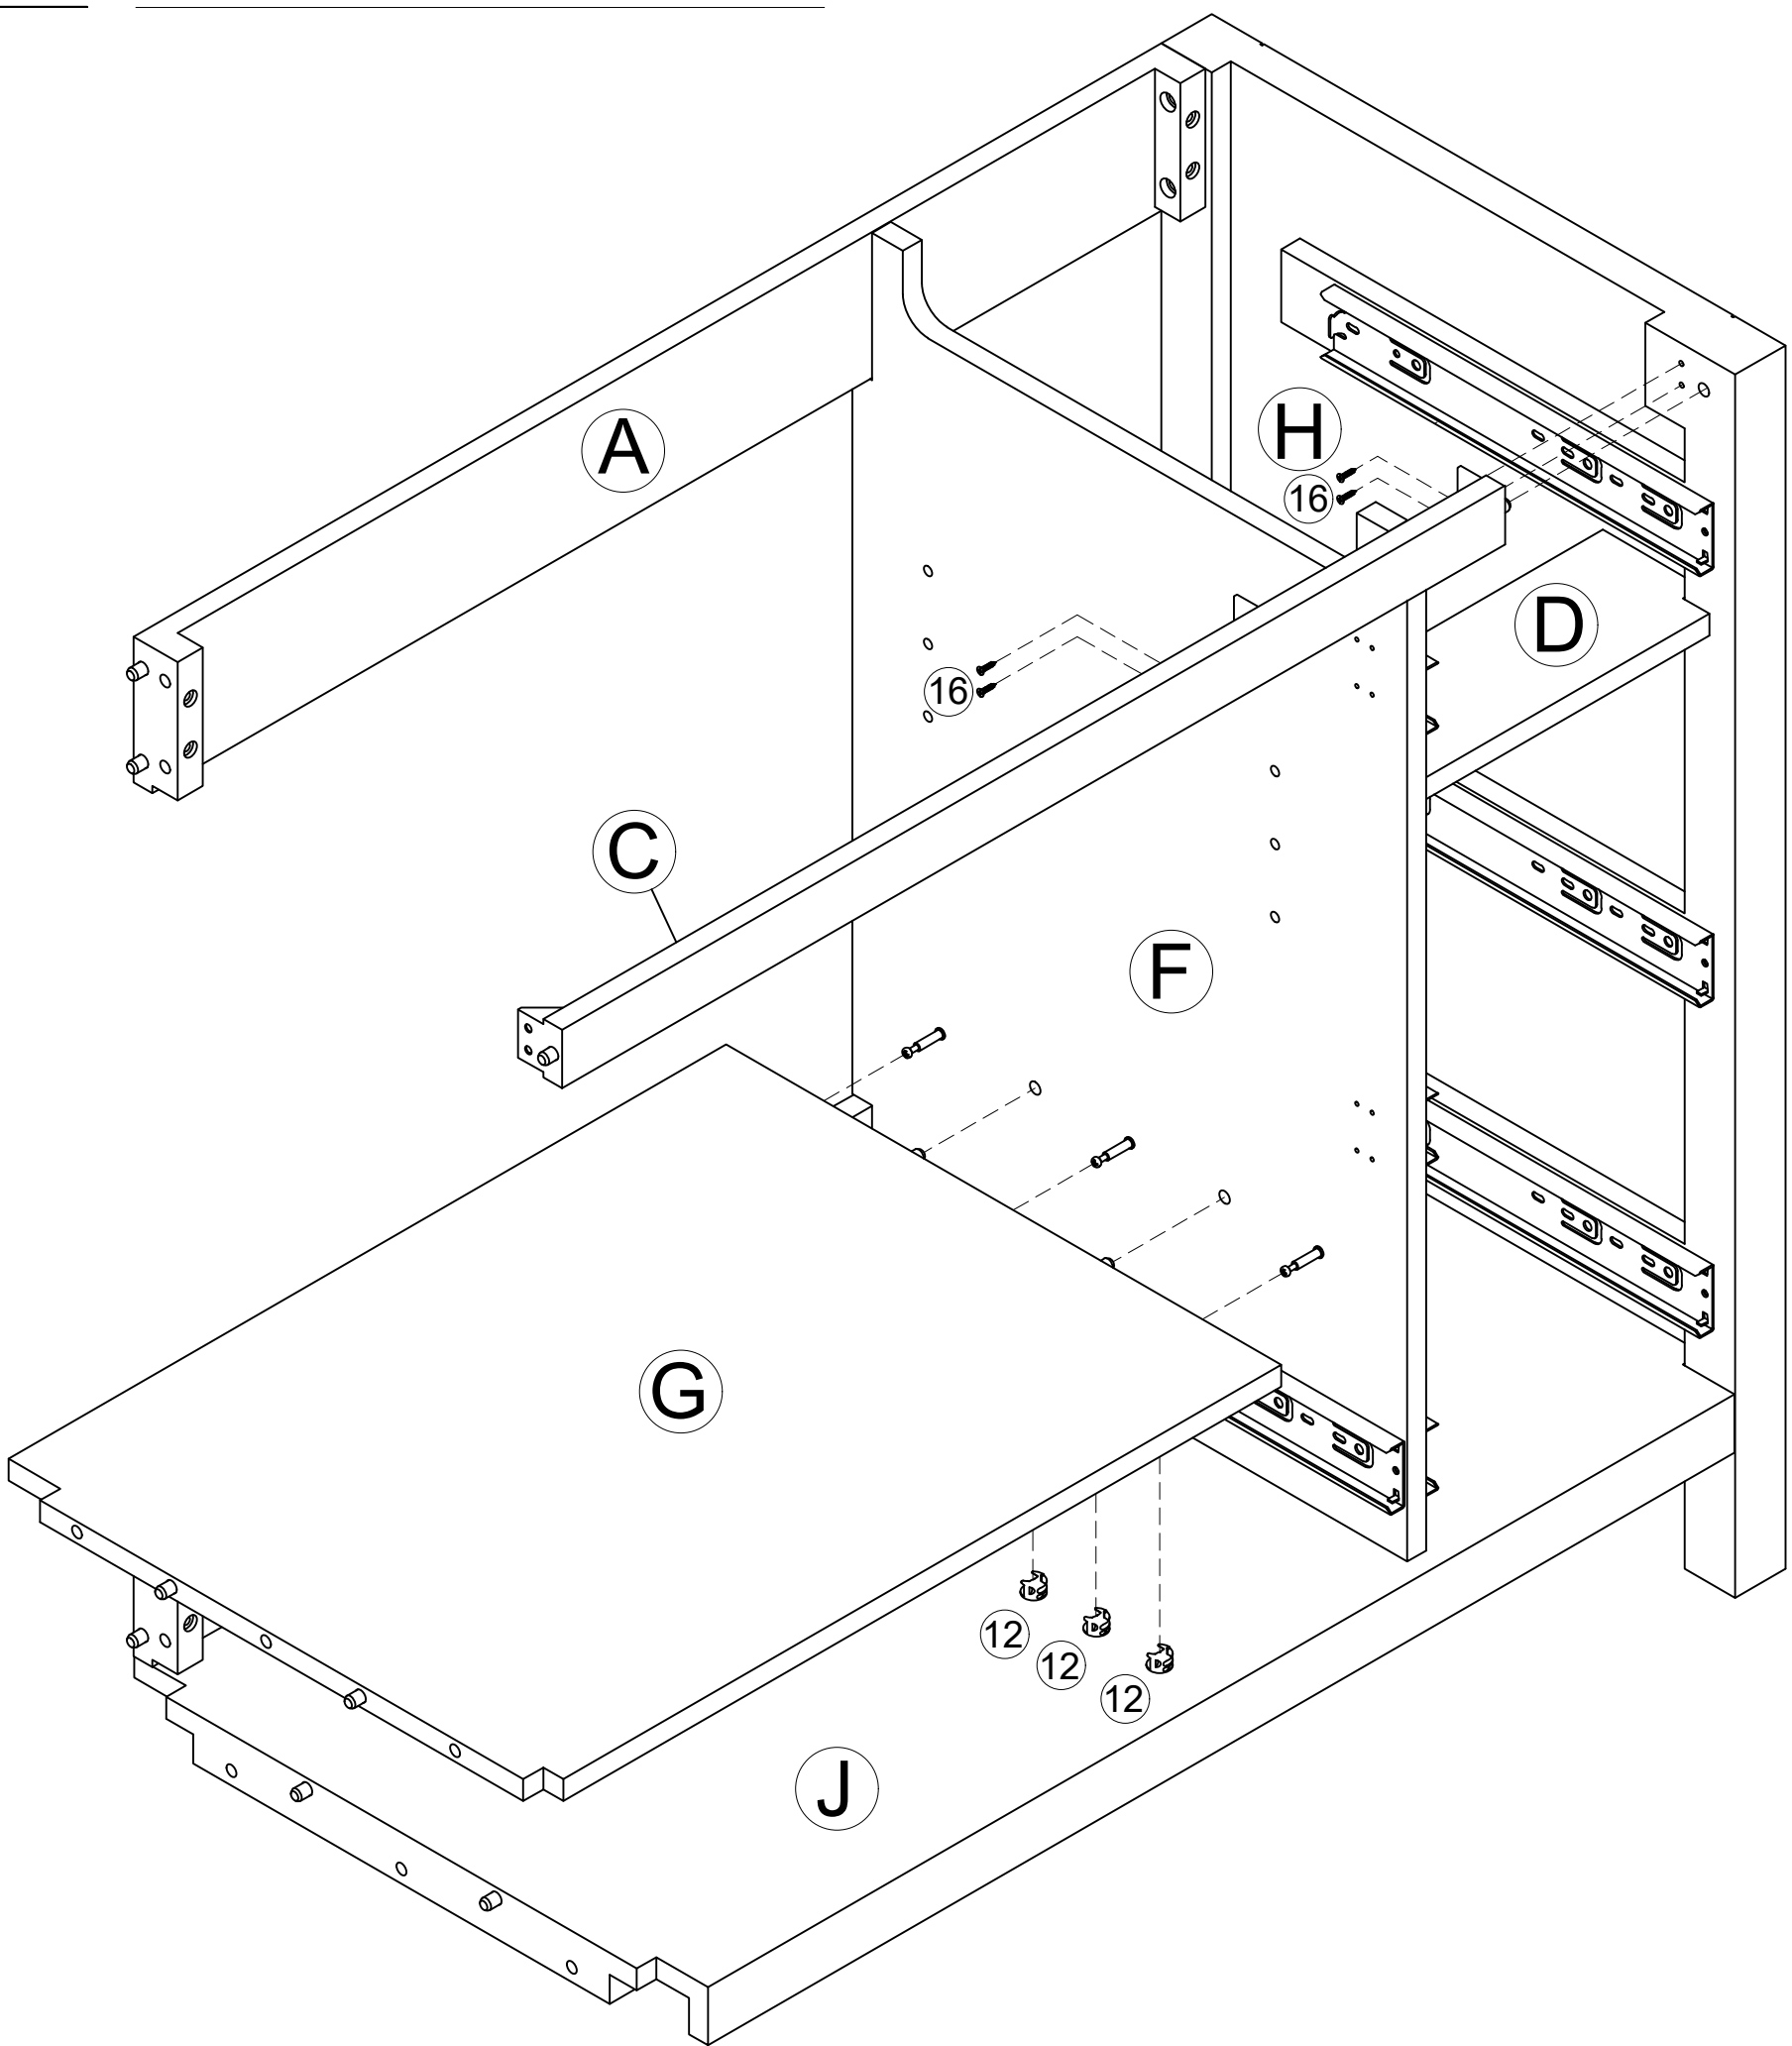


STEP 17

- 1




7pcs

1/4"x25mm
- 12





3pcs

Ø15x9mm
- 16




2pcs

Ø3x12mm

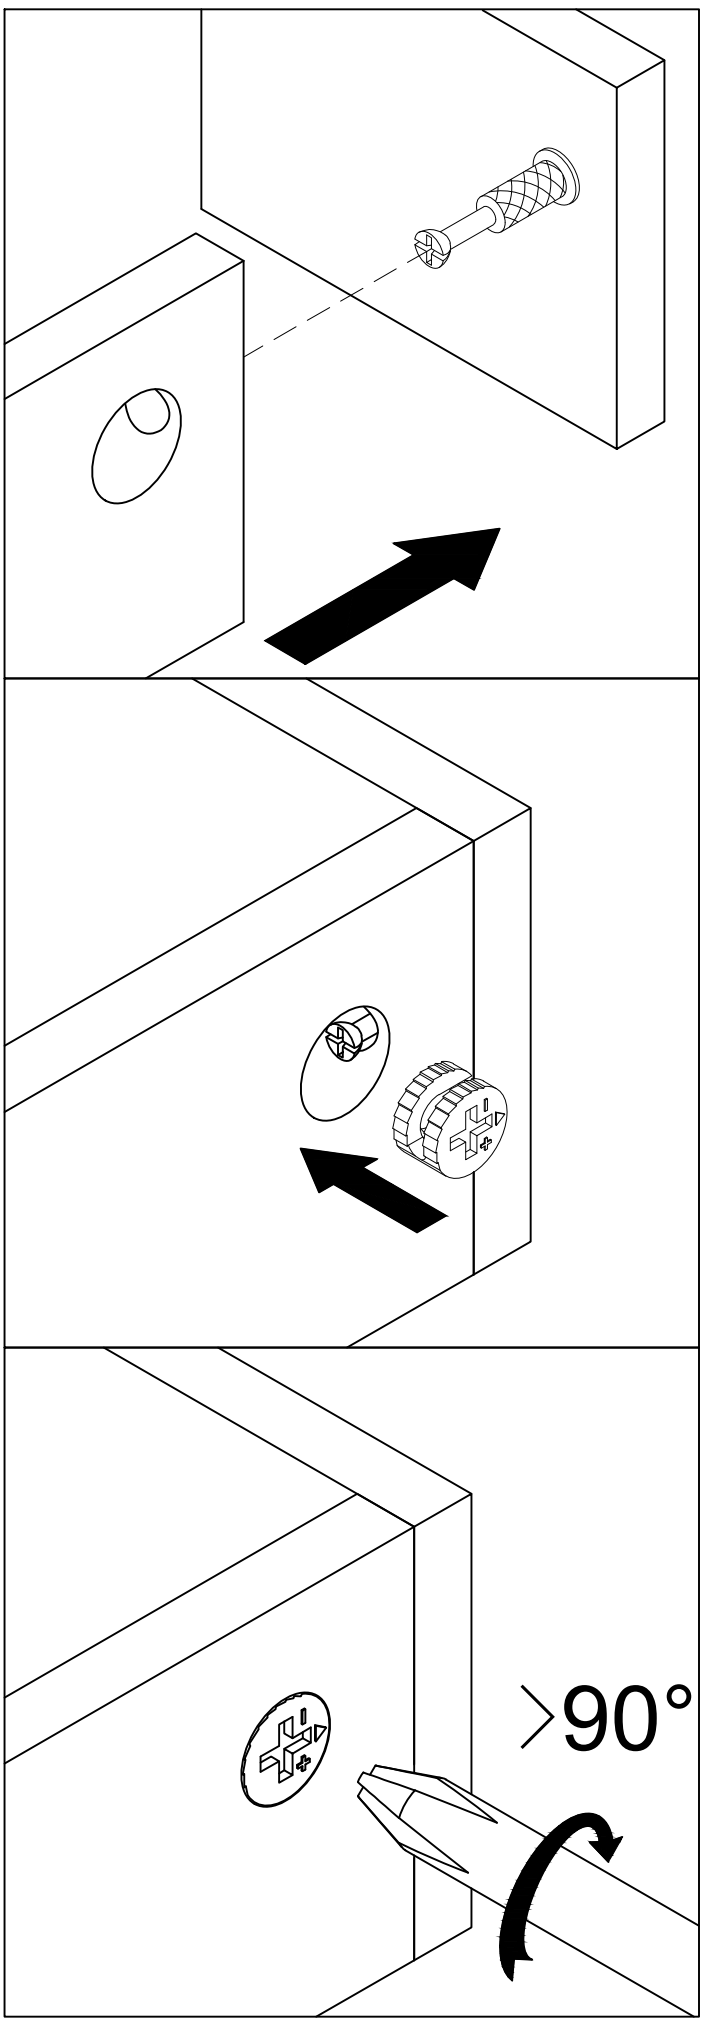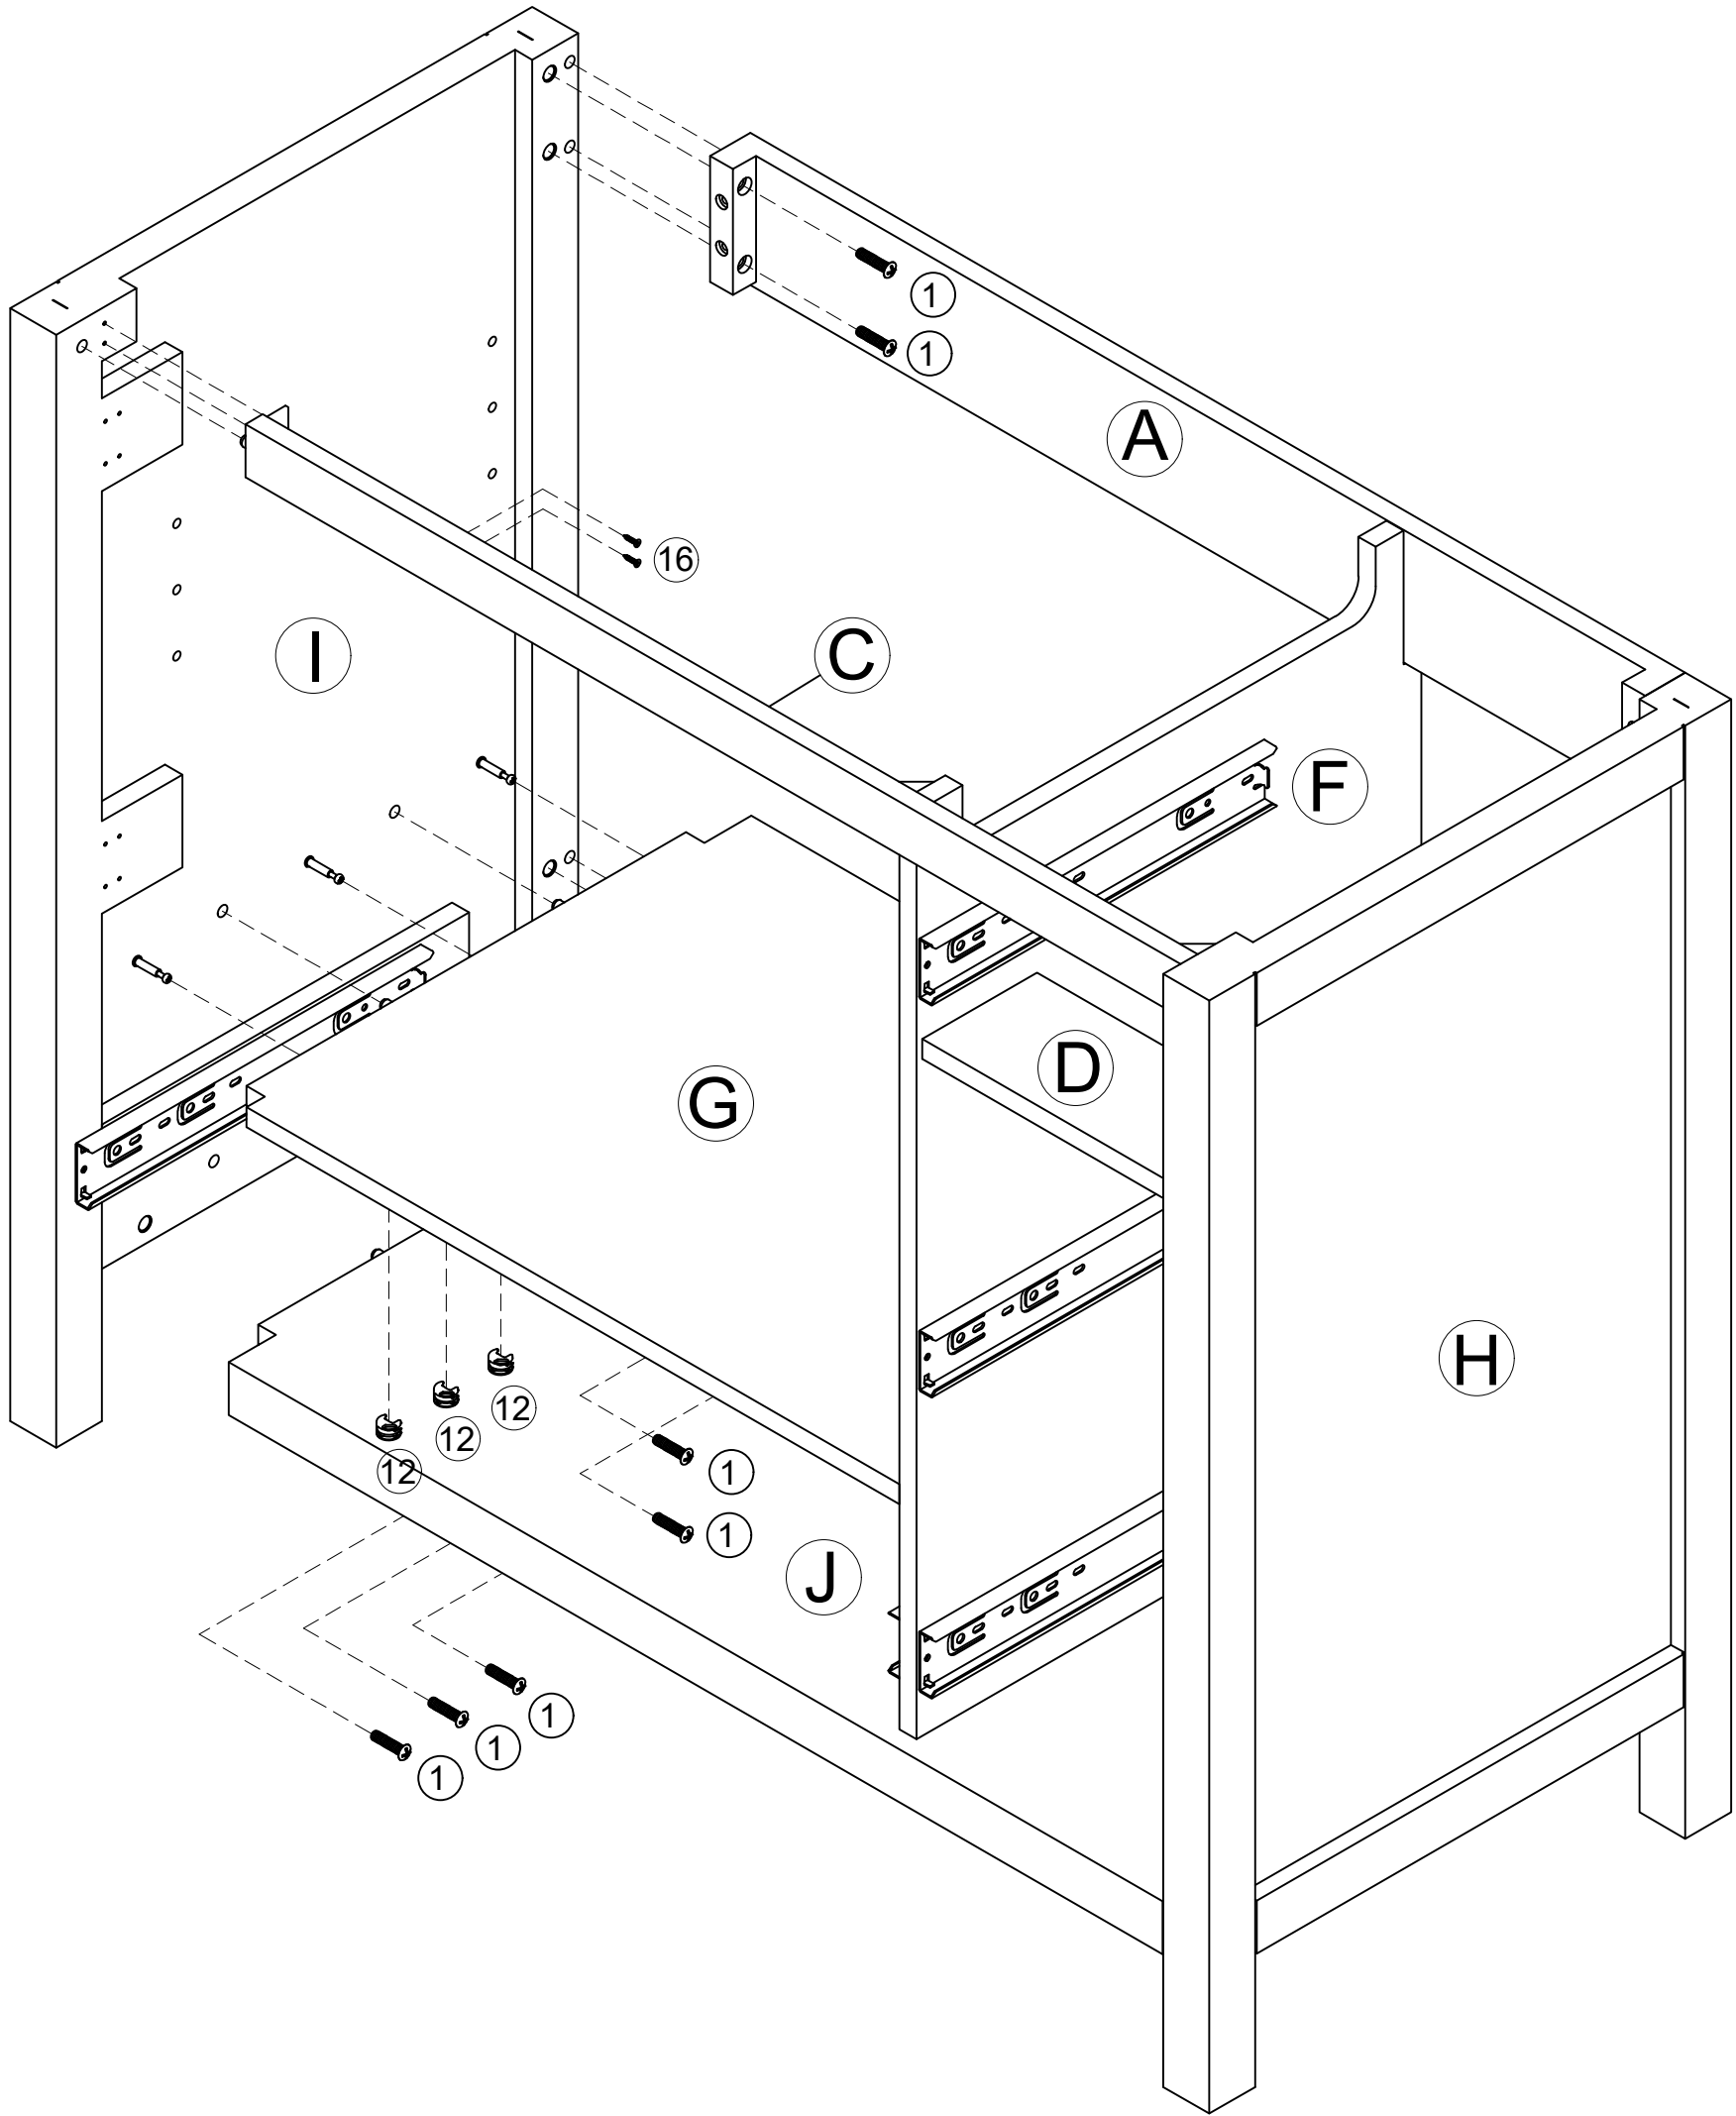


STEP 18

- 3



3pcs

Ø4x35mm

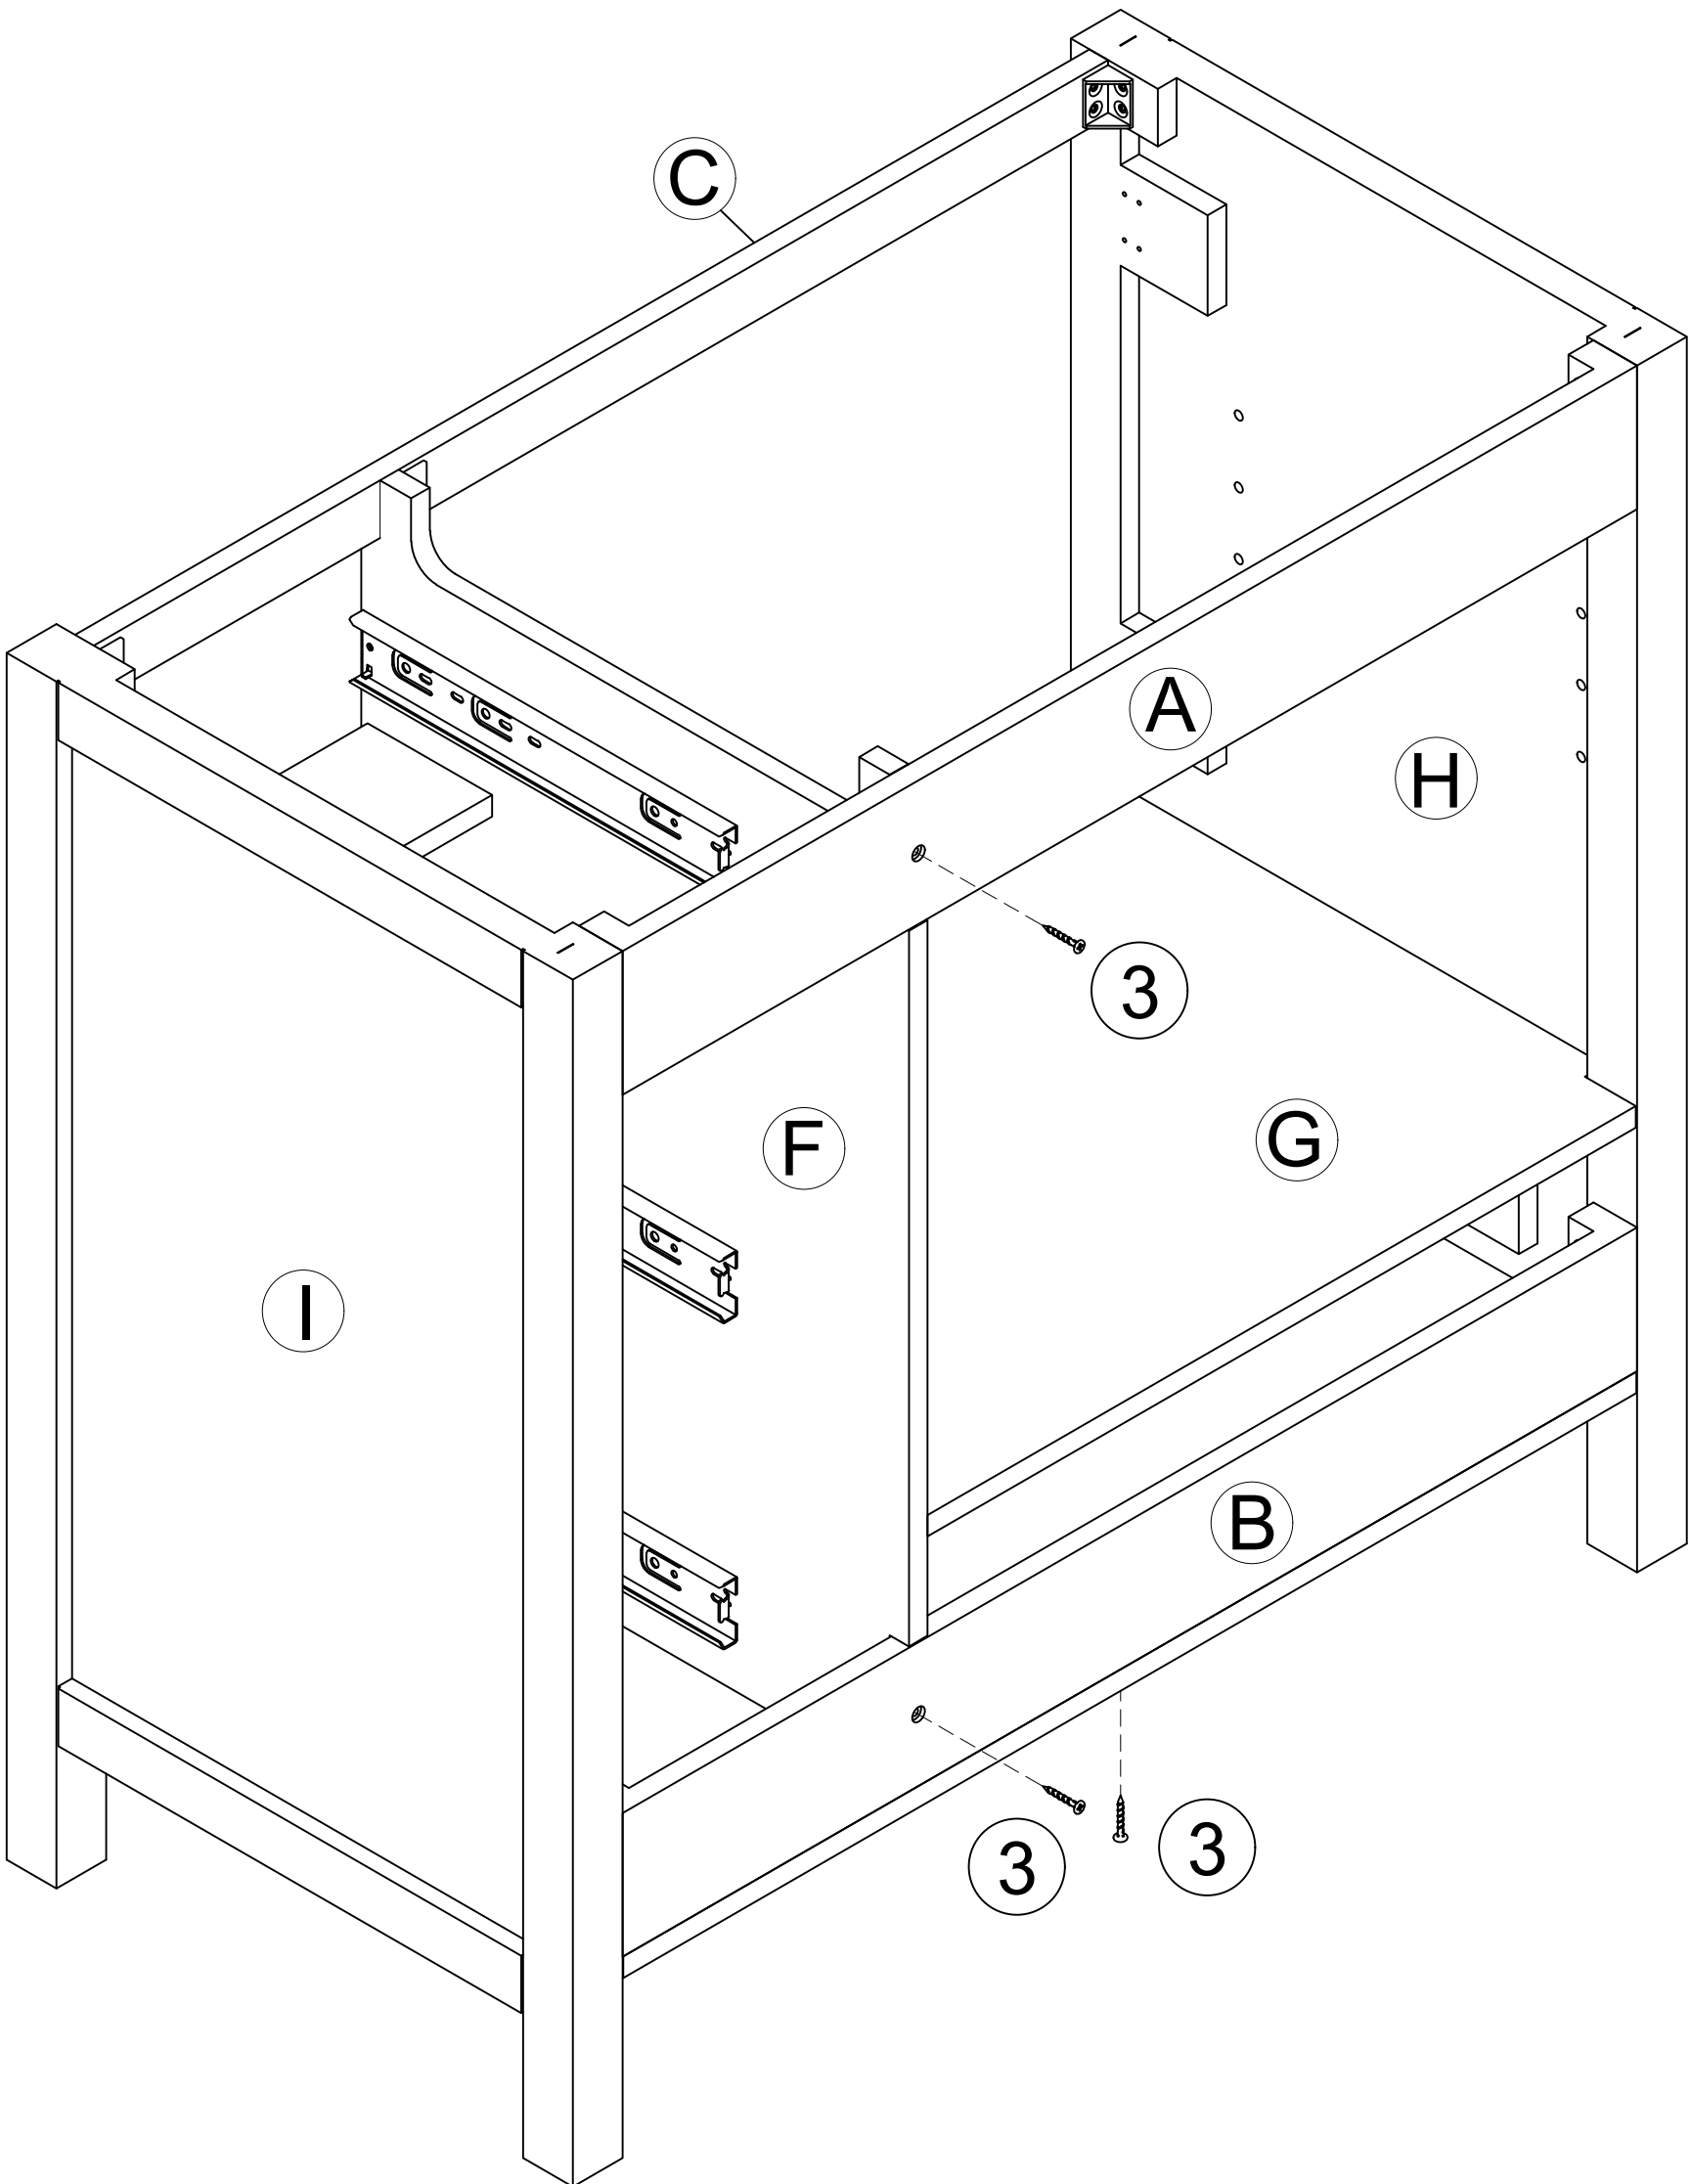

STEP 19



- 6



2pcs
- 8




4pcs
Ø4x12mm

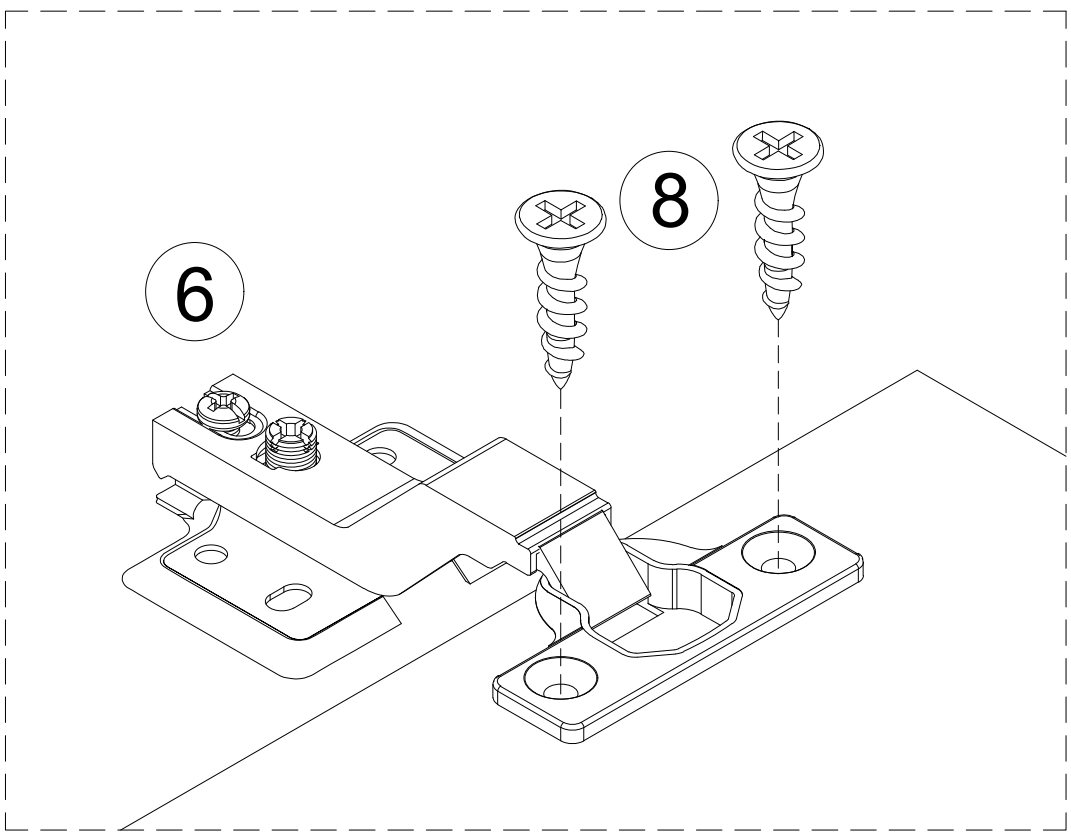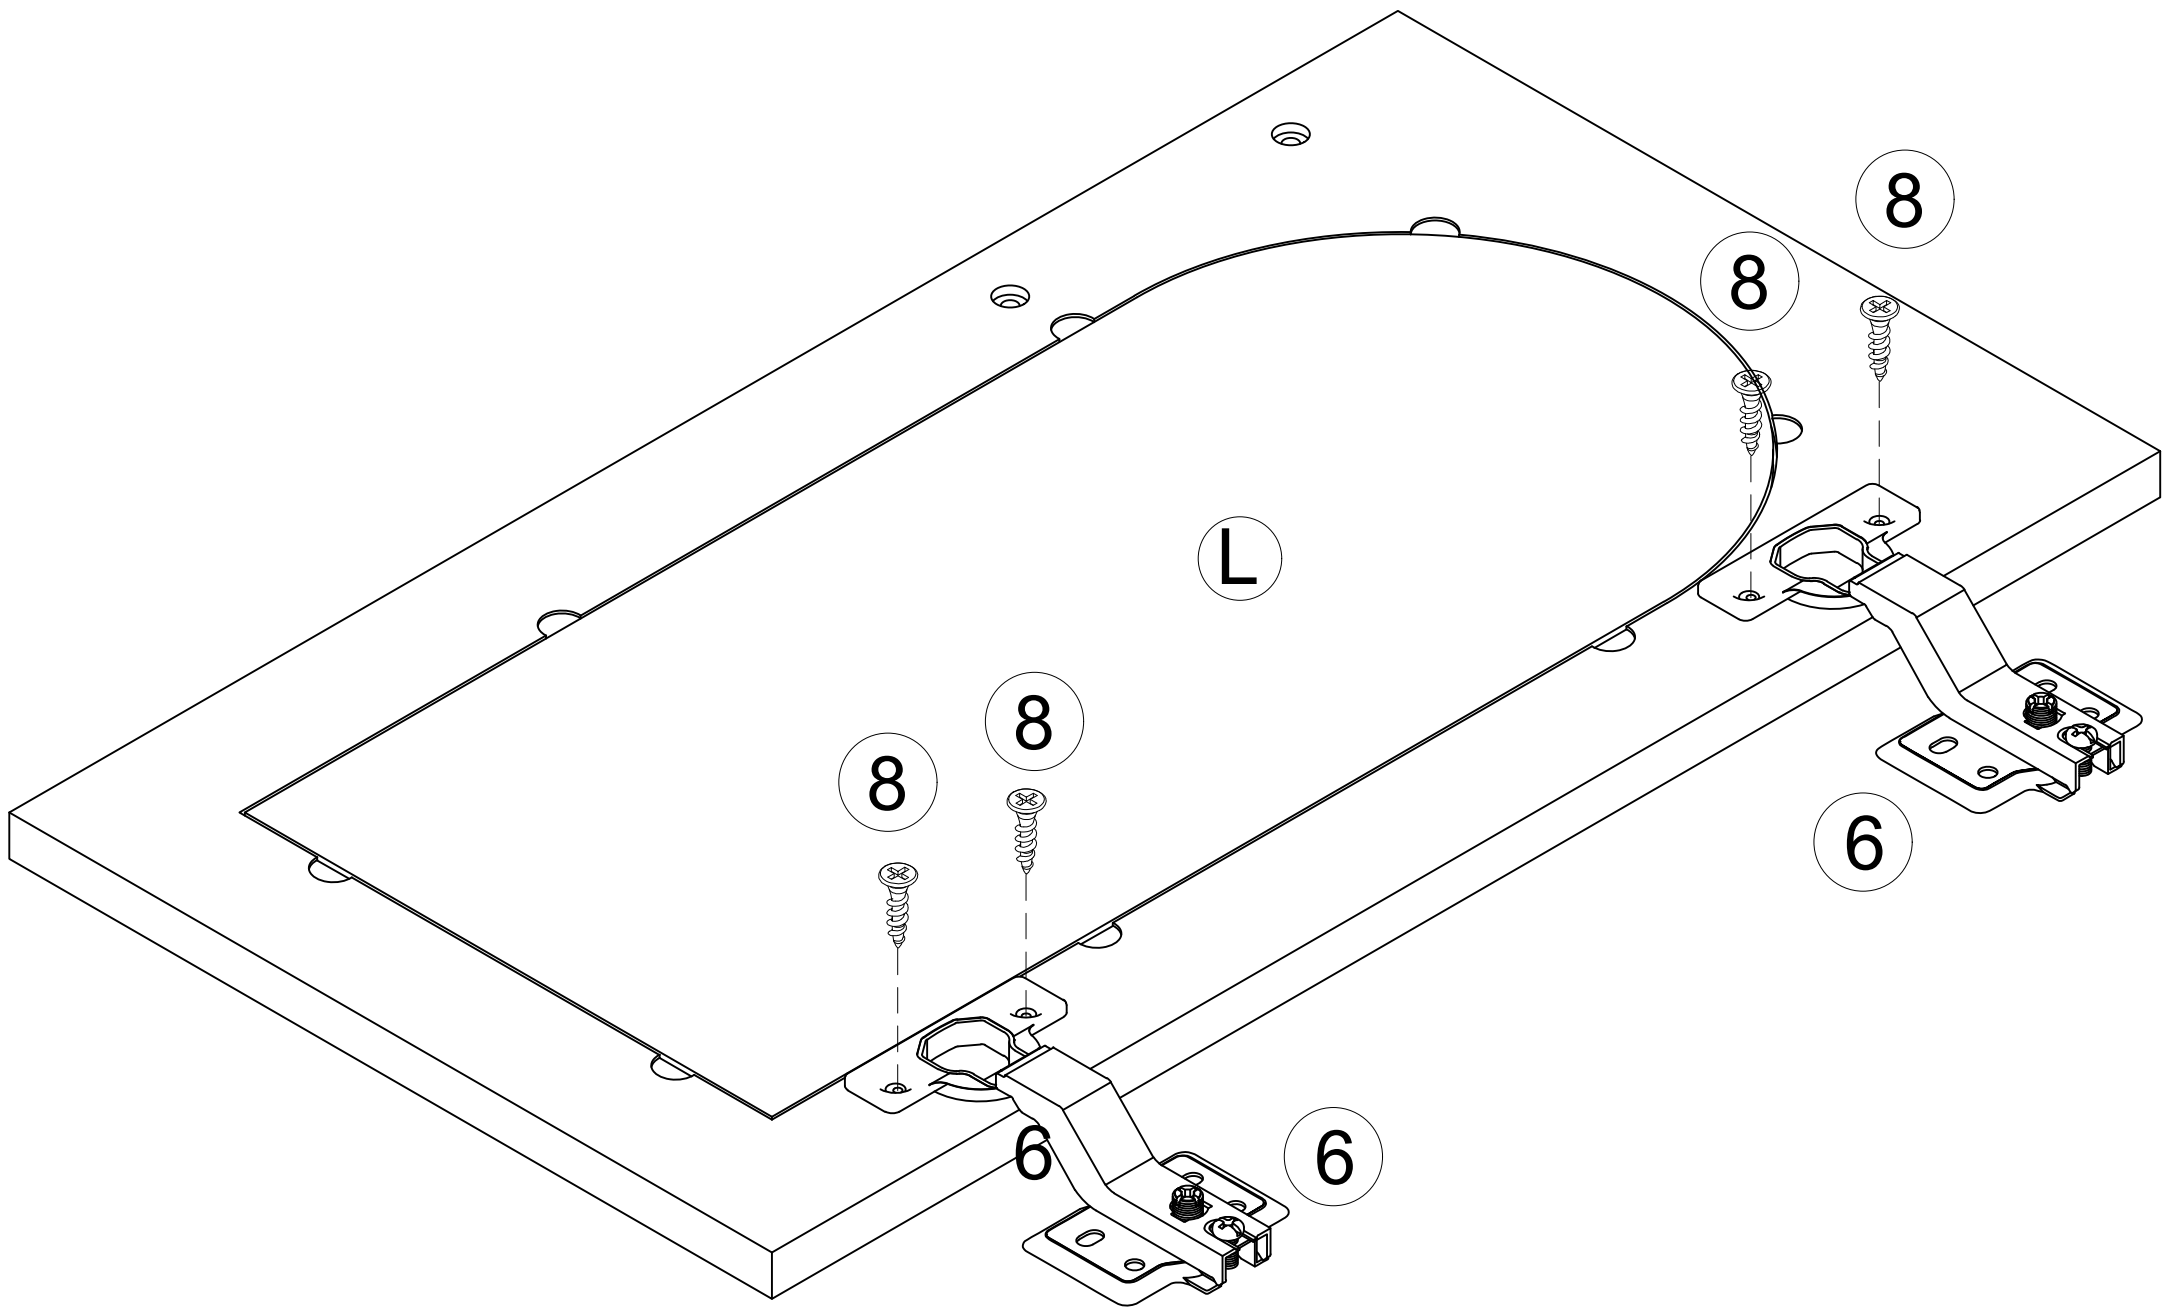


STEP 20



- 6

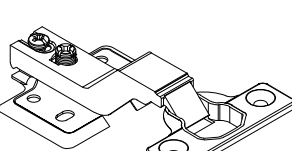

2pcs
- 8




4pcs
Ø4x12mm

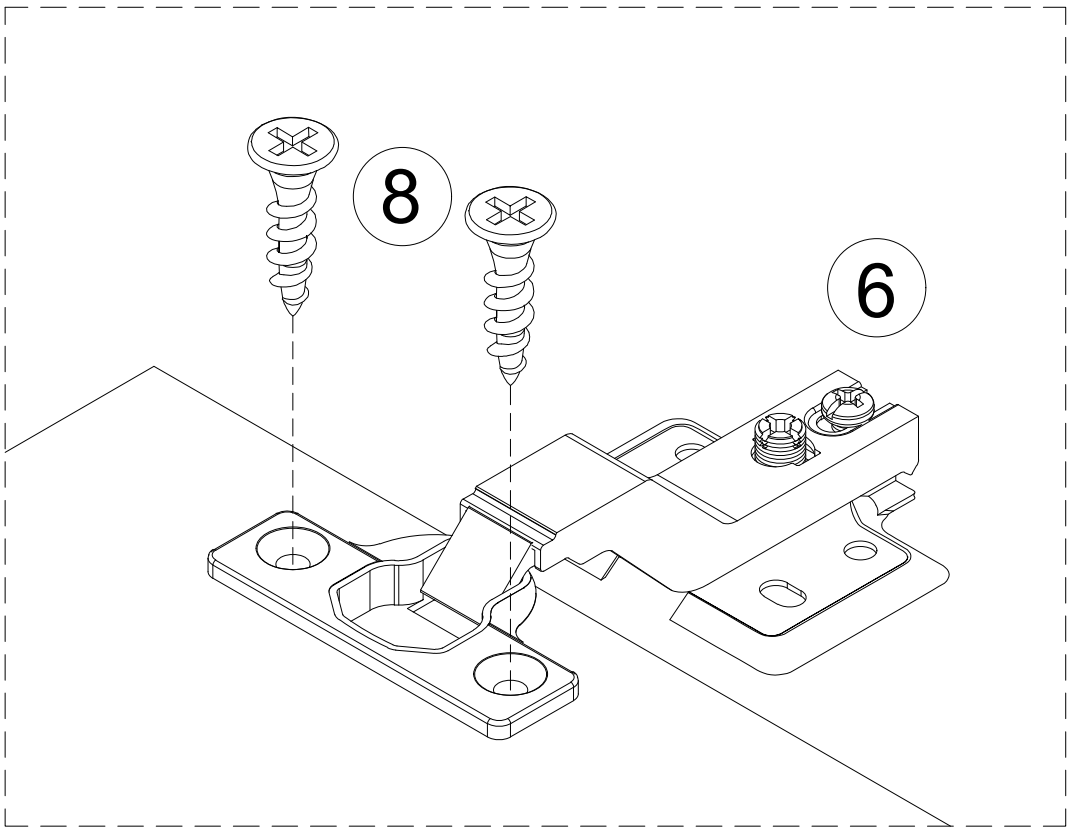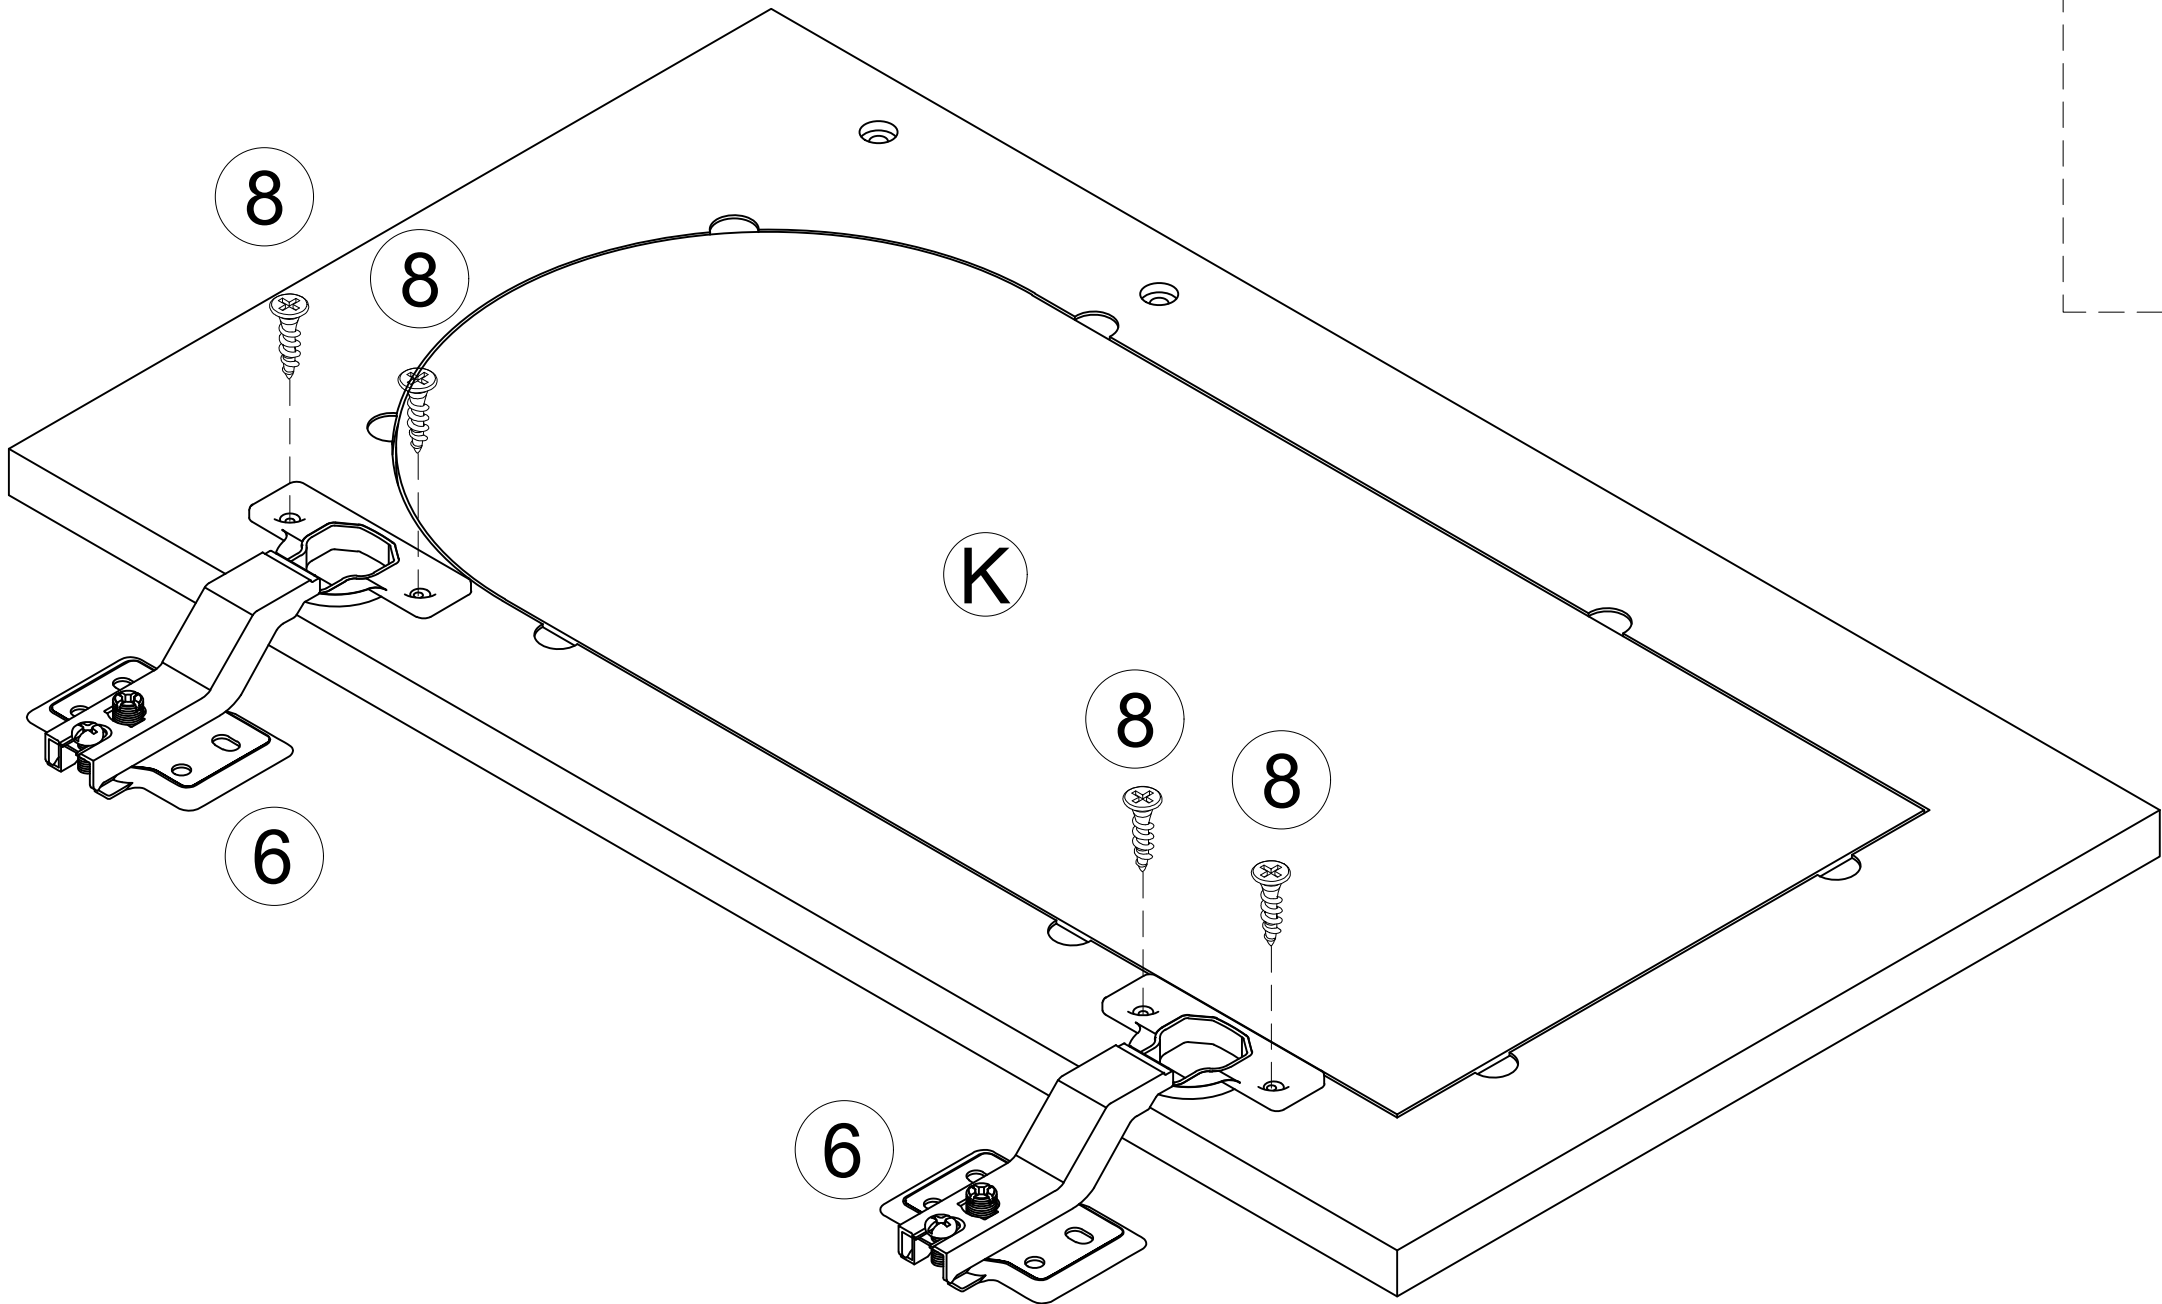


STEP 21

8




16pcs

7



2pcs

13



4pcs

Ø4x12mm






5/32"x12mm

Three-way adjustable hinge for perfectly aligned doors


1.TO ADJUST DOOR FORWARD OR BACKWARD.

2.TO ADJUST DOOR TO RIGHT OR TO LEFT.



3.TO ADJUST DOOR UP OR DOWN.

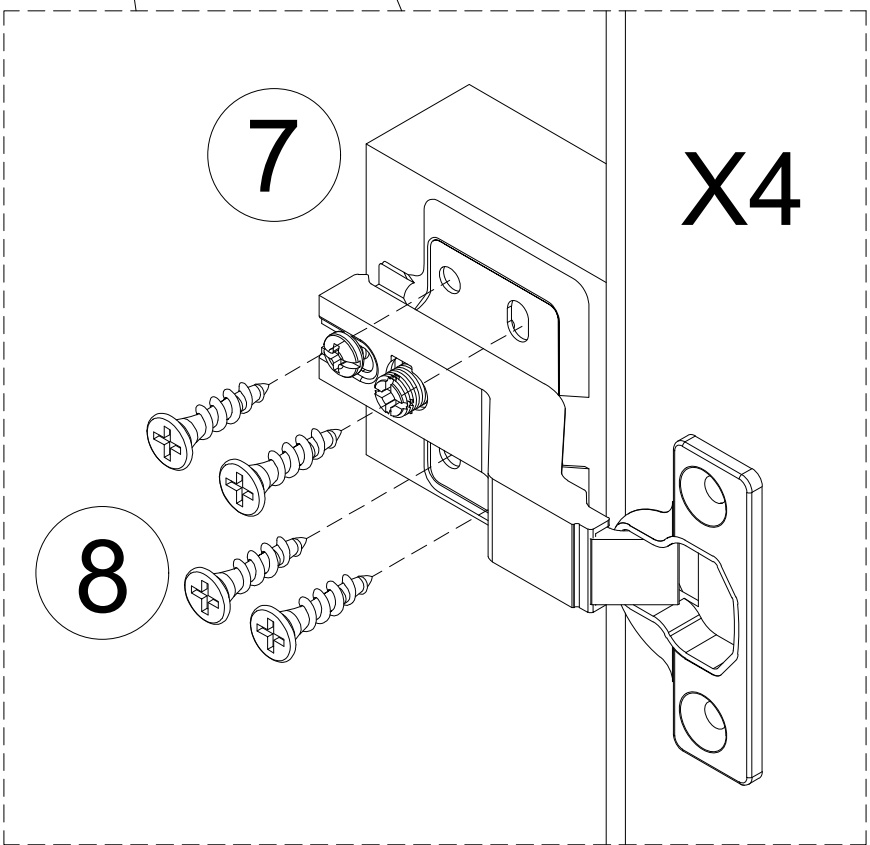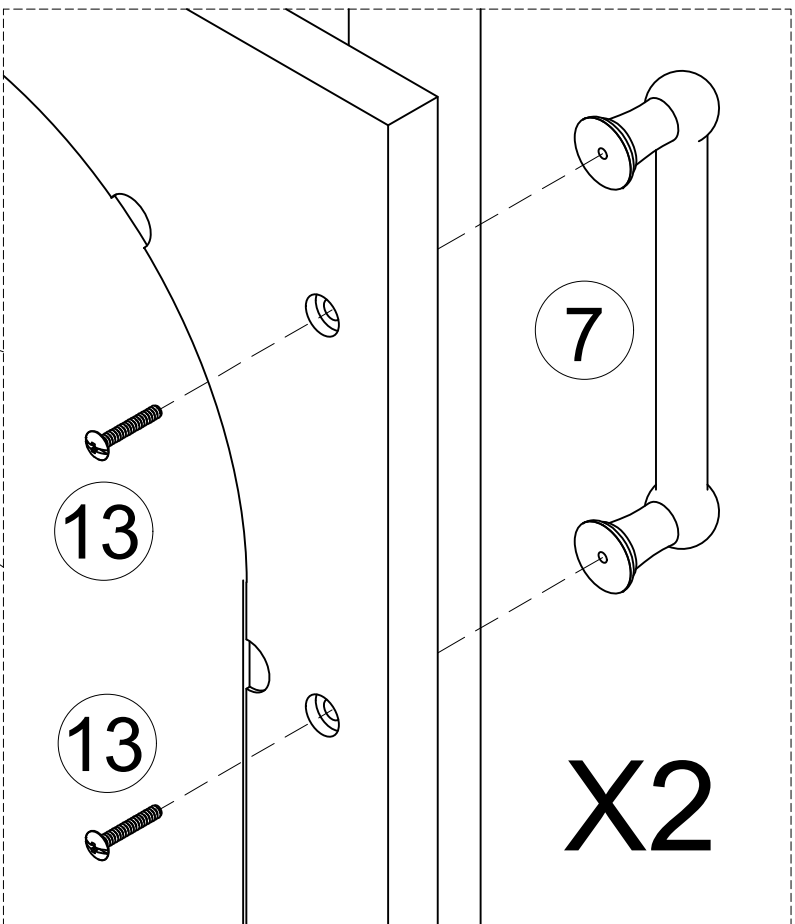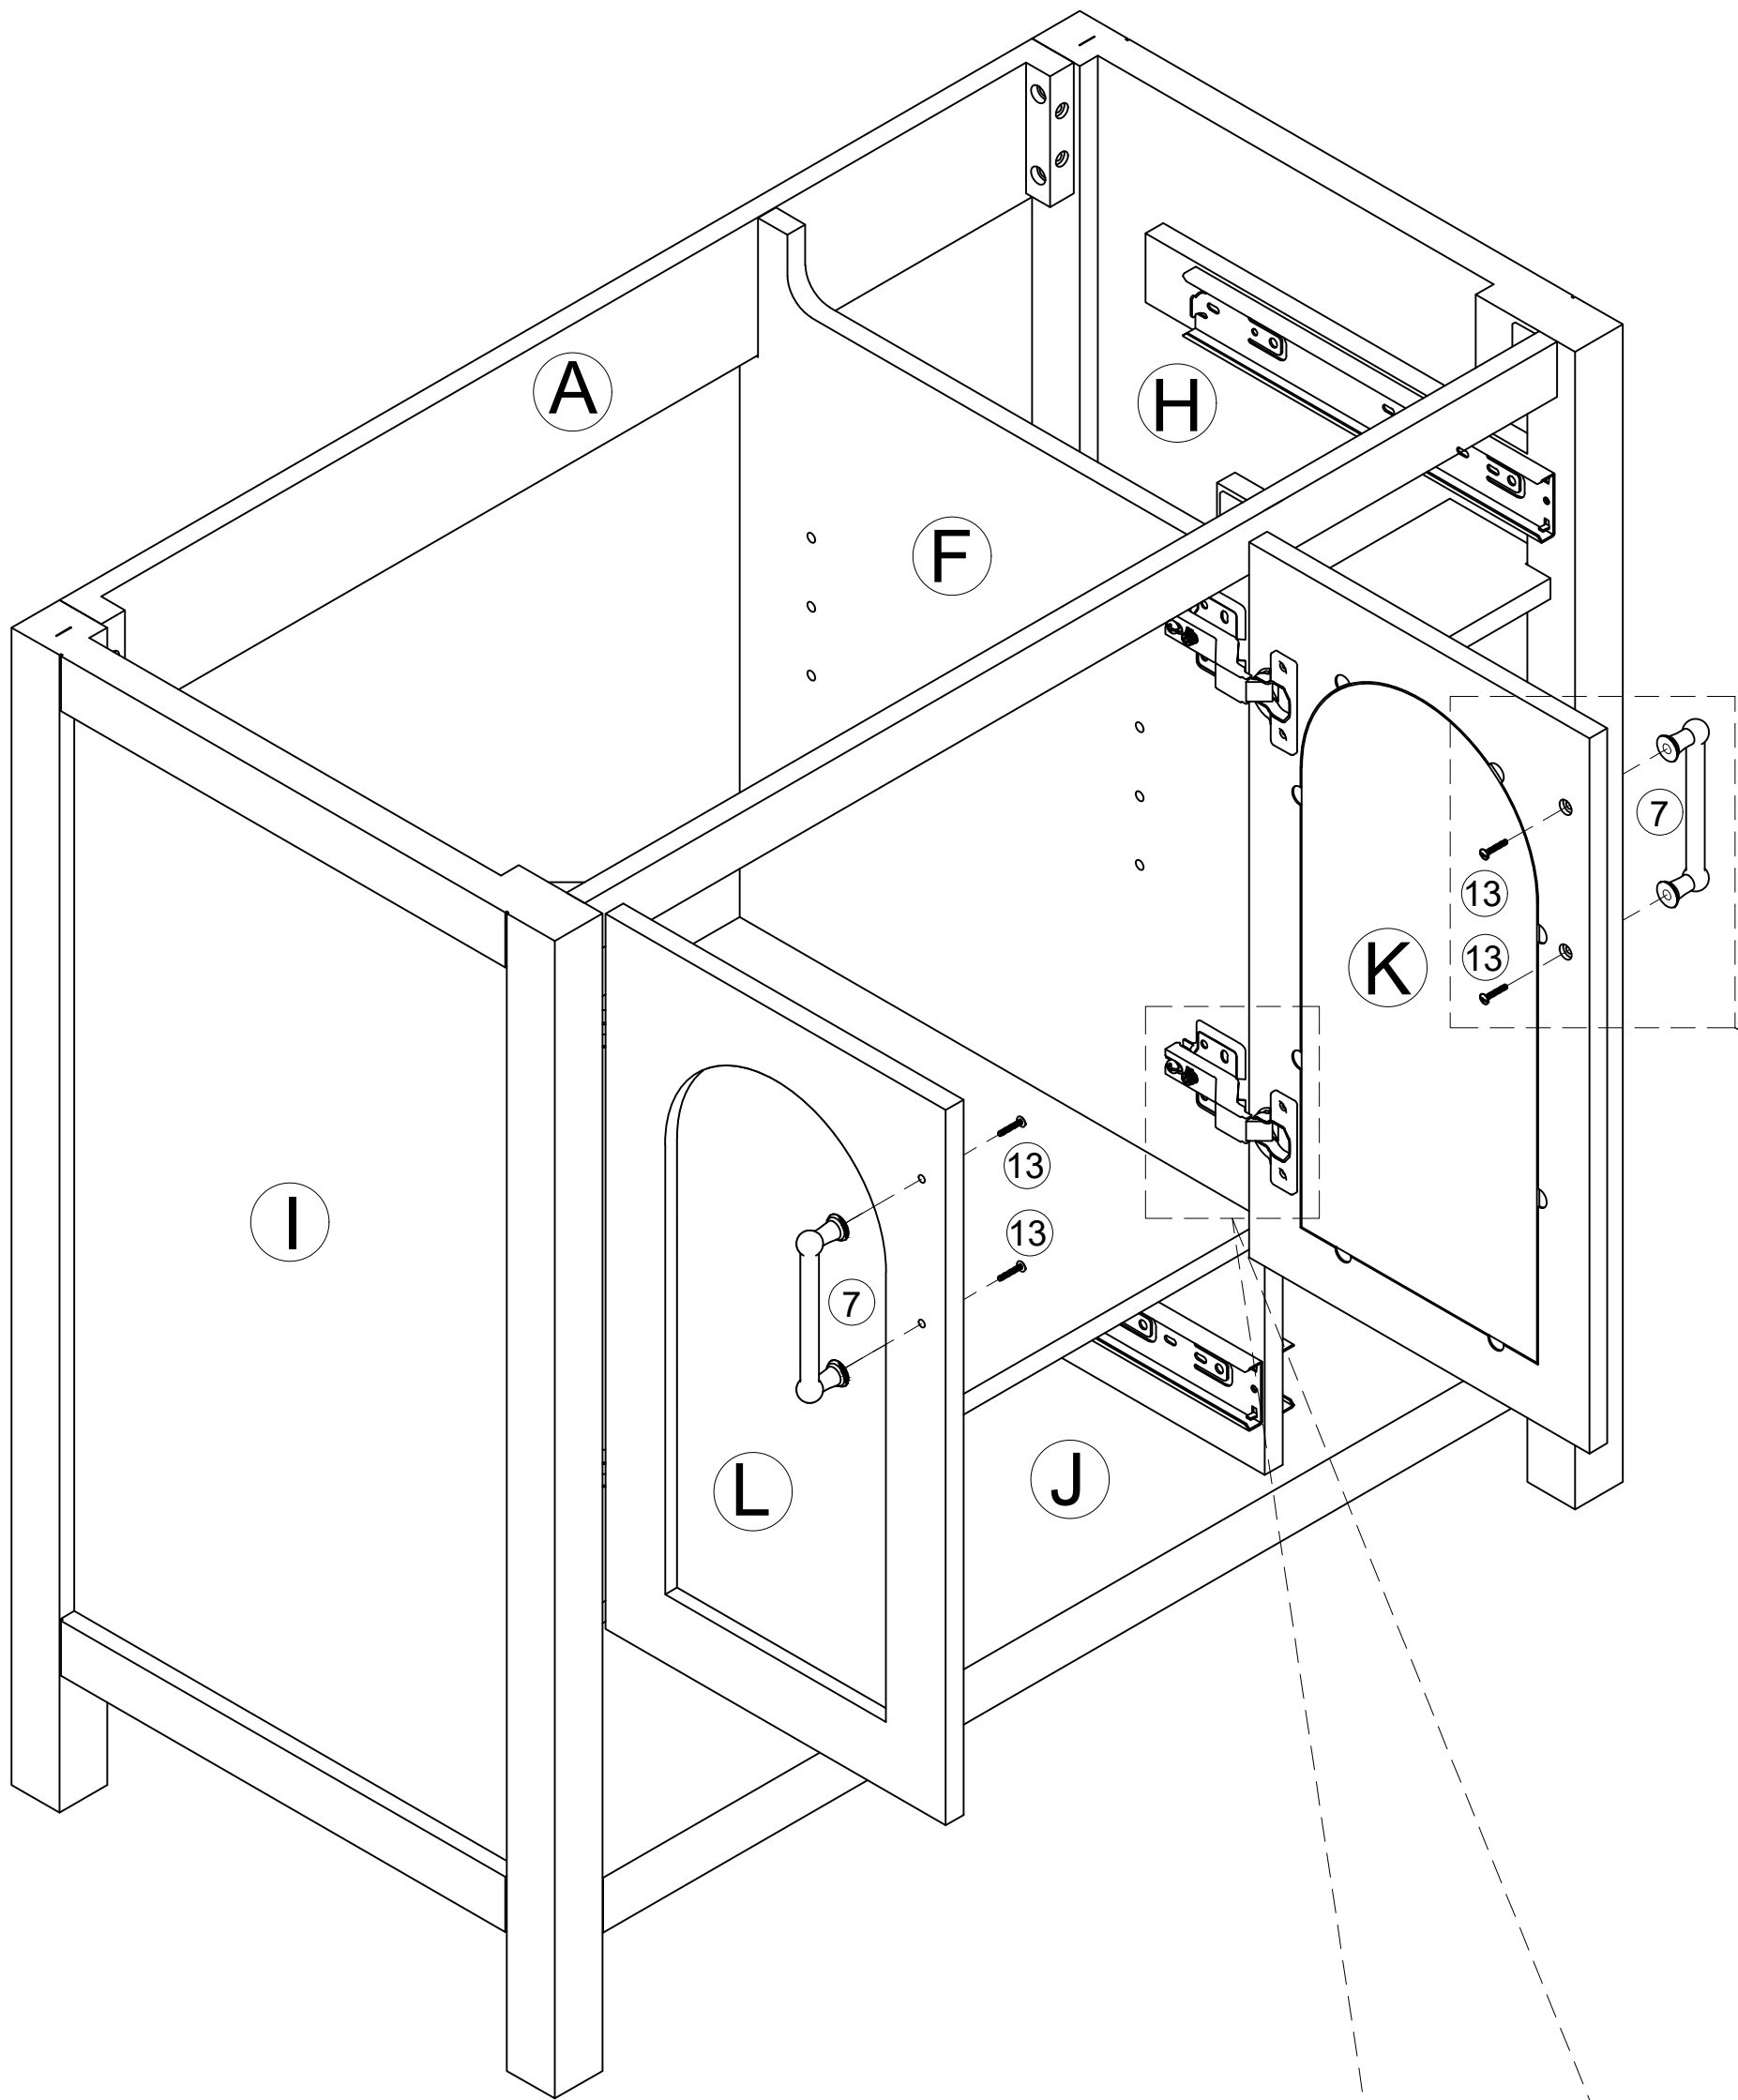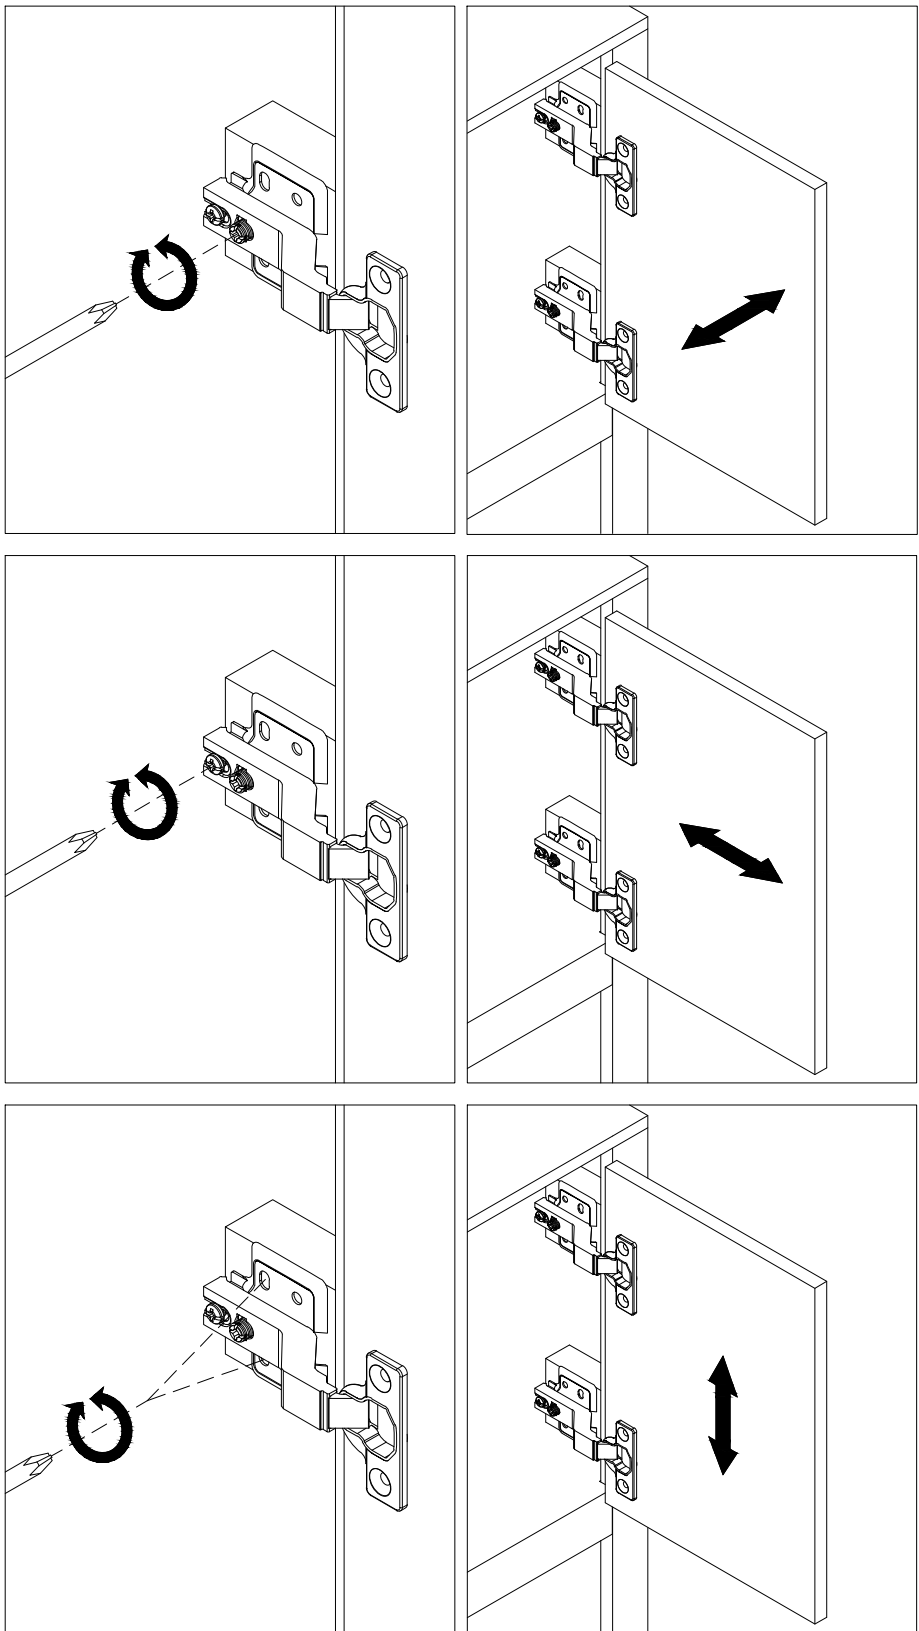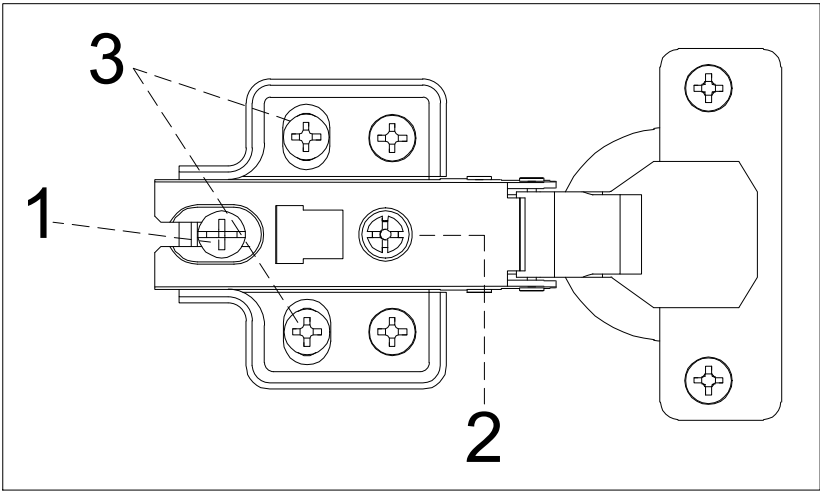


STEP 22

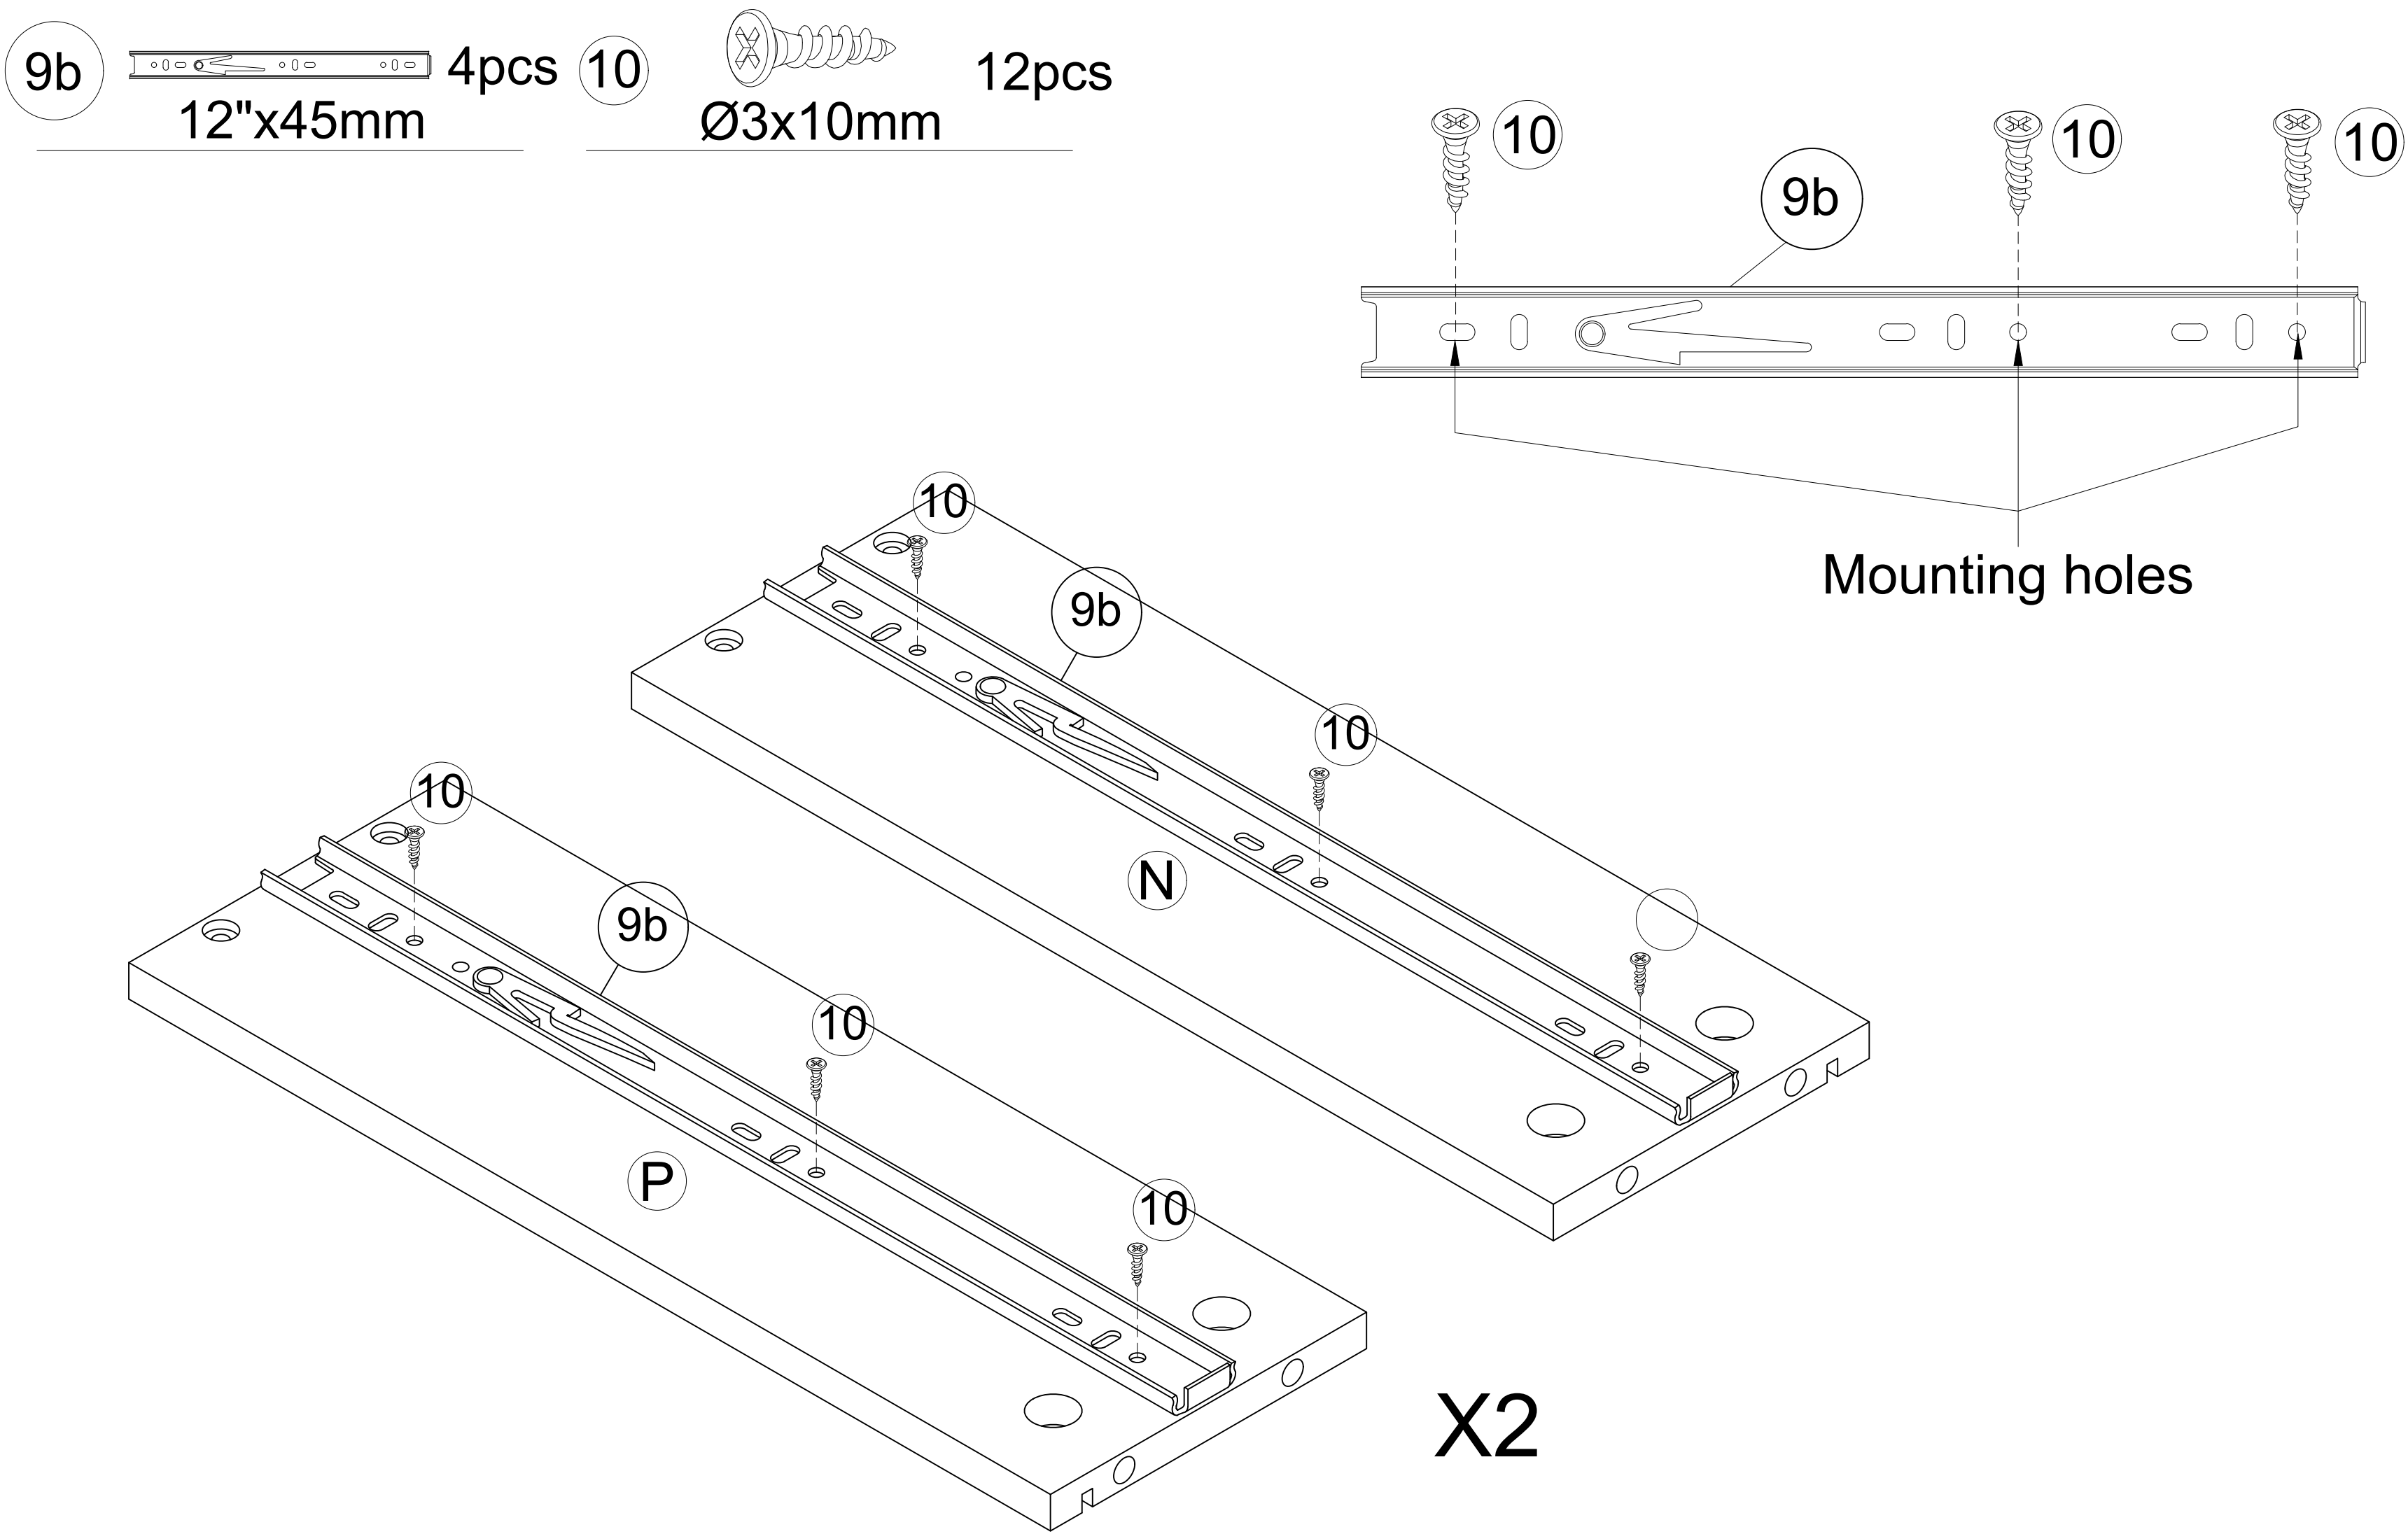


STEP 23

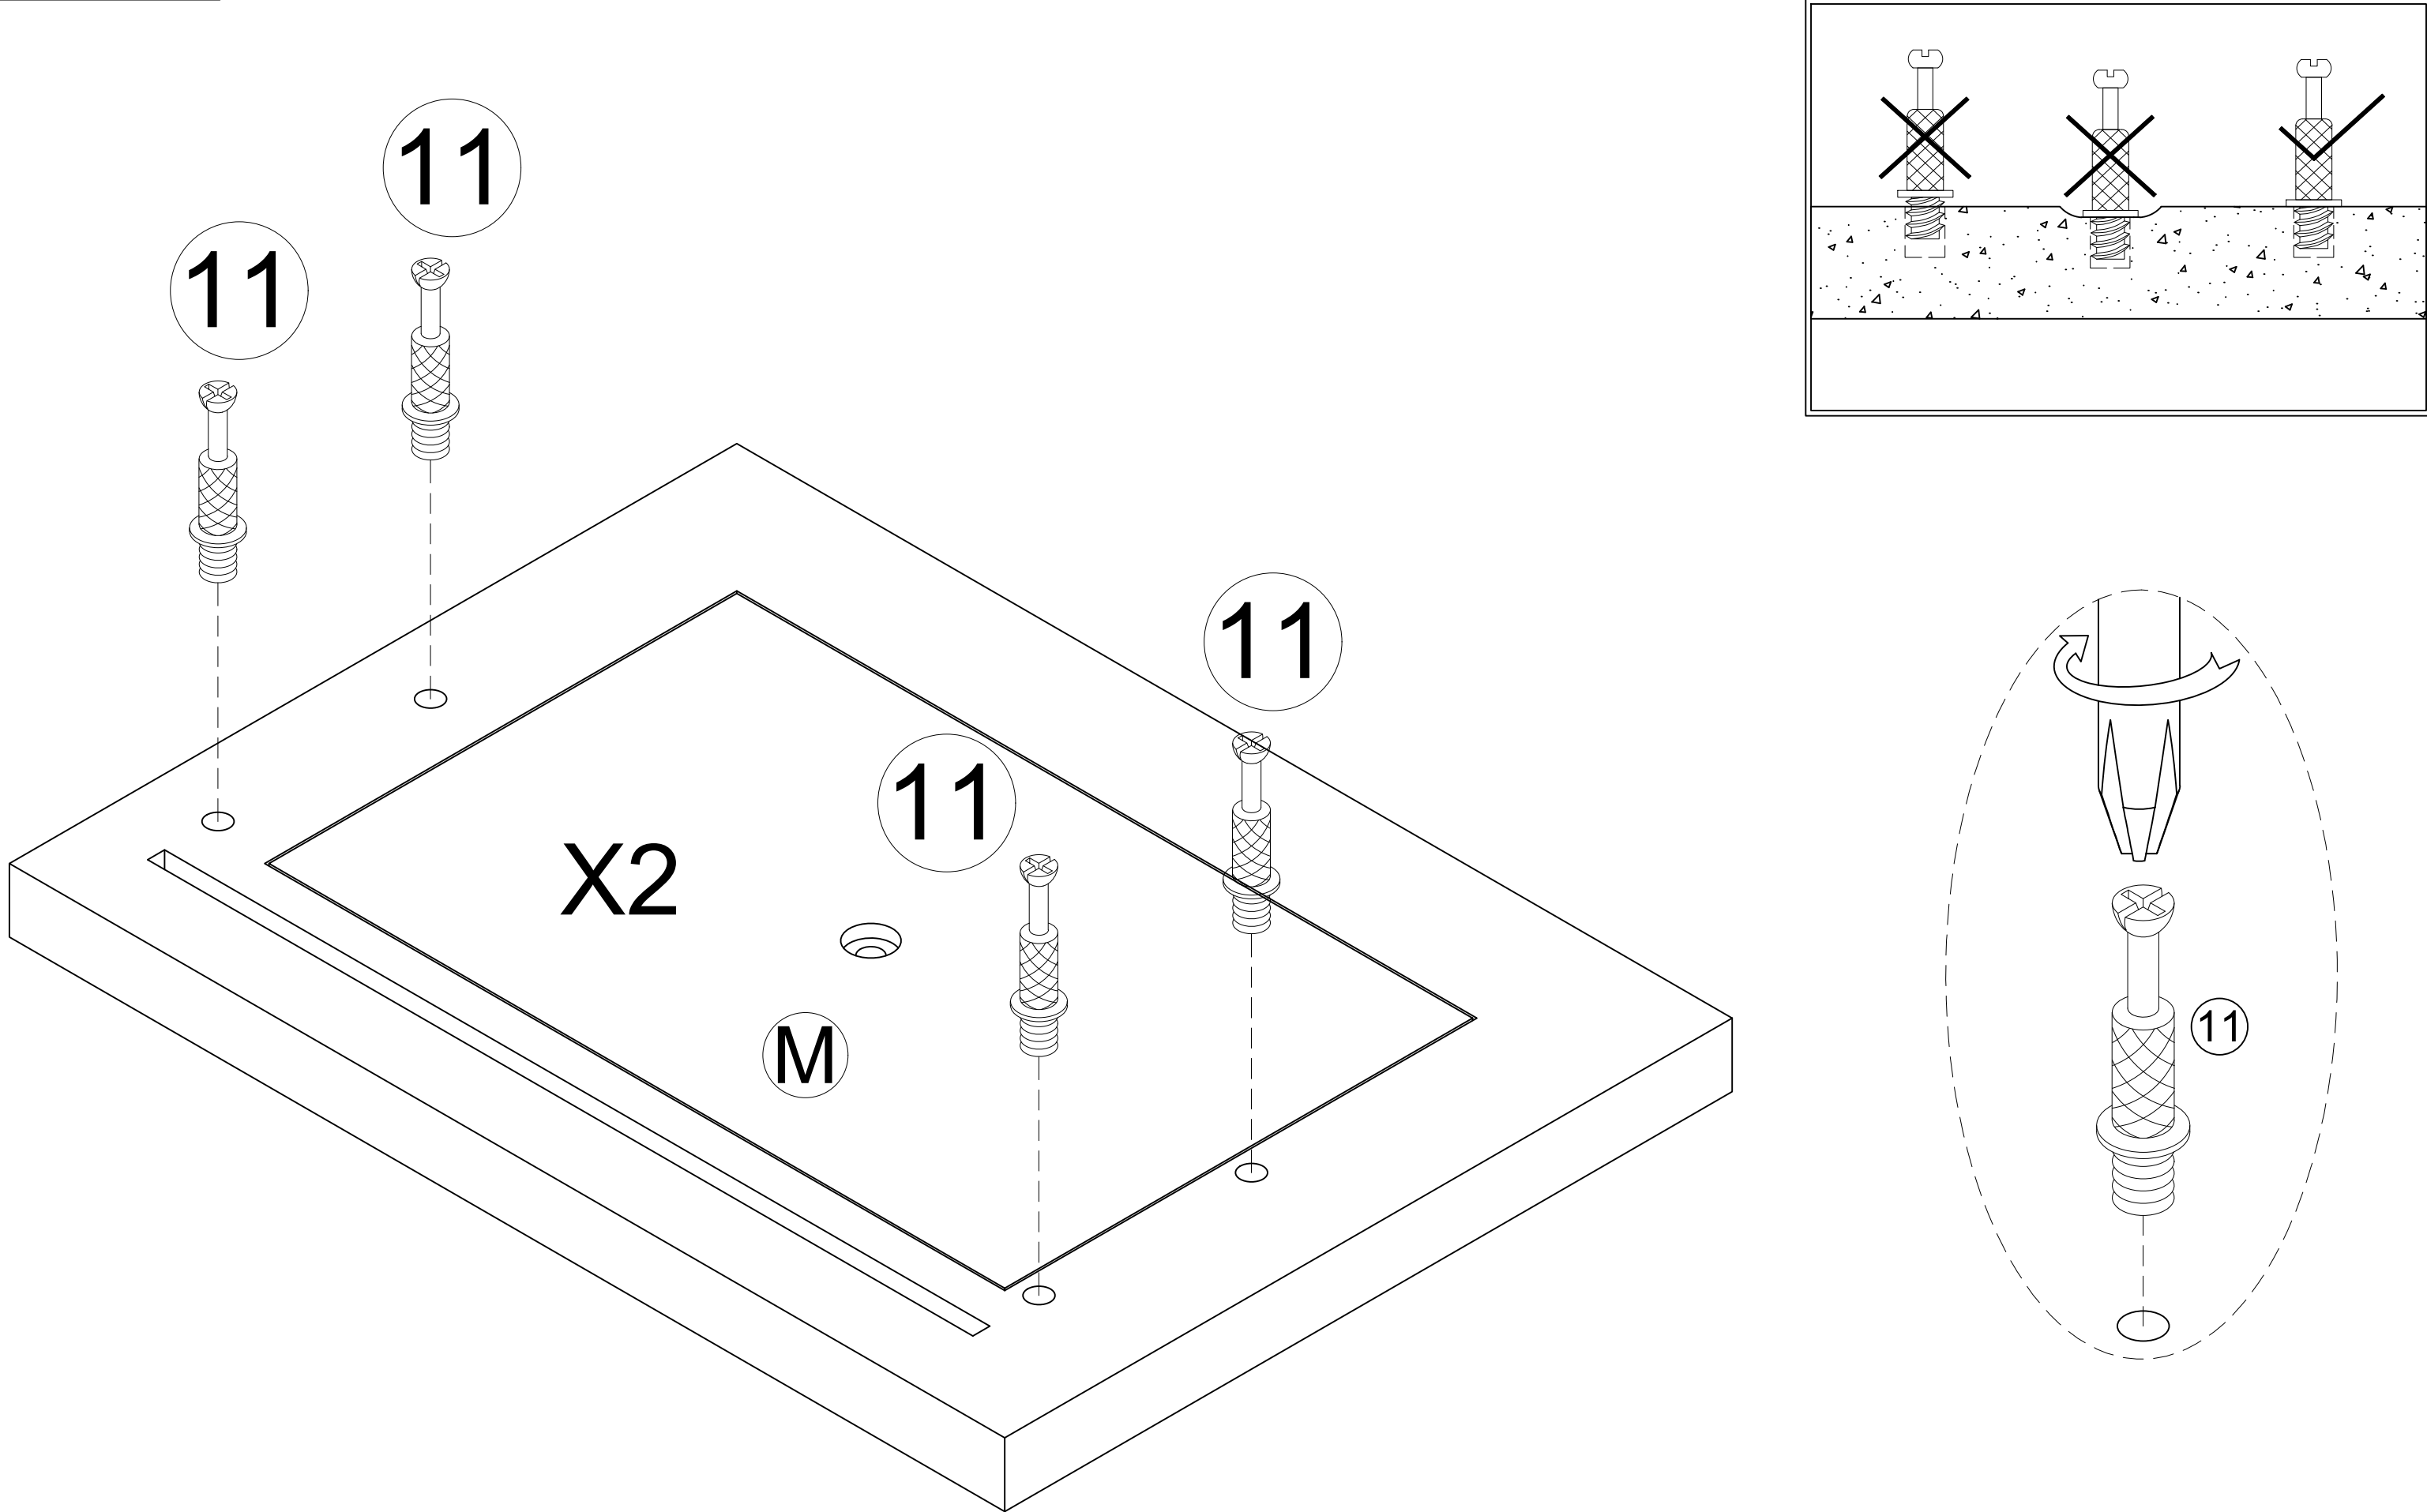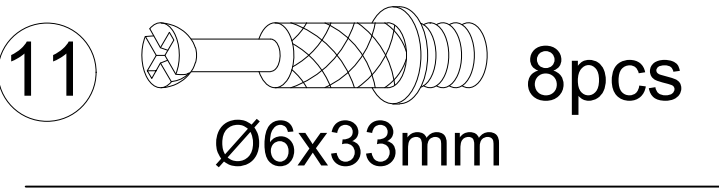


STEP 24

2  8pcs
Ø4x25mm

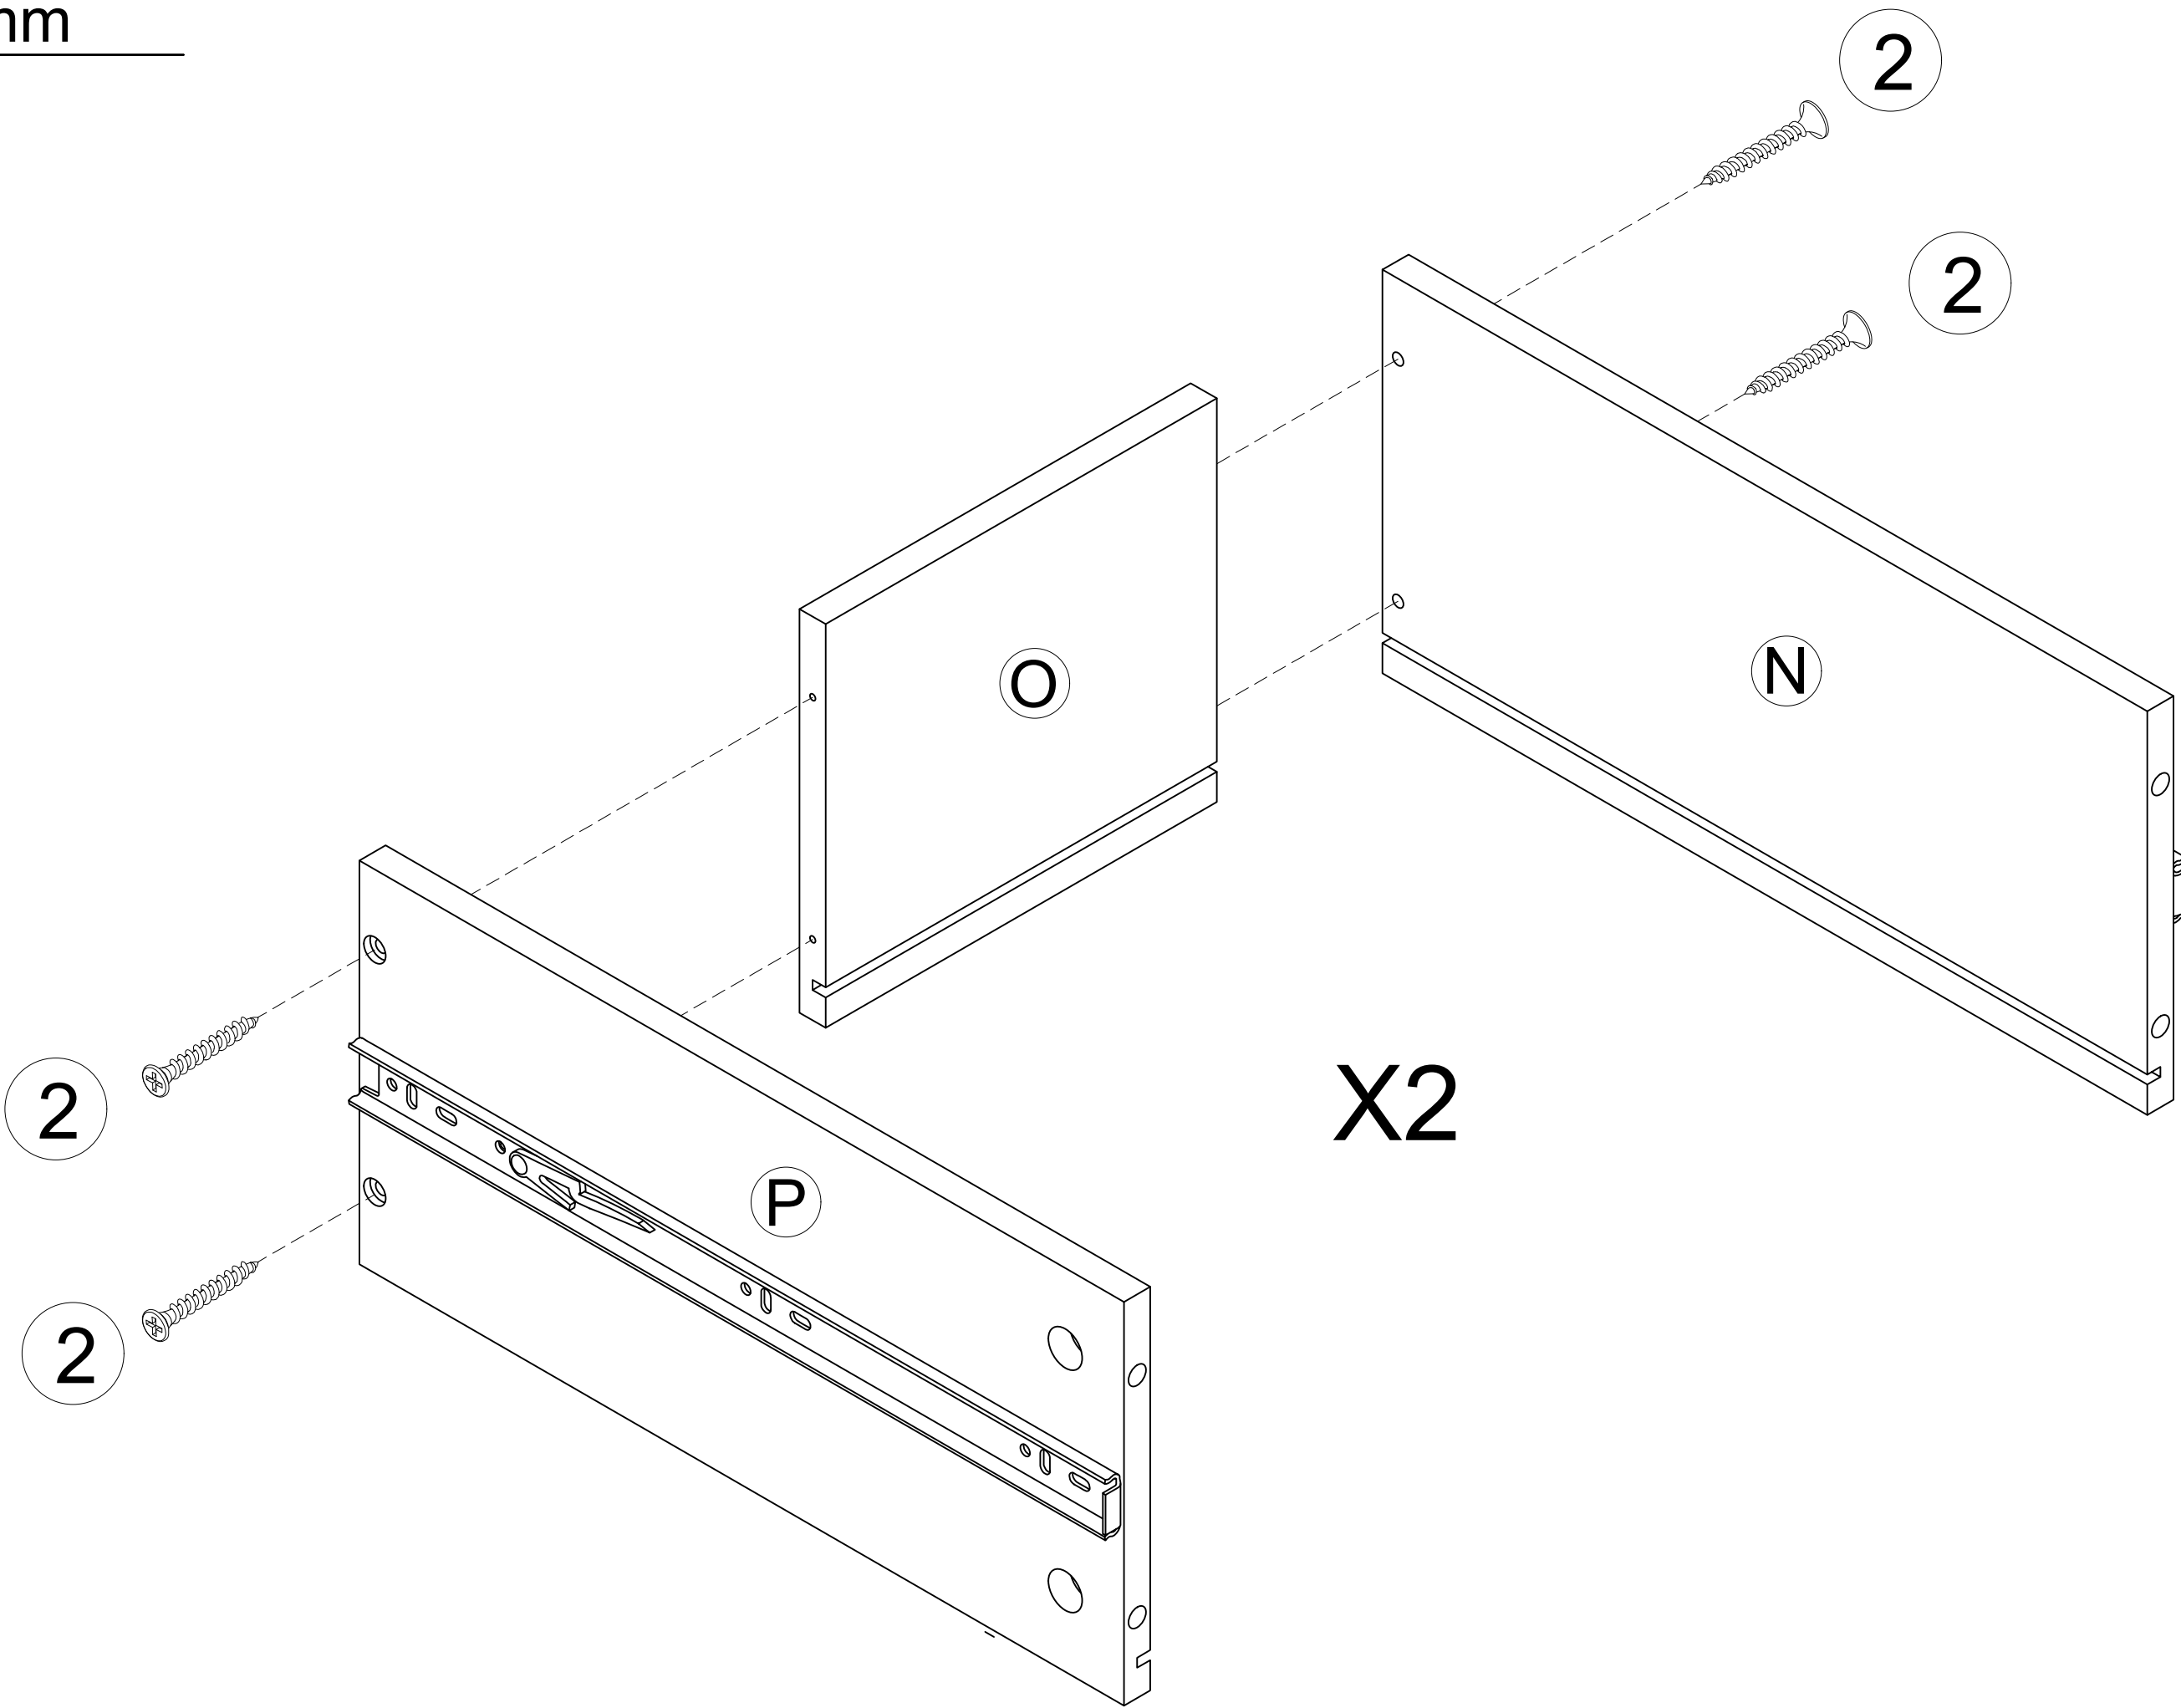


STEP 25

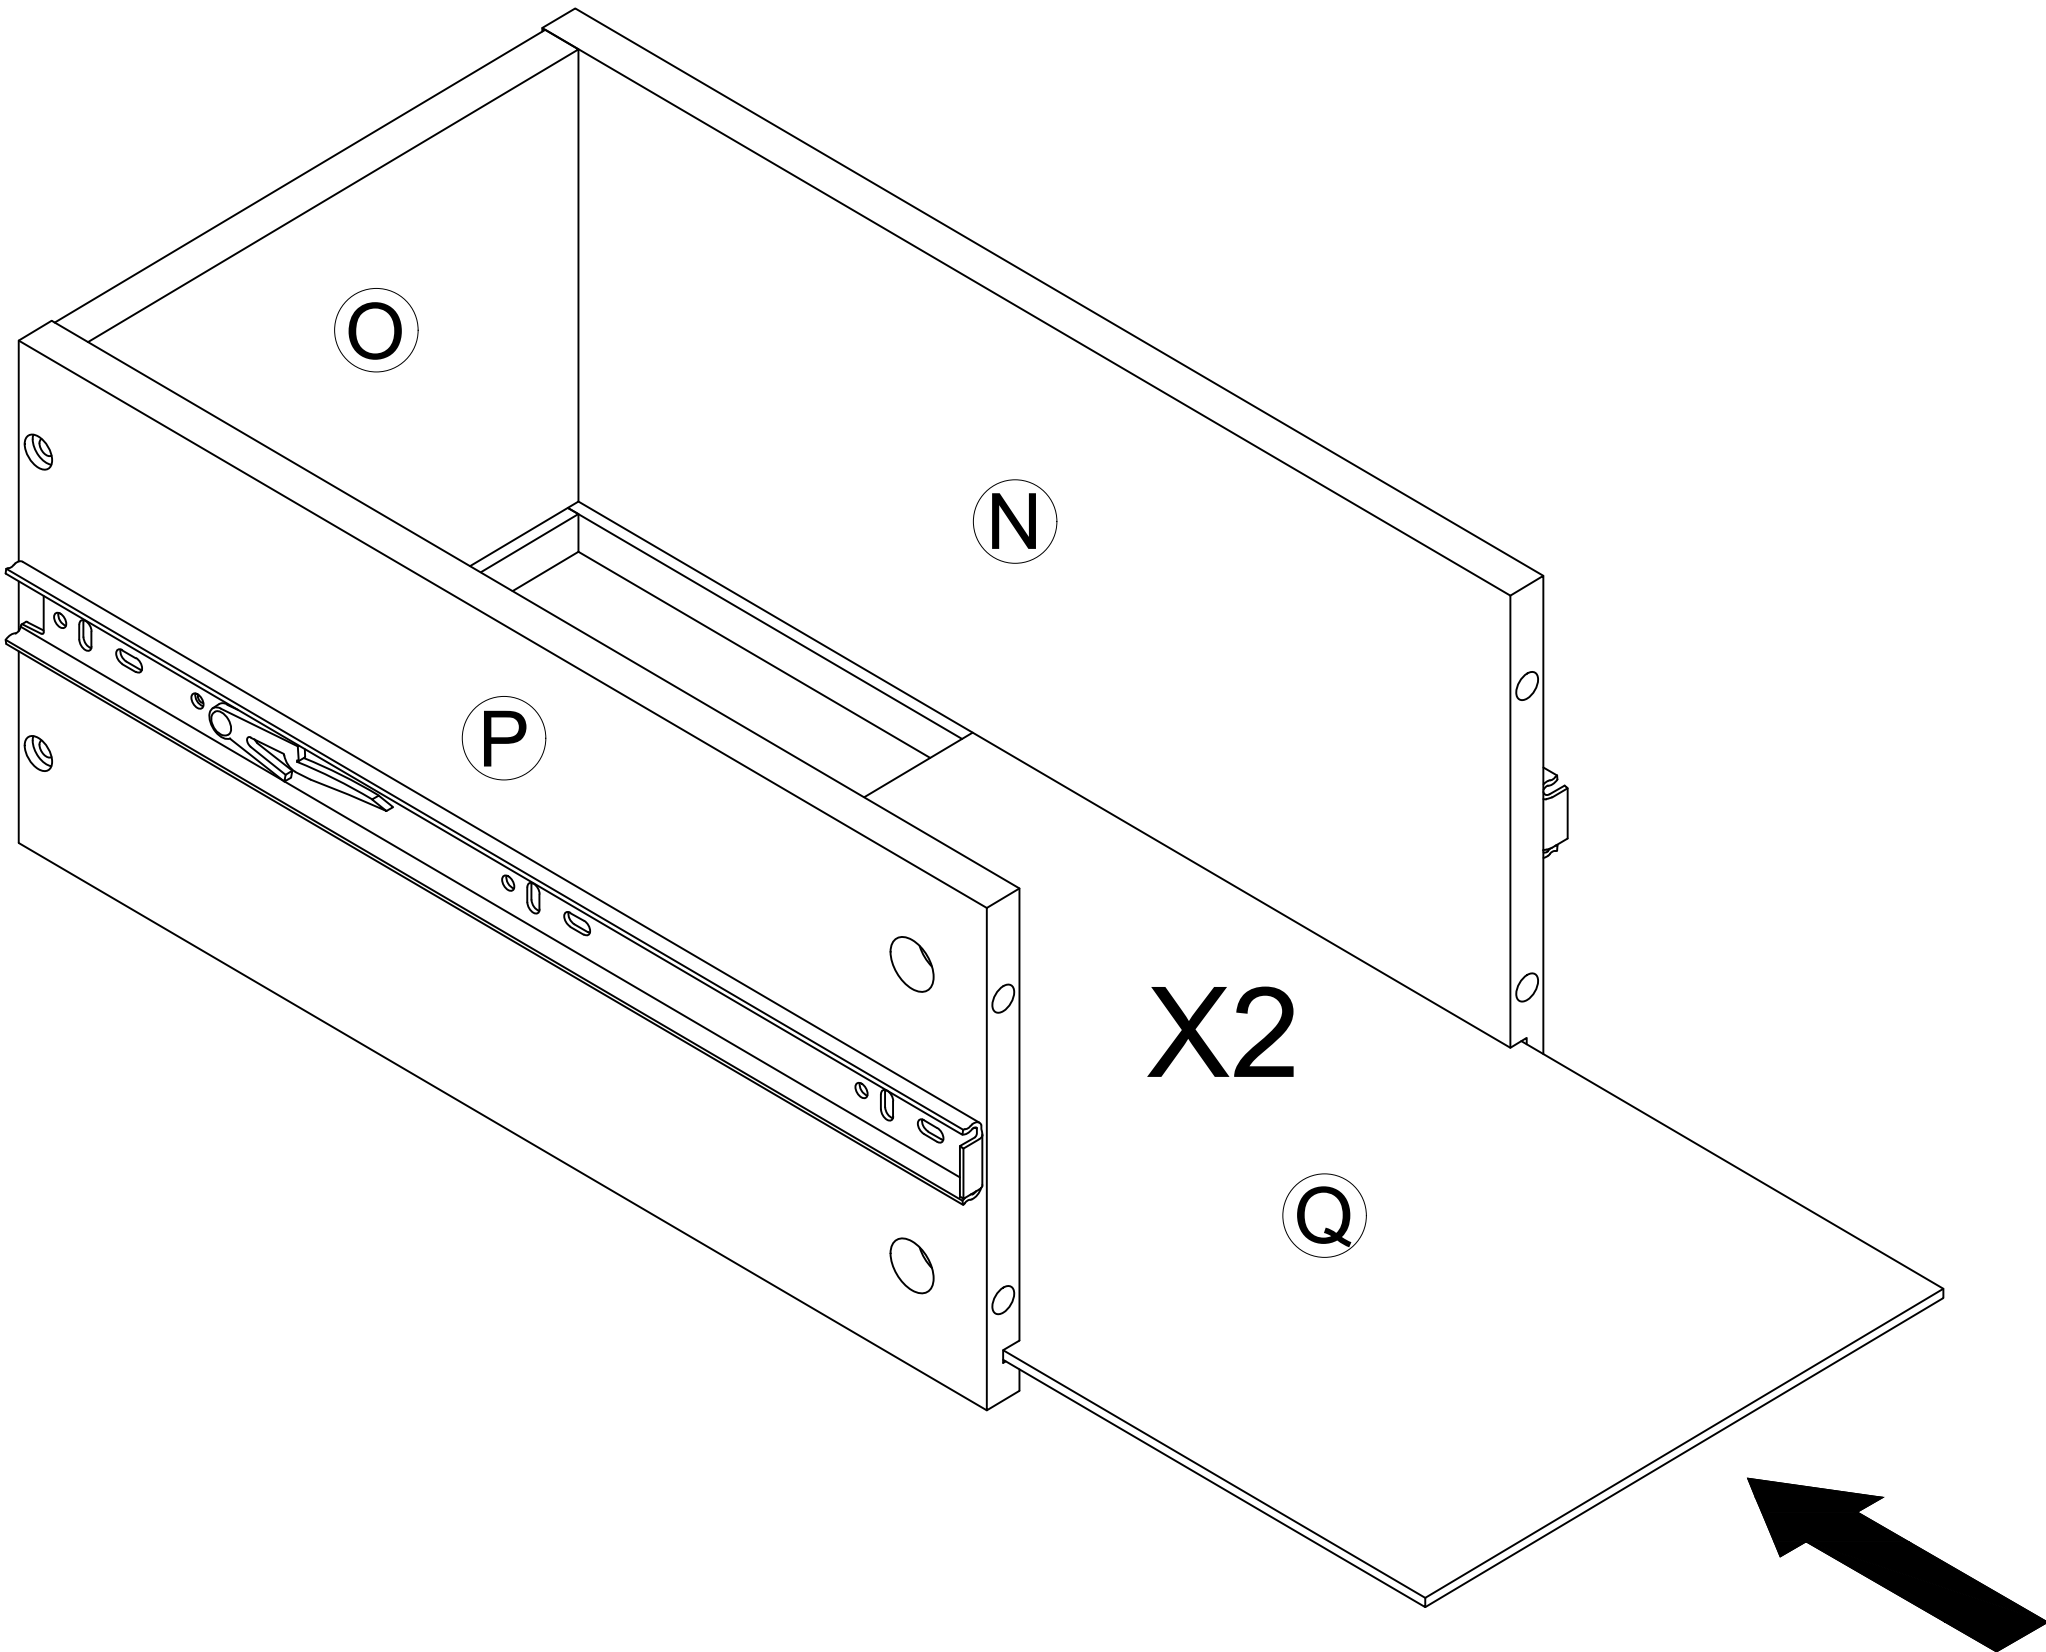


STEP 26

- 12




8pcs

Ø15x9mm
- 14




2pcs
- 13




2pcs

5/32"x18mm

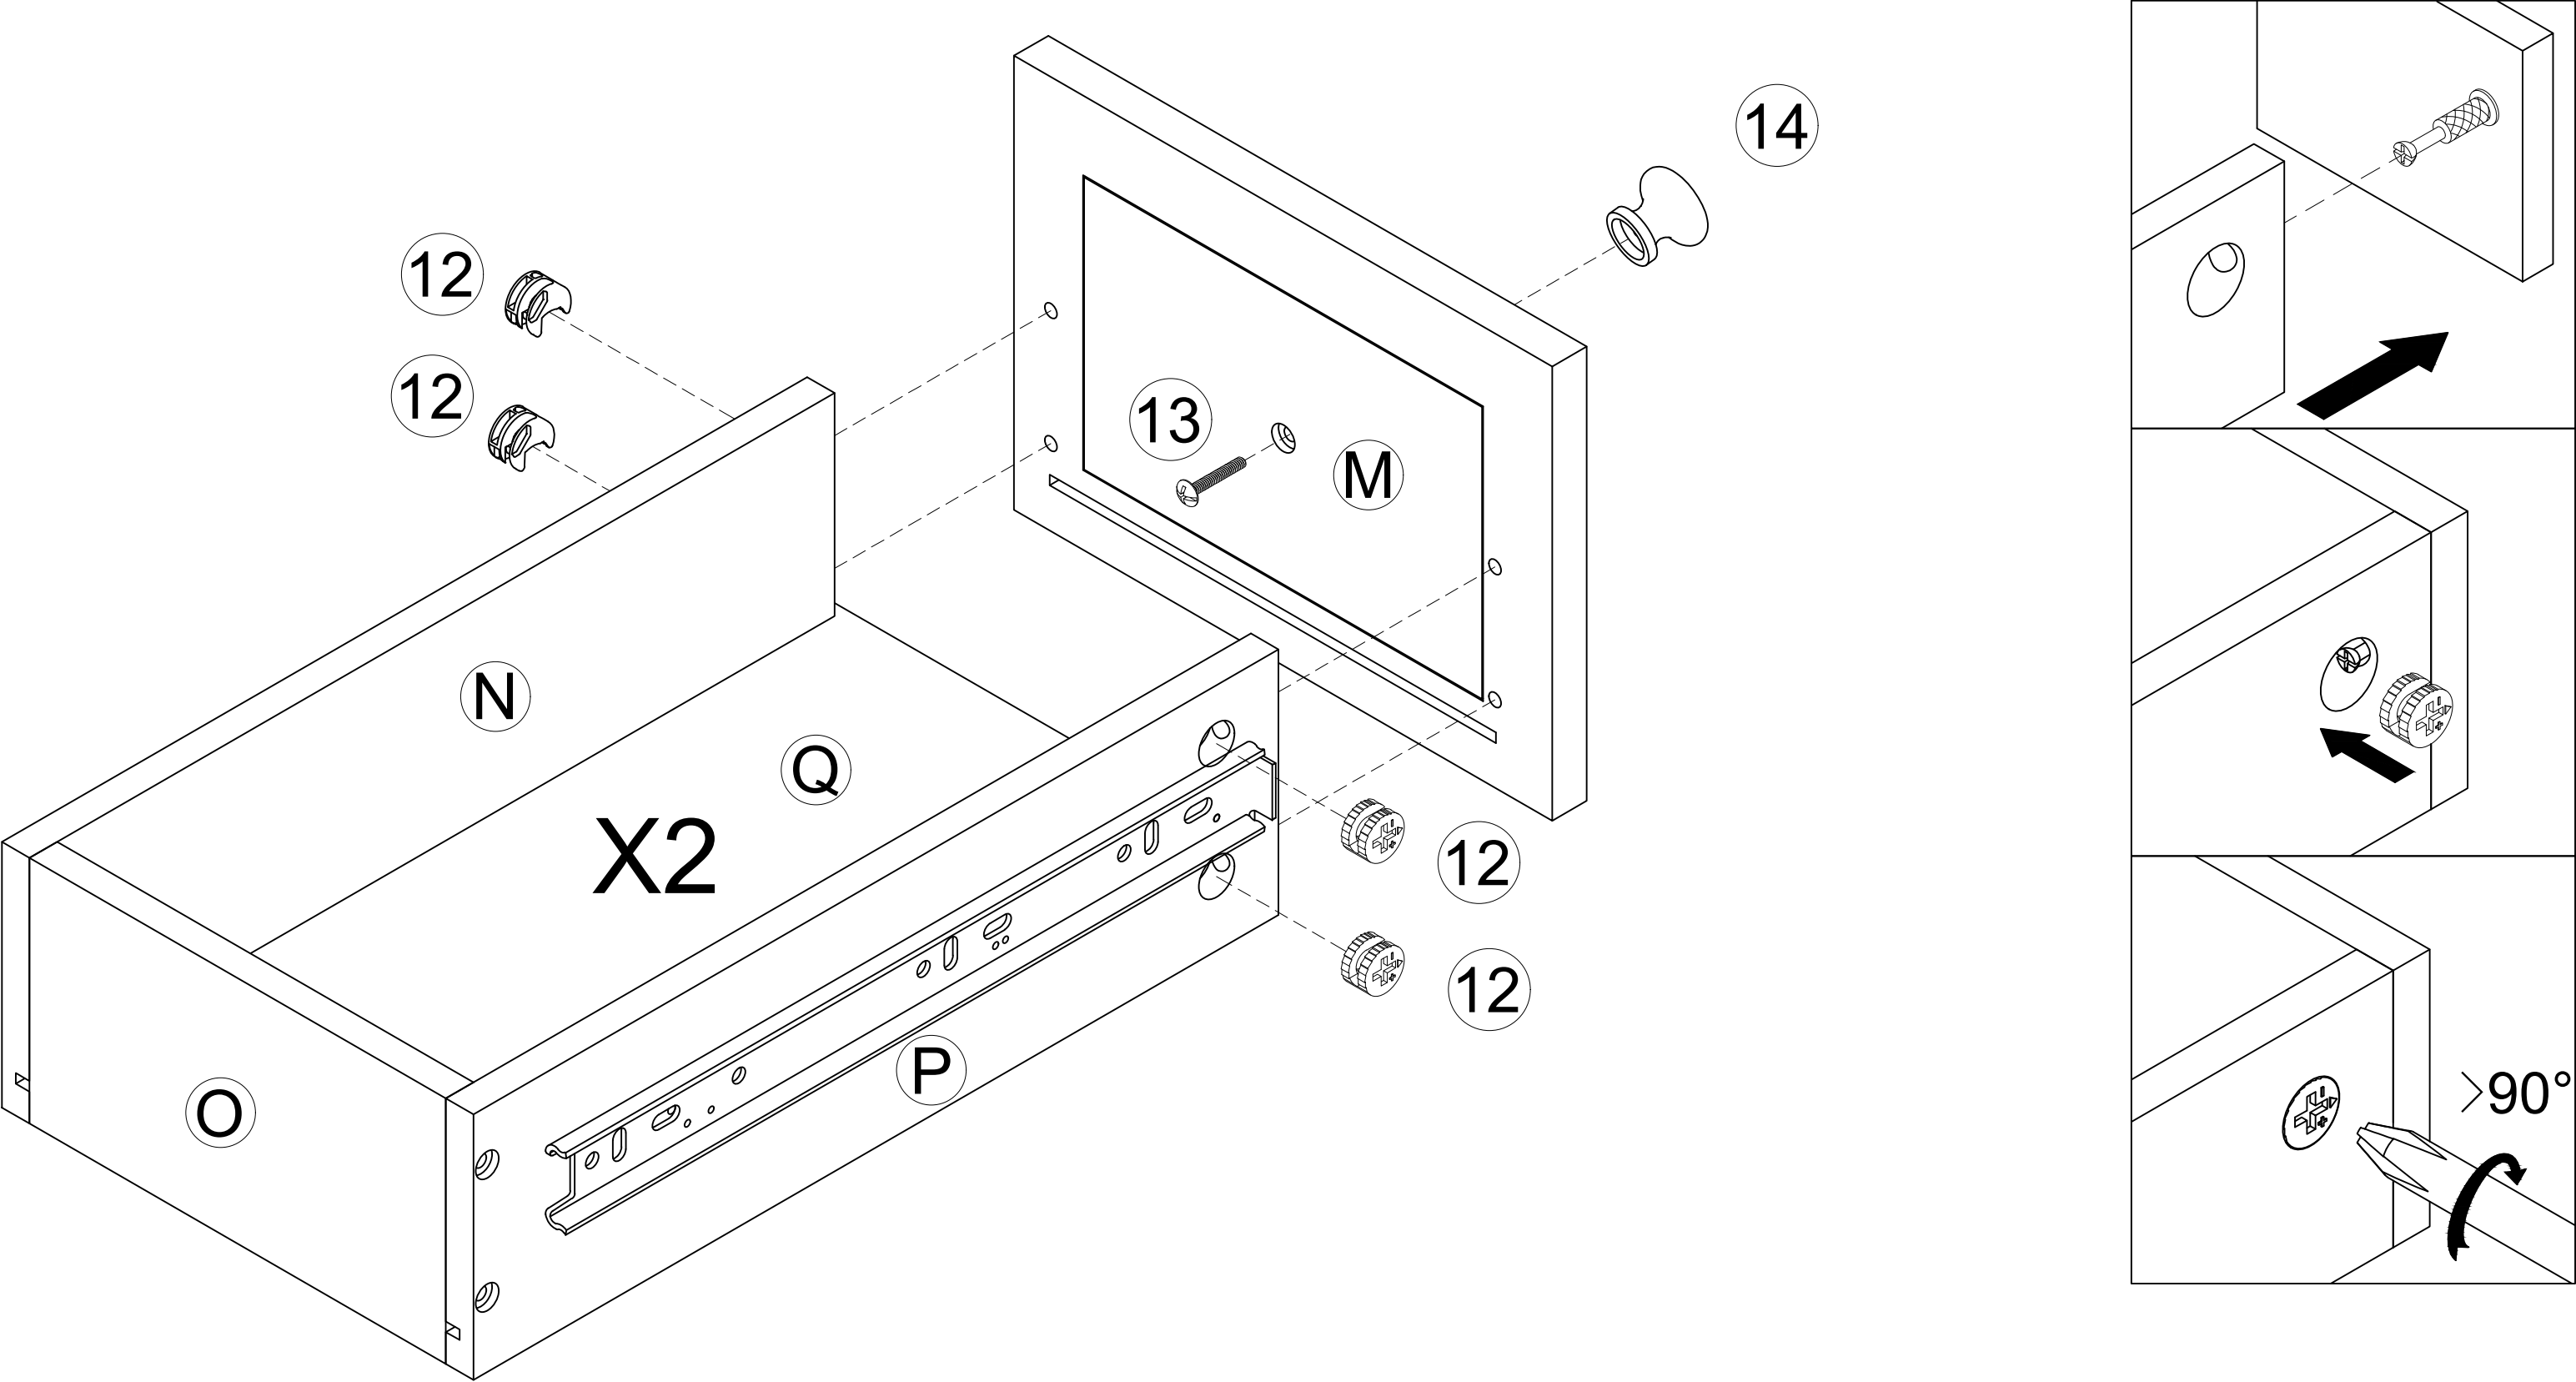


STEP 27

- 4




2pcs

Ø8x30mm
- 9b




2pcs

12"x45mm
- 10







6pcs

Ø3x10mm

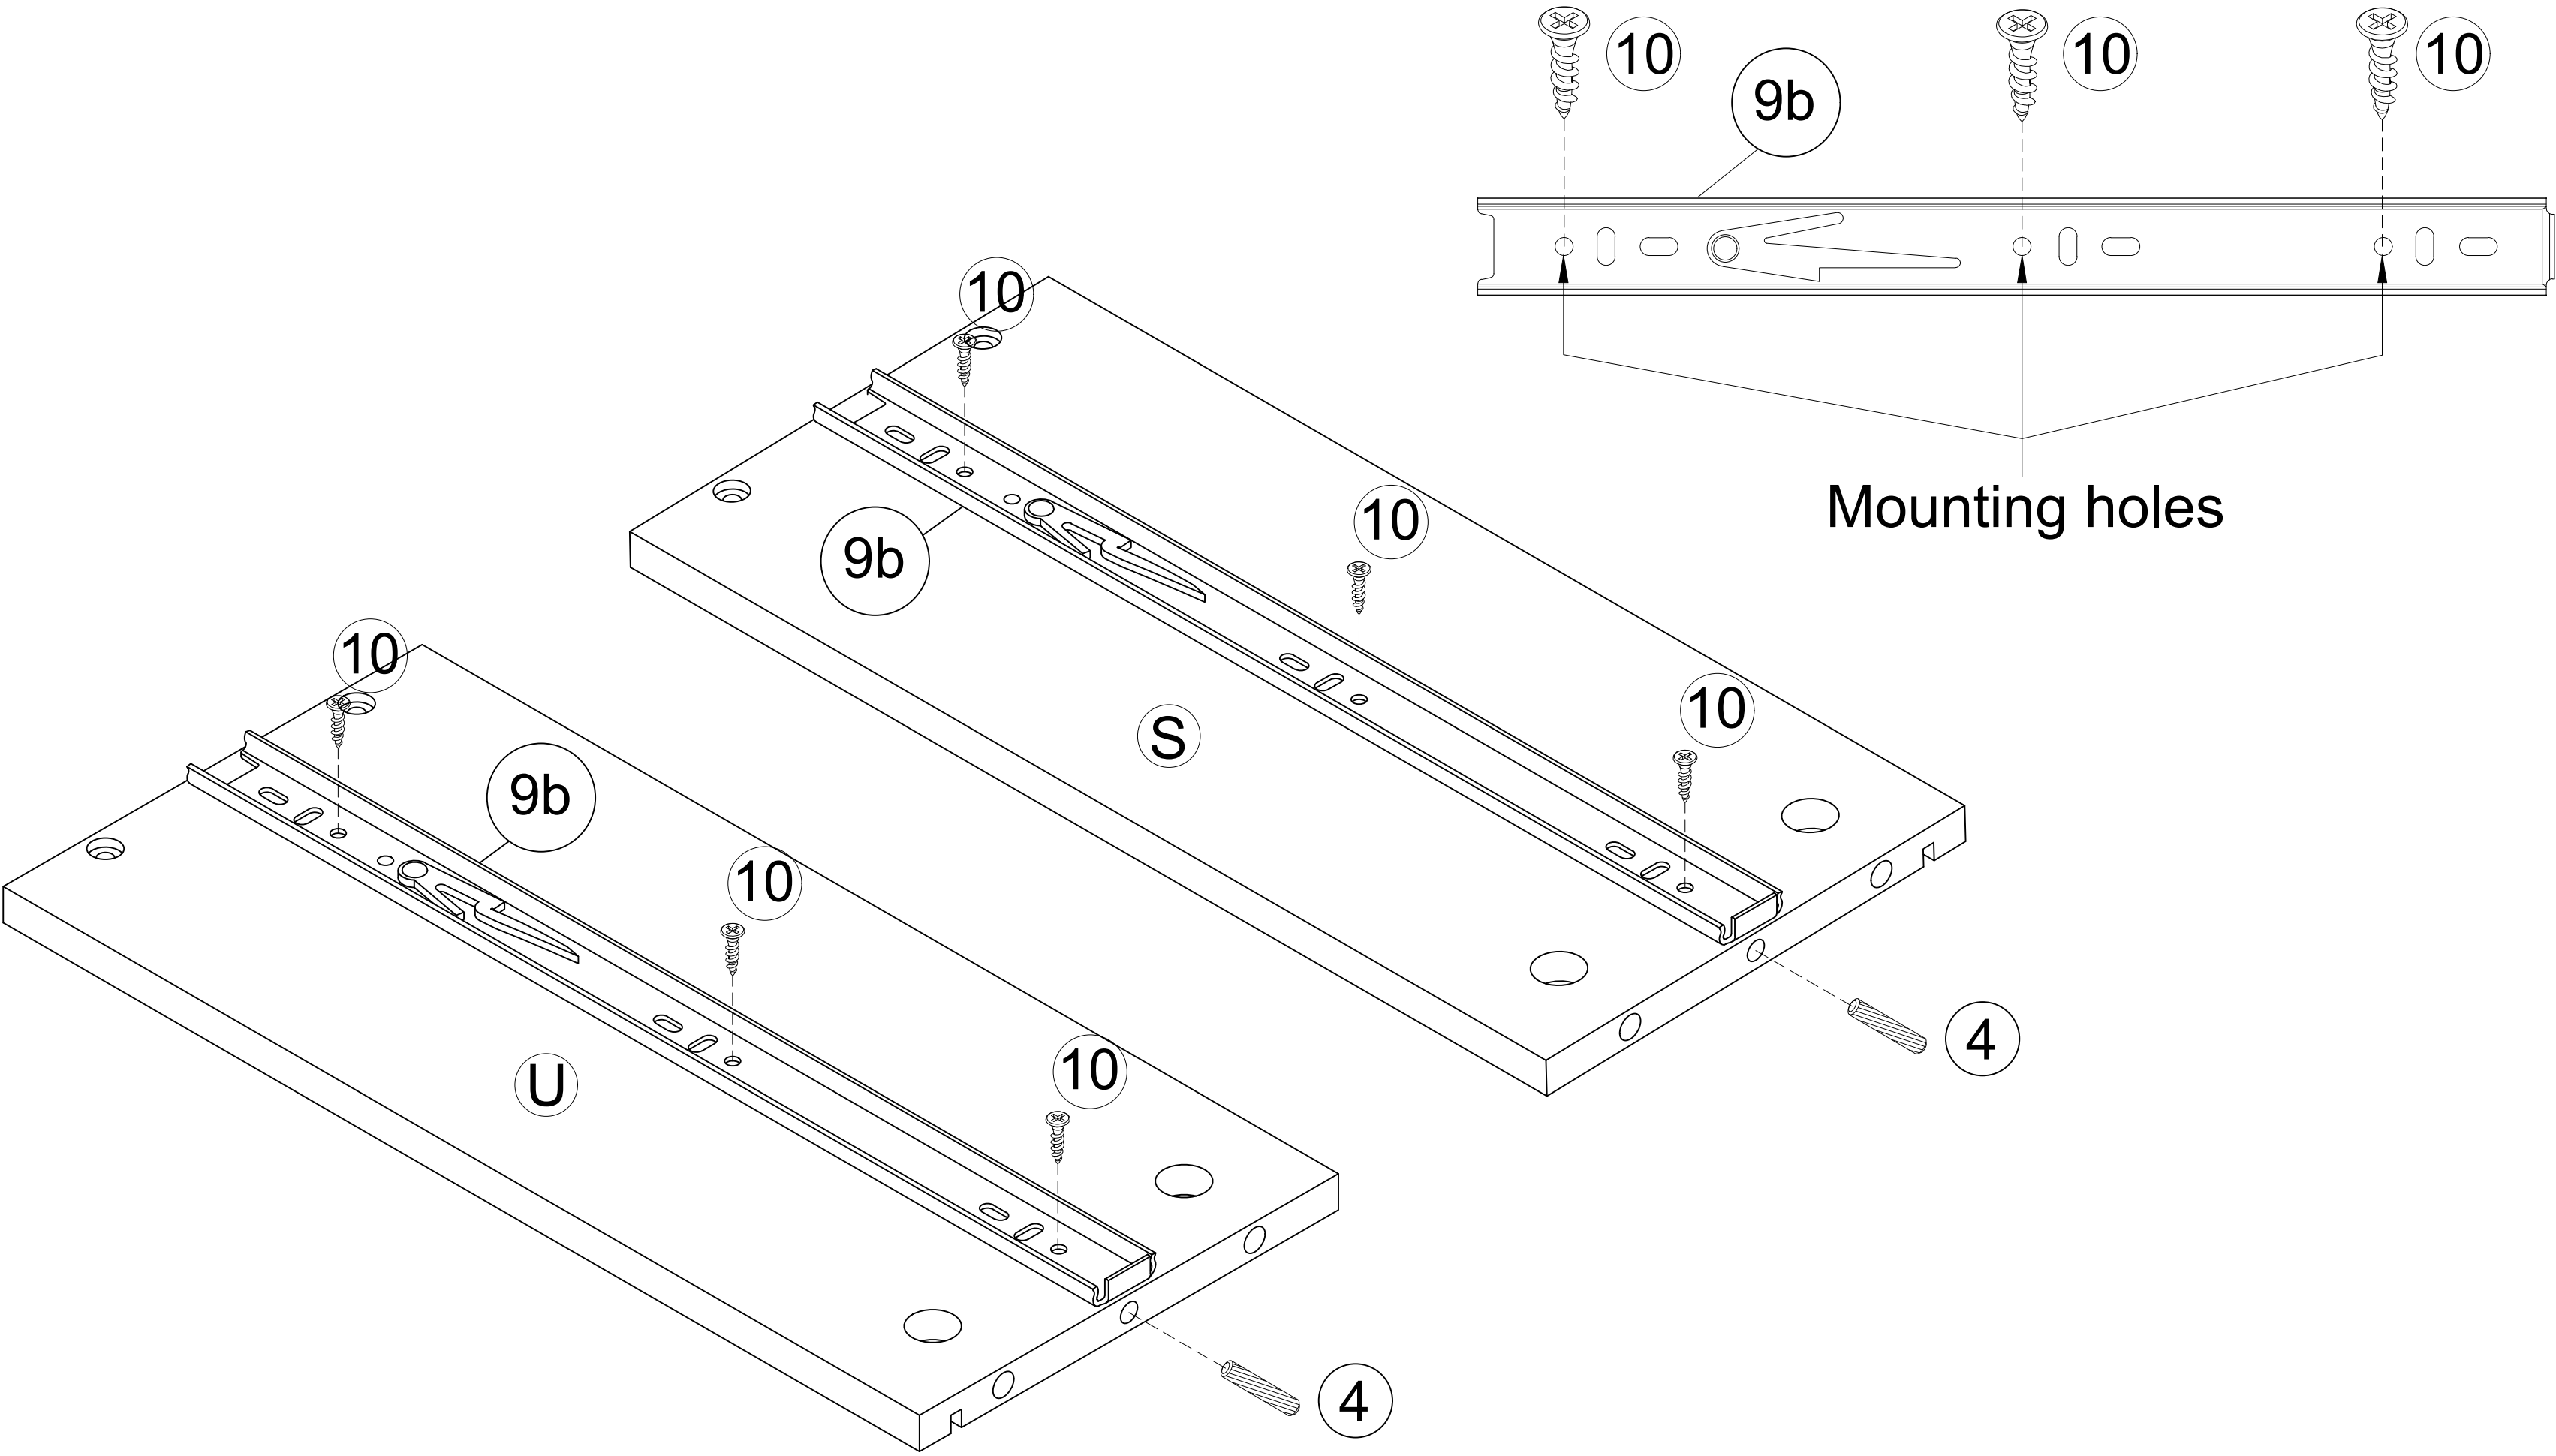



STEP 28

11  4pcs
Ø6x33mm

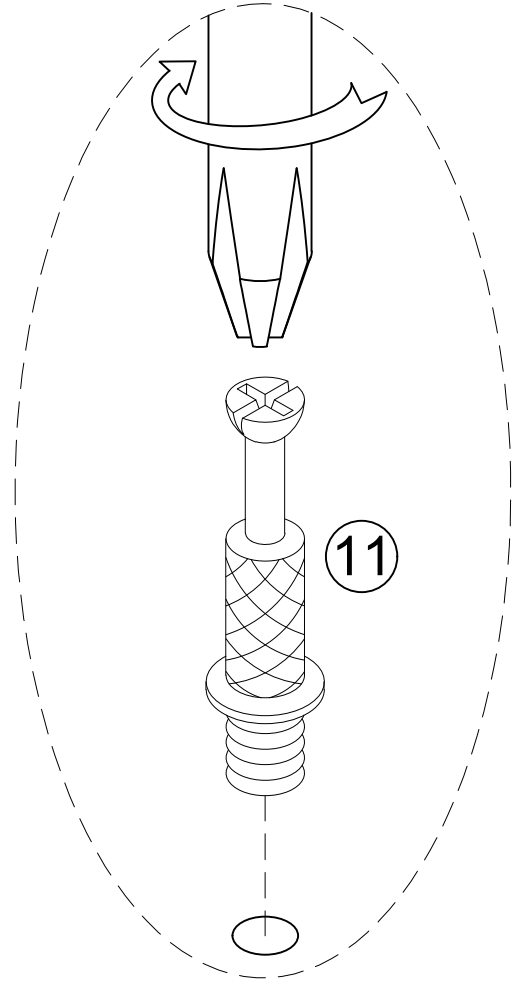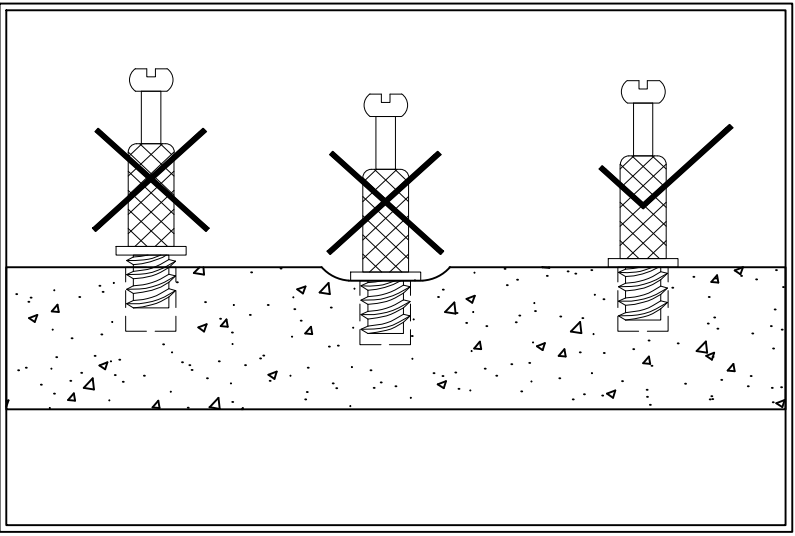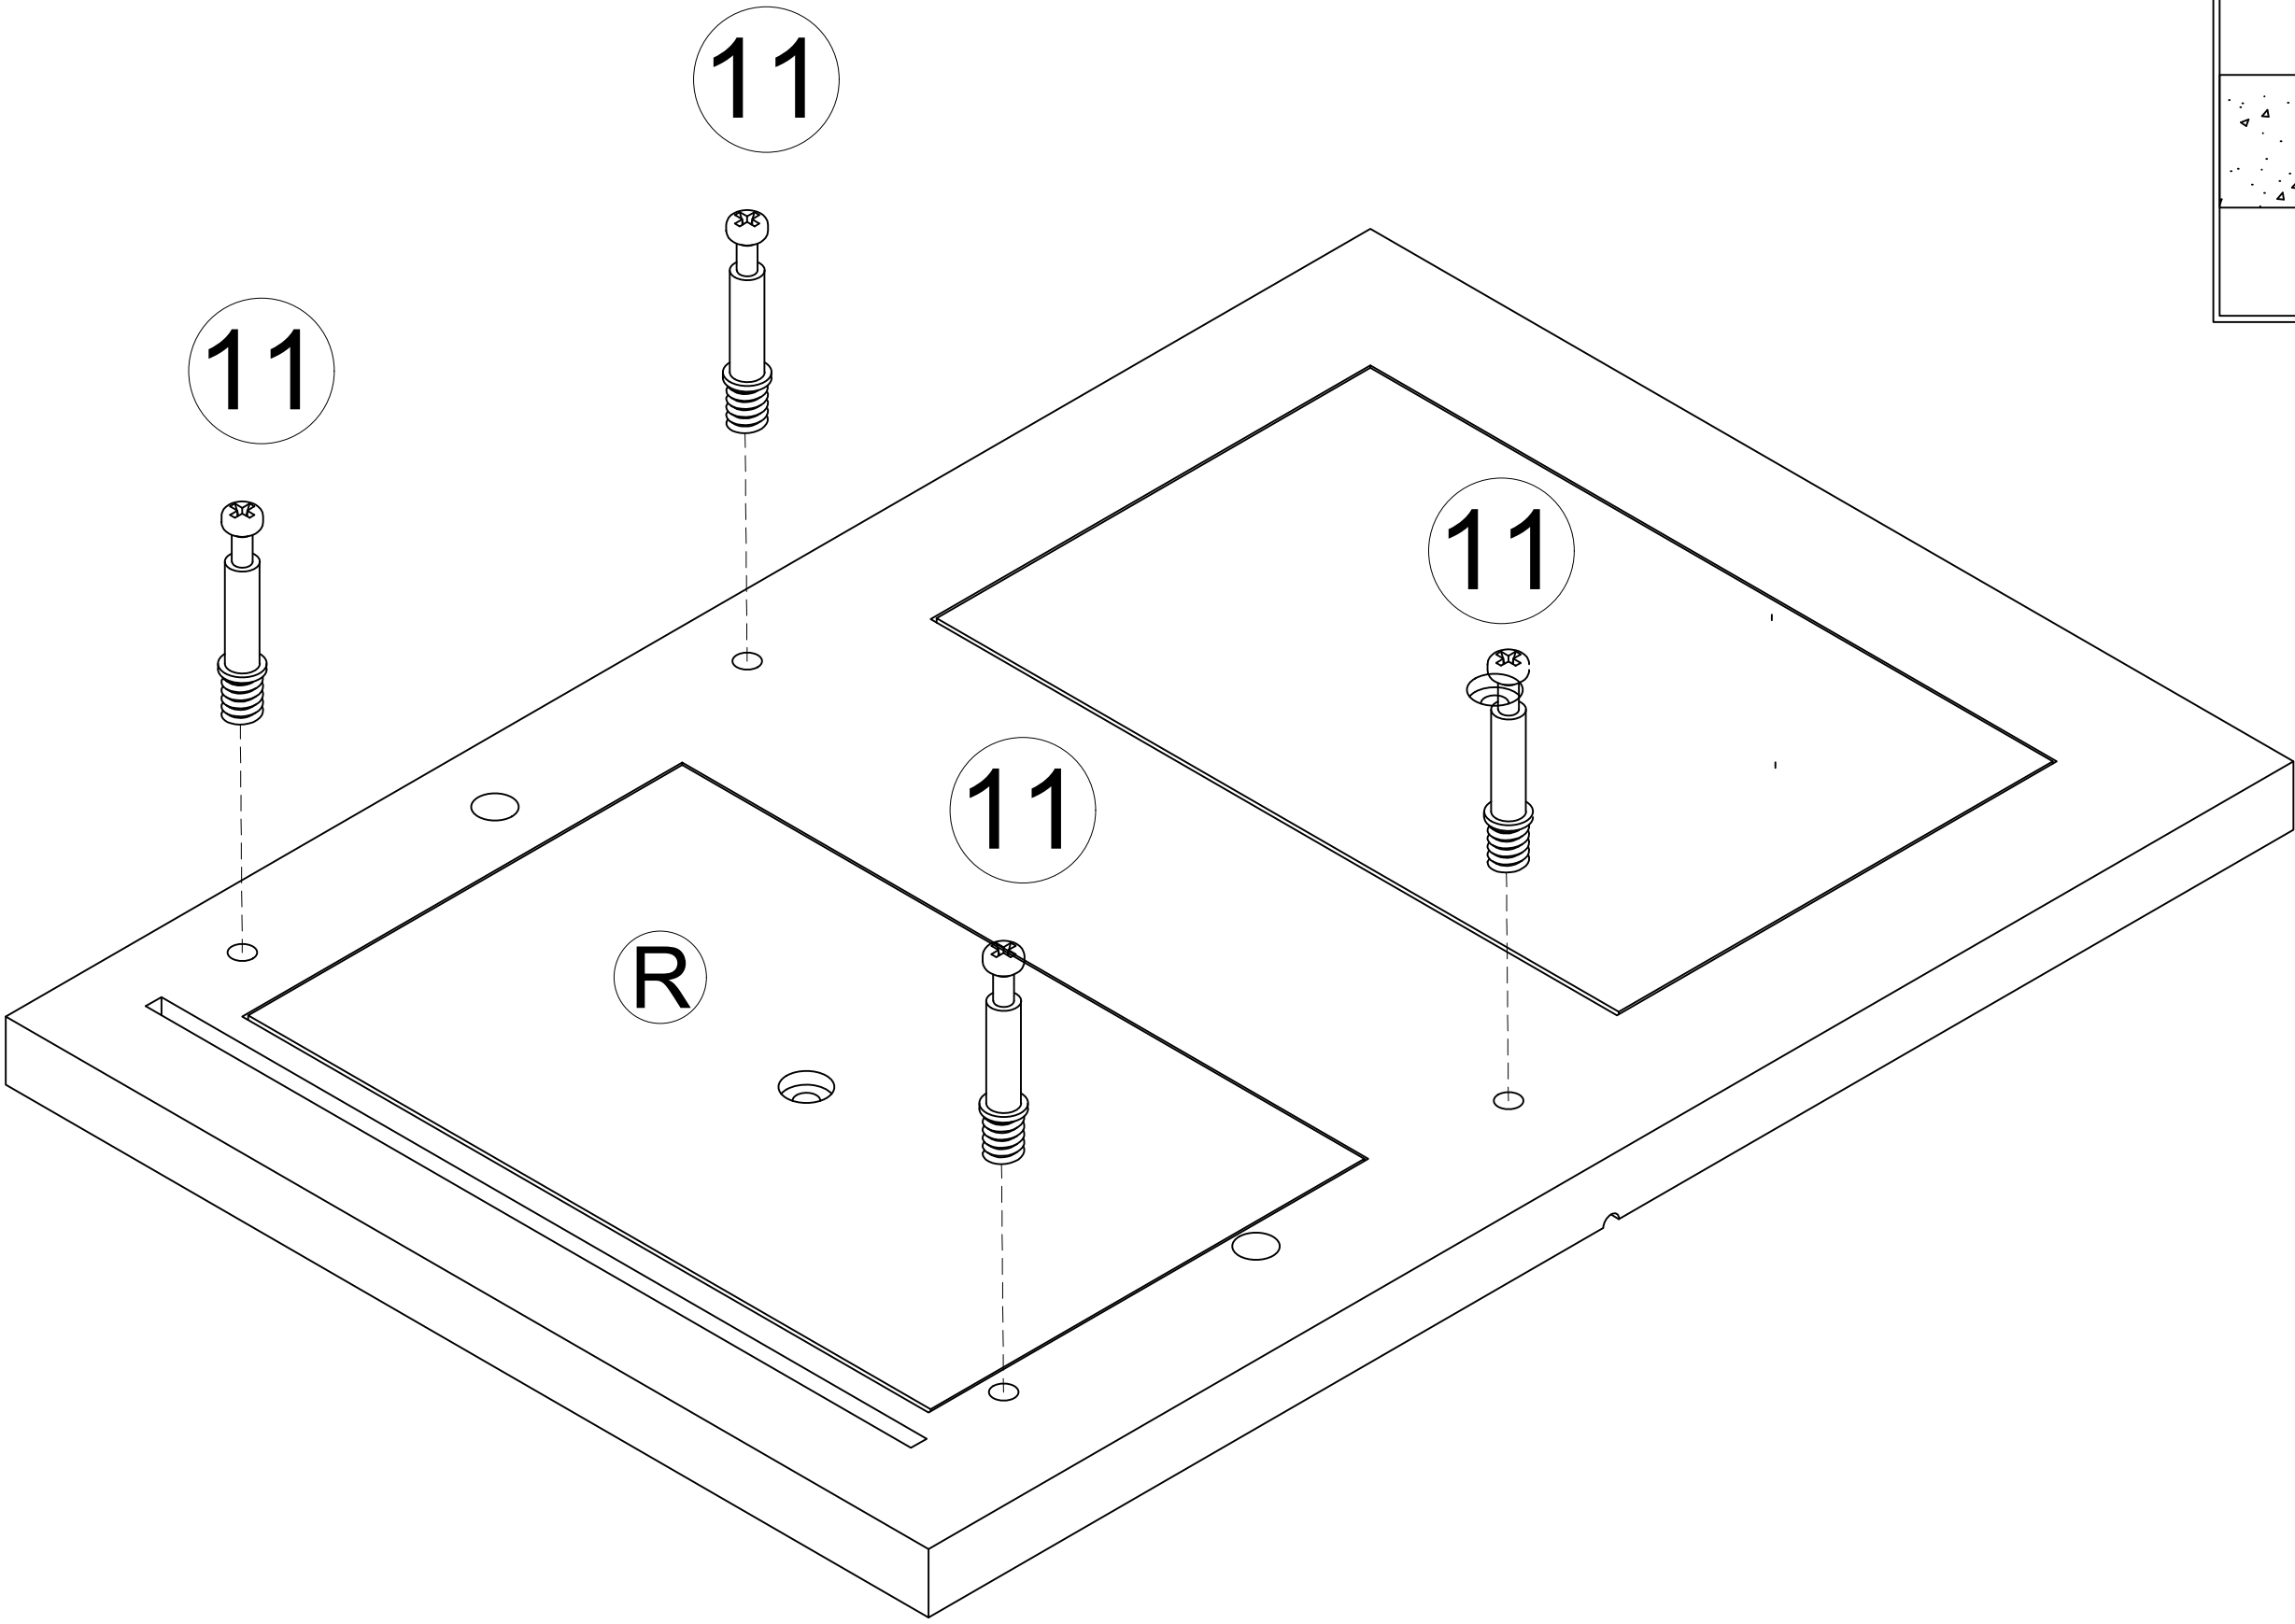


STEP 29




2  4pcs
Ø4x25mm


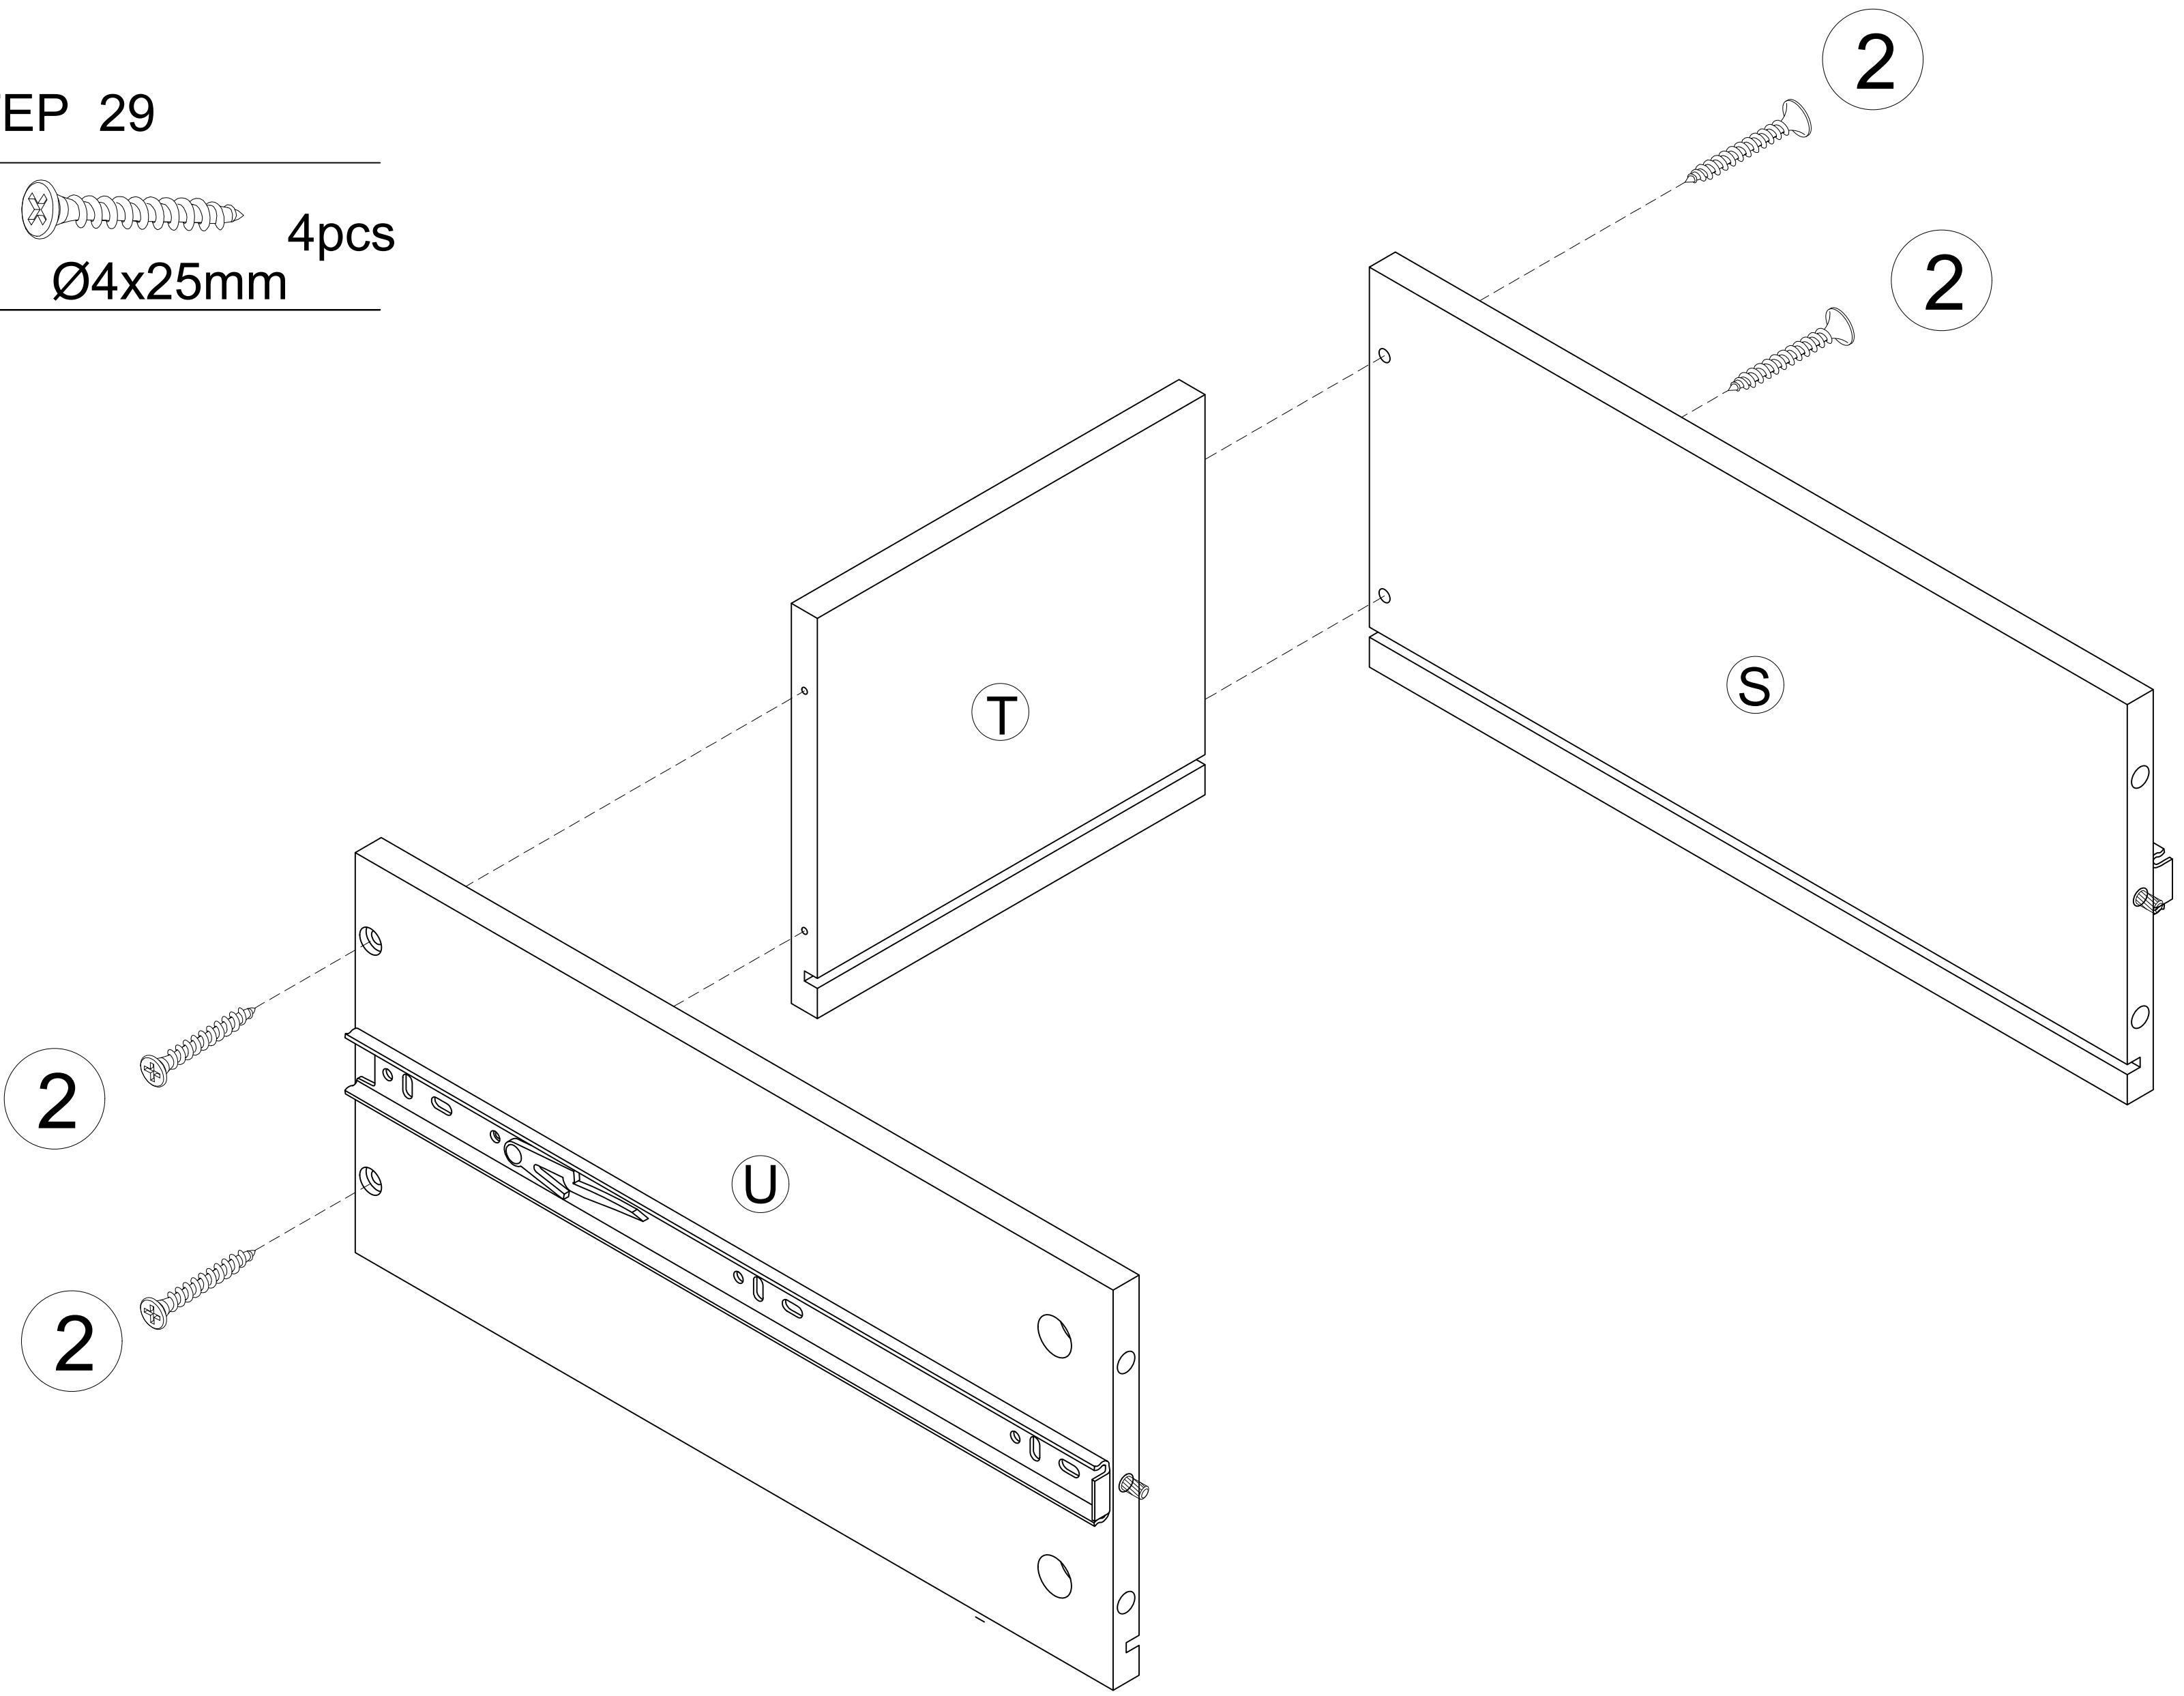


STEP 30

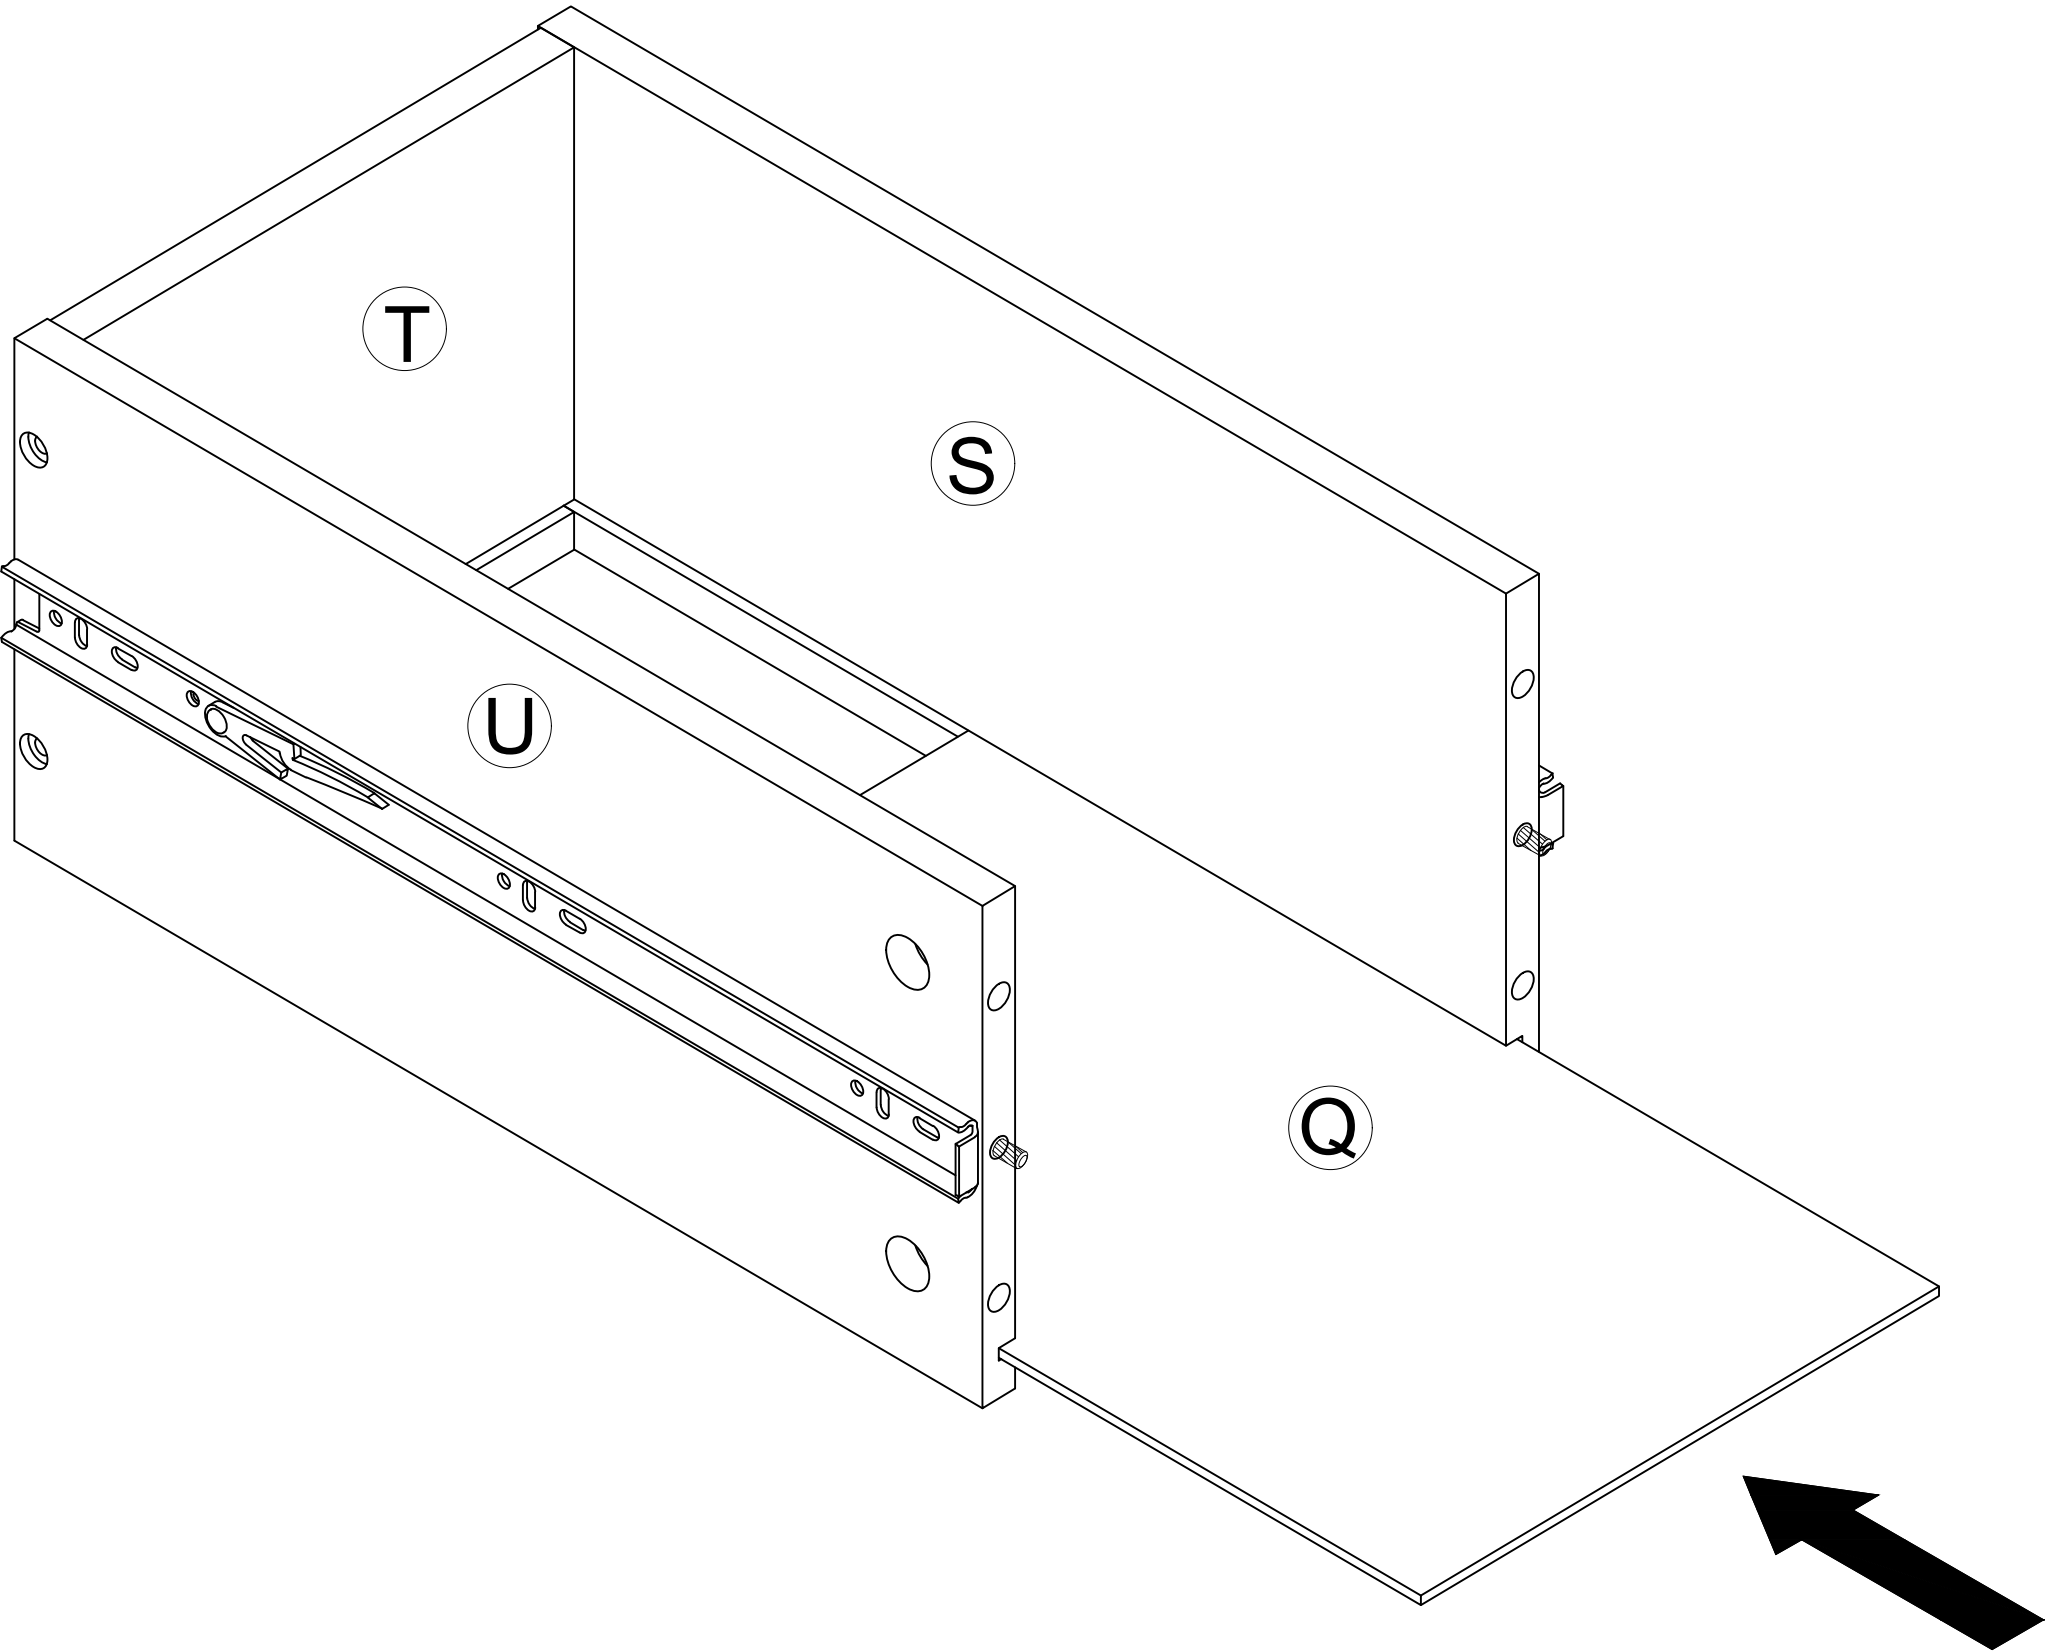


STEP 31

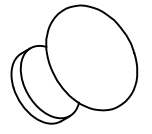- | | | | | | | | | |
|---------|---|------|----|---|------|------------|---|------|
| 12 |  | 4pcs | 14 |  | 2pcs | 13 |  | 2pcs |
| Ø15x9mm | | | | | | 5/32"x12mm | | |

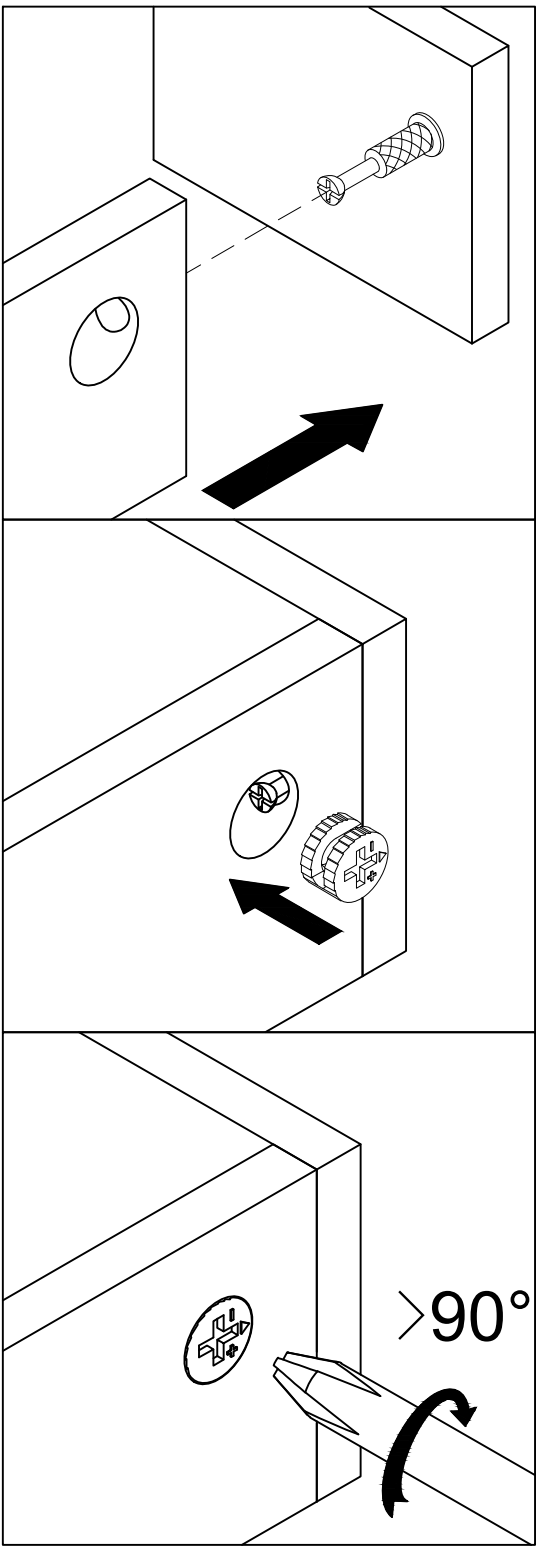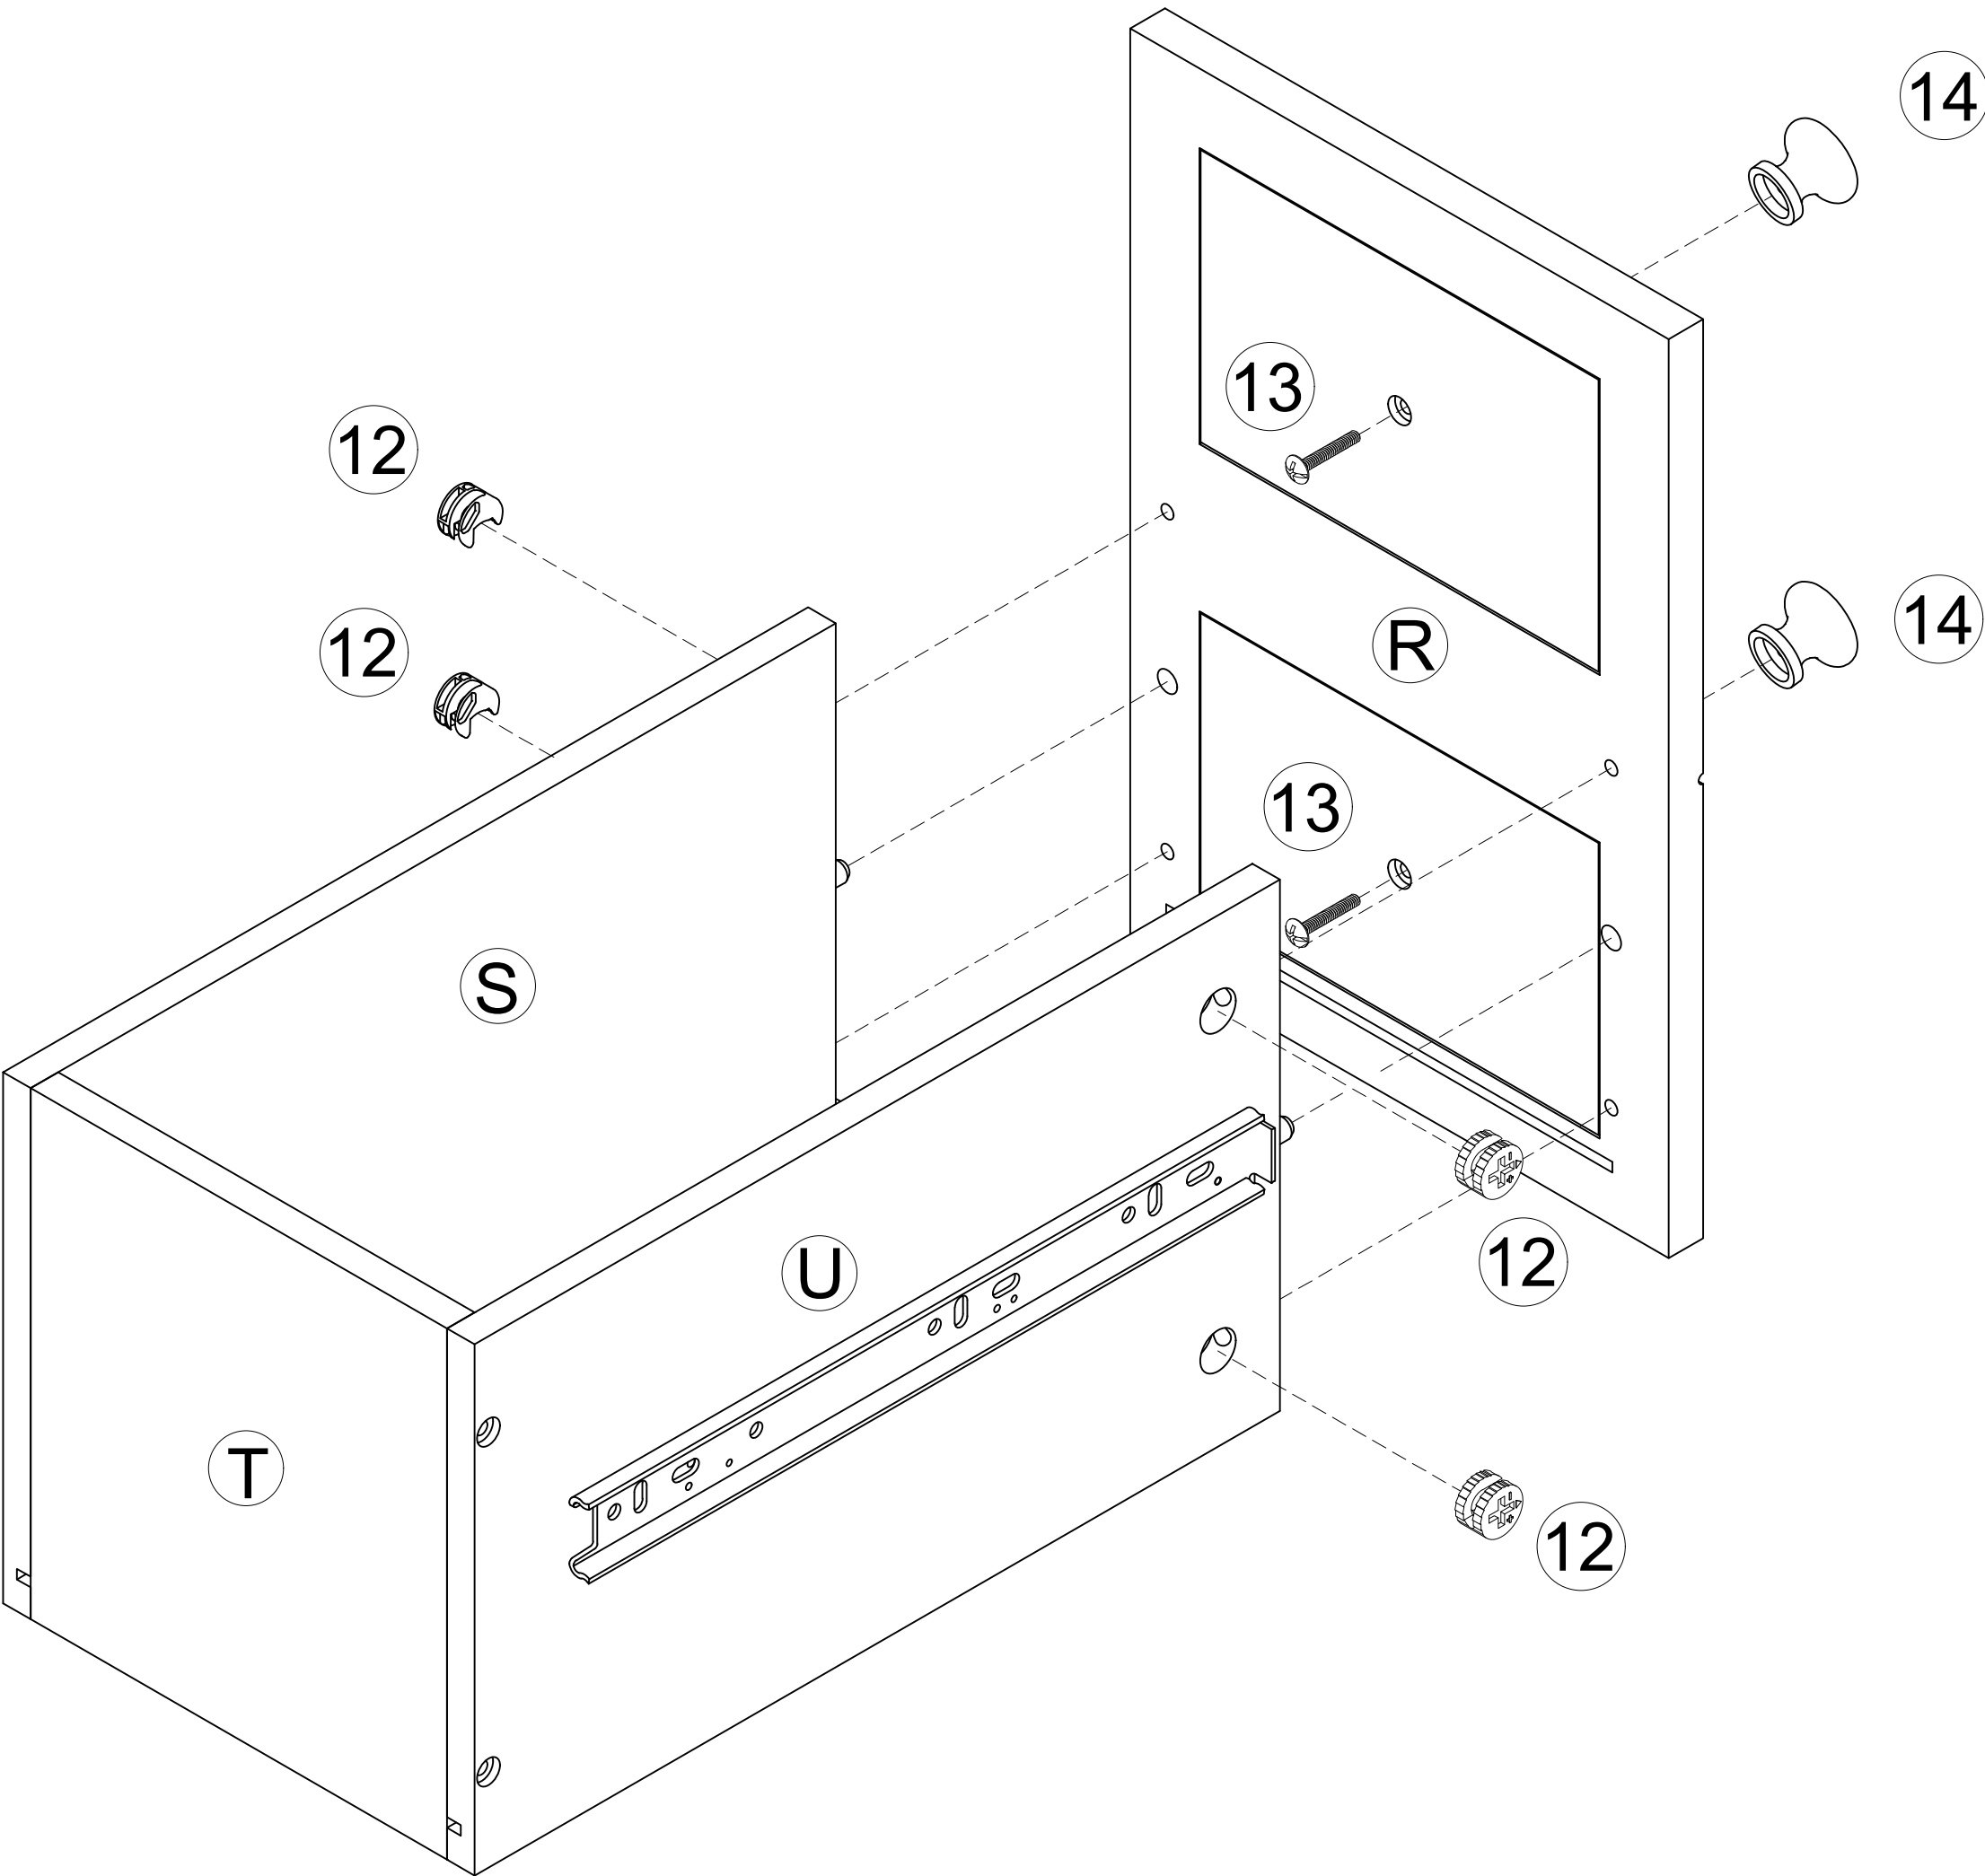


STEP 32

9b



2pcs



10



6pcs


12"x45mm

Ø3x10mm

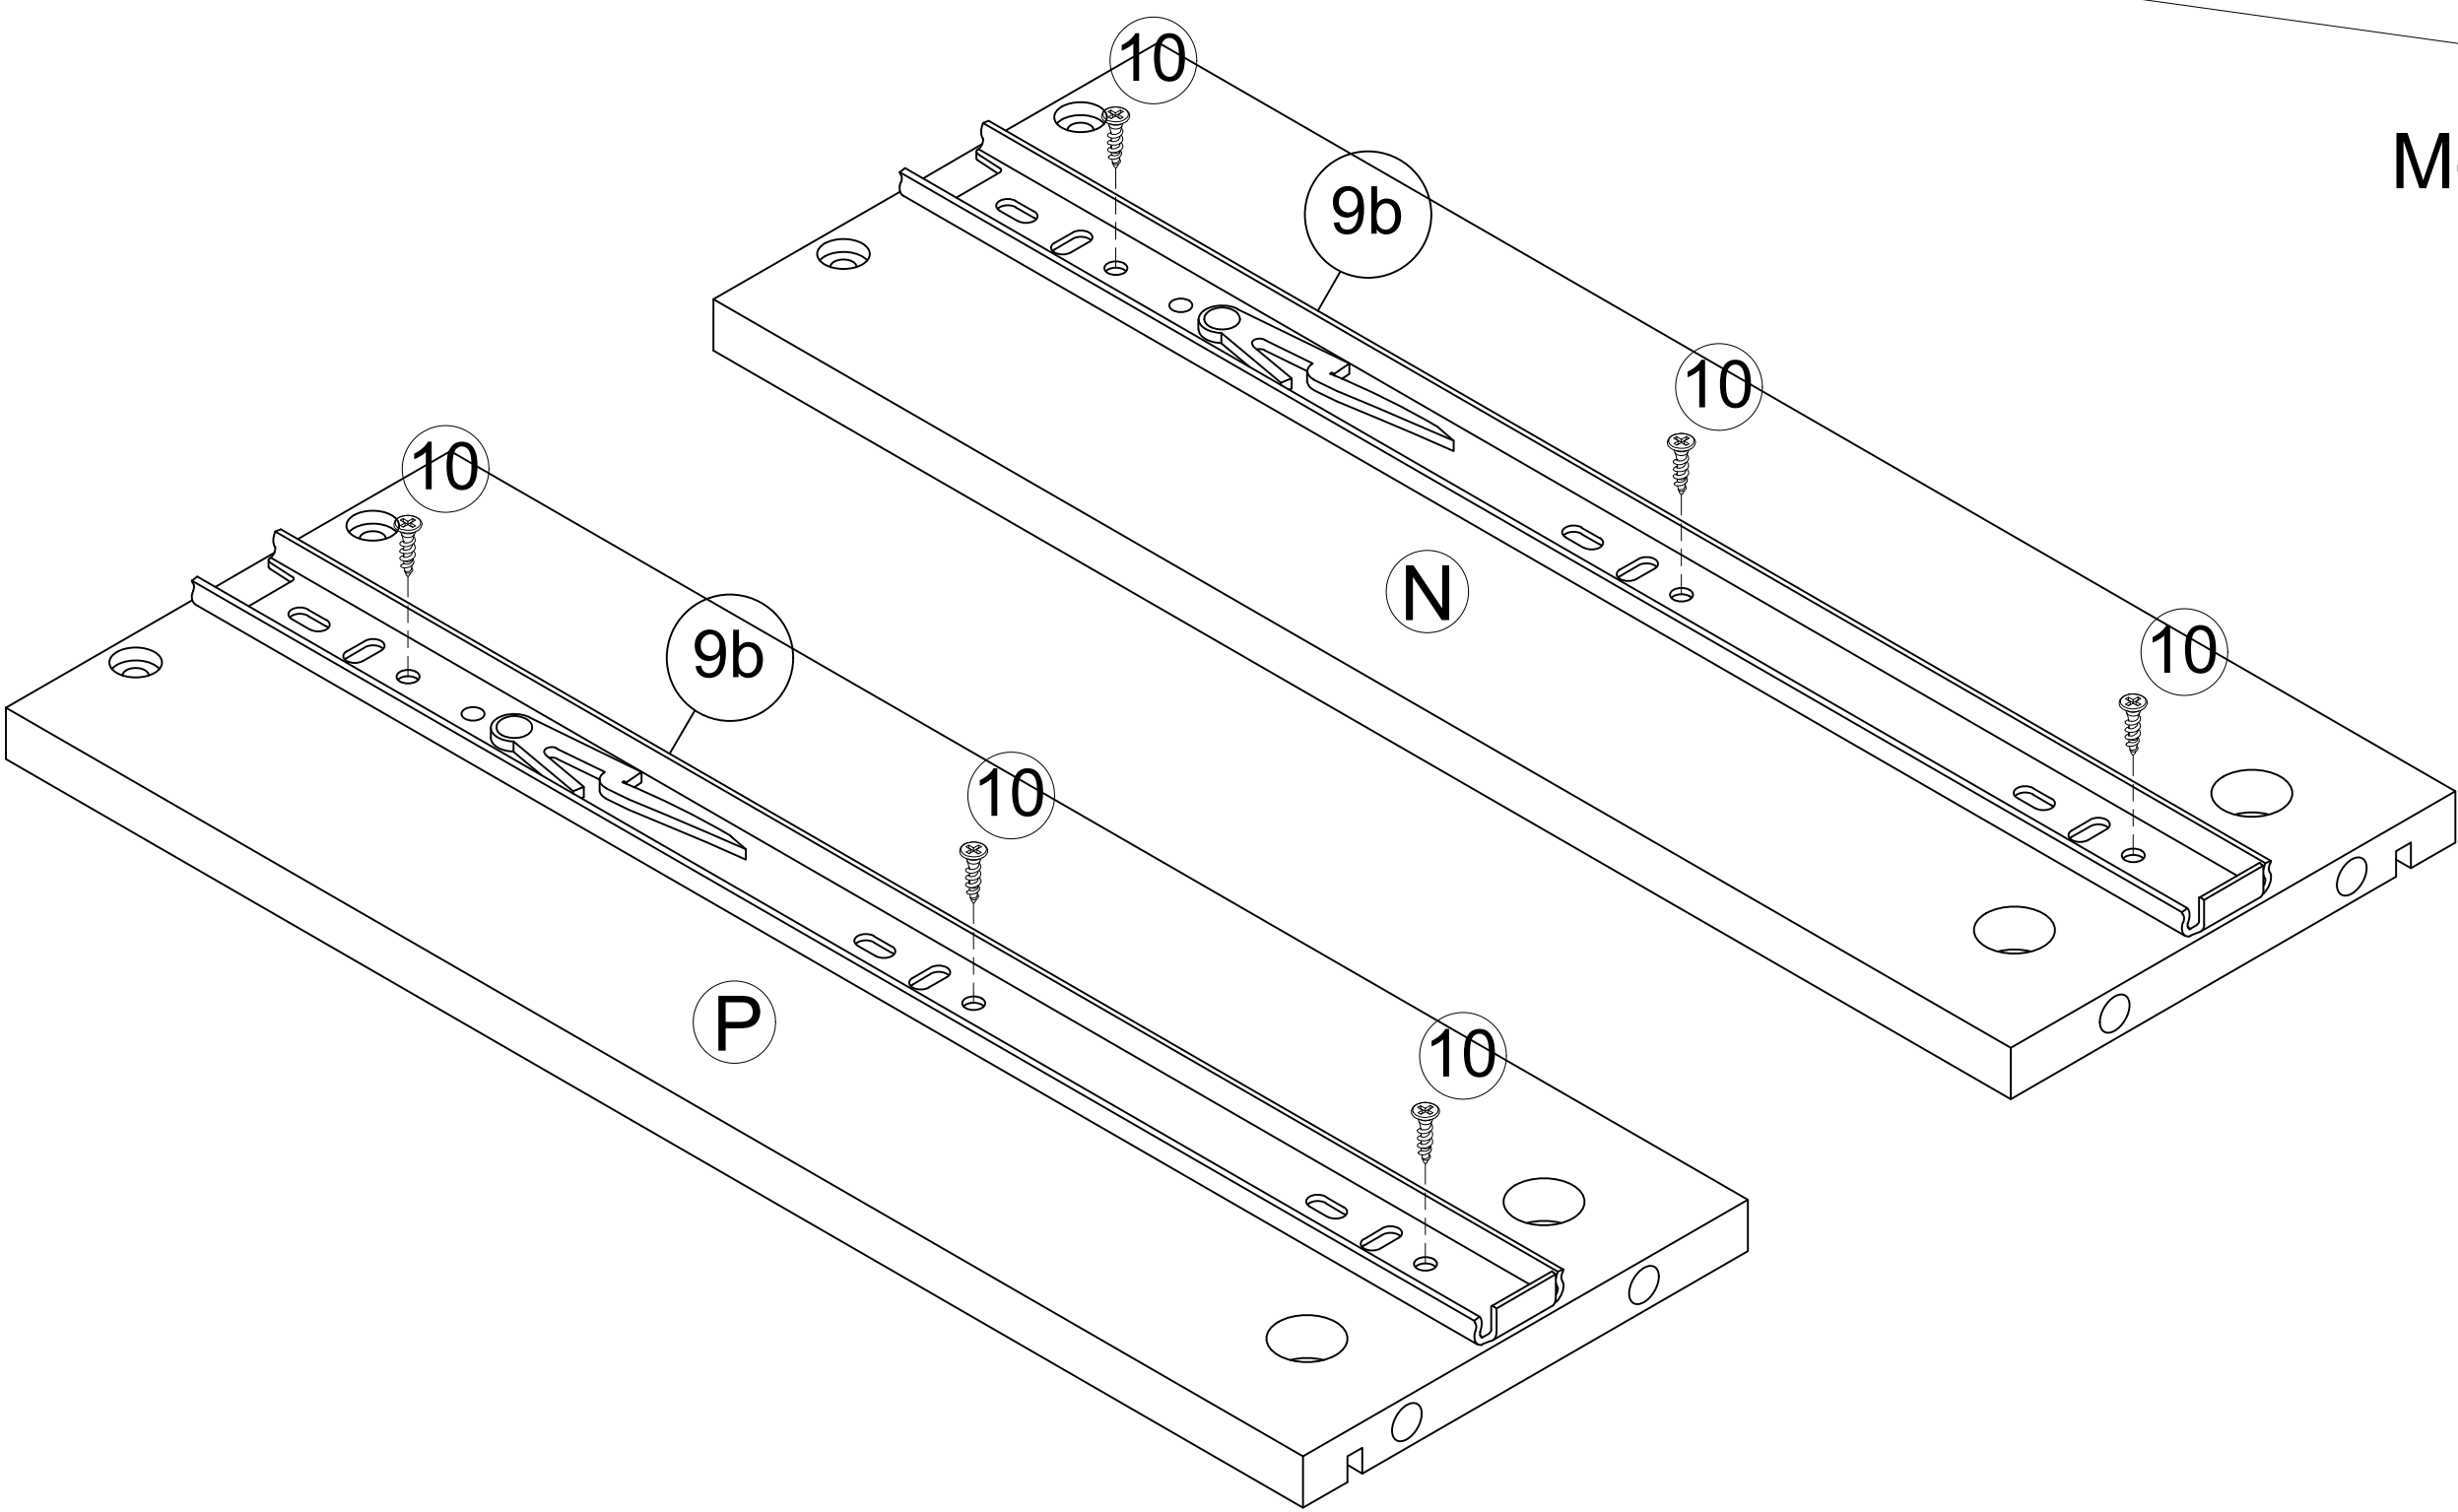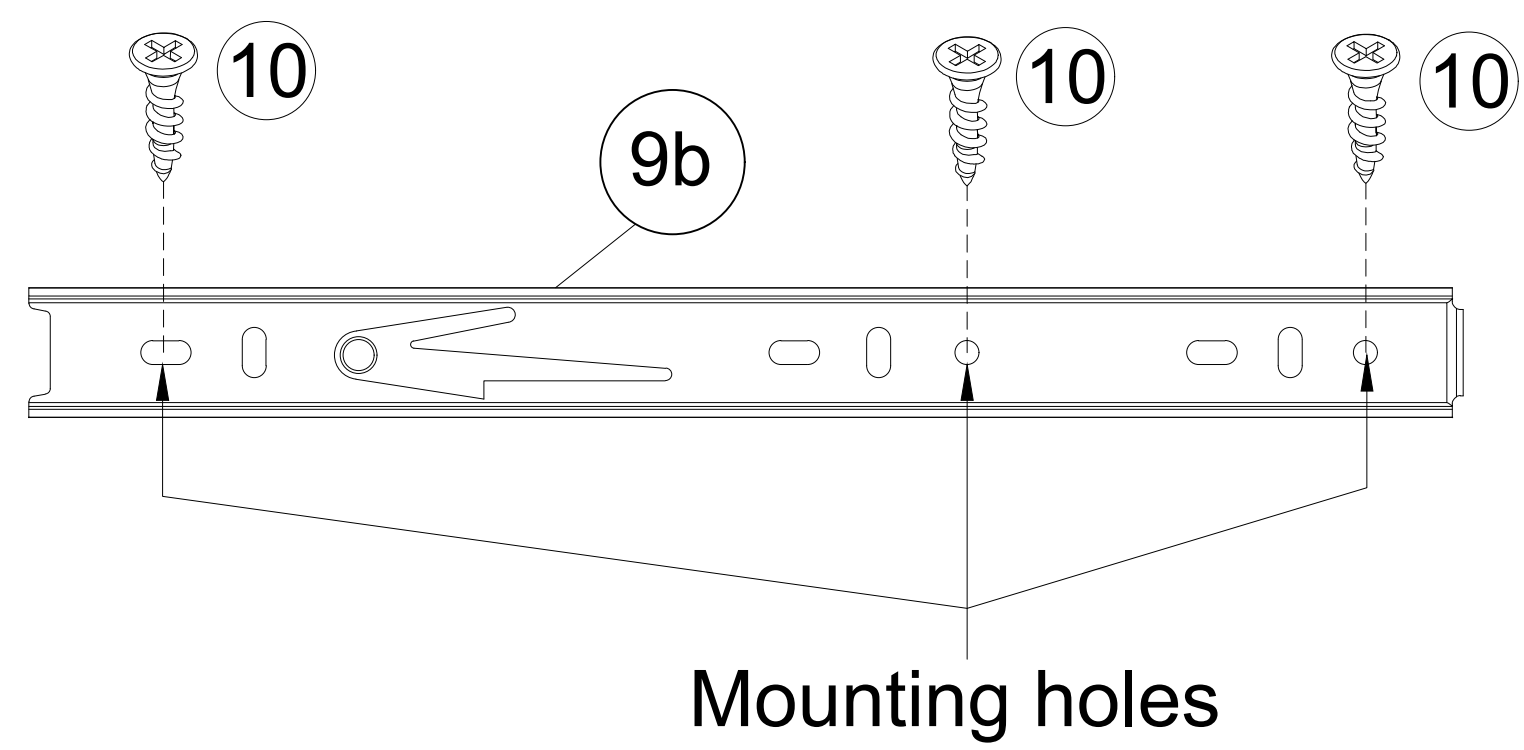




STEP 33

11





4pcs

Ø6x33mm

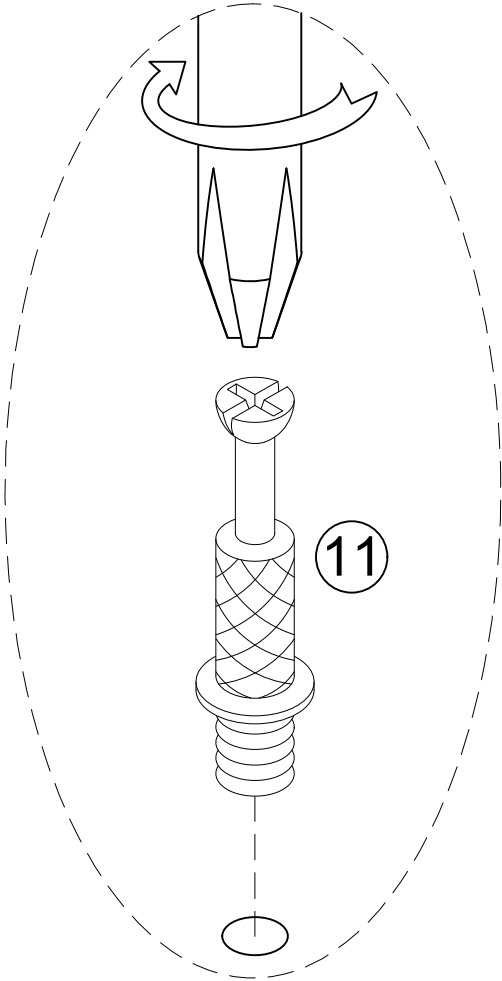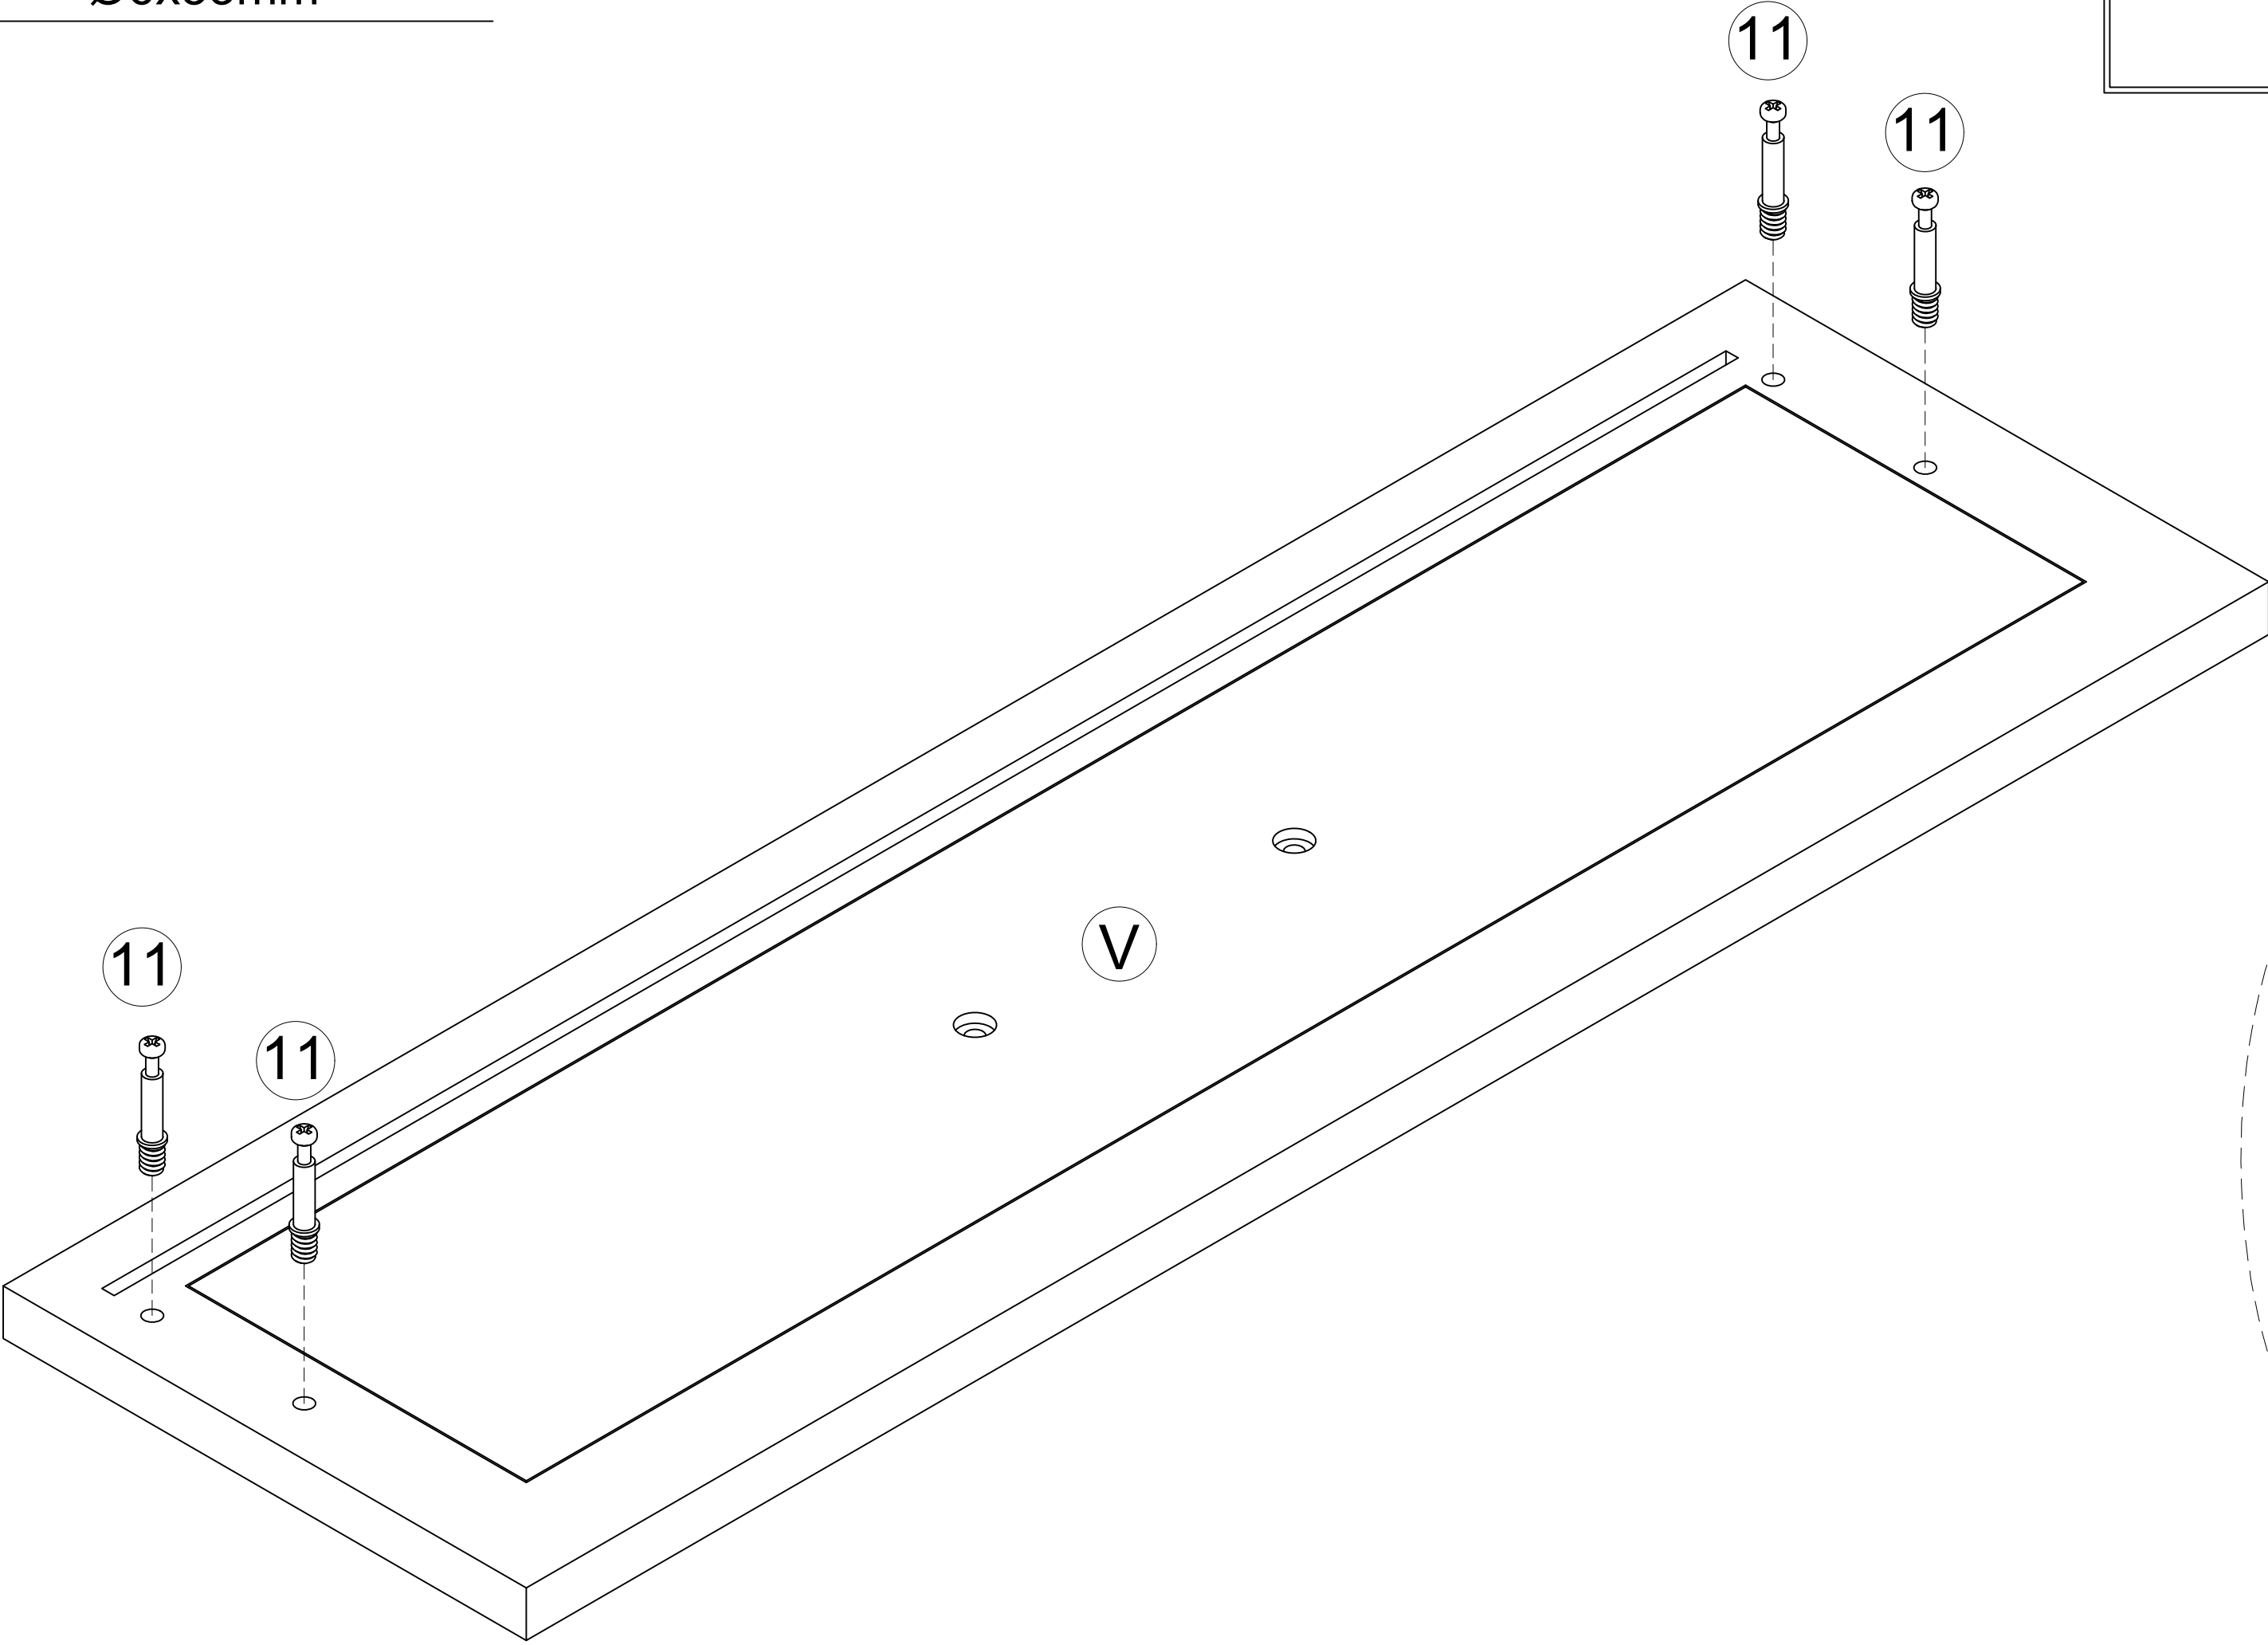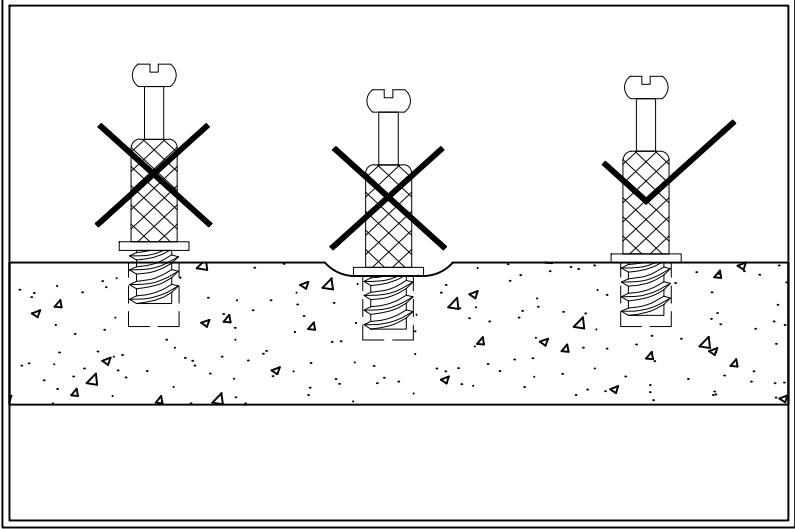


STEP 34



2  4pcs
Ø4x25mm

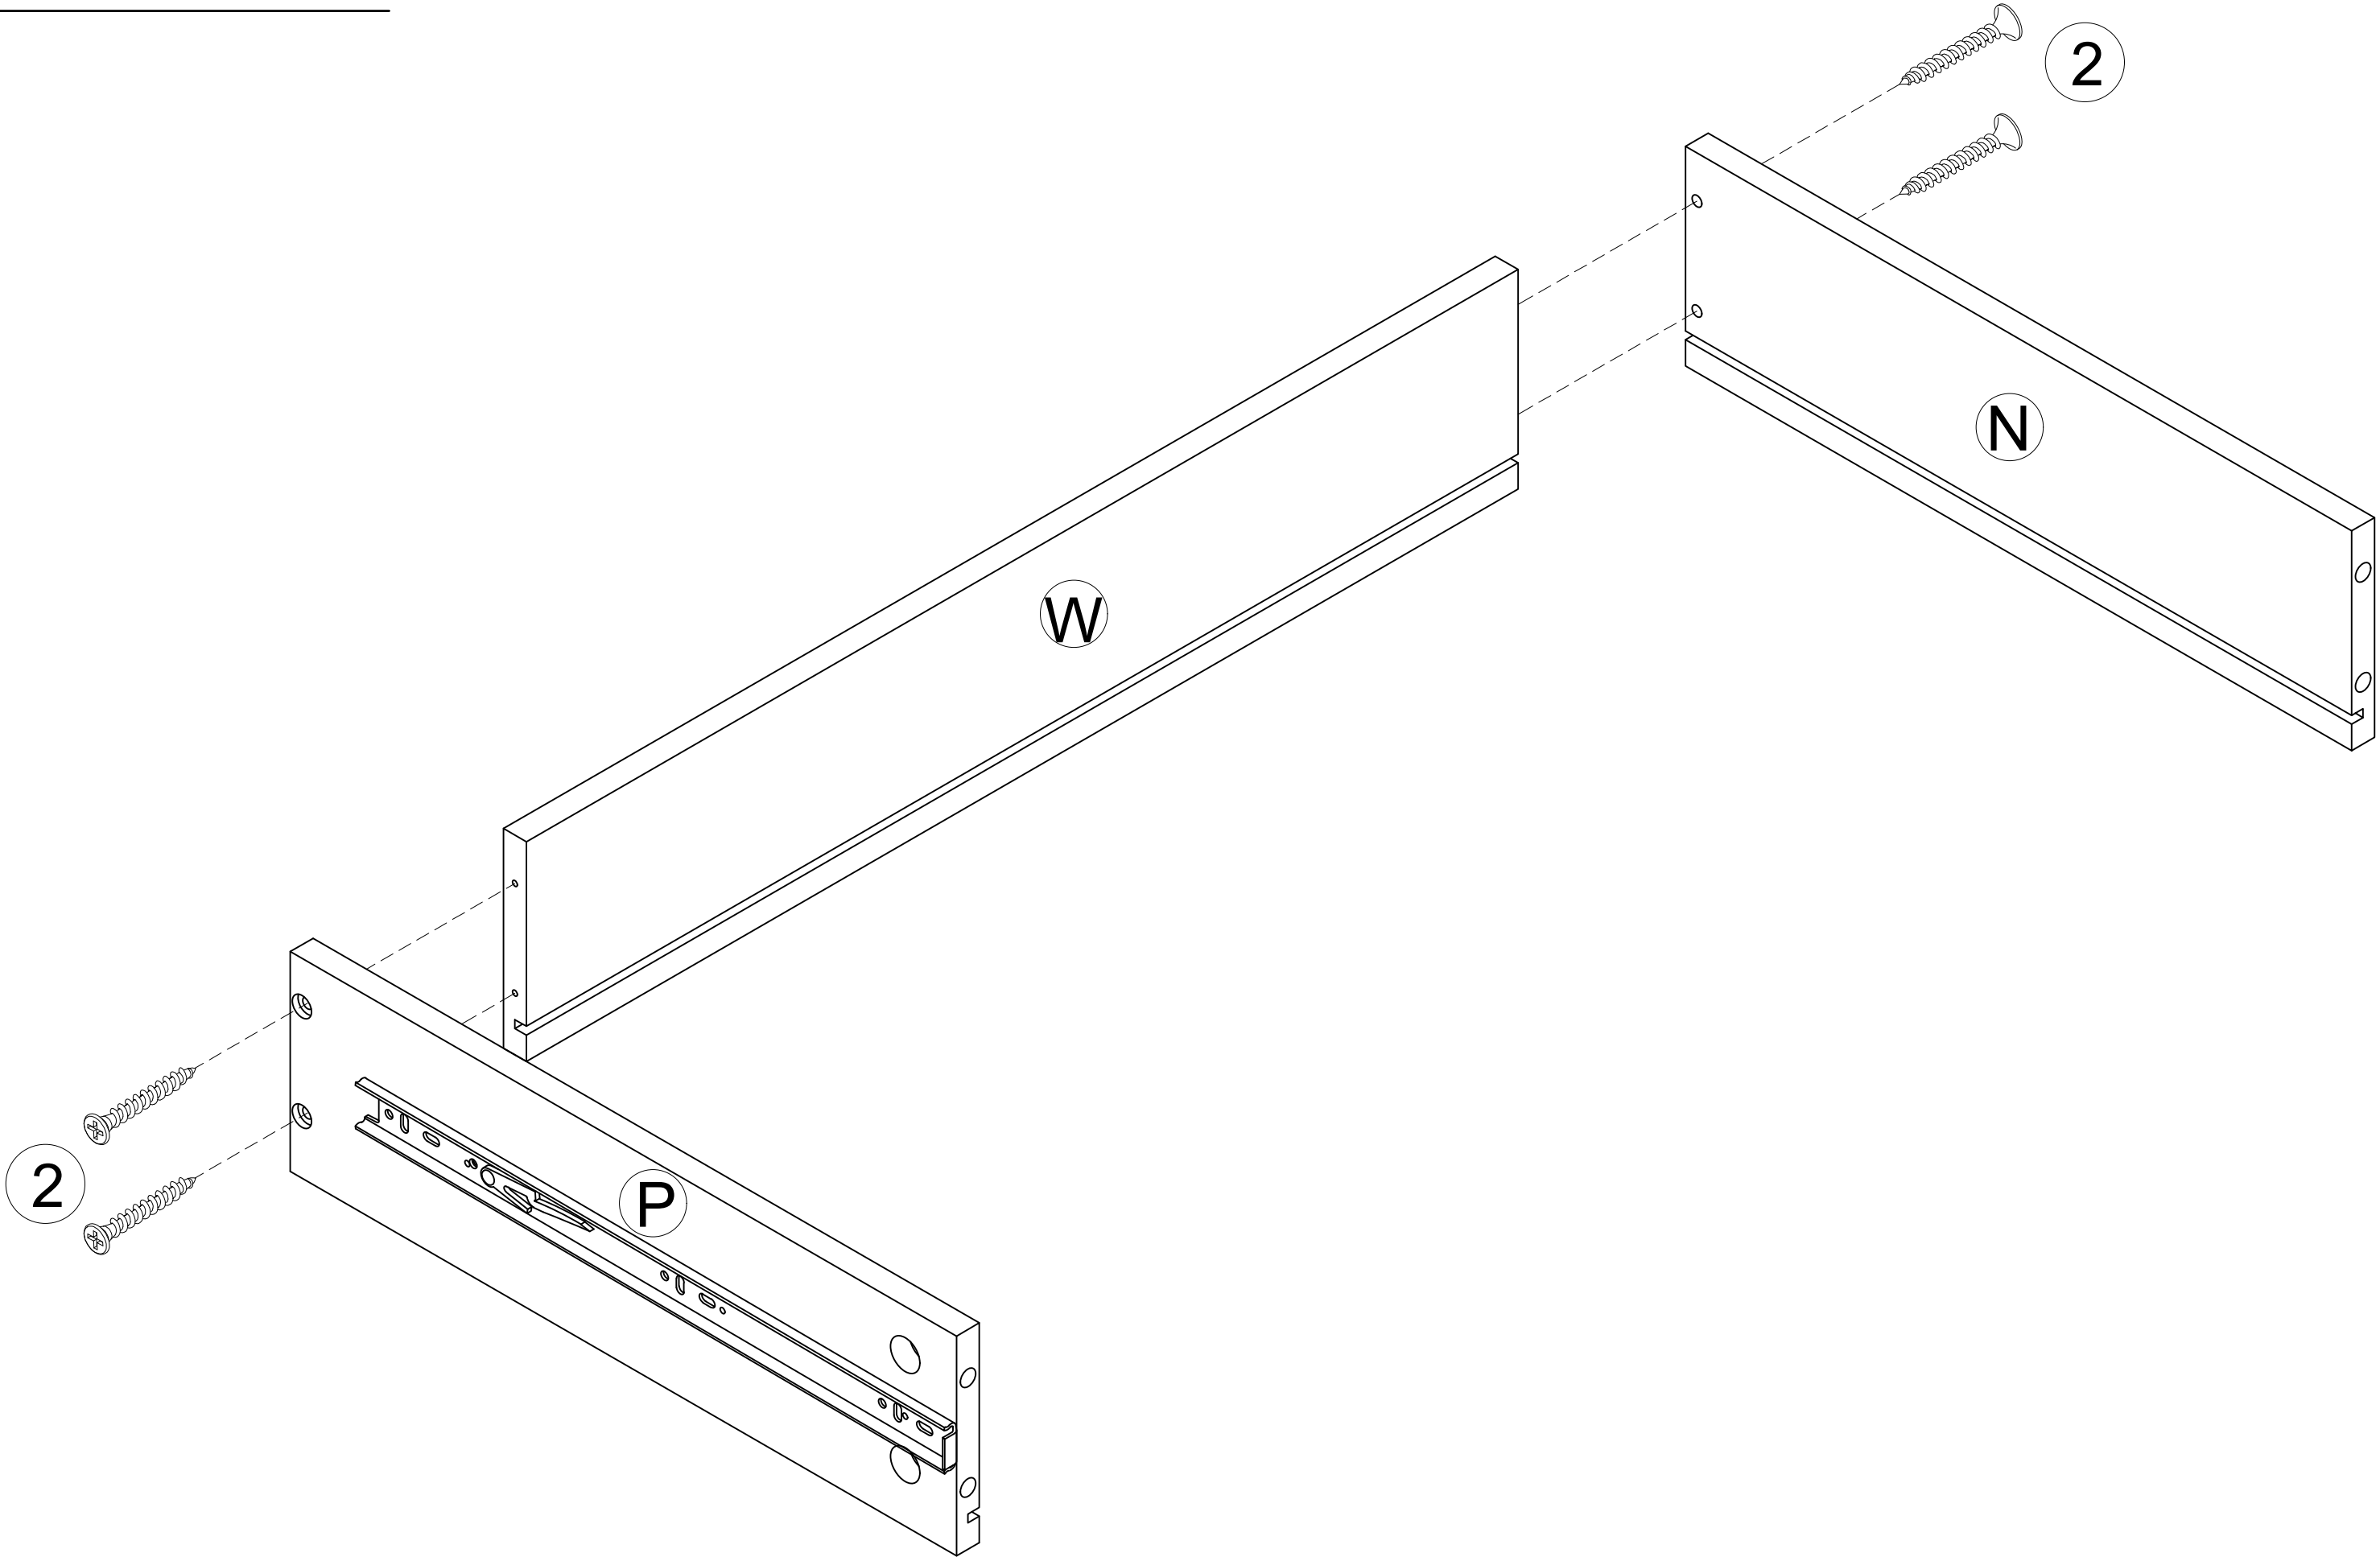





STEP 35

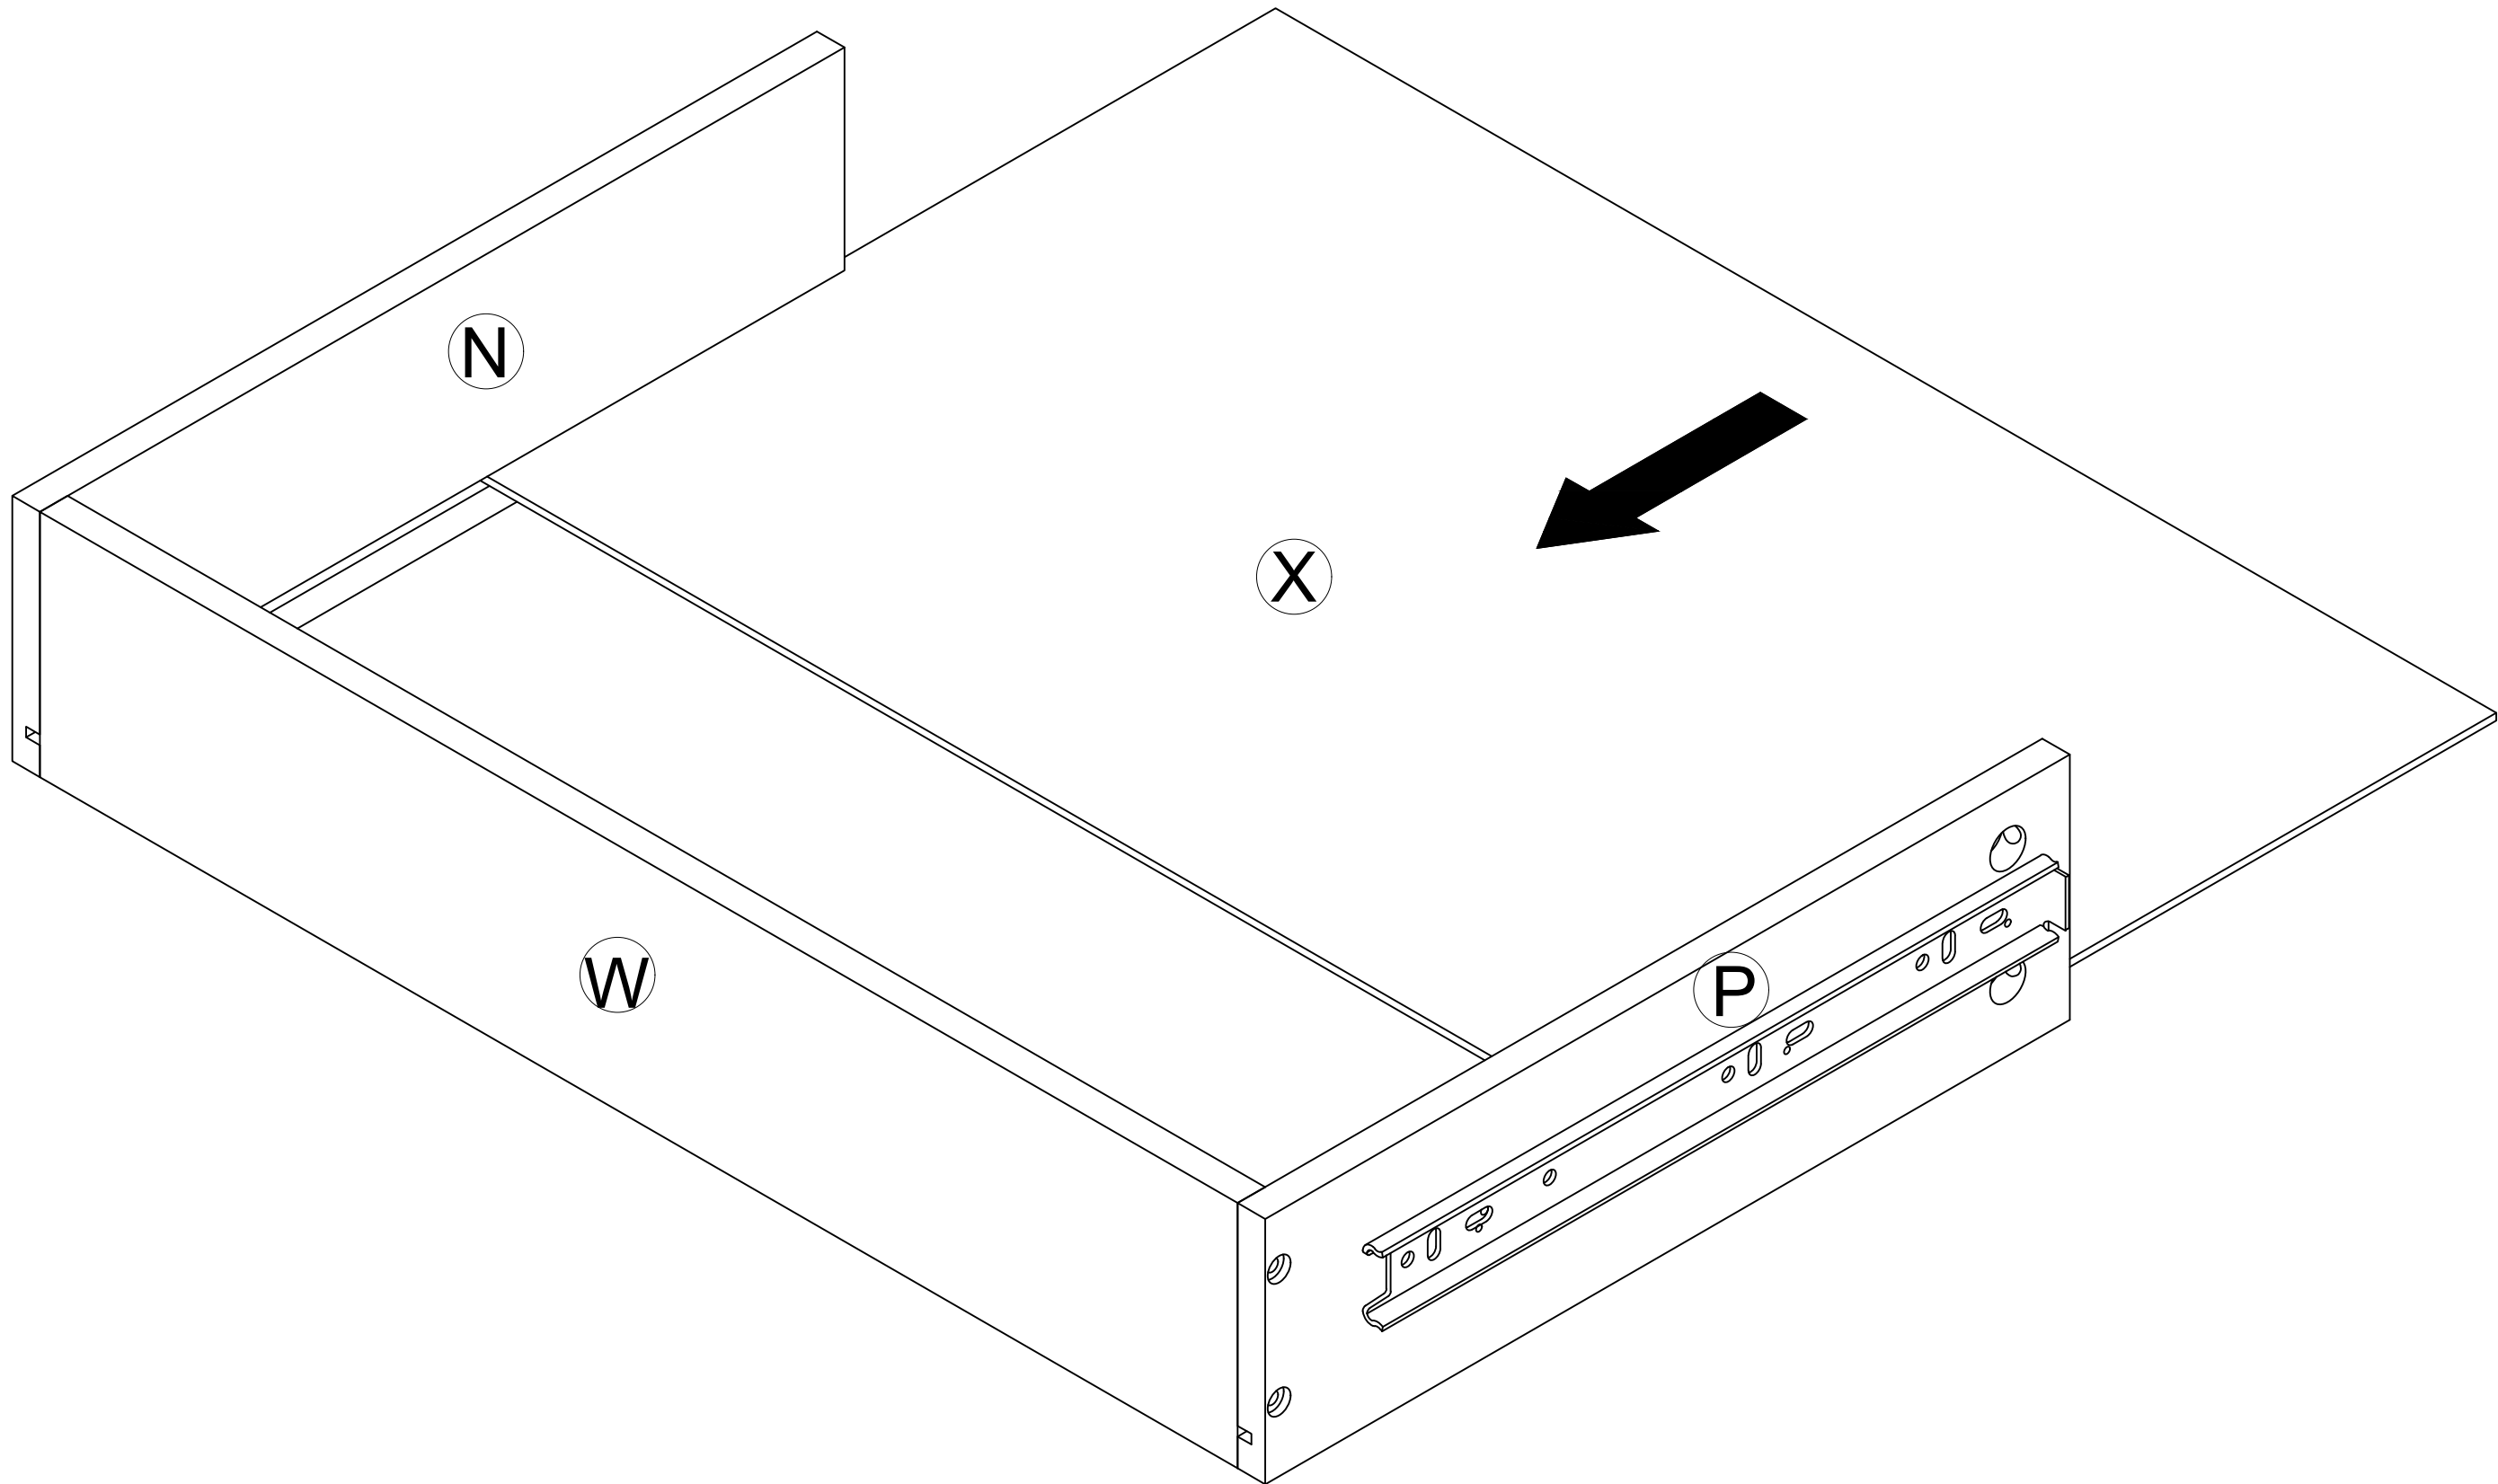

STEP 36

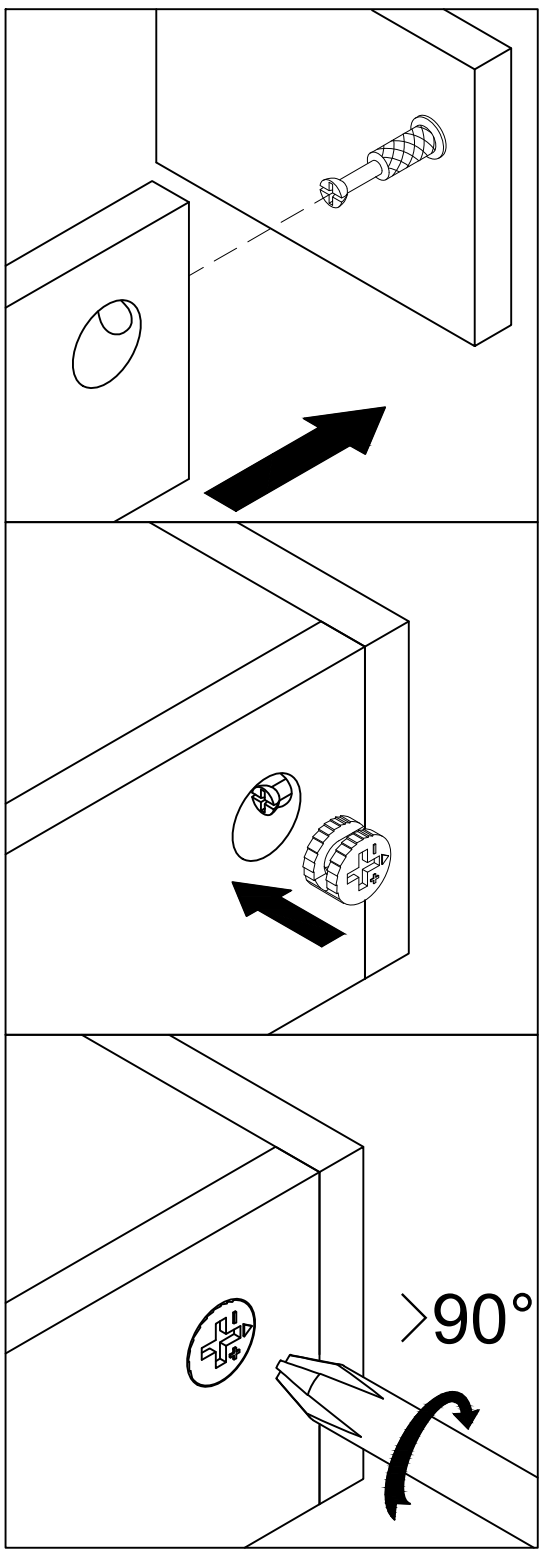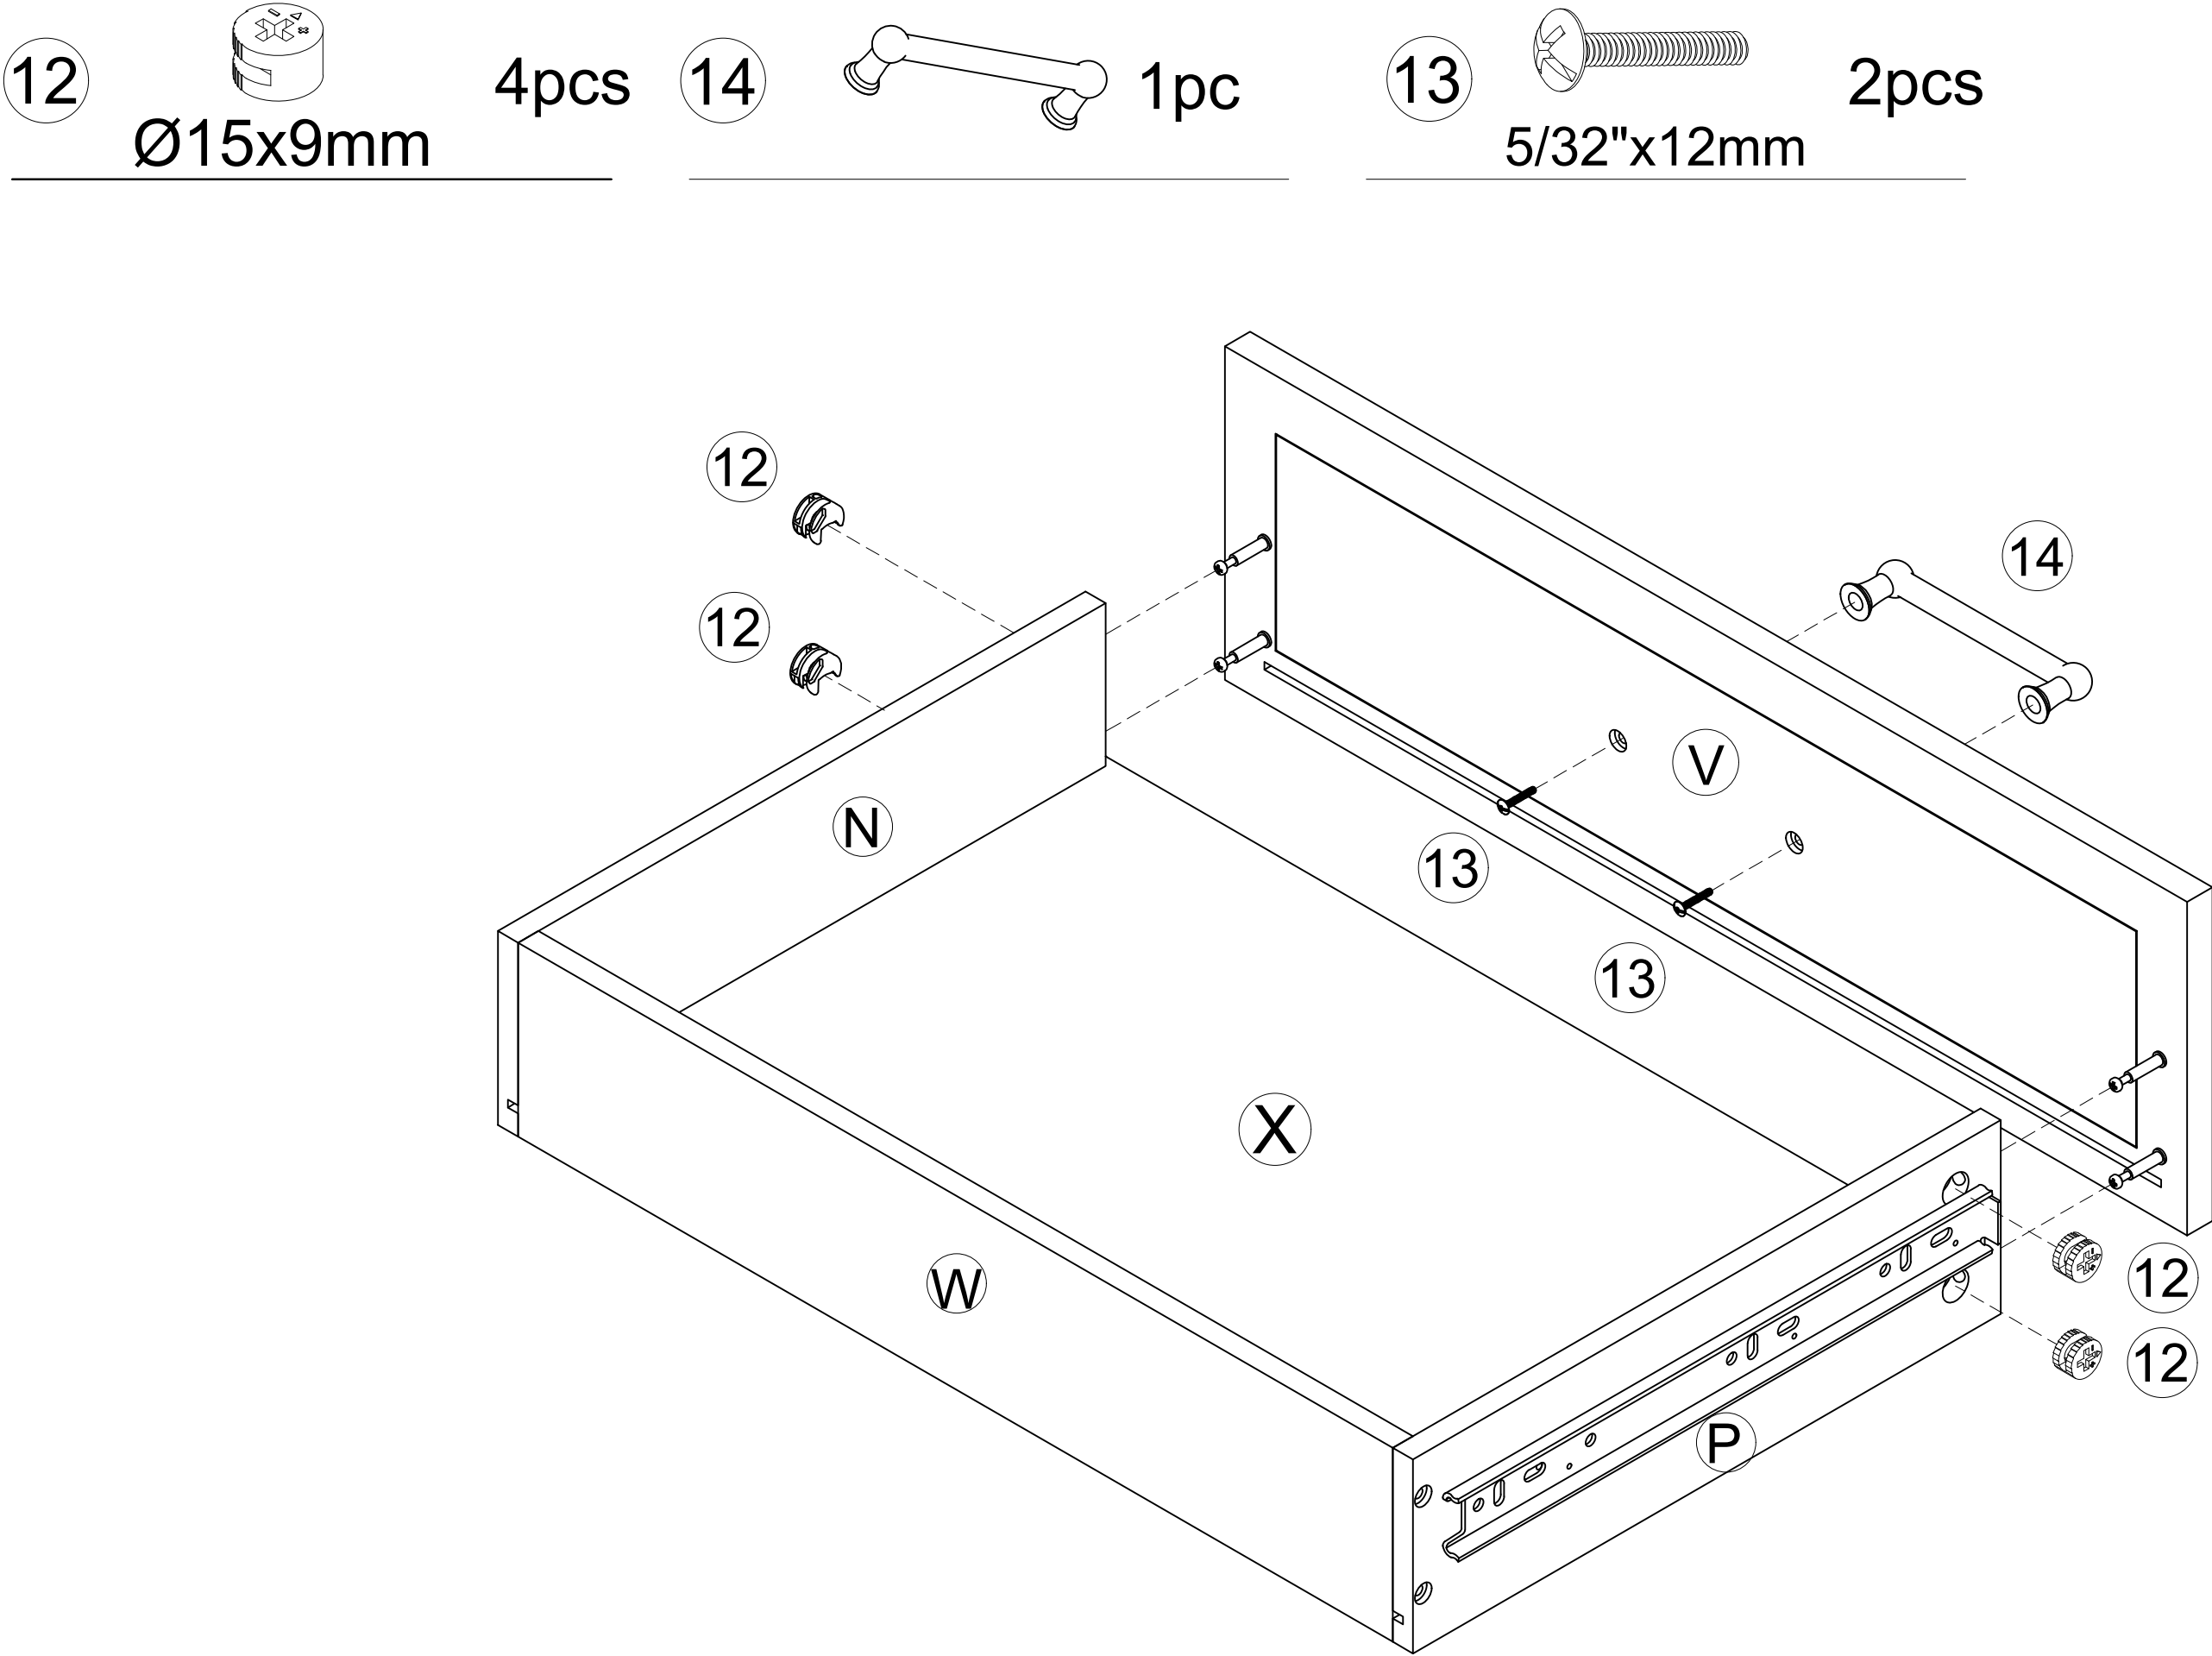


STEP 37

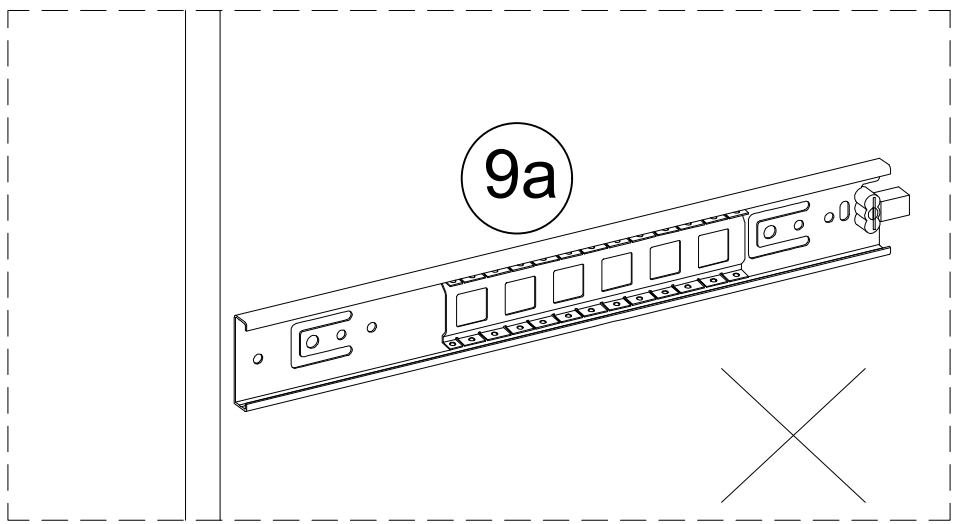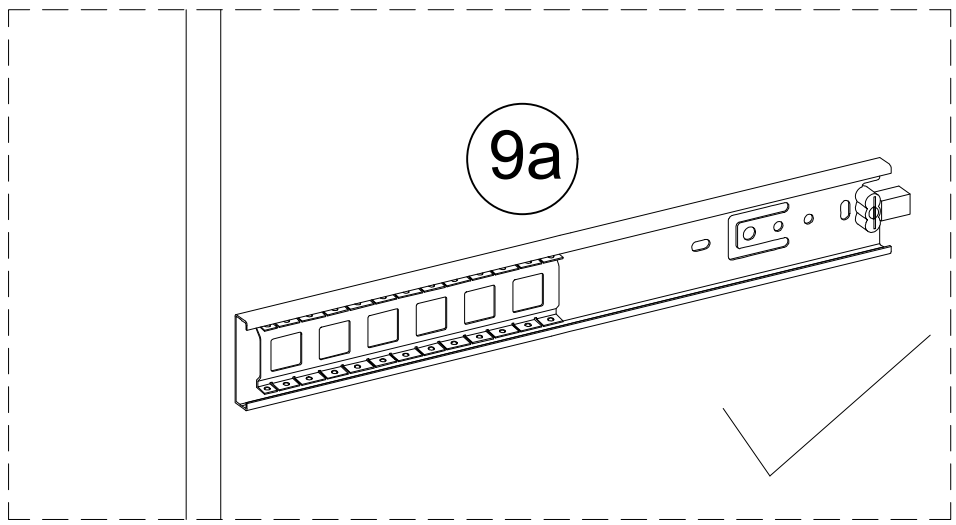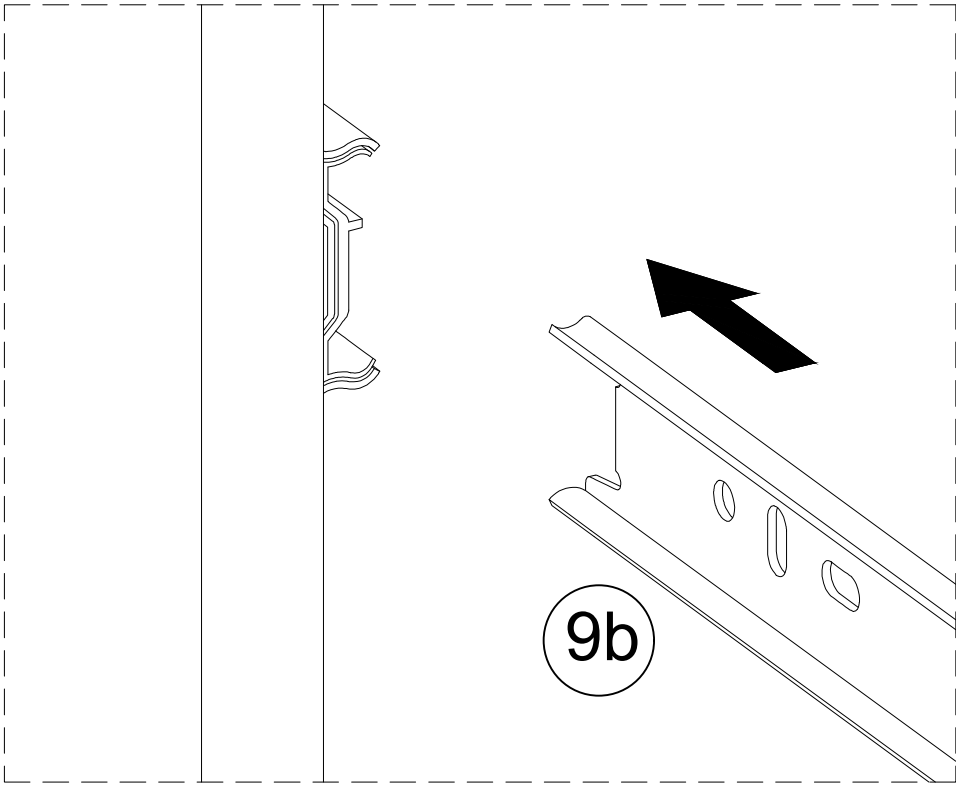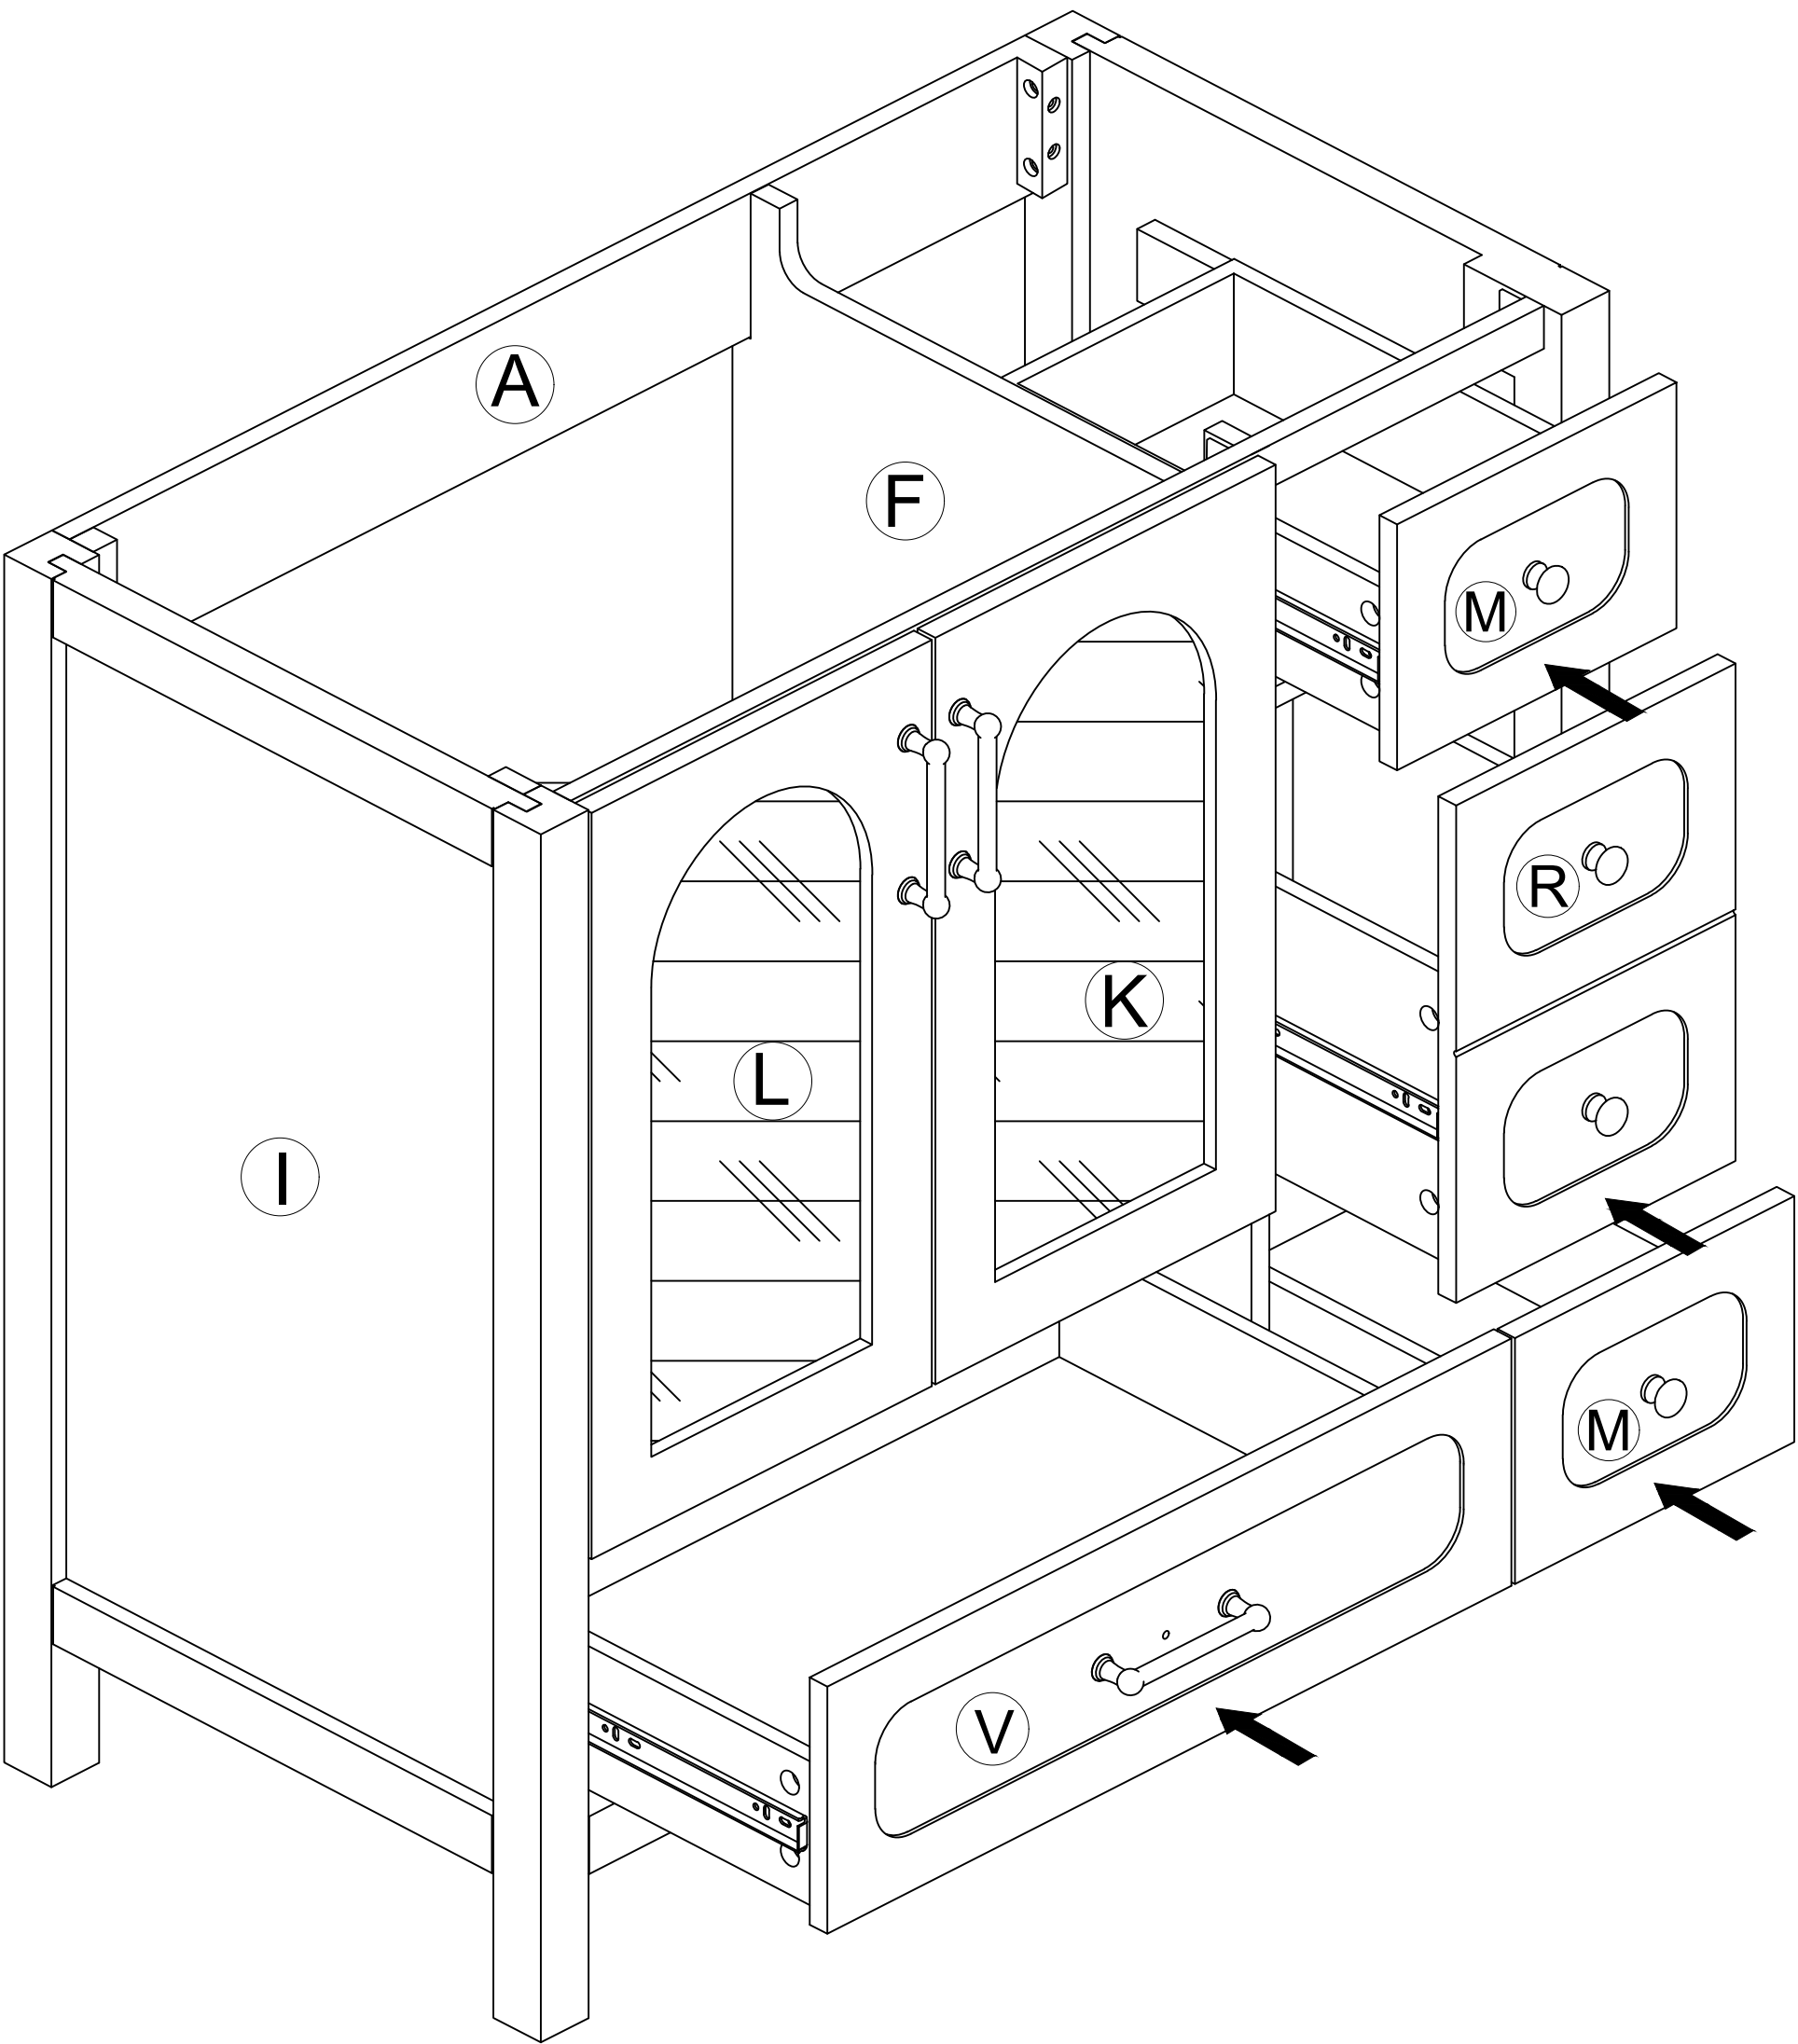


STEP 38


6

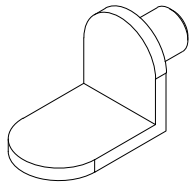

4pcs

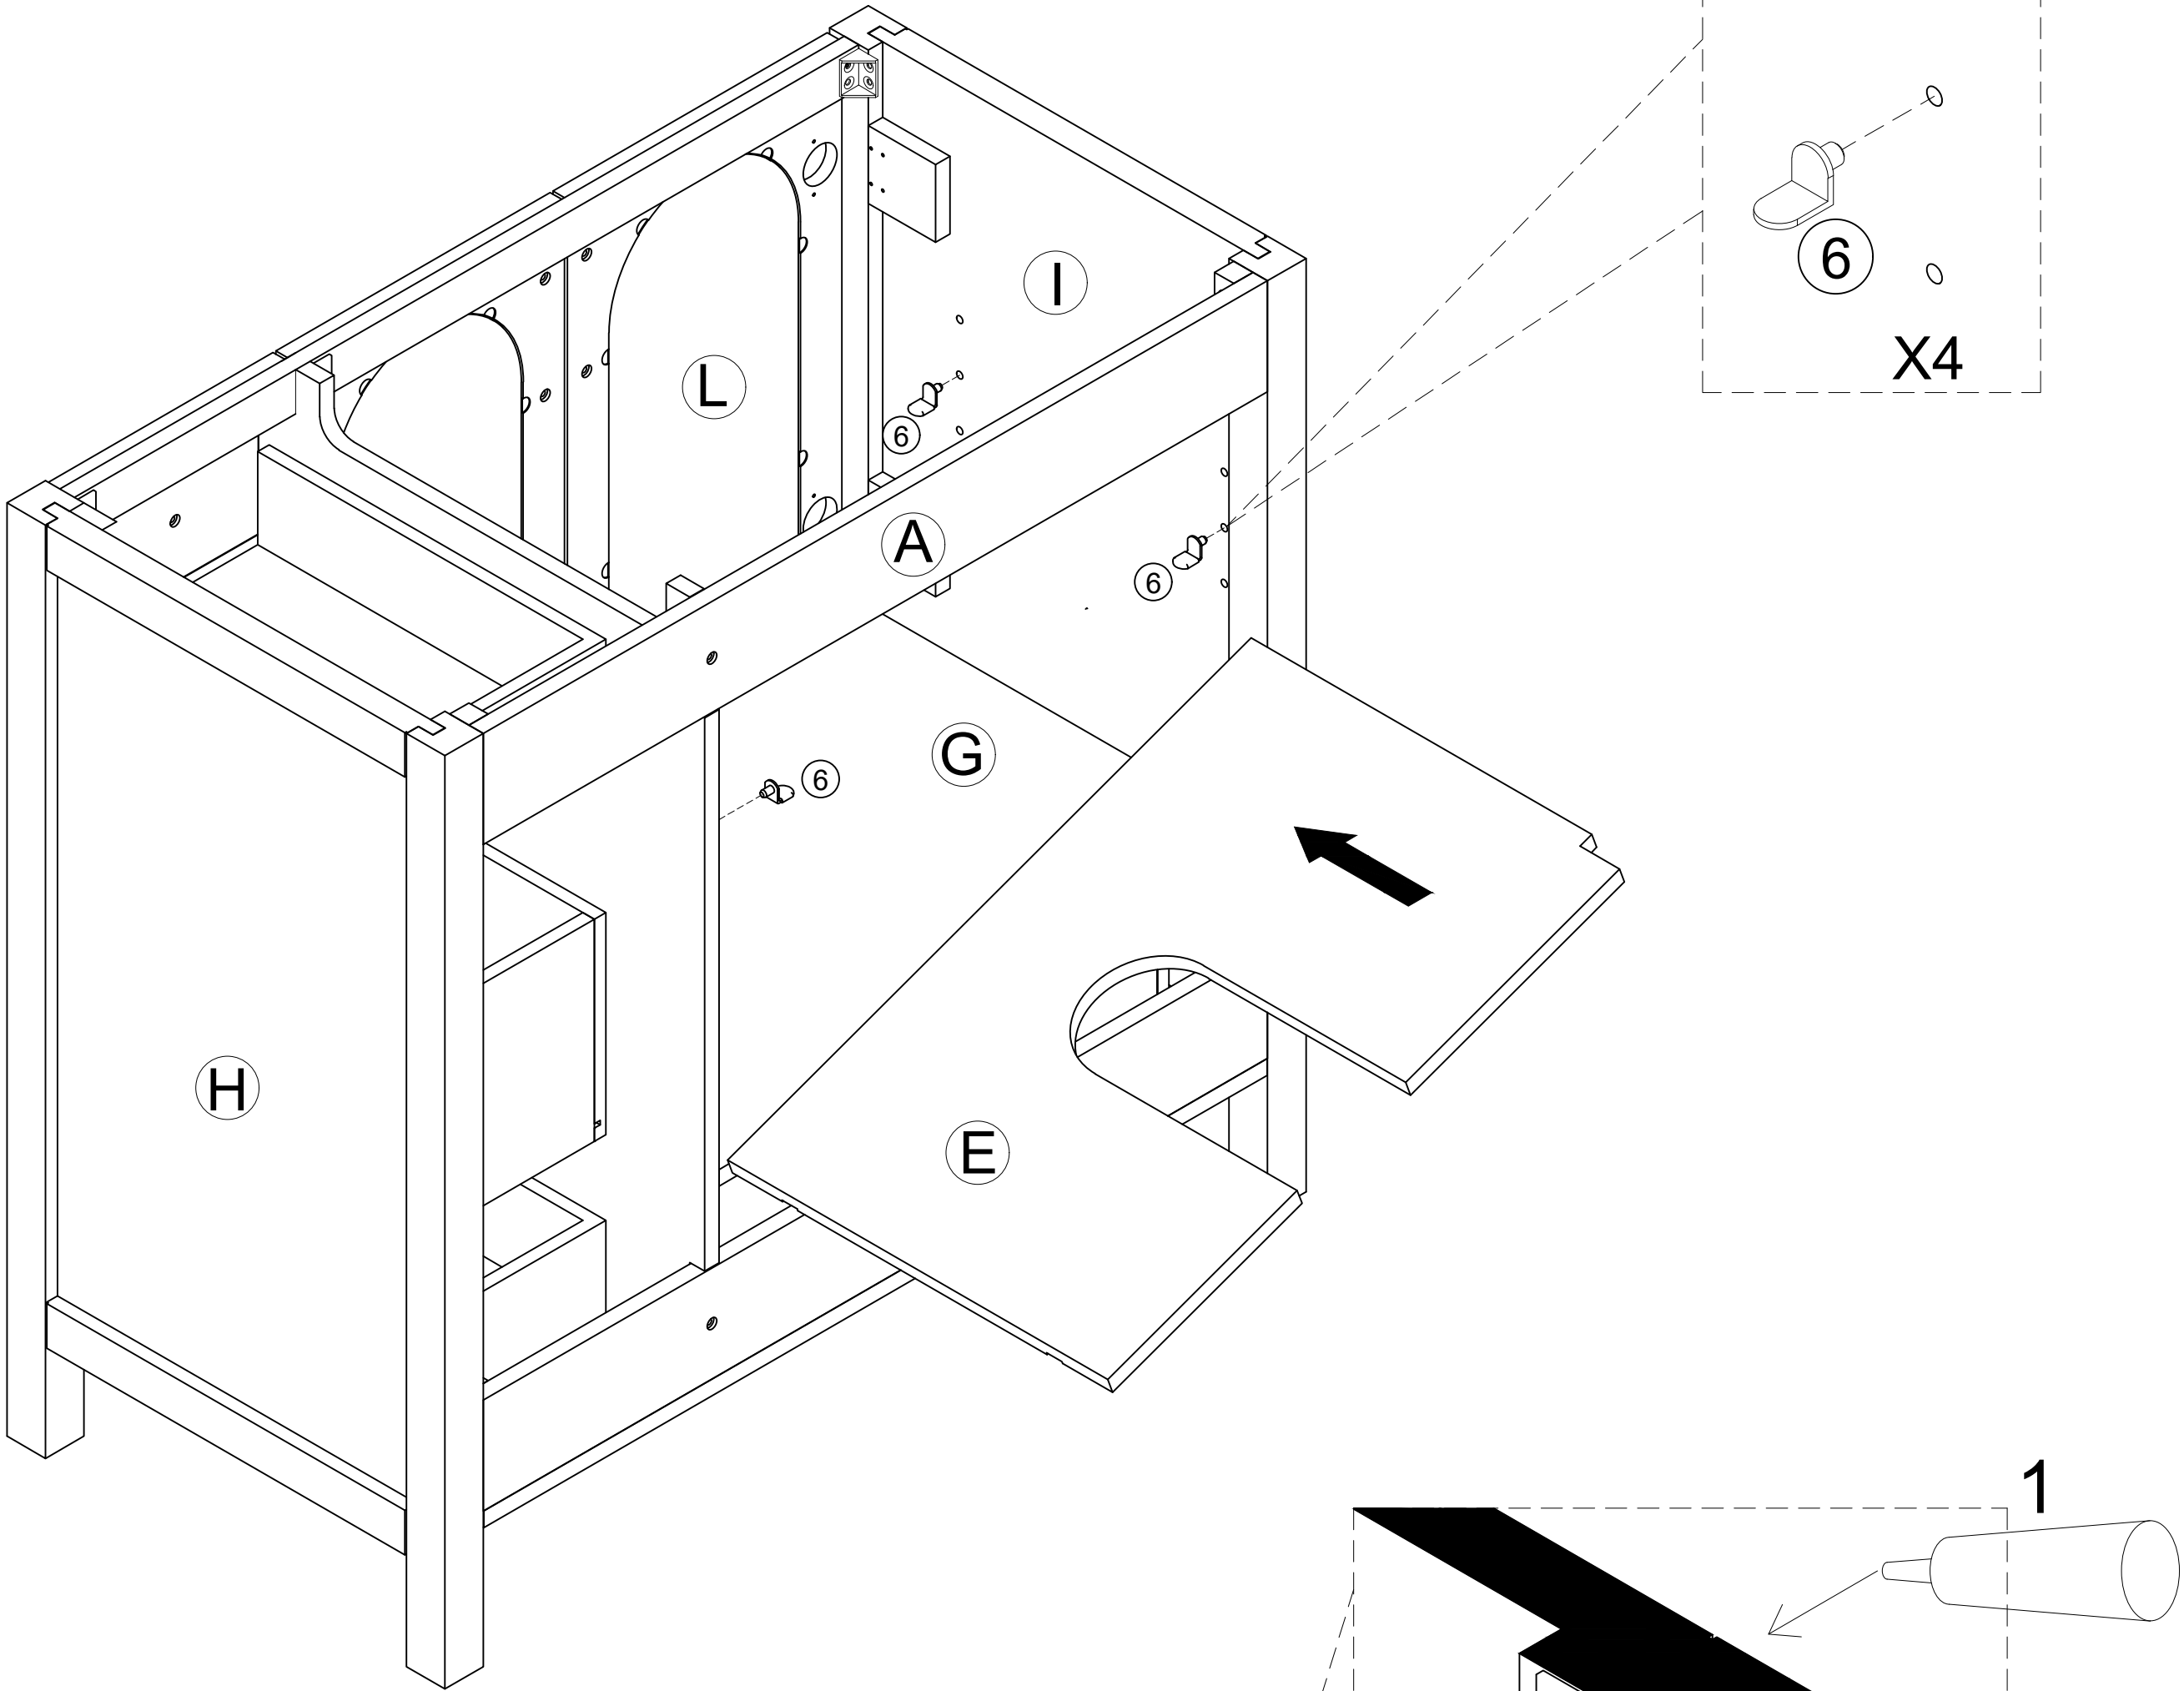

STEP 39

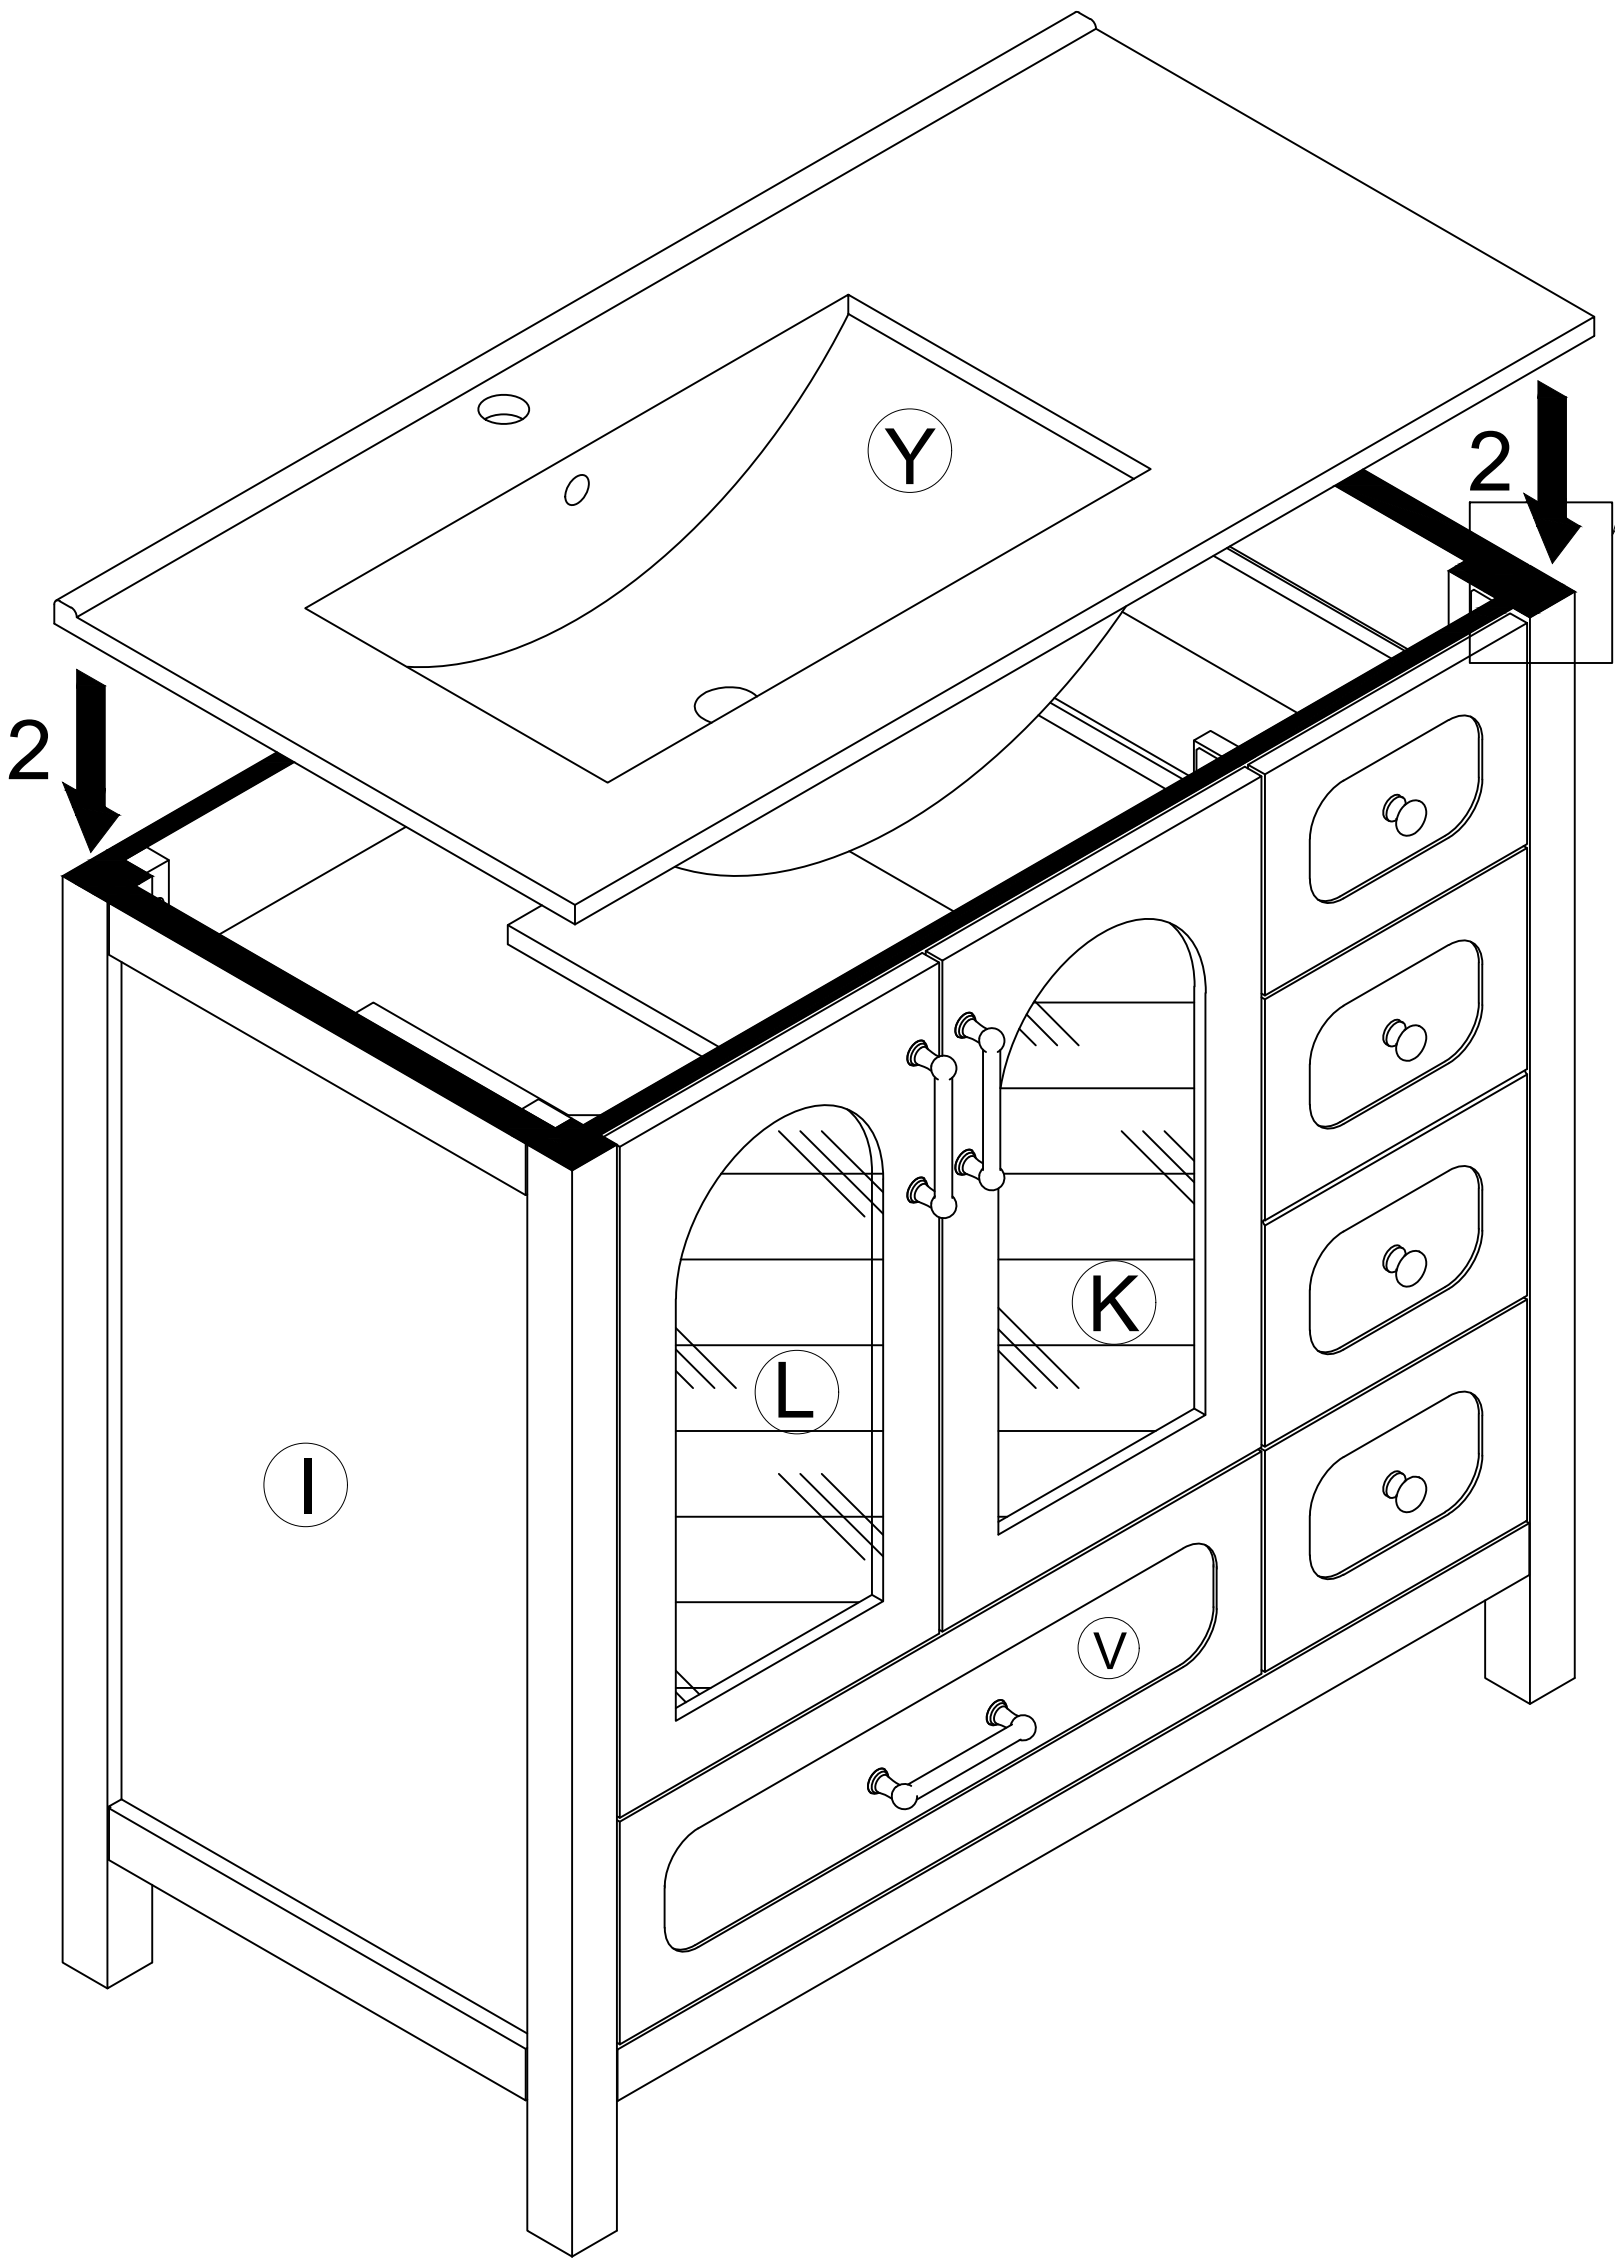

To install the Top (1) to the vanity (2).Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.