
LM083



Item #: LM083-BD65 Assembly Instructions

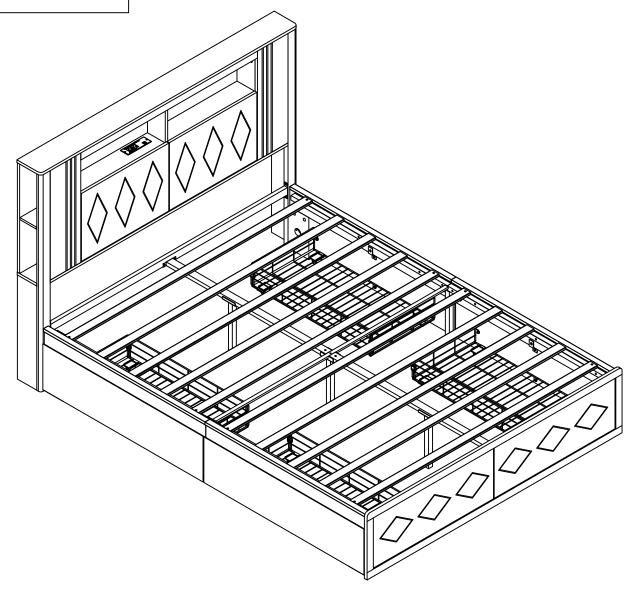


If you have any questions, please follow these steps ("Find Your Orders" - "Problem with the Order" - "Contact Seller") to contact our customer service. Thanks!

NOTE: There are two packages A and B for thisitem. Please wait patiently if you only receive one for now $\begin{array}{c} \text{NOTE: } \\ \text$

Revised 03/03/2025

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.



In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.





VI. A Phillips head screwdriver is required for the assembly of this product.



VII. Power tools should not be used to assemble this product.



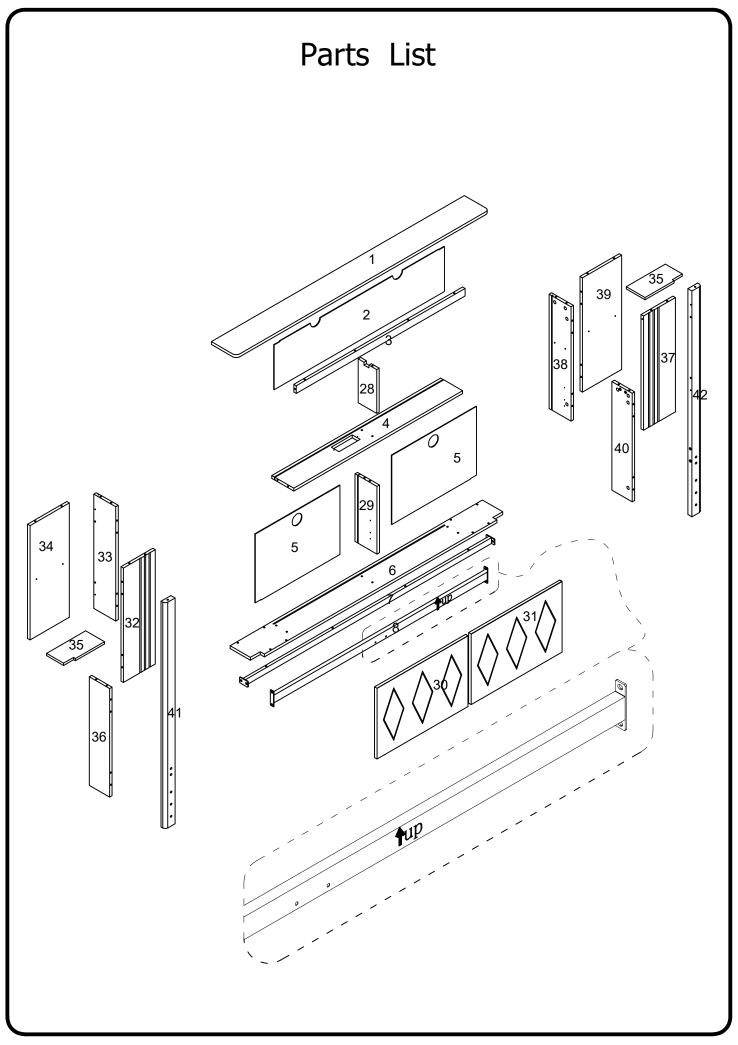

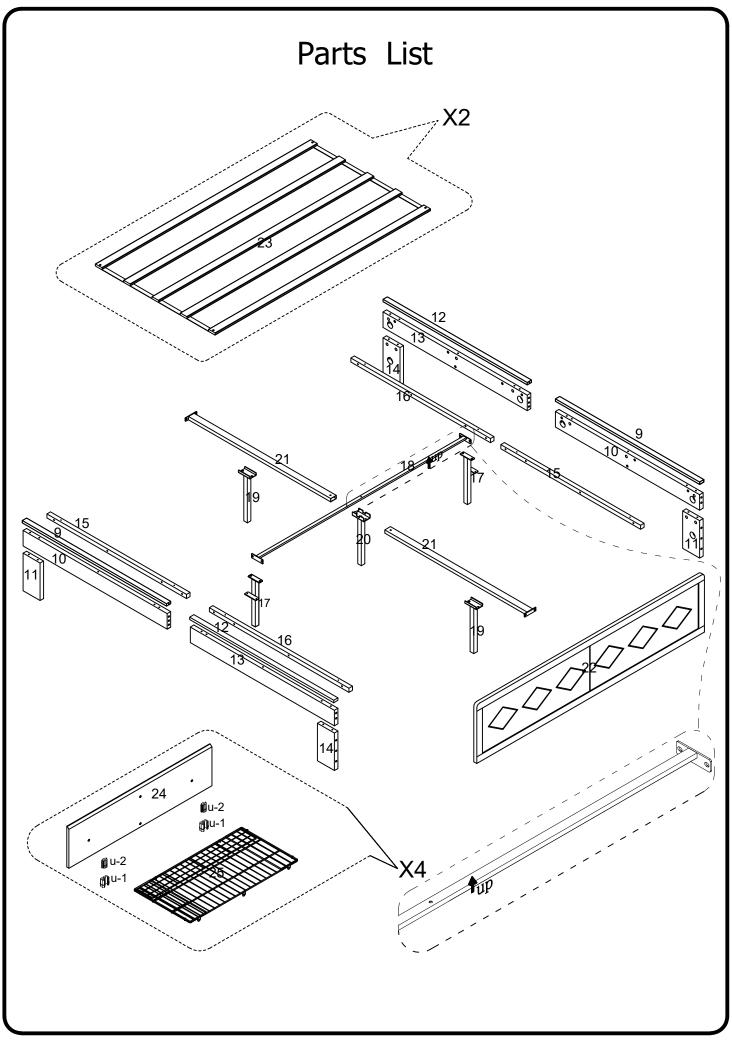

Н	ar	$\boldsymbol{\alpha}$	vat	e		ICT
	uг	uν	٧aı		ᆫ	IJL

Α		Ø8x30mm	Wooden dowel	26	pcs
GG		Ø10x40mm	Wooden dowel	16	pcs
В		Ø6x32mm	Cam bolt	68	pcs
С		Ø15x11mm	Cam lock	68	pcs
D		Ø30mm	Sticker	68	pcs
Е		M6*20mm	Bolt	4	pcs
F		Ø6x50mm	Screw	16	pcs
G		M 4	Hex Key	1	рс
Н		M6*12mm	Bolt	36	pcs
1		M6*40mm	Bolt	23	pcs
J		M 5	Hex Key	1	рс
K		M8*70mm	Bolt	4	pcs
L		Ø5/16in	Nut	12	pcs
M	\S	Ø5/16in	Arc-shaped washer	12	pcs
N	2	Ø5/16in	Wrench	2	рс
0		Ø8x60mm	Bolt	4	pcs
Р		Ø8x100mm	Bolt	2	pcs
Q			Metal plate	4	pcs
R	0	M8x14mm	flat washer	4	pcs
S	8		Wheel	16	pcs
Т	√ⅢⅢⅢ€	Ø4x20mm	Screw	8	pcs
U	4		Drawer locker set	8	sets

Philips head screwdriver required for assembly (not included) The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.


Hardware List


V	✓ IIIIIIII (A)	Ø3x12mm	Screw	10	pcs
W			Electric socket	1	рс
X			Led strip light (Included in plastic bag)	1	set
Υ			Plastic wedge	16	pcs
Z		Ø3x17mm	Screw	16	pcs
ВВ		Ø5x13x26mm	Shelf holder	8	pcs
CC	<=====(\frac{1}{2})	Ø5x12mm	Screw	28	pcs
DD			Hinge	4	pcs
EE			U - shaped fixture	4	pcs
FF			Glue tube	2	pcs





The hardware quantities listed above are required for proper assembly.


Some extra hardware may also have been included.

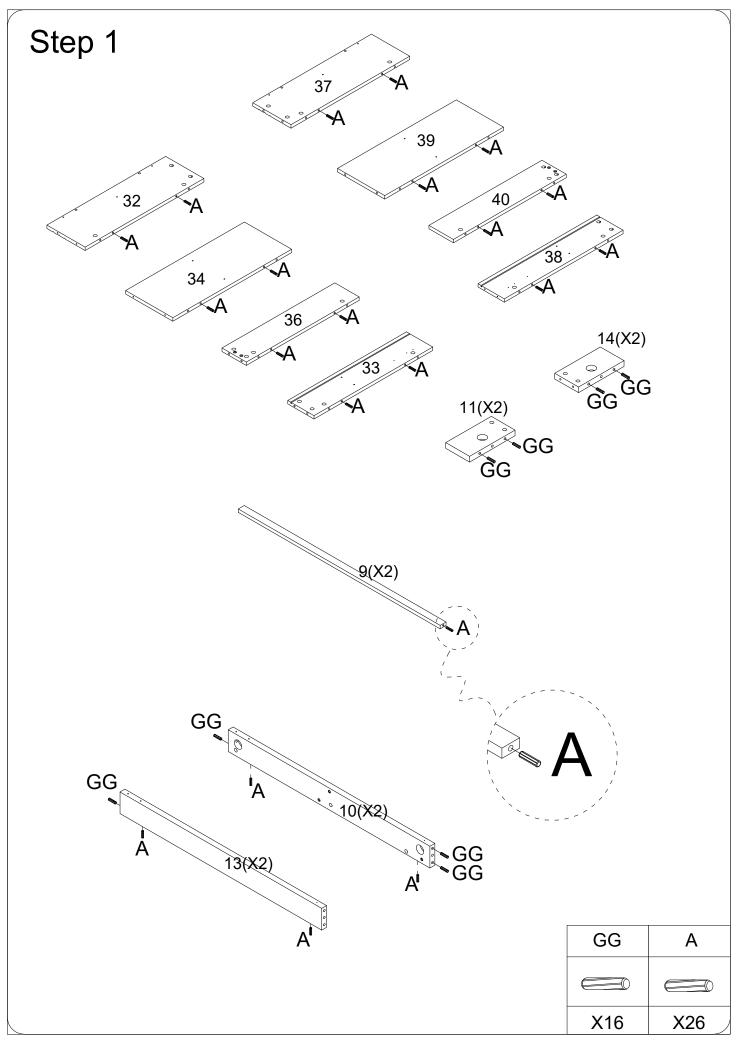


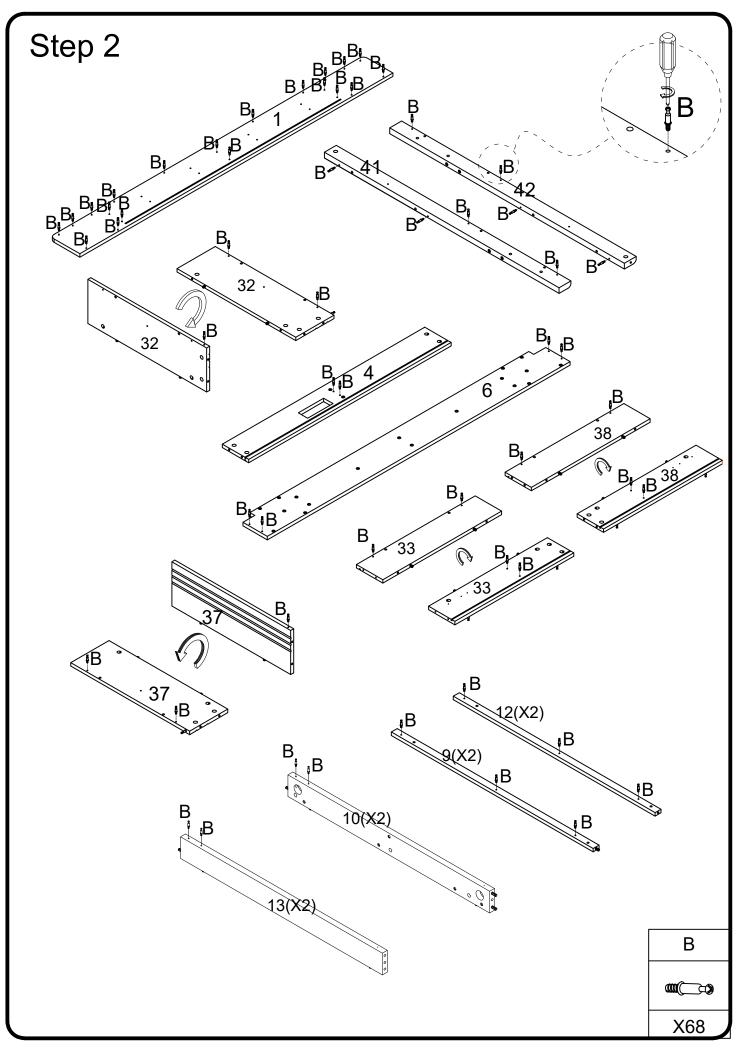

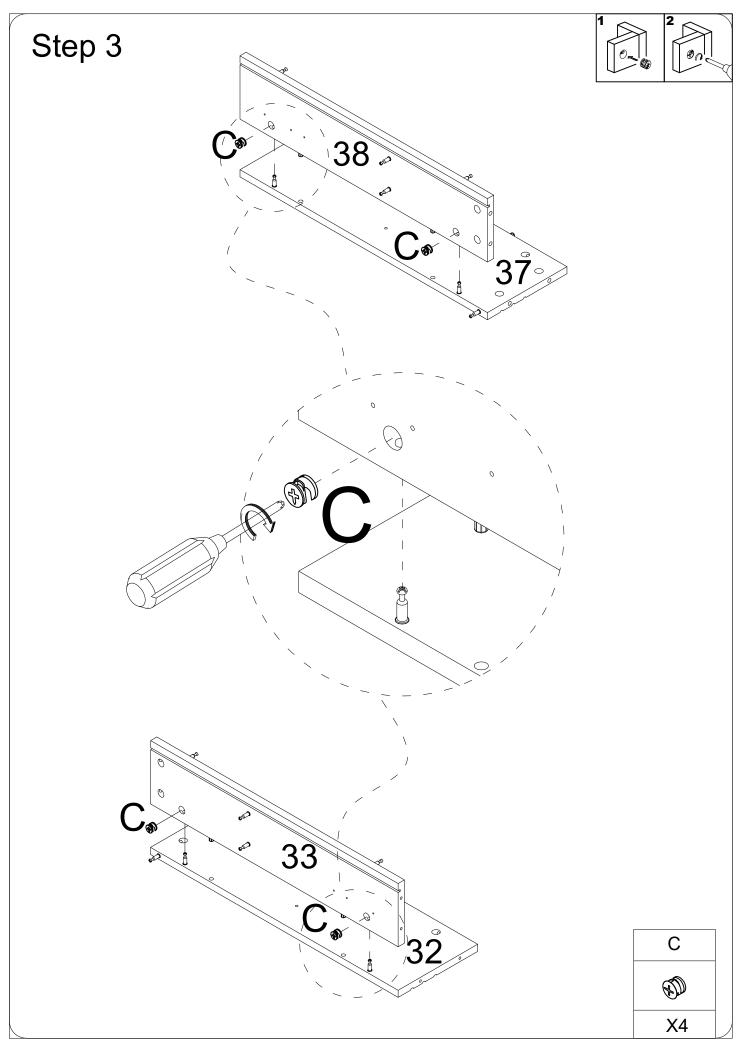


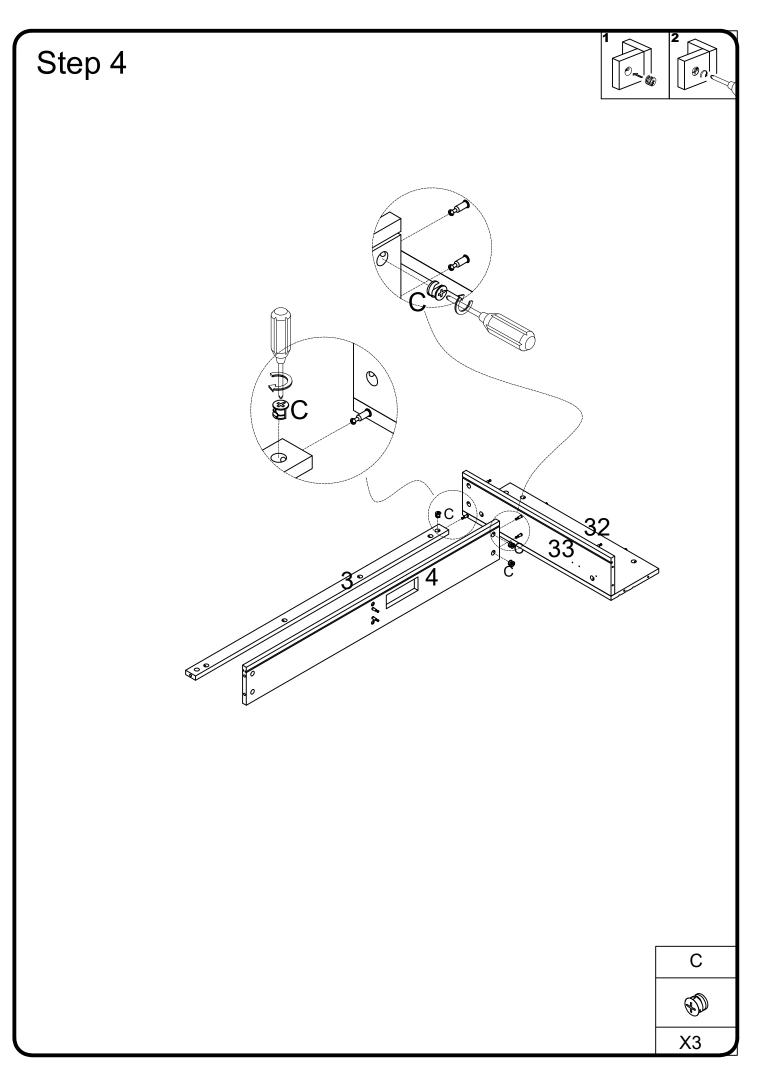


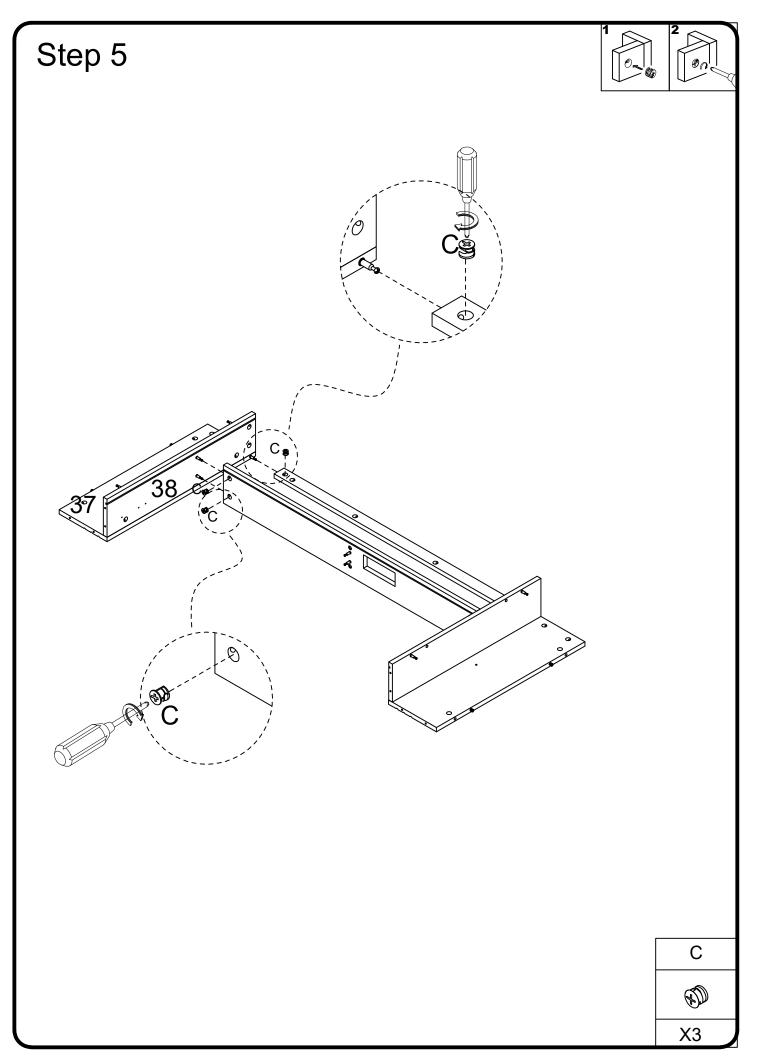


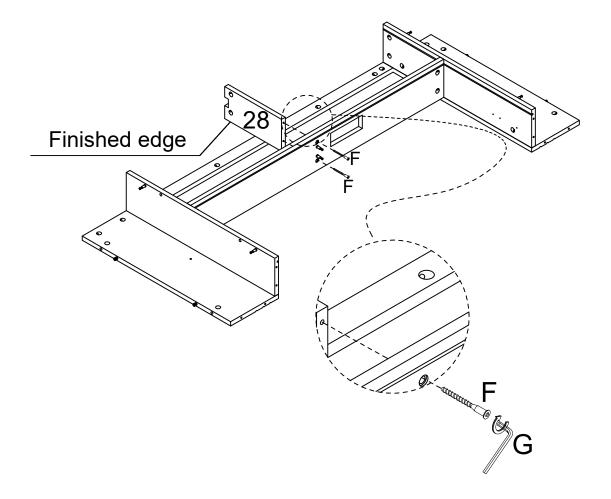


G	F
	annau c. <u>_</u> @
X1	X2

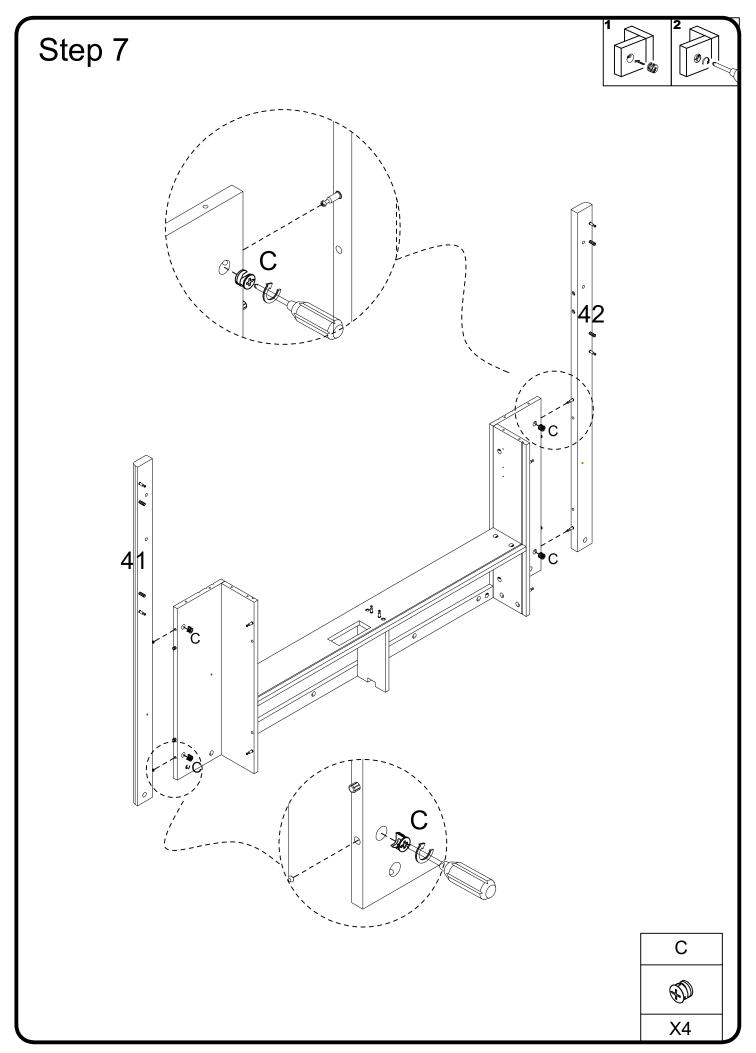


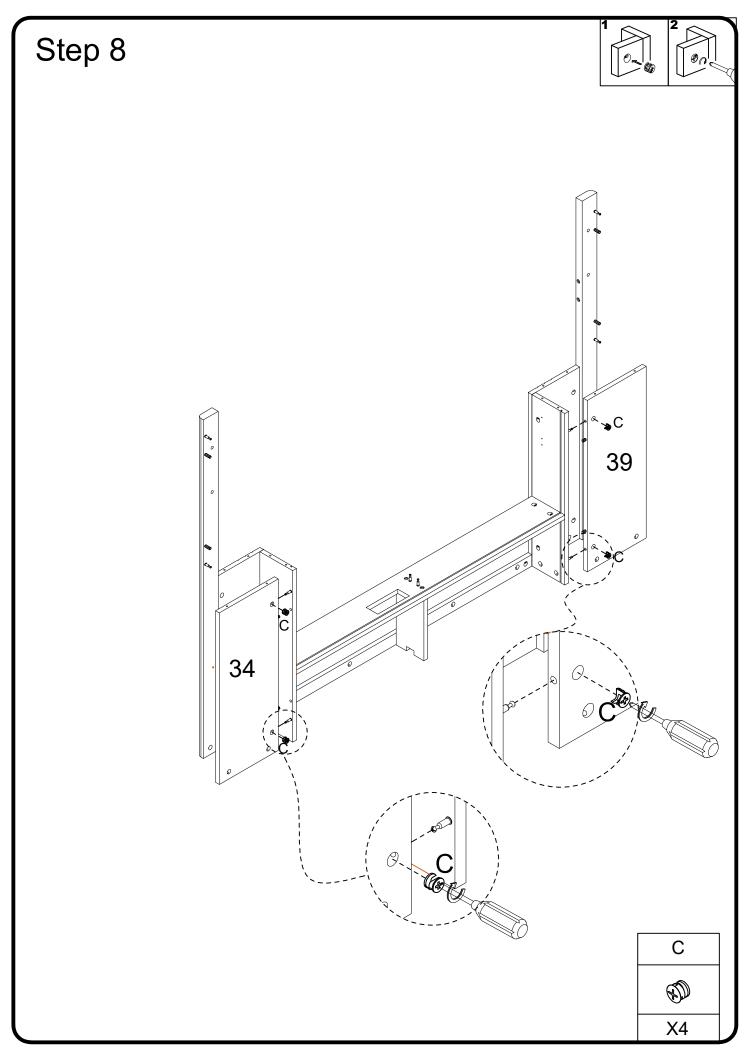

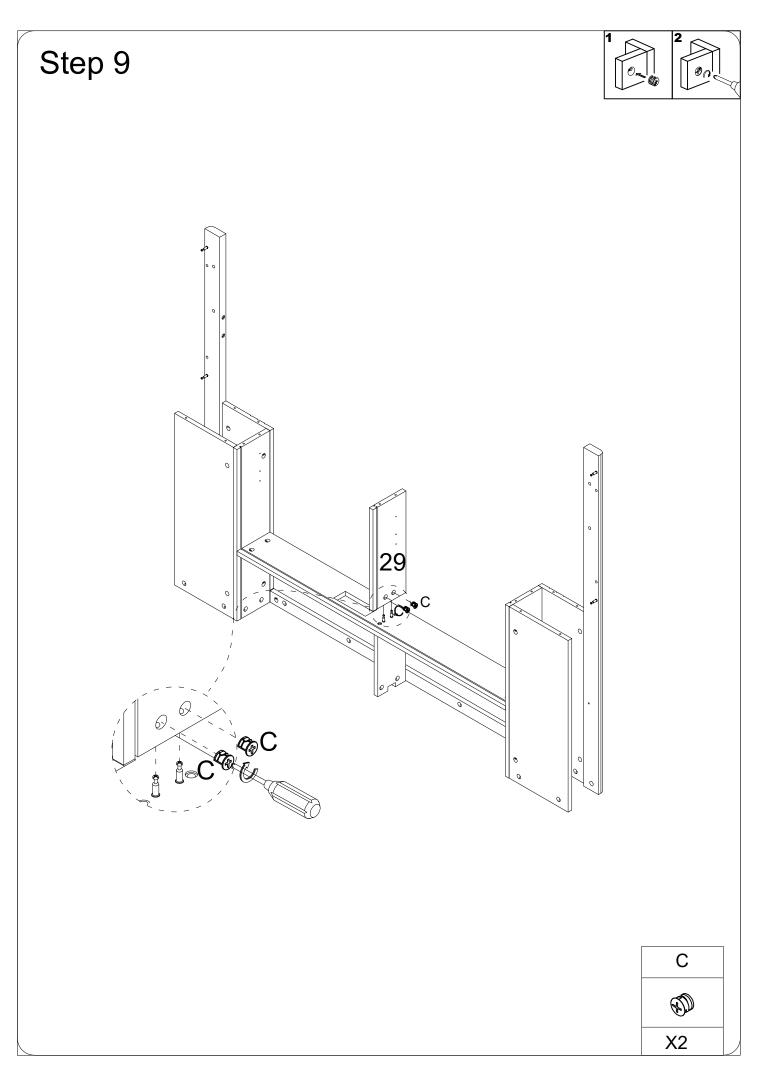


Step 10 5 **1** 5

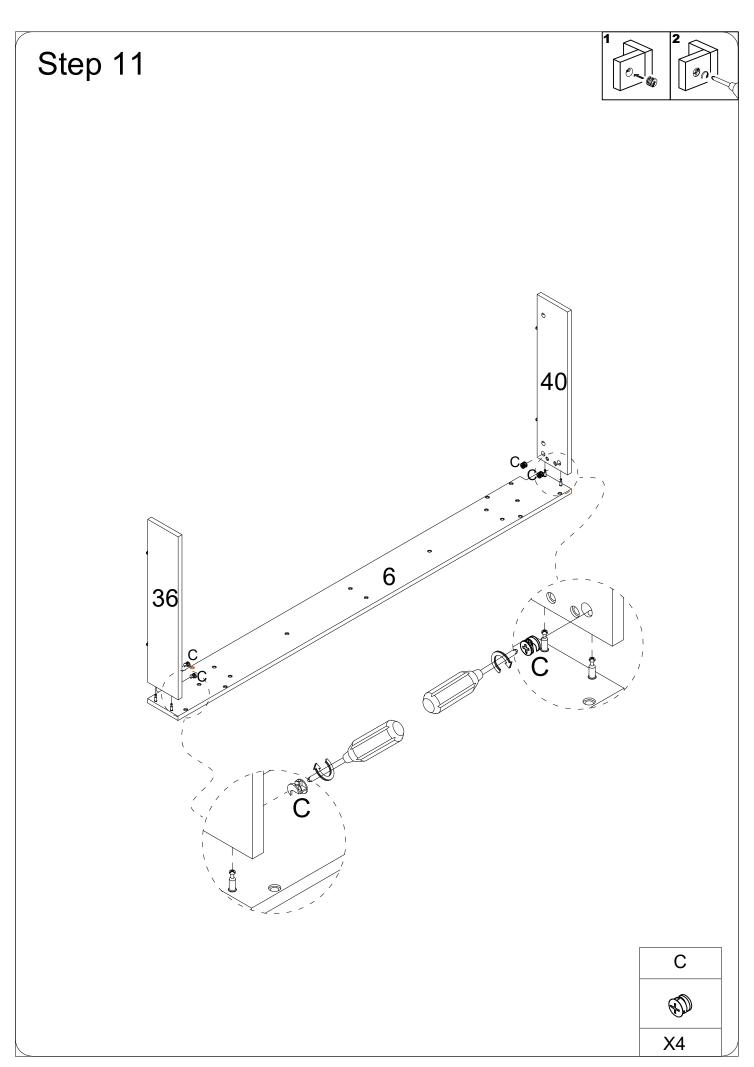

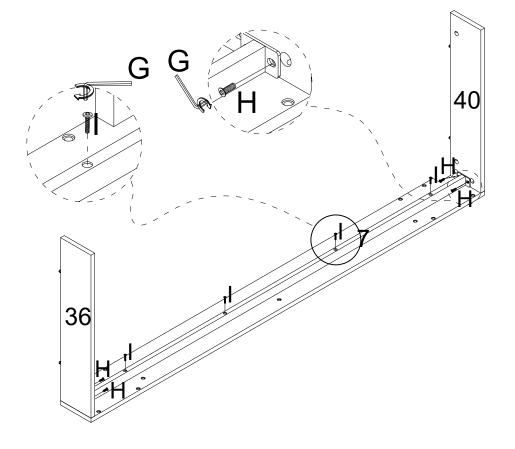


G	I	Н
X1	X4	X4

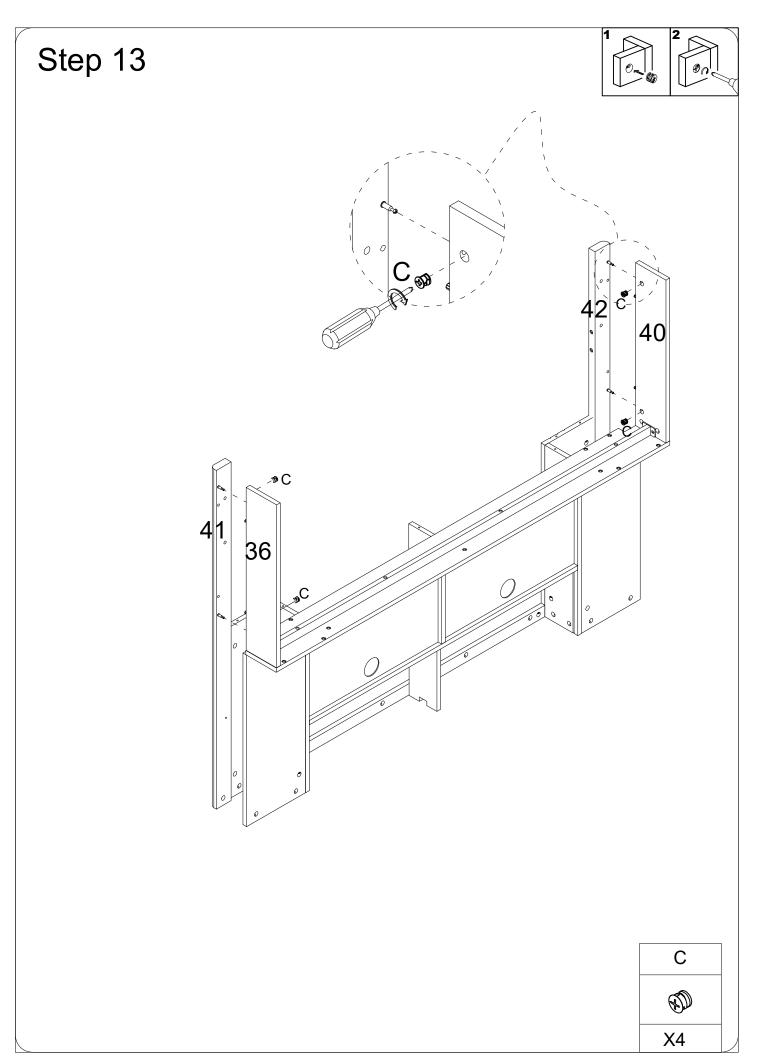


Step 14 G F

X14


X1

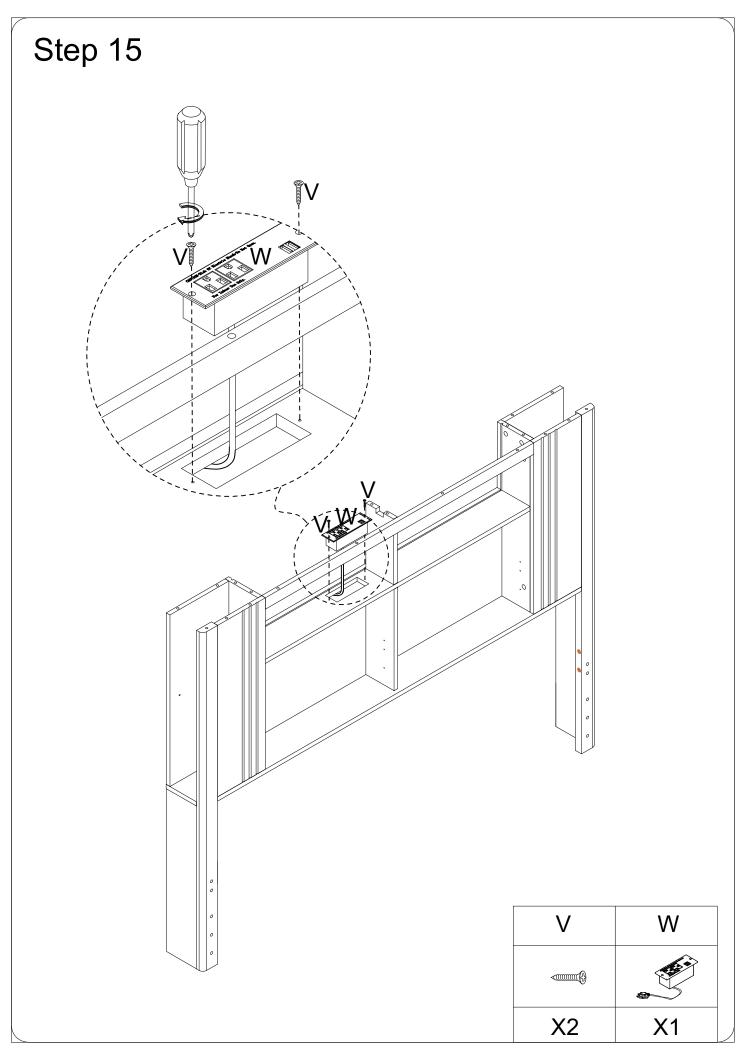

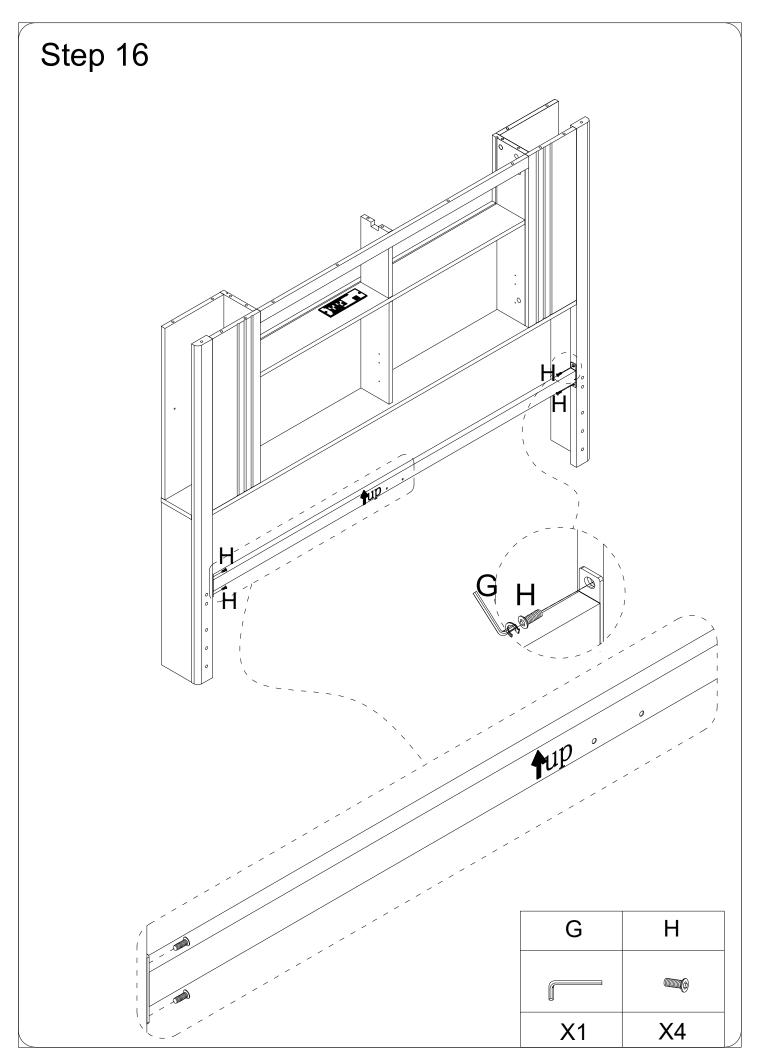



Notice:

- 1.Please take the LED LAMP BELT(X) out from the carton B.
- 2. Remove the backing paper of the LED BELT(X). Stick it to the parts (1). Then use the screw(V) & the metal snap joint (EE) to tighten .

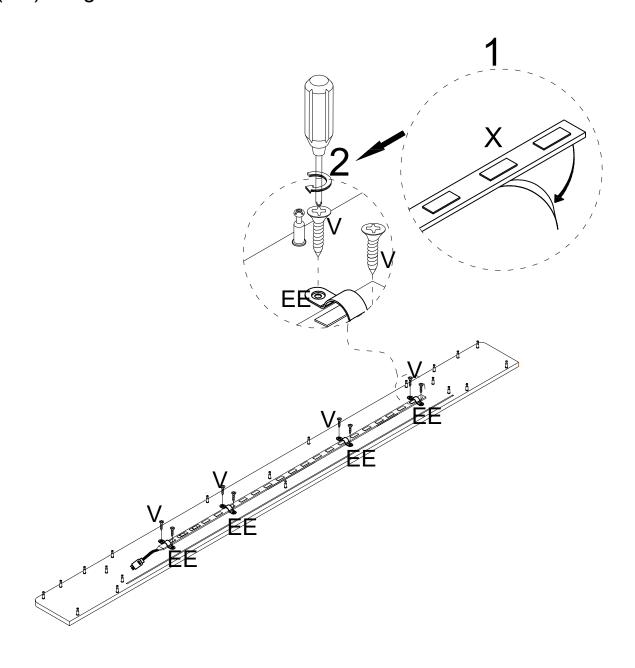



Х	V	EE
	@ <i>mmm></i>	
X1	X8	X4

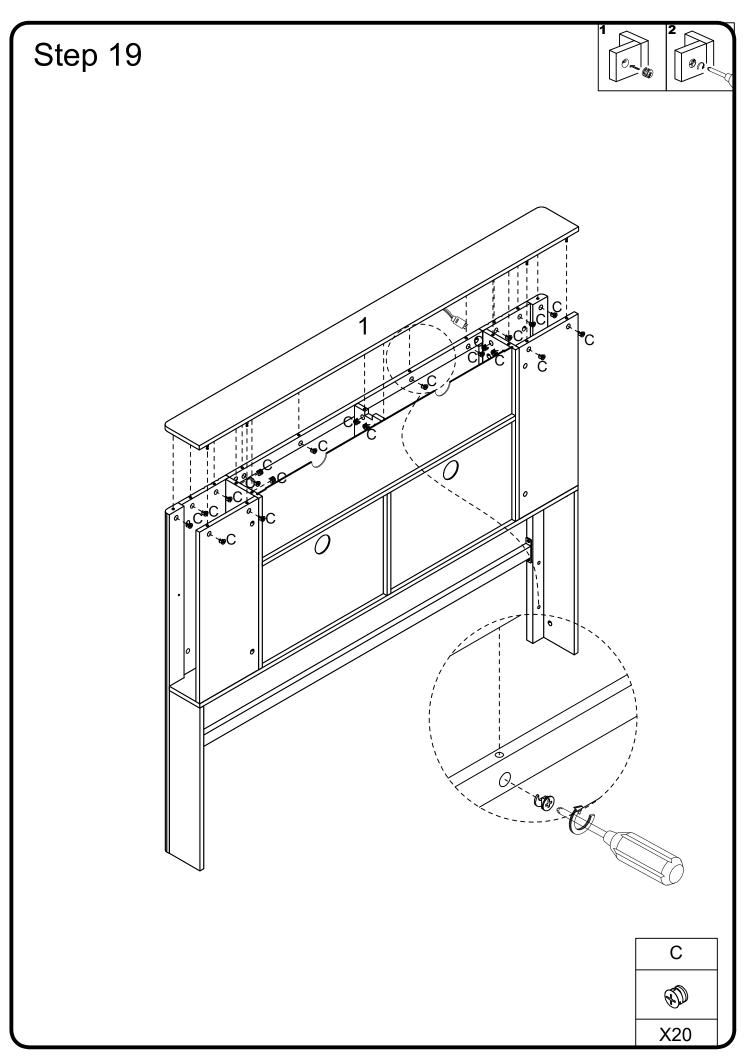


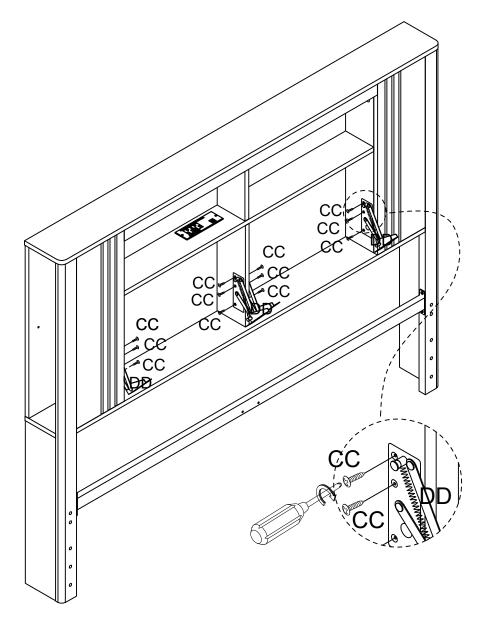



CC	DD
<====(3)	
X12	X4

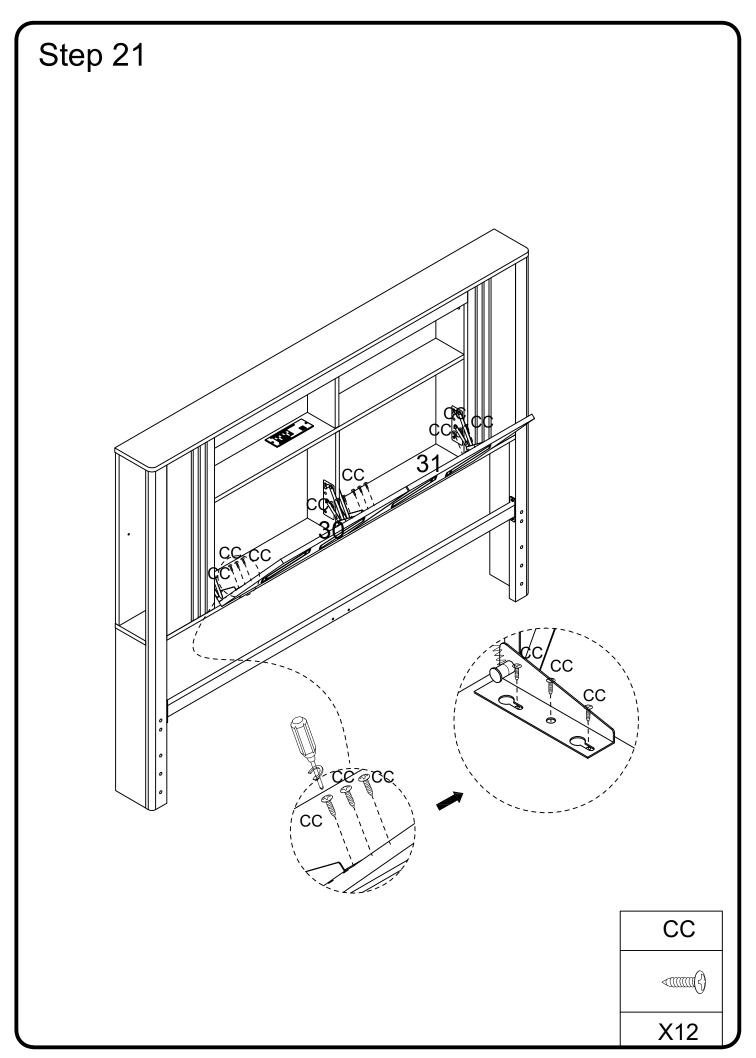


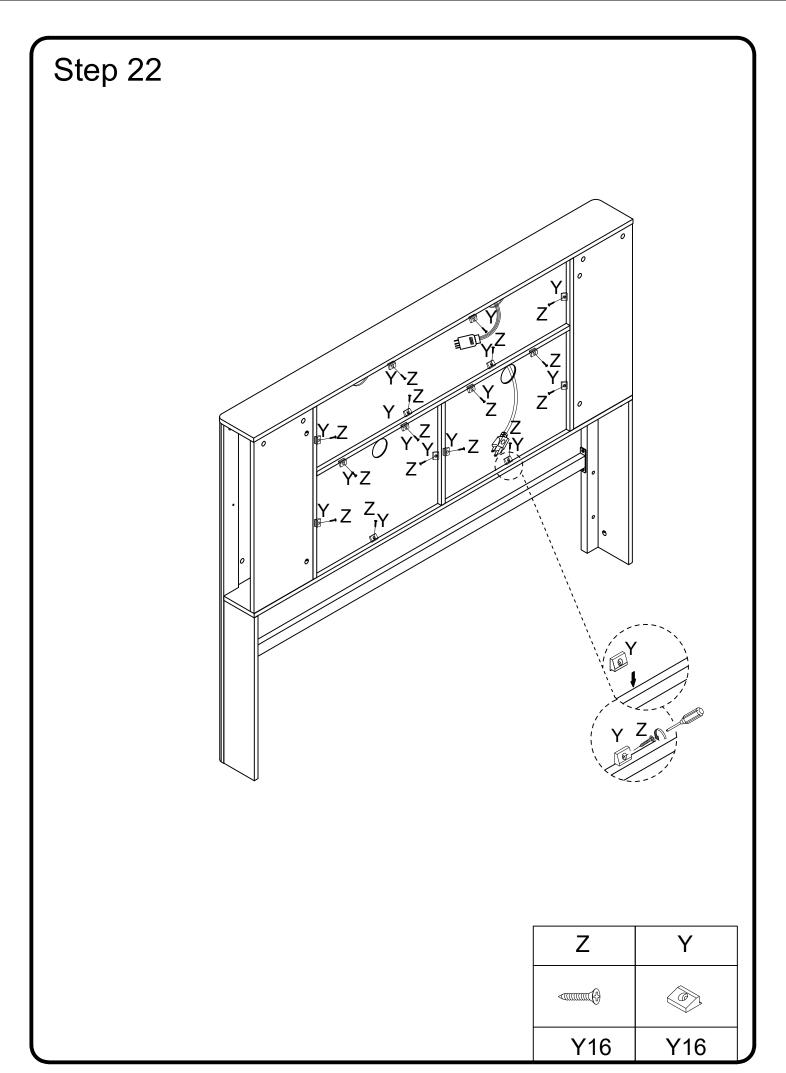


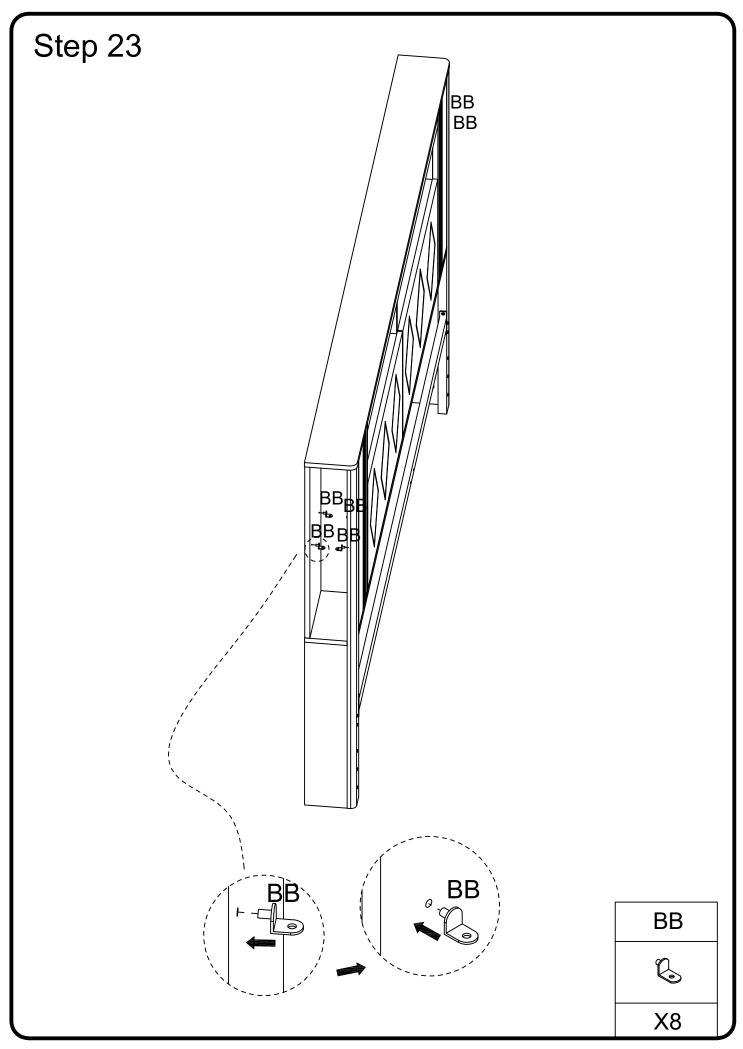


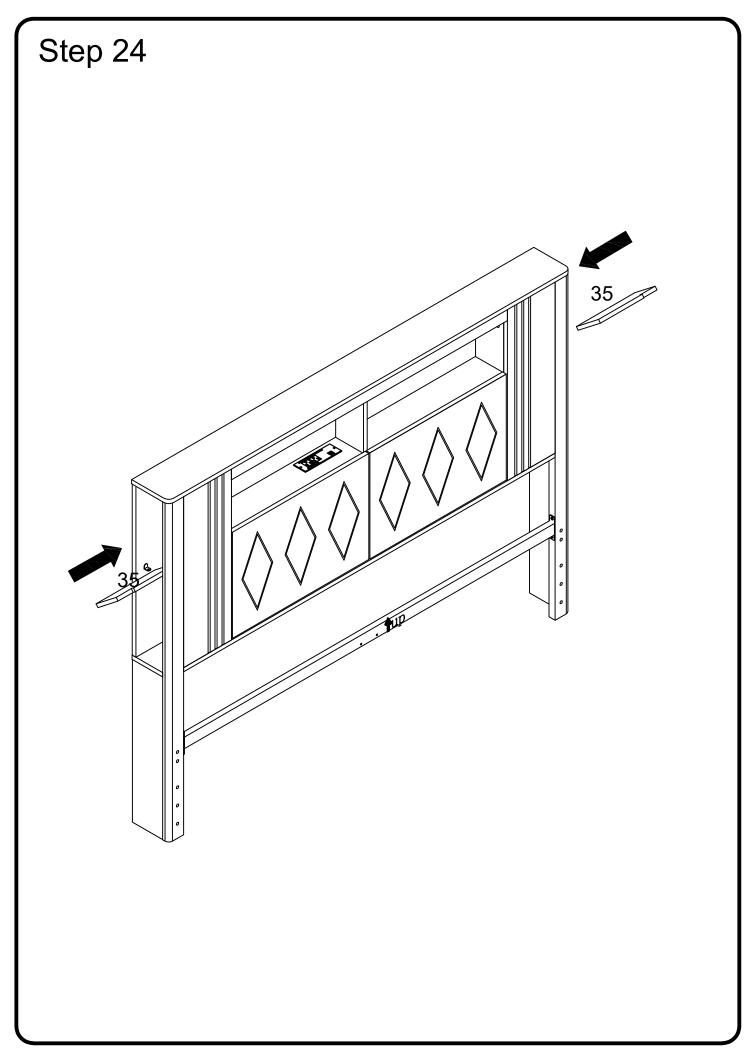


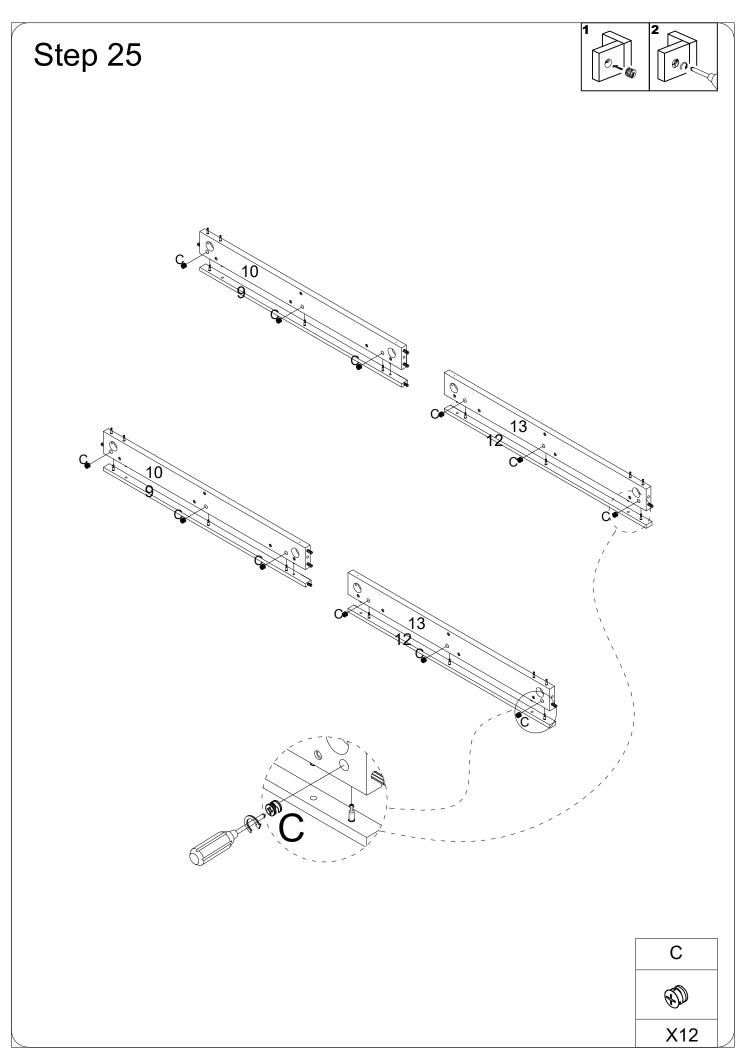


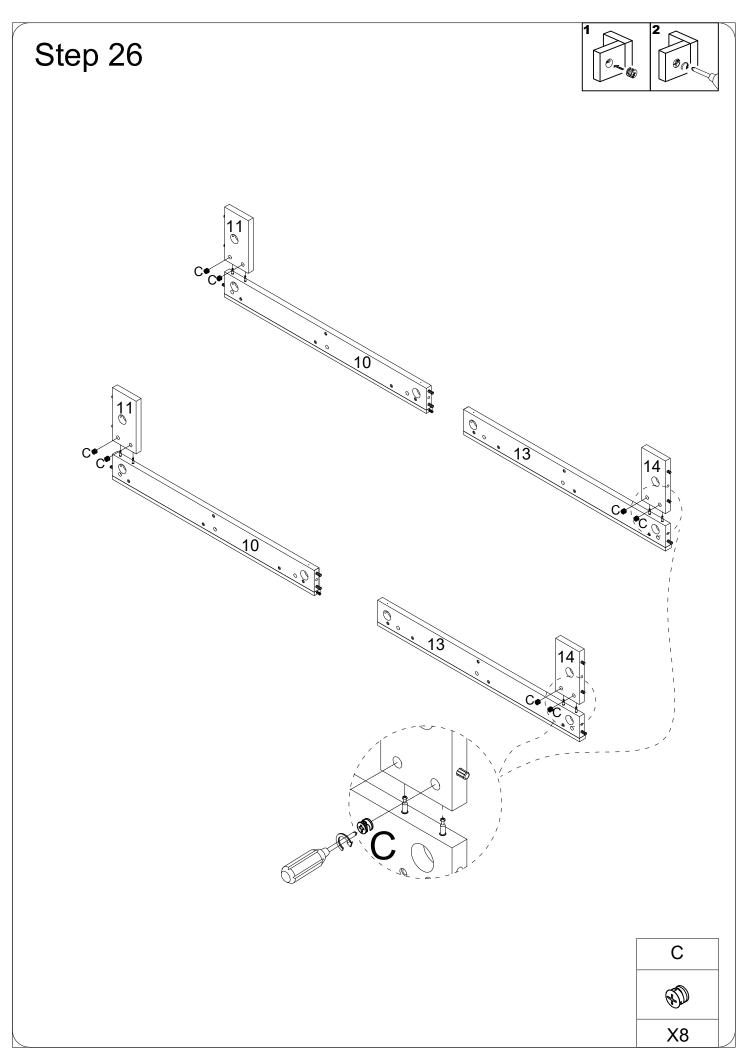


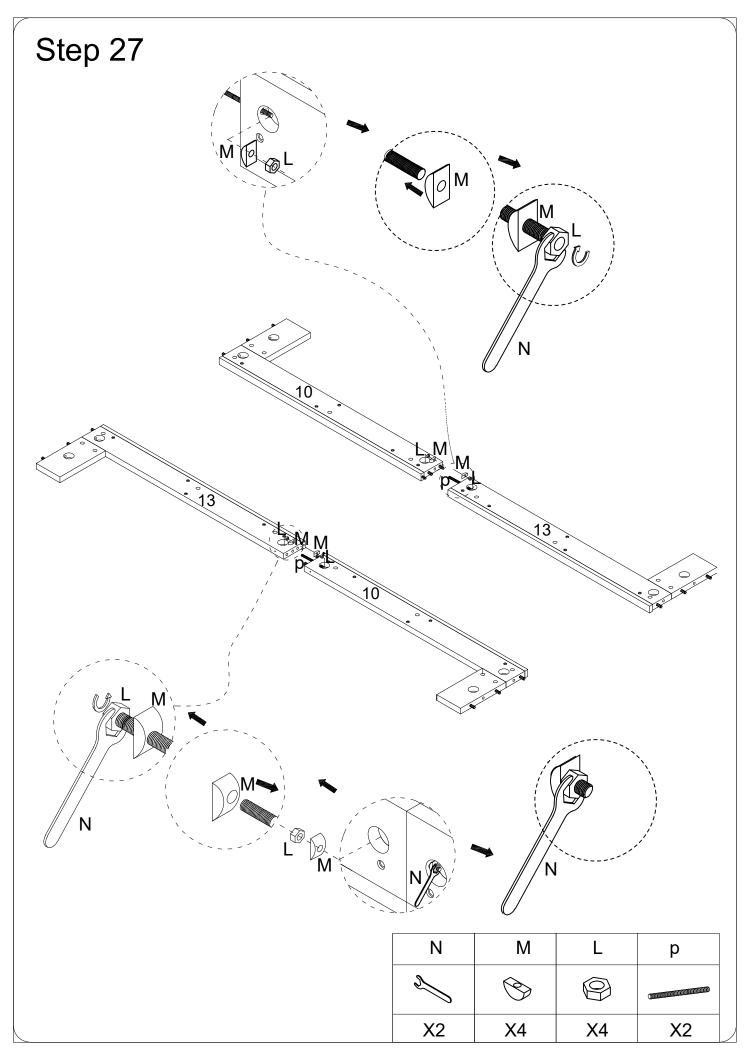


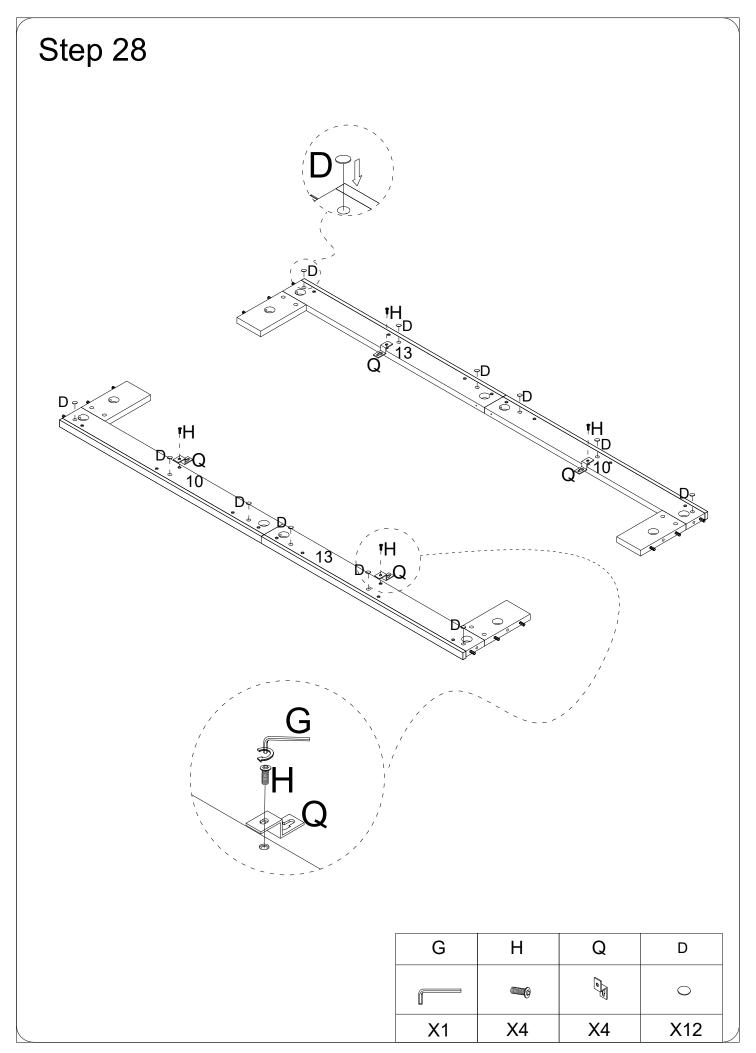


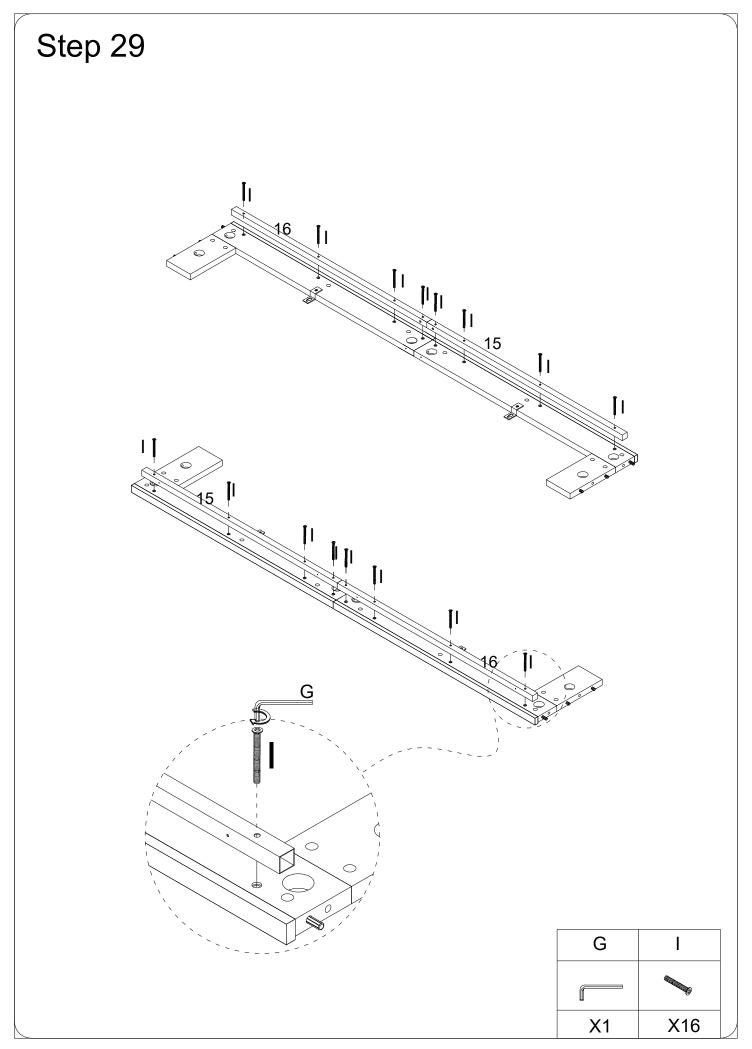


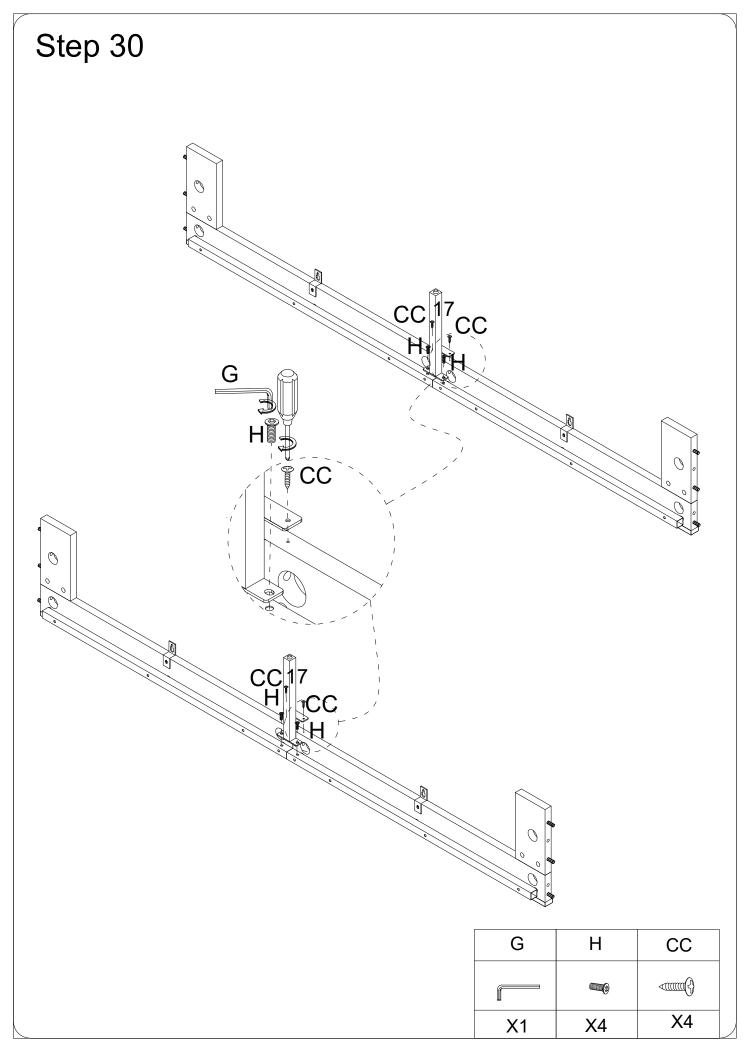


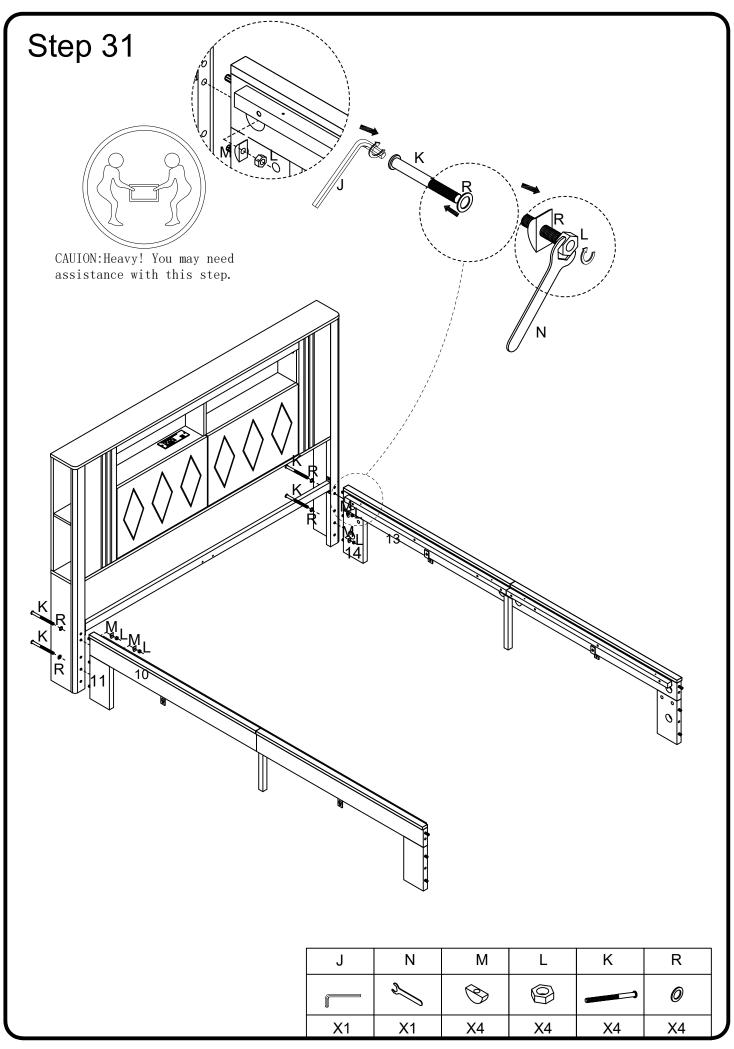


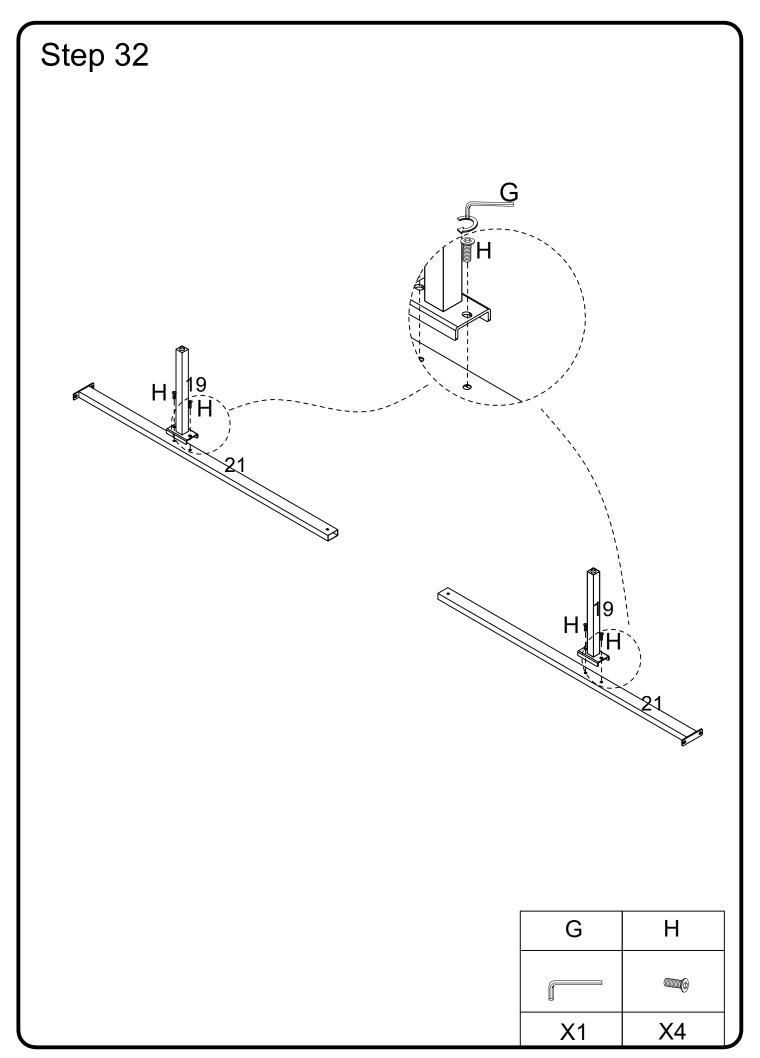


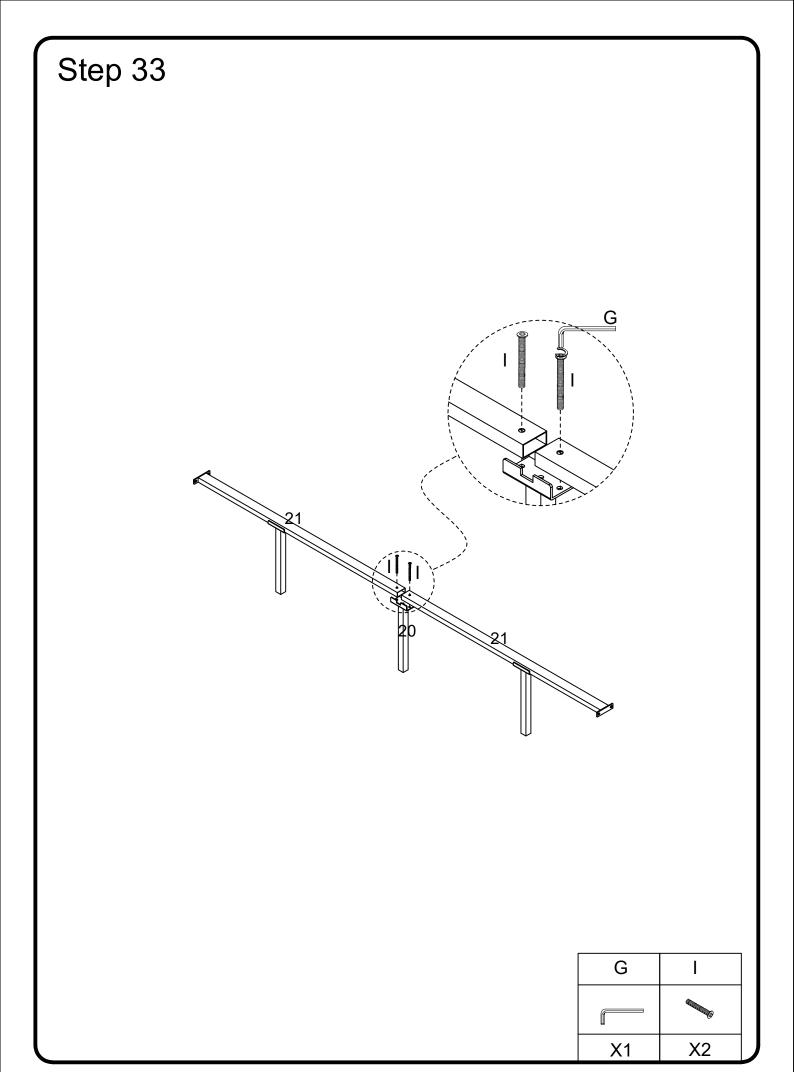


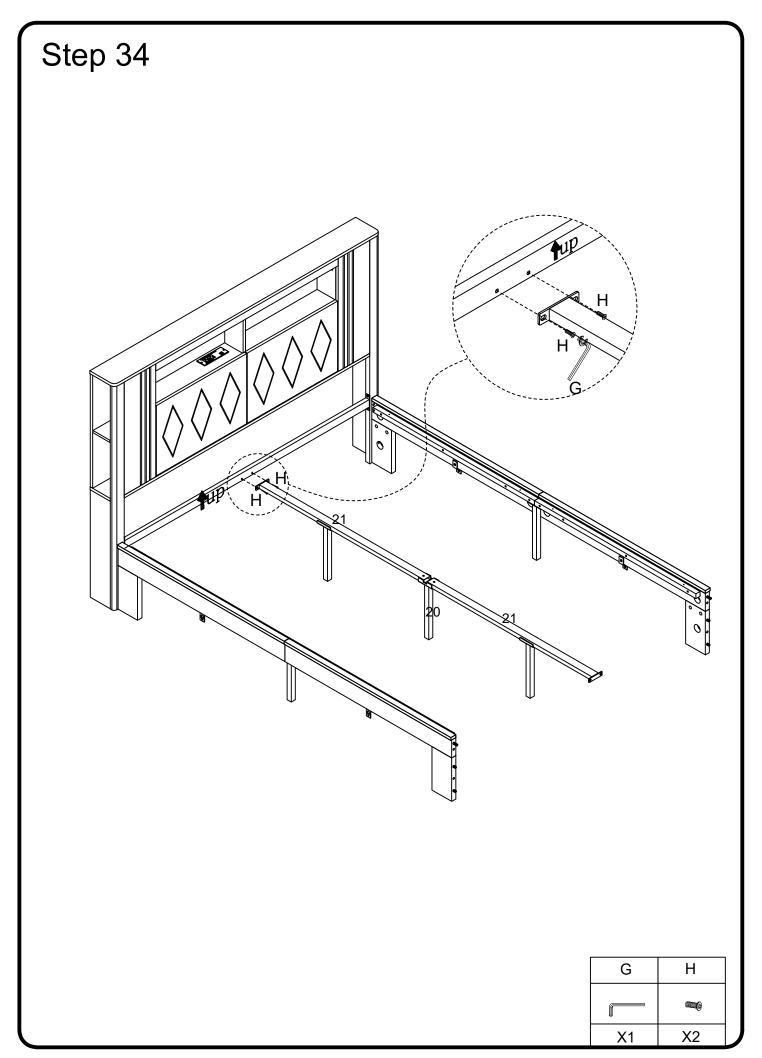


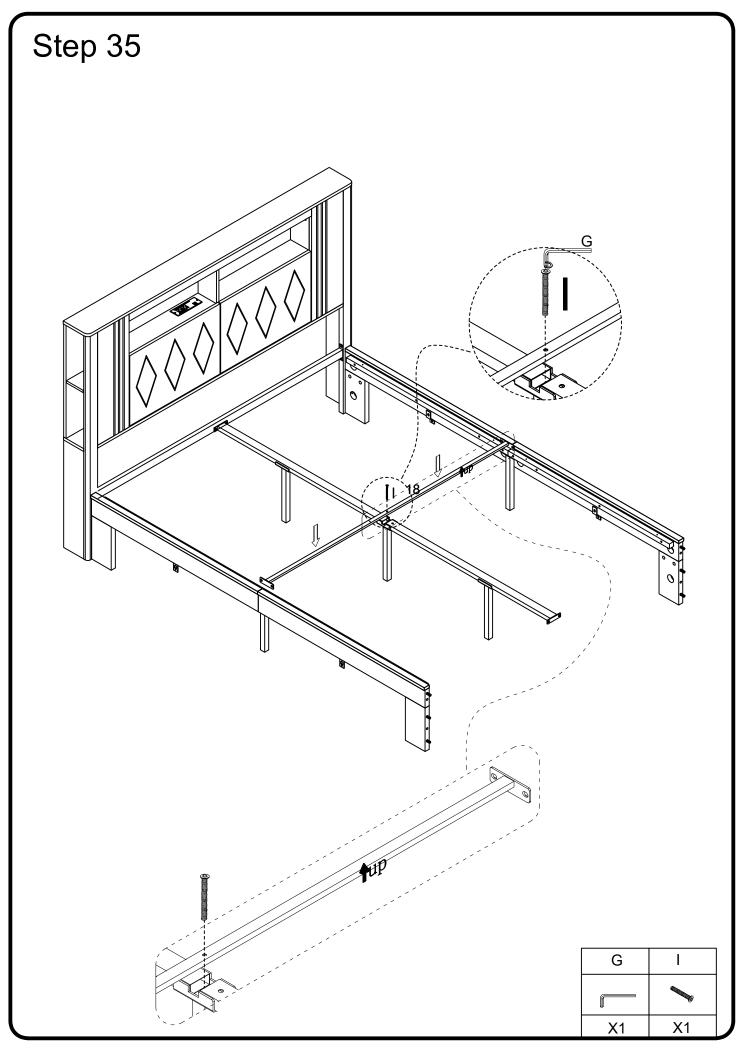

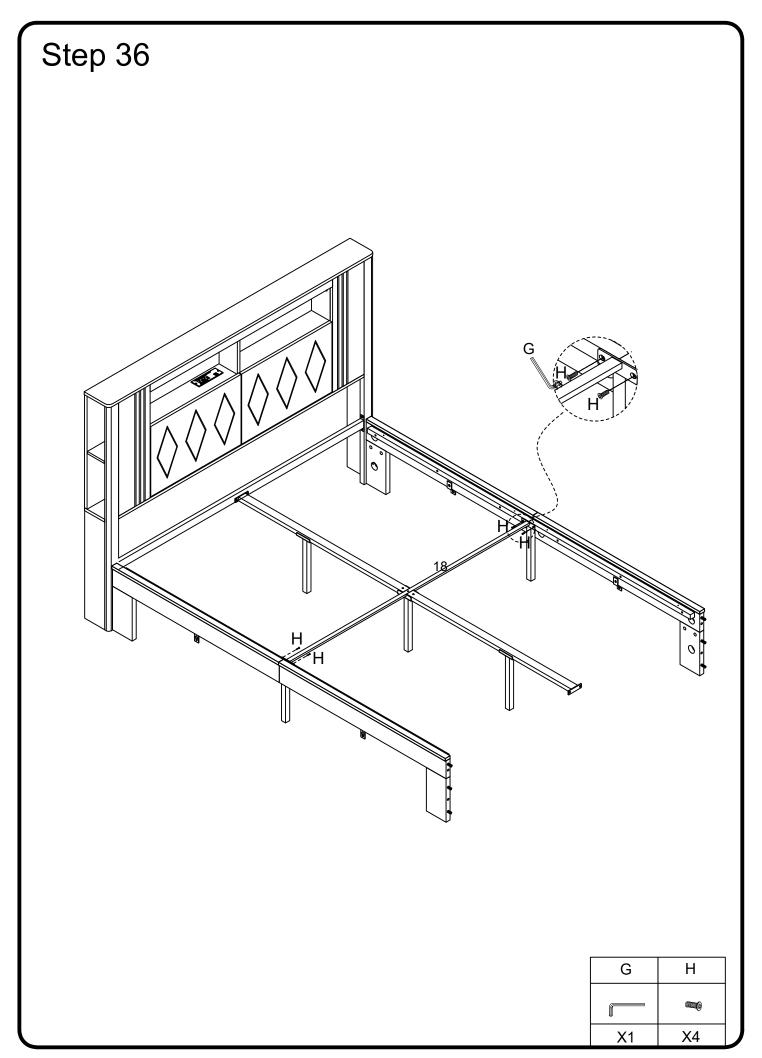

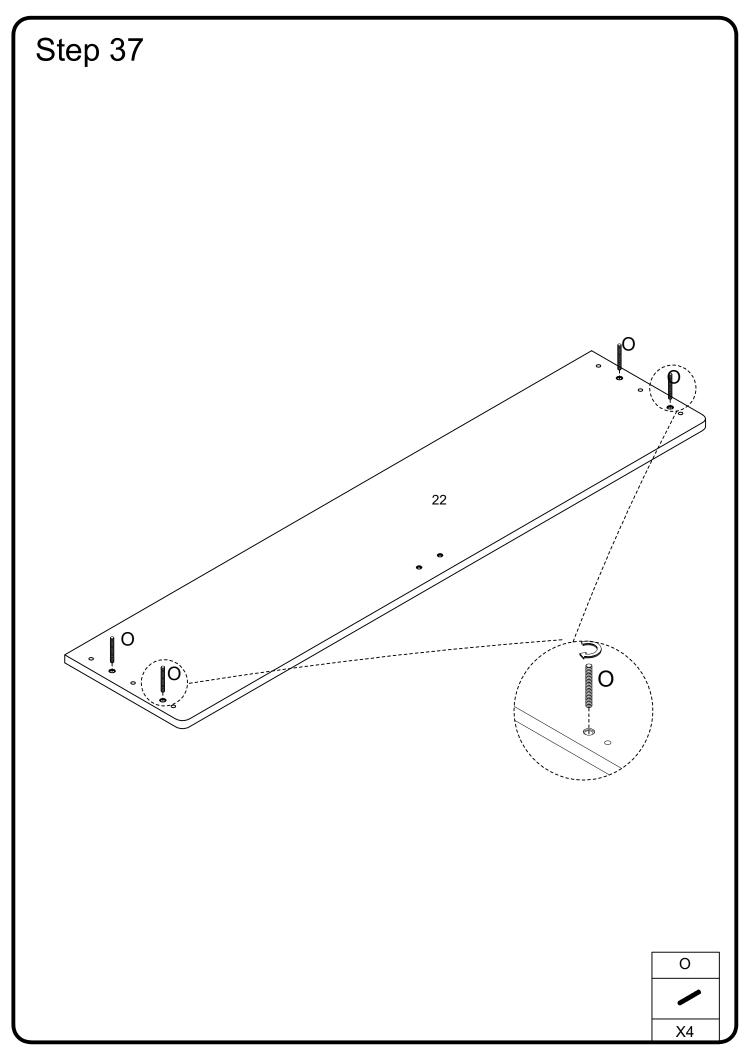

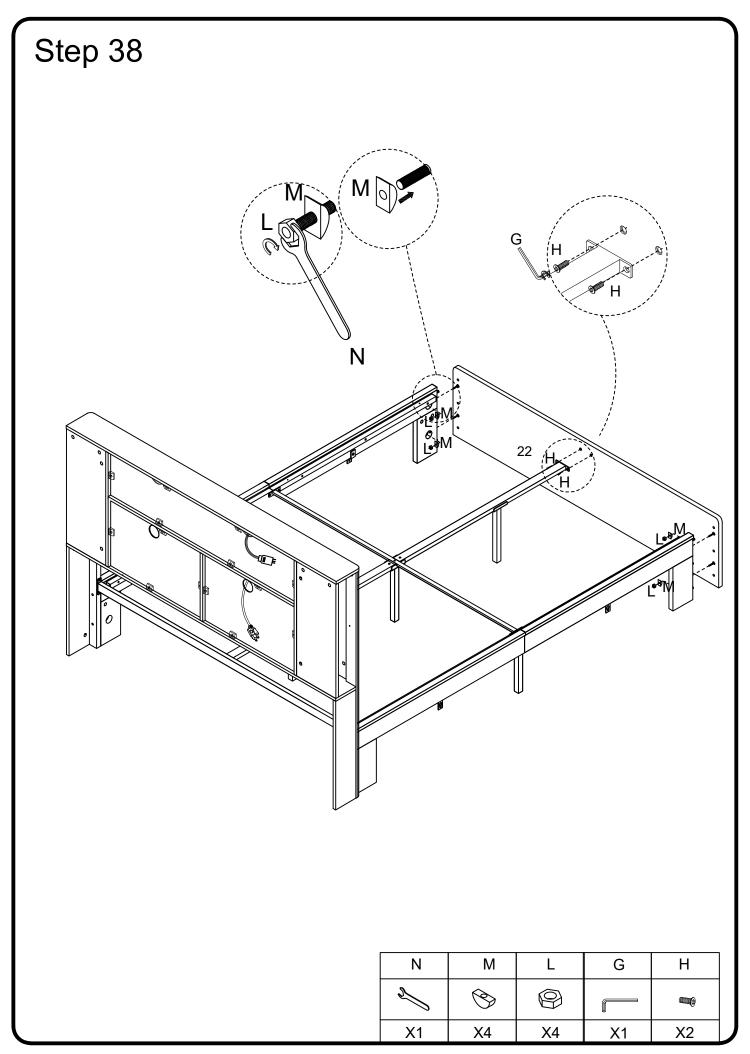


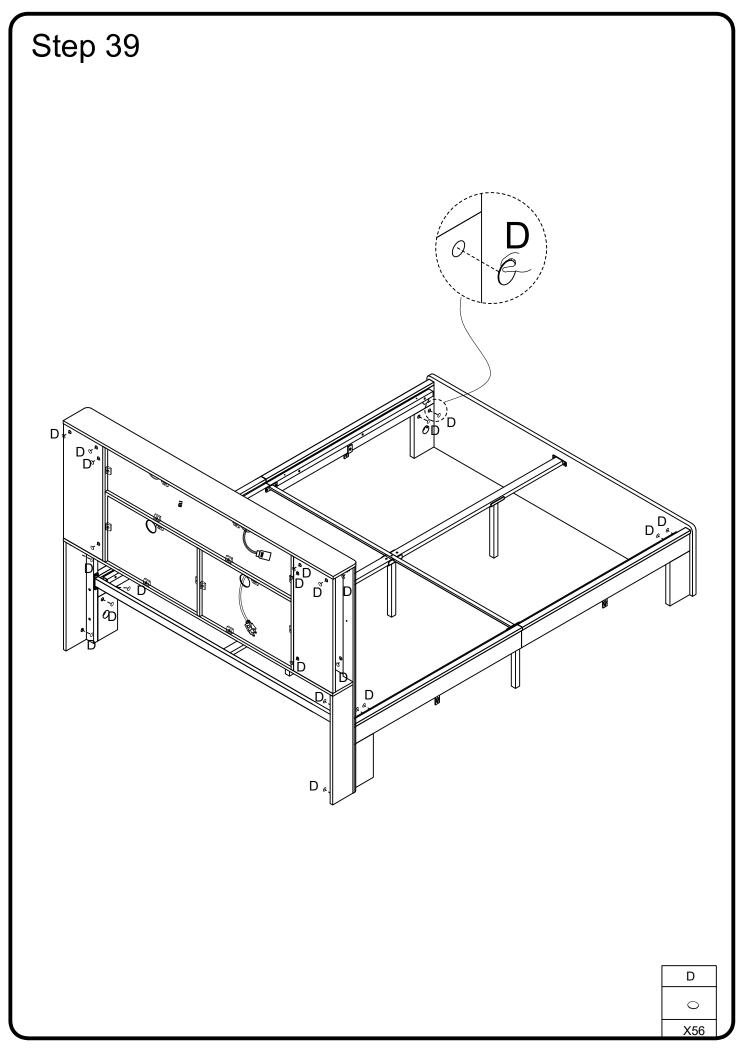


Step 40 **U-2** 25 U-1


X8

Step 41

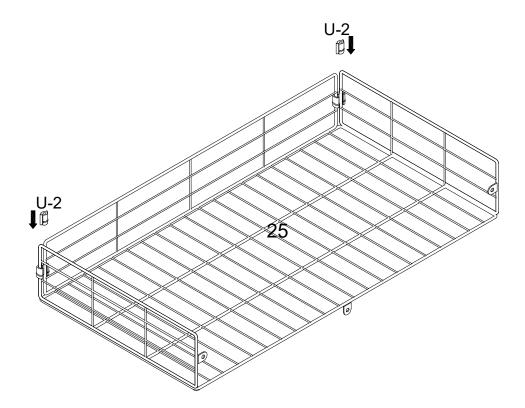


X4




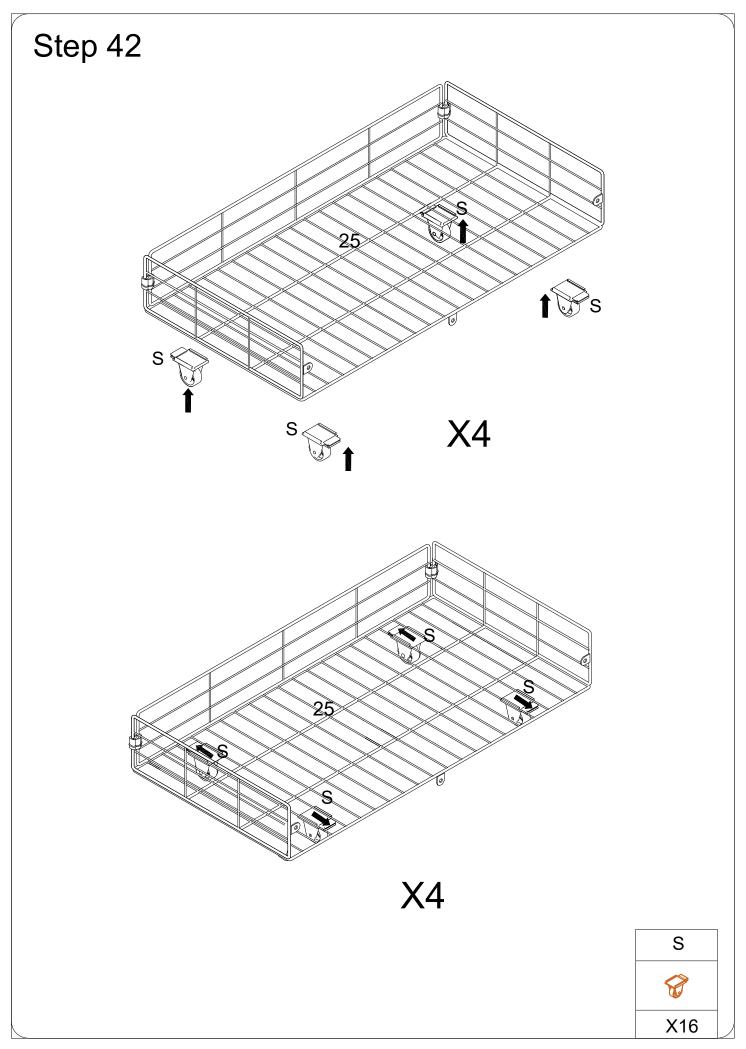


Step 43

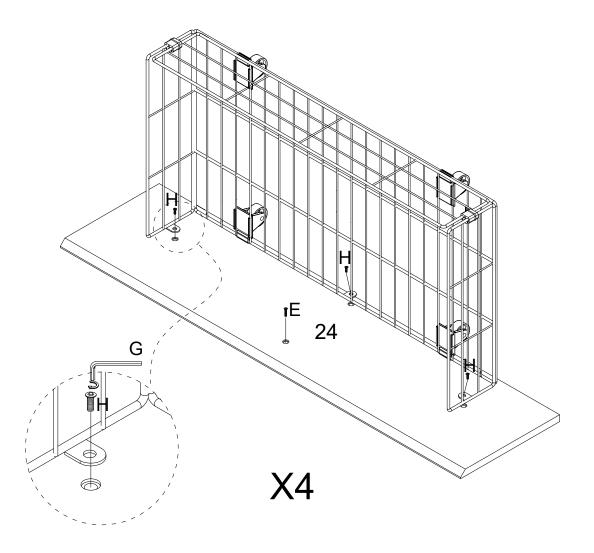

G	Н	Е
X1	X12	X4

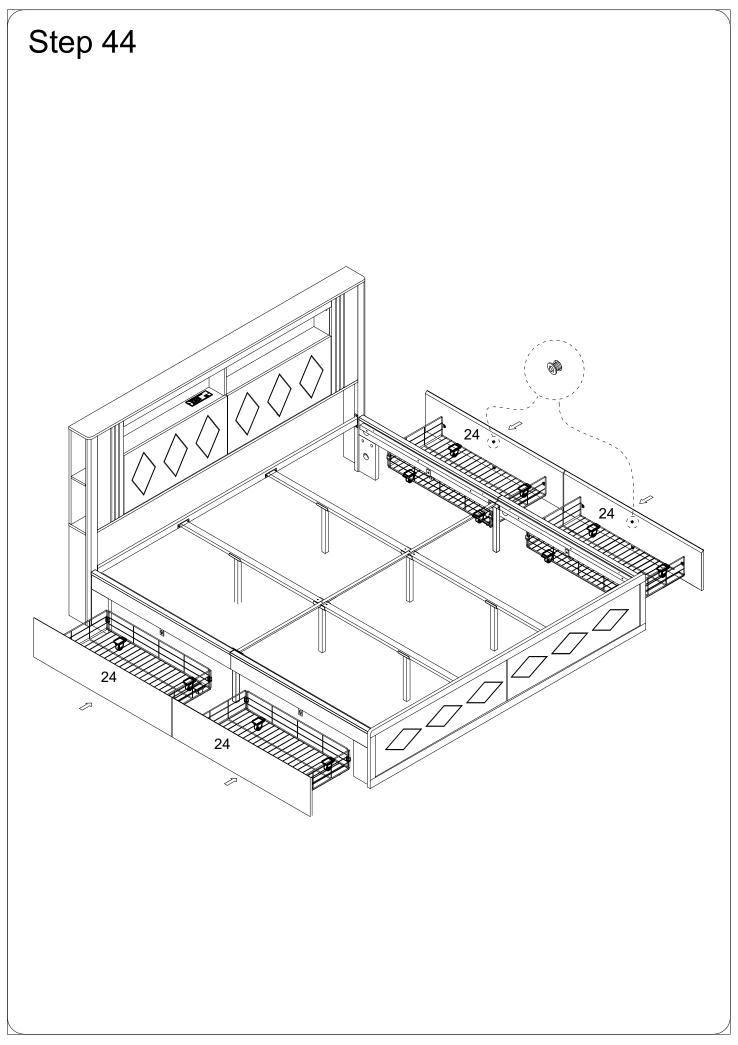

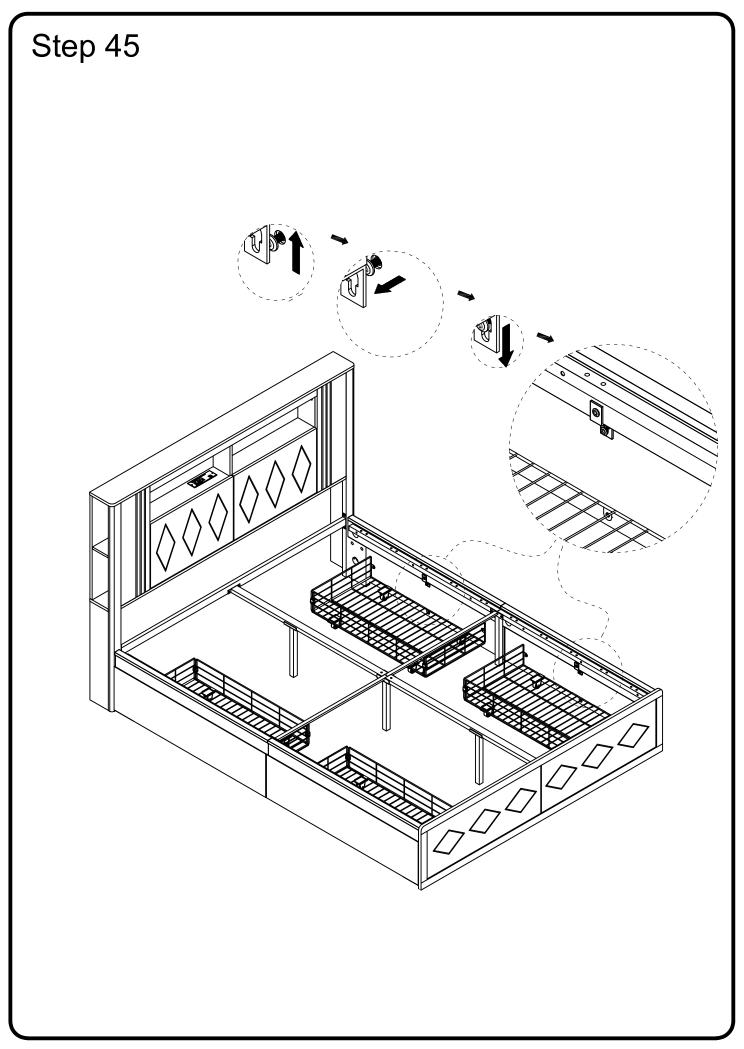

Step 46 23

