


LM084



Scan for Help!

Assembly Guide/Customer Support

Item # : LM084-BD80 Assembly Instructions

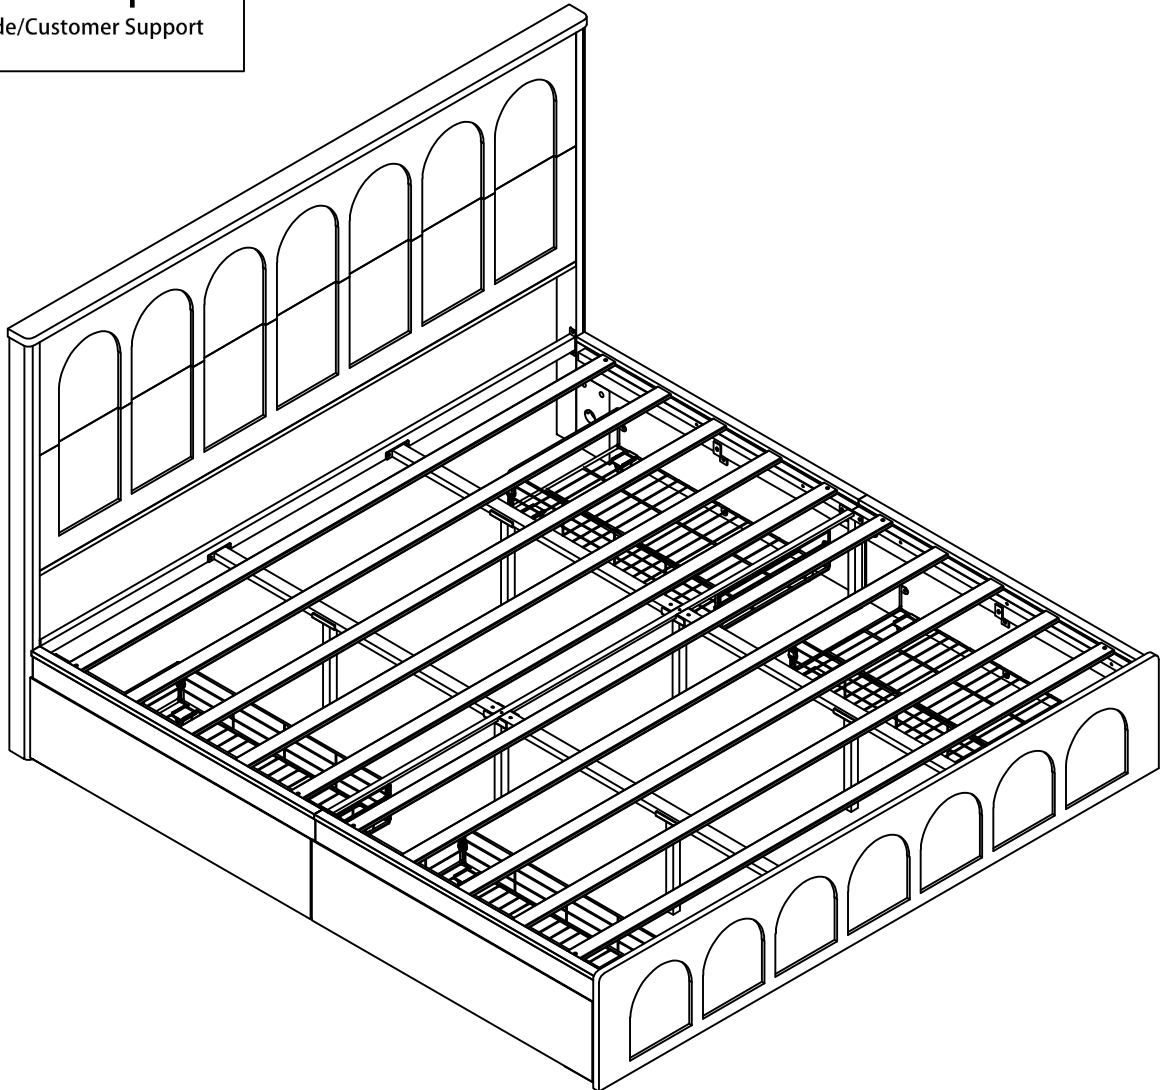


If you have any questions, please follow these steps(“Find Your Orders” - “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revised 03/03/2025

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

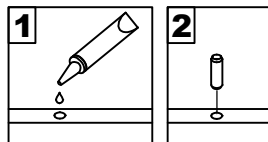


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

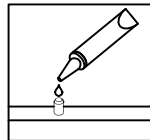


- VI. A Phillips head screwdriver is required for the assembly of this product .

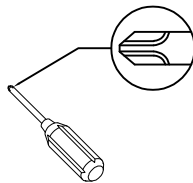


- VII. Power tools should not be used to assemble this product .

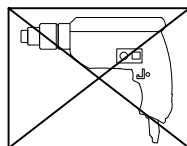



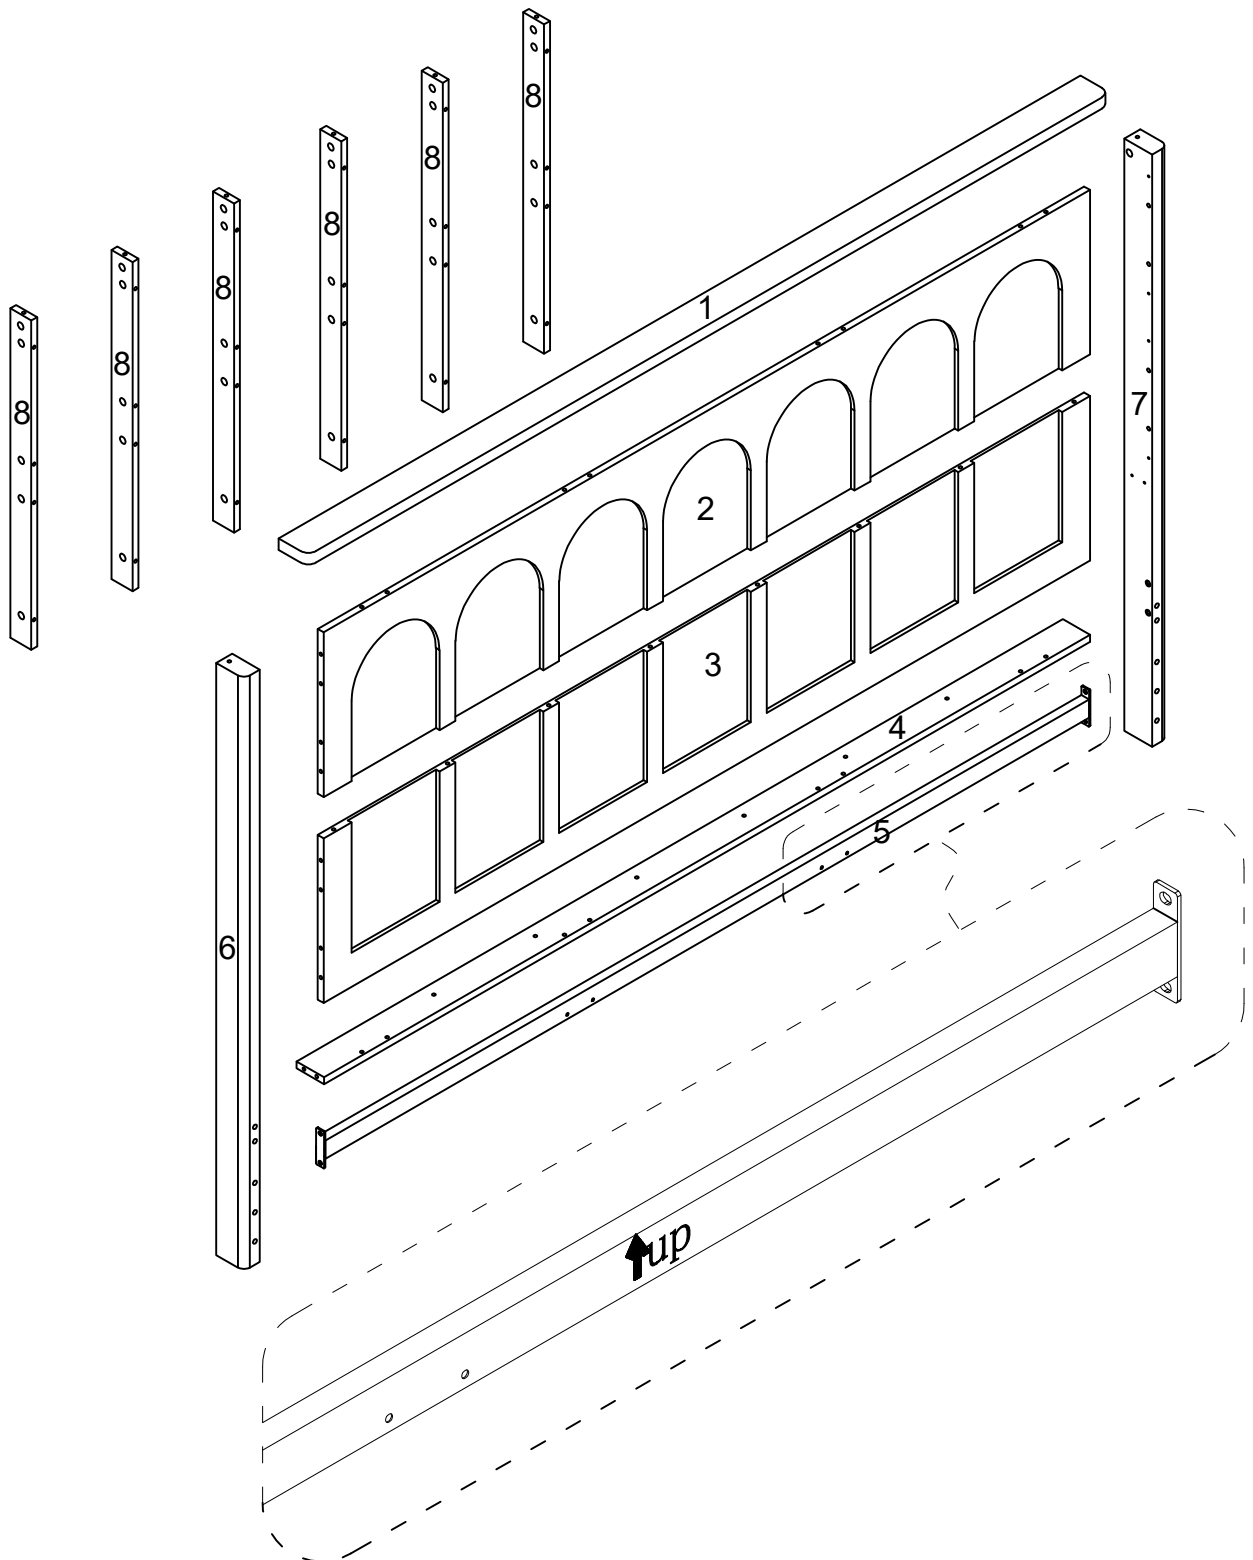




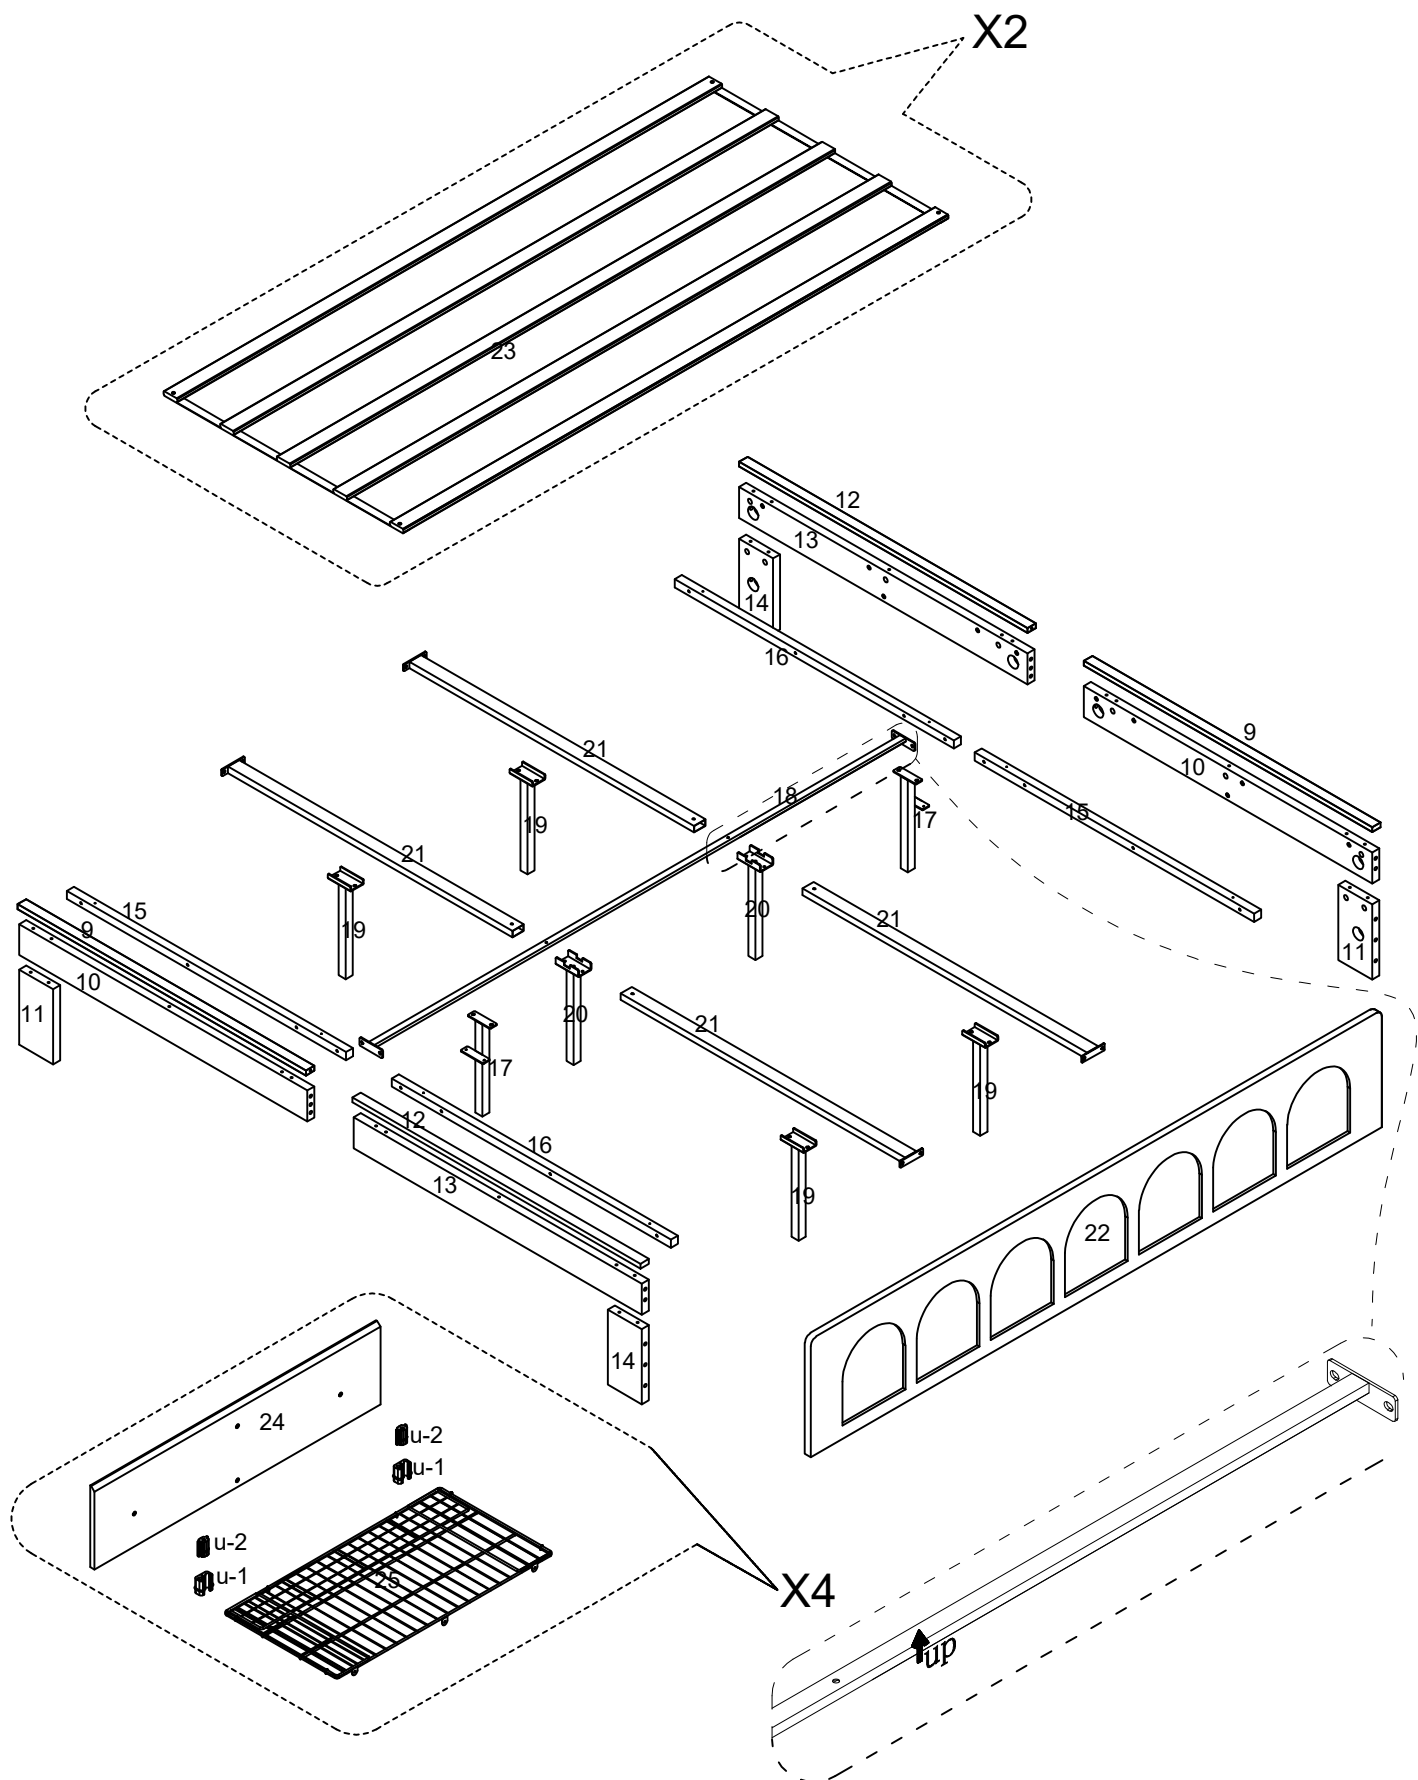



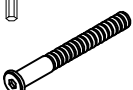




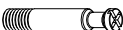

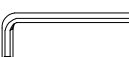





Parts List




Parts List



Hardware List




A		Ø8x30mm	Wooden dowel	34 pcs
GG		Ø10x40mm	Wooden dowel	16 pcs
B		Ø6x32mm	Cam bolt	68 pcs
C		Ø15x11mm	Cam lock	68 pcs
D		Ø30mm	Sticker	68 pcs
E		M6*20mm	Bolt	4 pcs
F		Ø6x50mm	Screw	10 pcs
G		M 4	Hex Key	1 pc
H		M6*12mm	Bolt	40 pcs
I		M6*40mm	Bolt	22 pcs
J		M 5	Hex Key	1 pc
K		M8*115mm	Bolt	4 pcs
L		Ø5/16in	Nut	12 pcs
M		Ø5/16in	Arc-shaped washer	12 pcs
N		Ø5/16in	Wrench	2 pc
O		Ø8x60mm	Bolt	4 pcs
P		Ø8x100mm	Bolt	2 pcs
Q			Metal plate	4 pcs
R		M8x14mm	flat washer	4 pcs
S			Wheel	16 pcs
T		Ø4x20mm	Screw	8 pcs
U			Drawer locker set	8 sets
V		Ø5x12mm	Screw	4 pcs
W			Glue tube	2 pcs

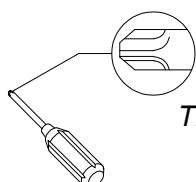

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

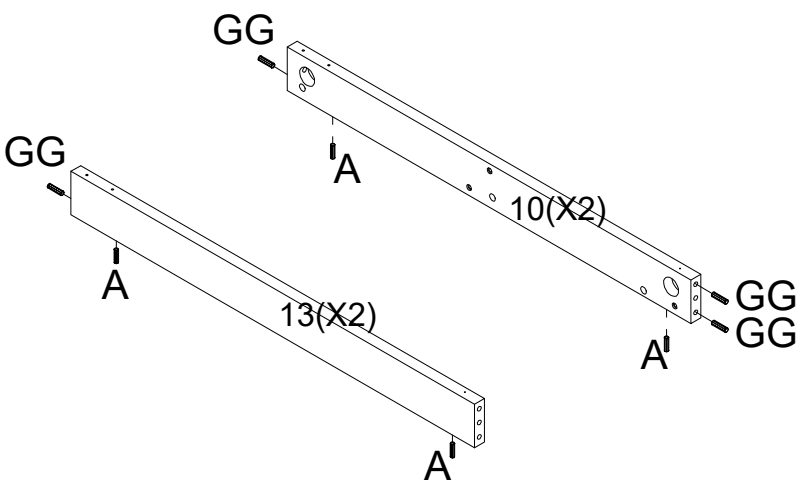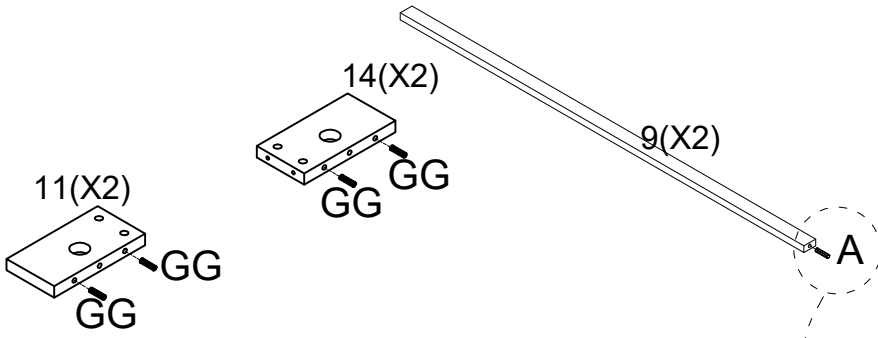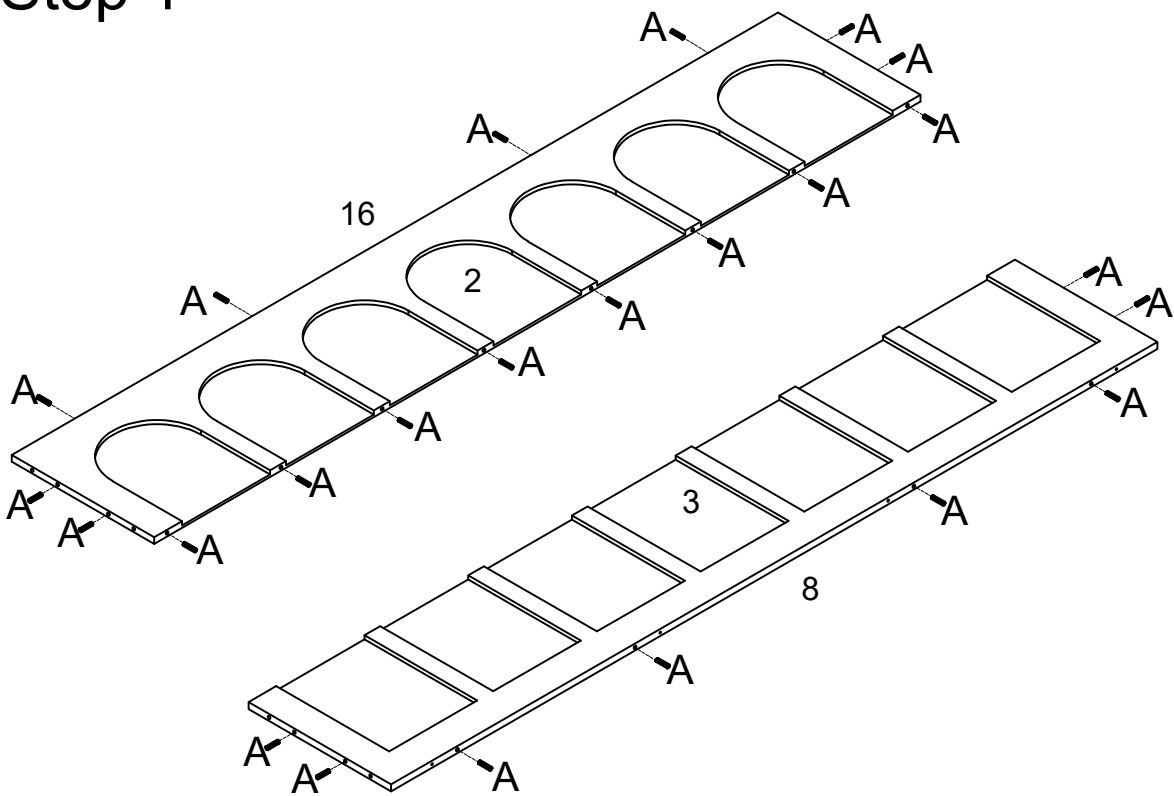


GG	A
X16	X34

Step 2


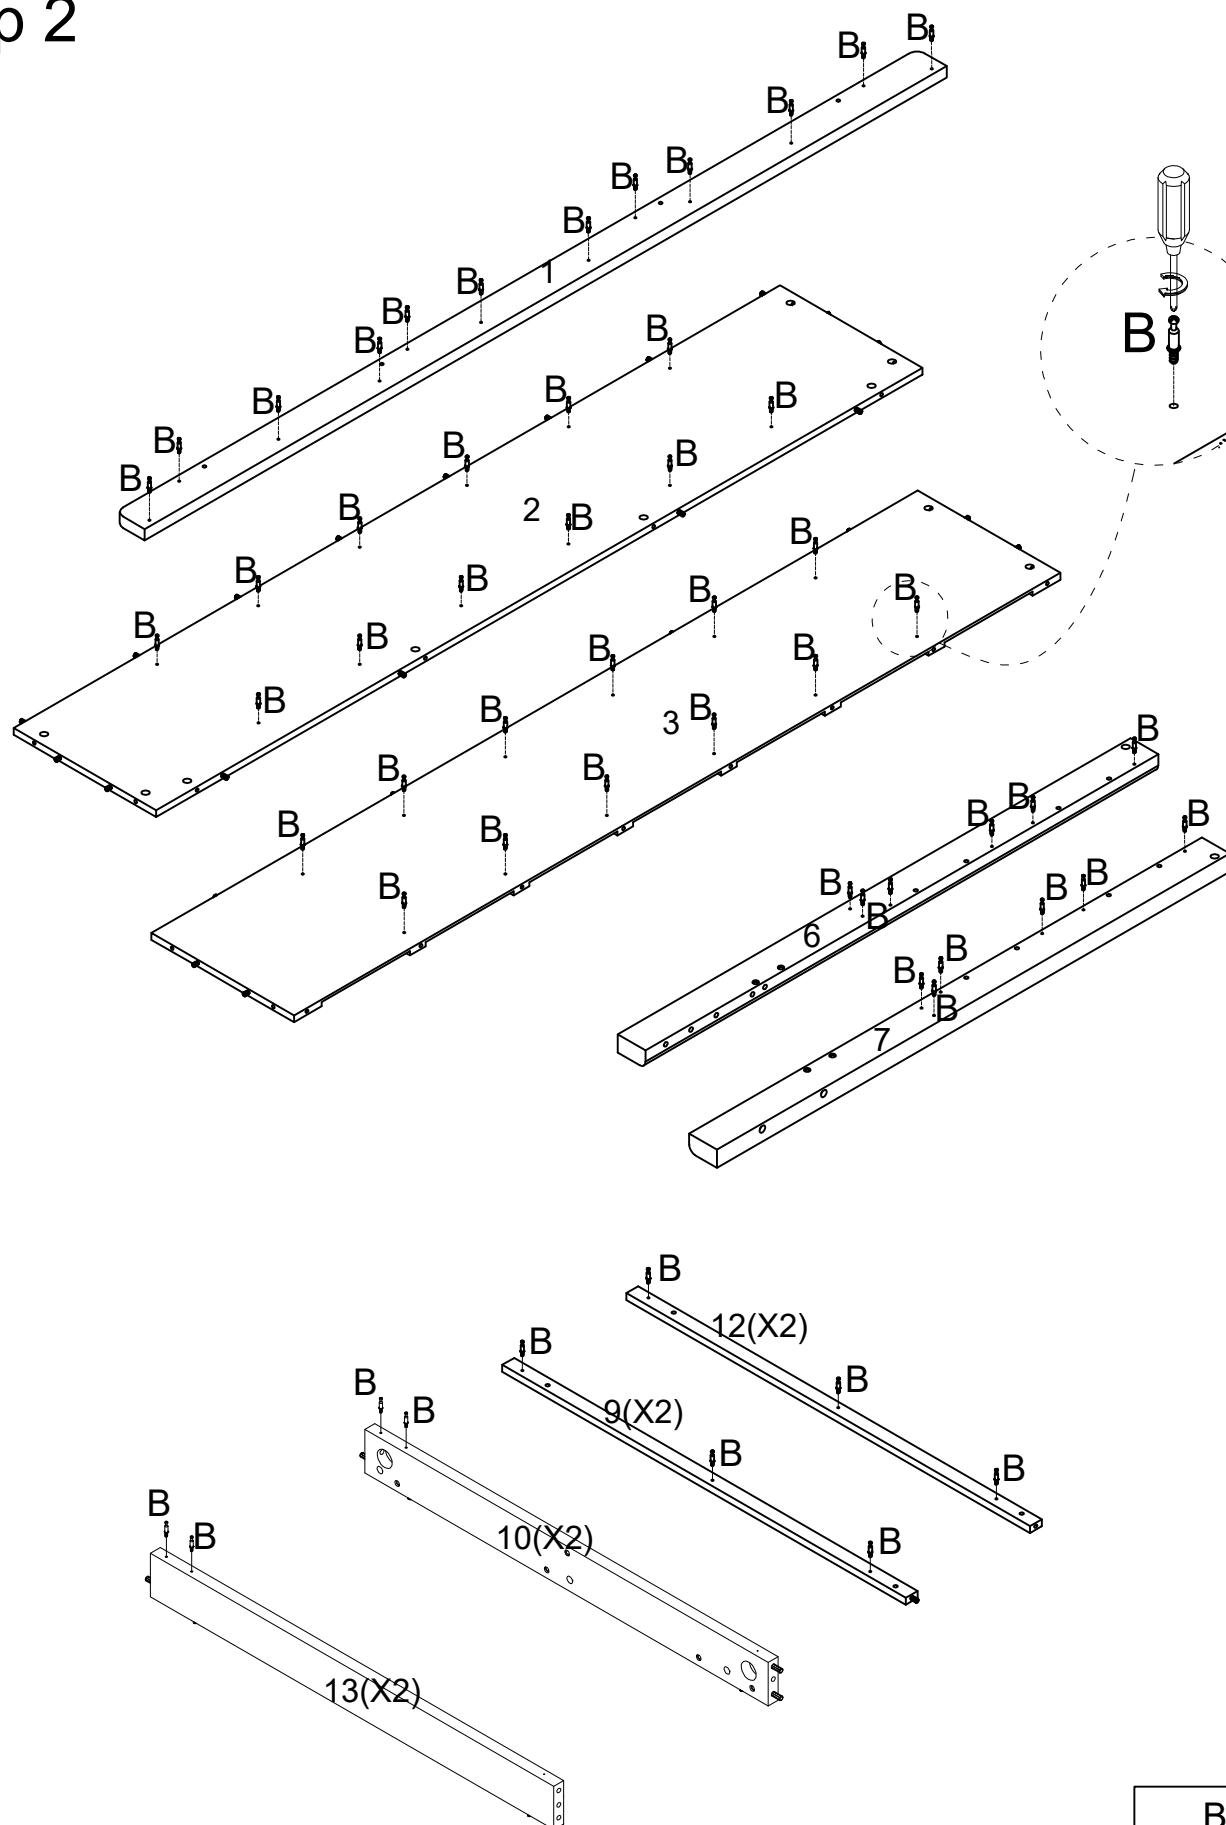



B

X68

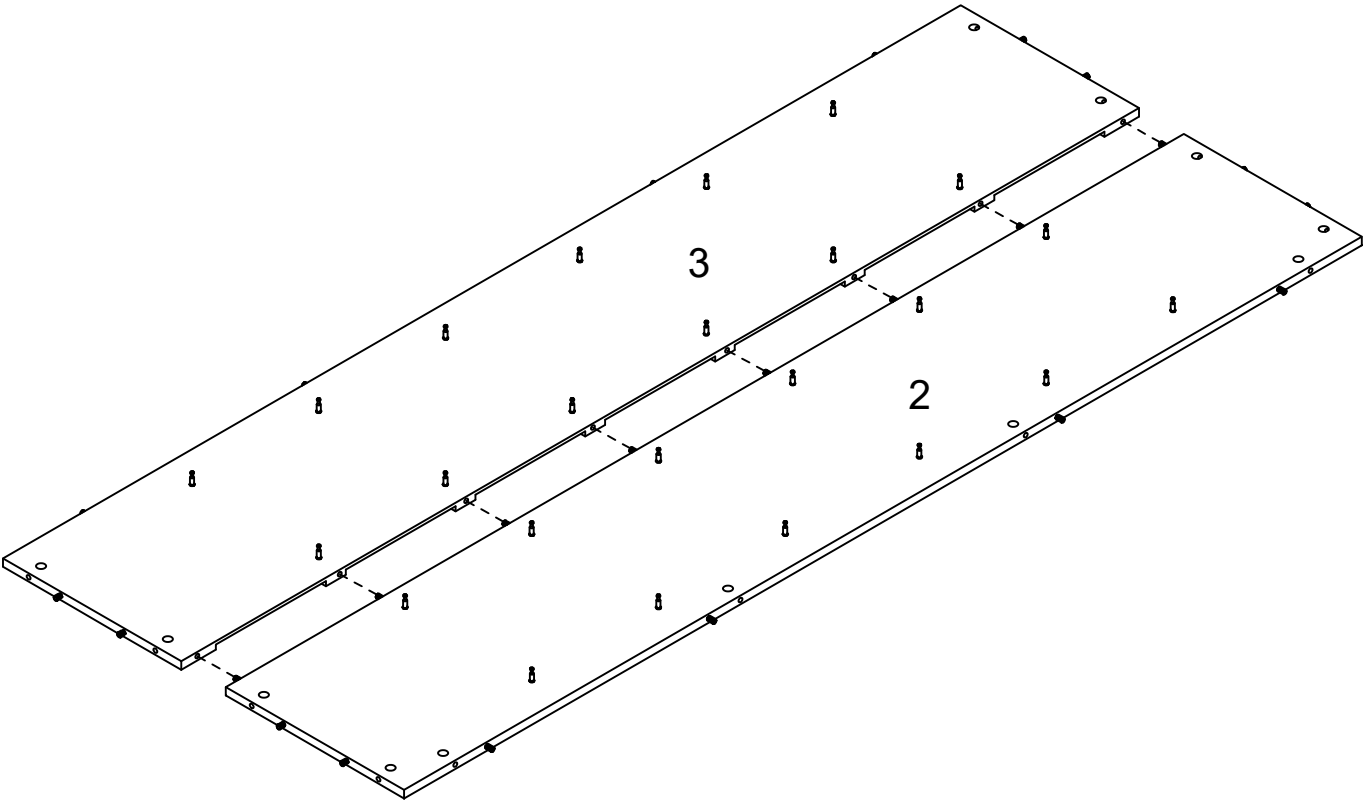Step 3

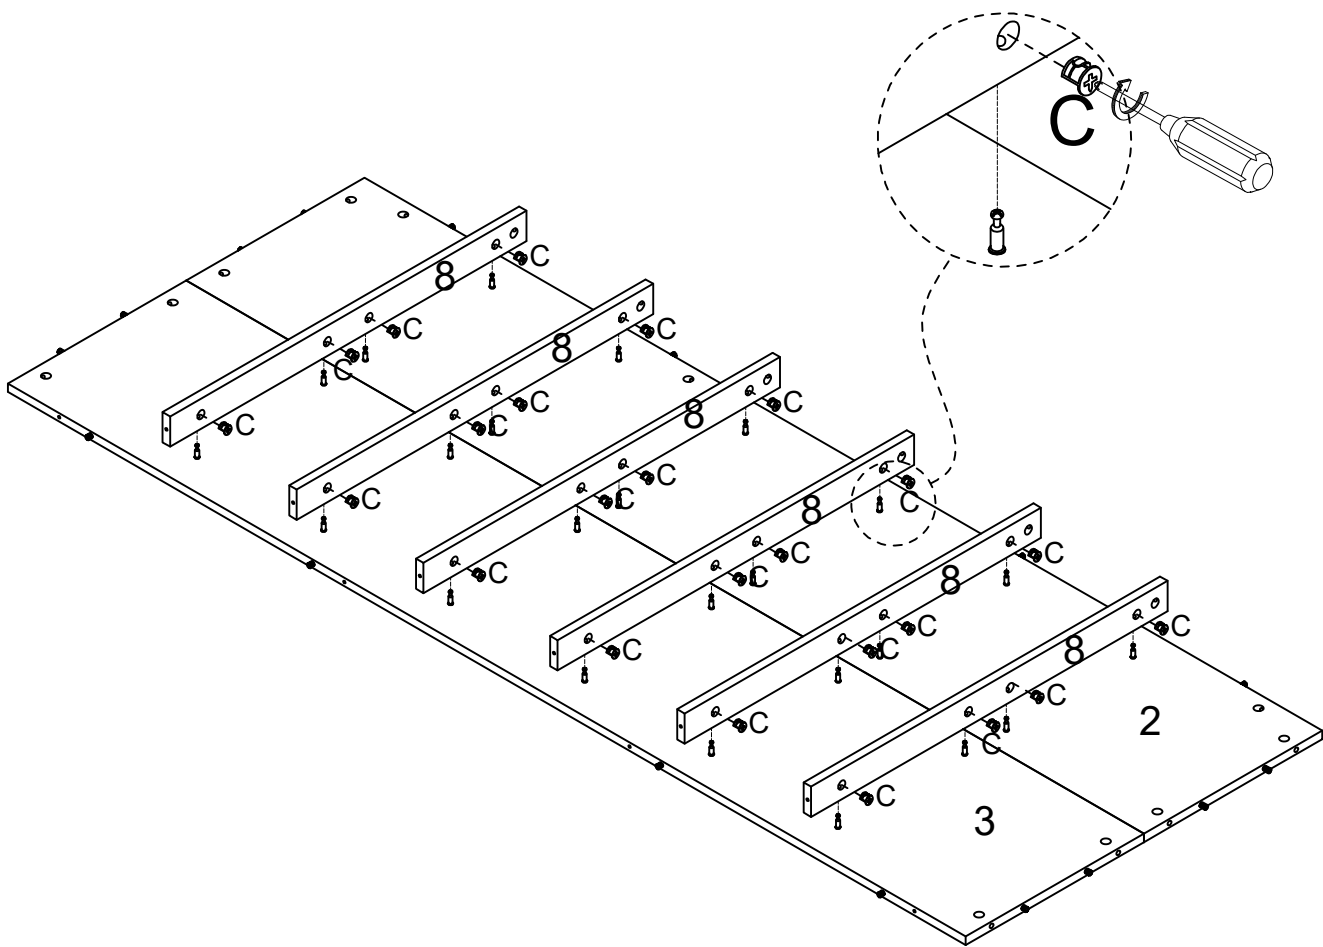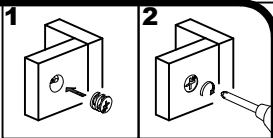




Step 4





C

X24

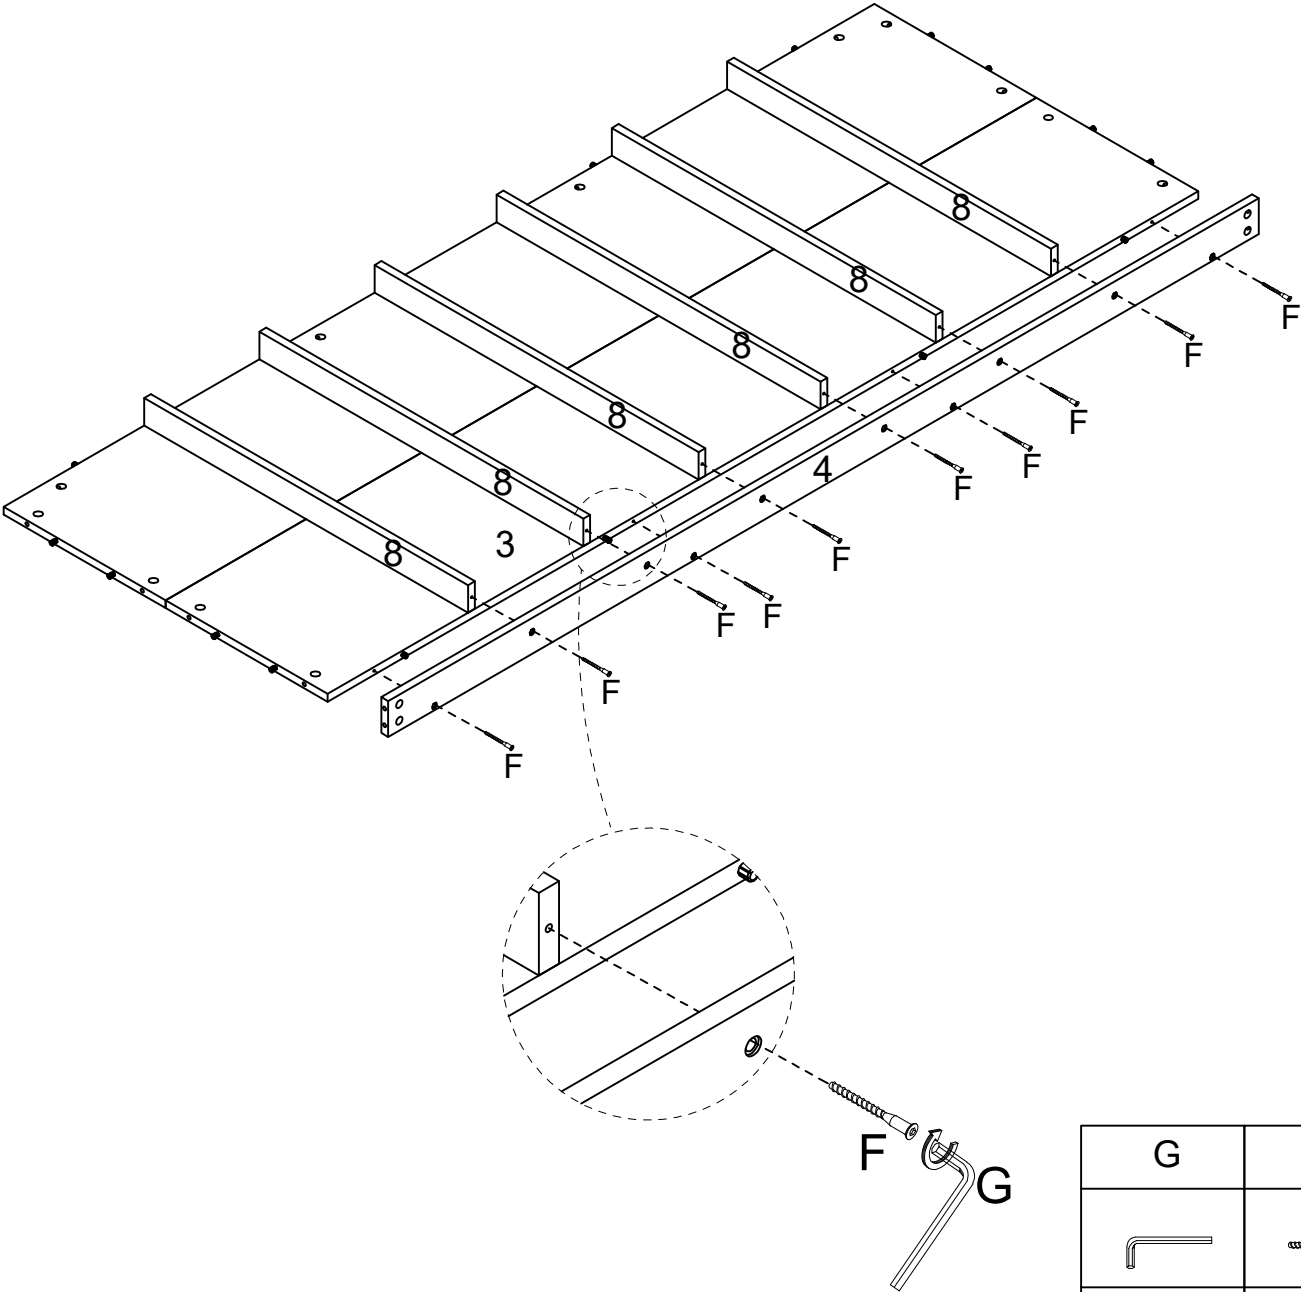
Step 5





G	F
	
X1	X10

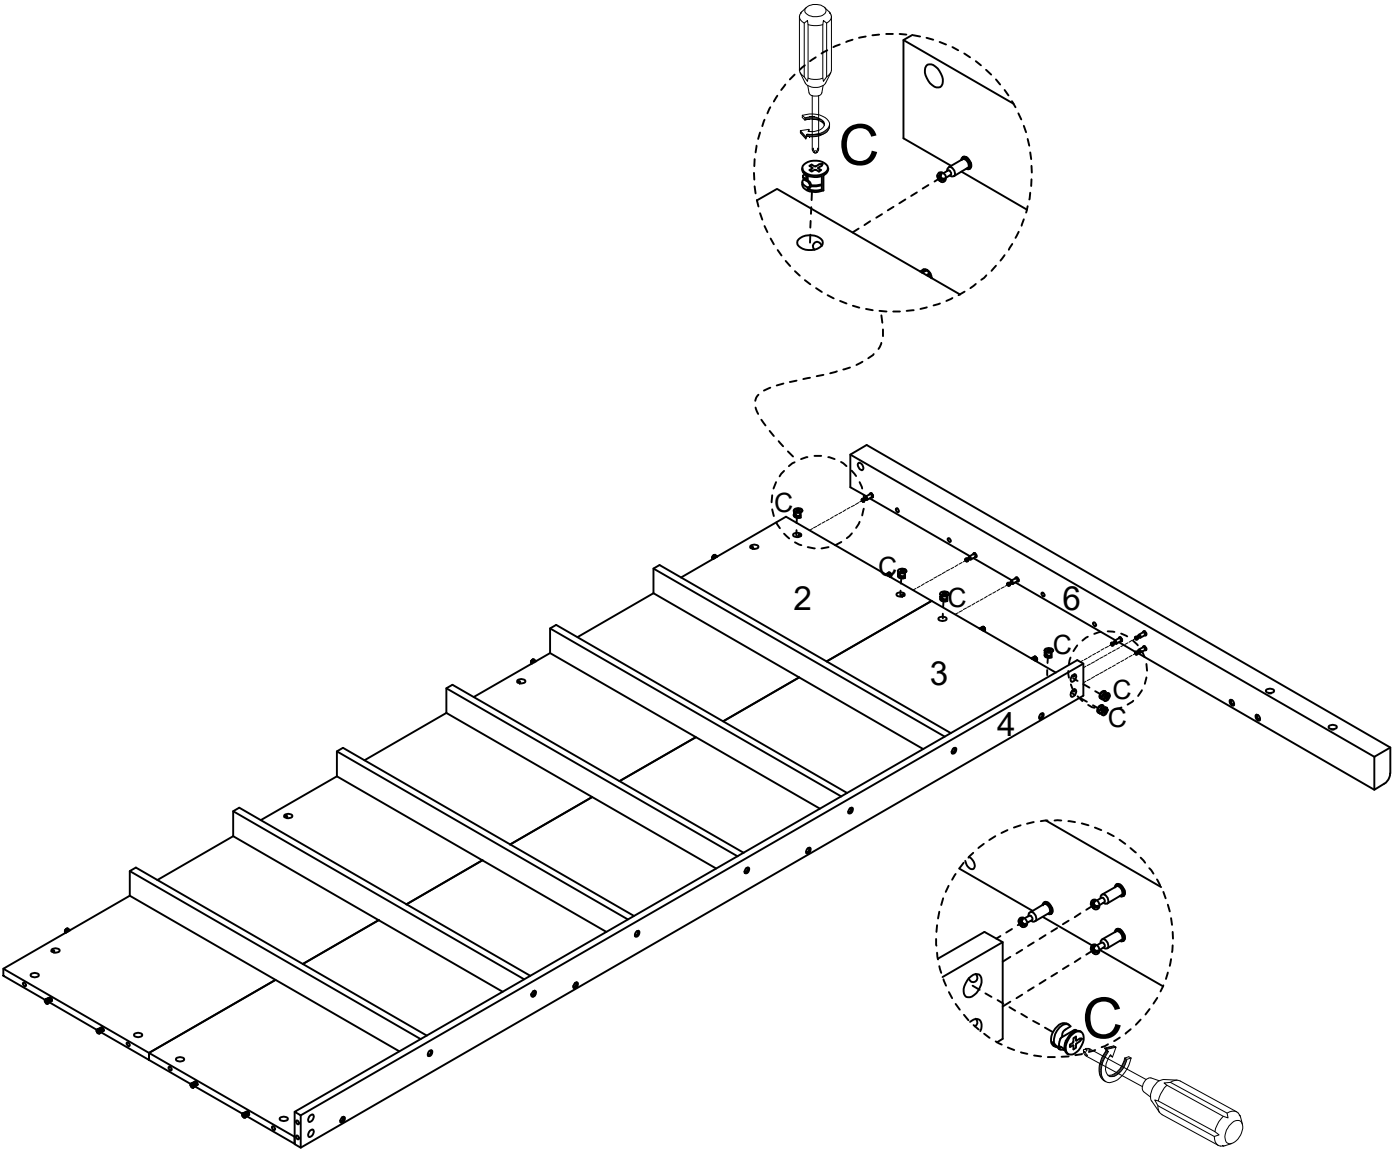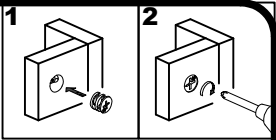
Step 6





C

X6

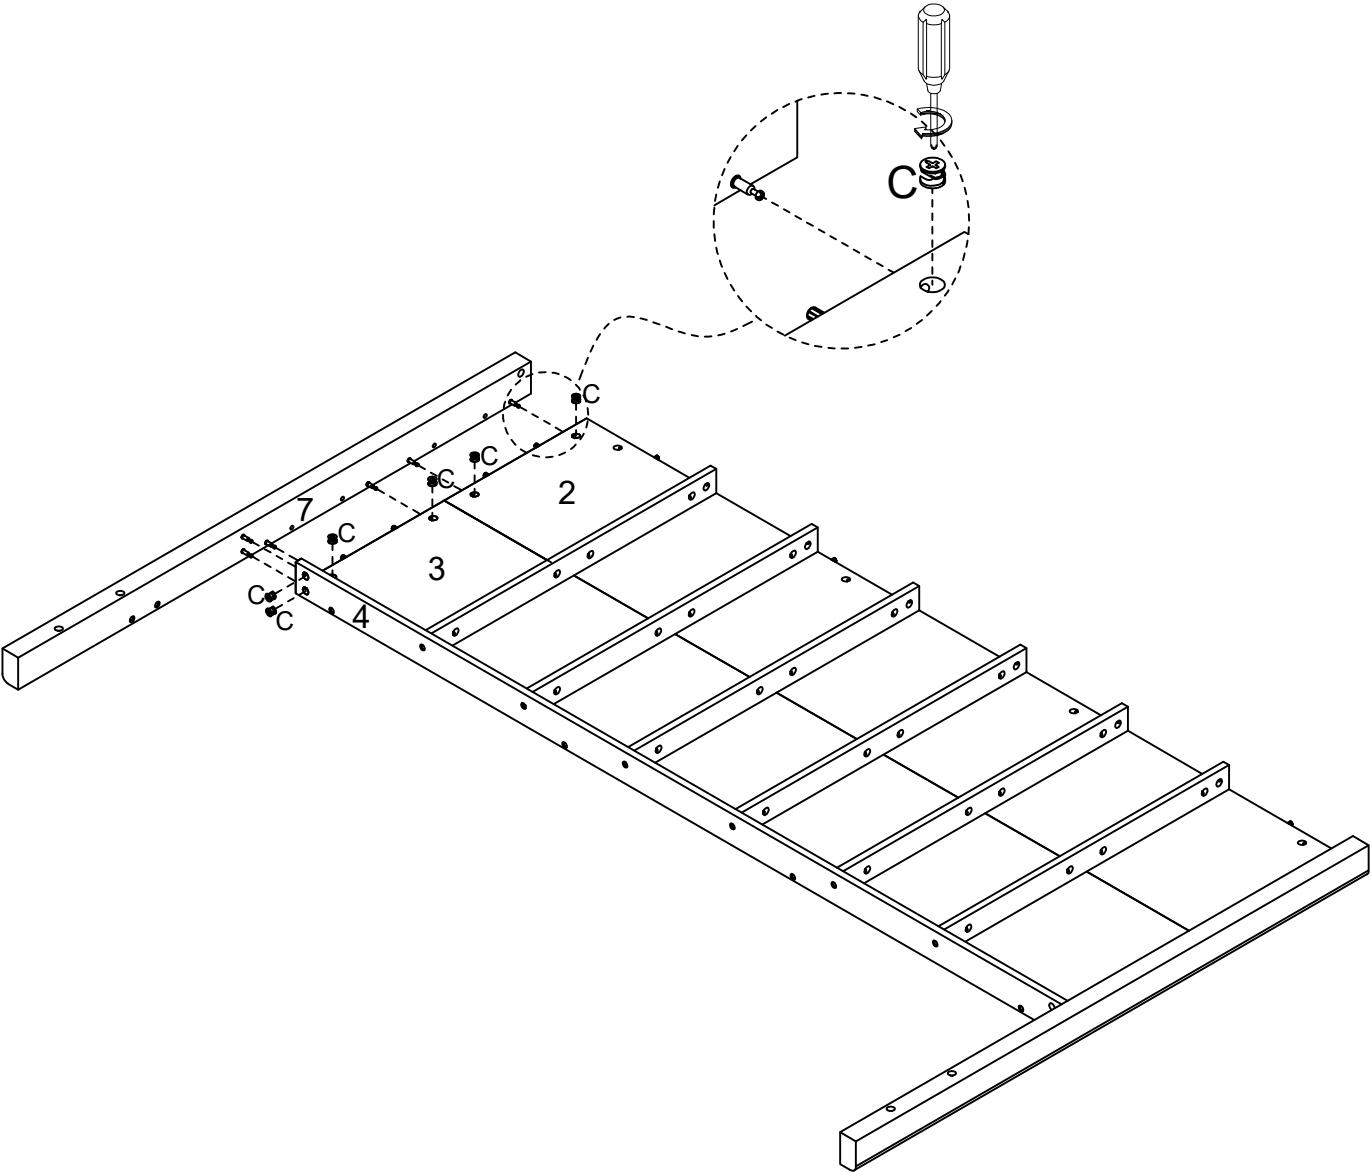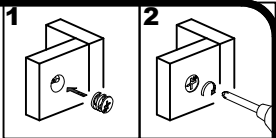
Step 7




C

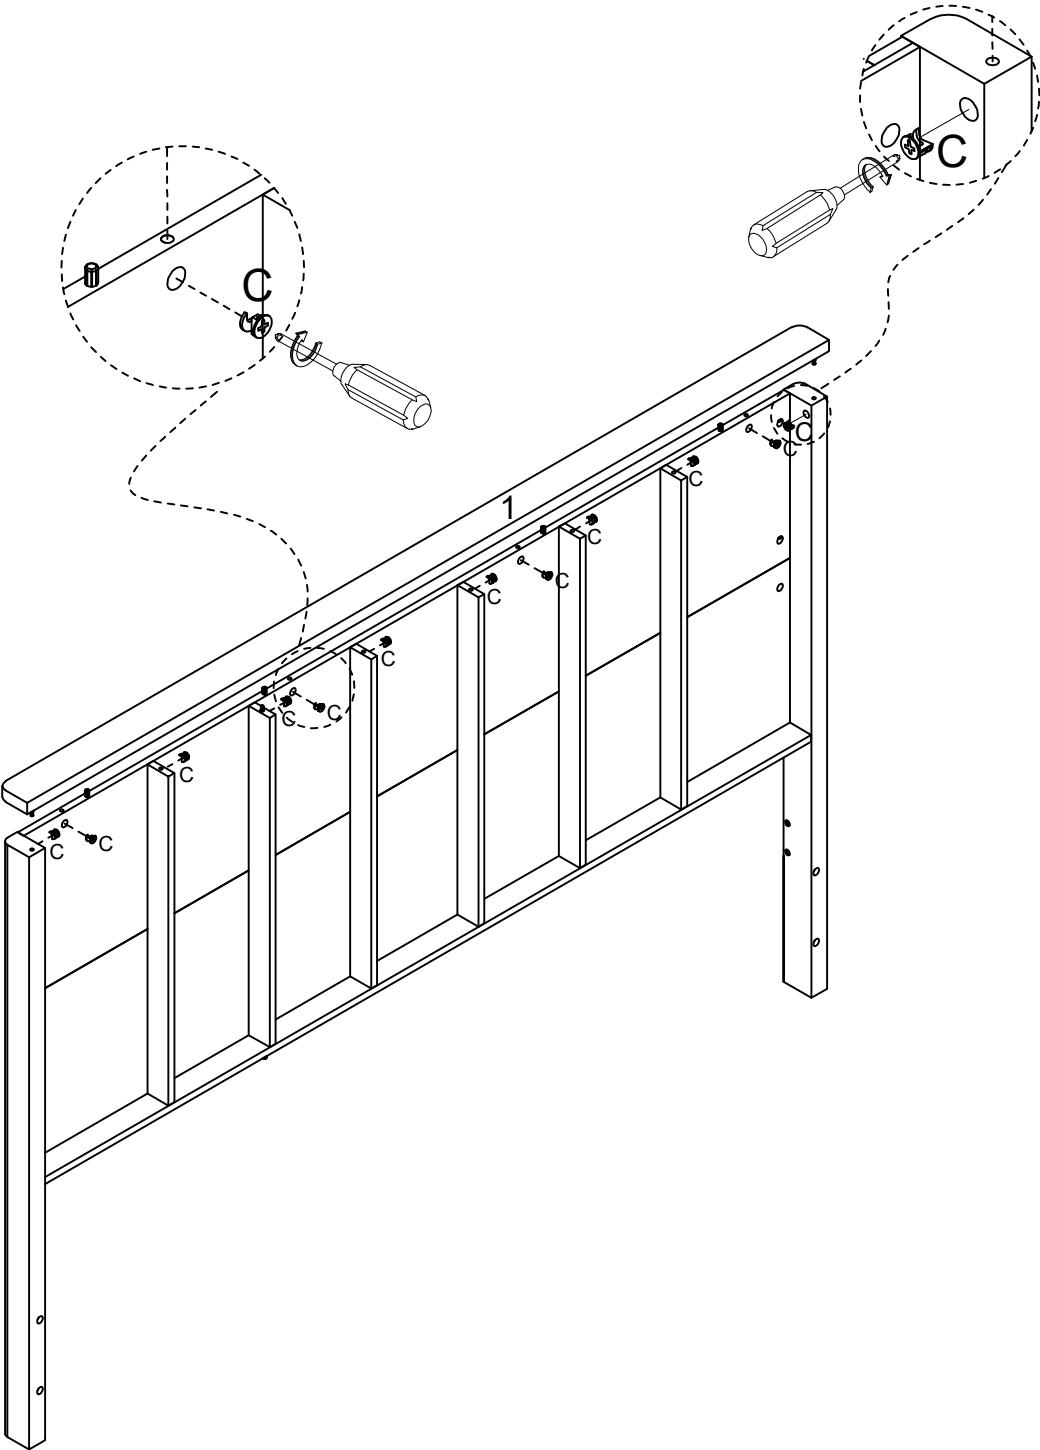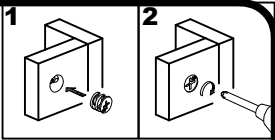X6



Step 8




C

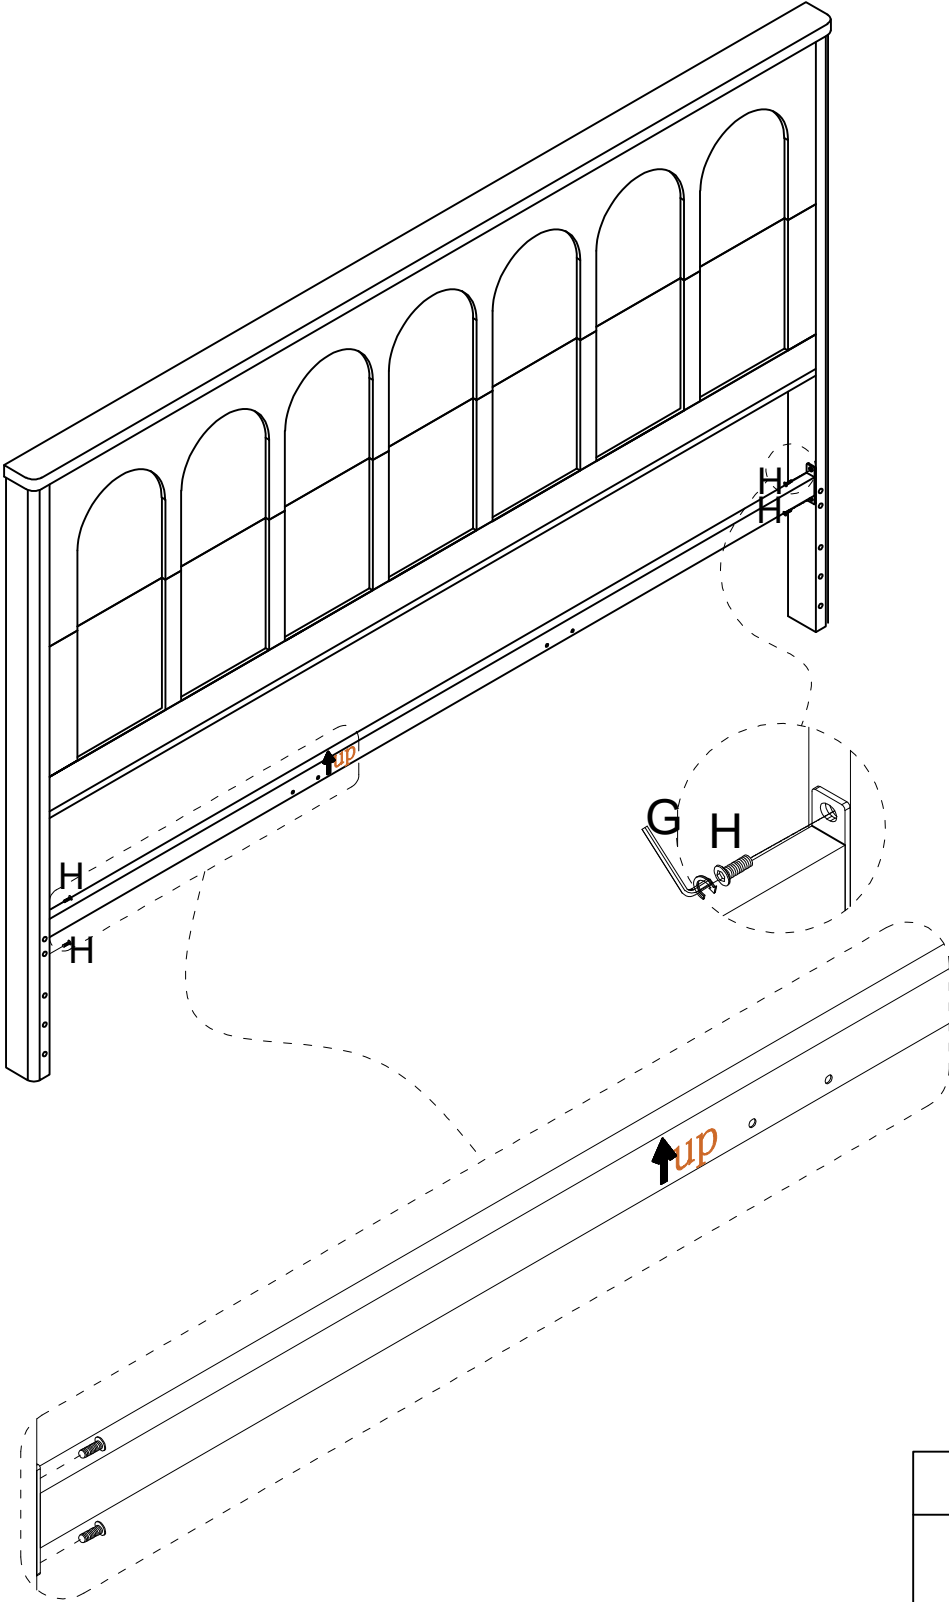X12


Step 9



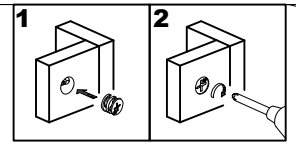
G	H
	
X1	X4






Step 10

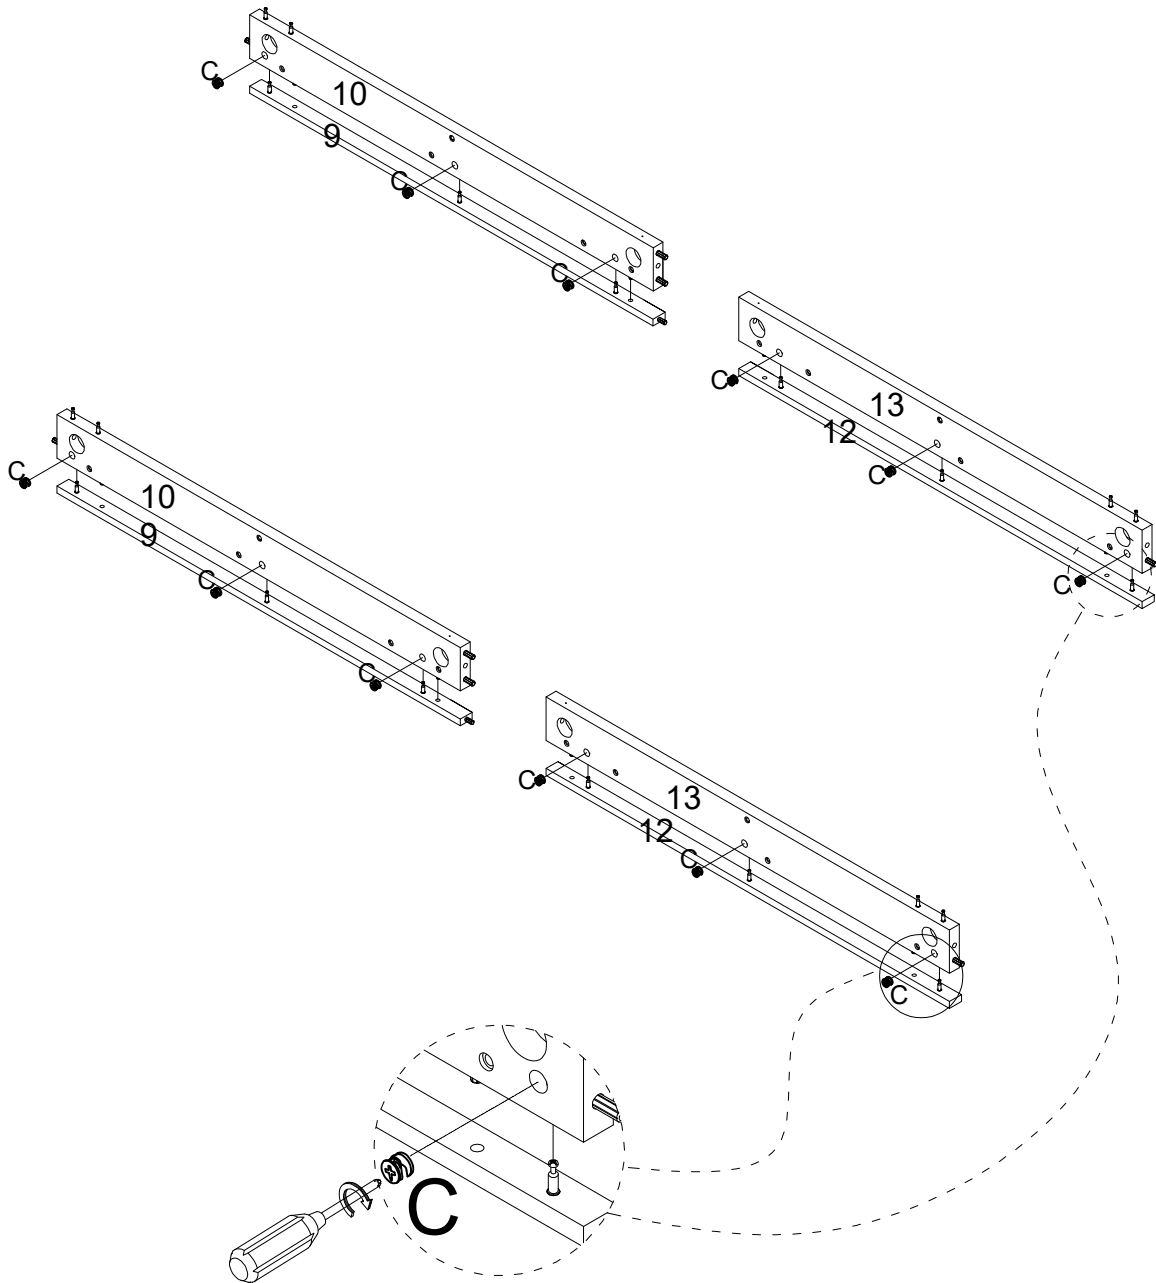


C

X12

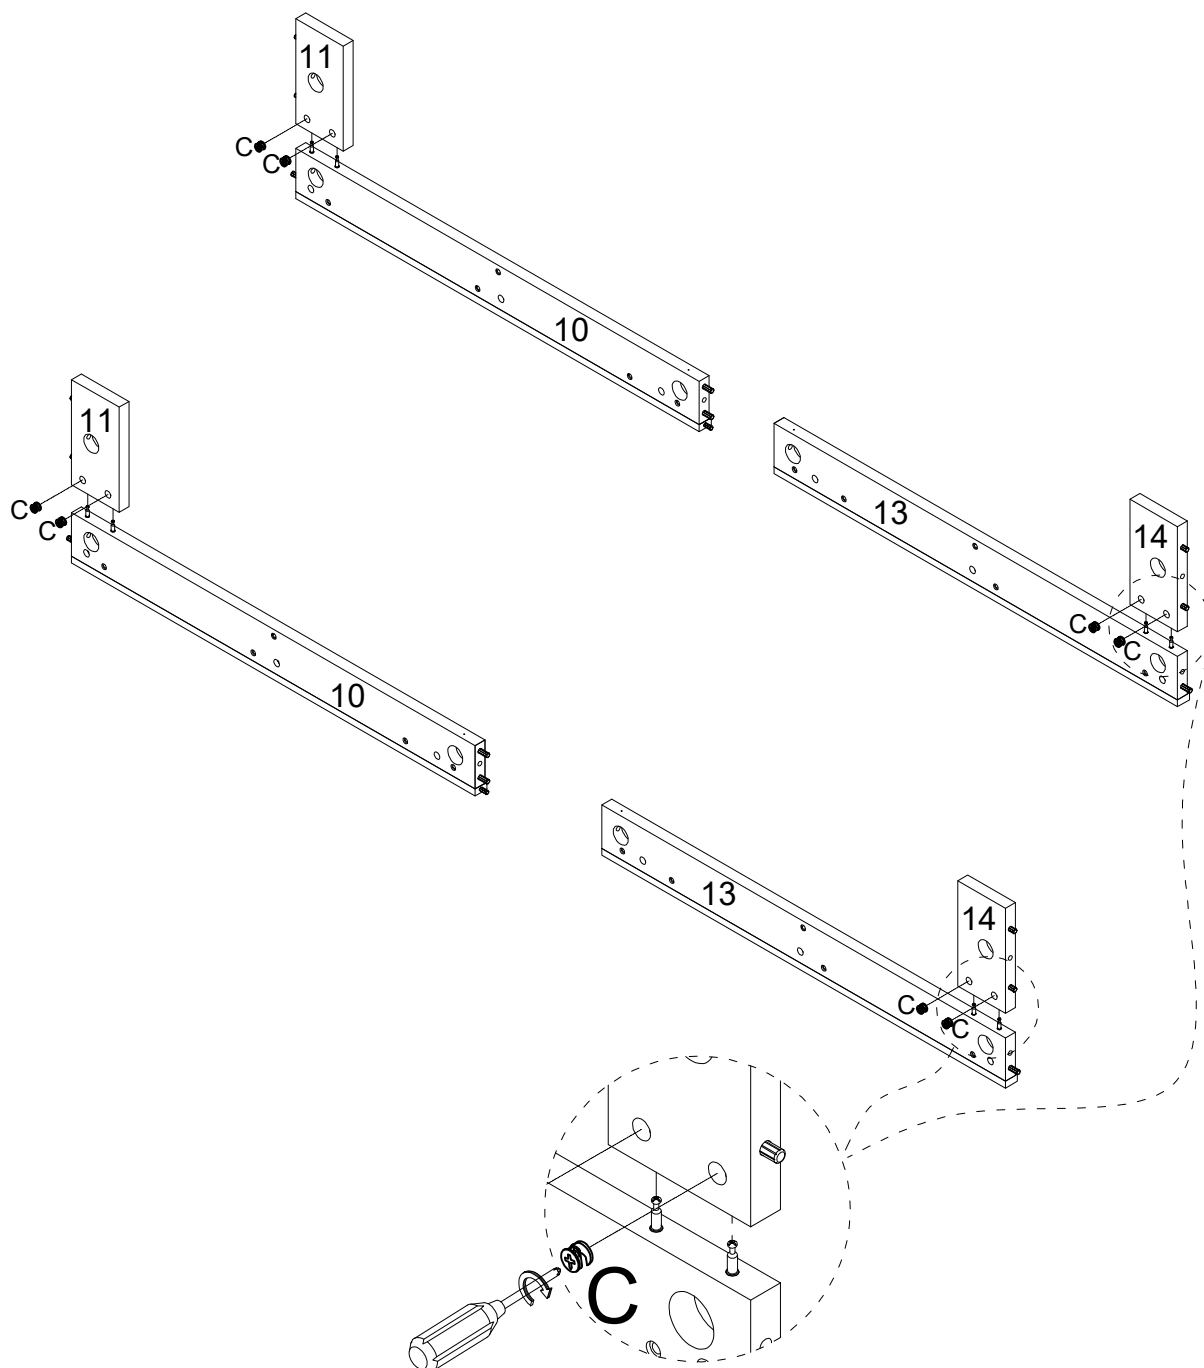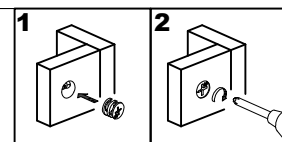



Step 11

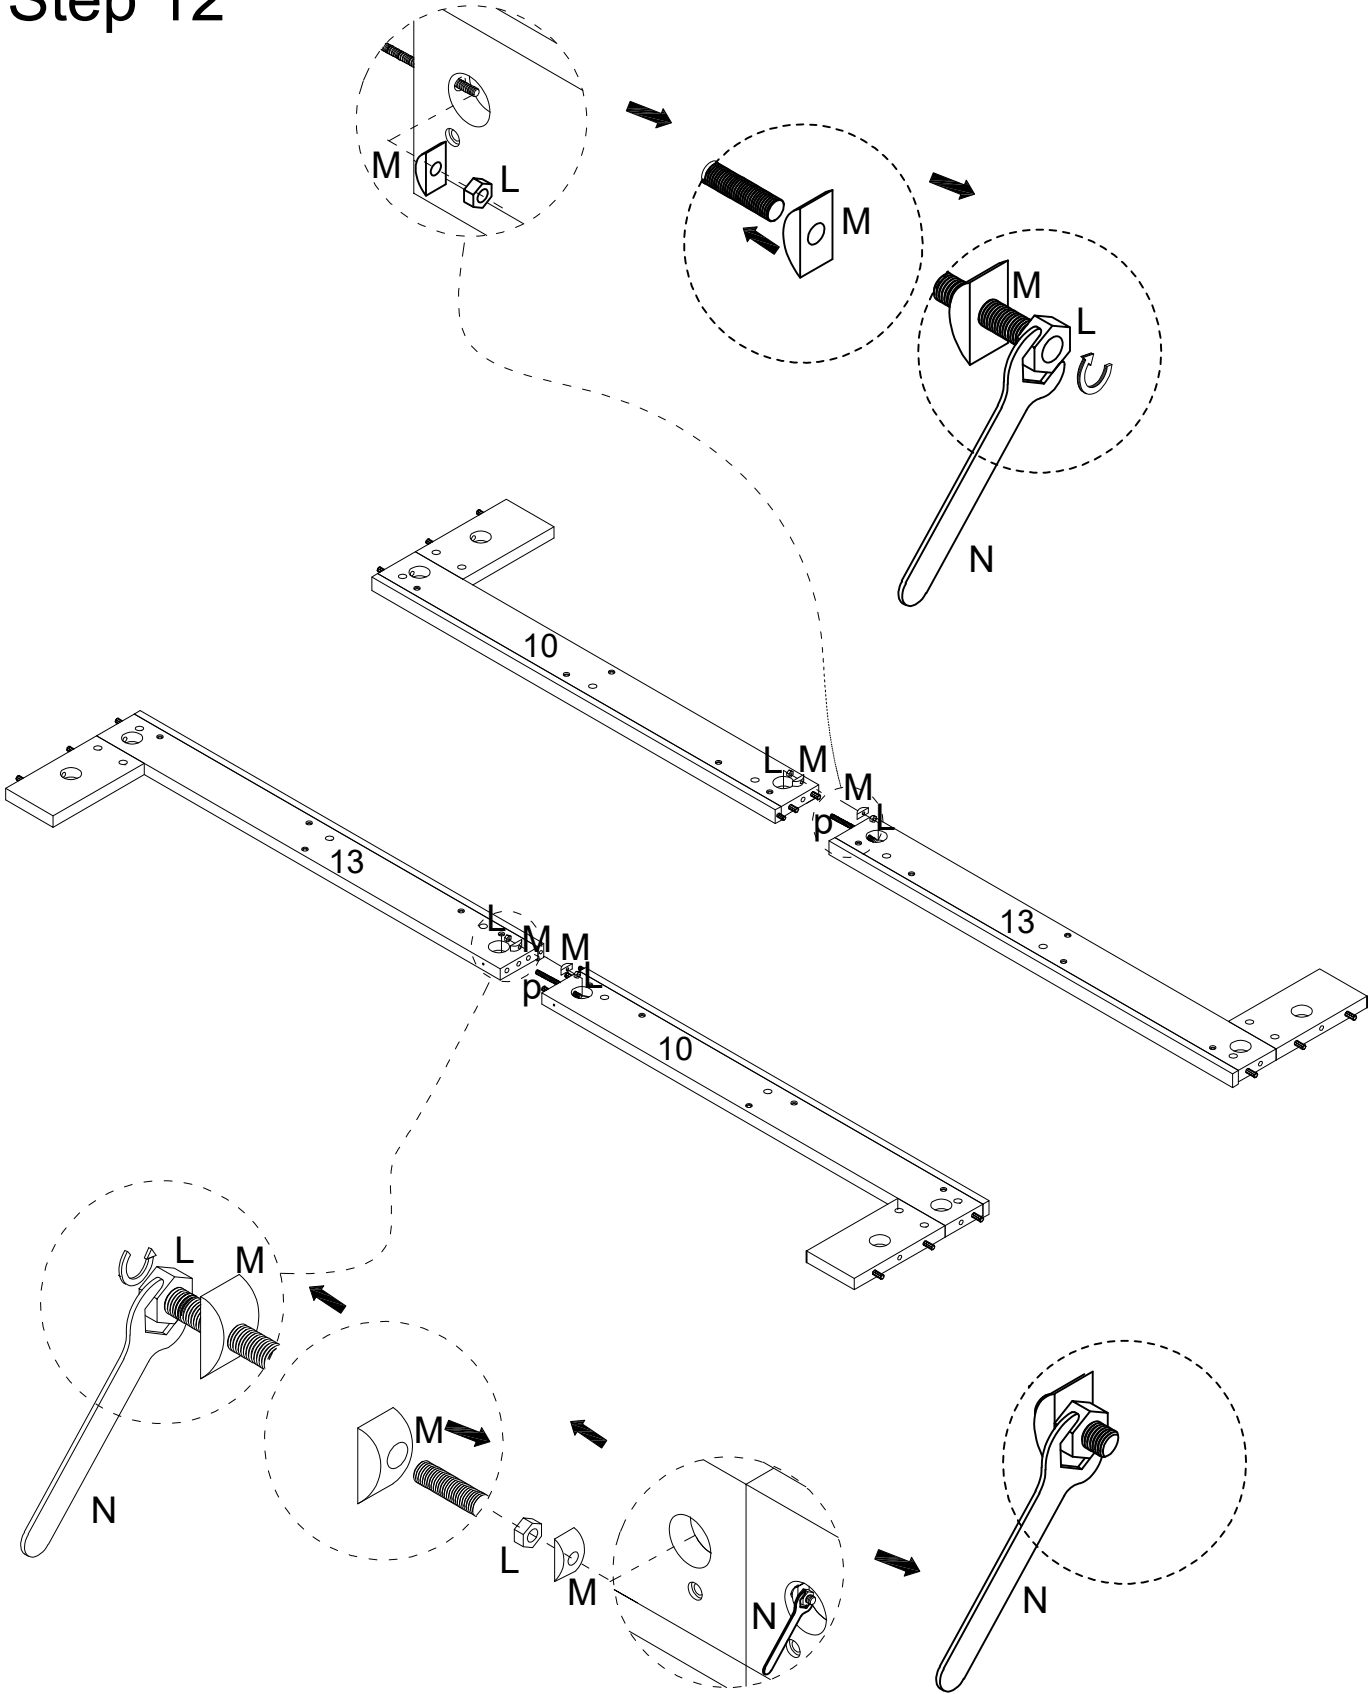


C

X8





Step 12

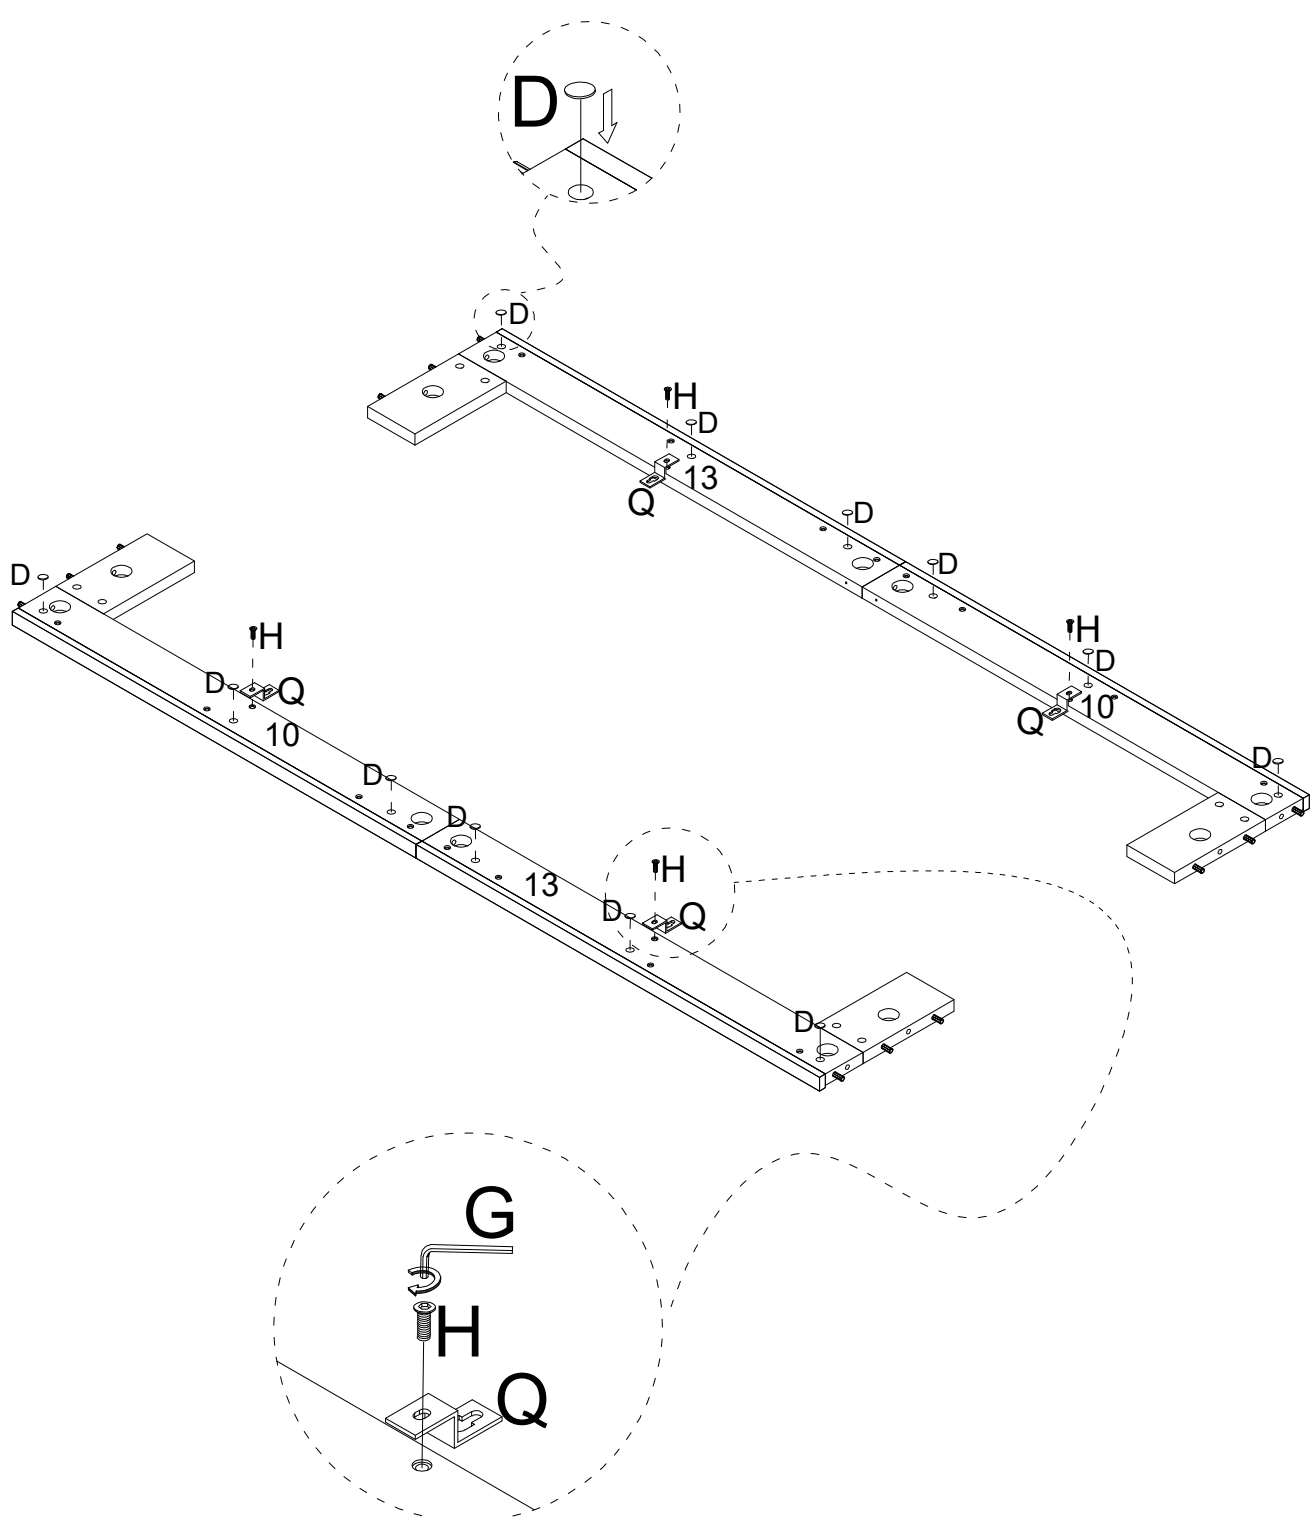


N	M	L	p
			
X2	X4	X4	X2



Step 13




G	H	Q	D
			
X1	X4	X4	X12

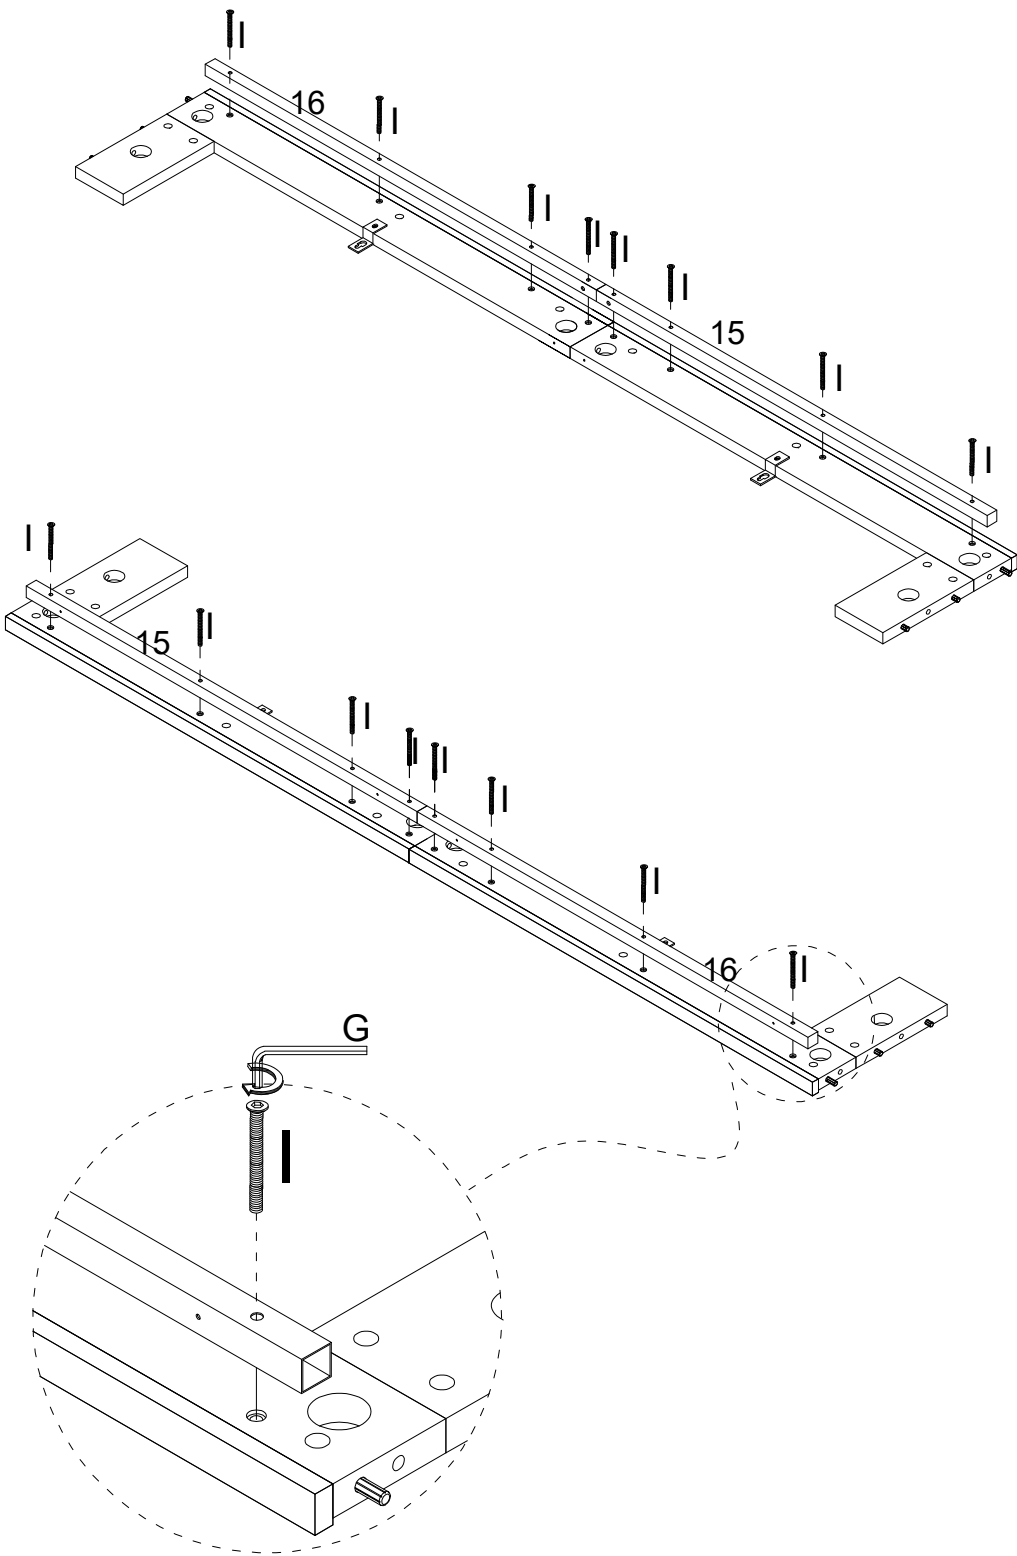Step 14




G	I
	
X1	X16

Step 15



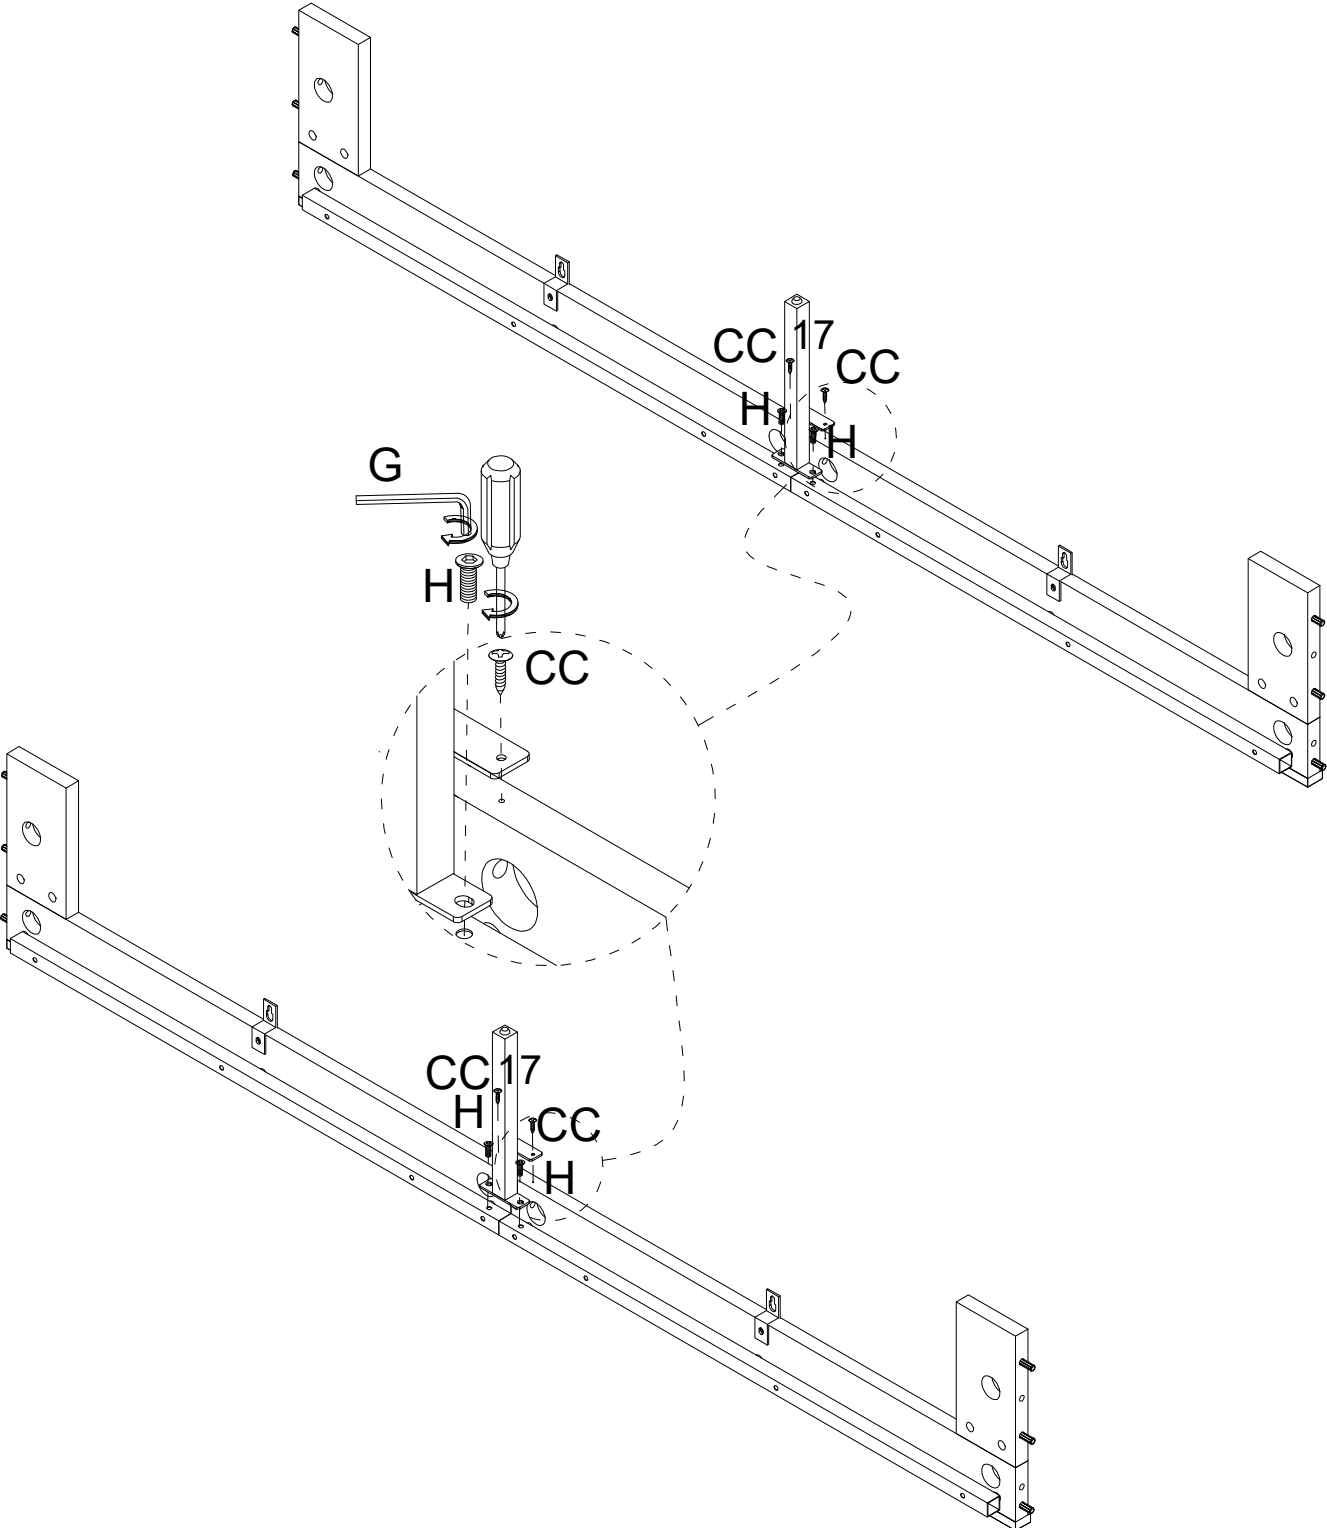


G	H	V
X1	X4	X4

Step 16

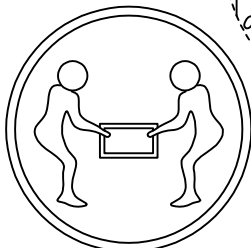




CAUTION: Heavy! You may need assistance with this step.

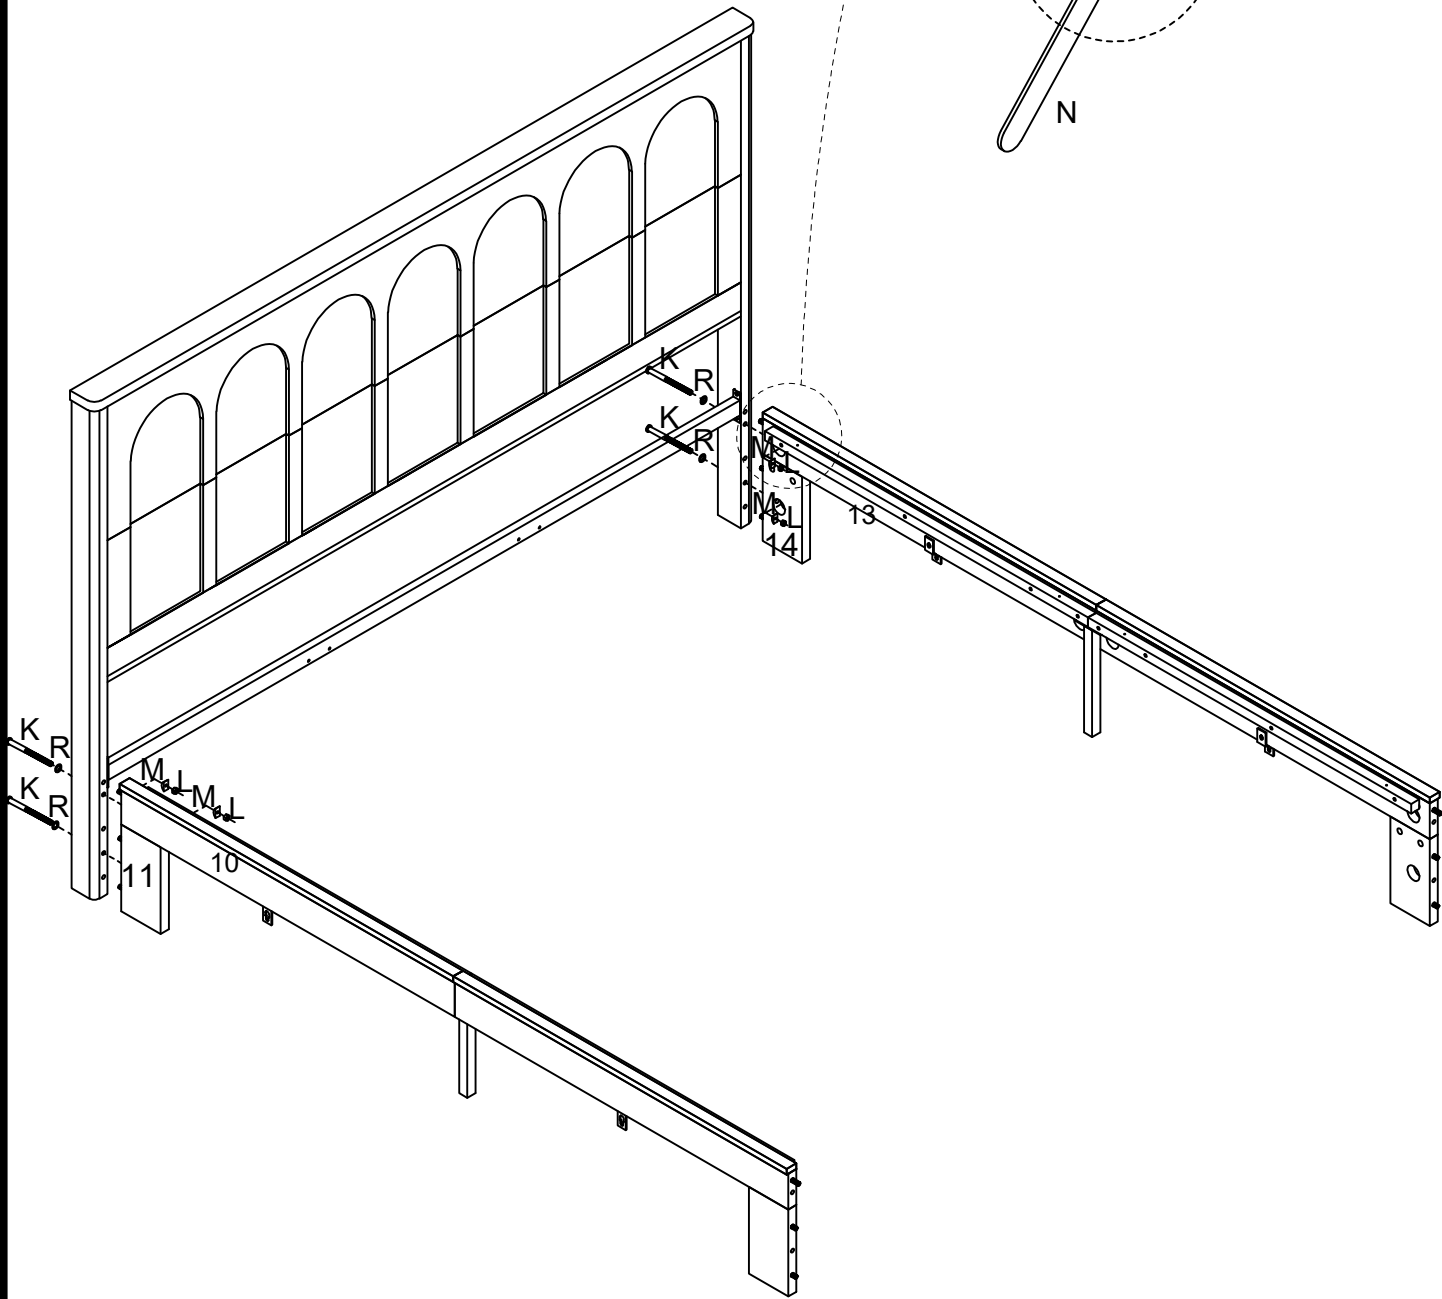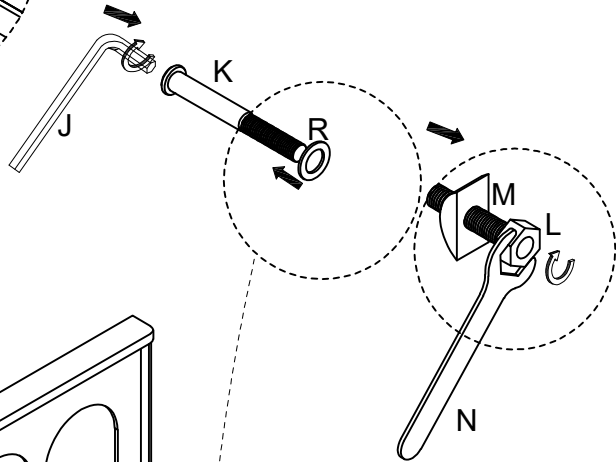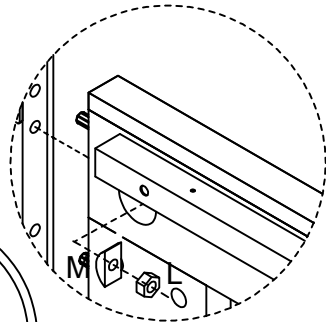


J	N	M	L	K	R
X1	X1	X4	X4	X4	X4

Step 17

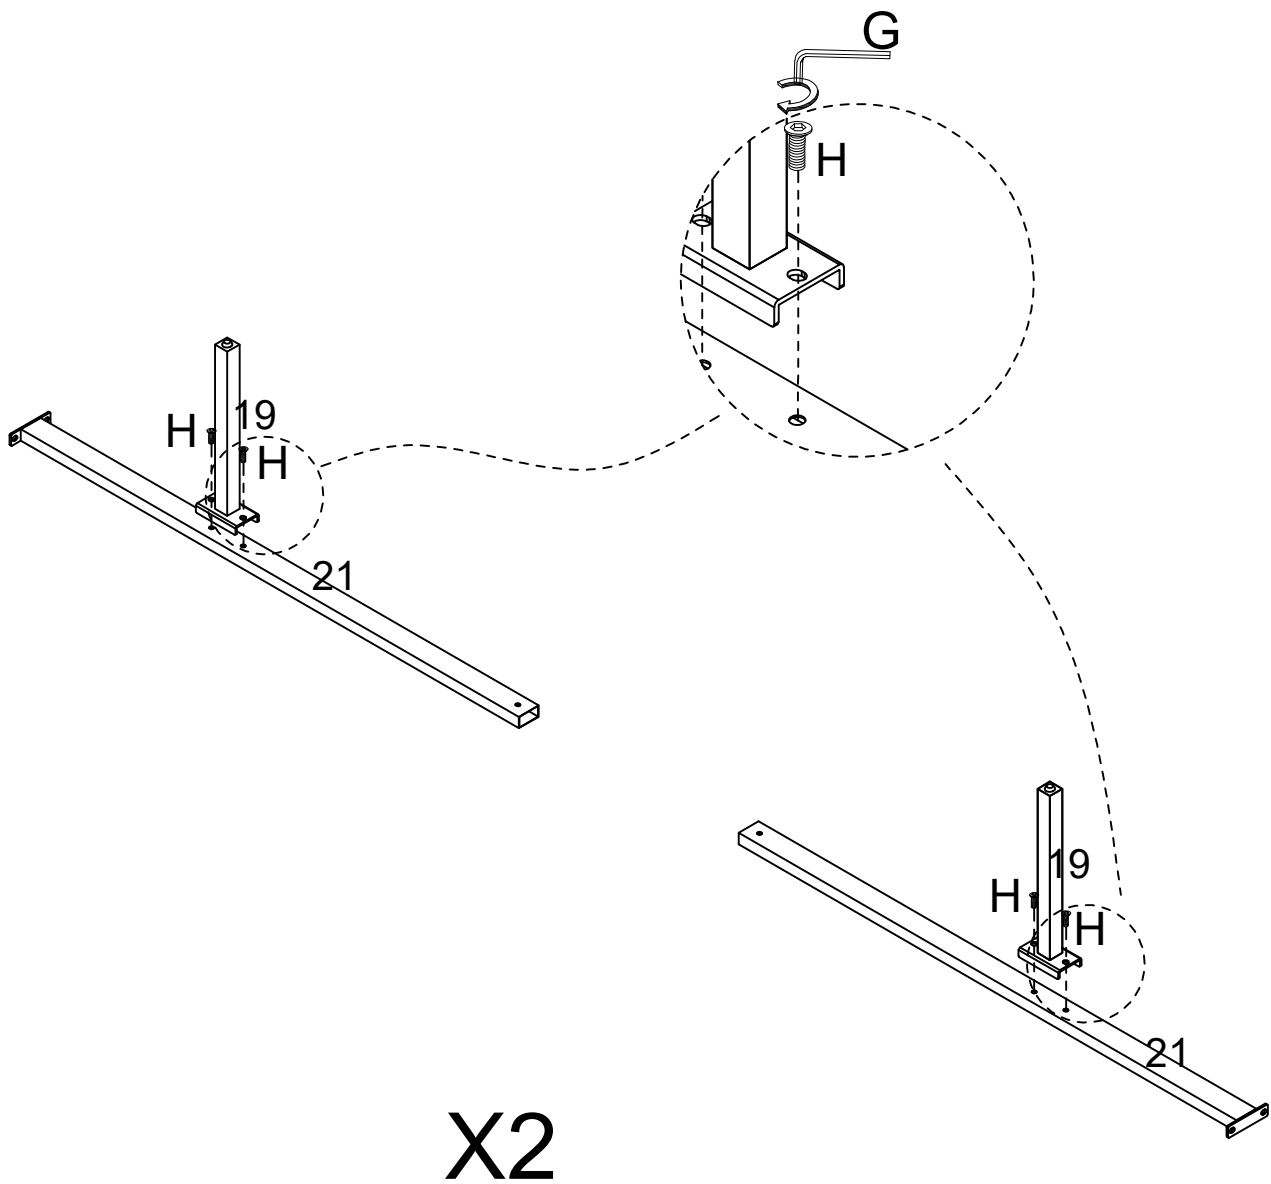


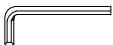
G	H
	
X1	X8


Step 18

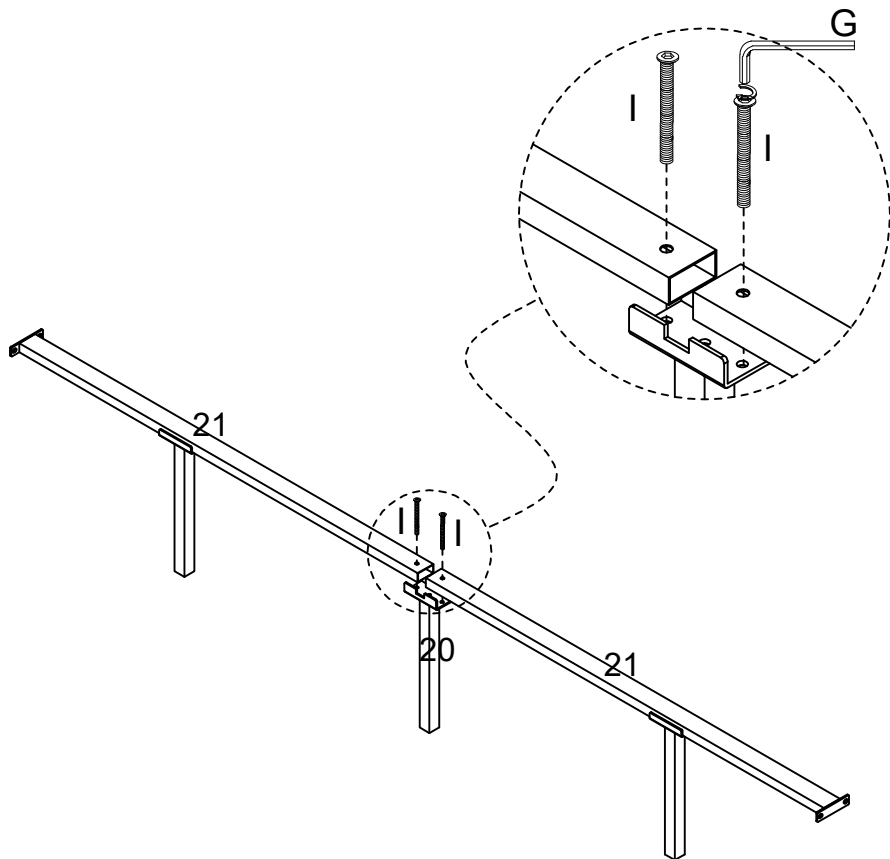



X2


G	I
	
X1	X4

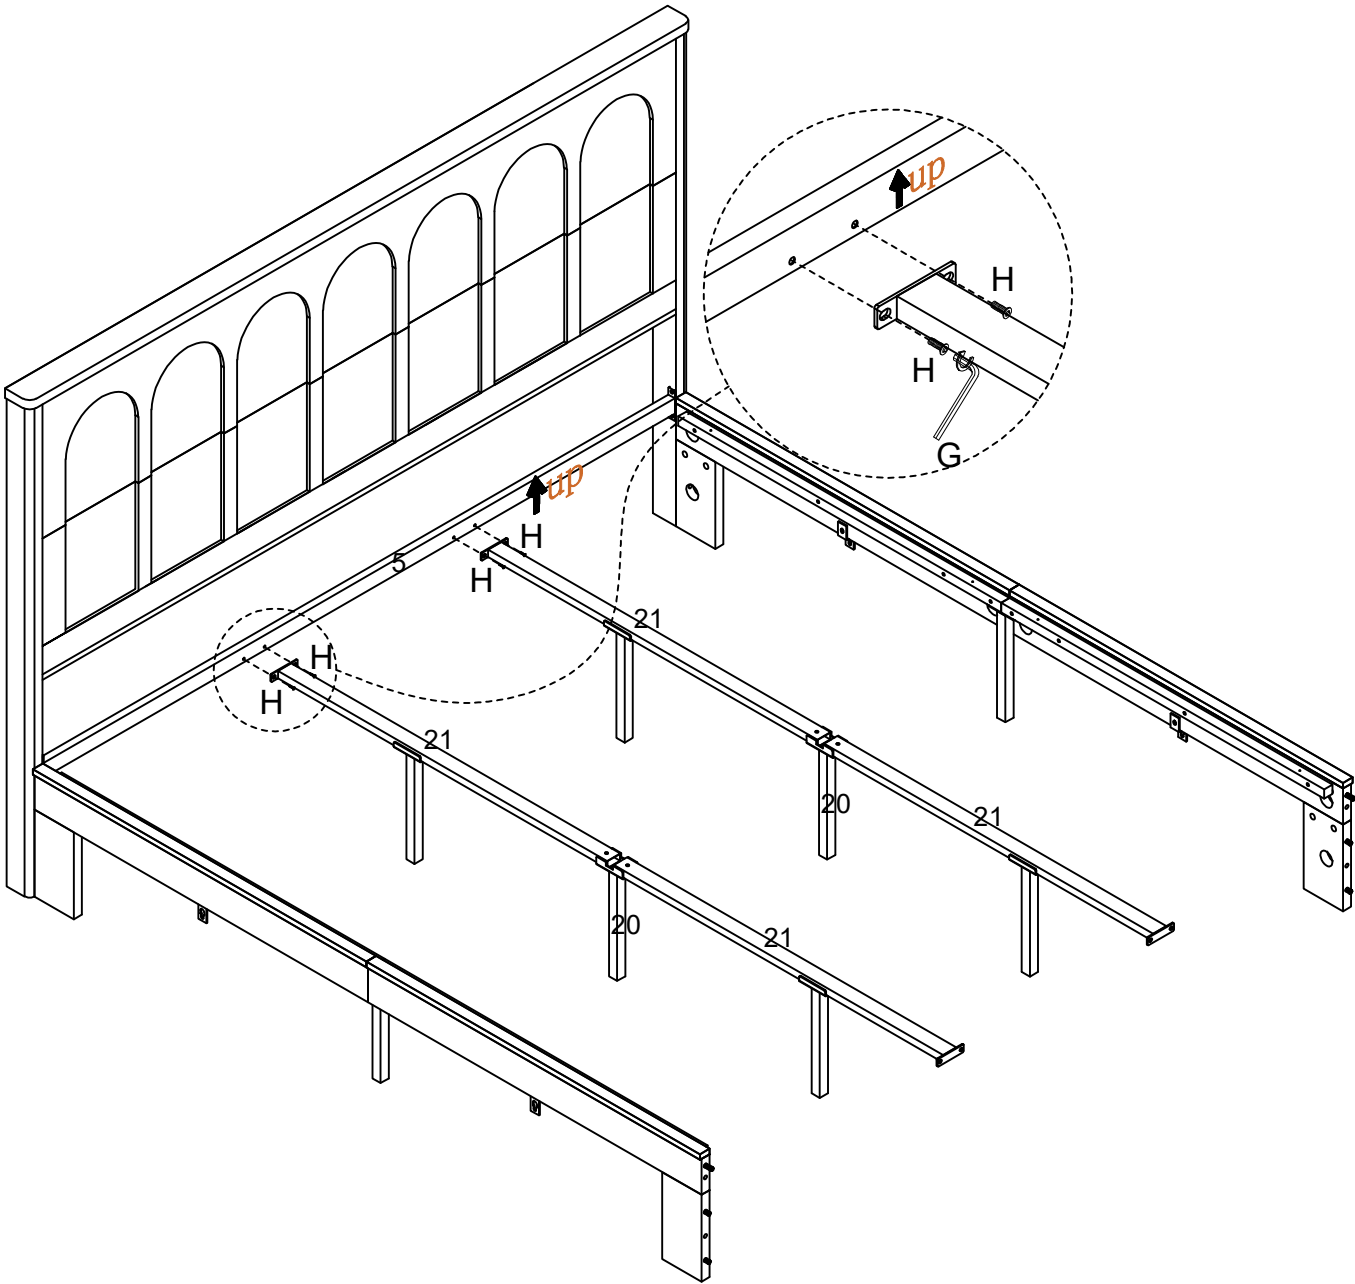Step 19




G	H
	
X1	X4

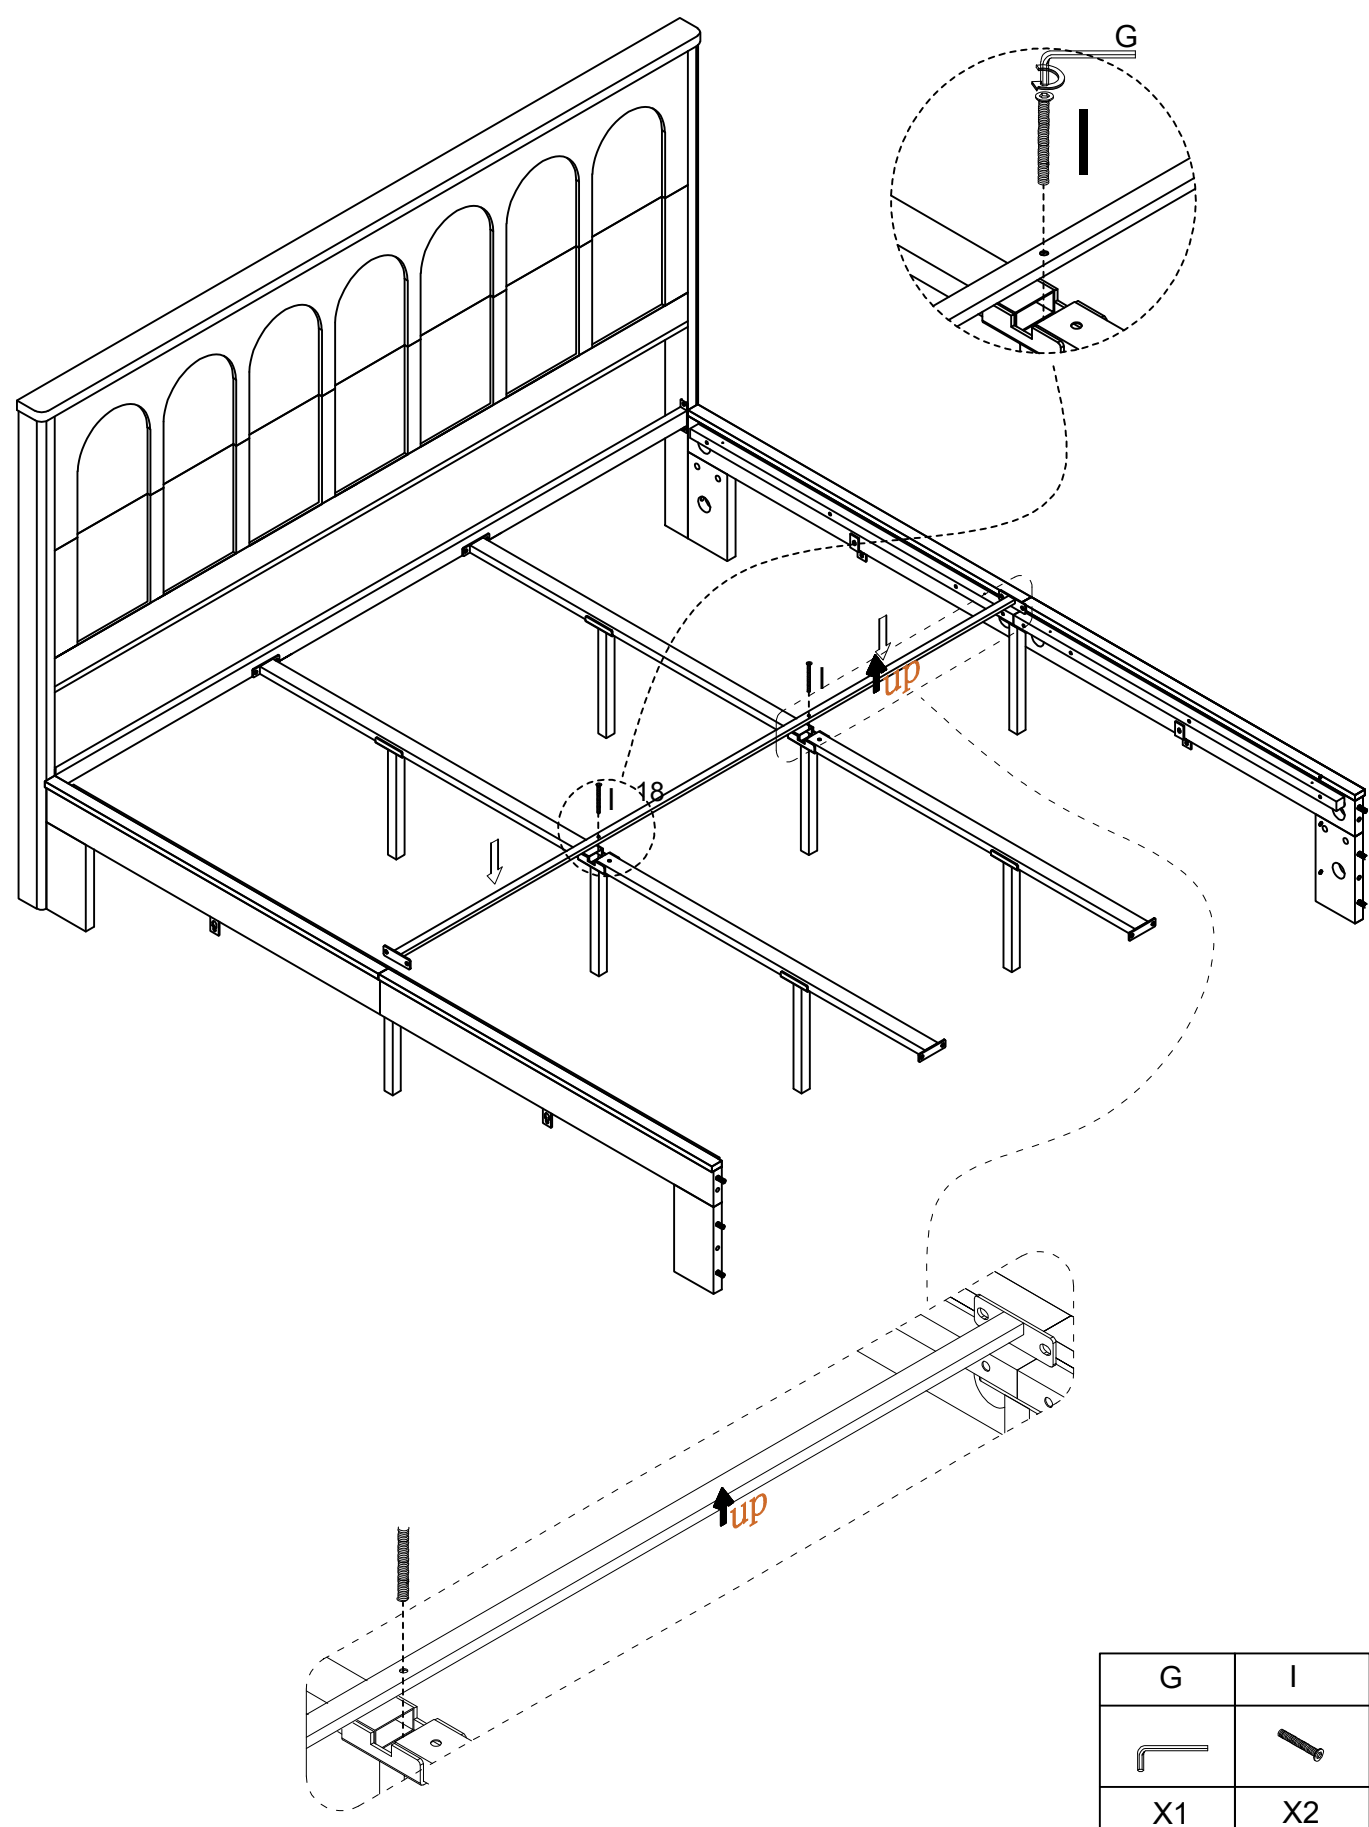

Step 20




G	I
X1	X2

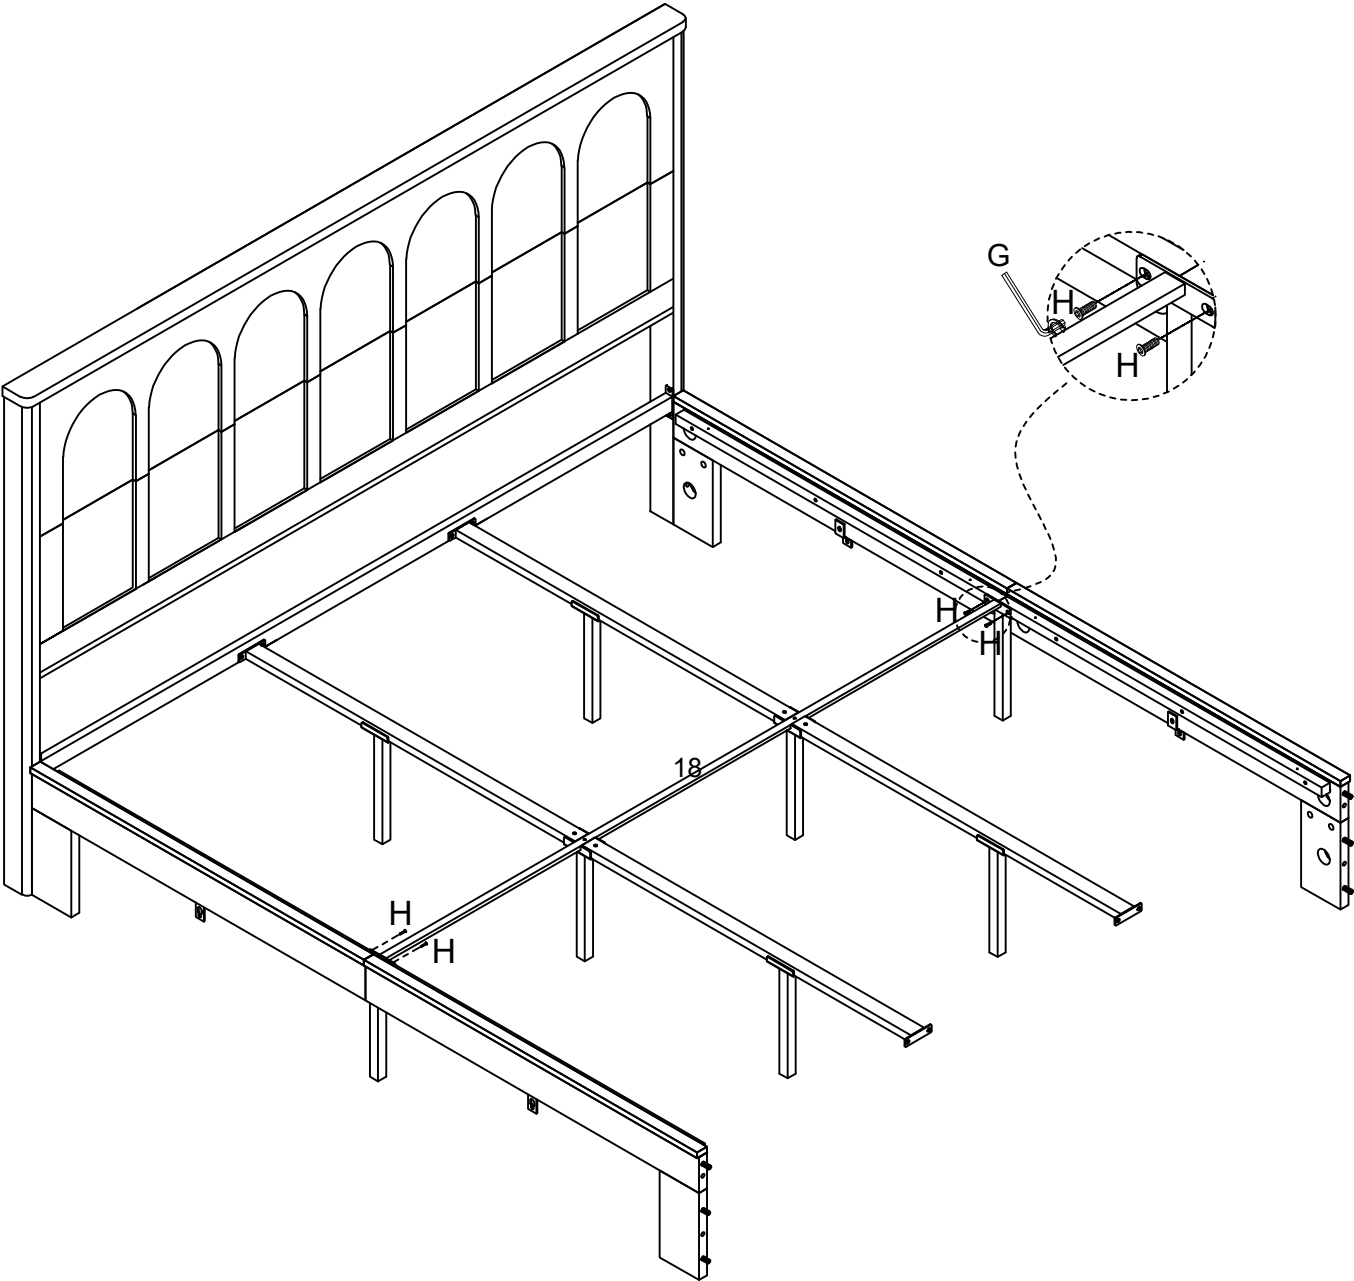Step 21




G	H
	
X1	X4



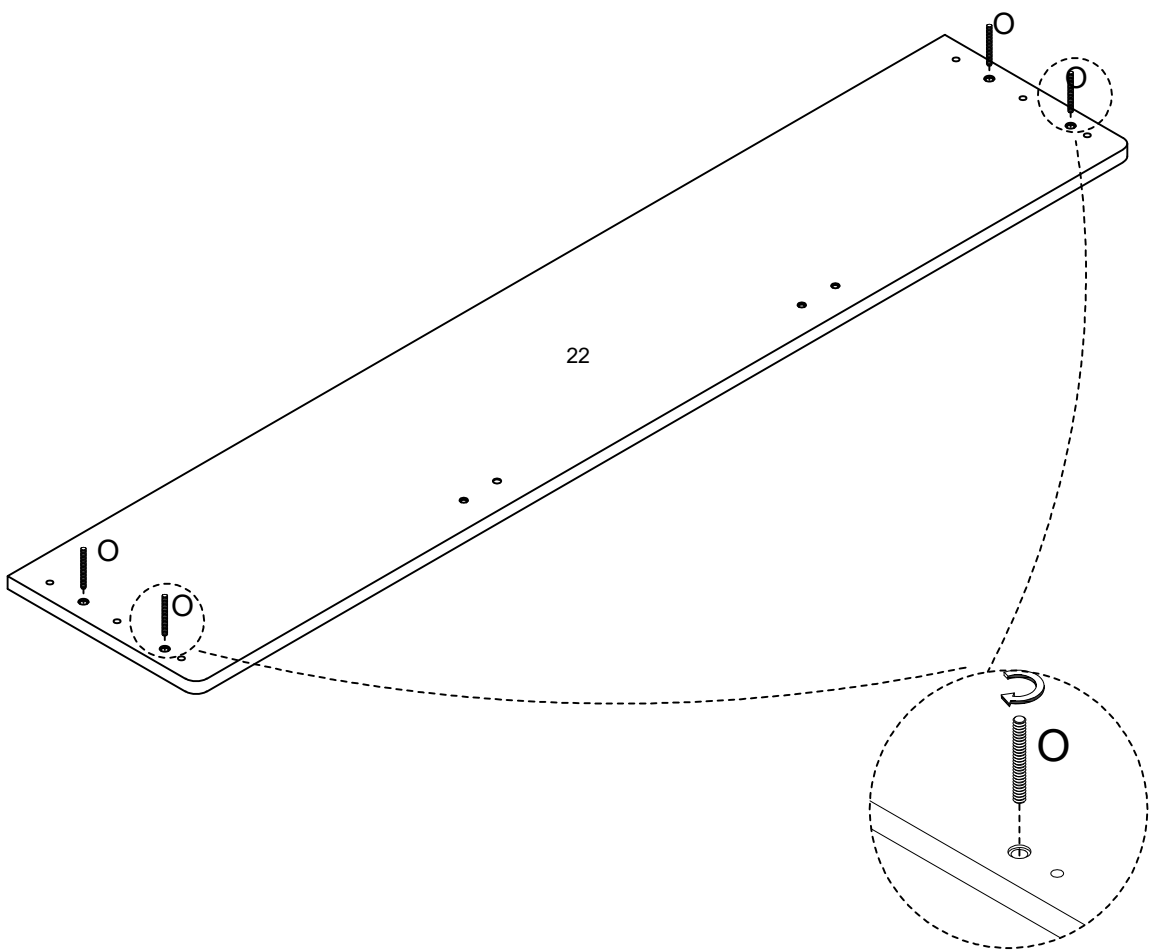


Step 22

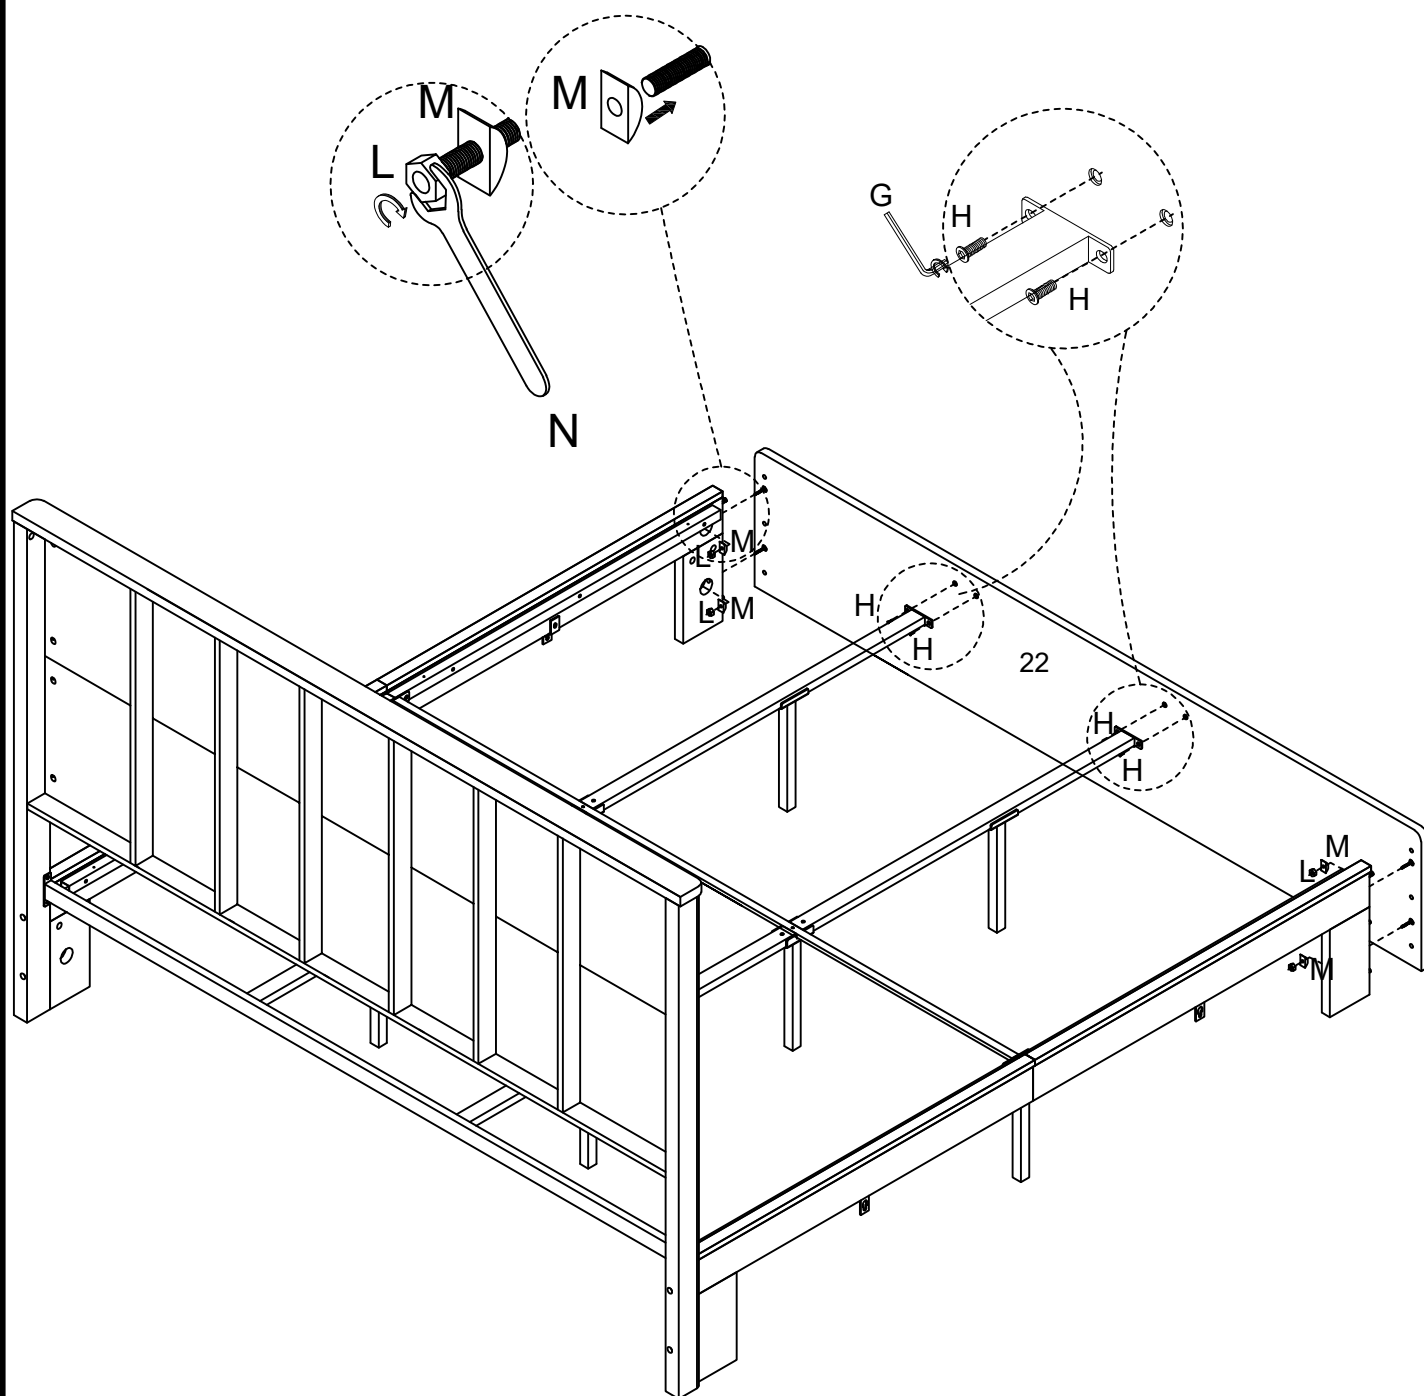


O
—
X4

Step 23



N	M	L	G	H
				
X1	X4	X4	X1	X4

Step 24


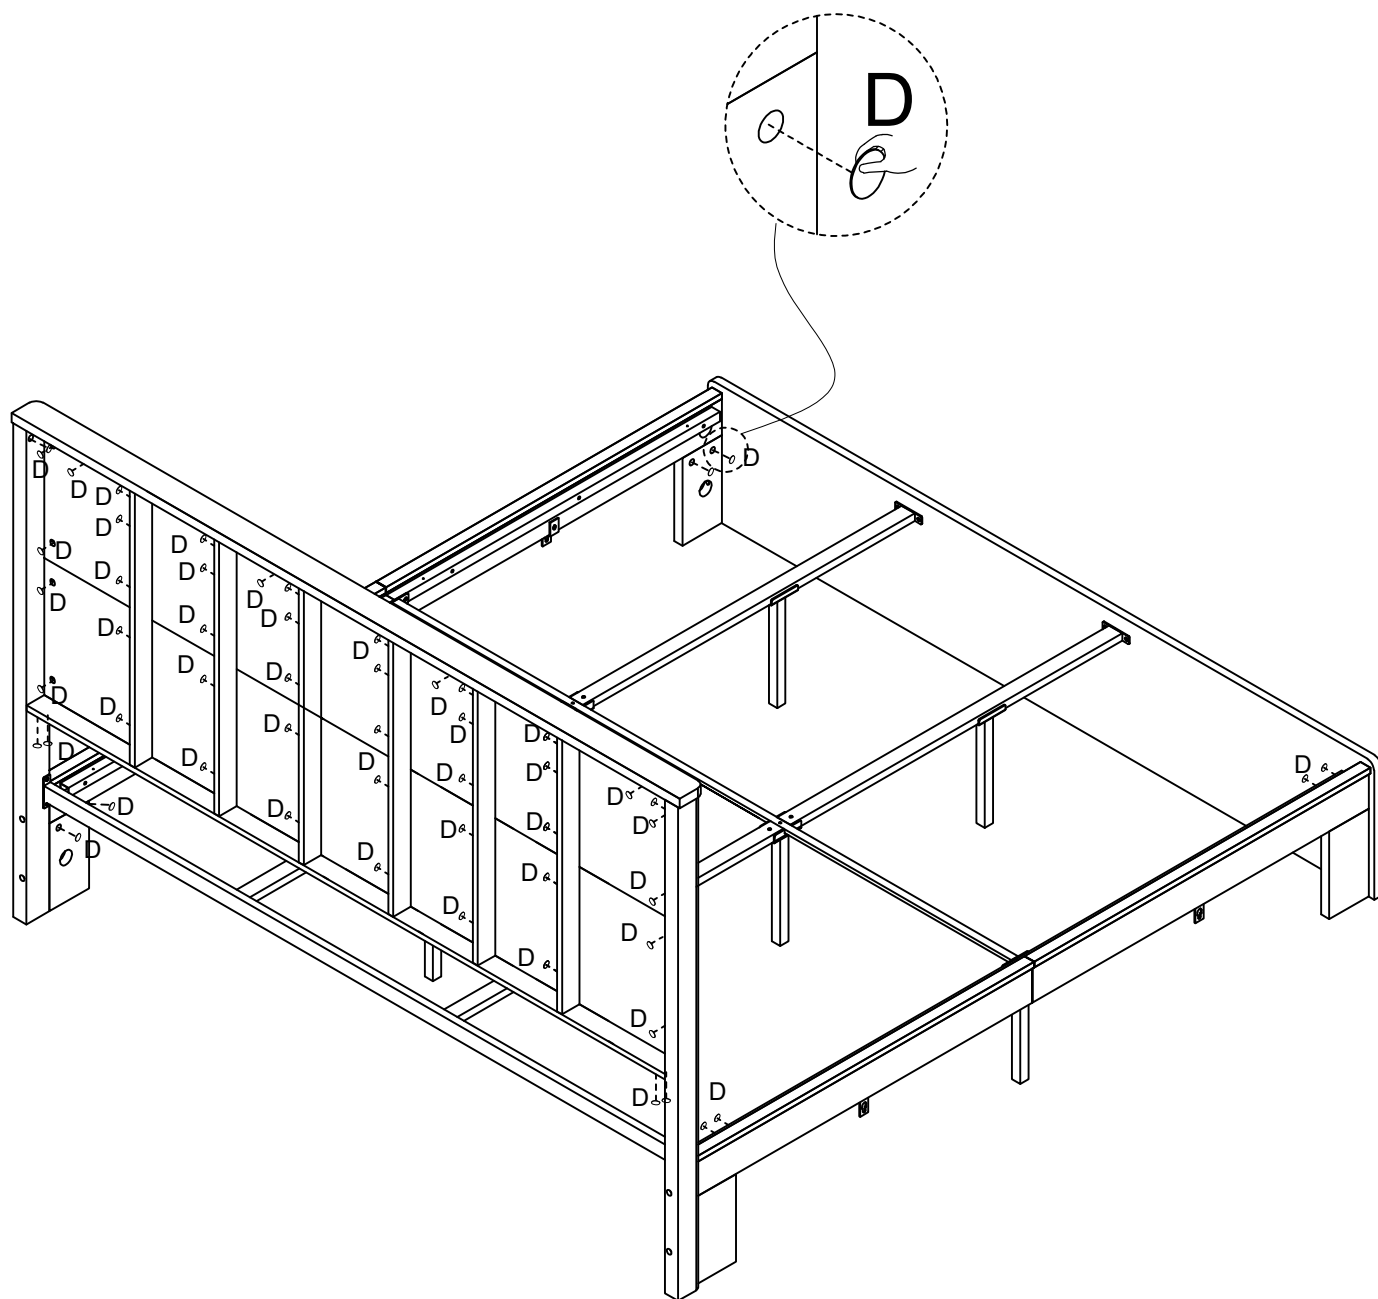


D
○
X56


Step 25

U-2


U-1

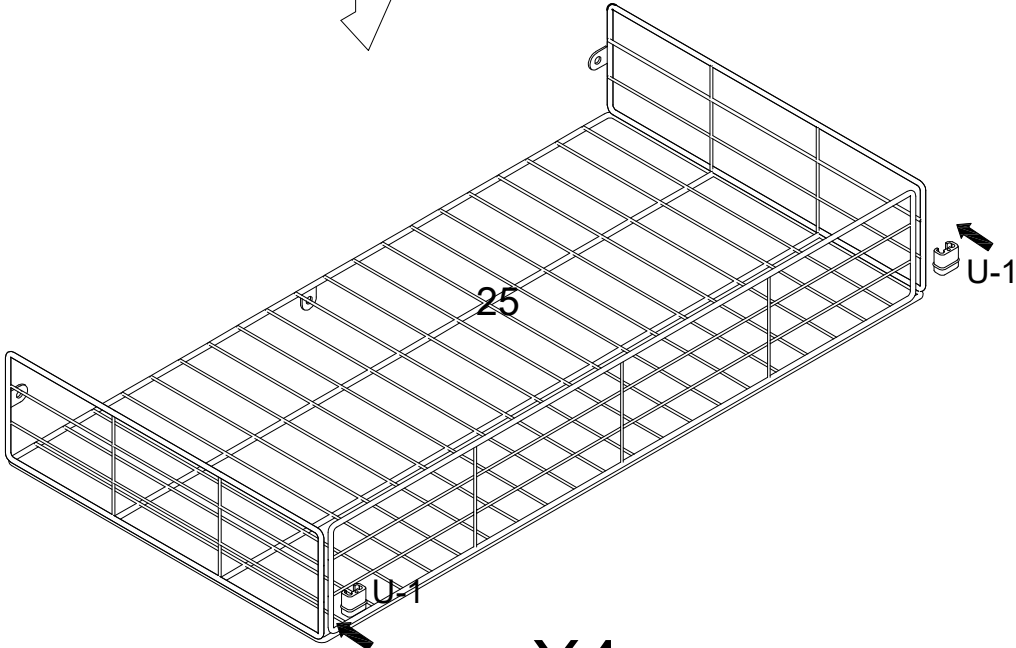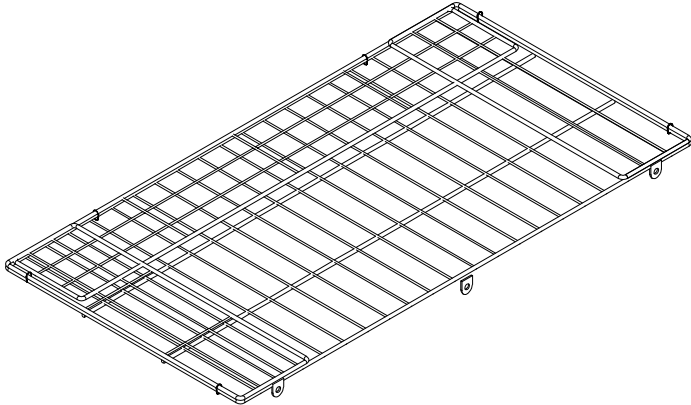


X4

U-1

X8


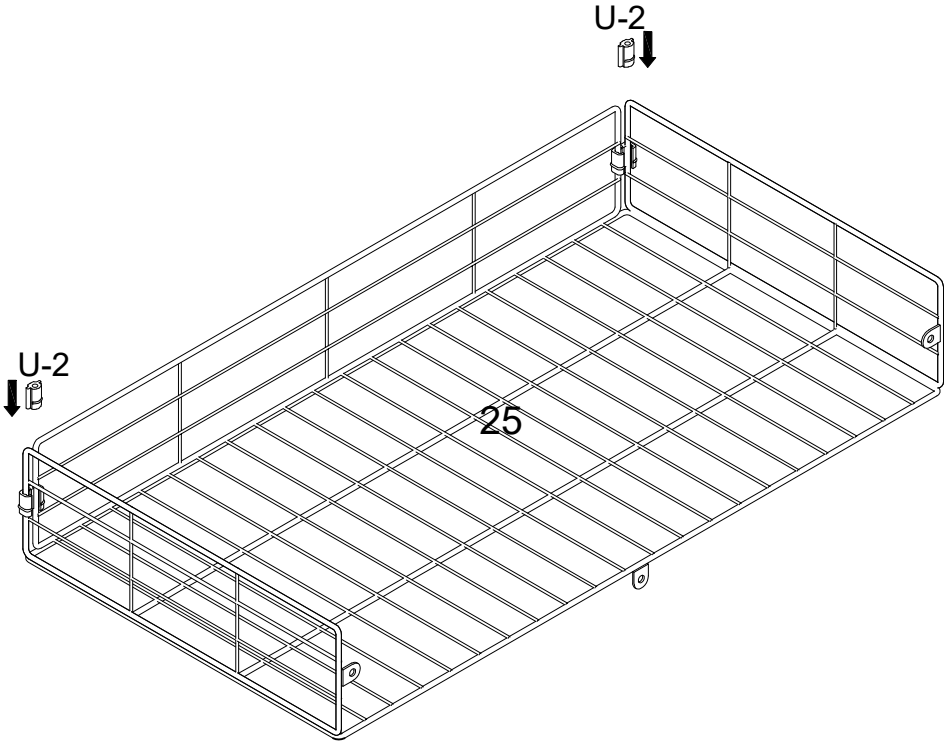
Step 26



X4

U-2

X8

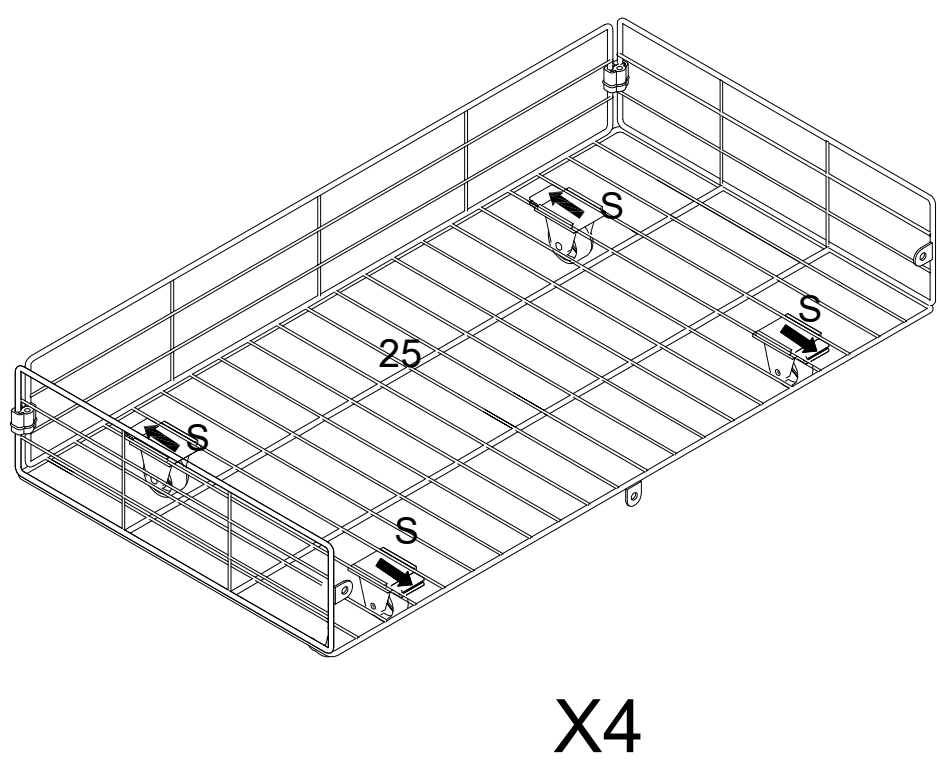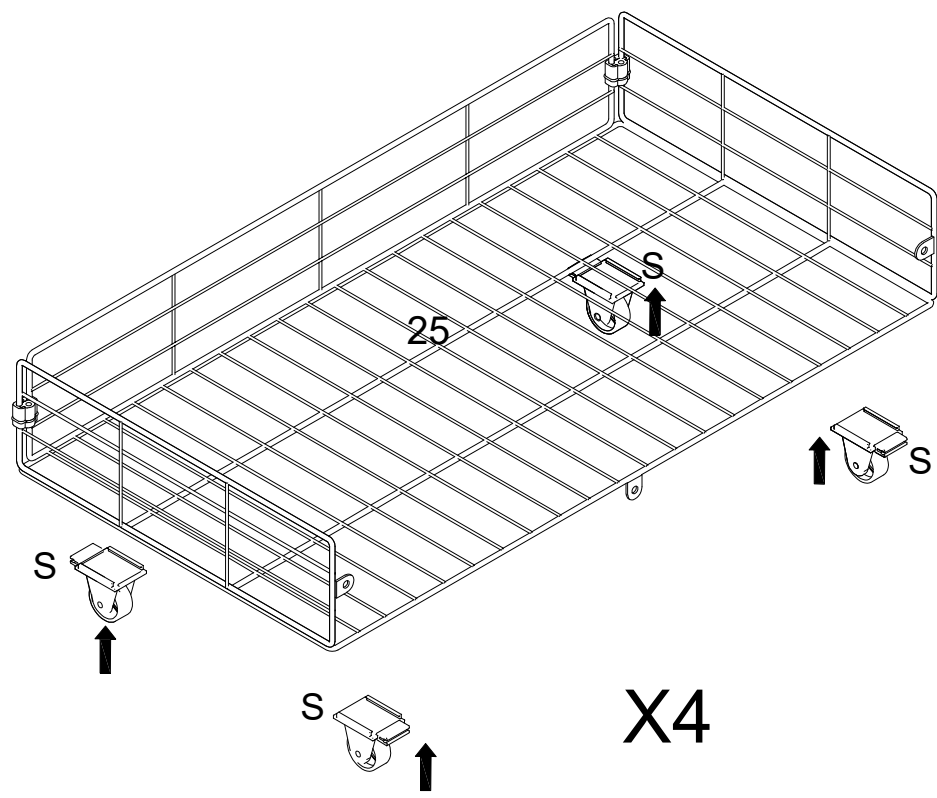
Step 27






S


X16

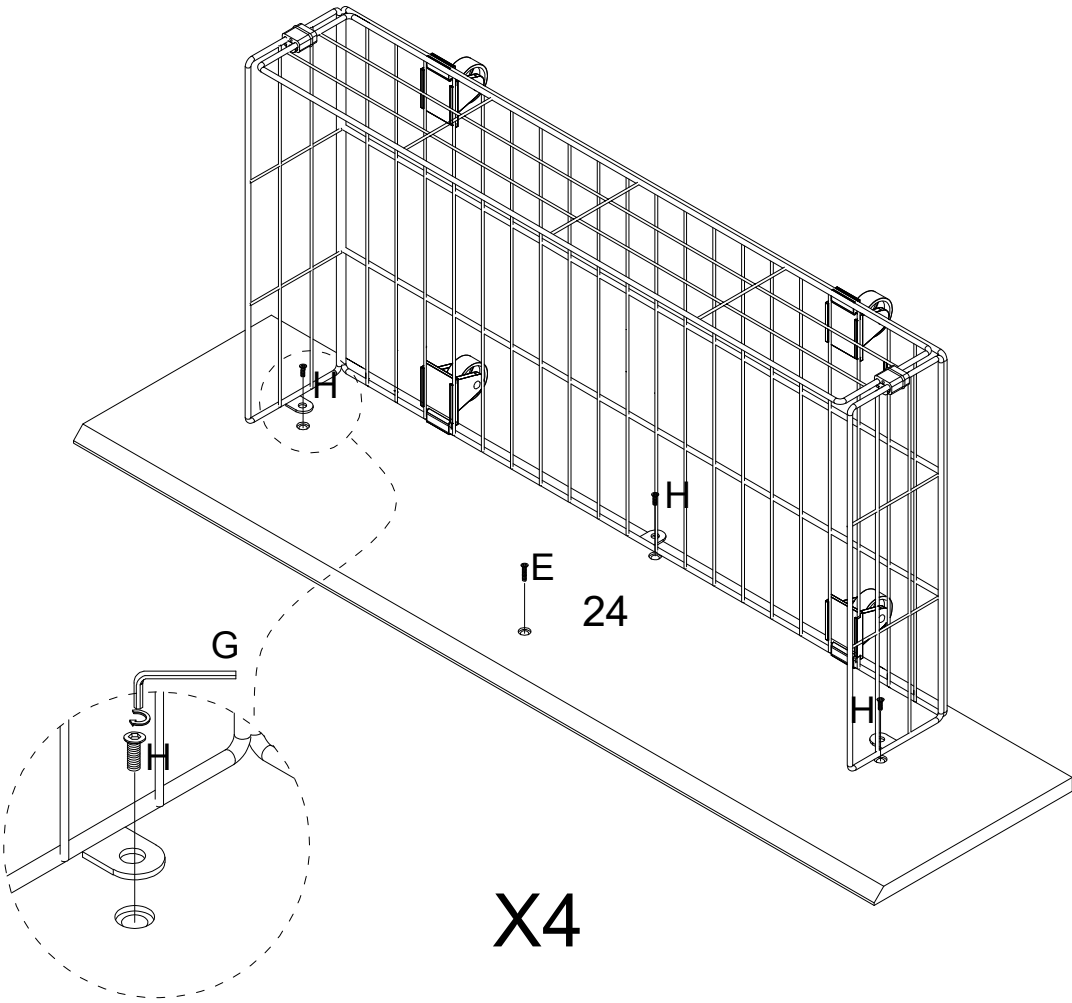Step 28




G	H	E
		
X1	X12	X4


Step 29

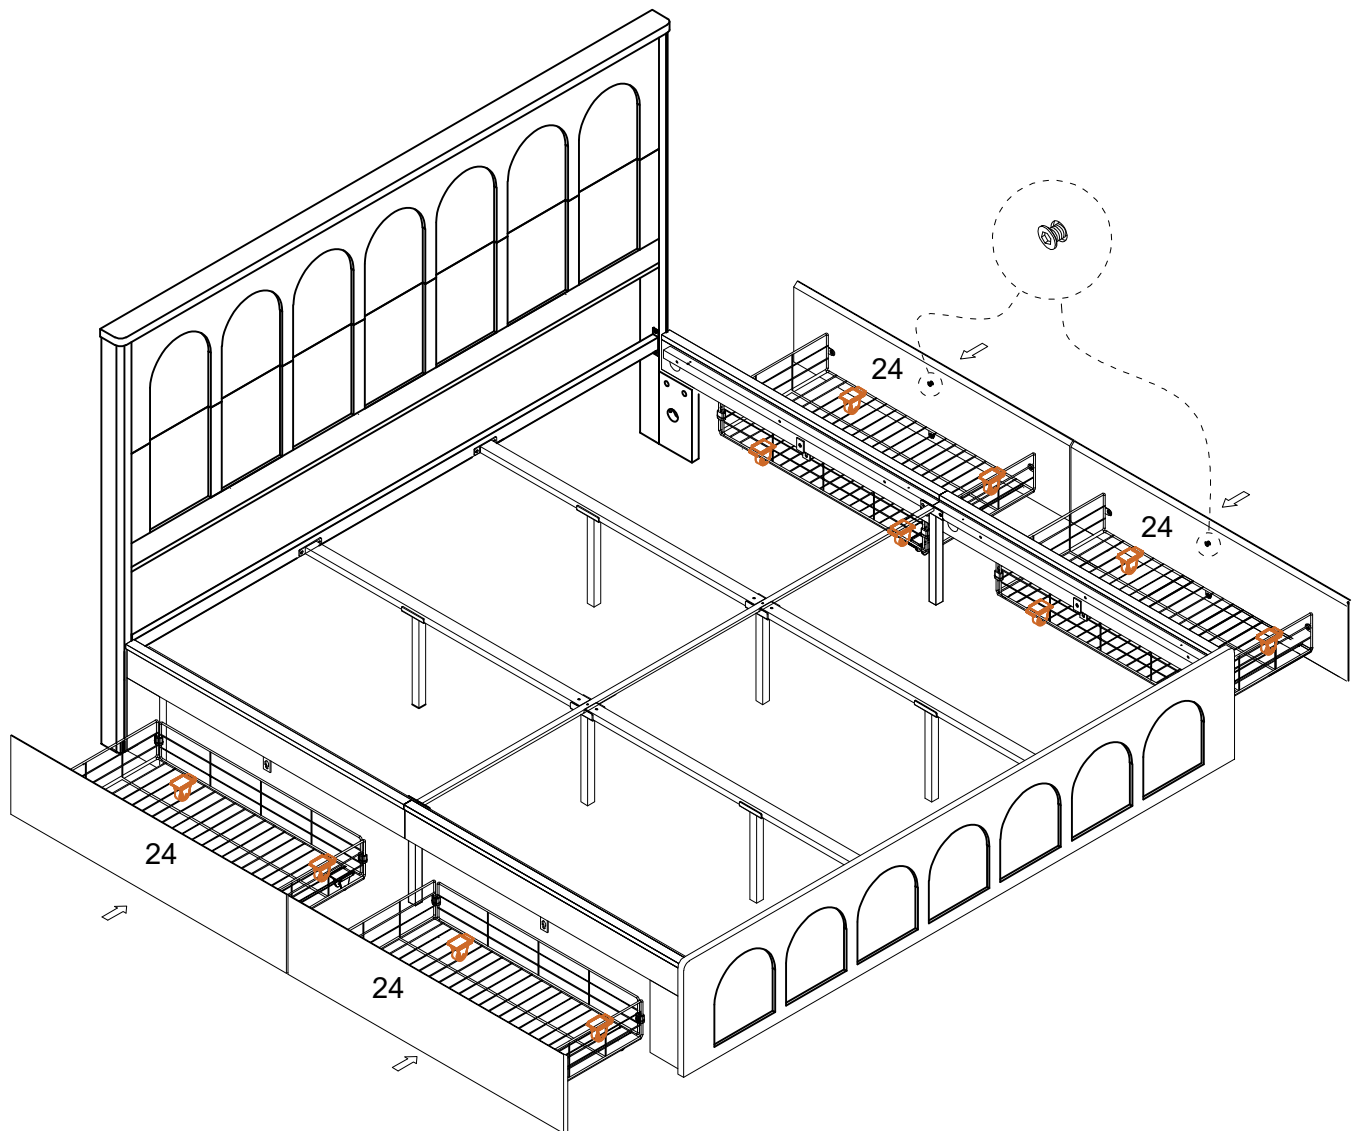


Step 30

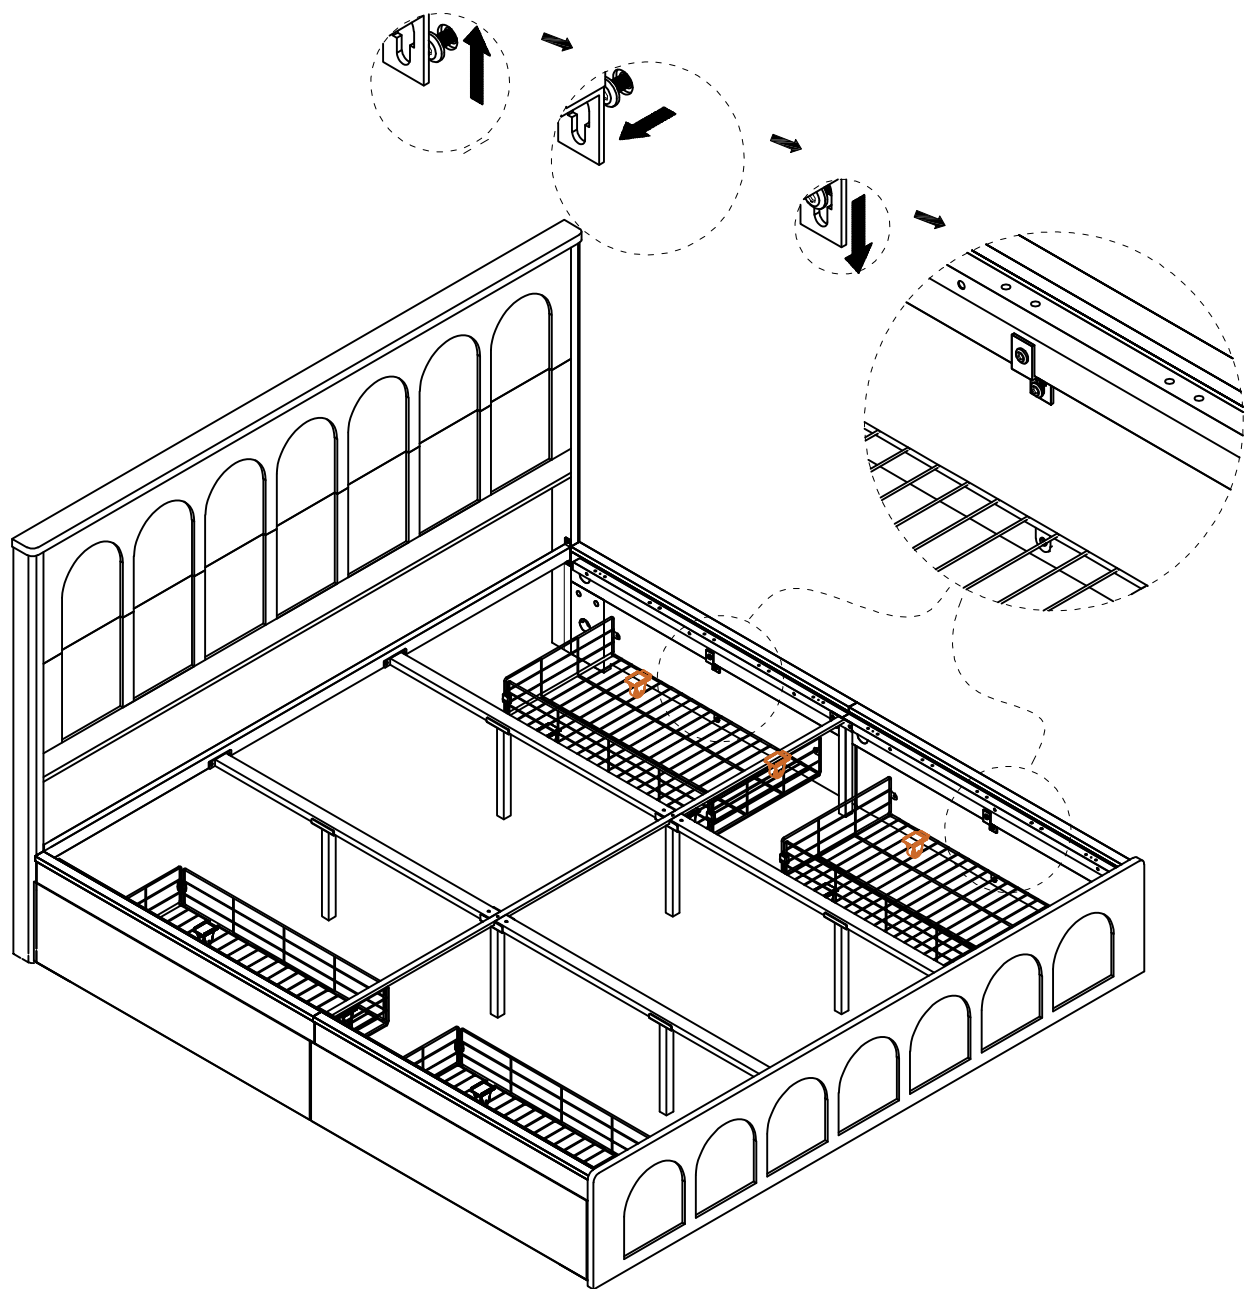


Step 31

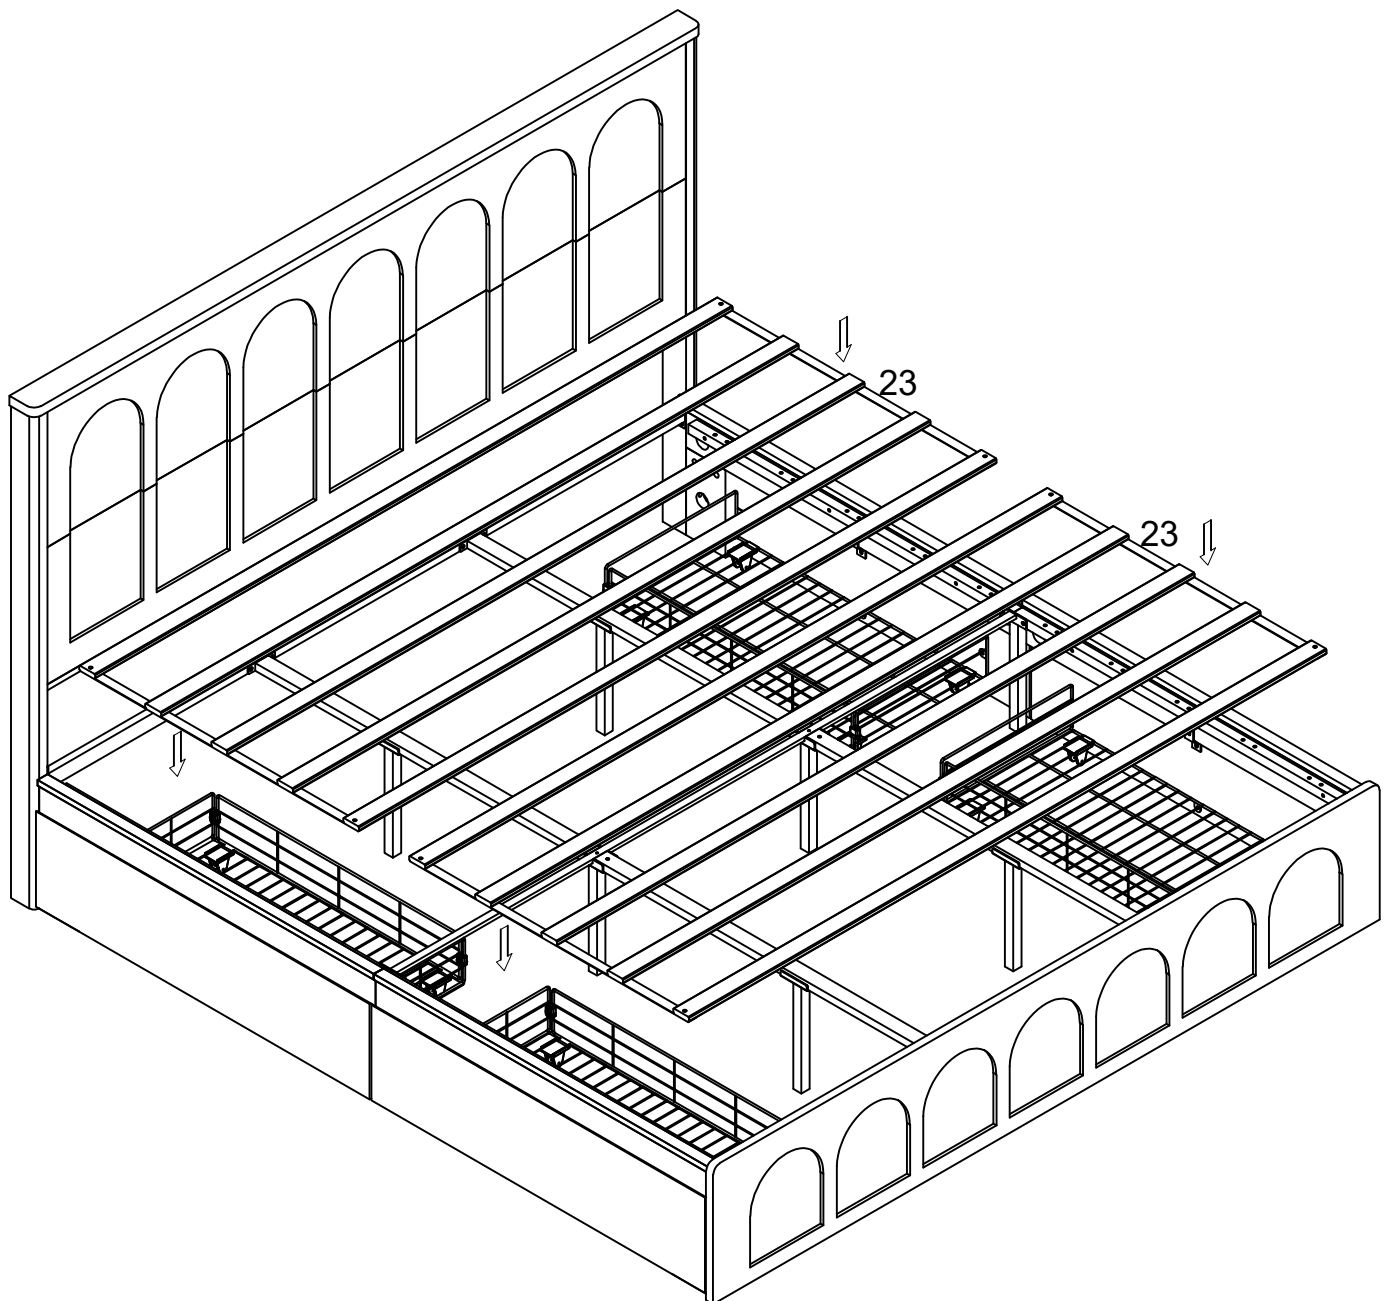

Step 32

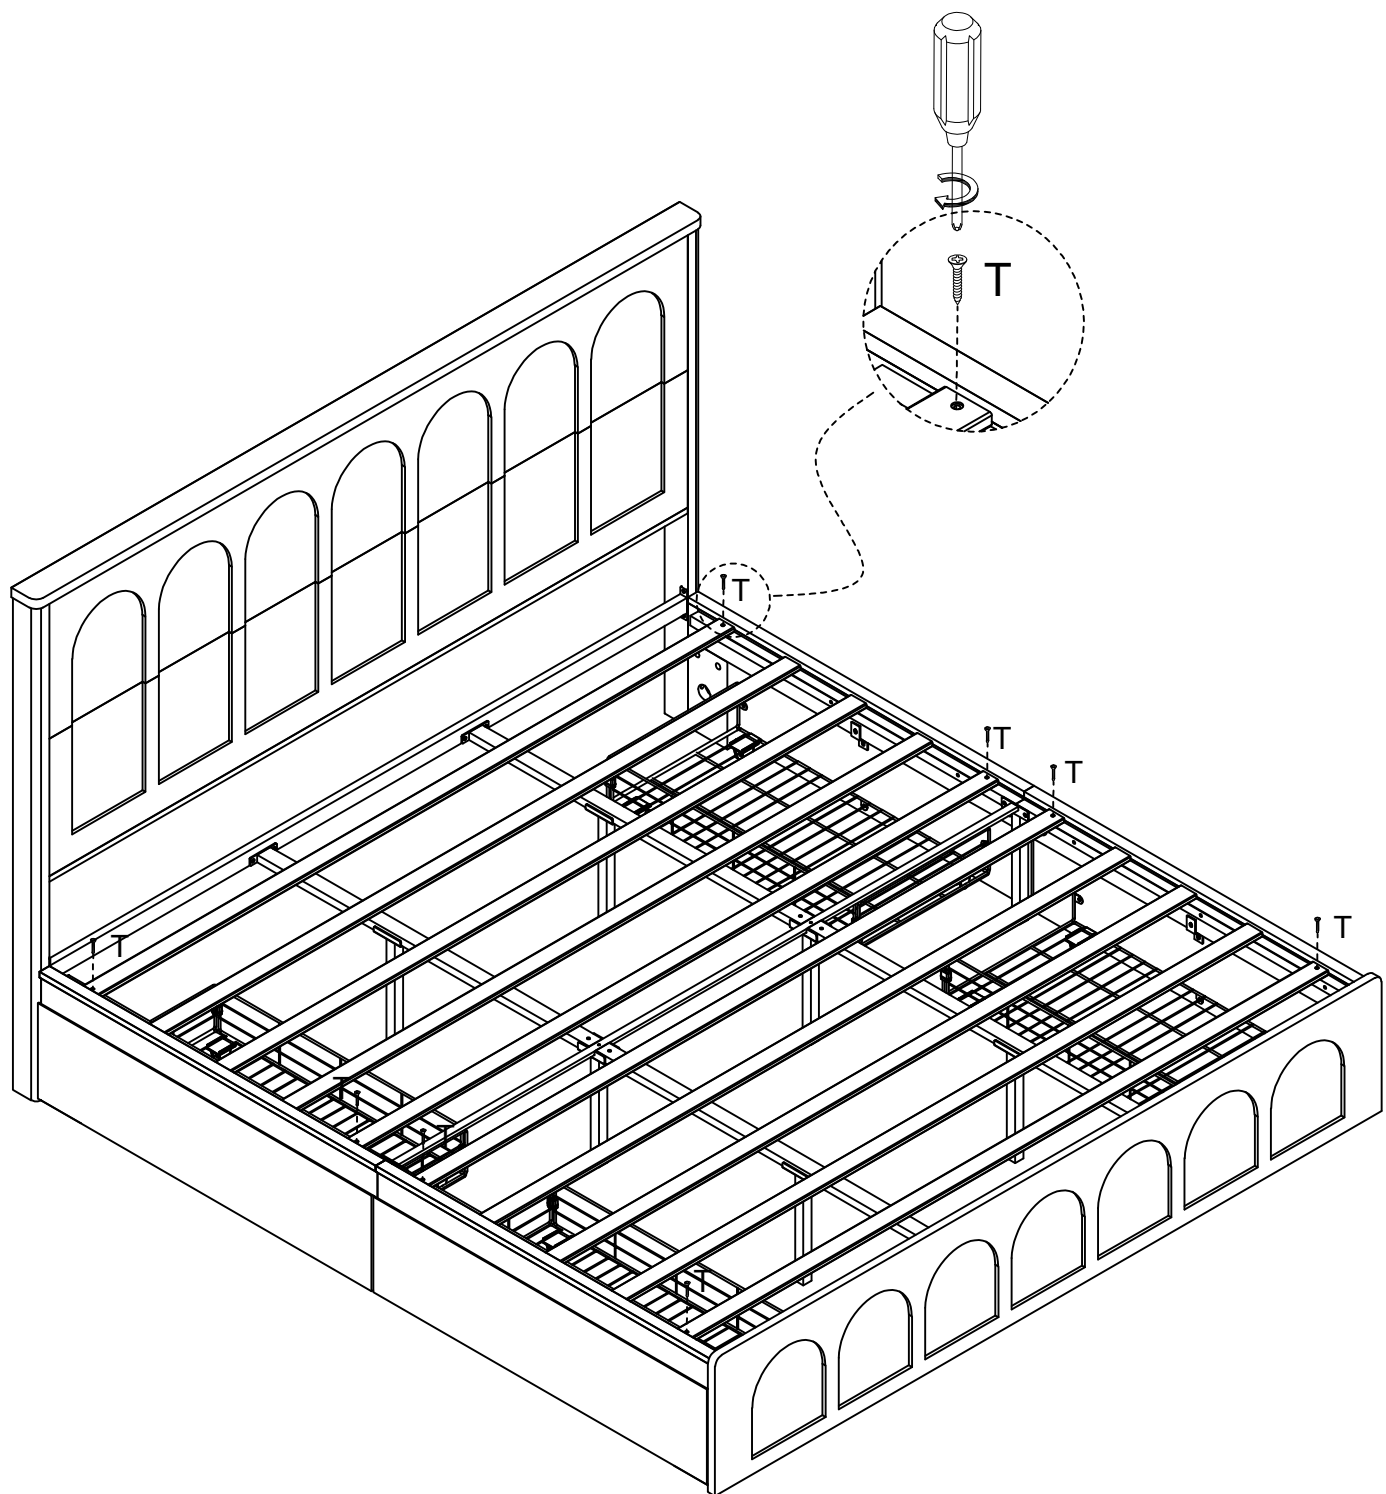

T

X8

Step 33

