


# Hall tree

**Assembly Instructions - Please keep for future reference**

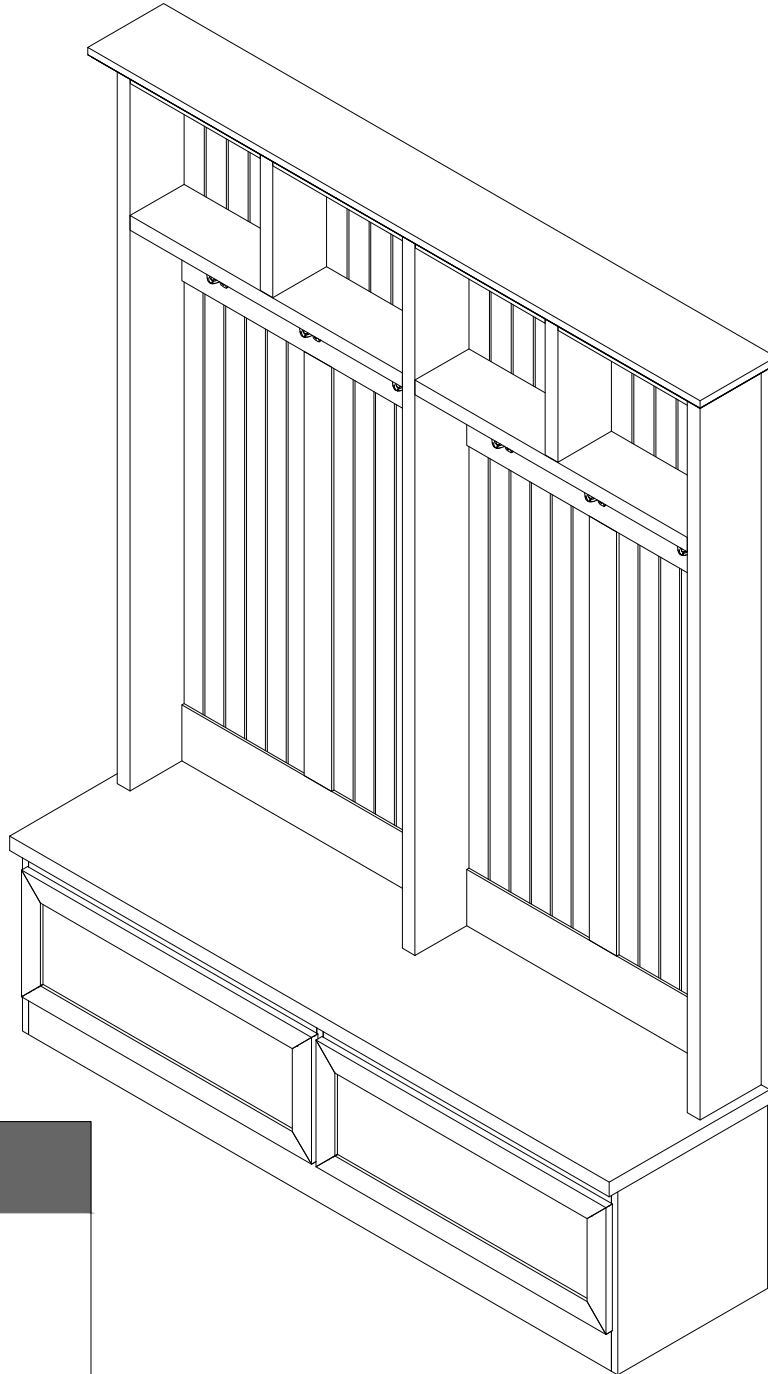

## Dimensions

Width-55.9inch

Depth-15inch

Height-75.6inch

**Important-Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.














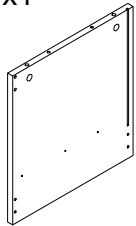
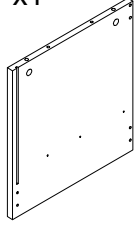
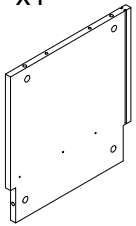










**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Components - Fittinas















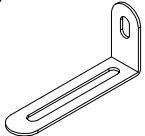

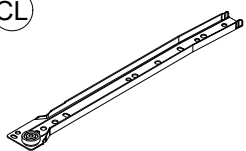
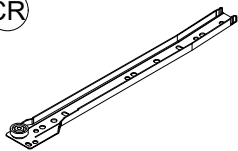
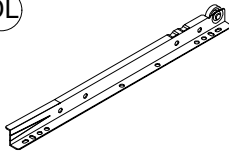
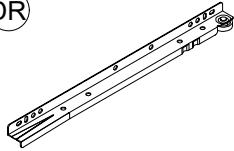
Please check you have all the panels listed below

<p>① x1</p>  <p>1450x180x35mm</p>	<p>② x1</p>  <p>1495x145x30mm</p>	<p>③ x1</p>  <p>1495x145x30mm</p>	<p>④ x1</p>  <p>1495x145x30mm</p>	<p>⑤ x2</p>  <p>645x145x30mm</p>	<p>⑥ x2</p>  <p>315x144x30mm</p>
<p>⑦ x2</p>  <p>645x165x15mm</p>	<p>⑧ x4</p>  <p>307x45x15mm</p>	<p>⑨ x2</p>  <p>870x65x15mm</p>	<p>⑩ x2</p>  <p>645x115x15mm</p>	<p>⑪ x4</p>  <p>322x314x2.5mm</p>	<p>⑫ x4</p>  <p>877x297x2.5mm</p>
<p>⑬ x1</p>  <p>1420x380x30mm</p>	<p>⑭ x1</p>  <p>380x355x15mm</p>	<p>⑮ x1</p>  <p>380x355x15mm</p>	<p>⑯ x1</p>  <p>380x355x15mm</p>	<p>⑰ x1</p>  <p>1380x90x15mm</p>	<p>⑱ x1</p>  <p>1380x90x15mm</p>
<p>⑲ x2</p>  <p>682x45x15mm</p>	<p>⑳ x2</p>  <p>689x297x2.5mm</p>	<p>㉑ x2</p>  <p>687x260x15mm</p>	<p>㉒ x2</p>  <p>300x165x12mm</p>	<p>㉓ x2</p>  <p>300x165x12mm</p>	<p>㉔ x2</p>  <p>634x165x12mm</p>
<p>㉕ x2</p>  <p>641x295x2.5mm</p>	<p>㉖ x2</p>  <p>287x45x12mm</p>				


# Components - Fittinas

Please check you have all the panels listed below

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.
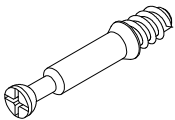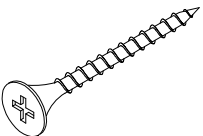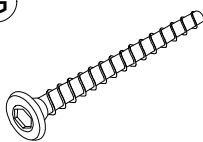
<b>(A)</b>  Ø6*35mm Cam Bolt x 58+1	<b>(B)</b>  Ø15*9mm Cam lock x 58+1	<b>(C)</b>  4*40mm Screw x 12+1	<b>(D)</b>  6*30mm Dowel x 56+2	<b>(E)</b>  3*12mm Screw x 24+1
<b>(F)</b>  6*50mm Dowel x 2	<b>(G)</b>  5*45mm Screw x 20+1	<b>(H)</b>  Clothes-Hook x 6	<b>(I)</b>  3.5*12mm Screw x 12+1	<b>(J)</b>  3*14mm Screw x 32+2
<b>(K)</b>  Plastic Nail x 32+1	<b>(L)</b>  30*15mm Non-Slip mat x 6	<b>(M)</b>  4*12mm Screw x 4	<b>(N)</b>  6*30mm Wall Anchor x 2	<b>(O)</b>  Iron sheet x 2
<b>(P)</b>  wrench x 1	<b>(CL)</b>  300mm Runner x 2	<b>(CR)</b>  300mm Runner x 2	<b>(DL)</b>  300mm Runner x 2	<b>(DR)</b>  300mm Runner x 2

## Tools required

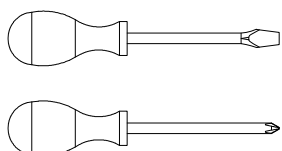

Phillips screwdriver  
( medium large )


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

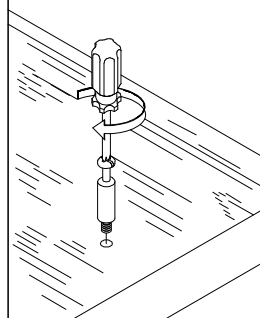

## Step 2

Push the male camlock into the entry hole.

2

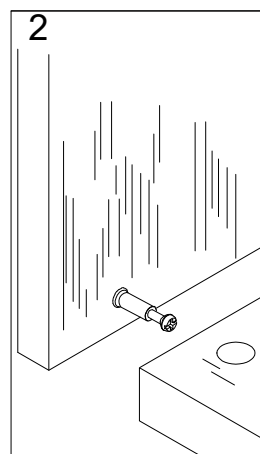


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

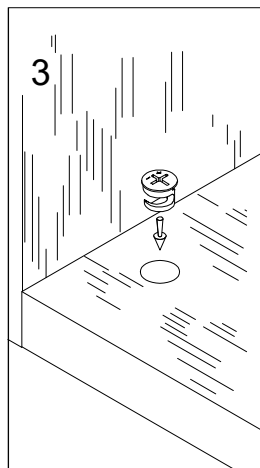


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4



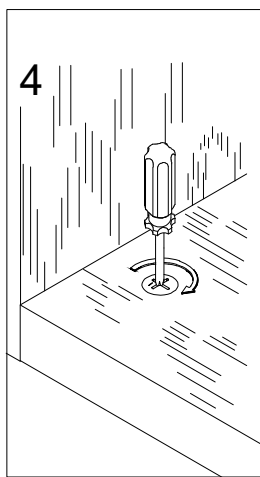







# Assembly Instructions

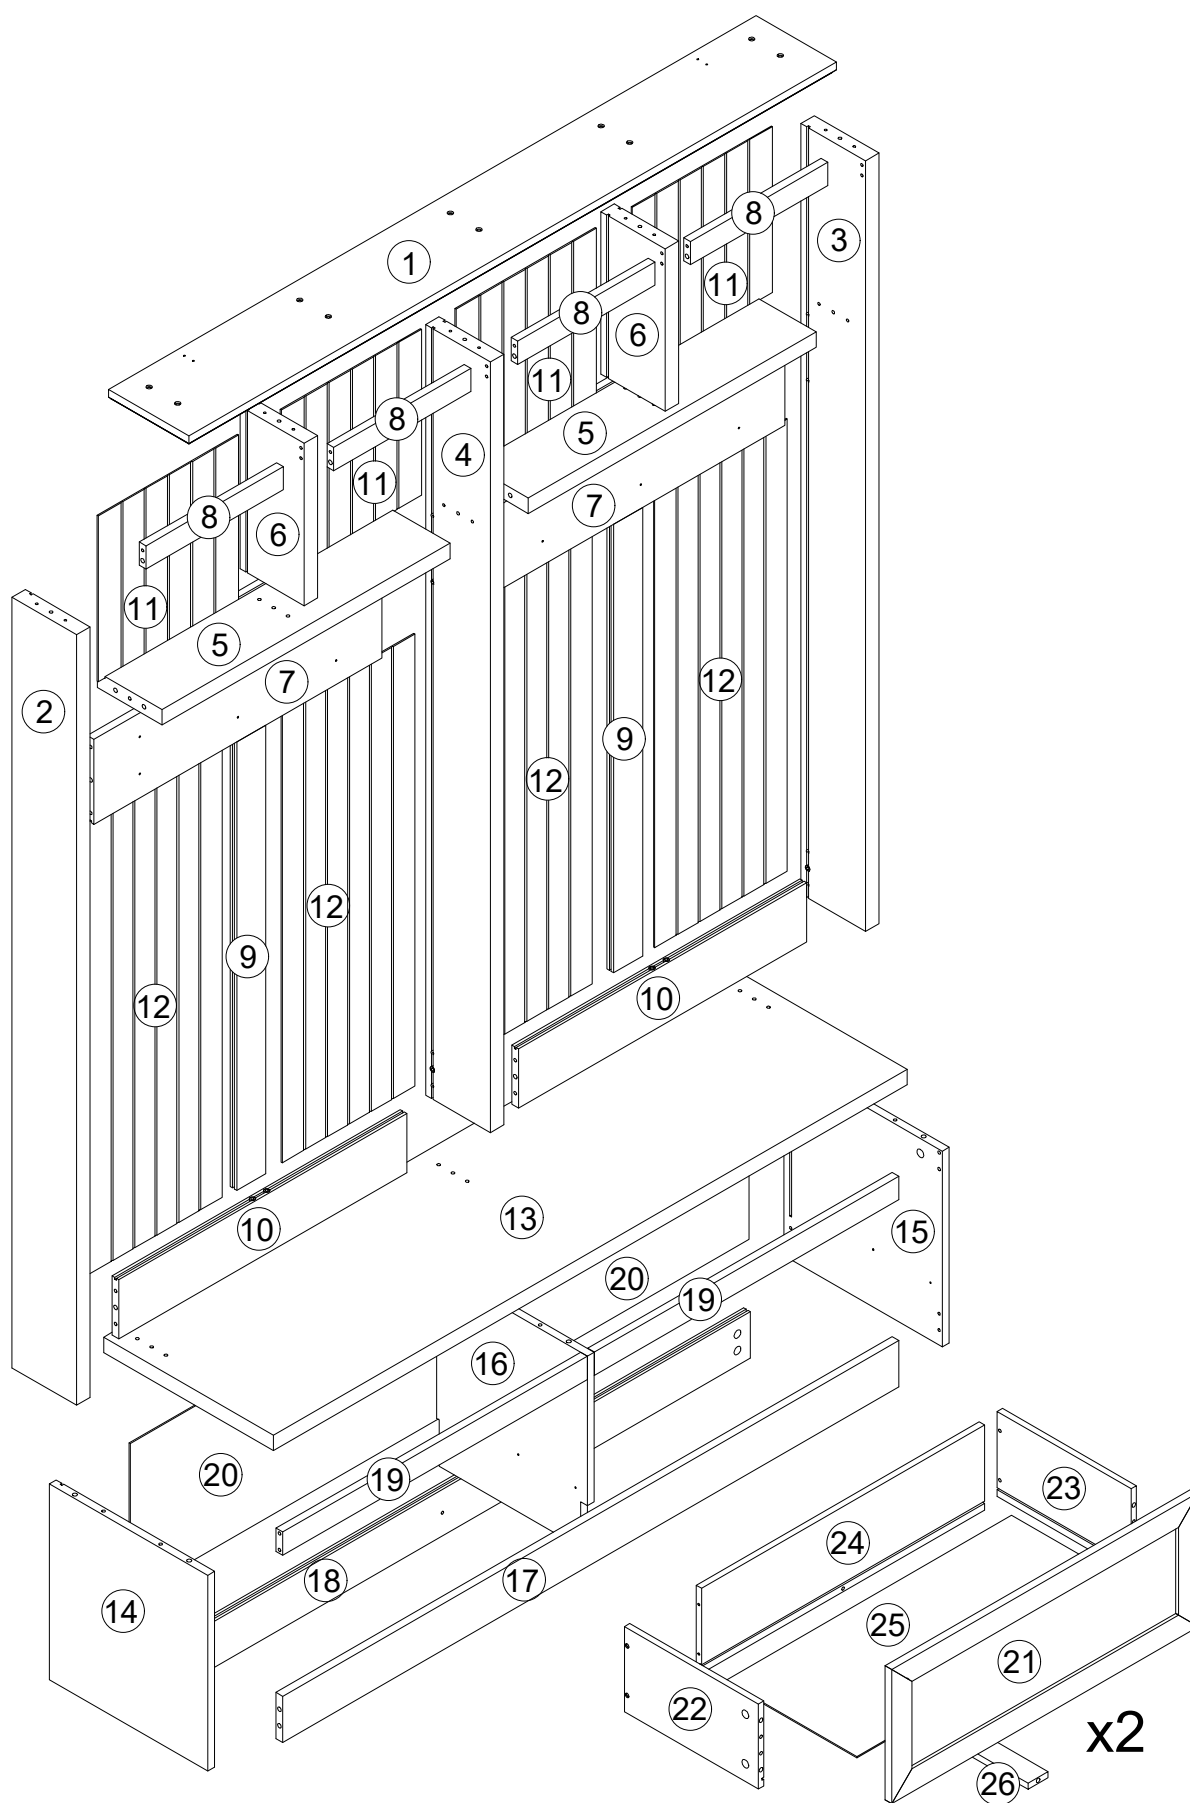


# Assembly Instructions

## step 1

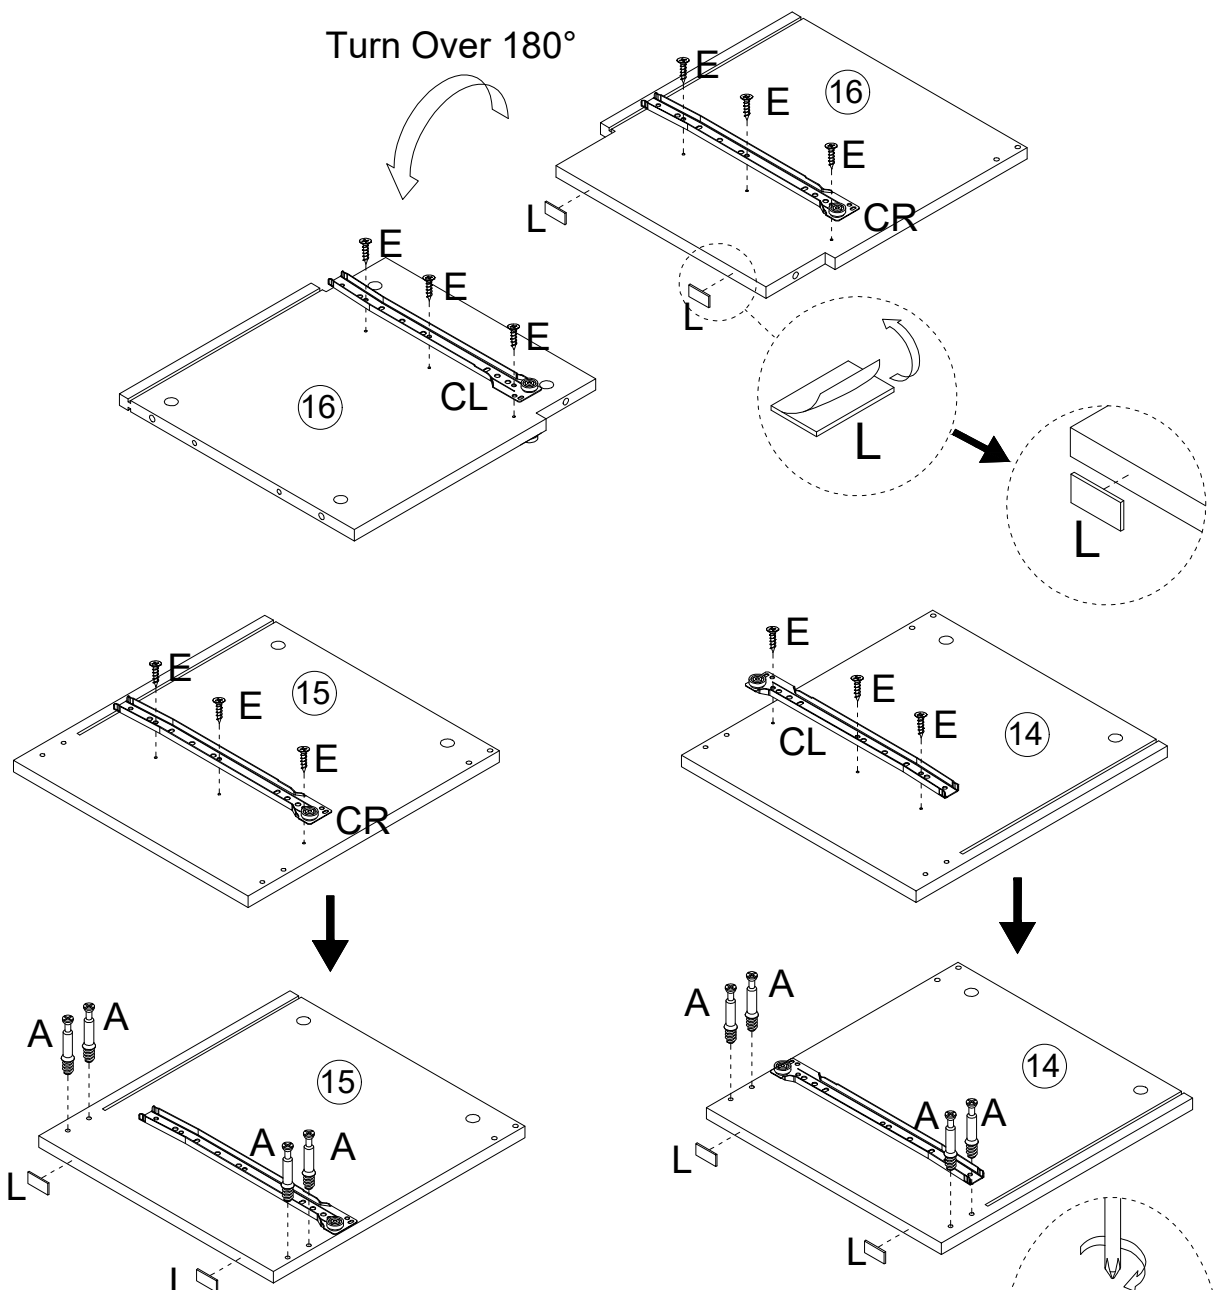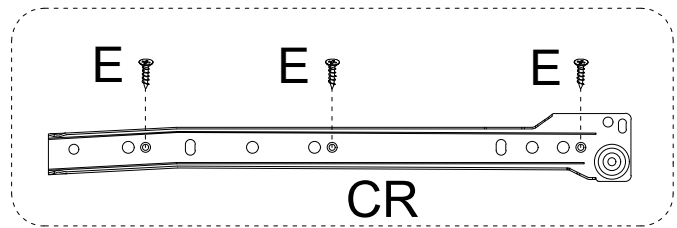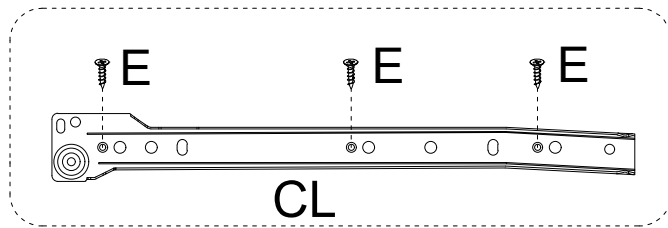


<p>(A)</p>  <p>Ø6*35mm Cam Bolt x 8</p>	<p>(E)</p>  <p>3*12mm Screw x 12</p>	<p>(L)</p>  <p>30*15mm Non-Slip mat x 6</p>	<p>(CL)</p>  <p>300mm Runner x 2</p>	<p>(CR)</p>  <p>300mm Runner x 2</p>
--	---	--	---	--

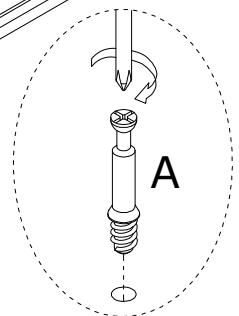


# Assembly Instructions

## step 2

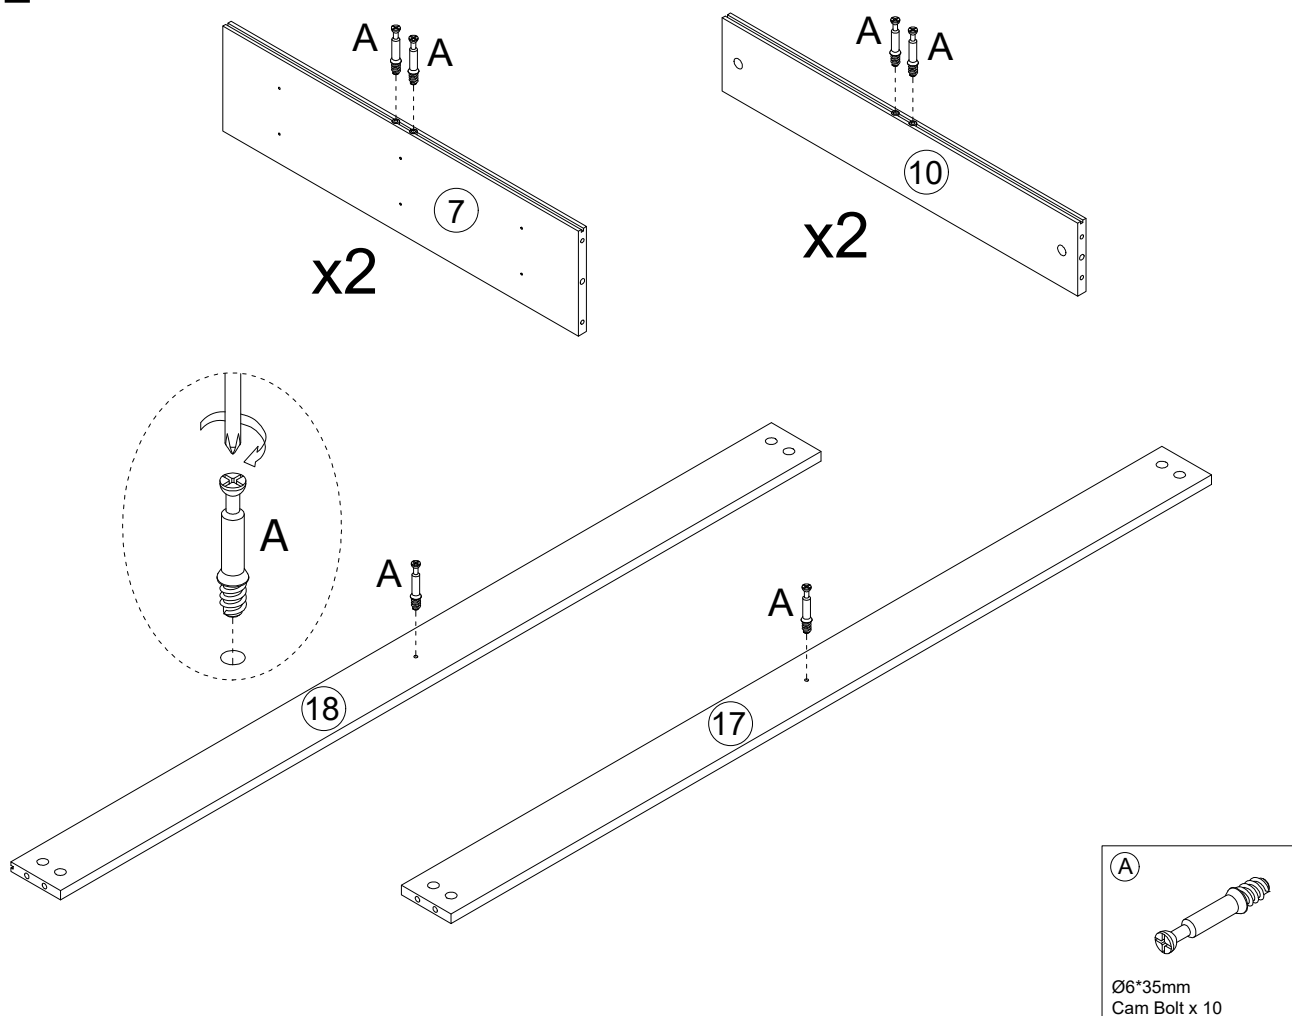


## step 3

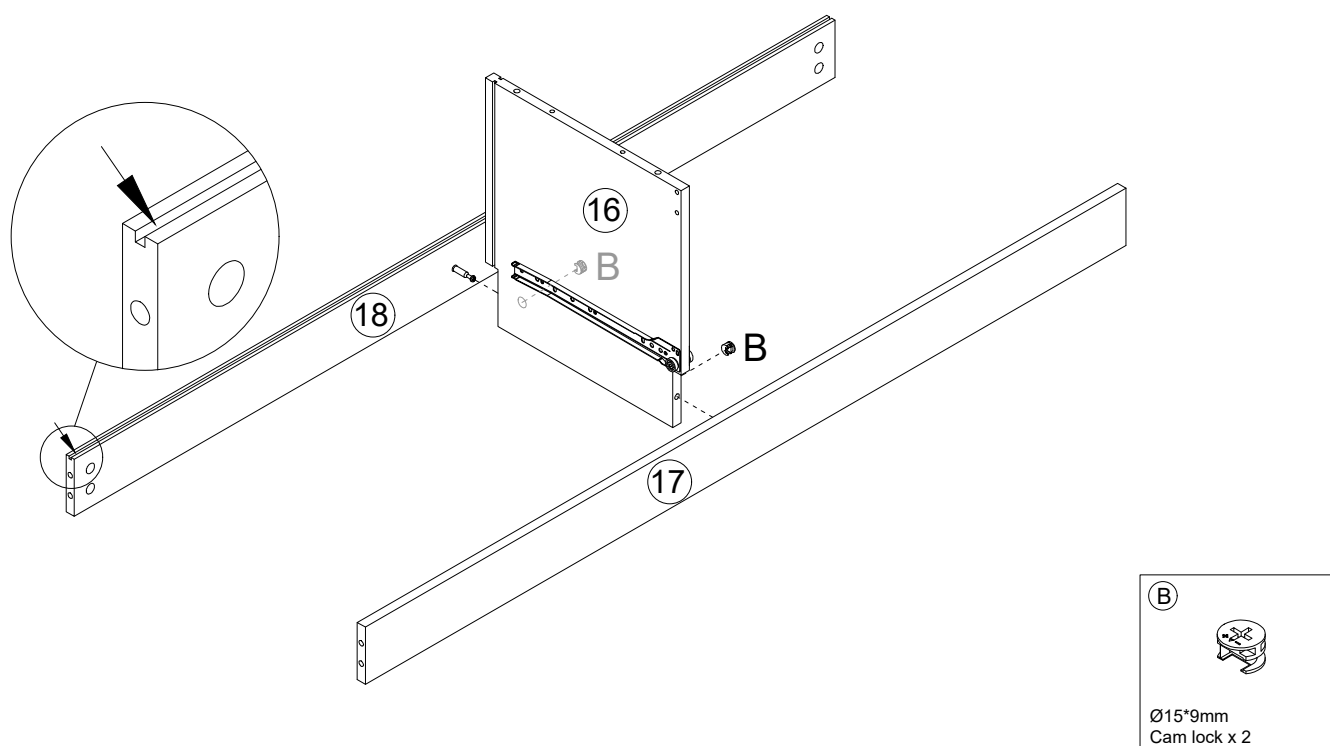


# Assembly Instructions

## step 4

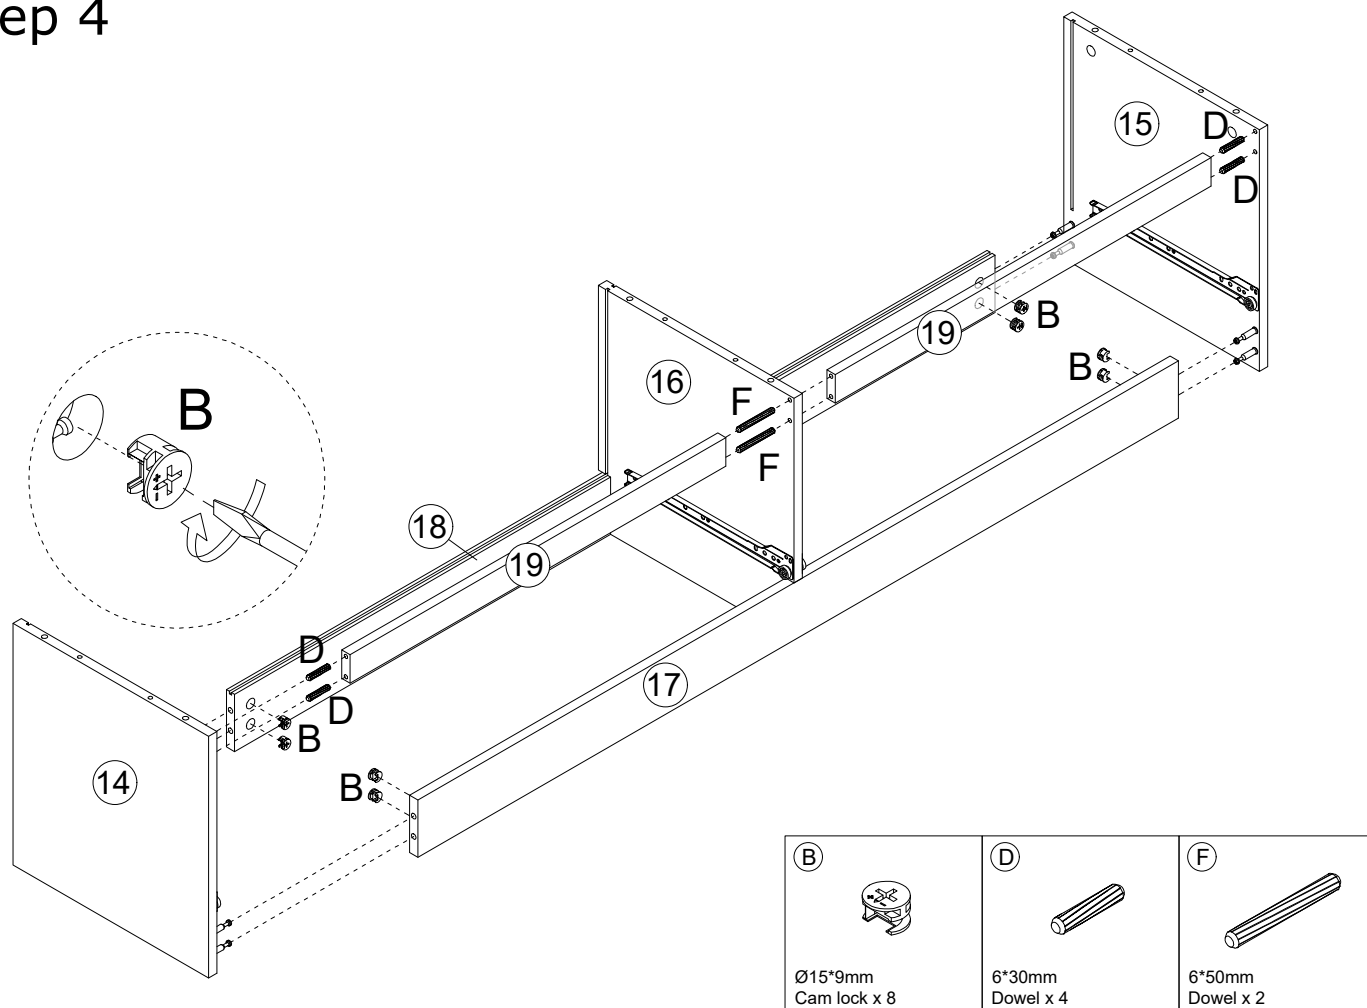


## step 5

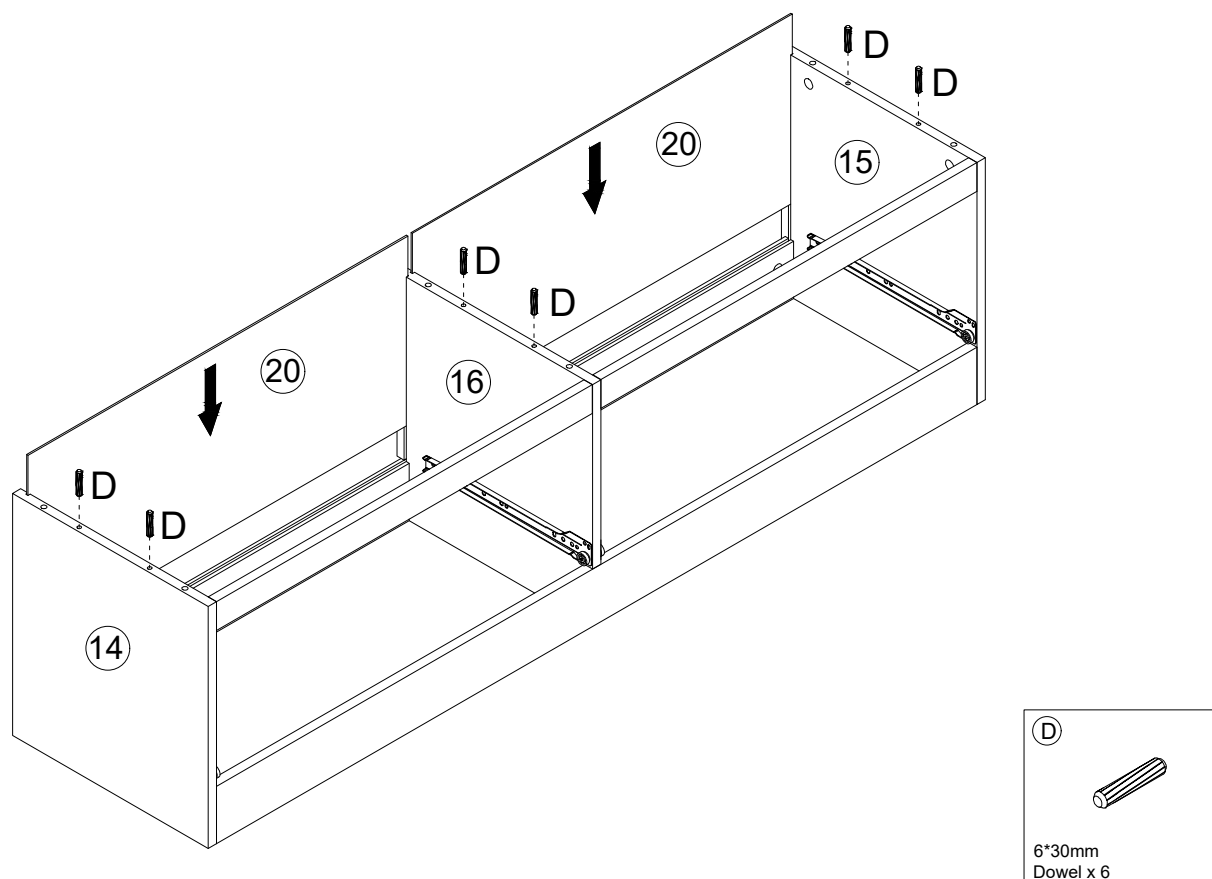


# Assembly Instructions

## step 6

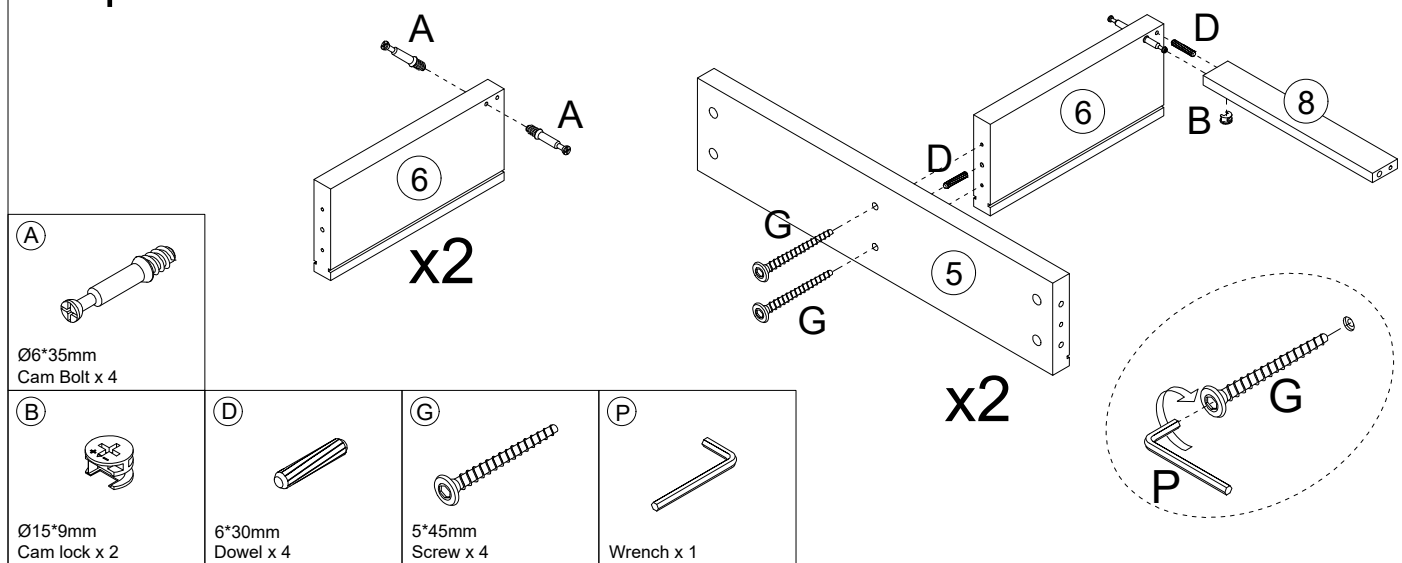





## step 7

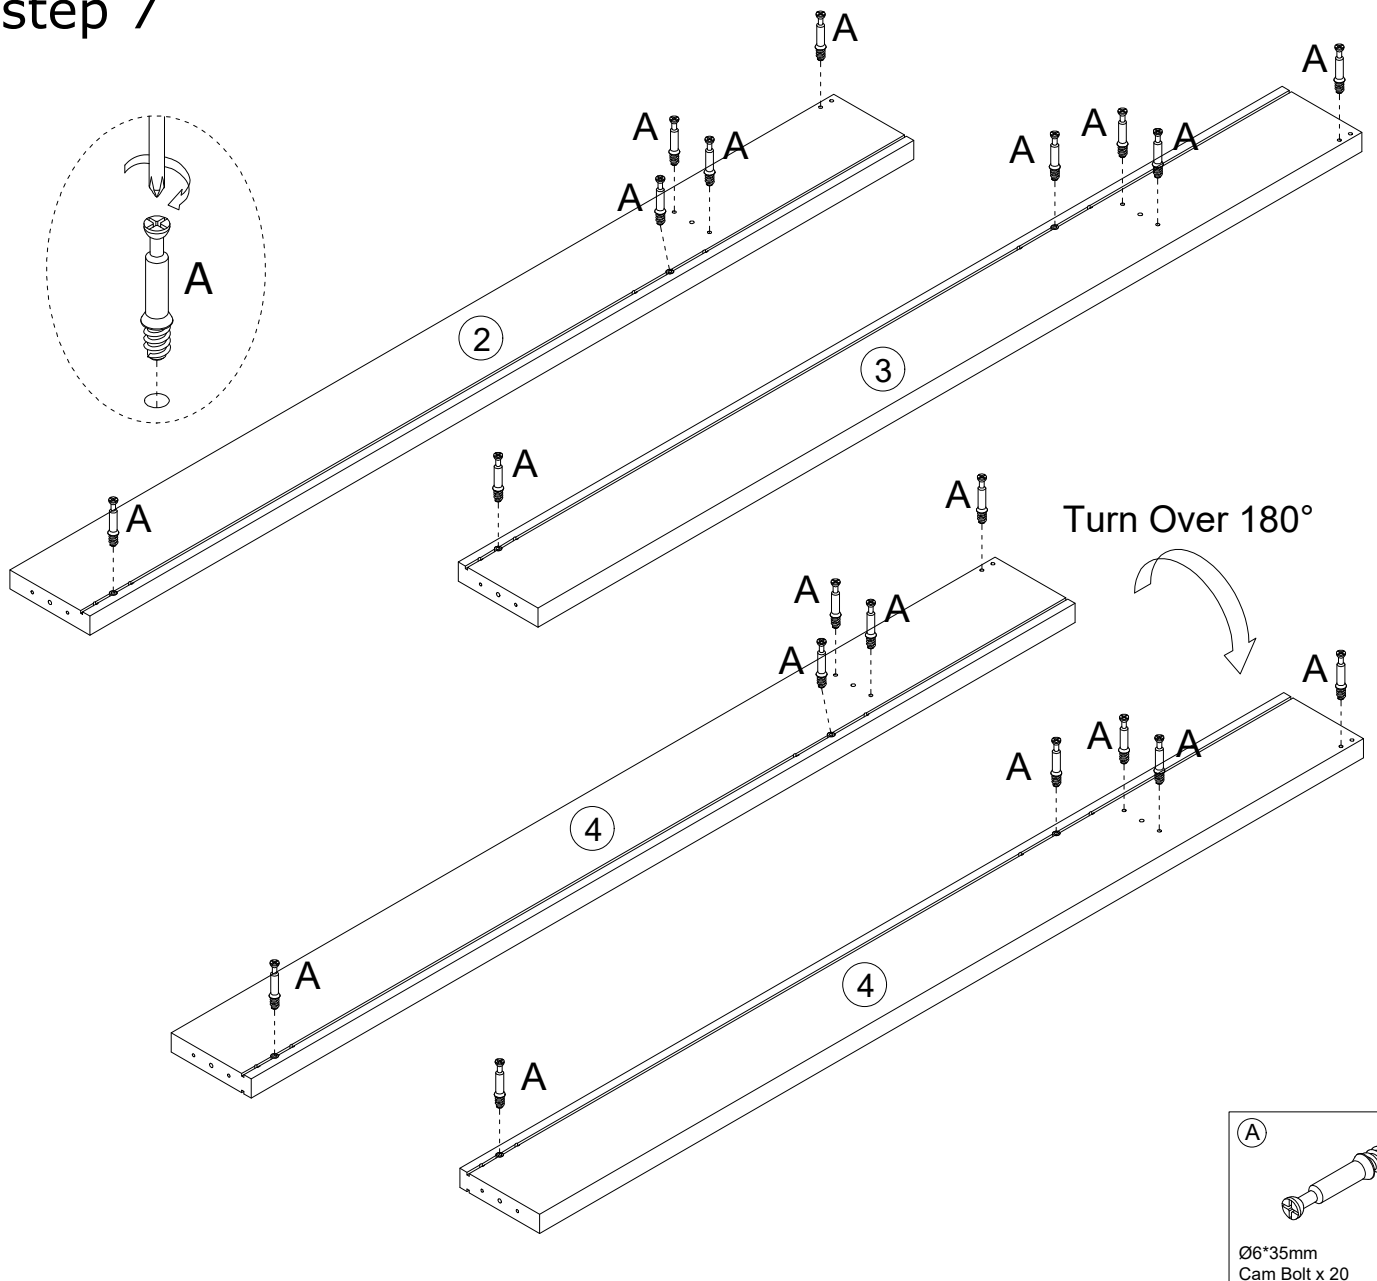

# Assembly Instructions


## step 8

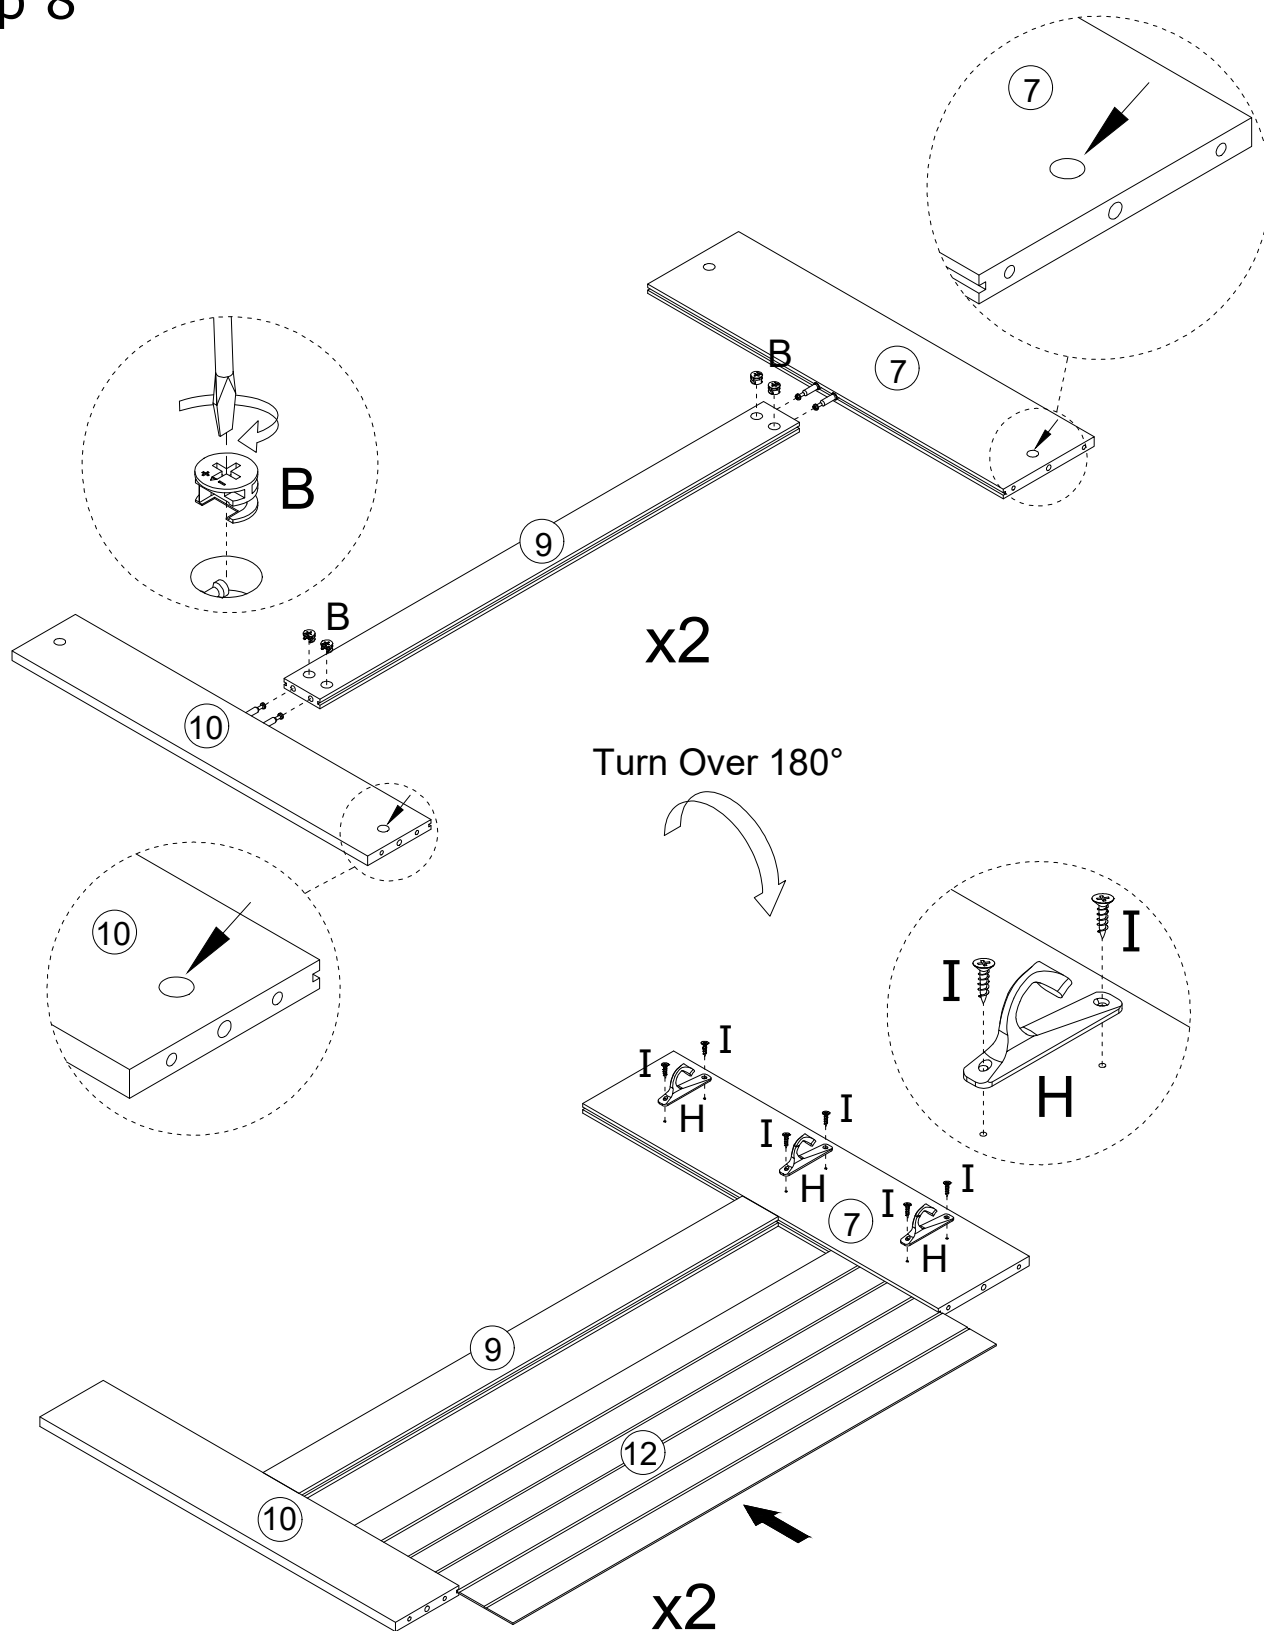


<p>(B)</p>  <p>Ø15*9mm Cam lock x 8</p>	<p>(H)</p>  <p>Clothes-Hook x 6</p>	<p>(I)</p>  <p>3.5*12mm Screw x 12</p>
--	--	---

# Assembly Instructions

## step 9


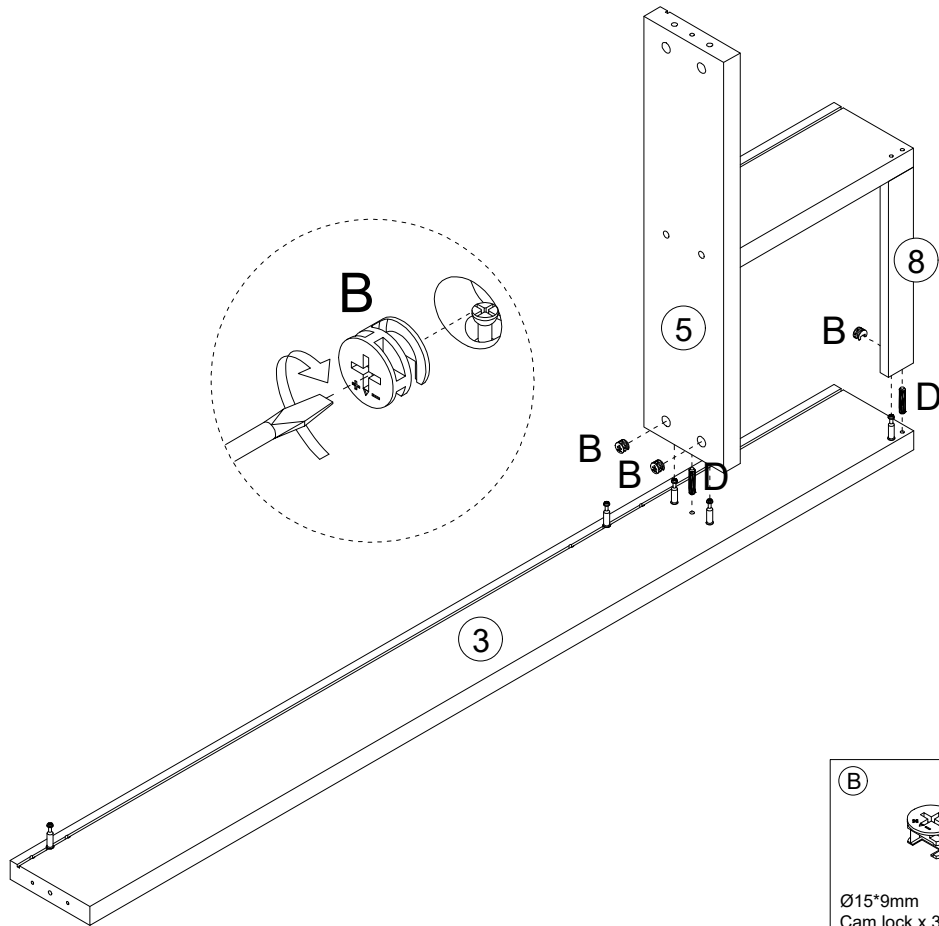


## step 10


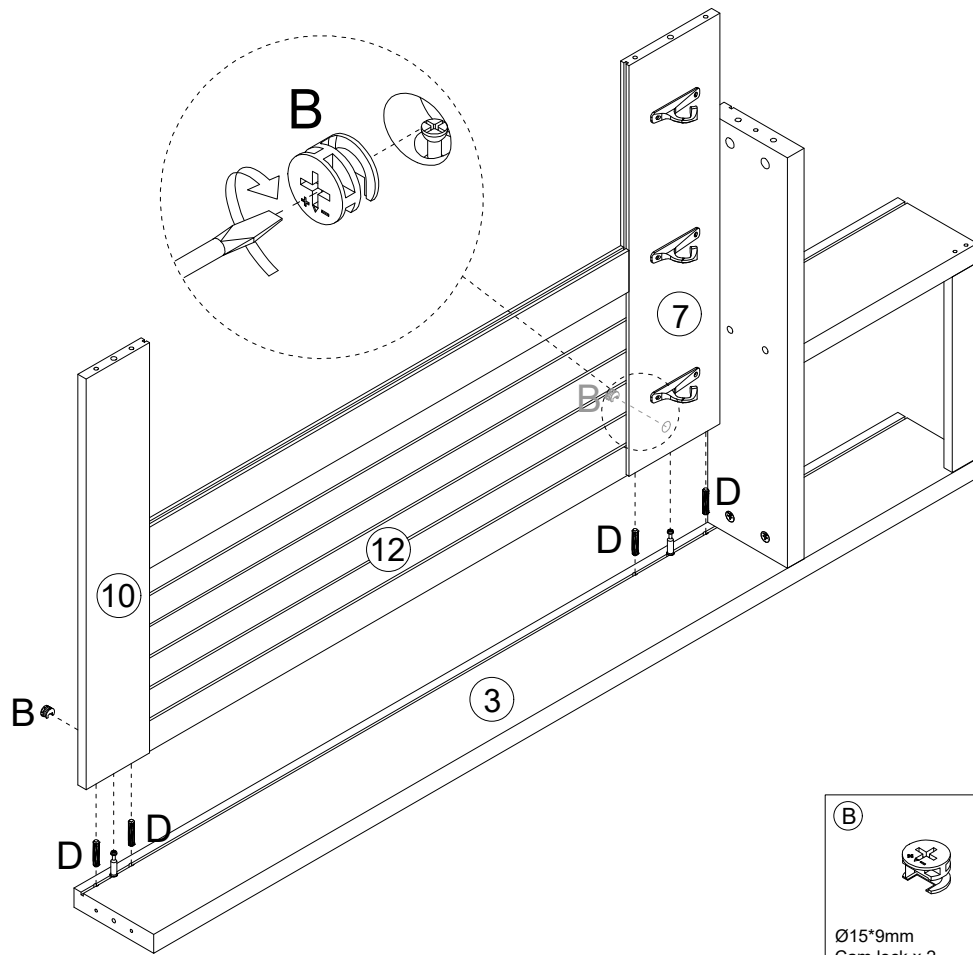


# Assembly Instructions

## step 11

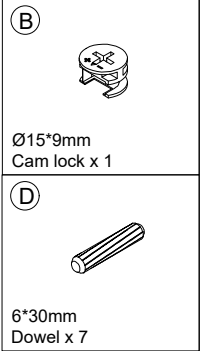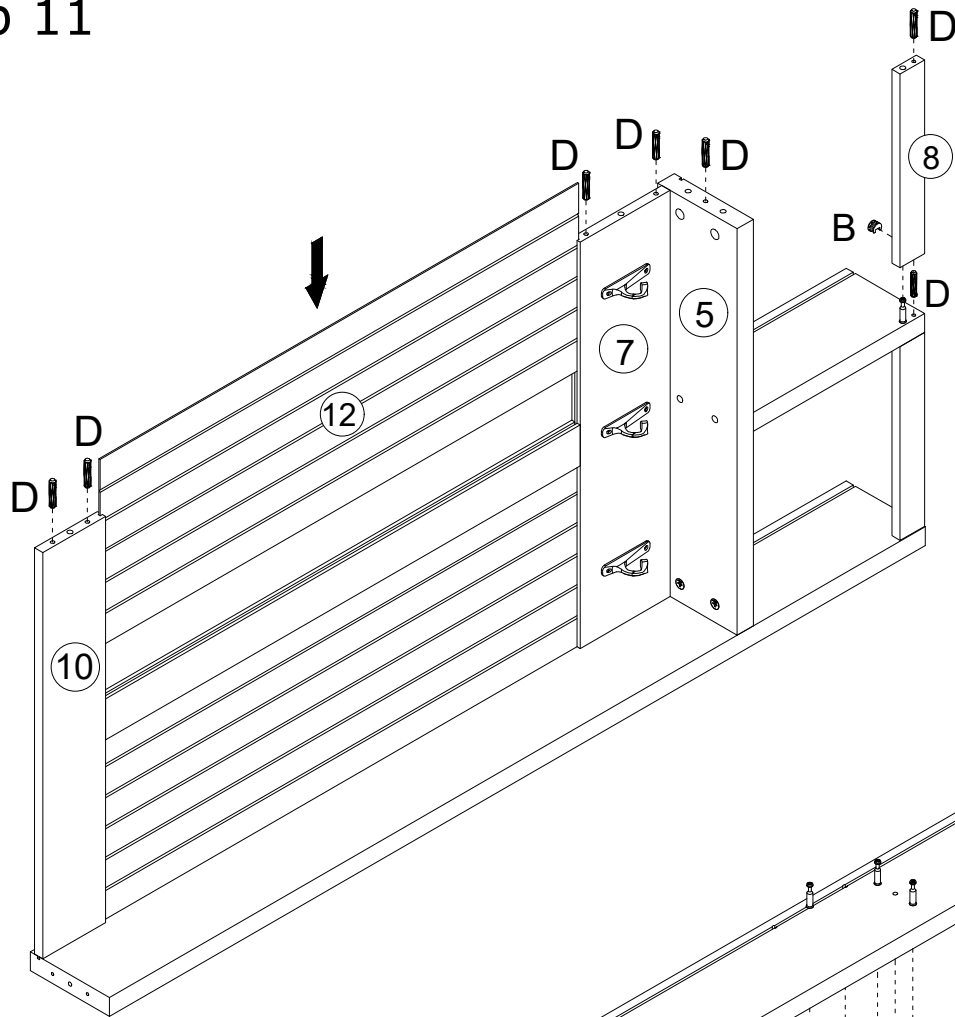


## step 12

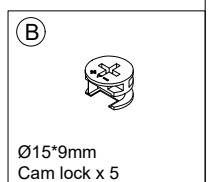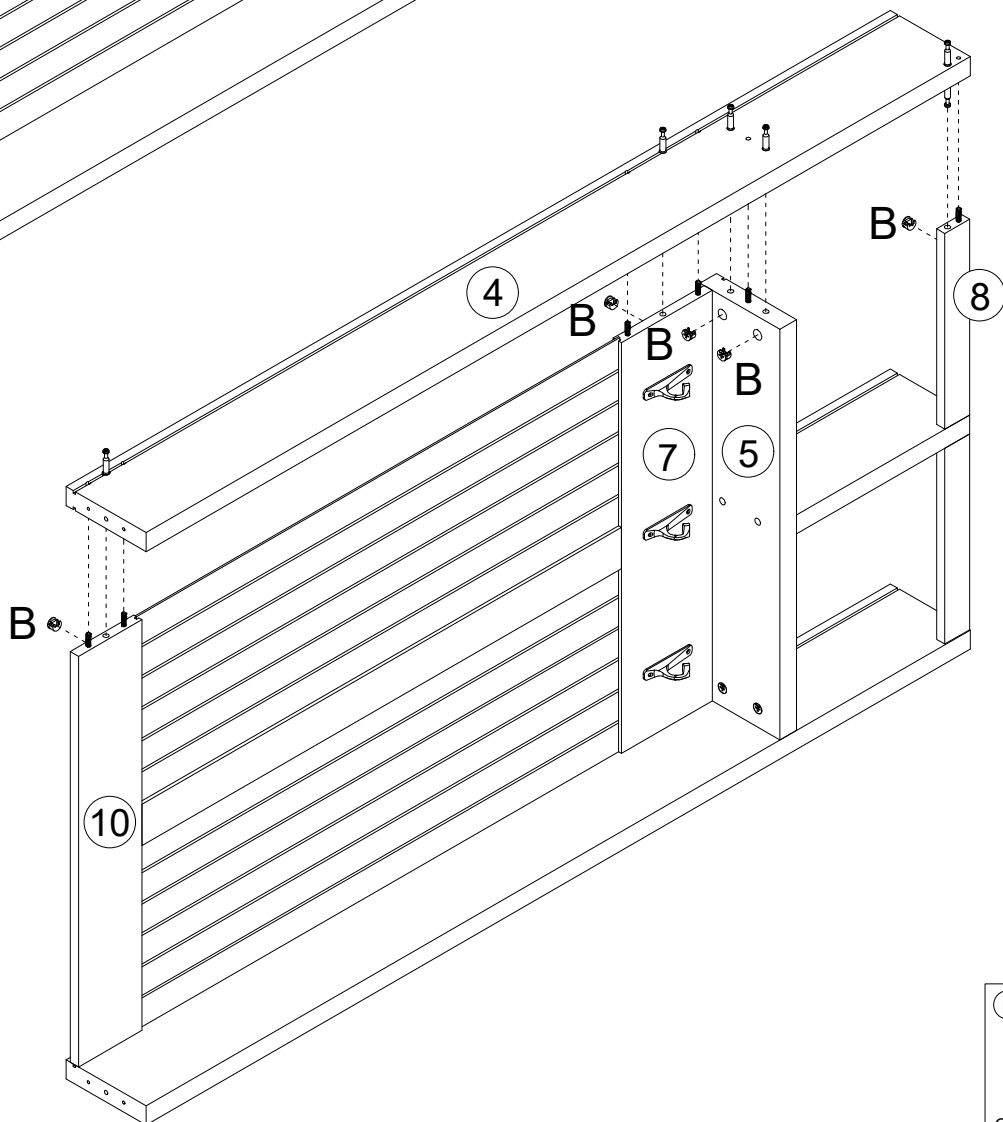

# Assembly Instructions

## step 13

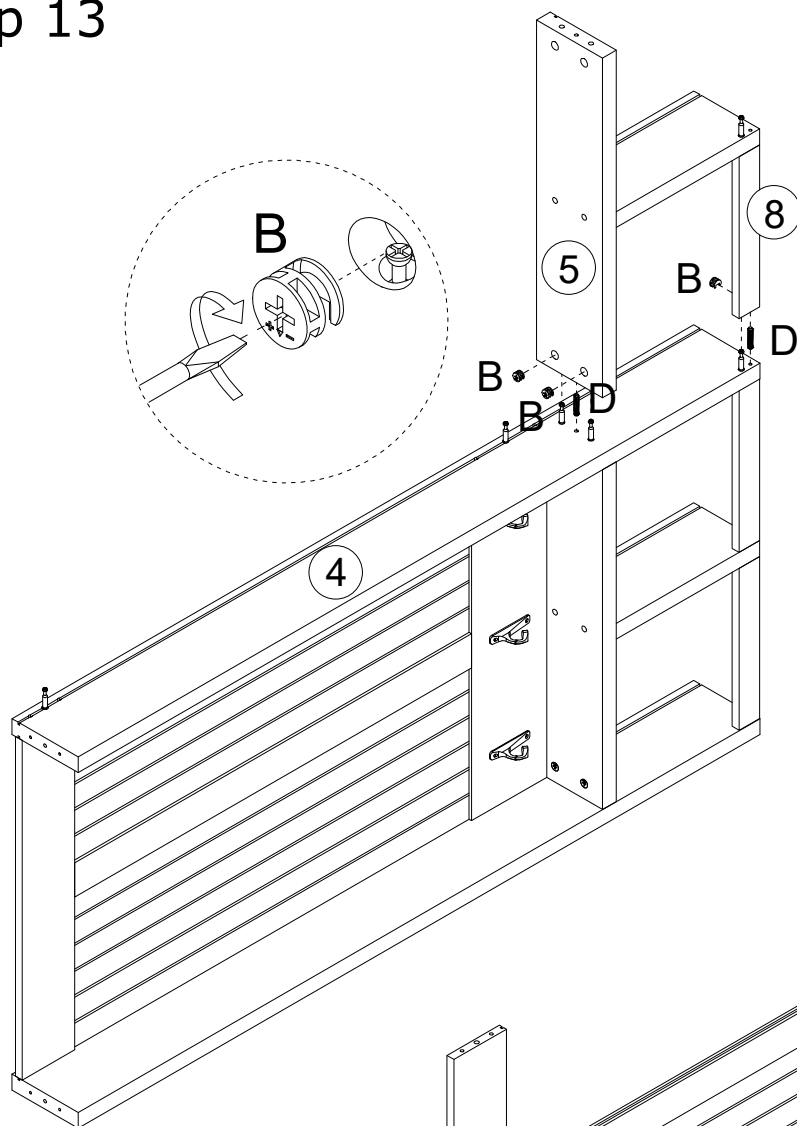

(B)




Ø15\*9mm  
Cam lock x 3

(D)



6\*30mm  
Dowel x 2

## step 14

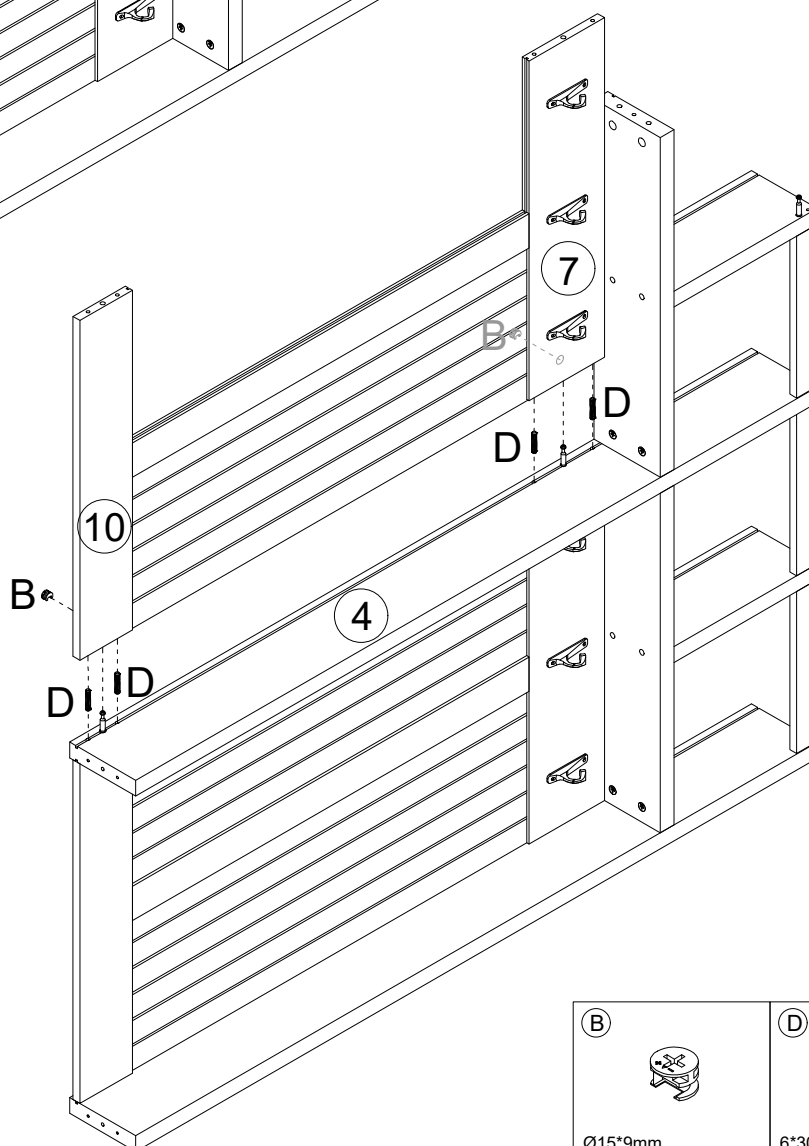

(B)



Ø15\*9mm  
Cam lock x 2


(D)



6\*30mm  
Dowel x 4

# Assembly Instructions

## step 15

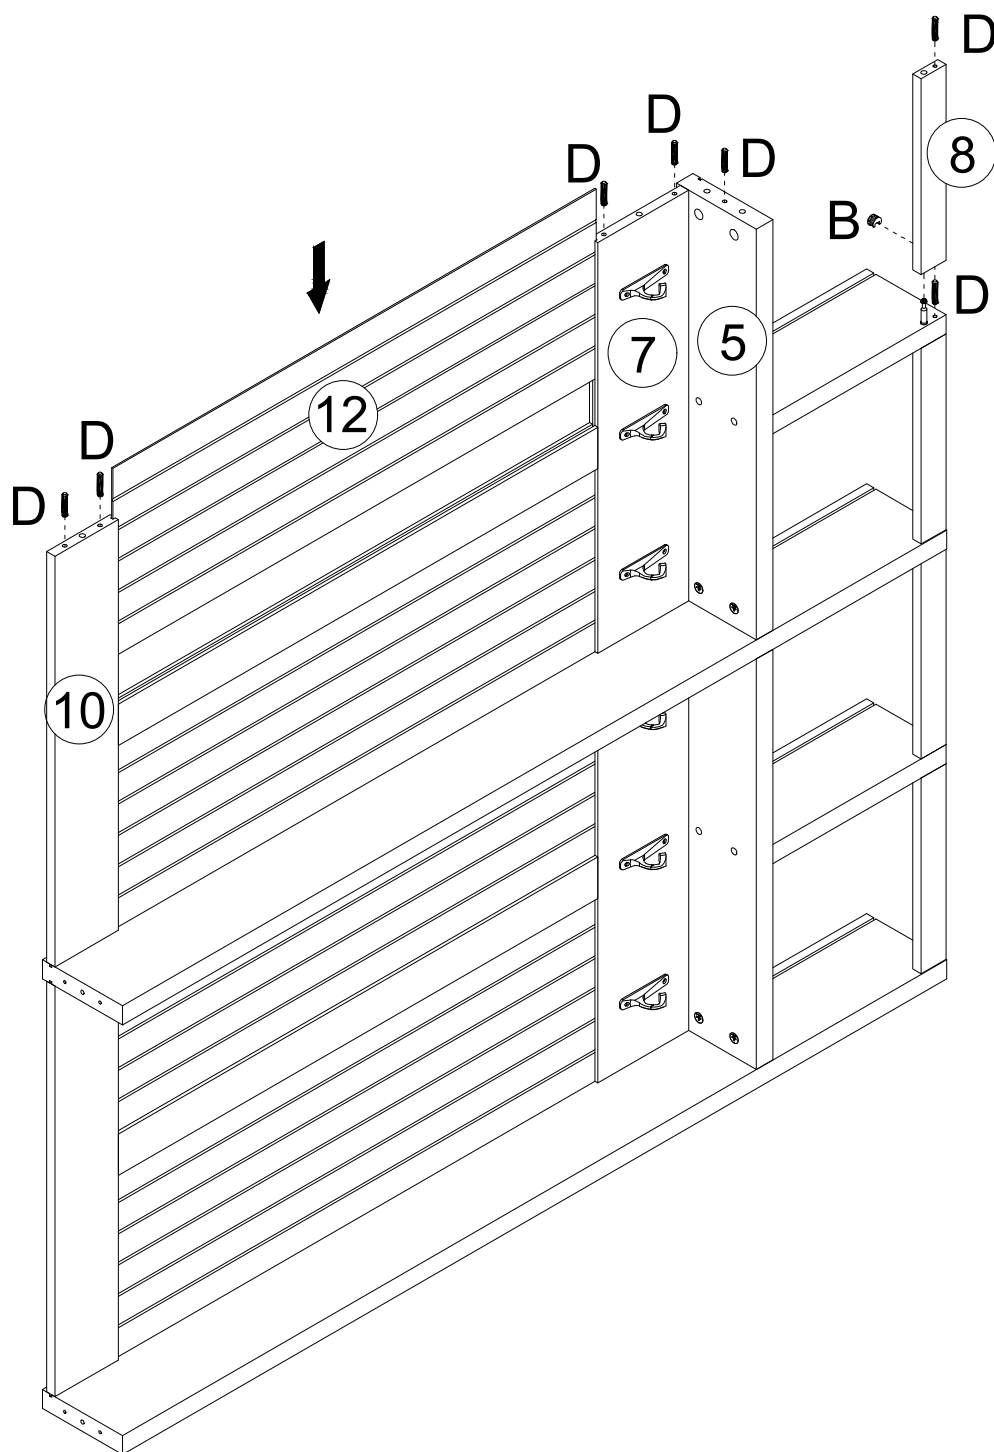

(B)



Ø15\*9mm  
Cam lock x 1



(D)



6\*30mm  
Dowel x 7



# Assembly Instructions

## step 16

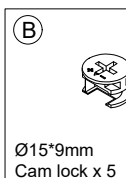
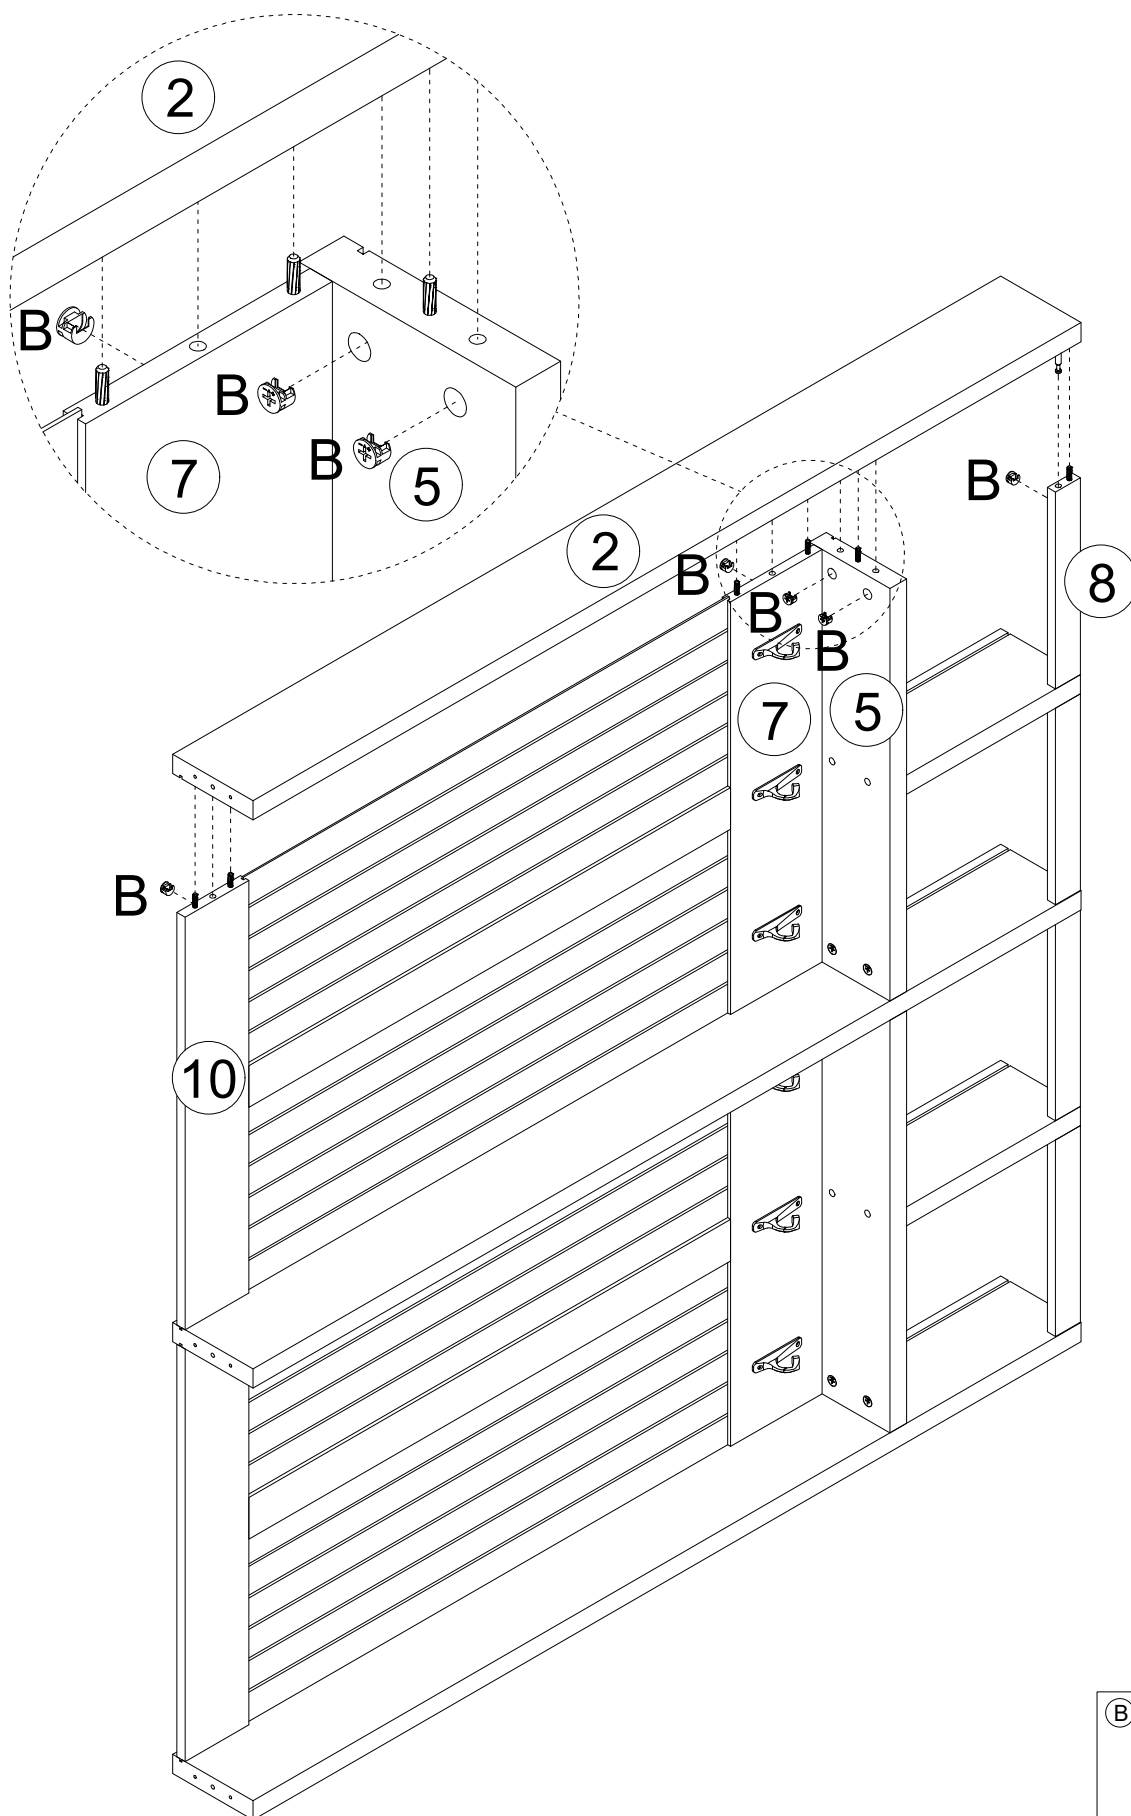


# Assembly Instructions

step 17

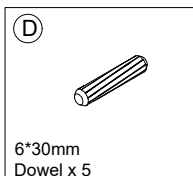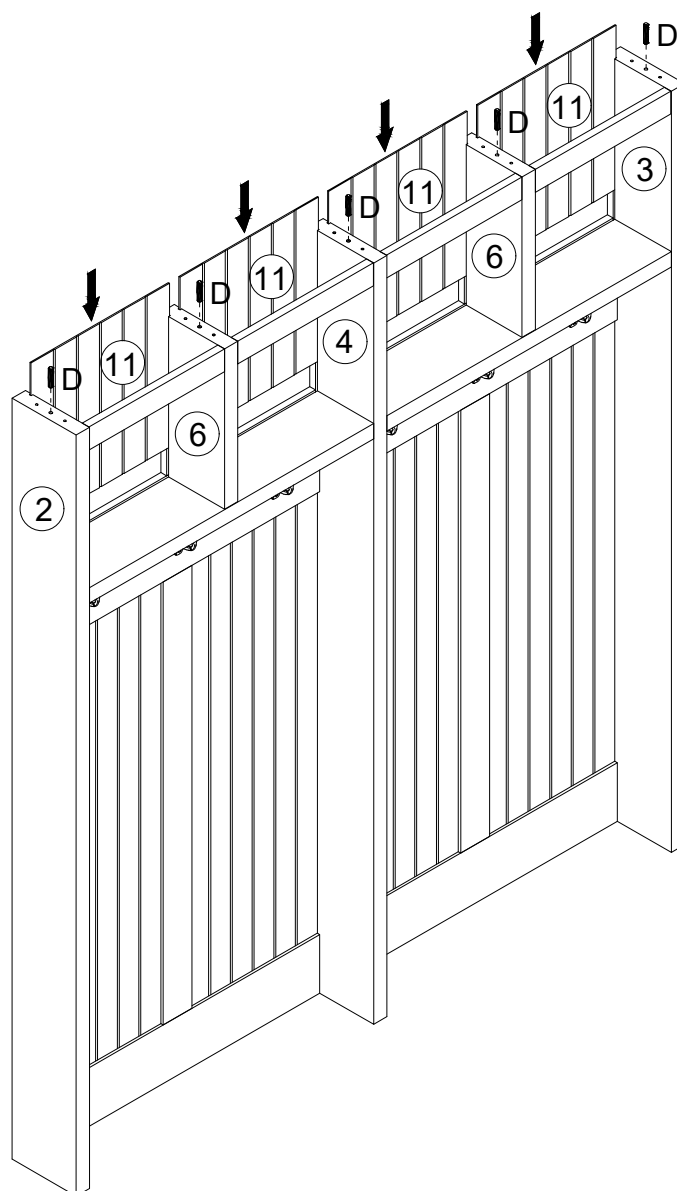


step 18

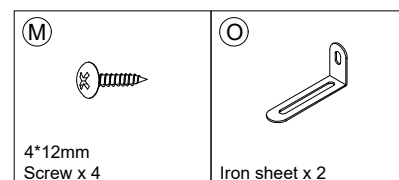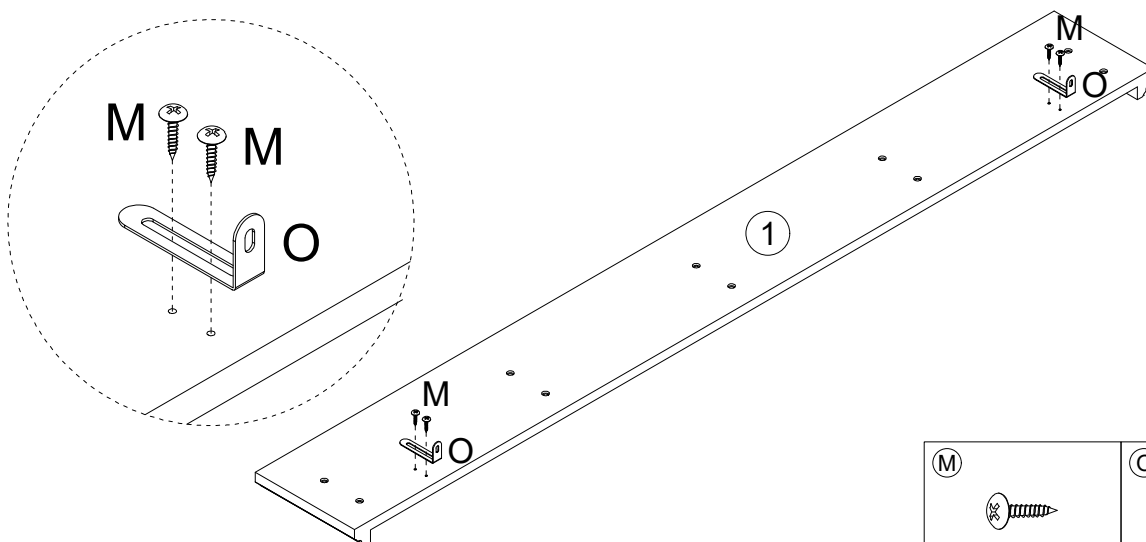

# Assembly Instructions


## step 19


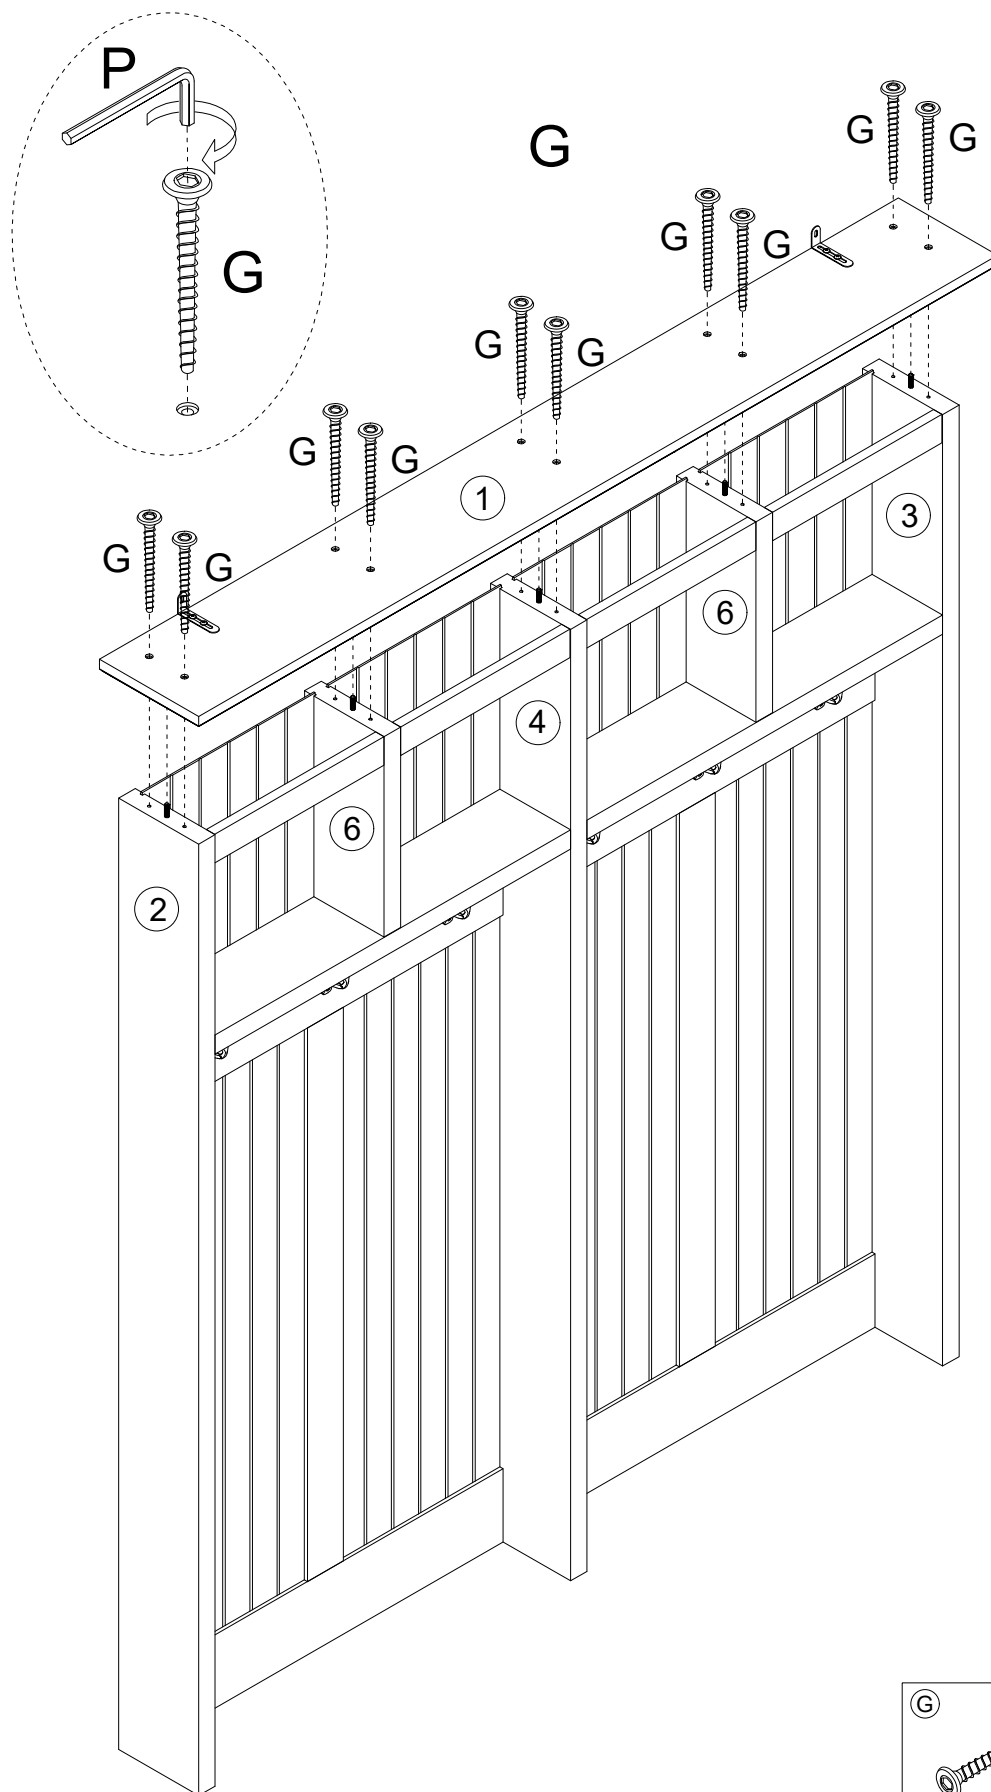




 5*45mm Screw x 10	 Wrench x 1
--------------------------	----------------

# Assembly Instructions



## step 20

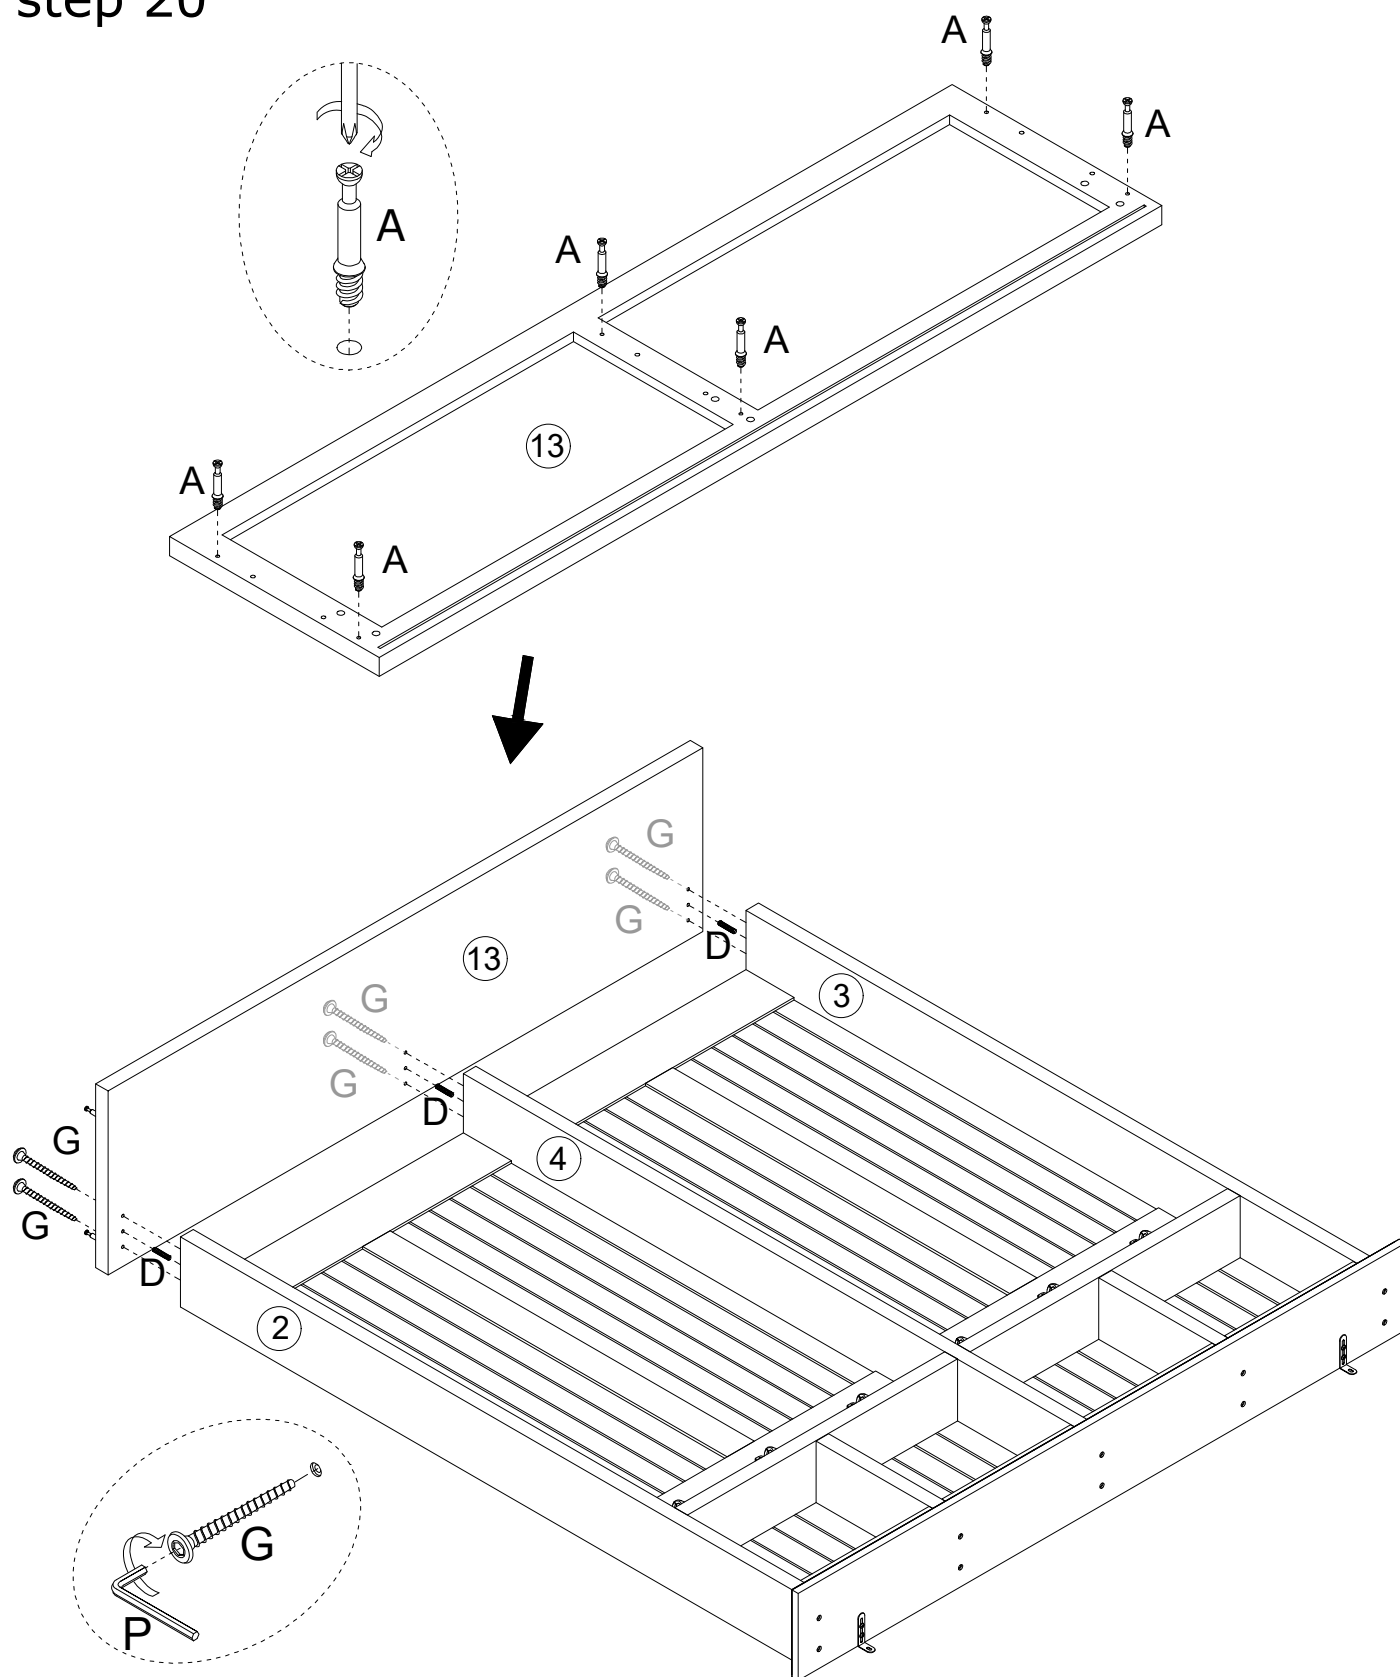

 Ø6*35mm Cam Bolt x 6	 6*30mm Dowel x 3	 5*45mm Screw x 6	 Wrench x 1
--	---	--	---

# Assembly Instructions

## step 21

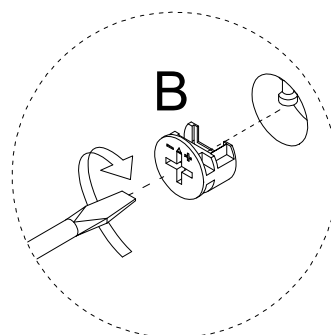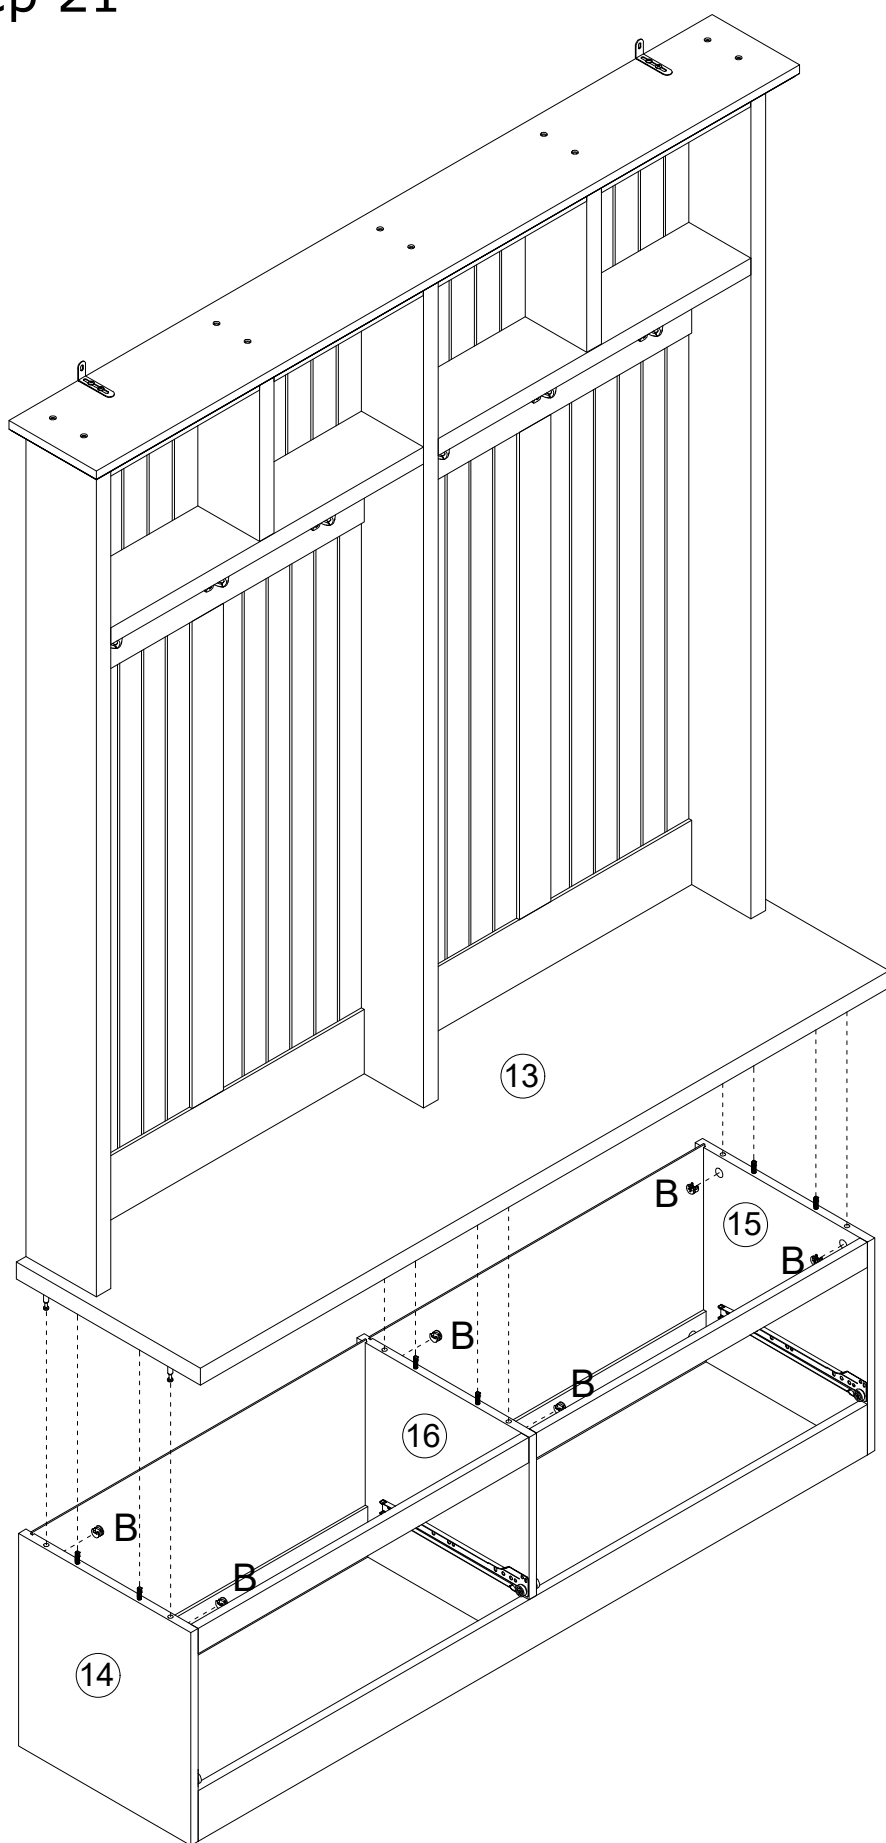


(B)





Ø15\*9mm  
Cam lock x 6

# Assembly Instructions





## step 22

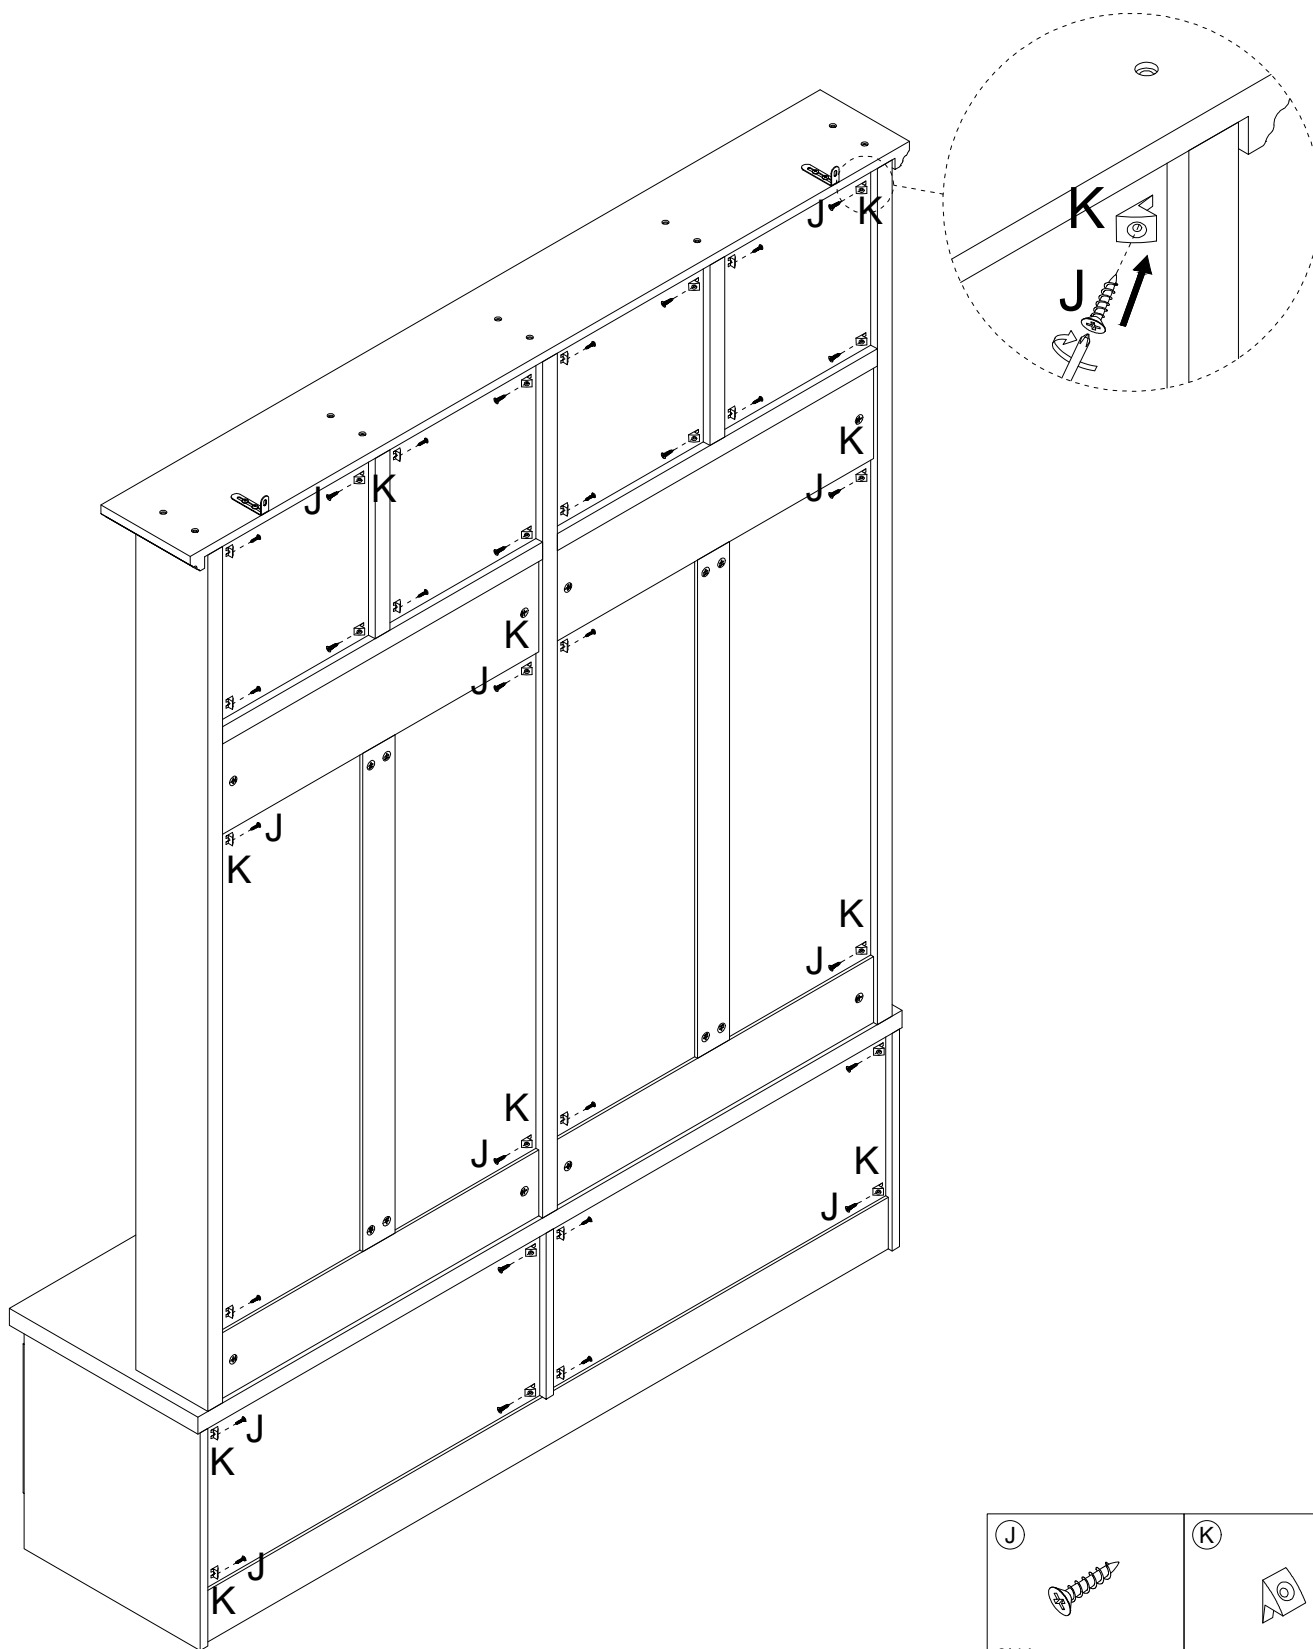



<p>(J)</p>  <p>3*14mm Screw x 32</p>	<p>(K)</p>  <p>Plastic Nail x 32</p>
---	---

# Assembly Instructions

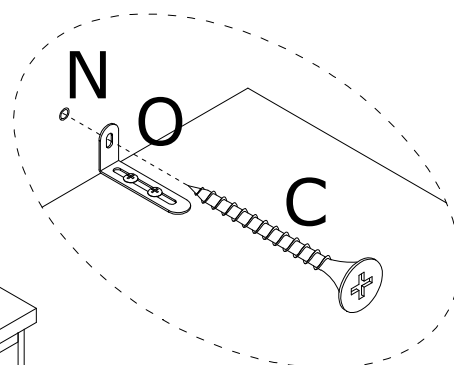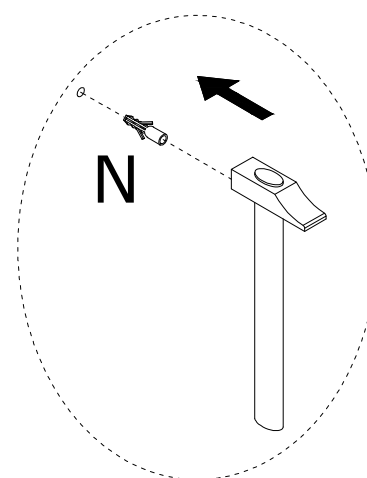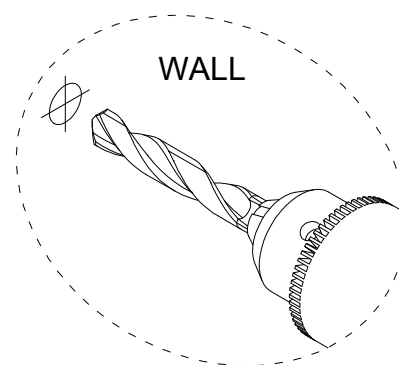
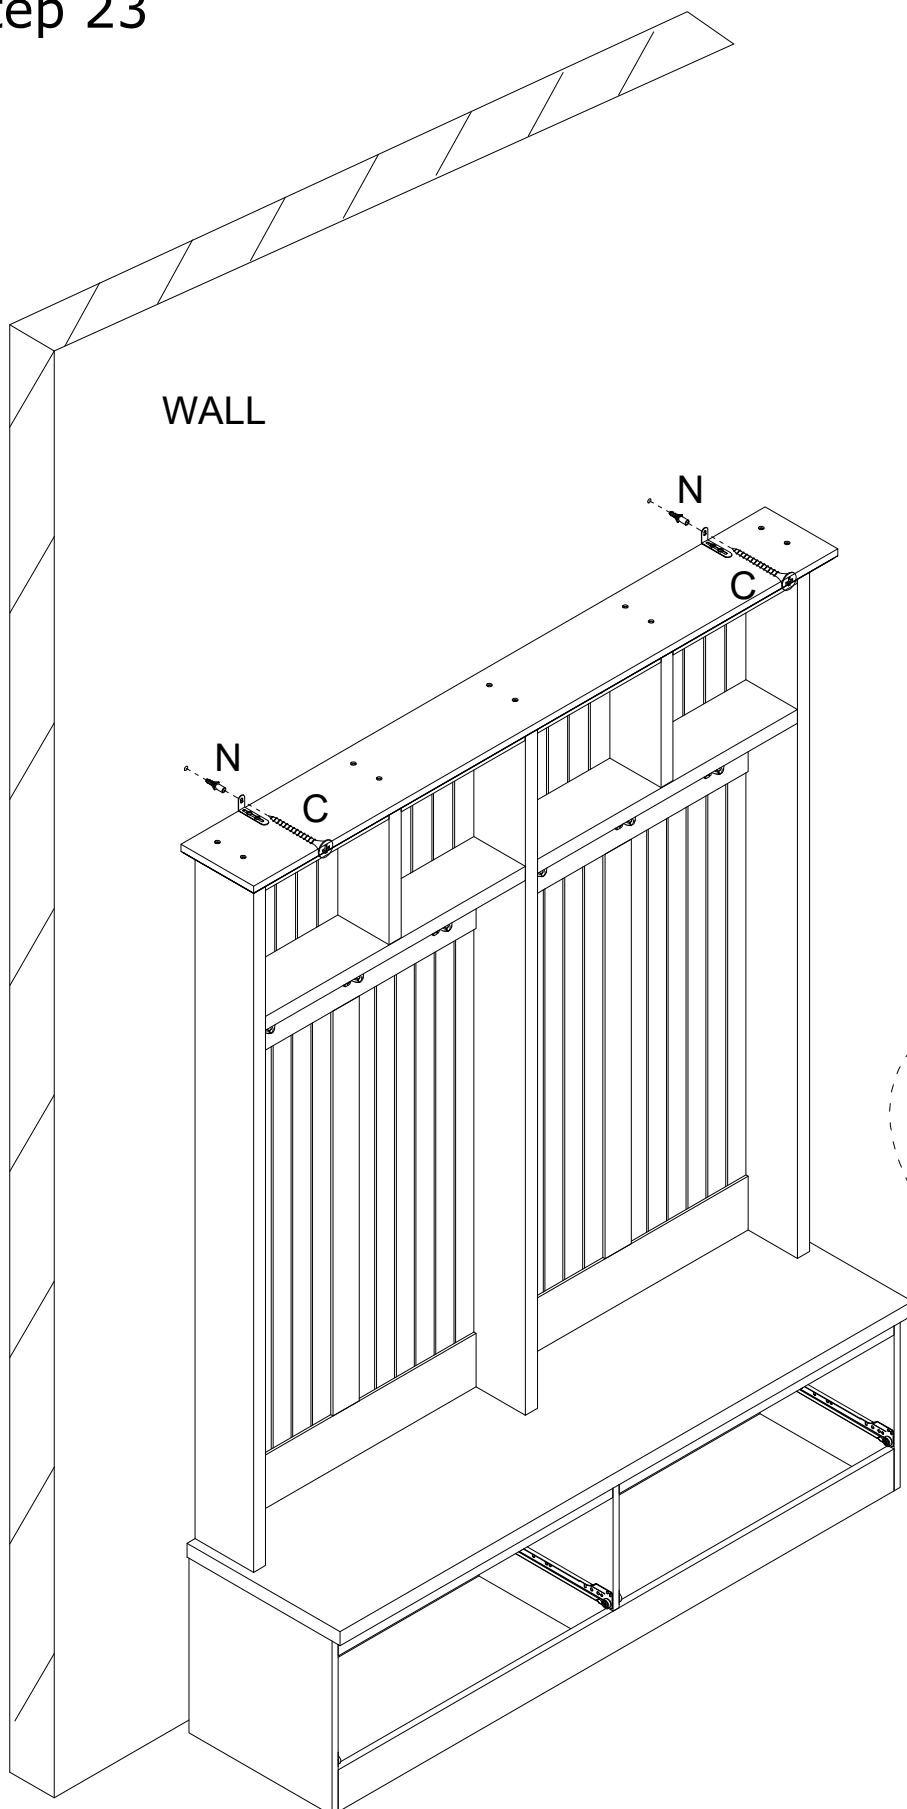
## step 23





 4*40mm Screw x 2	 6*30mm Wall Anchor x 2
--	--

# Assembly Instructions



## step 24

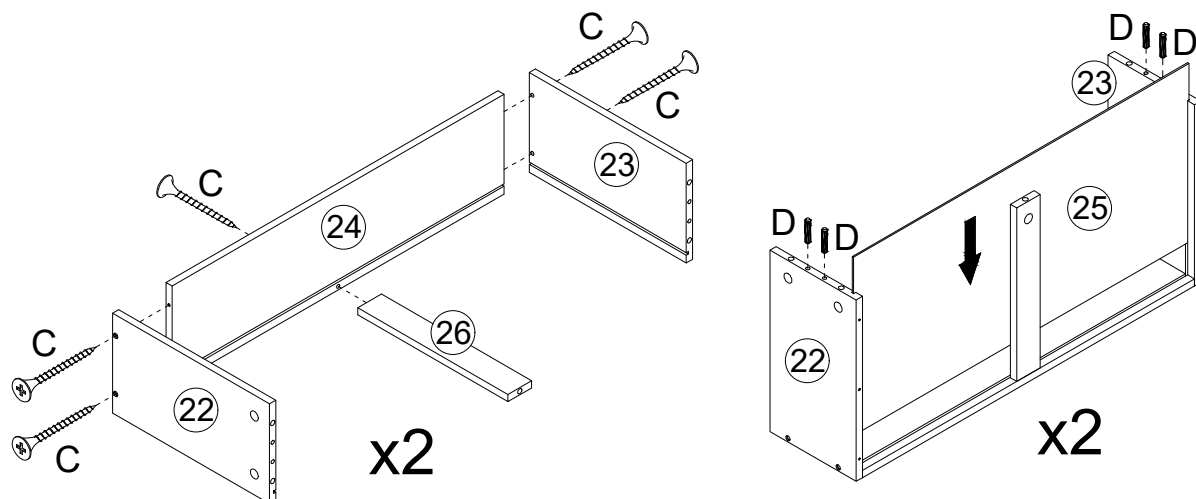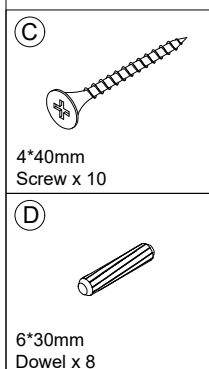

## step 25

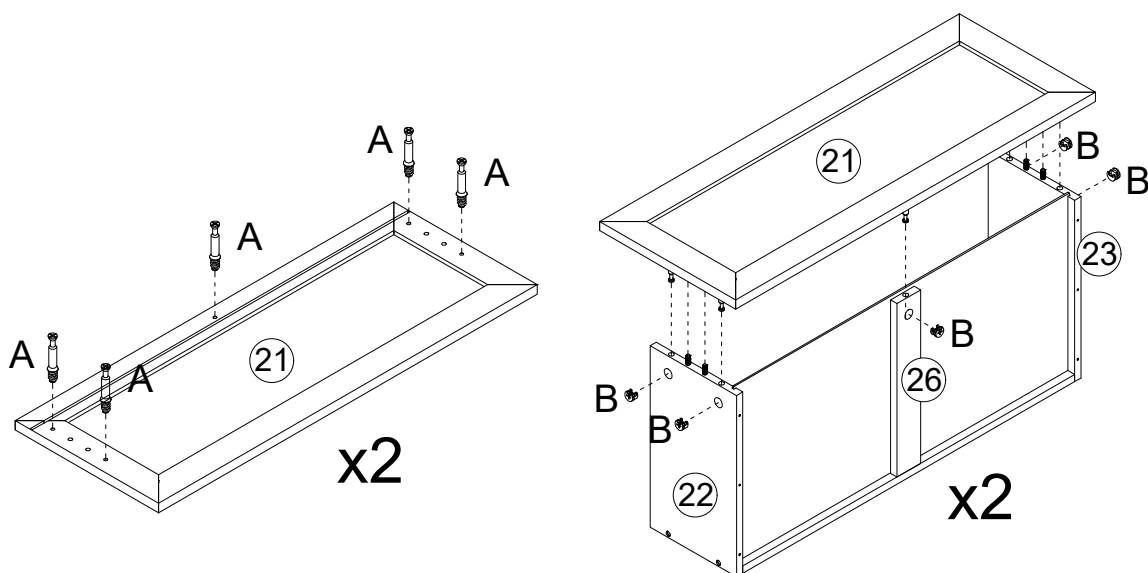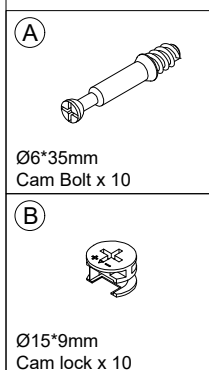


## step 26

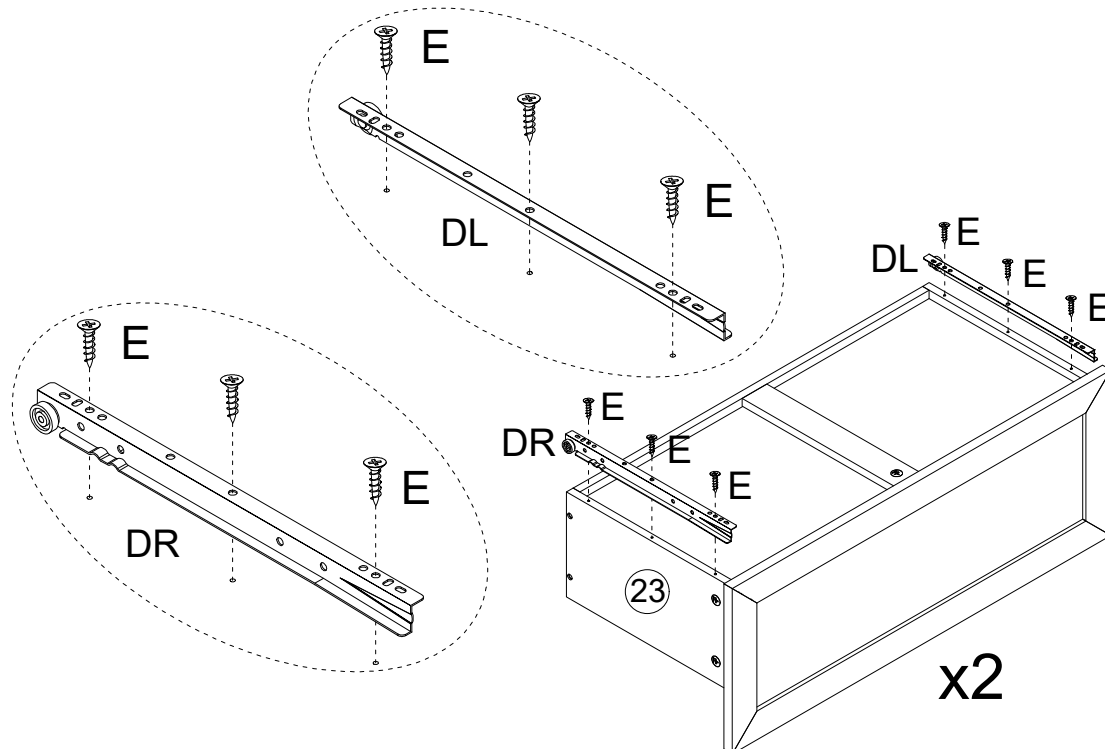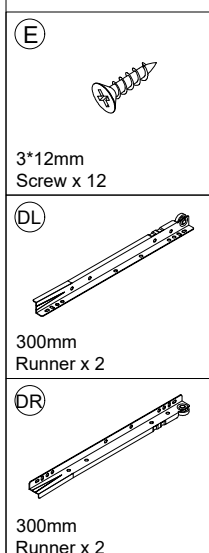

# Assembly Instructions

step 27

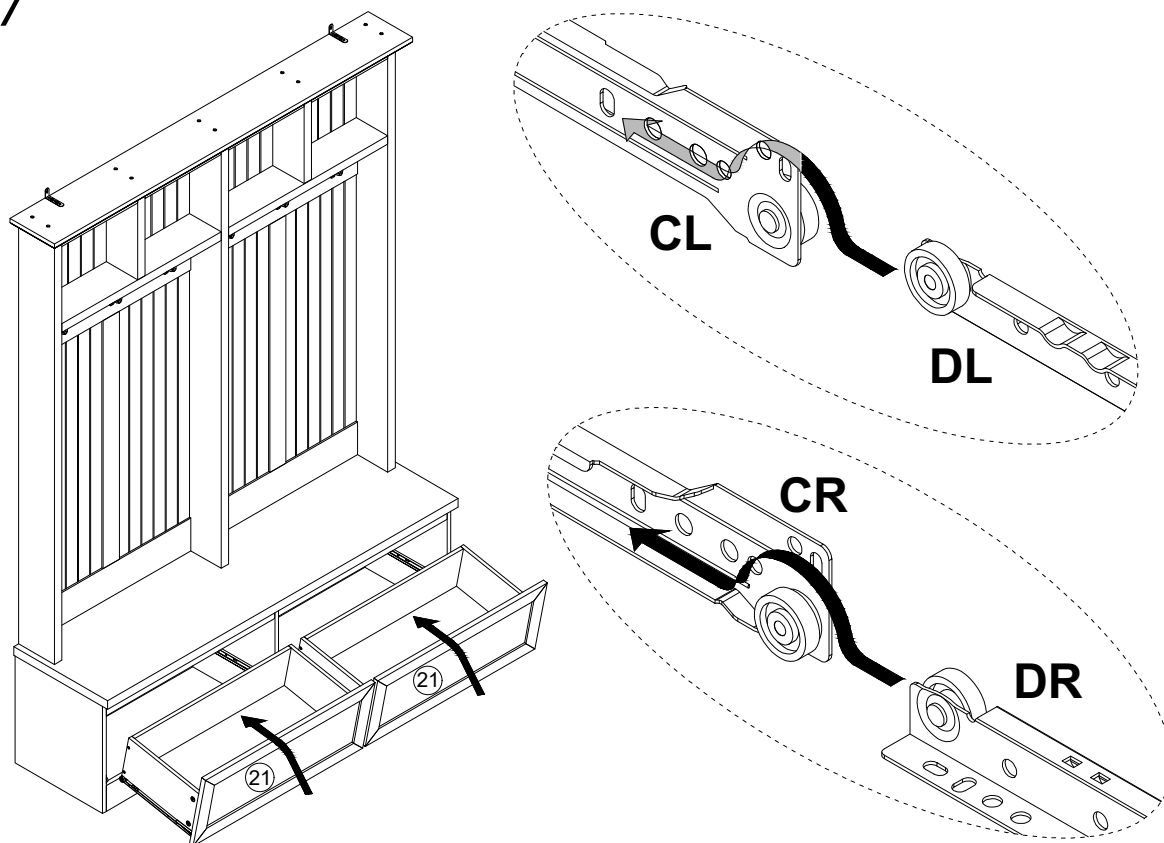

step 28

