
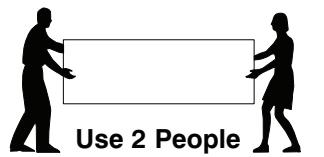


0211 Daybed


Assembly Instructions

1 Assembled View


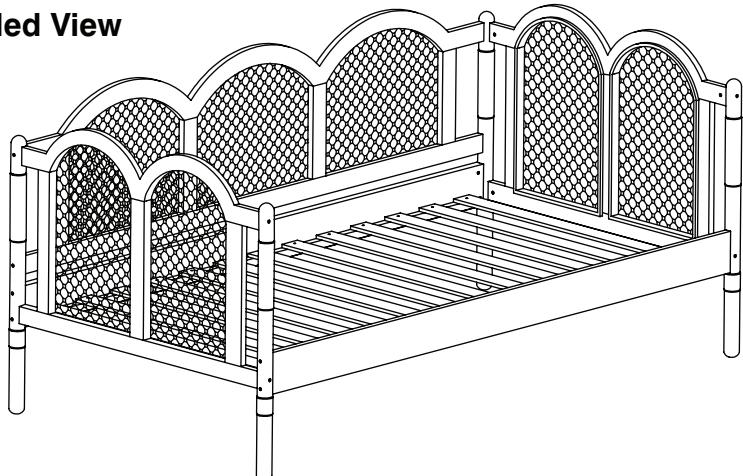


Note: Do not assemble using power tools.
This can cause the bolts to be overtightened


2 Parts in this Box

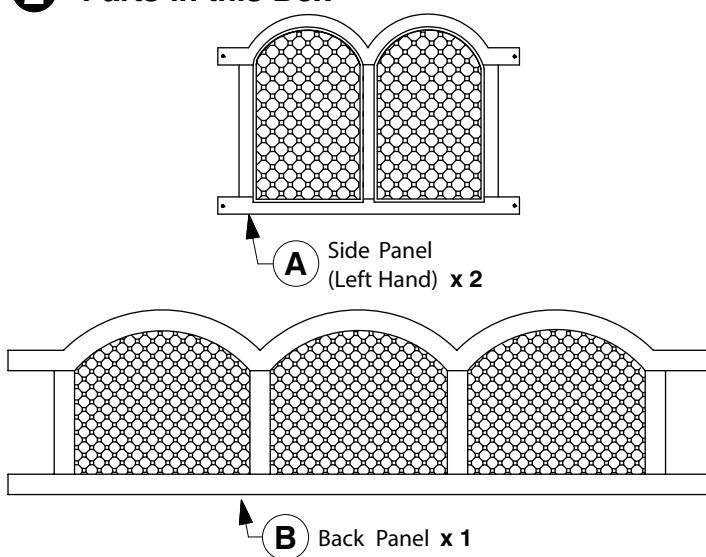

Slats are packed in separately in Box B

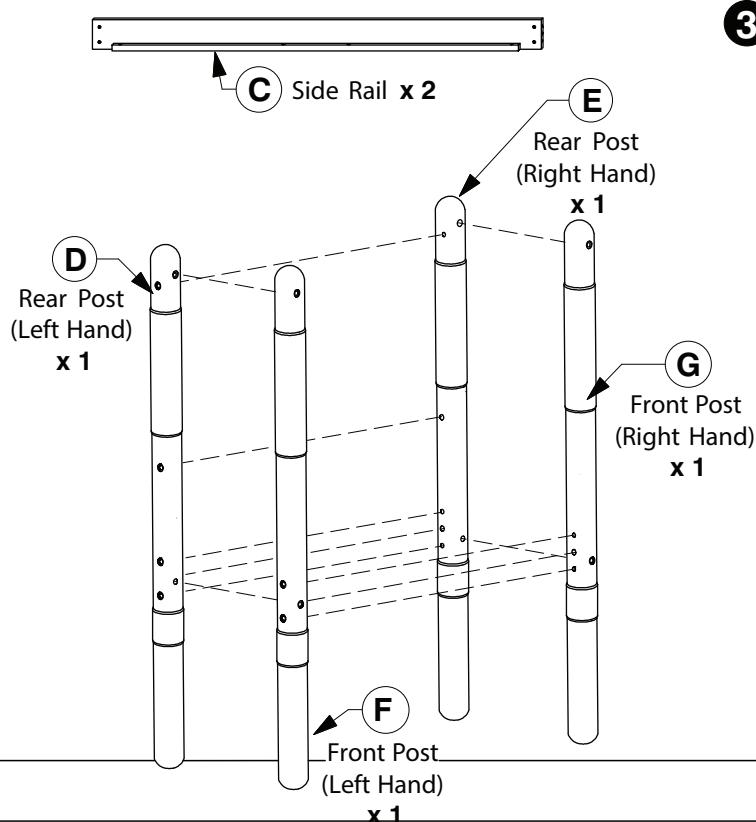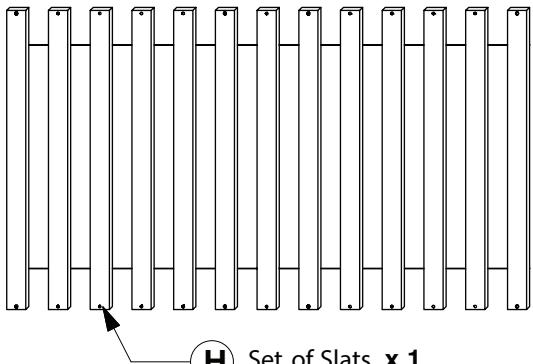

3 Hardware in this Box

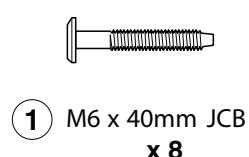

1 M6 x 40mm JCB x 8



4 Wood Screw (M4 x 32mm) x 18



2 M6 x 90mm JCB x 20



5 Wood Dowel (10 x 40mm) x 4



3 Barrel Nut x 20




6 Allen Key x 1

0211 Daybed


Assembly Instructions

WII-1024

4 Assemble the Front & Rear Post (E/G) to the Side Panel (A) .

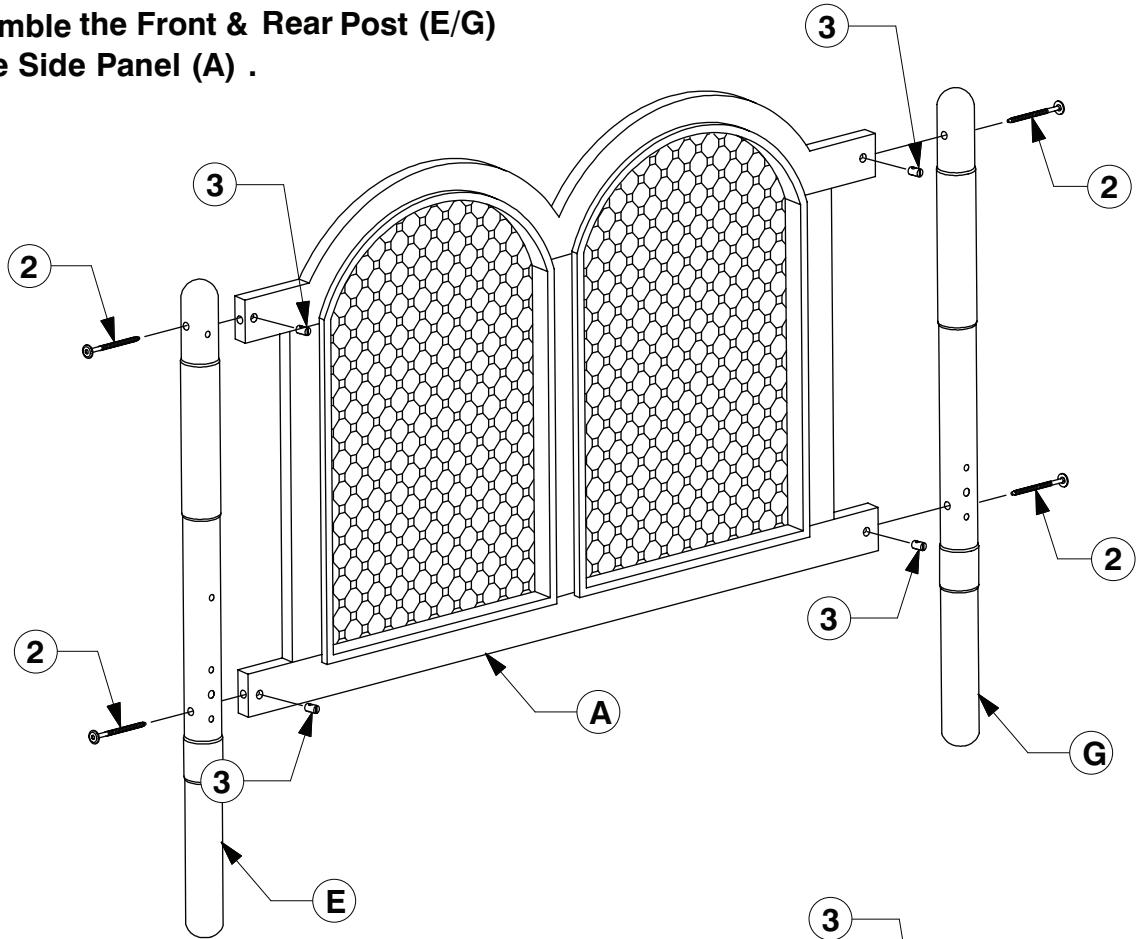

5 Assemble the Front & Rear Post (D/F) to the Side Panel (A).

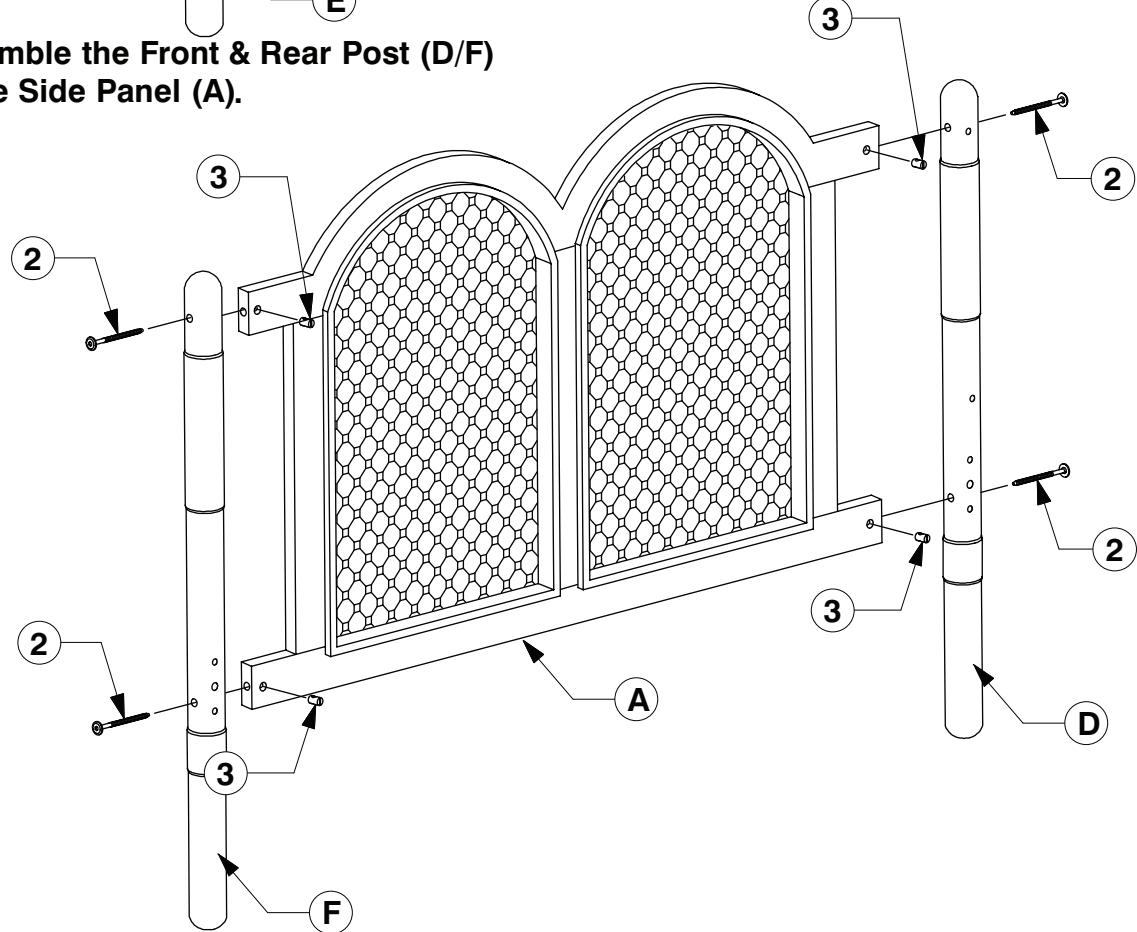


0211 Daybed


Assembly Instructions

WII-1024

6 Assemble the Side Panel (A) to the Back Panel (B) & Side Rail (C).

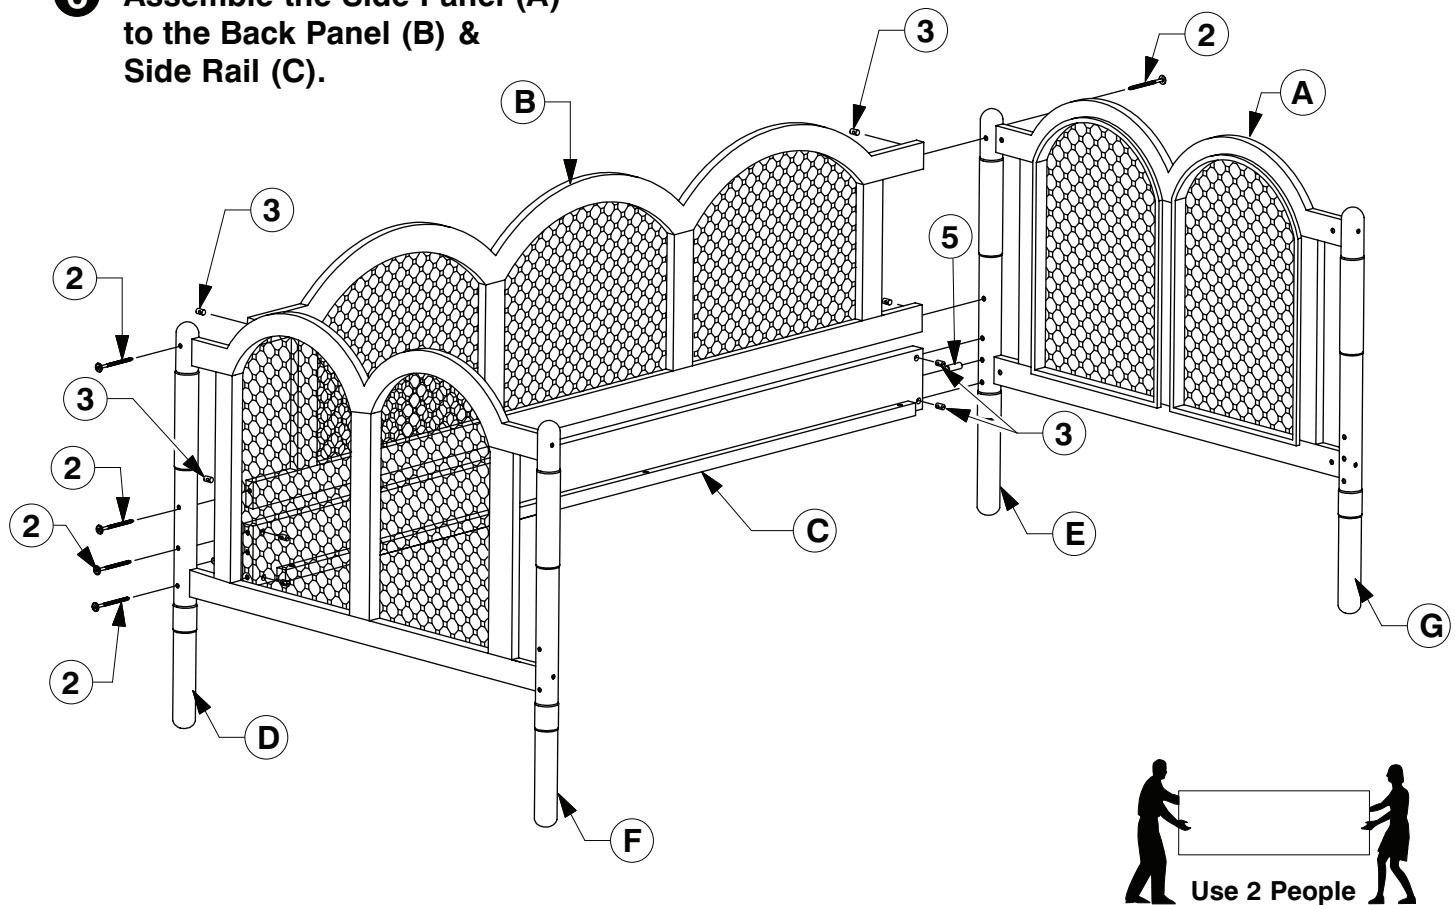

7 Assemble the Side Rail (C) to the Front Post (F/G).

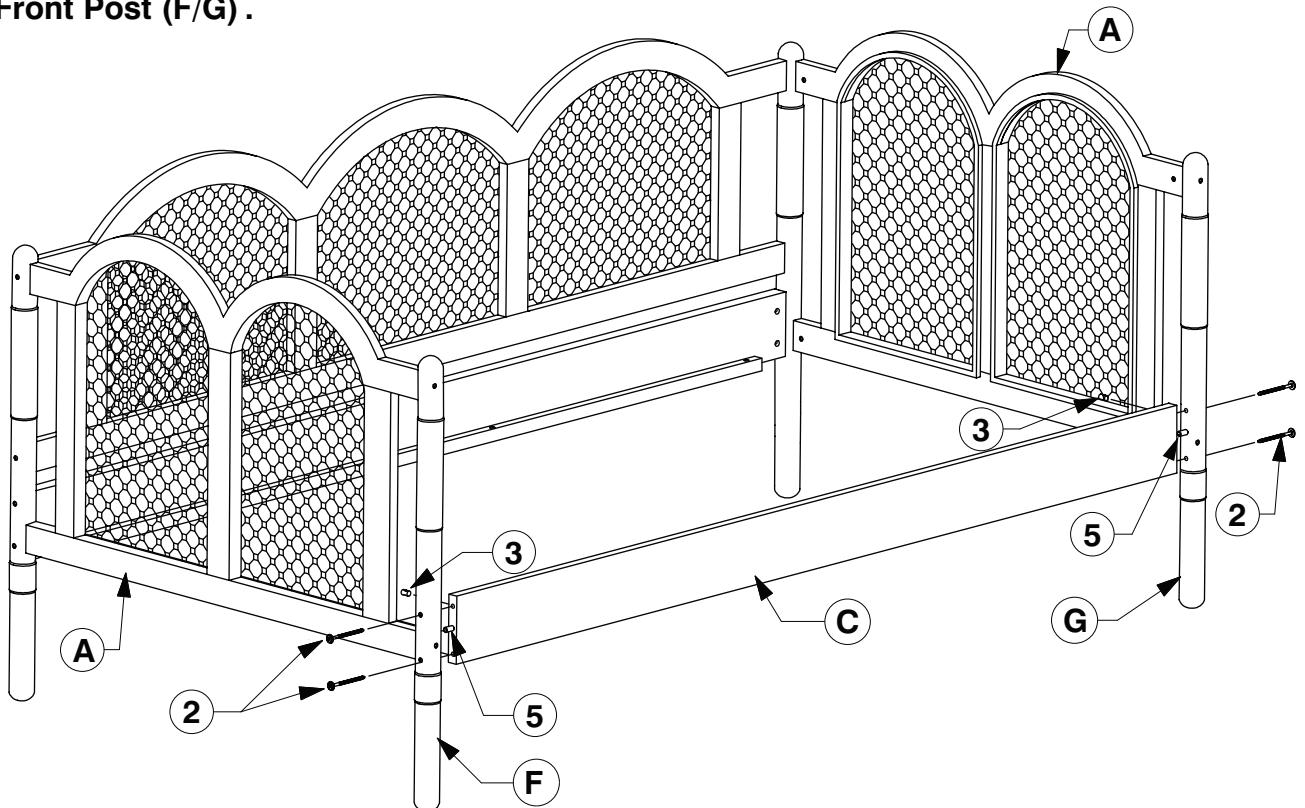


0211 Daybed

Assembly Instructions

WII-1024

8 Bolt the Set of Slats (H) between the Side Rail (C).

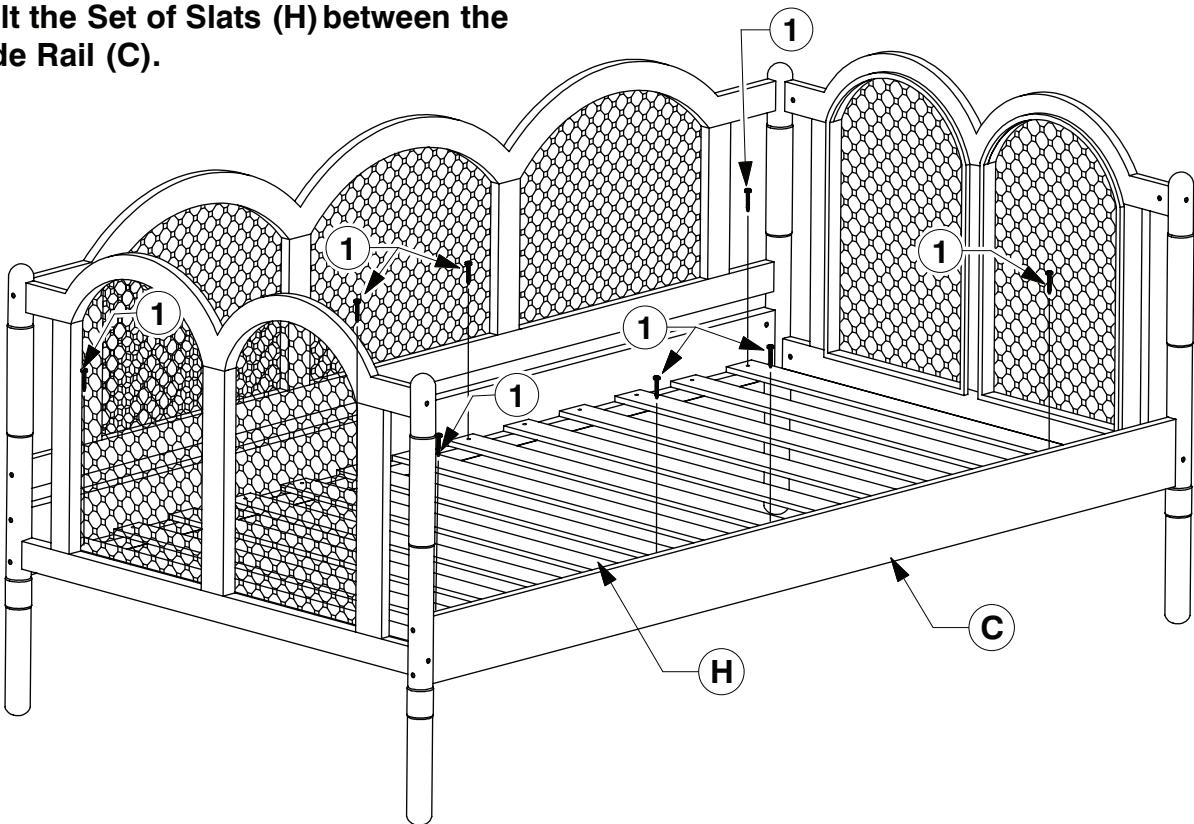

9 Finally, screw the Set of Slats (H) between the Side Rail (C).

