

 furnishtheory.com
 support@furnishtheory.com
 (855) 789-0501








THANK YOU FOR YOUR PURCHASE!

The **URBAN-ML PRO** chair combines the soft feel of fiberglass polypropylene with matte colors, providing a fresh take on aesthetics and comfort that lets you relax in perfect harmony!


With multiple frame options available, these chairs are UV-stabilized and designed for public spaces. Perfect for home use as well.

SPECIFICATIONS

		 Overall Dimensions (W x D x H): 23.6" x 23.6" x 31.9"
		 Seat Height: 18.5"
		 Weight: 10.7 lbs.
		 Max Stacking: 4 (four)
		 Usage Area: Home, Office, Hospitality, Outdoor

ASSEMBLY INSTRUCTIONS

- 1 UNPACK THE CONTENTS:** Take all items out of the package and place them on a carpeted or protected floor to avoid damage
- 2 PREPARE THE CHAIR TOP:**
 - Place the chair top upside down on a table (or counter), ensuring the foam wrapping is **NOT** removed yet. This will prevent your table and the chair from getting scratched during assembly
 - Ensure someone holds the chair top to prevent it from falling
- 3 ATTACH THE CHAIR LEGS:**
 - Locate the chair legs, 4 (four) Phillips screws (**C**), 4 (four) metal washers (**B**) and 4 (four) curved plastic caps (**A**)
 - Align the 4 (four) holes of the chair legs with the 4 (four) holes on the bottom of the chair top
 - Insert the screws (**C**) through the metal washers (**B**), then through the plastic caps (**A**) and then into the screw holes in the chair legs. Tighten the screws with a power screwdriver set to the **lowest torque** setting
- 4 FINISH ASSEMBLY:** Flip the chair upright, remove the foam packaging, and enjoy your newly assembled **URBAN-ML PRO**!

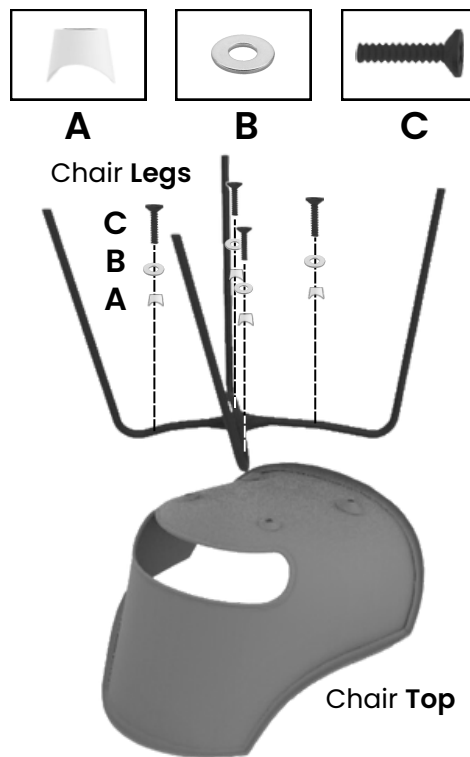

CARE INSTRUCTIONS

To be cleaned with detergent and a soft damp cloth. Avoid using abrasive chemicals.

Follow **@furnishtheory** on social media:

