



THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

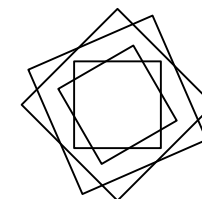

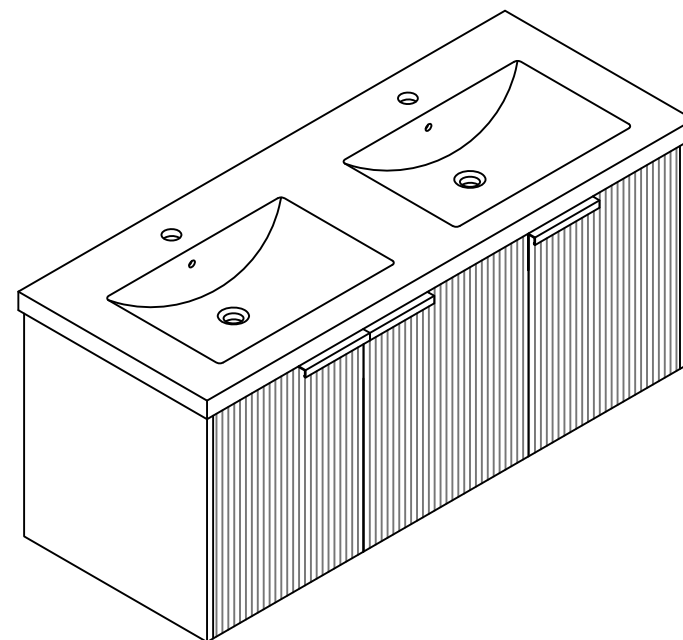













Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B10348


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	56	I	 Hinges (Internal hiding)	4
B	 Two-in-one connector	24	J	 Hinges (Half cover)	2
C	 Two-in-one connector	24	K	 Handle (Screws Ø4x14mm)	3
D	 Wood plug	5	L	 Screws Ø4x25mm	1
E	 Plastic anchor(Ø10mm)	4	M	 Anti-collision gasket	6
F	 Screws for fix on the wall	4	N	 Screwdriver	1
G	 Bracket (53x70x44mm)	2			
H	 Bracket (19x19x35mm)	2			


Recommended tools

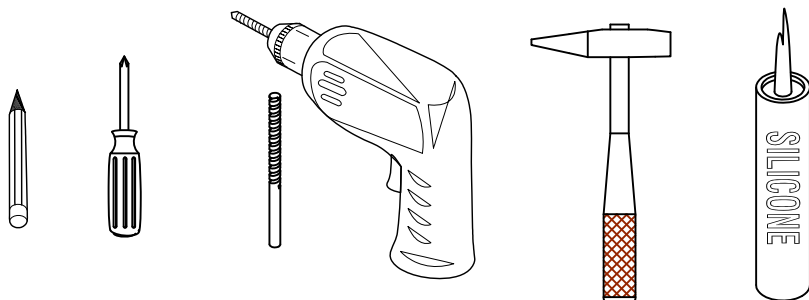


Dimensions

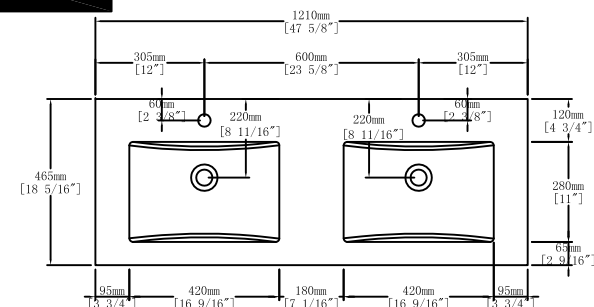

Top View

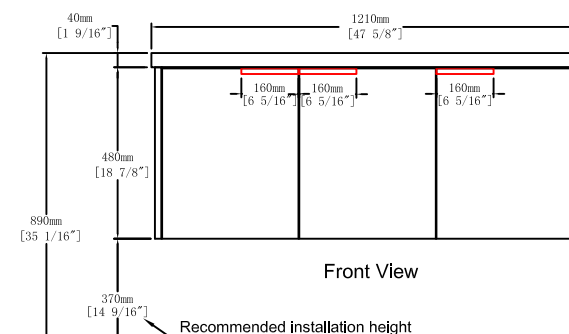

Front View

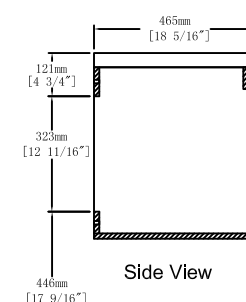


Side View

Floor


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Step 13

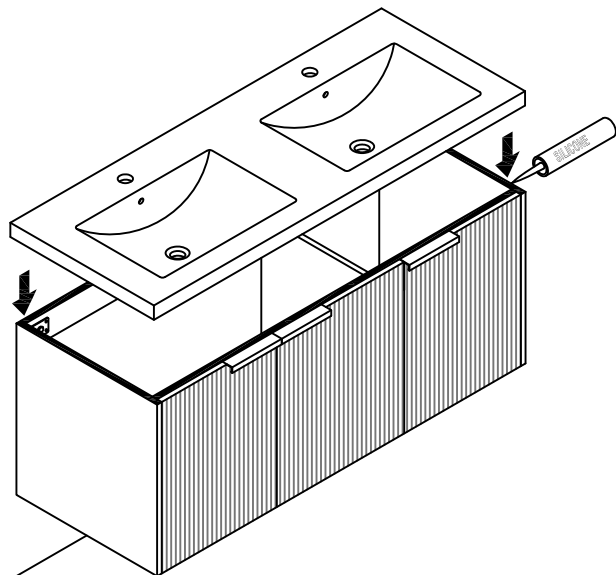


Finished

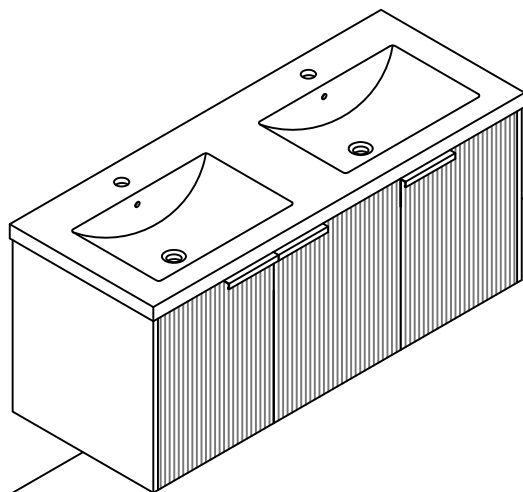

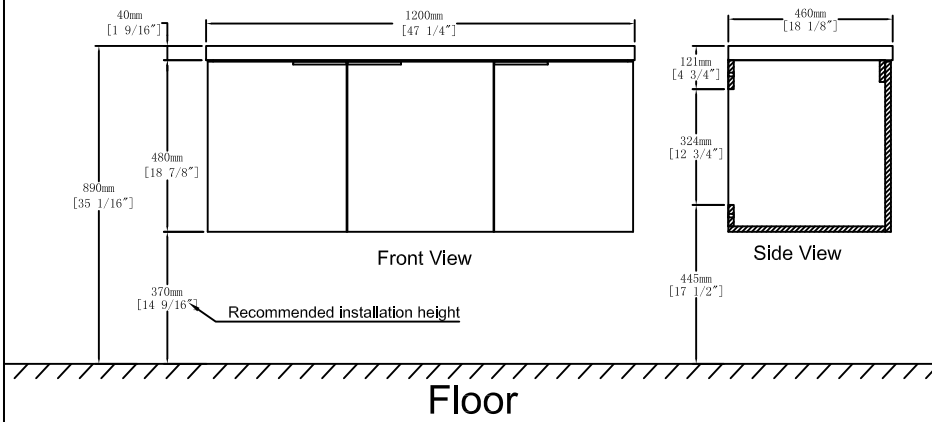


Dimensions



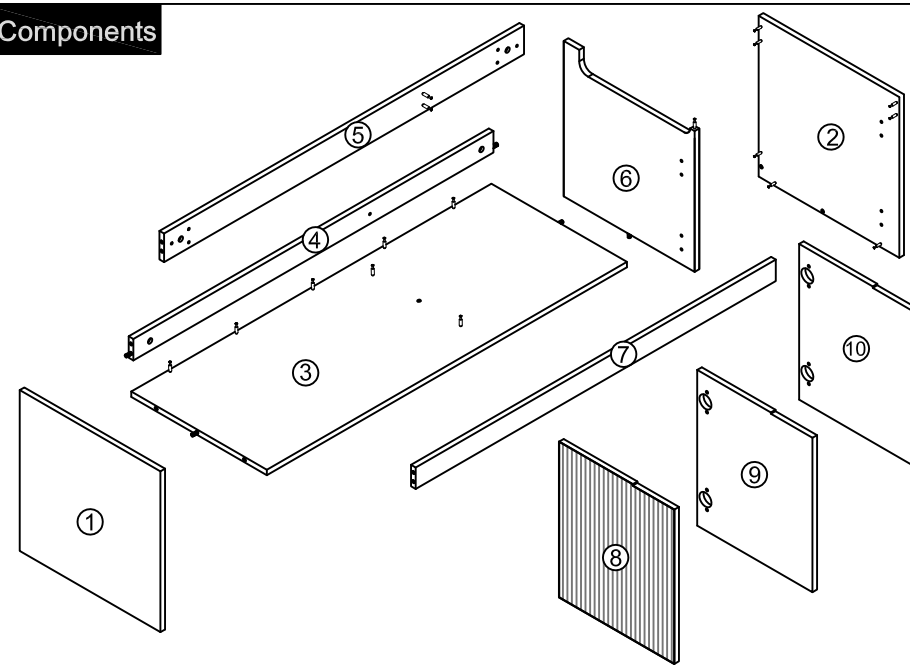


Components




Step 1

	x5
B	
	x5
C	
	
N	

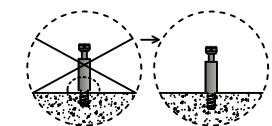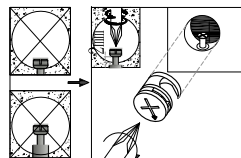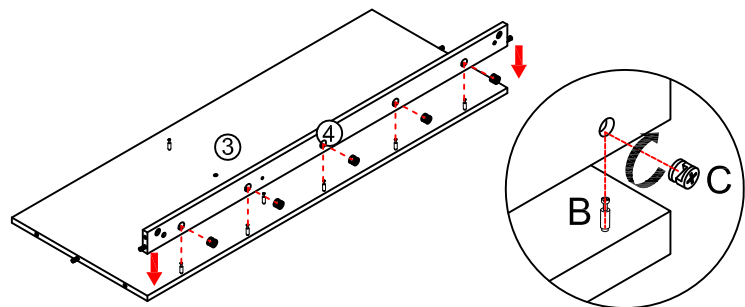

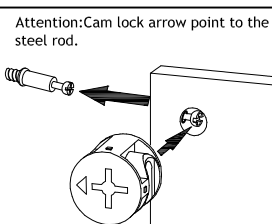




Notes: Screw installation depth as shown






Attention: Cam lock arrow point to the steel rod.

Step 2

Note: The D parts are used for this hole.

	x2
B	
	x2
C	
	x1
D	
	x1
L	
	
N	

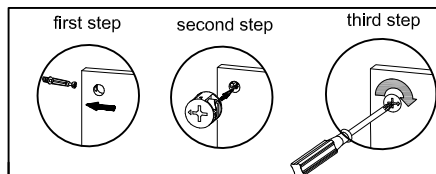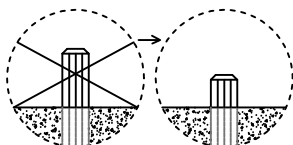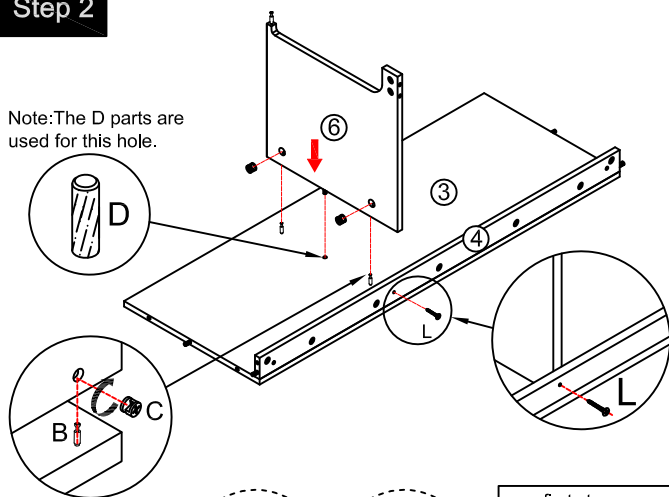




first step

second step



third step


Step 11





	x4
E	
	
Tool	

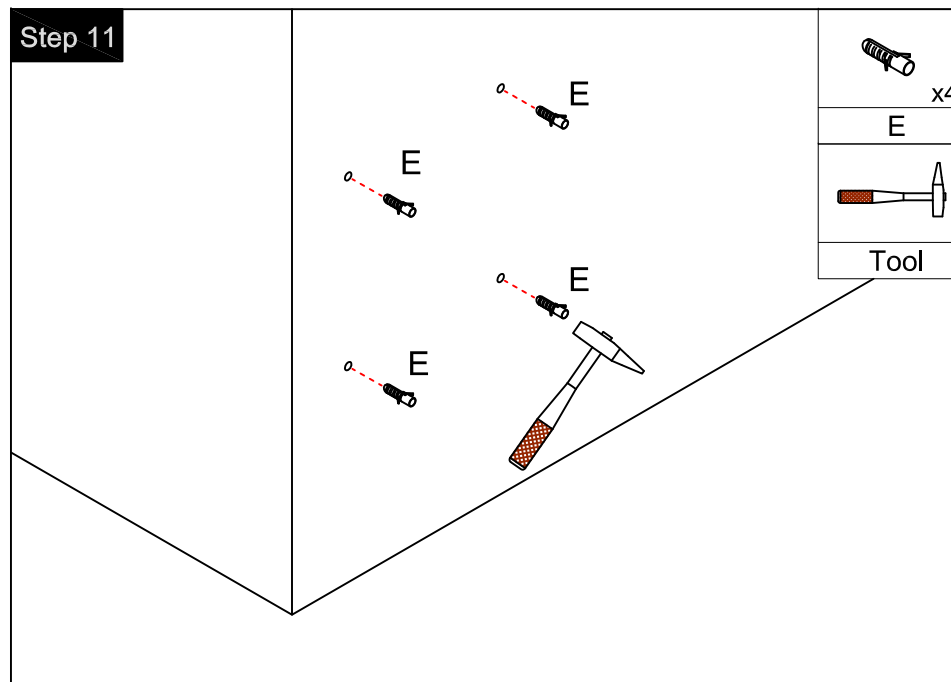


Step 12

	x4
F	
	
Tool	

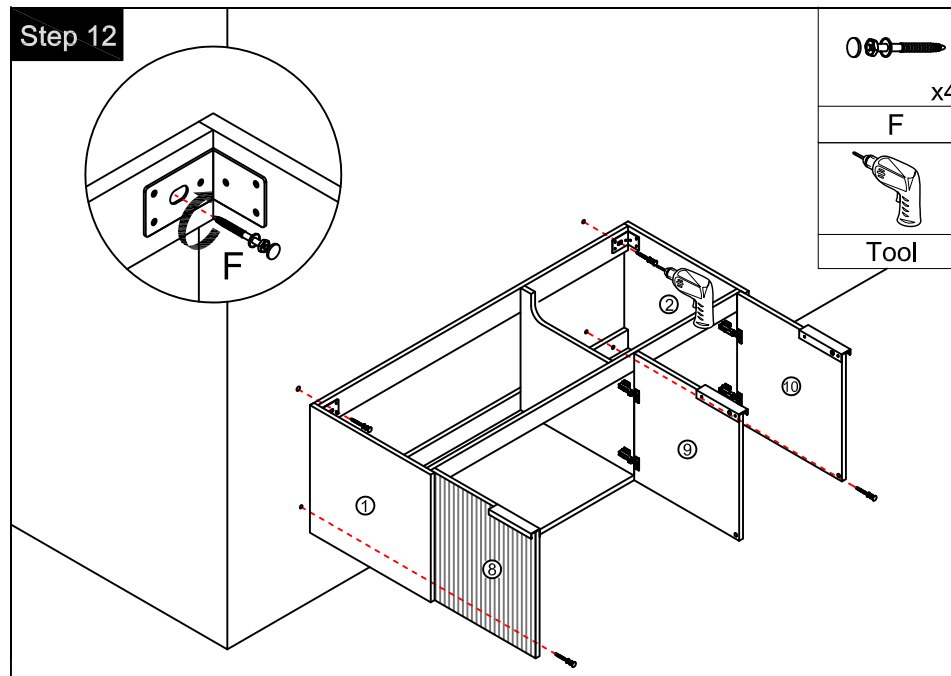


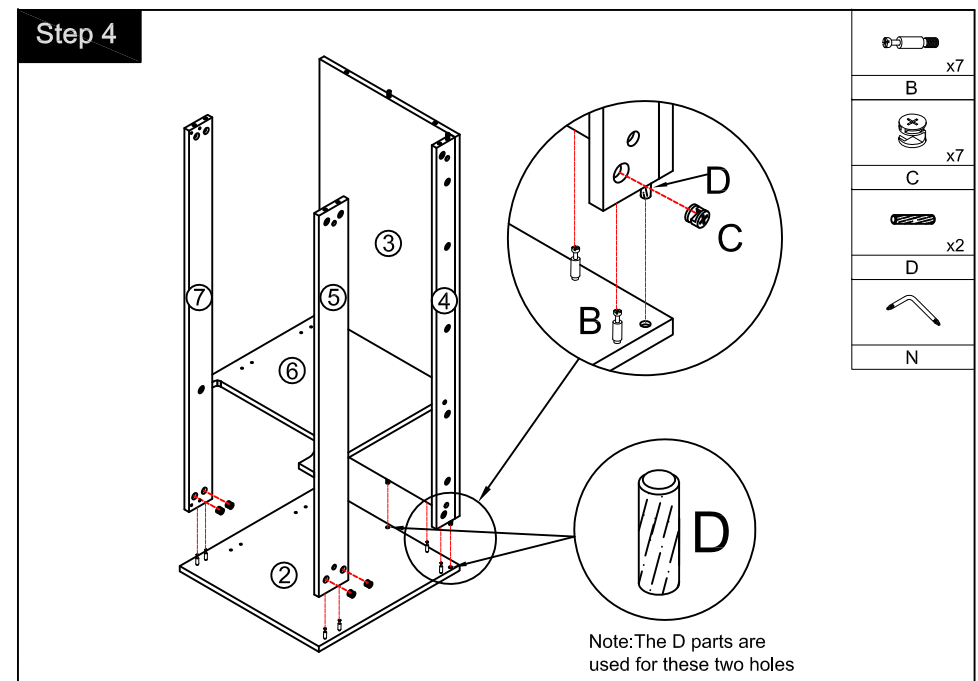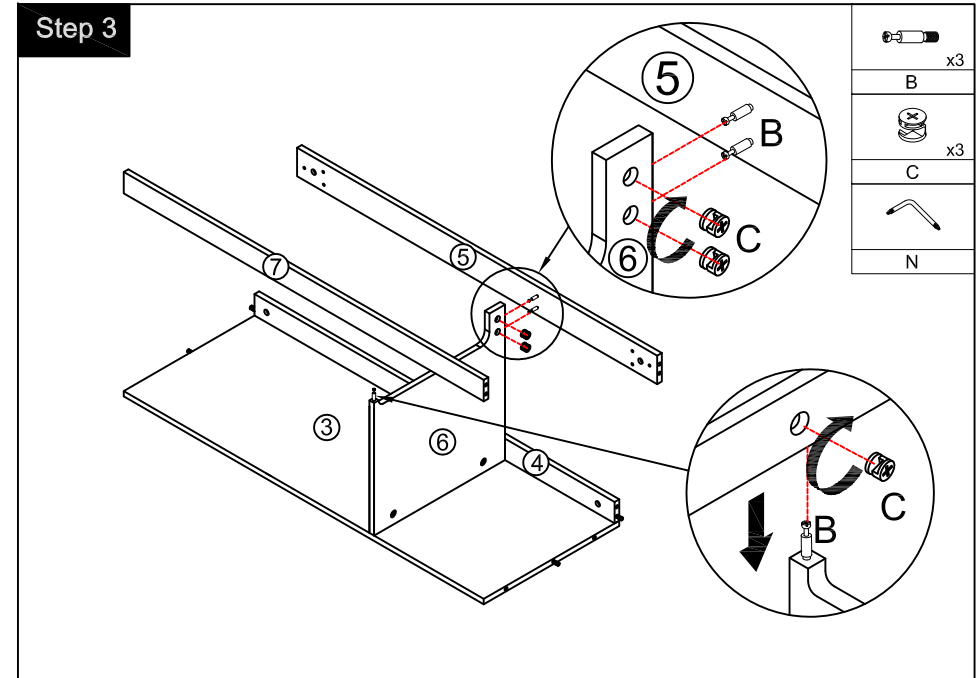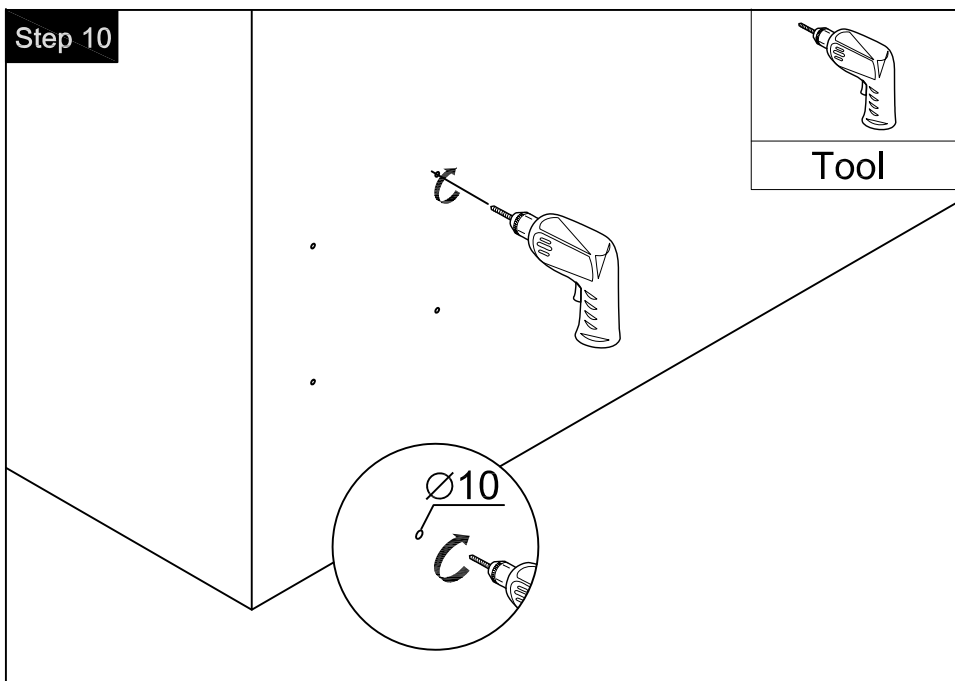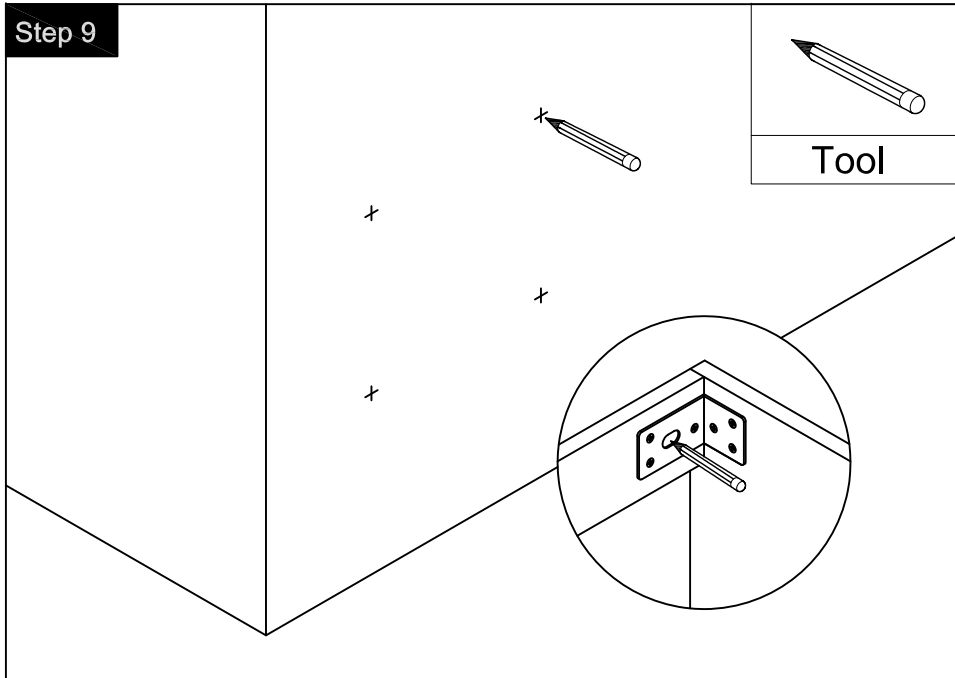



Step 5

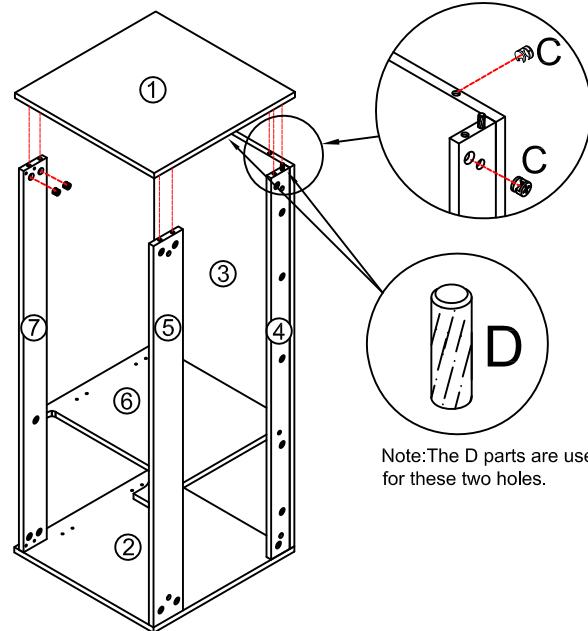


Note: The D parts are used for these two holes.

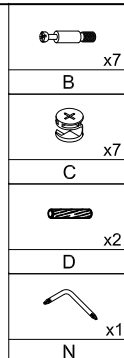

Step 6

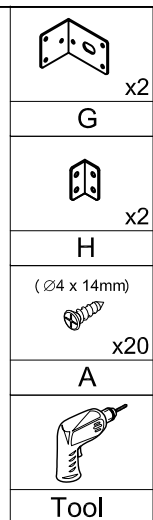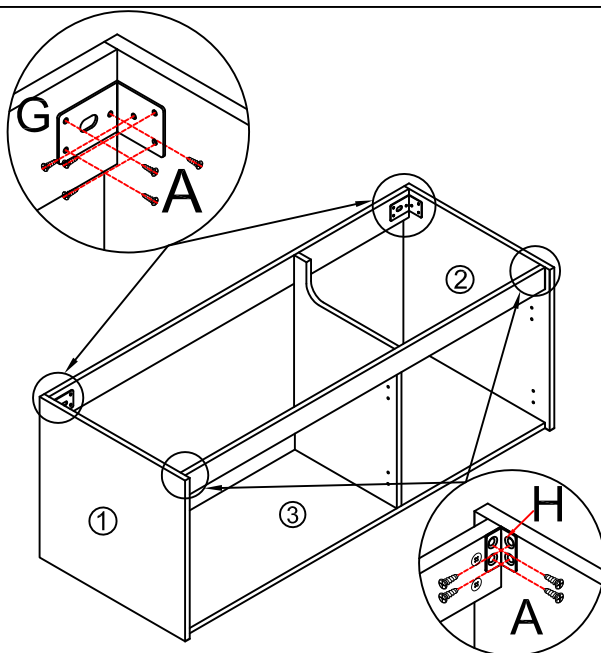

Step 7

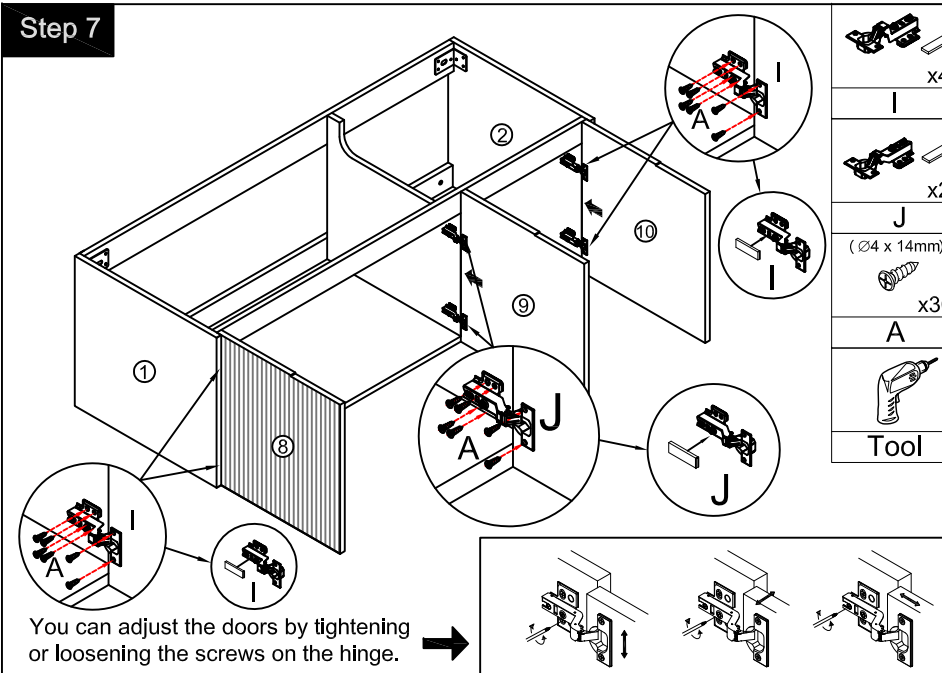

Step 8

