
## N843P254844C


# Product manual

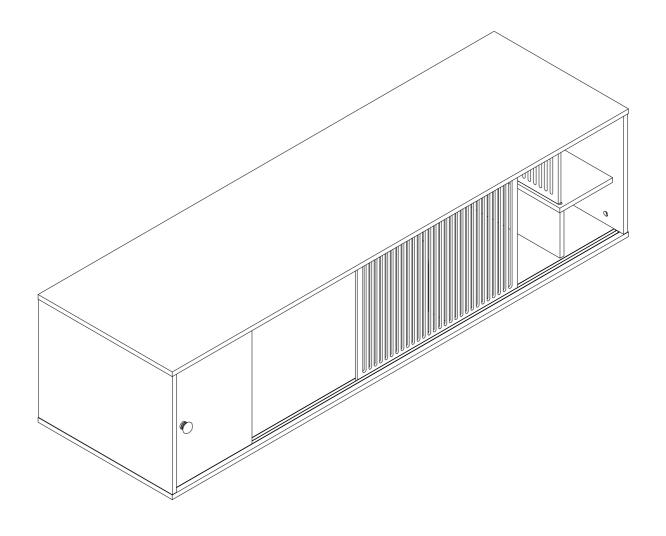

Importeur	Decobus Handel GmbH			
Adresse	Innungsstraβe 9,21244 Buchholz, Deutschland			
URL	https://www.decobusgroup.de			
Hersteller	Sichuan Subei E-commerce Co.,Ltd			
Adresse	Floor 3, Room 301, Building B1, Minghu Science and Technology Park, No. 99, Chenke Street, in the middle of Chenxi Avenue, Chongzhou City, Chengdu			
Email/URL	Ivanwang2010@126.com			
EC REP	Decobus Handel GmbH Innungsstraβe 9,21244 Buchholz, Deutschland https://www.decobusgroup.de			









Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later

reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.


Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.


Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.

Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

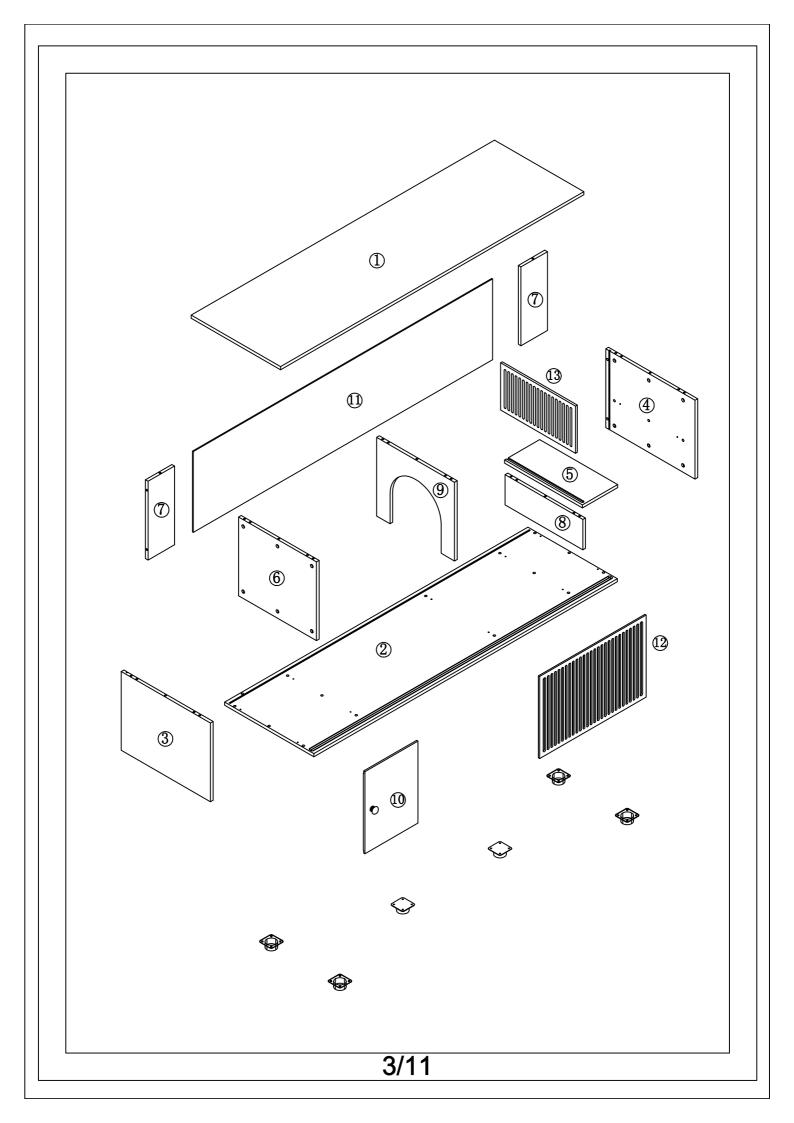

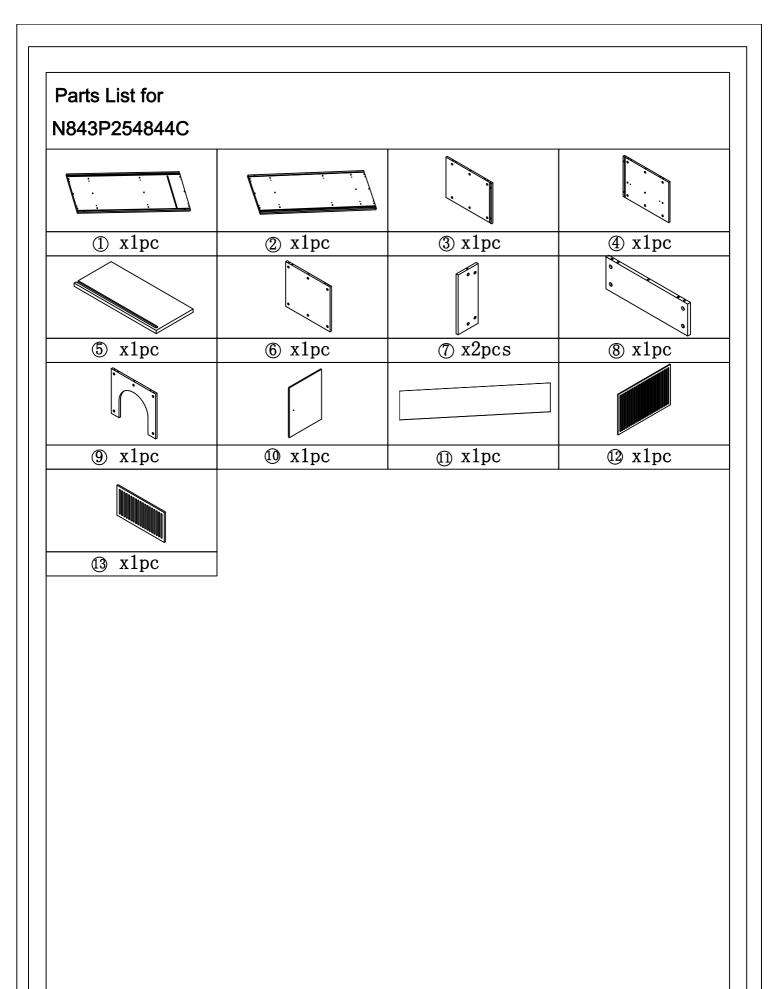



## Hardware List for

## N843P254844C

	32 22 22 22 22 22 22 22 22 22 22 22 22 2			
M6*40mm	<b>Ø</b> 15 <b>*</b> 12mm	<b>ø</b> 6*30mm	M3. 5*14mm	<b>ø</b> 4*12mm
A x40pcs	® x40pcs	©x22pcs	①x30pcs	©x1pc
	0 0			
© x1pc	© x6pcs	① x6pcs	①x40pcs	①x1pc

#### USING CAM LOCK AND QUICKFIT




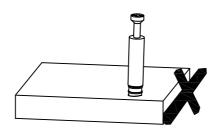




## NOTE-1:


QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten

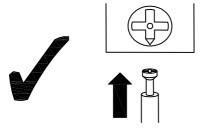

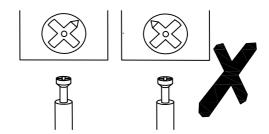


### NOTE-2:


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

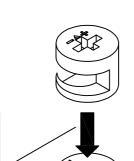



## NOTE-3:


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Camlock should be inserted before guickfit.

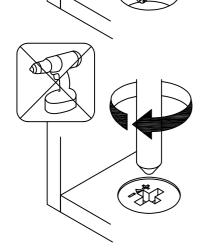


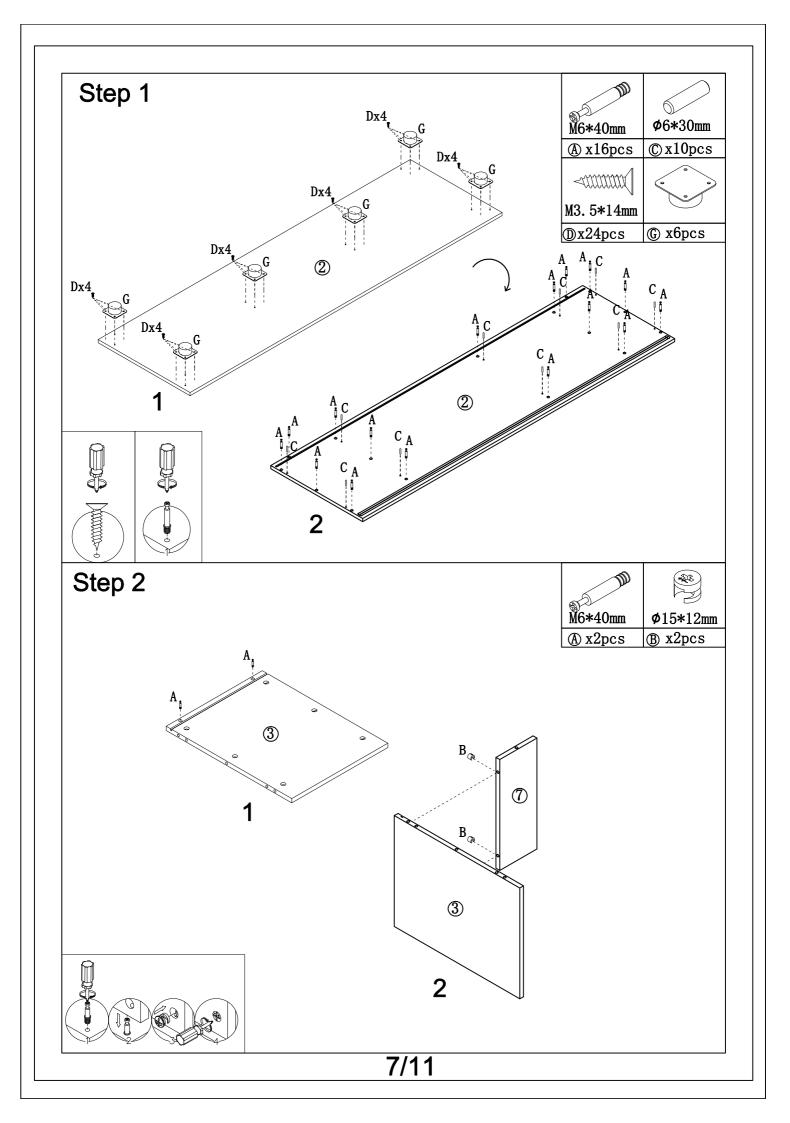

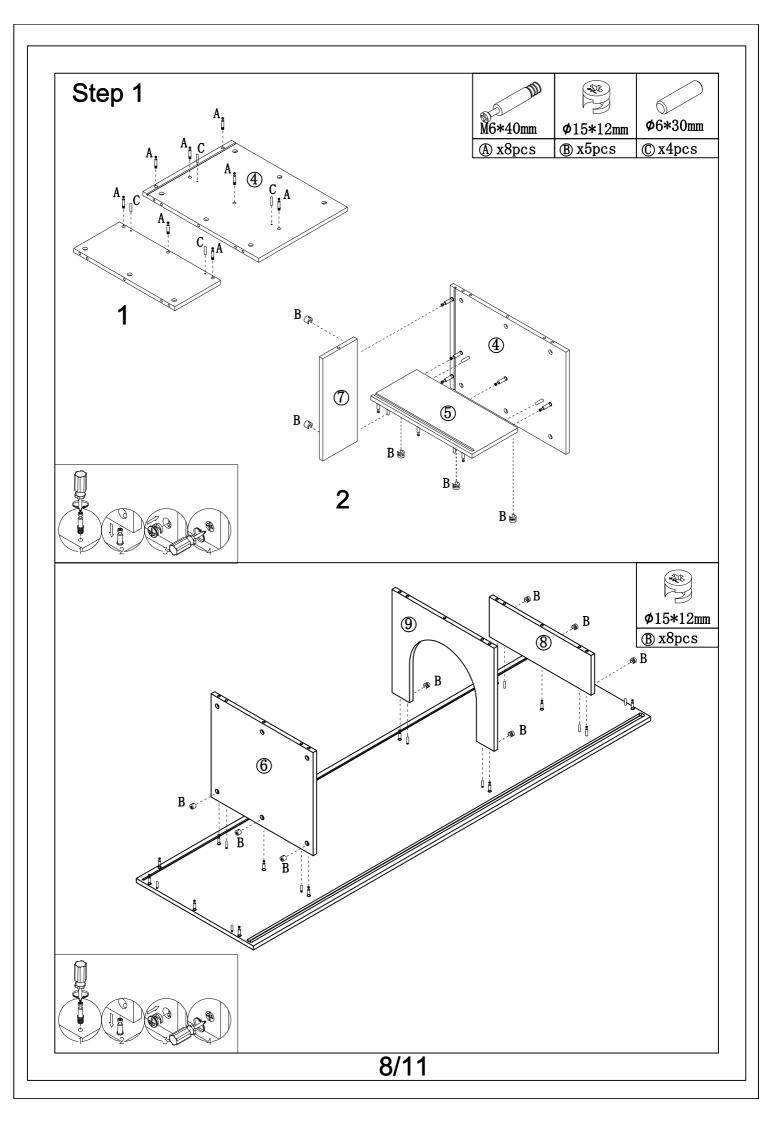

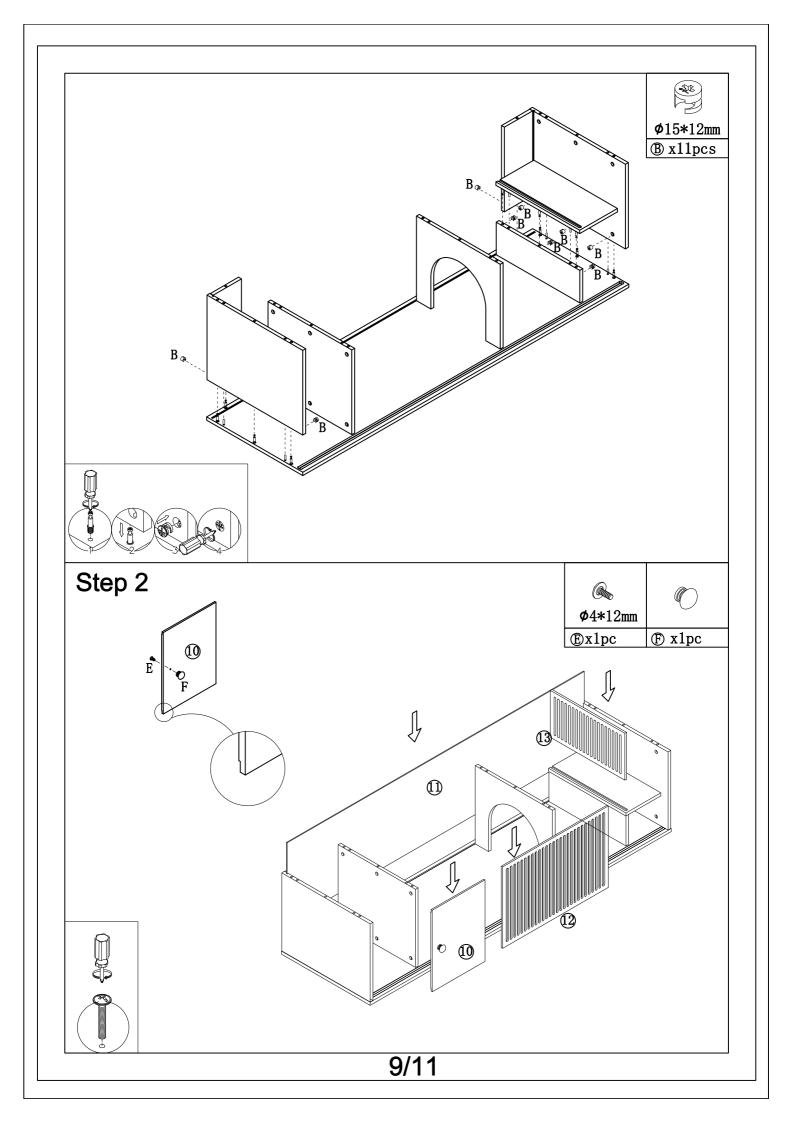

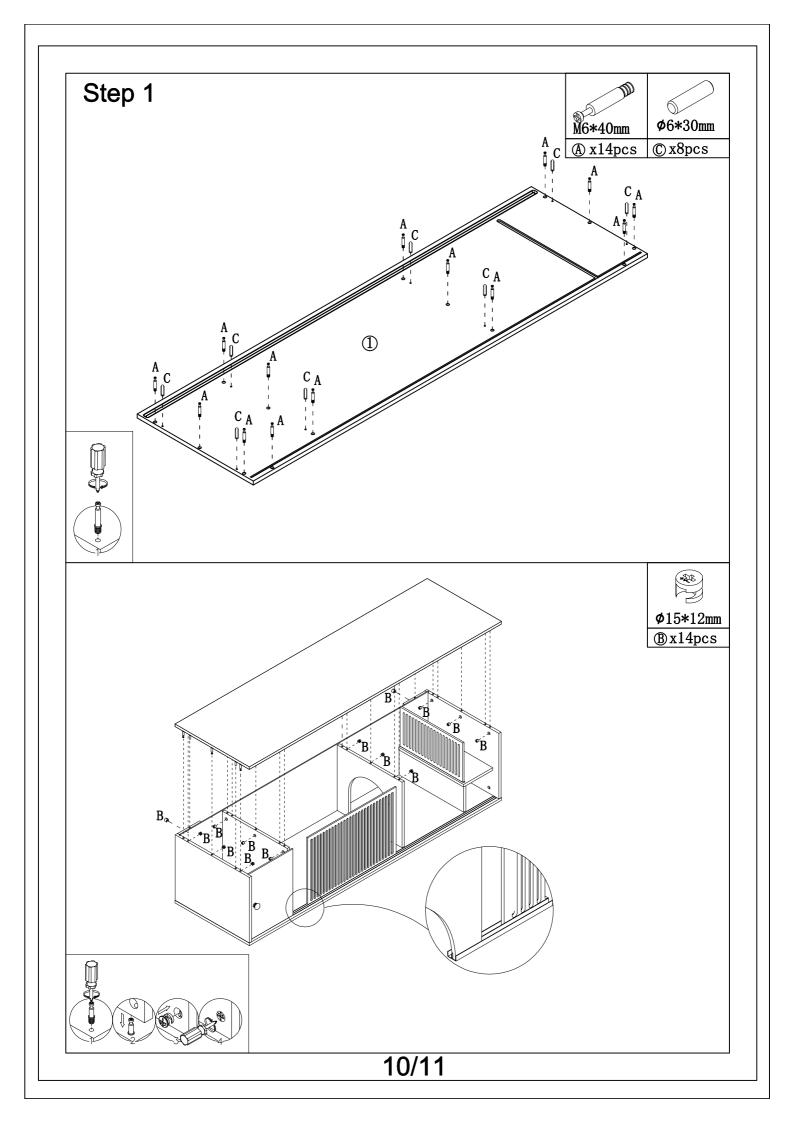

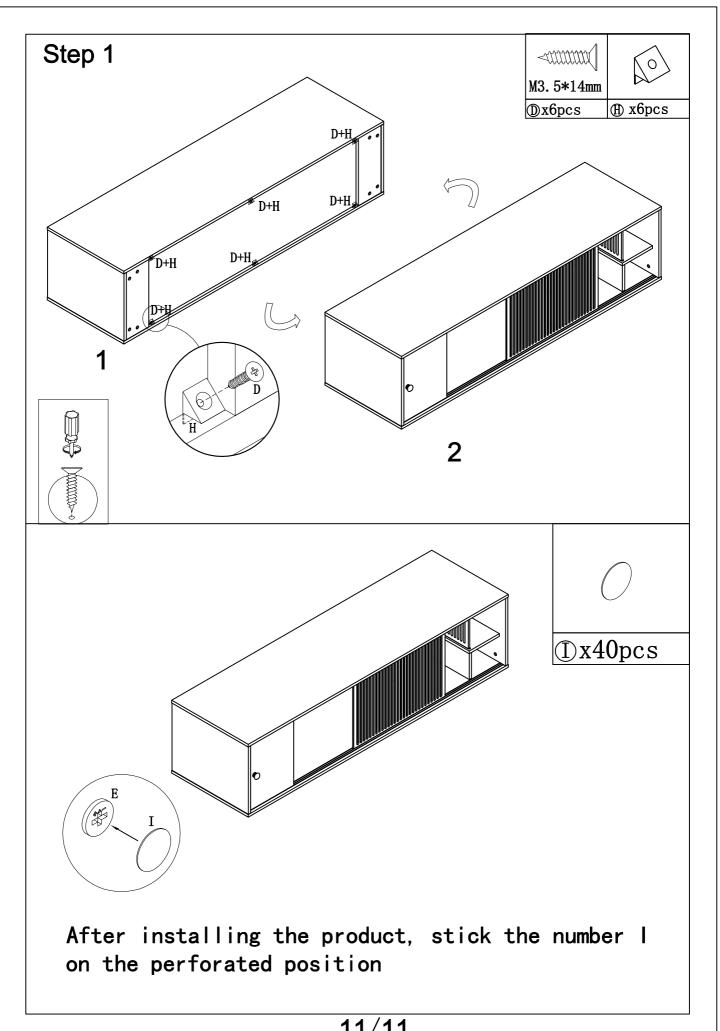

11/11