




















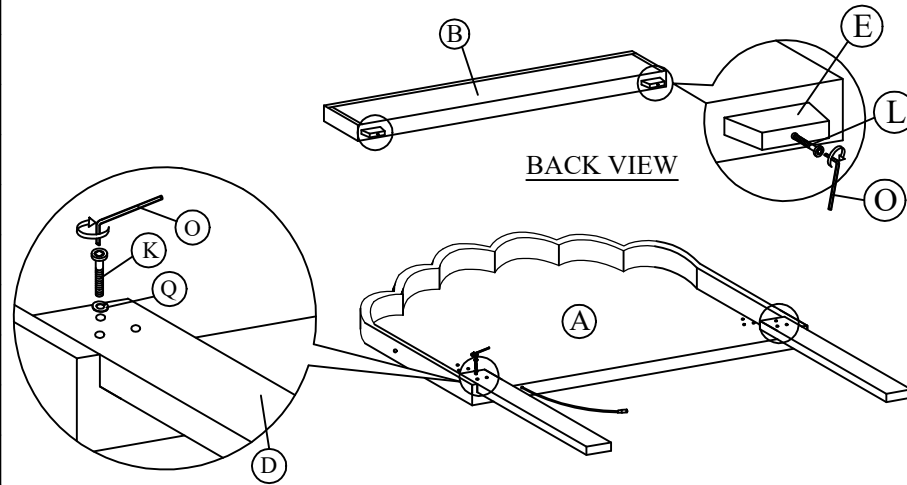


ASSEMBLY INSTRUCTION


MODEL : F9662Q/F9663Q

A		Headboard	1pc
B		Footboard	1pc
C	 	Side Rail	4pcs
D		Headboard Legs 640 x 80 x 20mm	2pcs
E		Footboard Legs No.125 (100°46°90H)	2pcs
F		Side Rail Legs No.124 (30°80°180)	2pcs
G		Center Rail 870mm	2pcs
H		12 Slat 1477mm	2pcs
I		Support Legs 185mm	4pcs
J		JCBB M8 x 20	8pcs
K		JCBC M6 x 30	14pcs
L		JCBC M6 x 50	2pcs
M		JCBC M6 x 60	4pcs
N		CSK Screw 32mm	24pcs
O		Allen Key 100mm	1pc
P		Allen Key 70mm	1pc
Q		Spring Washers	6pcs
R		Flat Washers	8pcs
S		Small Adjuster	4pcs
T		Plug	1set


Step 1 : Attach the headboard legs (D) to headboard (A). Attach the footboard legs (E) with footboard (B) as shown.




Step 2 : Attach the JCBB Bolt (J) to the headboard and footboard.

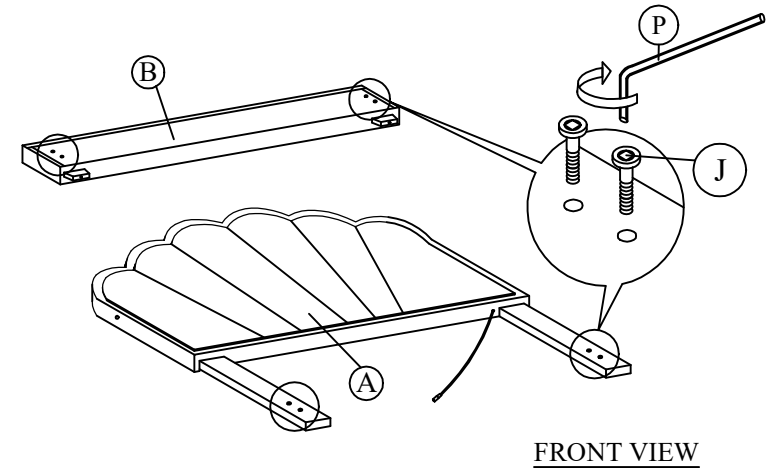


Step 3 : Attach the side rail leg (F) to the side rail (C).

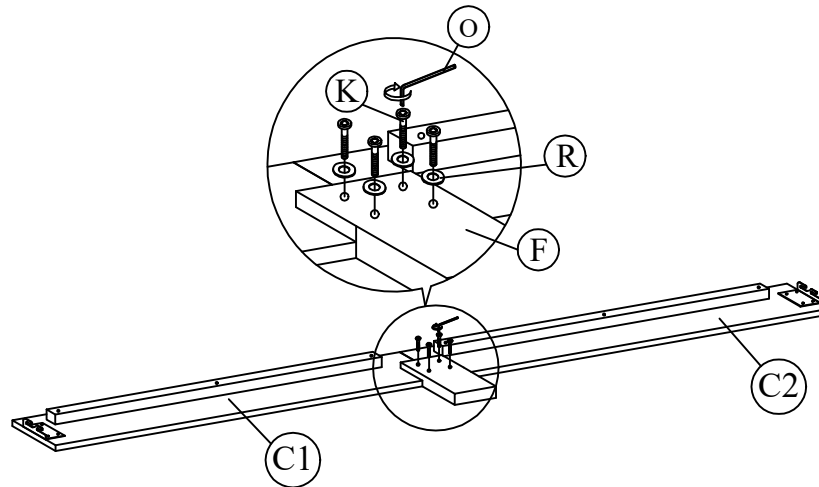


Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

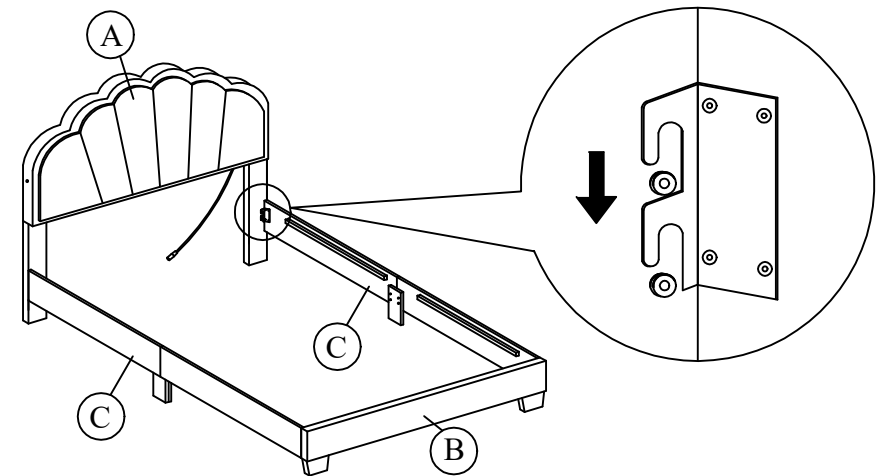

Step 5 : Attach the support legs (I) to the center rail (G) and slats (H).

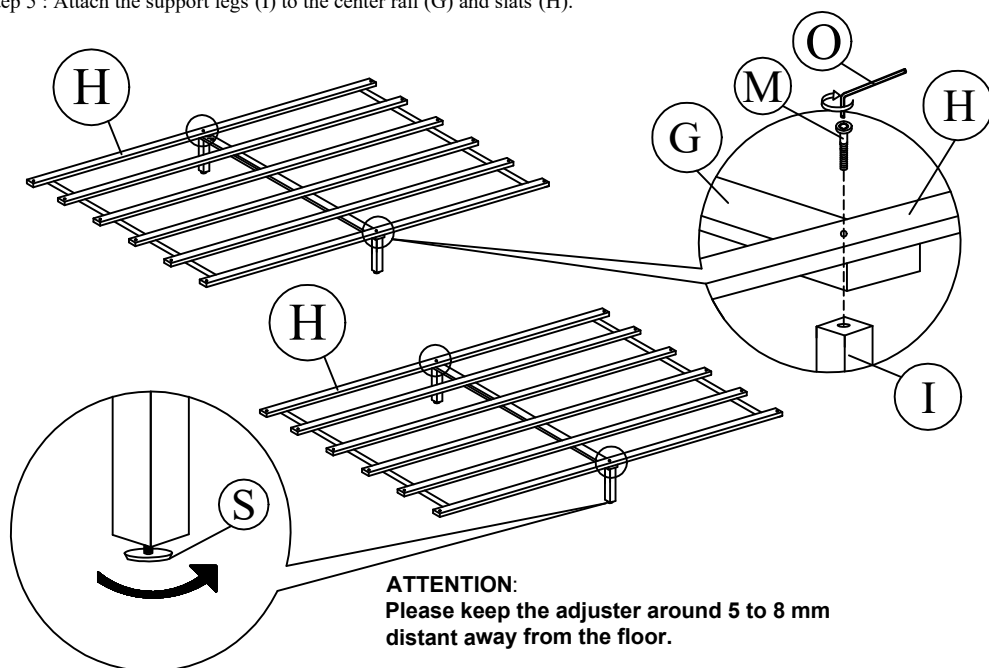

Step 6 : Tighten the 4 Corner with Allen Key (P). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

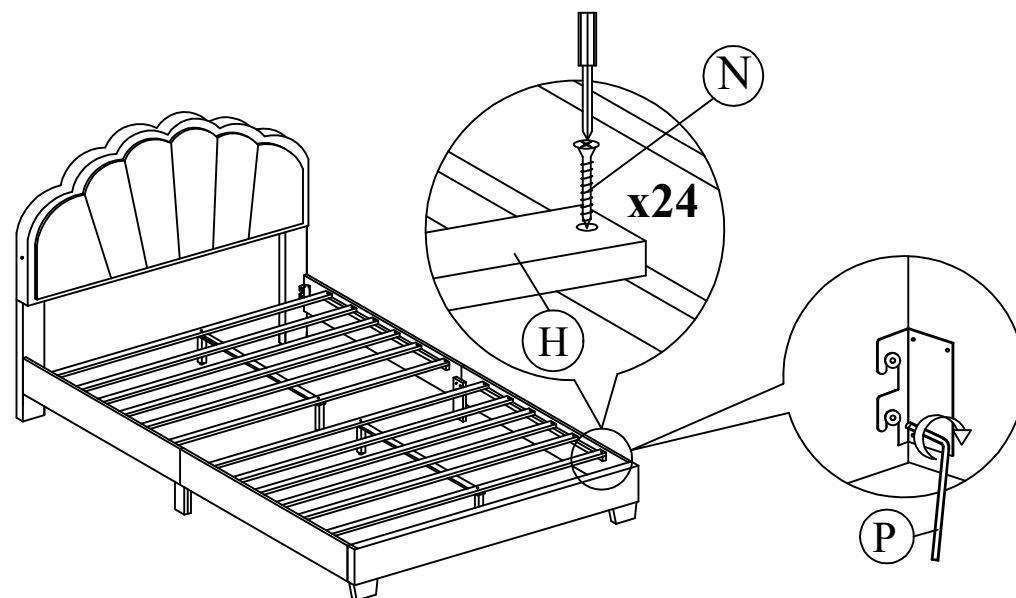

Step 7 : Install plug (T) to the headboard (A) back.

