
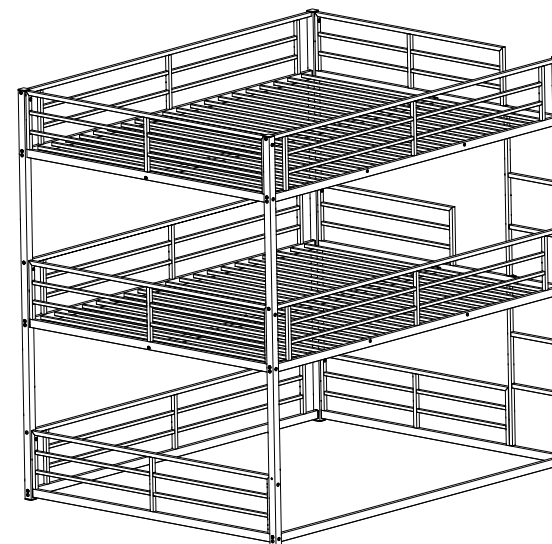


Assembly instructions

Product code: BW00191 AAB

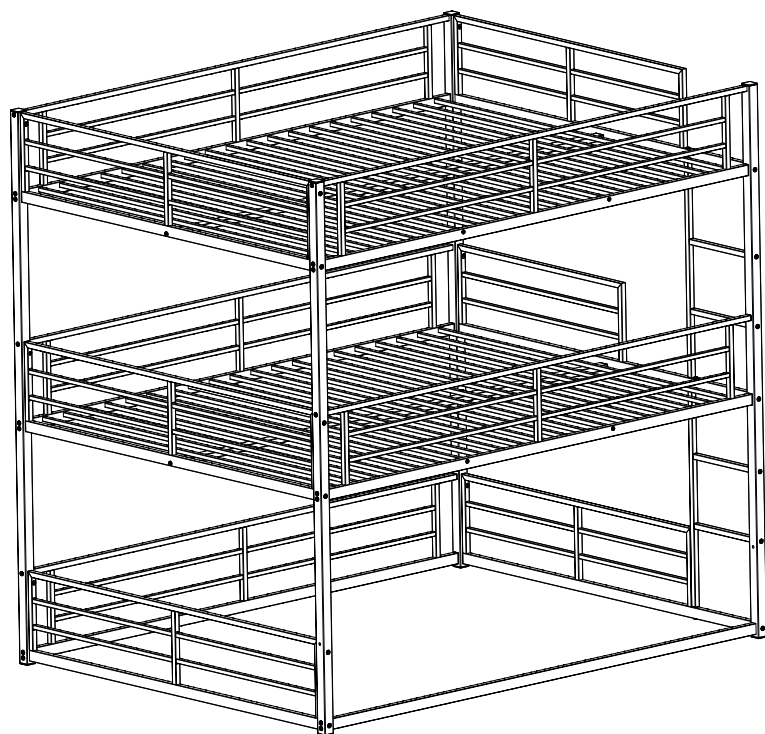


→ third layer

→ second layer

→ first layer

The stairs are installed
in the right direction.

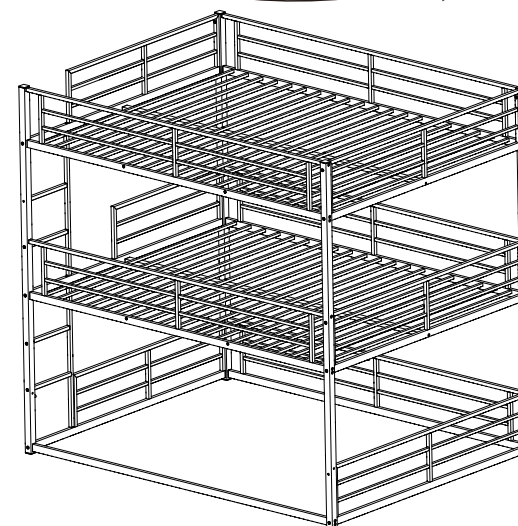

The stairs are installed
in the left direction.



SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
 2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
 3. Do not allow children under 6 years of age to use the upper bunk.
 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
 5. Do not allow horseplay on or under beds.
 6. Always prohibit jumping on the bed.
 7. Prohibit more than one person on upper bunk.
 8. Always use the ladder for entering and leaving the upper bunk.
 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
 10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
 11. Always use guardrails on both long sides of the upper bunk.
 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattresses is prohibited.
13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed ; for example, but not limited to, hooks, belts and jump ropes.
 14. Keep these instructions for future reference.
 15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.

17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Upper bed (the second layer and the third layer)

Bed type	Length	Width	Thickness
Full Standard	74" - 75"	54 ½"	6" max

Bottom bed (the first layer)


Bed type	Length	Width	Thickness
Full Standard	74" - 75"	54 ½"	8"

18. SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.








19. Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (Shenzhen Yuefeng Zhiqi Technology Co., Ltd) dealers.


Component distribution preview

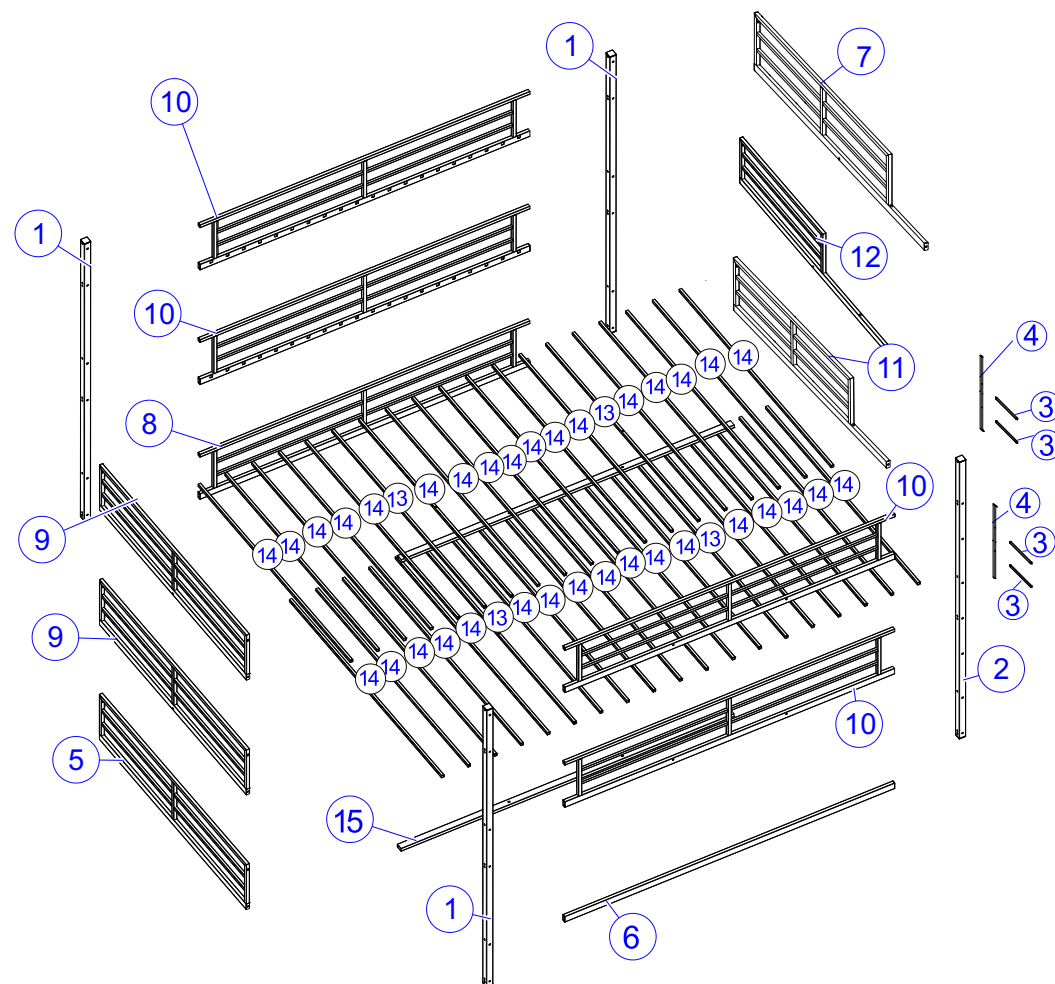



PARTLIST

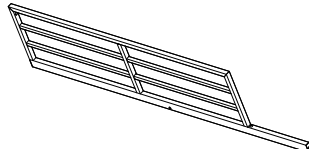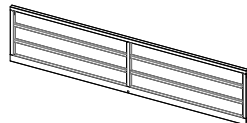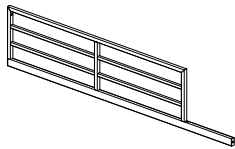
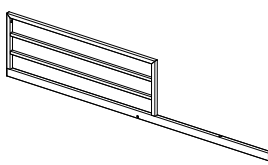
		 		
1-3pcs	2-1pcs	3-4 pcs 4-2pcs	5-1pcs	6-1pcs
				
7-1pcs	8-1pcs	9-2pcs		
				
10- 4pcs	11-1pcs	12-1pcs		
 	 			
13-4pcs	14- 34 pcs	15-2pcs		

HARDWARE LIST



			 M5*25-2pcs			
B	C	H	D	E	F	k
M8*35-9pcs	M8*55-57pcs	M8*30-16pcs	ΦM8*16-14pcs	M8*40-1pcs	40FQ*34-8pcs	k 2pcs

Step 1: Use hardware A,C,F to connect #1,#8,#10, together

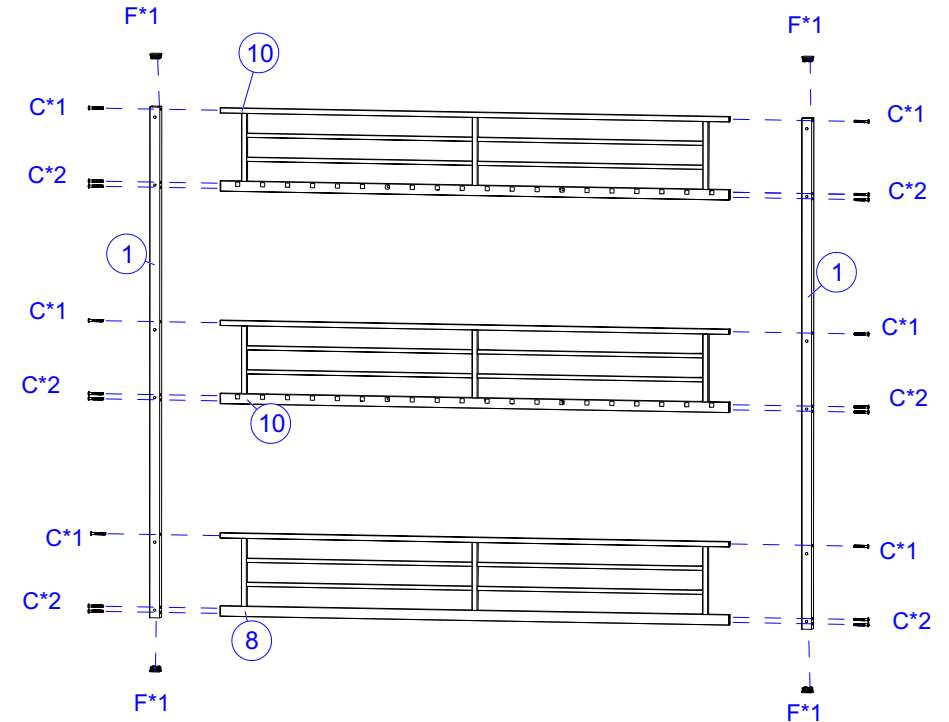


			 40FQ*34-4pcs  C M8*55-18pcs
1-2pcs	8-1pcs	10-2pcs	

Step 2:Use hardware A,C,F to connect #1,#2,#6,#10 together

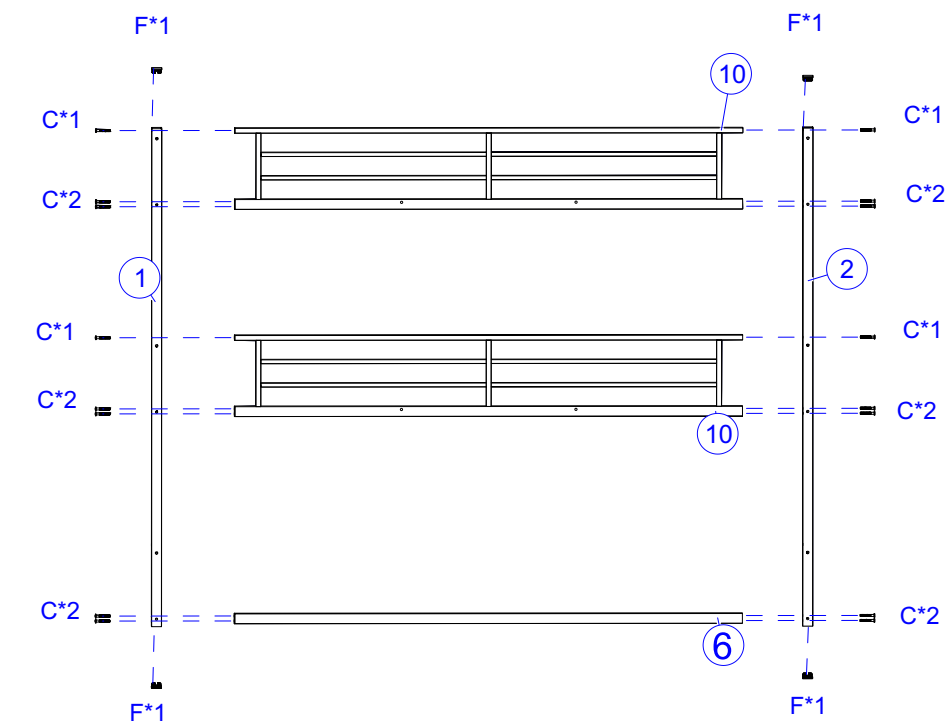

1-1pcs	2-1 pcs	6-1pcs	10-2pcs		


Step 3:Use hardware A,B,C to connect #4,#11 together

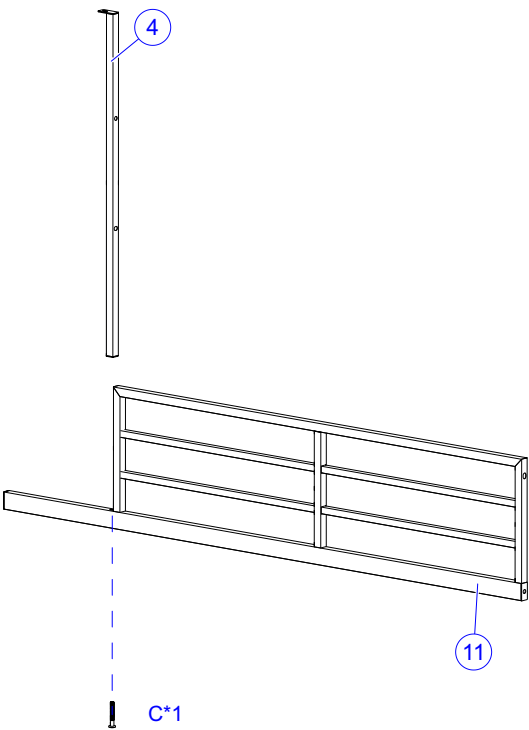

HARDWARE LIST

11 -1pcs	4-1pcs	M8*55 - 1pcs	


Step 4:Use hardware A,B,C,D,H to connect #2,#3,#4,#11 together

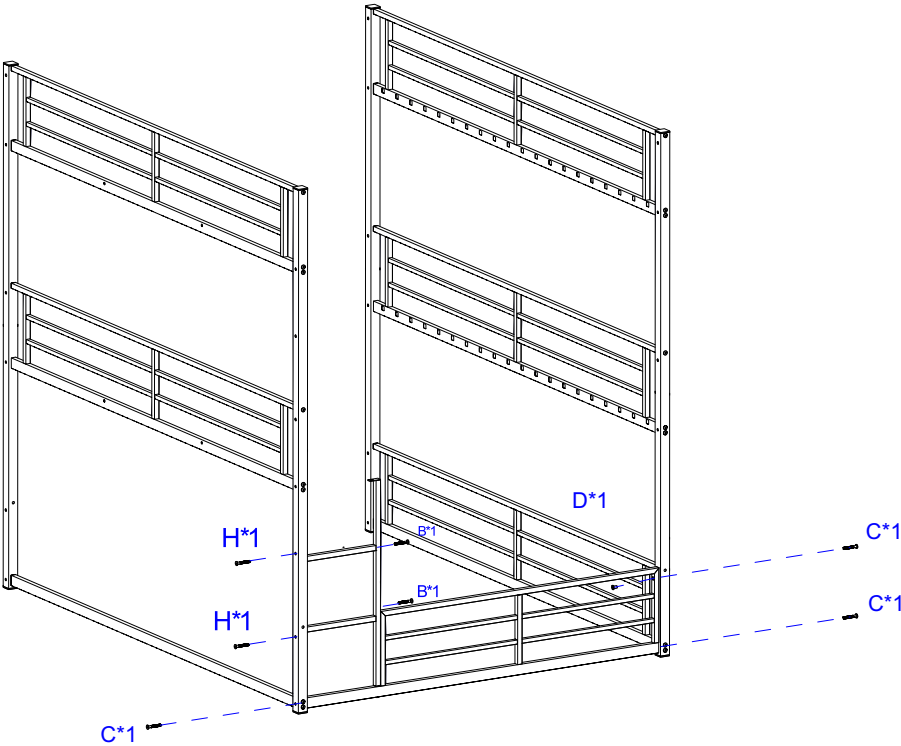


HARDWARE LIST

					
3-2pcs	M8*35 -2pcs	M8*55 -3pcs	M8*30 -2pcs	ΦM8*16- 1pcs	


Step 5:Use hardware A,C,D, to connect #5 together

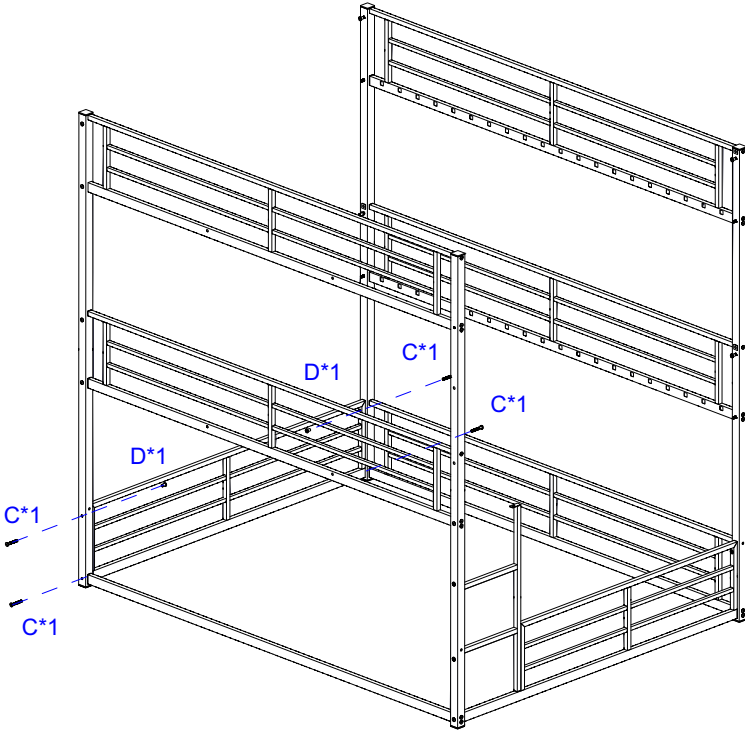

HARDWARE LIST


			
5-1pcs	M8*55- 4pcs	ΦM8*16- 2pcs	

Step 6: Use #13 and #14 to insert into the corresponding square hole of #10, and use hardware A, H to tighten the #13 and #10 connections

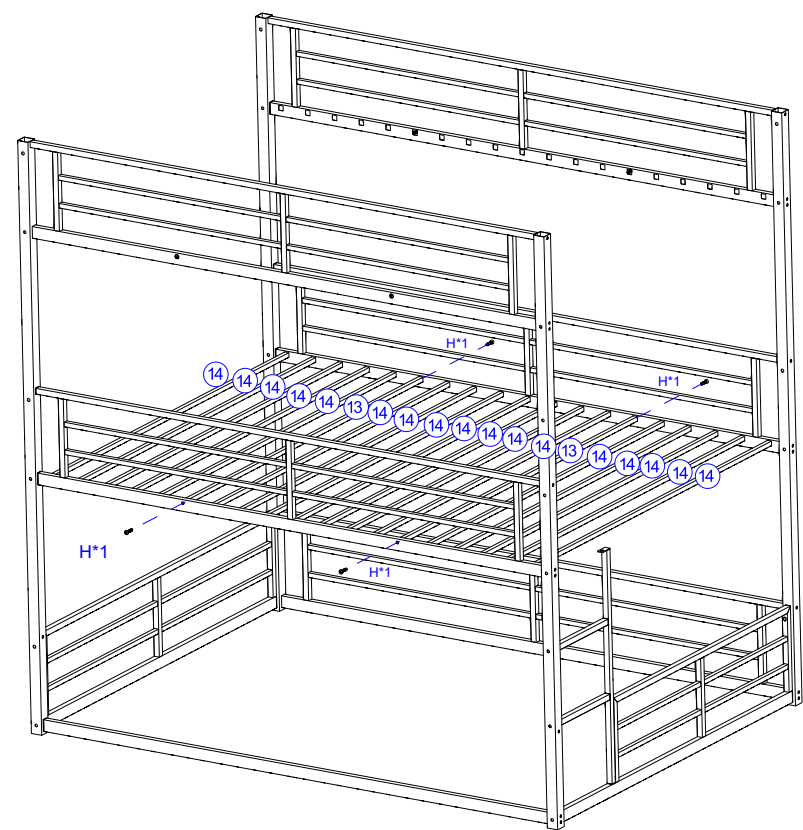



14-17pcs	13-2pcs	M8*30-4pcs	A

Step 7: Use hardware A, C, D, to connect #9, #12 together

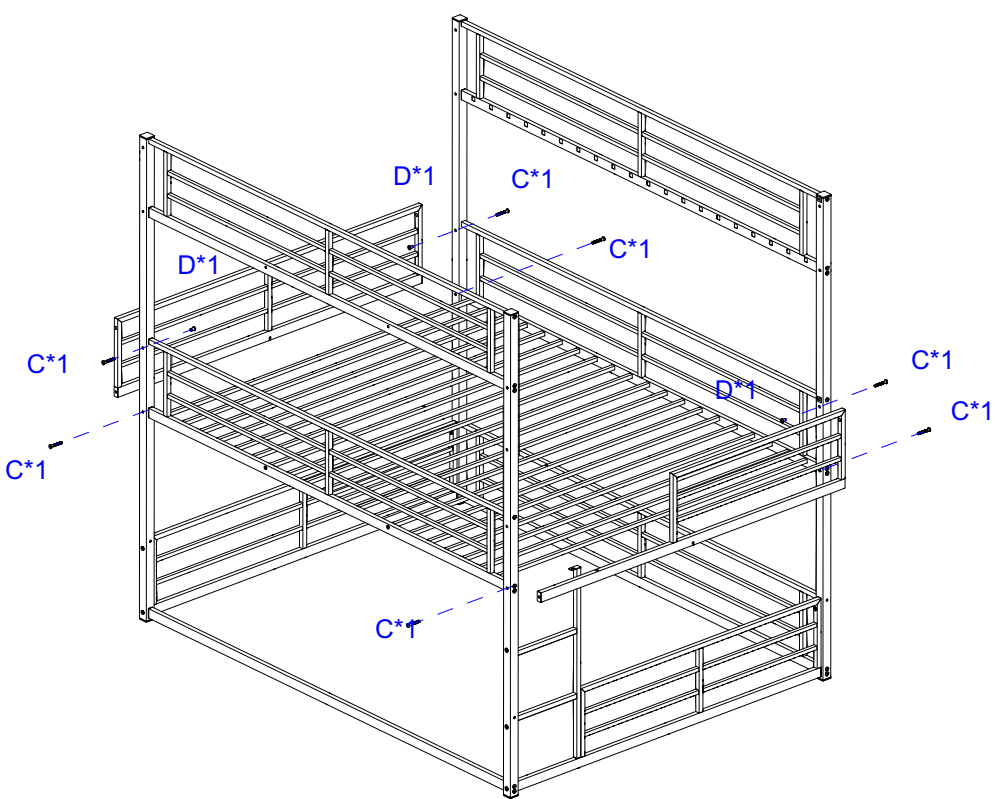

9-1pcs	12-1pcs	M8*55-7pcs	ΦM8*16-3pcs


Step 8:Use hardware A,B,D,H to connect #15 together.

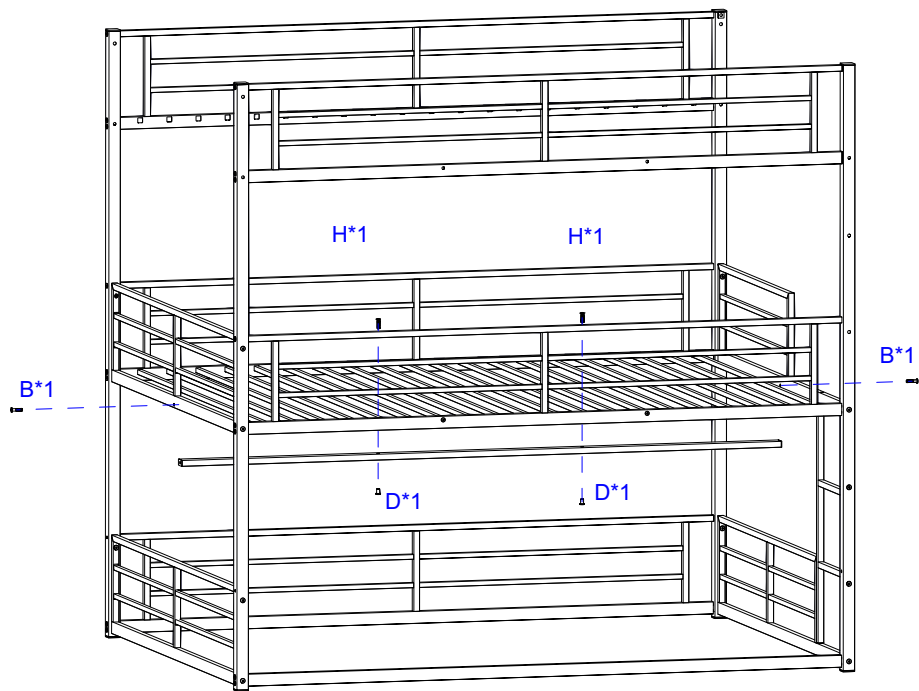


HARDWARE LIST



			
B	H	D	
M8*35-2pcs	M8*30 - 2pcs	ΦM8*16- 2 pcs	15 - 1pcs

Step 9:Use #13 and #14 to insert into the corresponding square hole of #10,and use hardware A,H to tighten the #13 and #10 connections

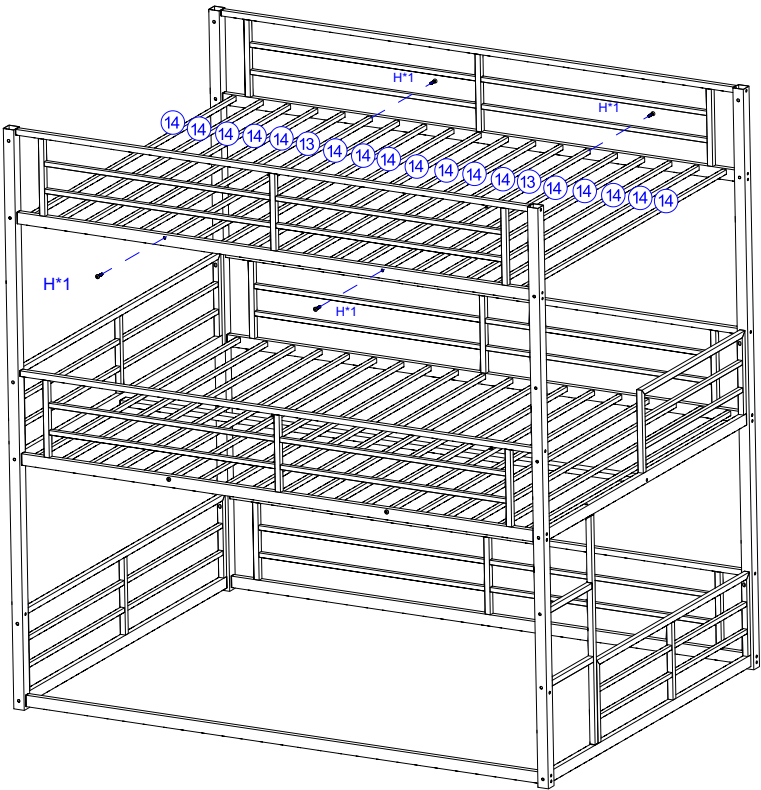



			
14-17pcs	13-2 pcs	M8*30-4pcs	

Step 10: Use hardware A, C, D to connect #7, #9 together.

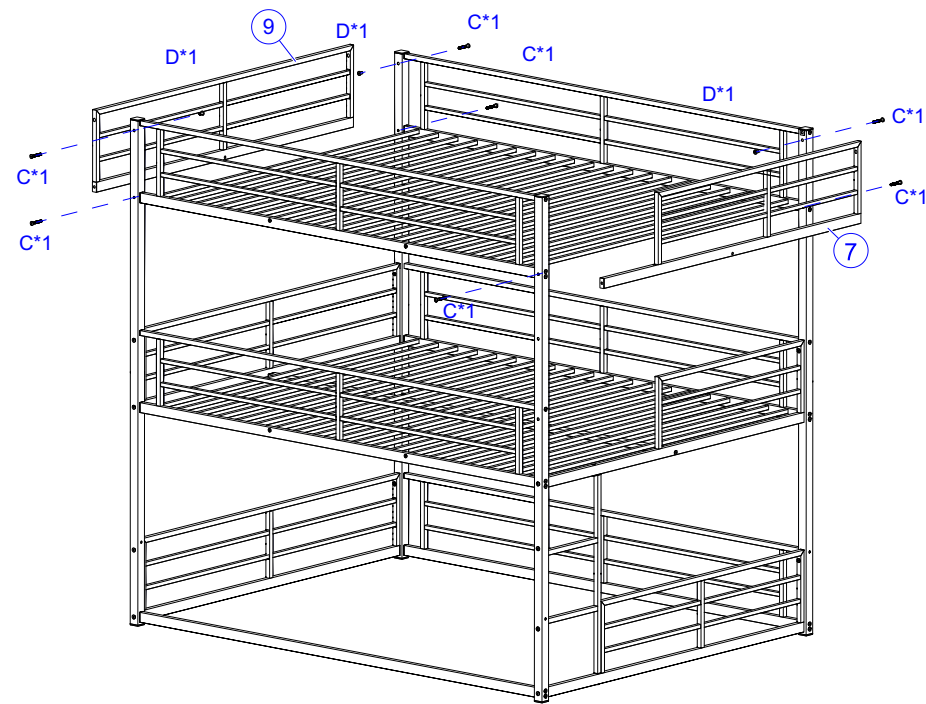



9 - 1pcs	7 - 1pcs	M8*55- 7pcs	ΦM8*16- 3pcs

Step 11: Use hardware A, B, D, H to connect #15 together.

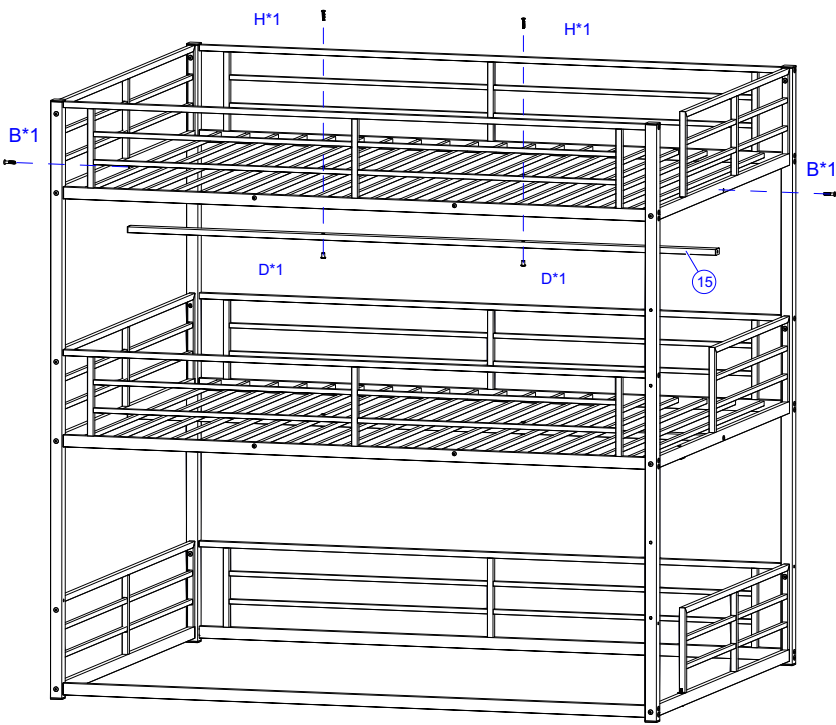


15 - 1pcs	M8*35 - 2pcs	M8*30 - 2pcs	ΦM8*16- 2pcs

Step 12: Use hardware A,B,C,D,E,H to connect #3,#4,#2,#7,#12 together.


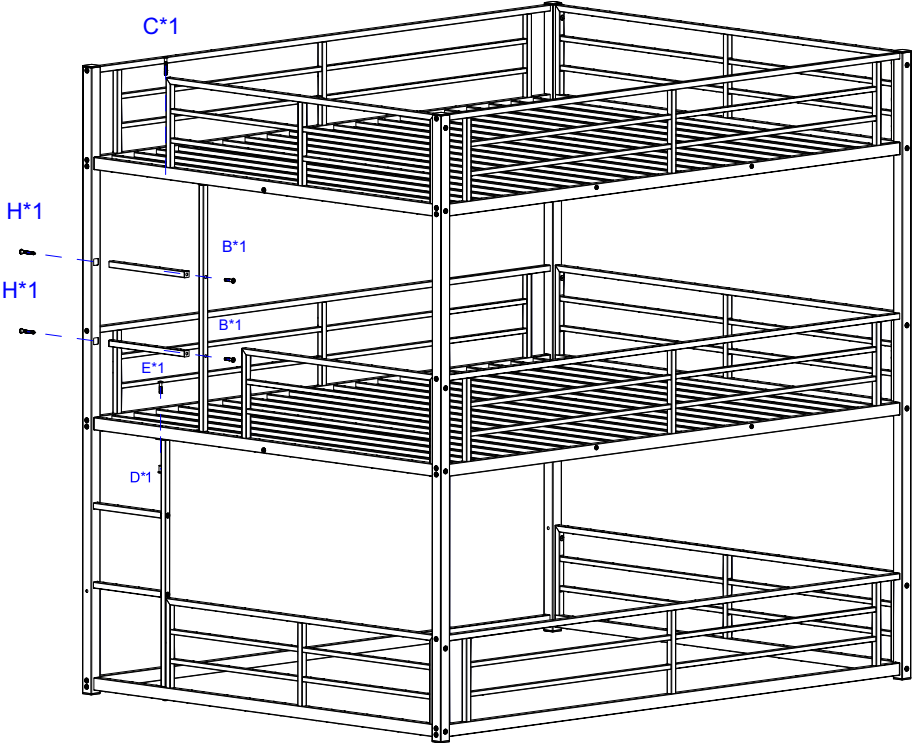


HARDWARE LIST

						
A	B	C	D	E	H	
4-1pcs	3- 2pcs	M8*35-2pcs	M8*55 - 1pcs	M8*40 - 1pcs	M8*30 -2pcs	ΦM8*16-1 pcs

Completed attic bed

Fix the wall, prevent movement, selective installation

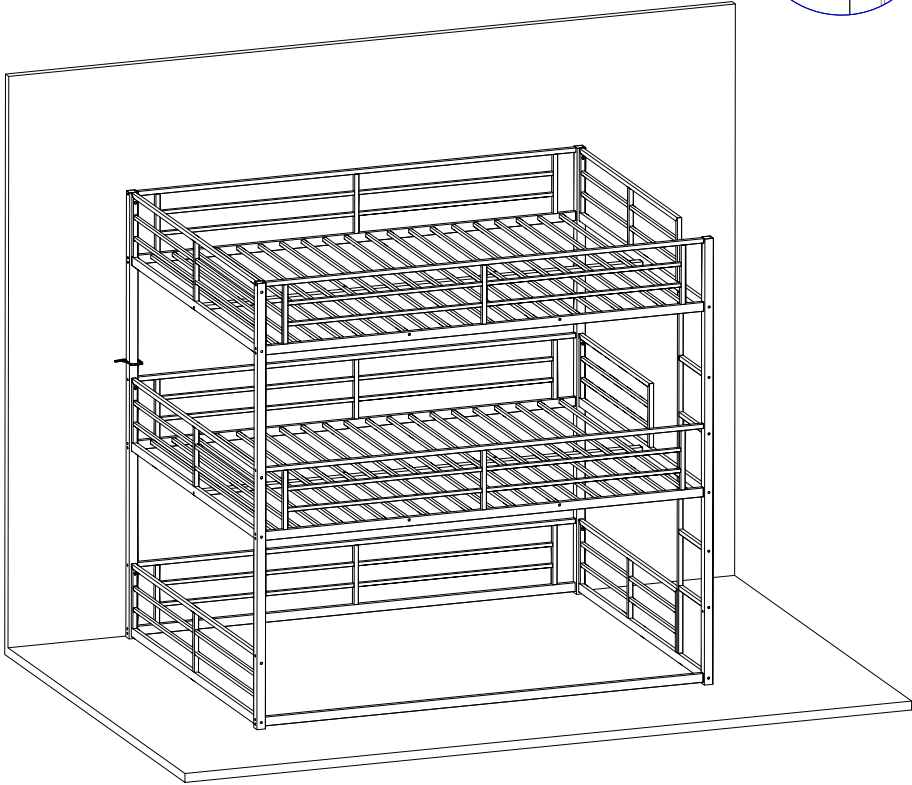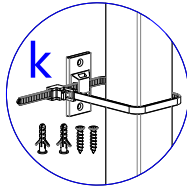

Note: Tighten all the steps before use, thank you.



Recyclable garbage