


ASSEMBLY INSTRUCTION BAUANLEITUNG

N729P285542N

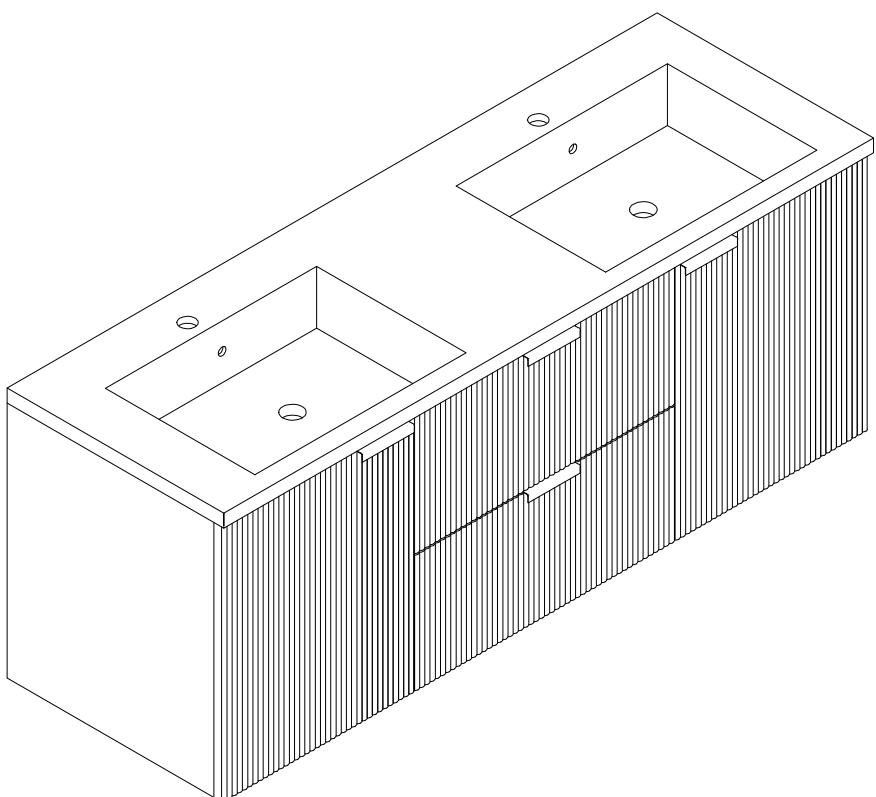


Before Installation


Important-Please read these instructions fully before starting assembly




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

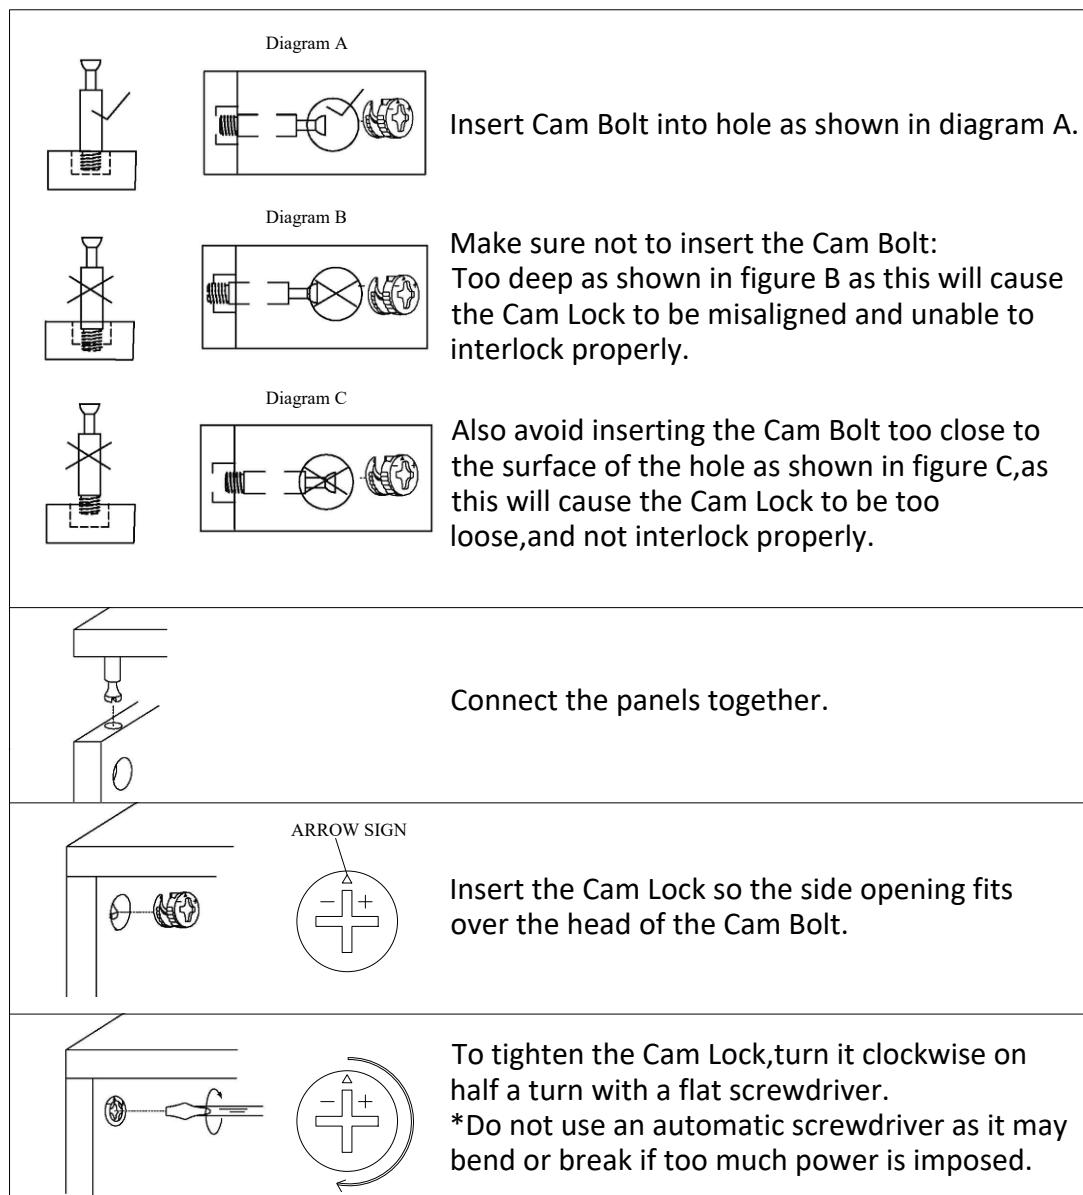



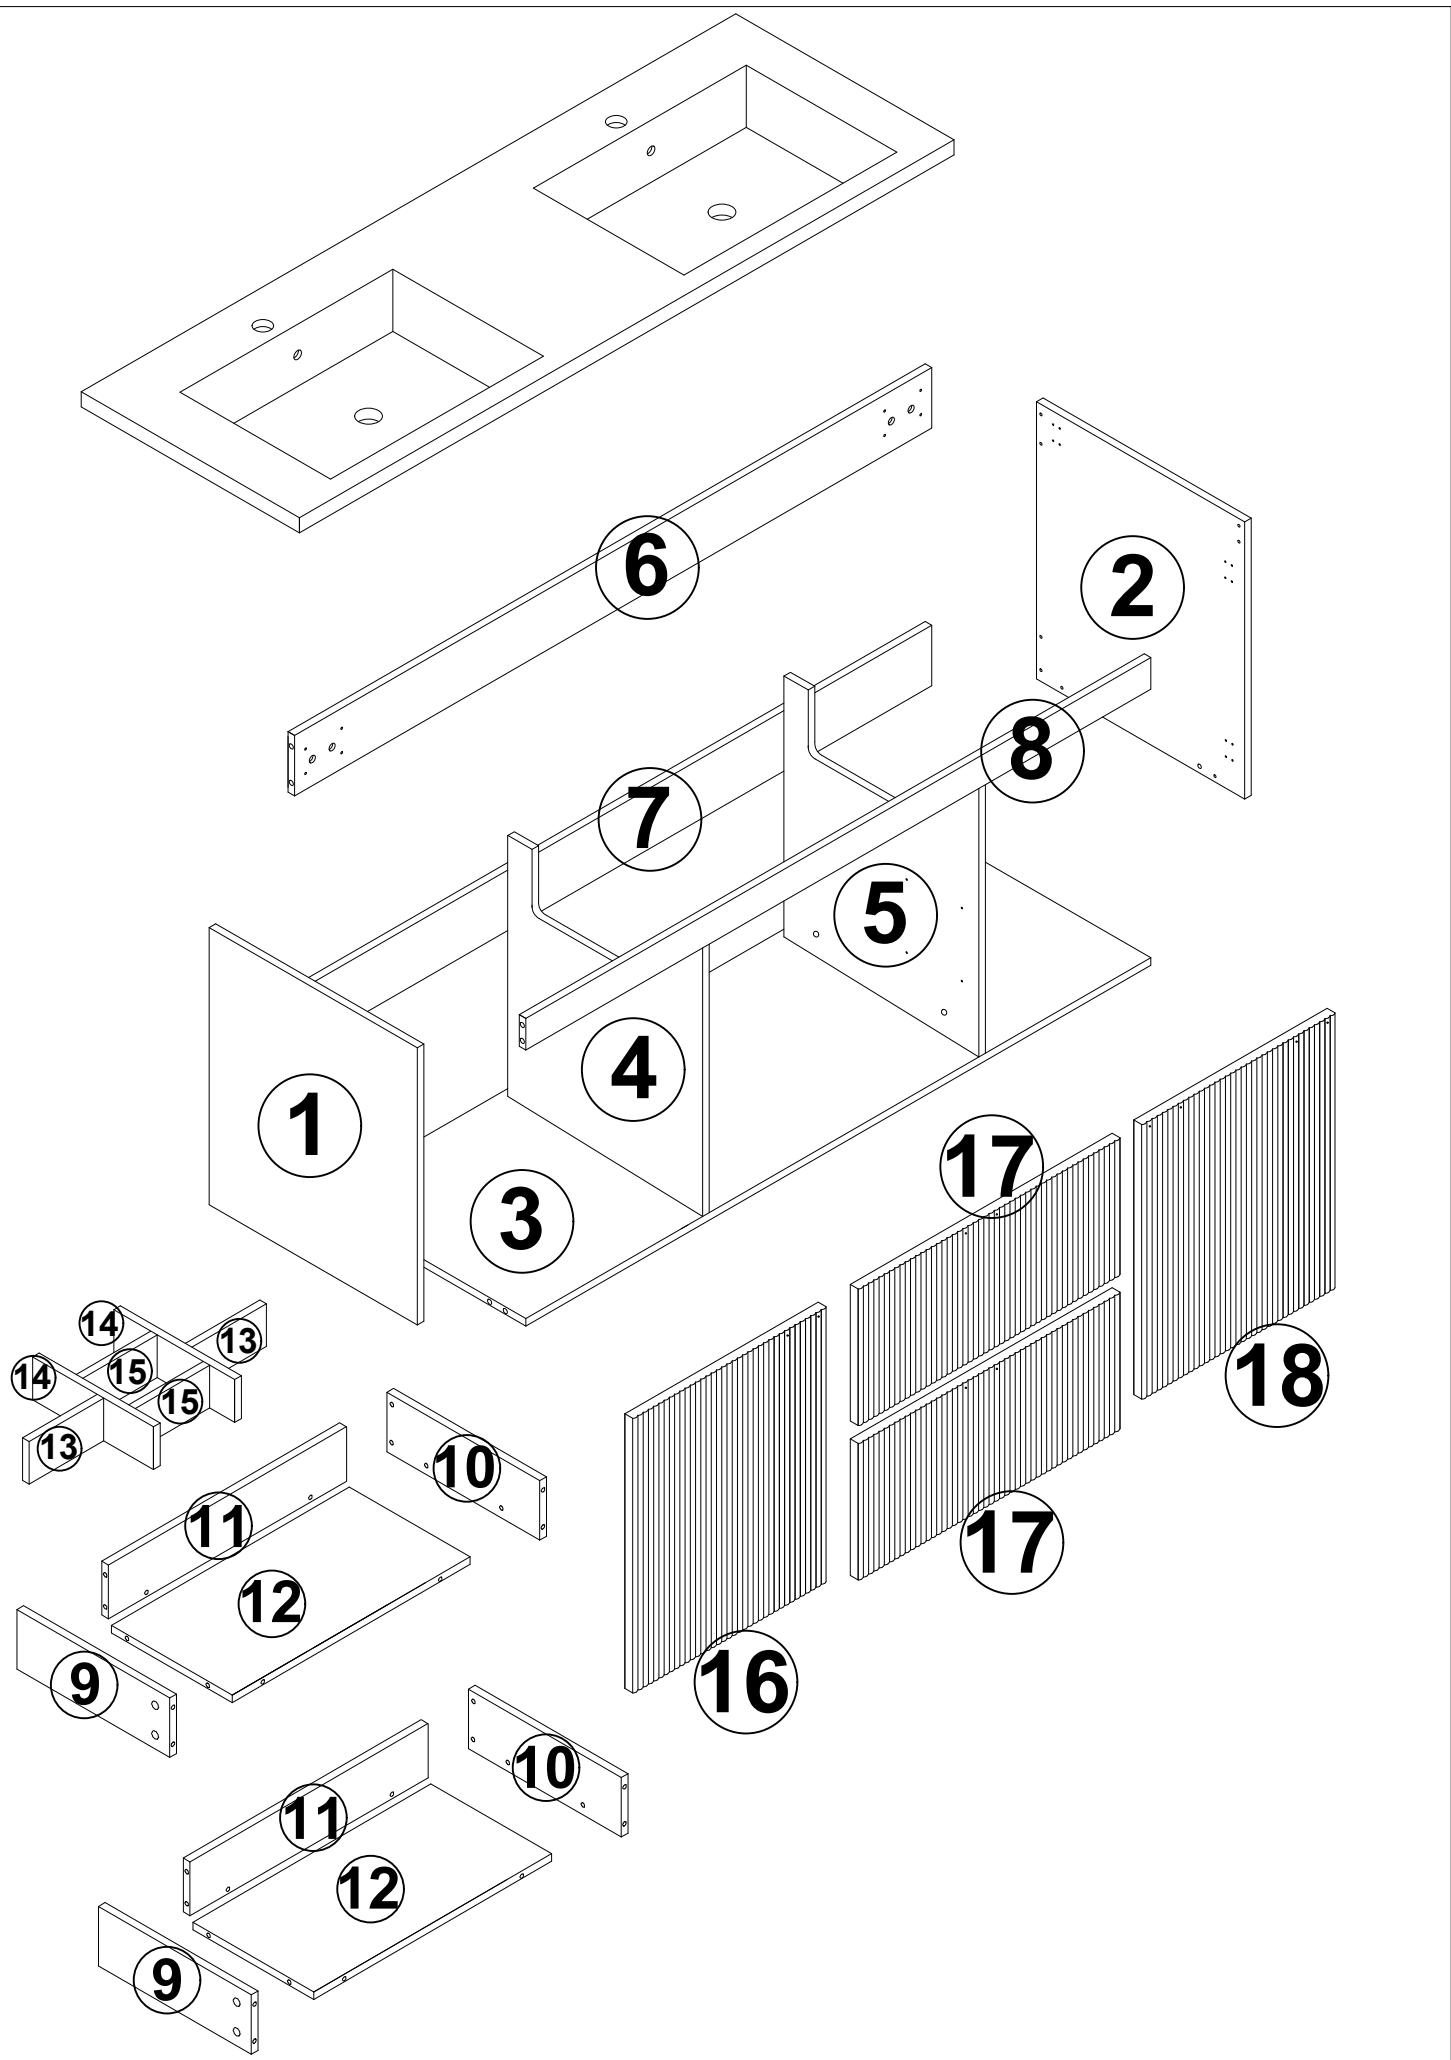


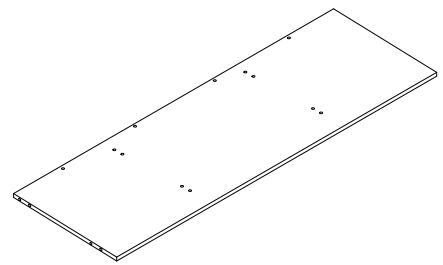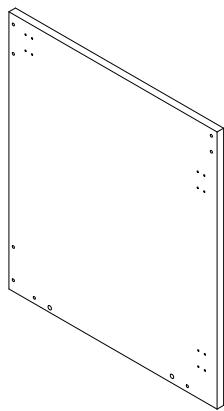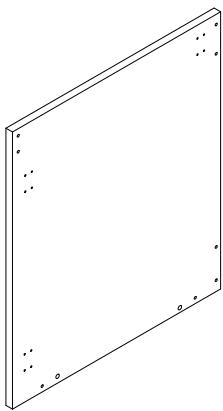

① x 1

② x 1




③ x 1

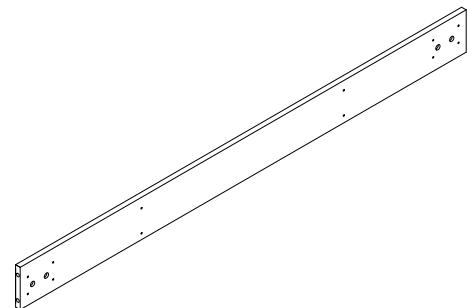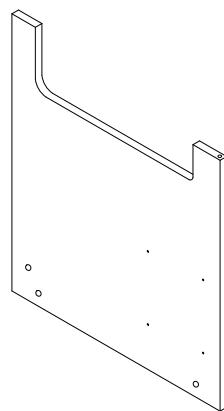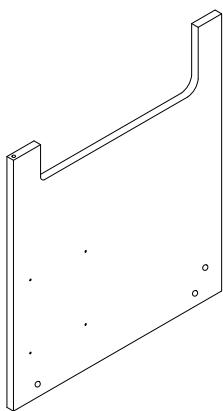

④ x 1

⑤ x 1


⑥ x 1

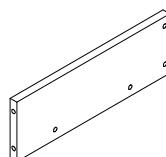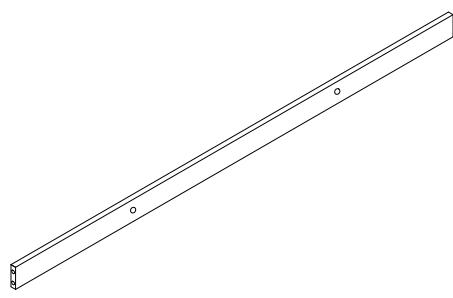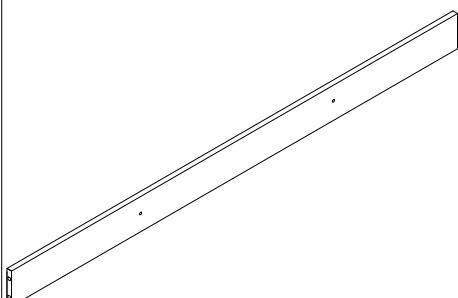


⑦ x 1

⑧ x 1


⑨ x 2

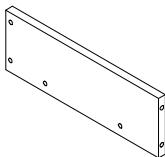


10 x 2

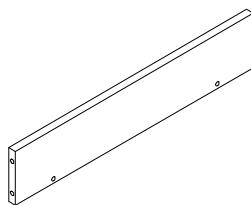

11 x 2

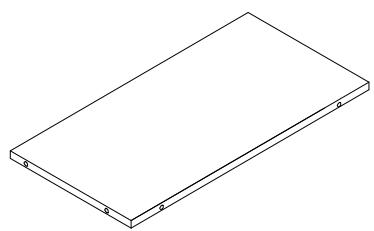




12 x 2

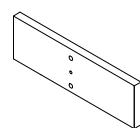

13 x 2

14 x 2


15 x 2



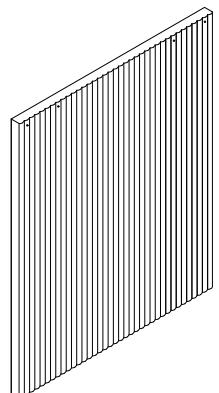
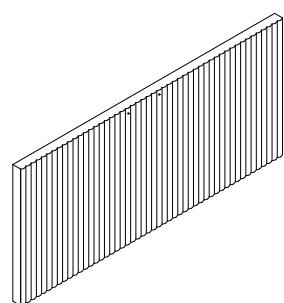
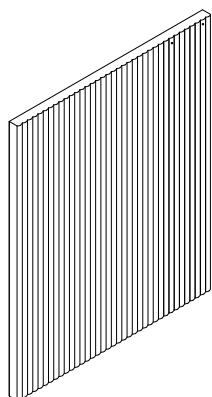


16 x 1


17 x 2

18 x 1

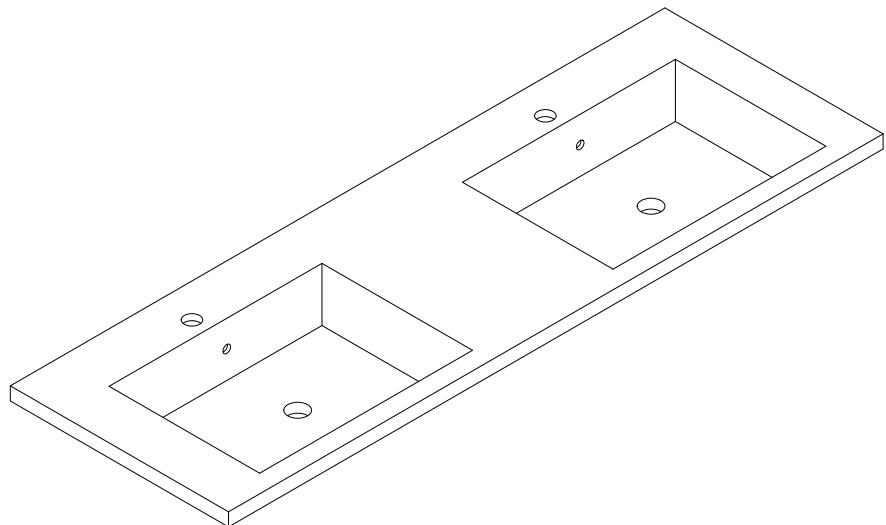


					
φ6x35mm A x 66+6	φ15x12mm B x 66+6	φ8x30mm C x 20+2	D x 4	E x 4	F x 2
					
M3.5x14mm G x 60+17	M4x20mm H x 4	M4x35mm I x 4	M6x60mm J x 8+2	φ8x40mm K x 8+2	L x 2
					
M x 2	N x 2				

Step 1

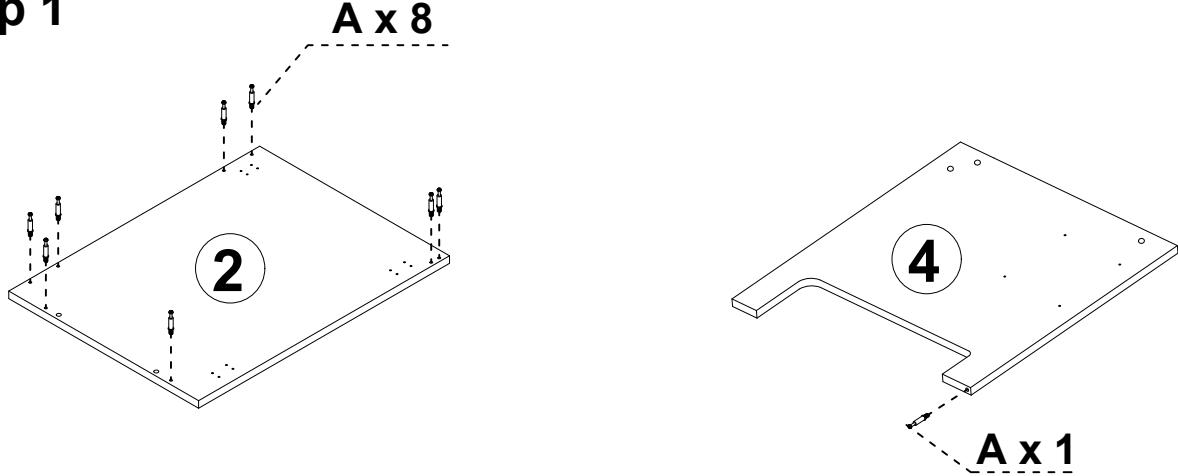

A x 8

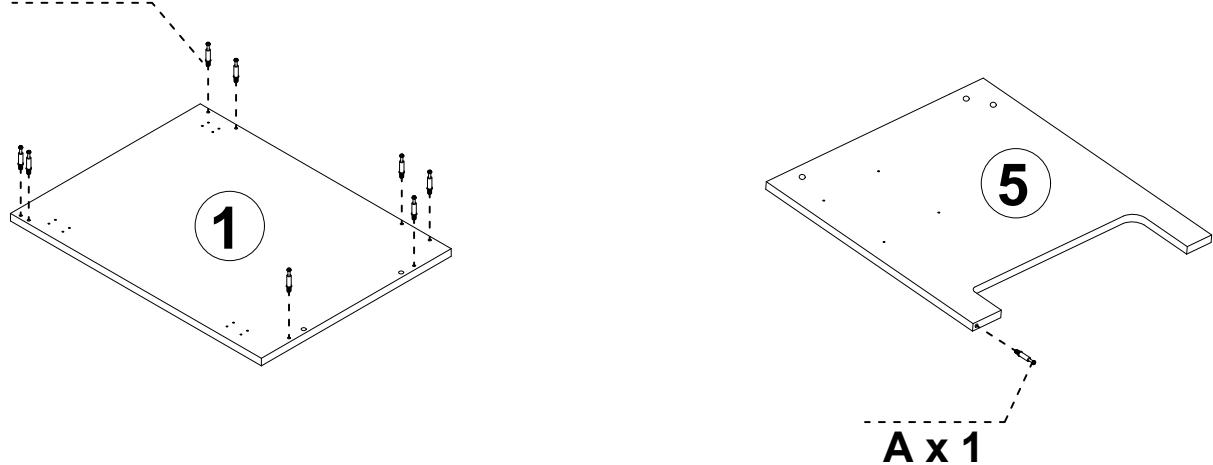


5

A x 1

A x 2

A x 8

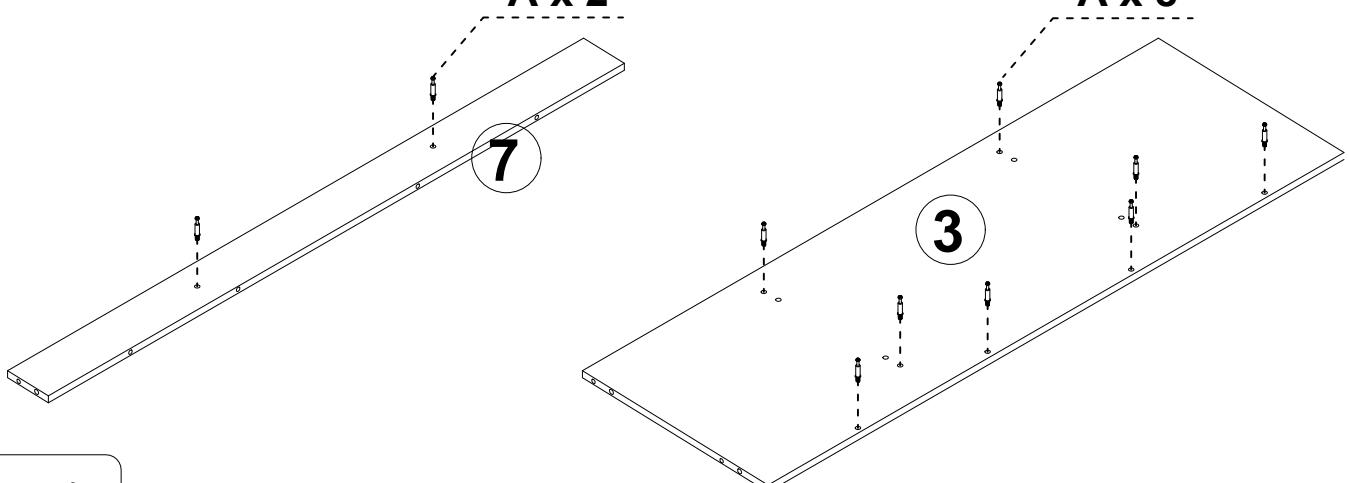


7

3





Φ6x35mm
A x 28

Step 2

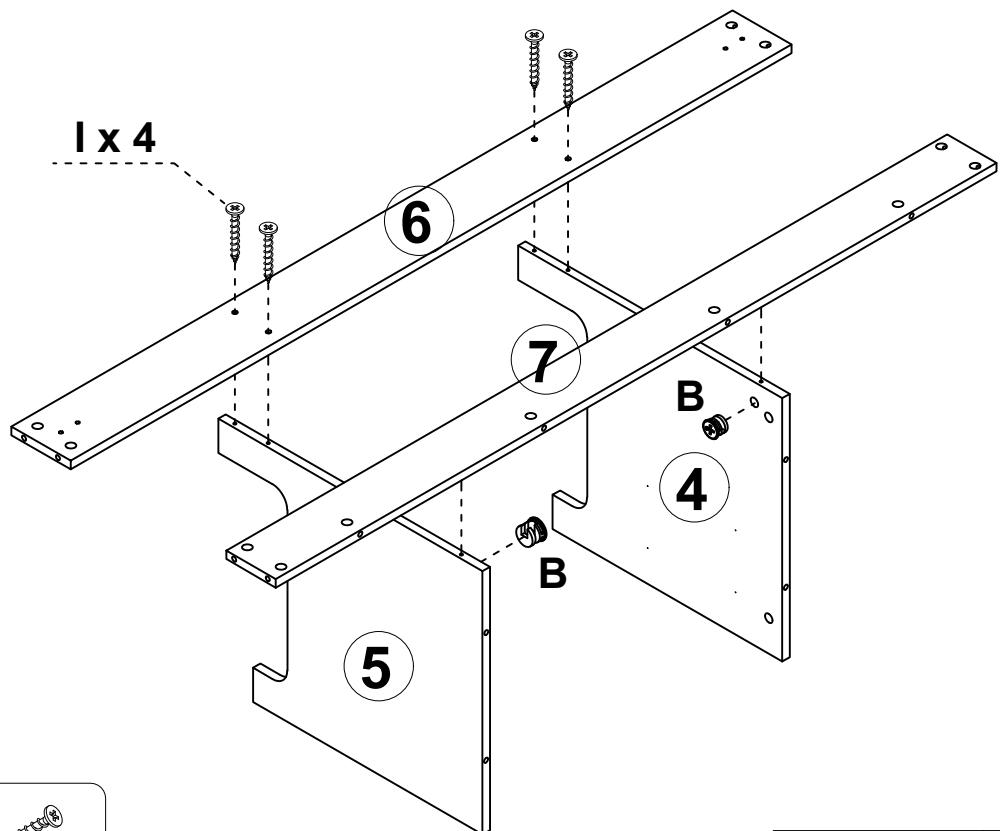


Step 3

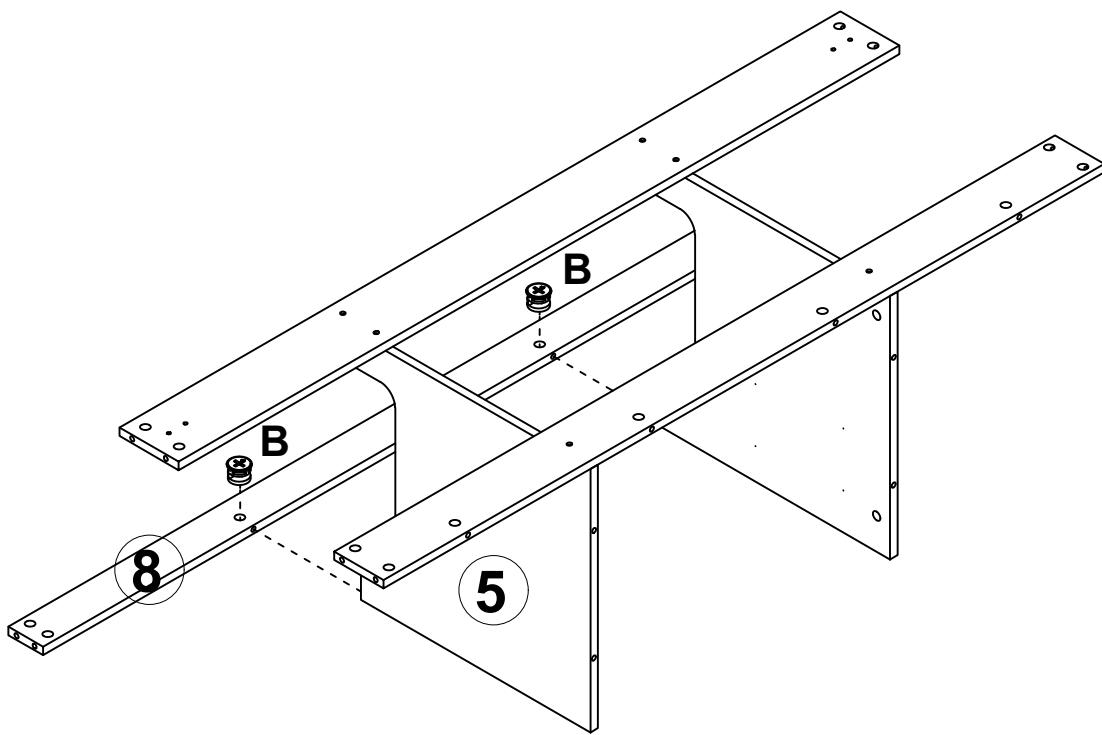
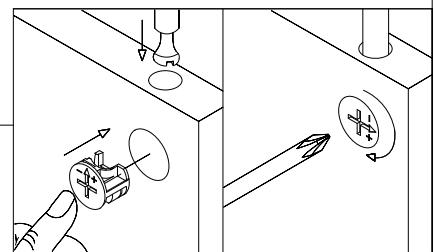


$\Phi 15 \times 12 \text{mm}$
B x 2




Step 4

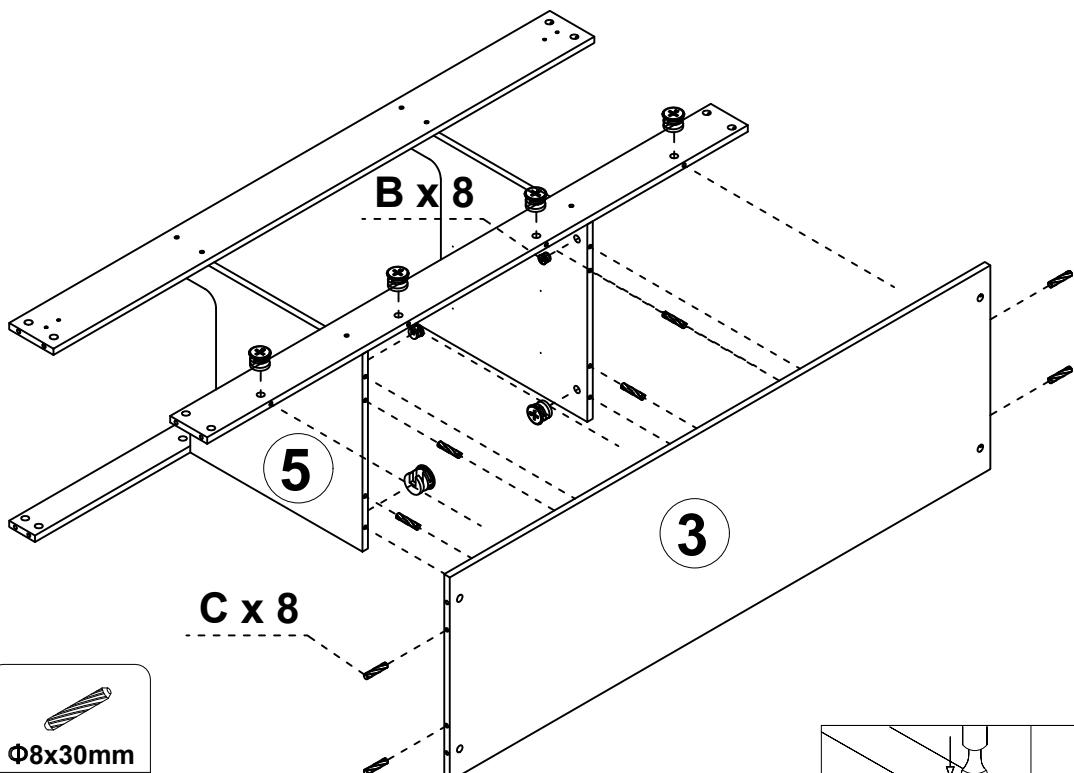

Step 5



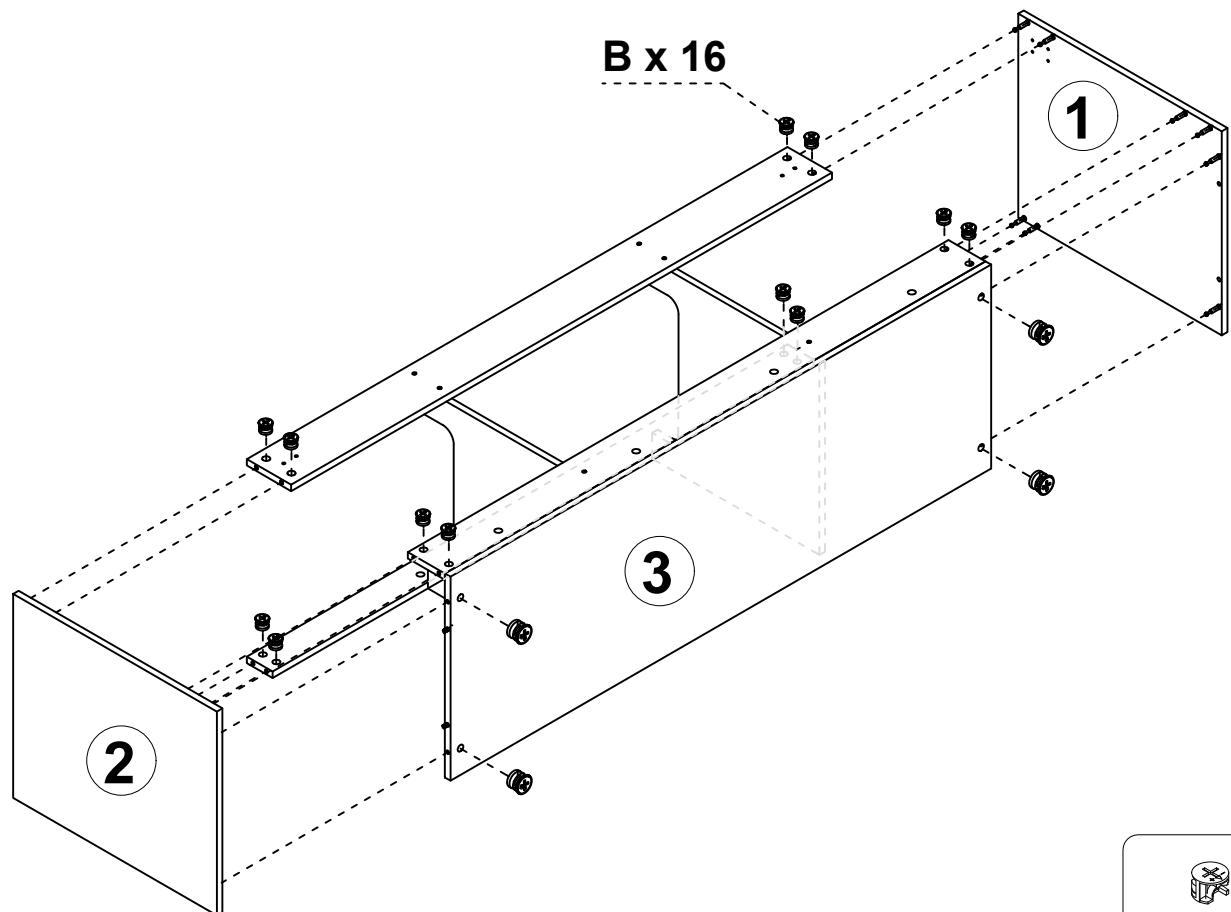
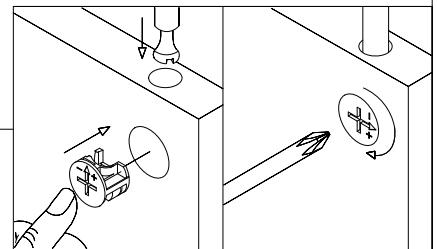


Step 6

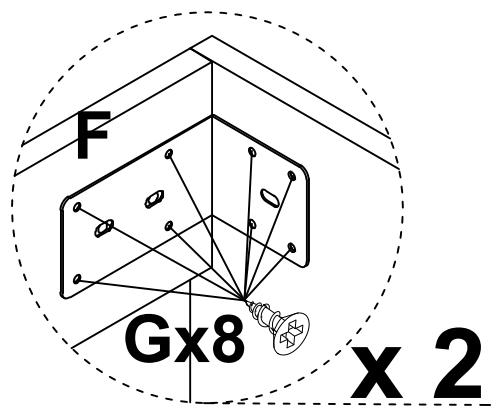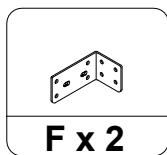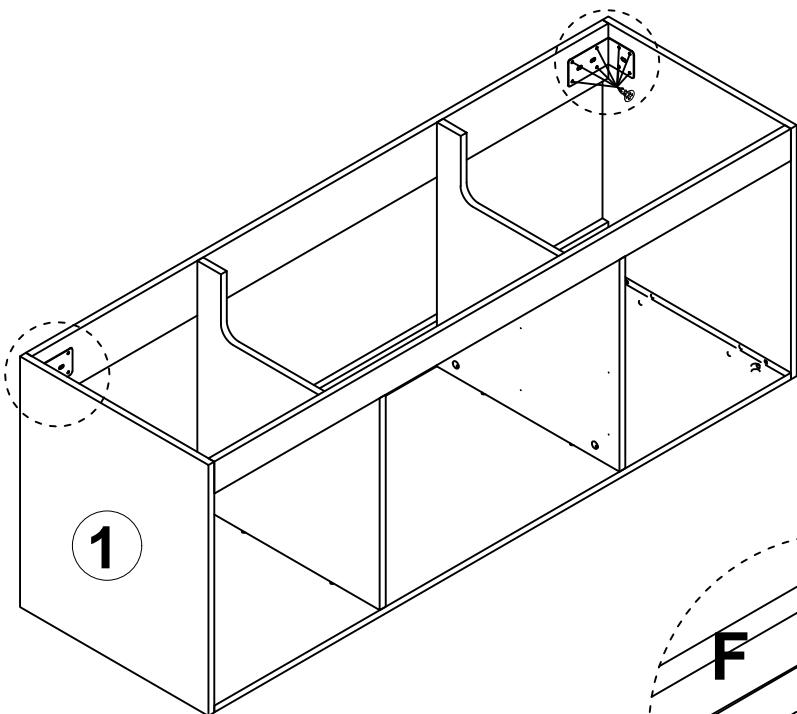


x 2

Step 7

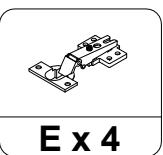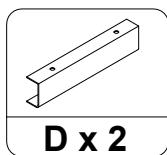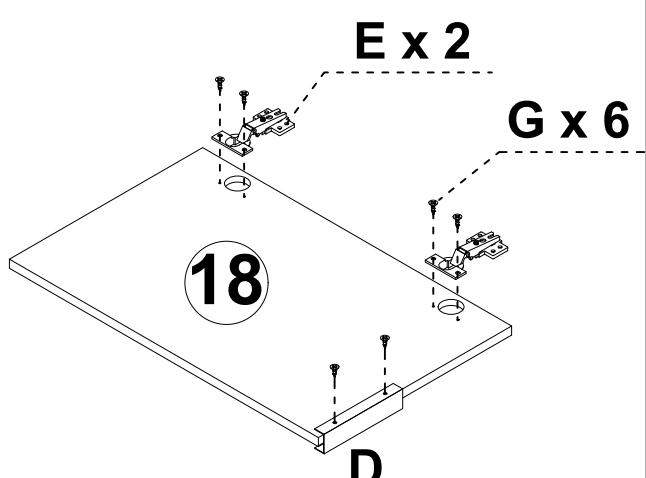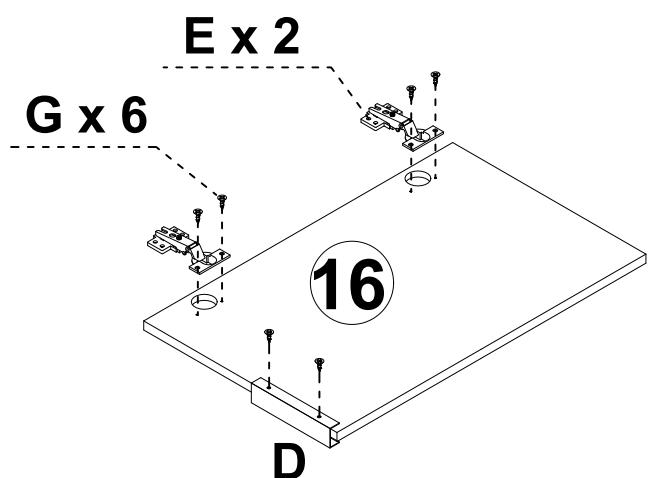


Step 8


SETTINGS DOORS

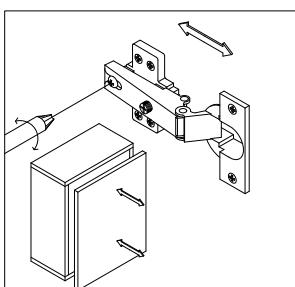


If the hinge holes are not aligned, you can try adjusting the front and rear hinges.

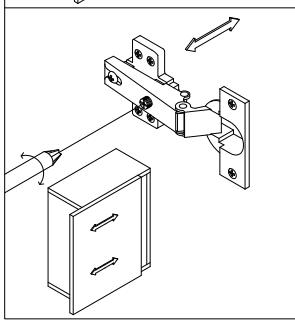

If the door gap is large, you can adjust the hinges left and right

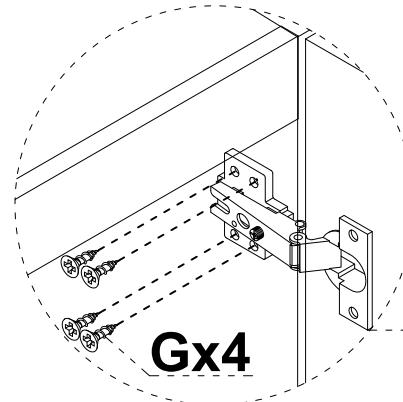


X 4

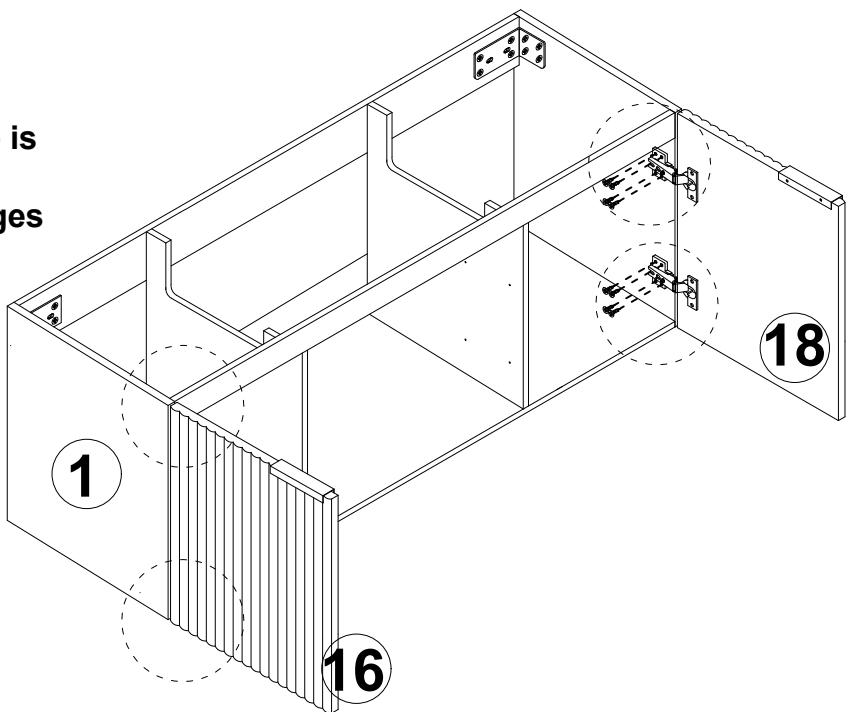




18



Step 9

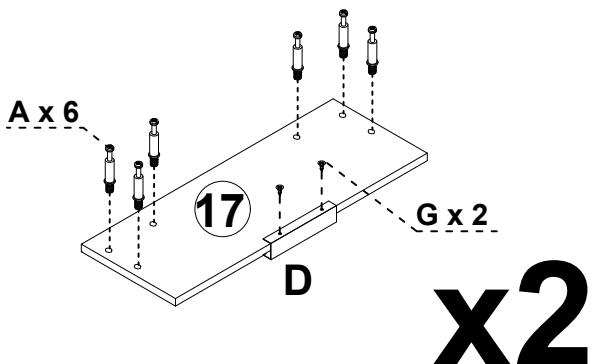


X 2

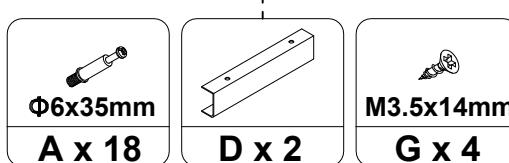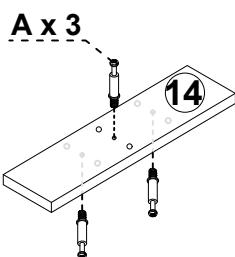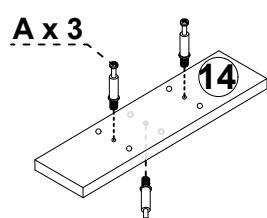


Step 10


A x 4

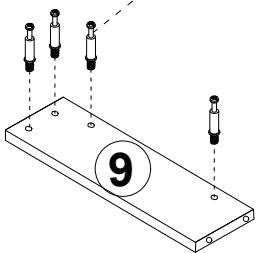

A x 4

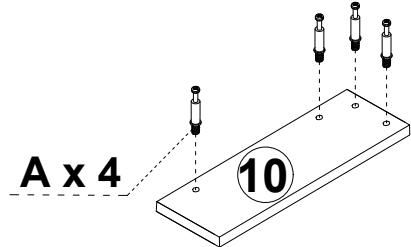


A x 2

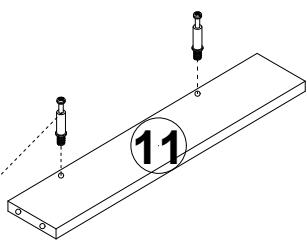


X2

$\Phi 6 \times 35 \text{mm}$
A x 20

C x 4

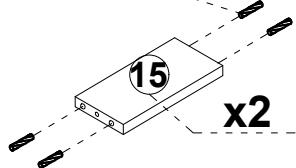

x2






C x 2

C x 2


$\Phi 8 \times 30 \text{mm}$
C x 12

Step 11

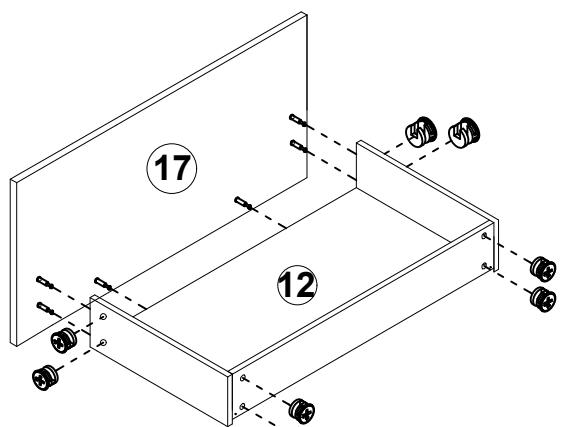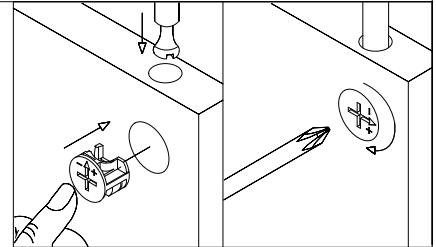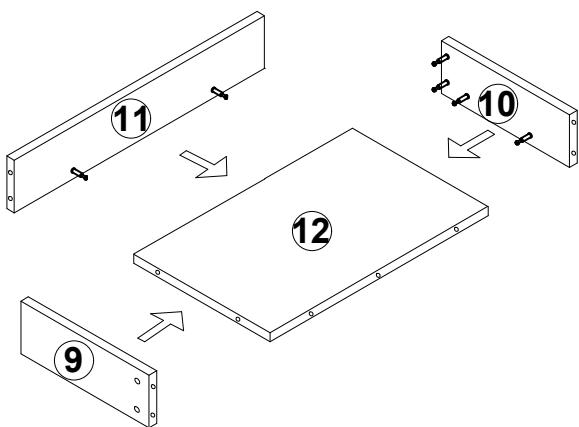

B x 8


B x 8

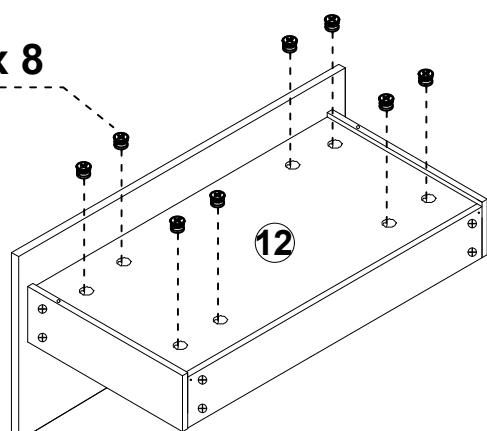





$\Phi 15 \times 12 \text{mm}$
B x 32

X2



Step 12

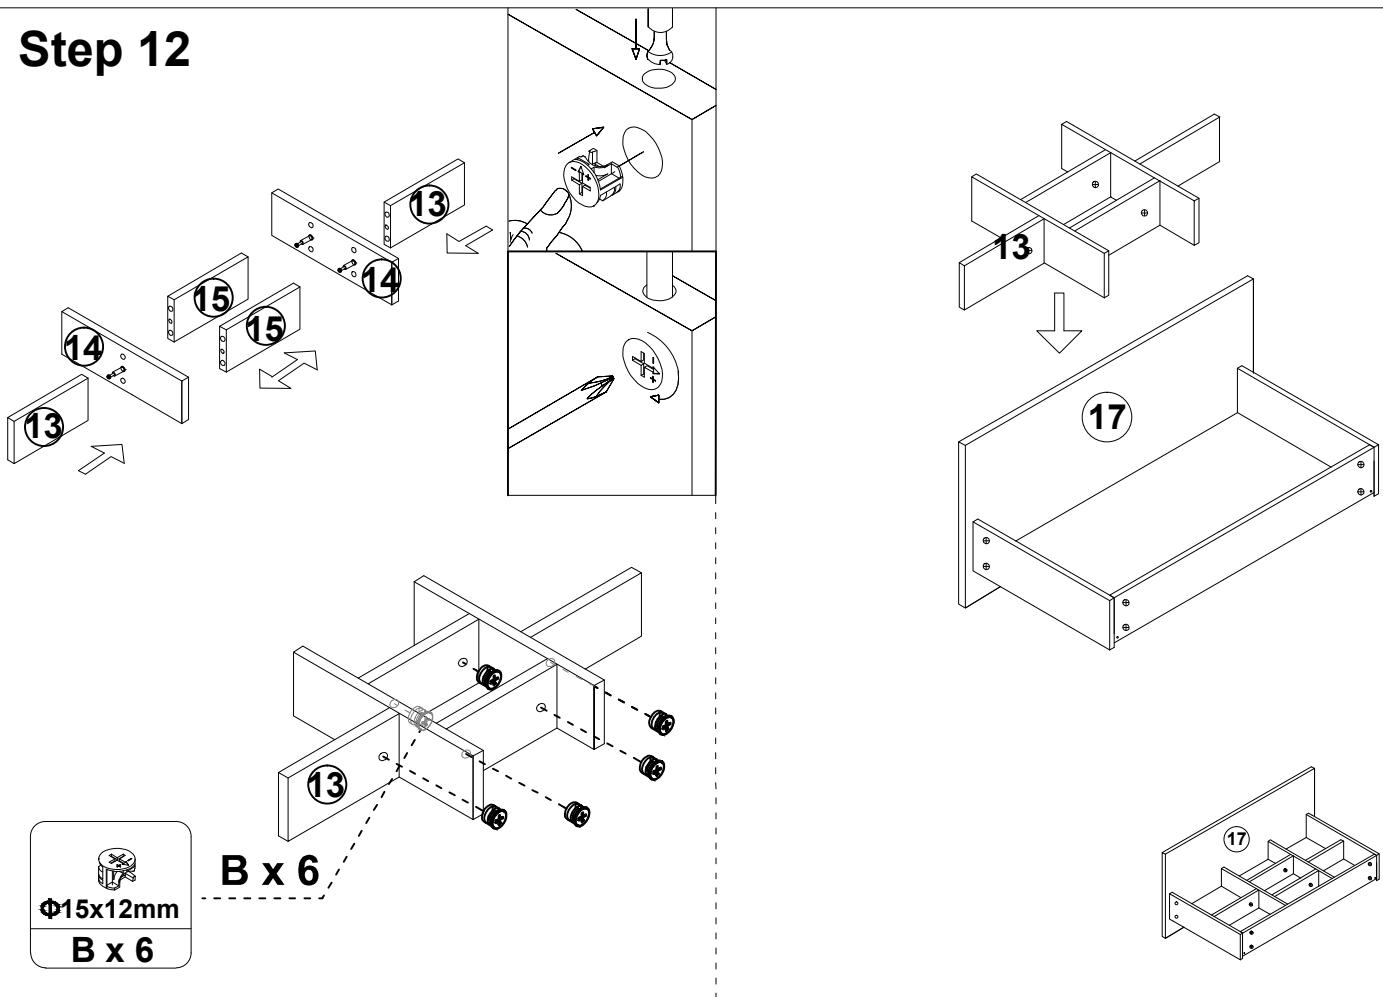


Step 13

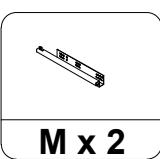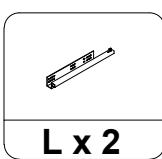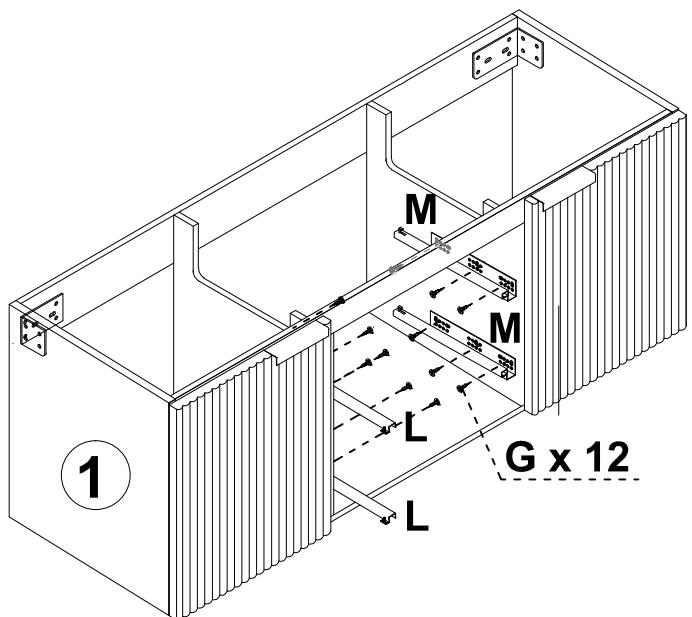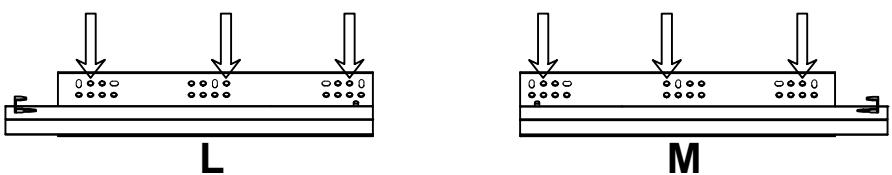

Step 14

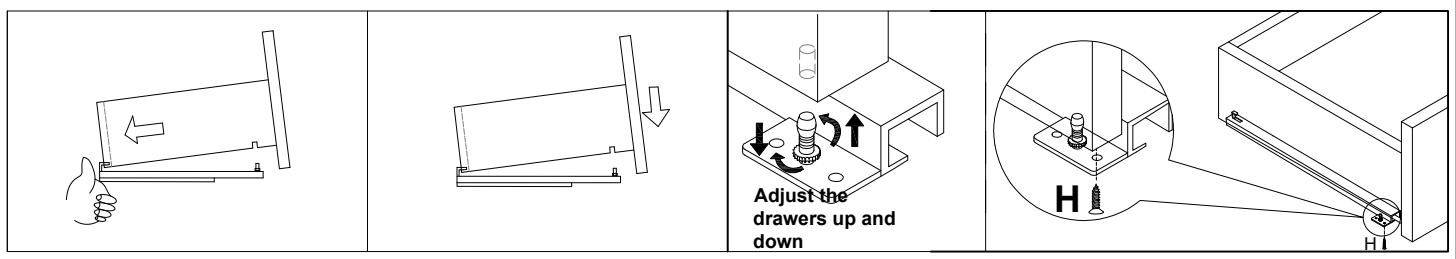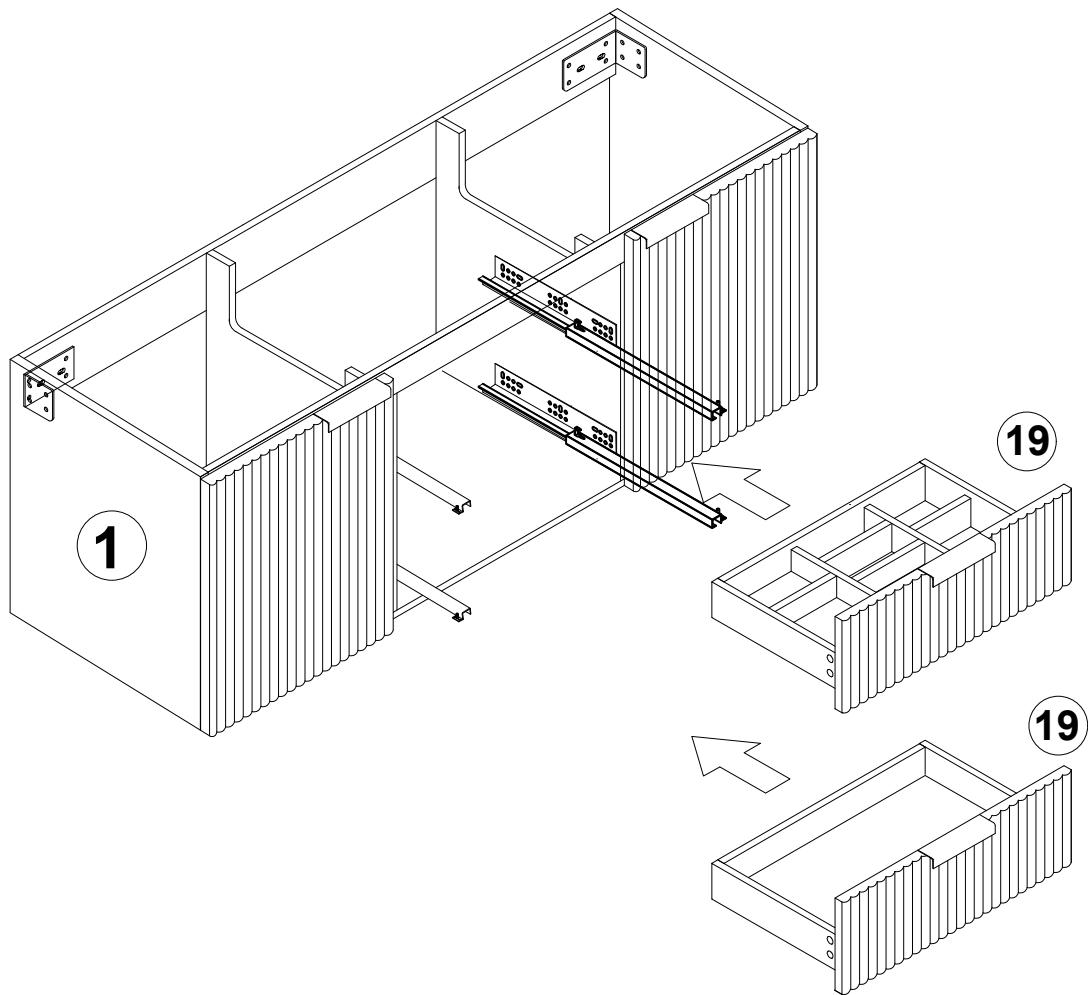


Step 15




step 1

WALL

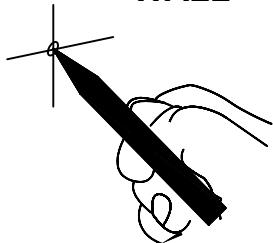






step 2

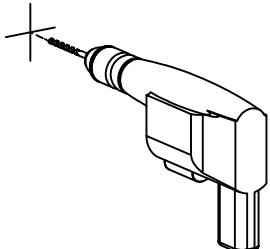


step 3



step 4

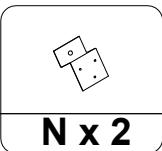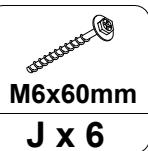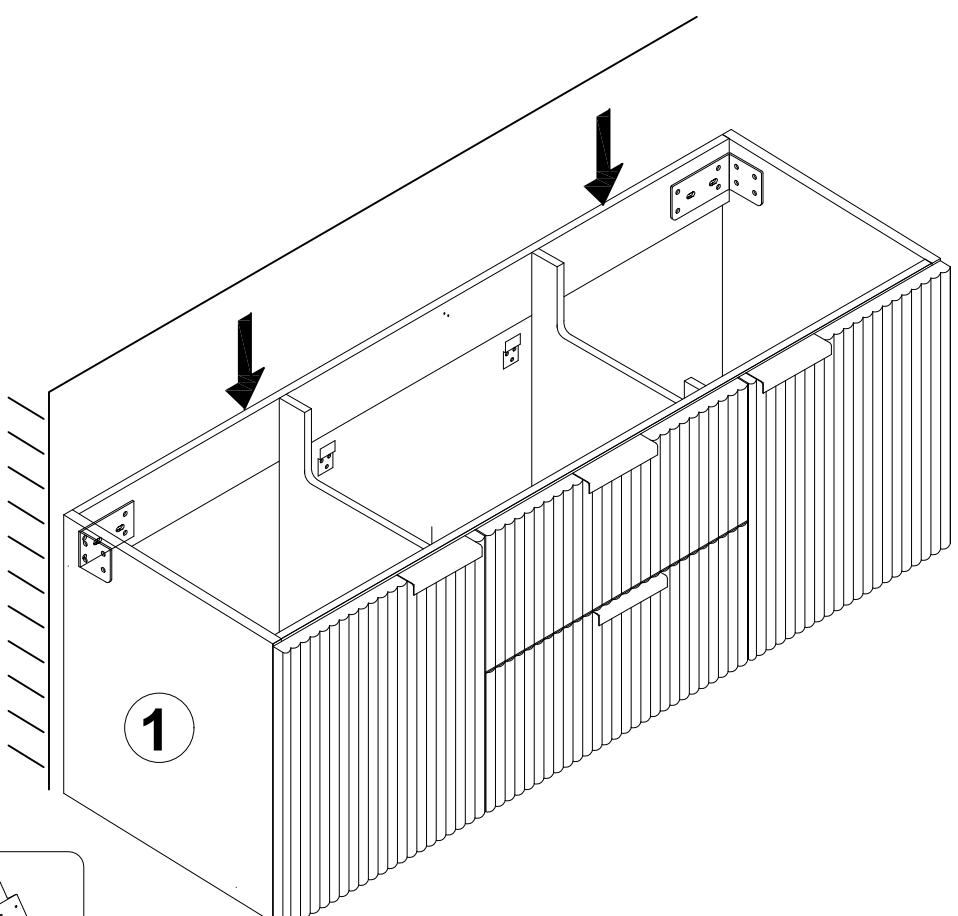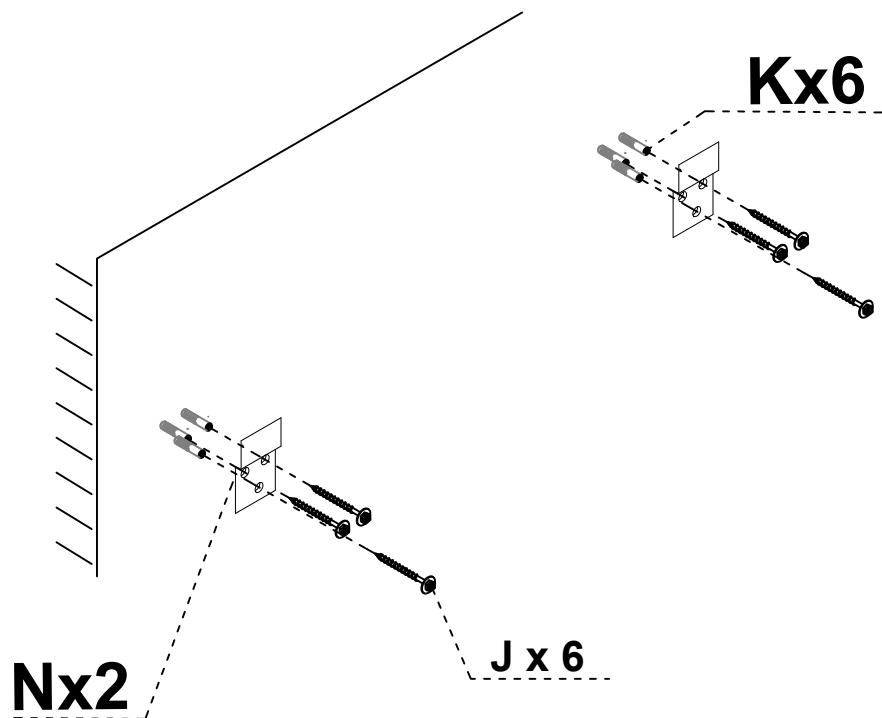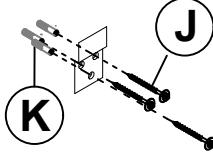


Step 16




step 1


WALL

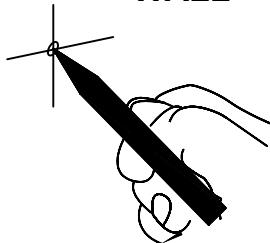



step 2

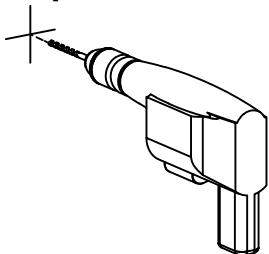

step 3



step 4

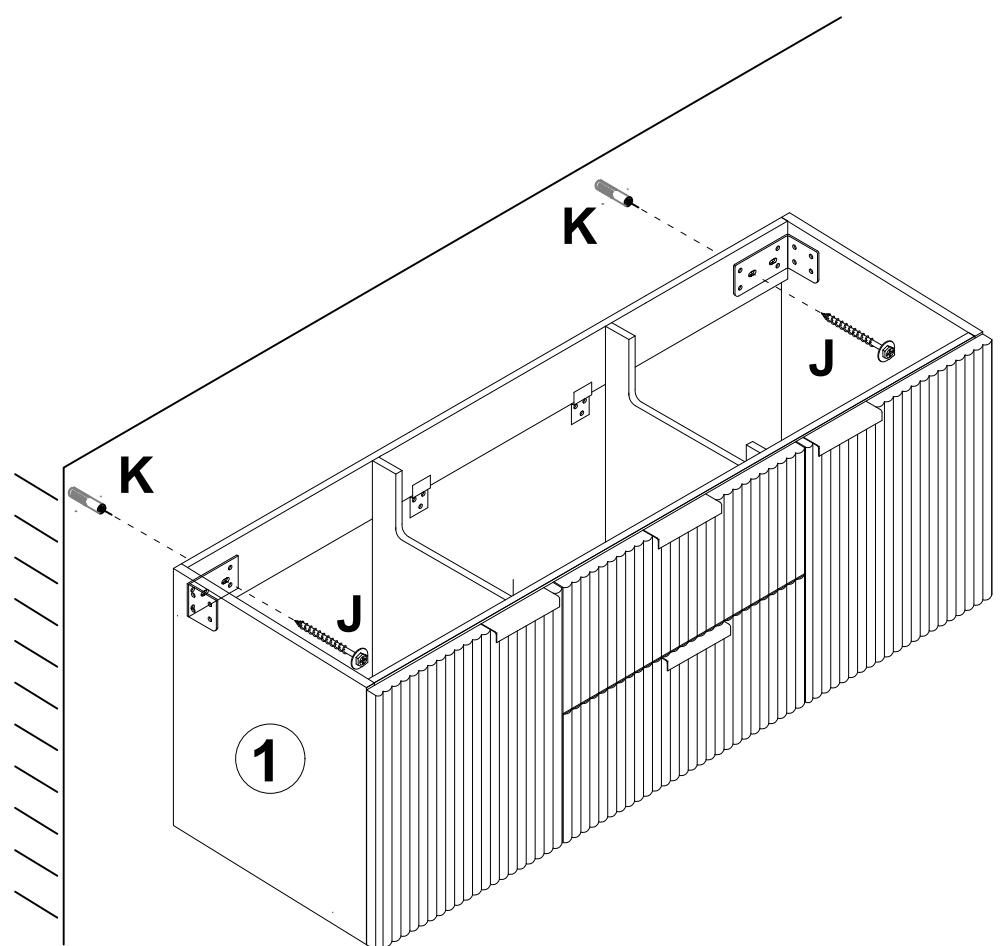

Step 17

