





# MANHATTAN COMFORT

---

## BC006

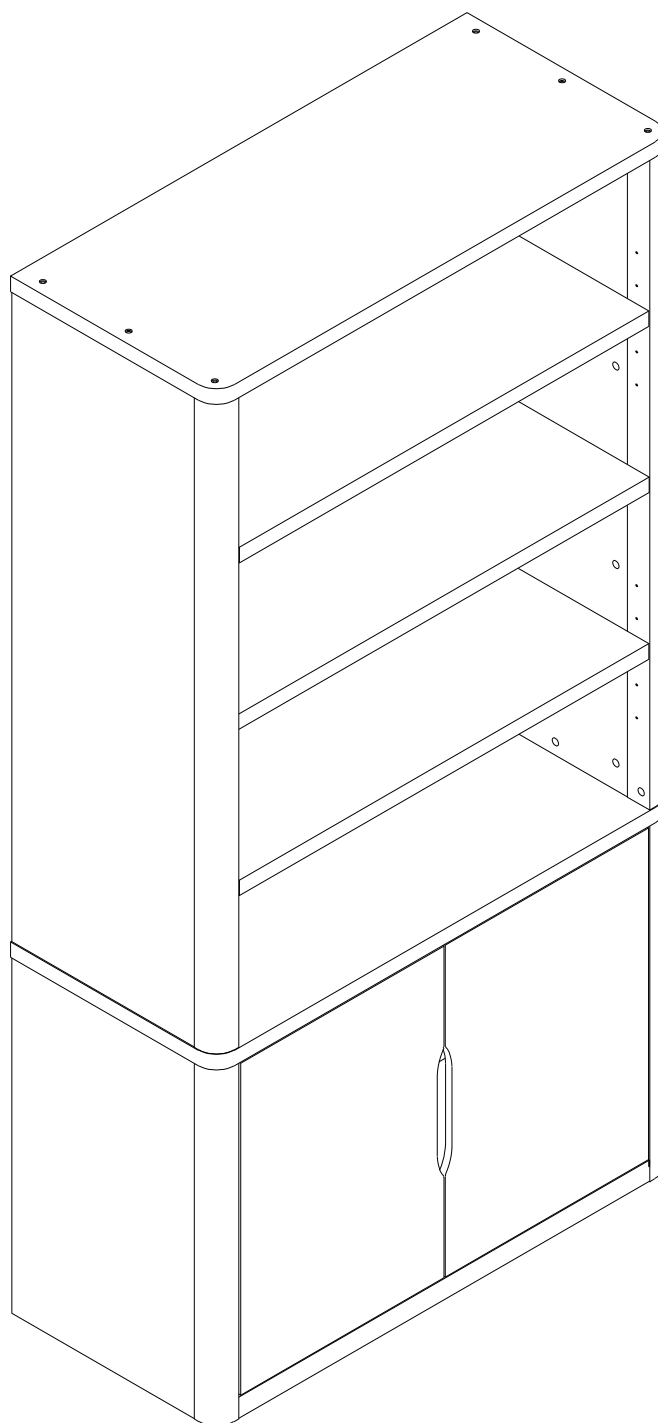

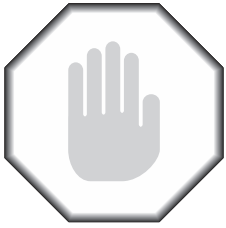


# STOP!


Before beginning the assembly process,  
ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

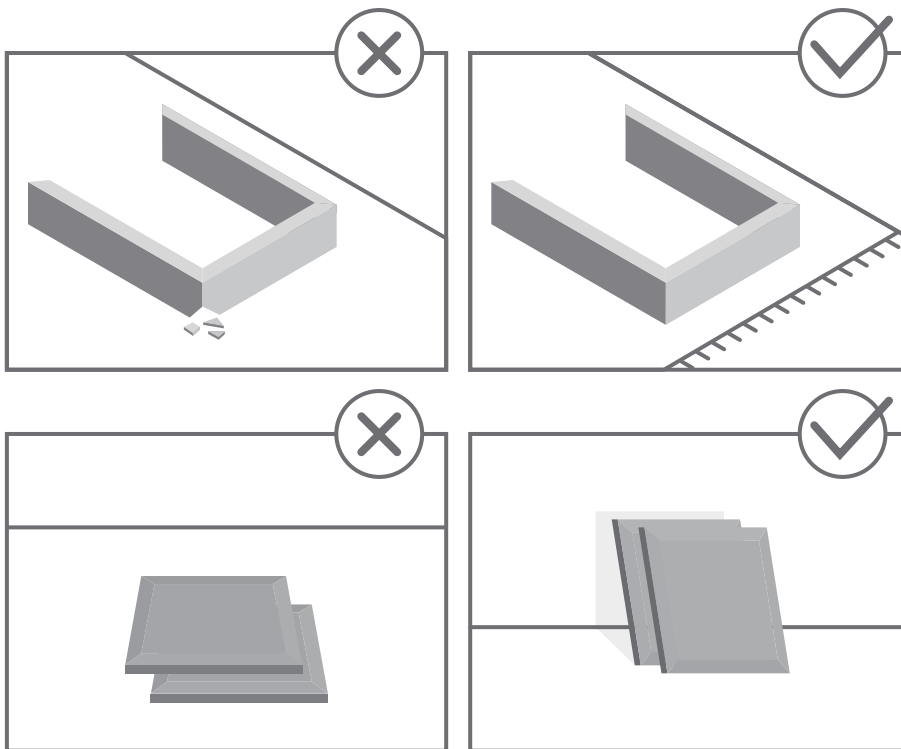

## TOOLS REQUIRED

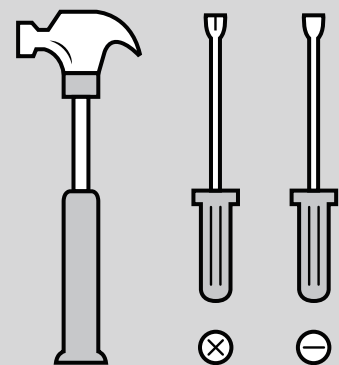

View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)



Stuck? Question? We are here to help.  
tel: 908-888-0818  
e-mail: [help@manhattancomfort.com](mailto:help@manhattancomfort.com)

## Support Site



# Included in this package:


## BOX 01/02

- E. UPPER SHELF PANEL (2)
- F. FIX SHELF PANEL(1)
- G. LOWER SHELF PANEL(1)
- H. BOTTOM PANEL(1)
- I. LOWER LEFT PANEL(1)
- J. LOWER RIGHT PANEL(1)
- M. LEFT DOOR(1)
- N. RIGHT DOOR(1)

ALL HARDWARE ARE IN **BOX 01/02**


## BOX 02/02

- A. TOP PANEL(1)
- B. BETWEEN PANEL(1)
- C. UPPER LEFT PANEL (1)
- D. UPPER RIGHT PANEL (1)
- K. UPPER BACK PANEL(1)
- L. LOWER BACK PANEL(1)

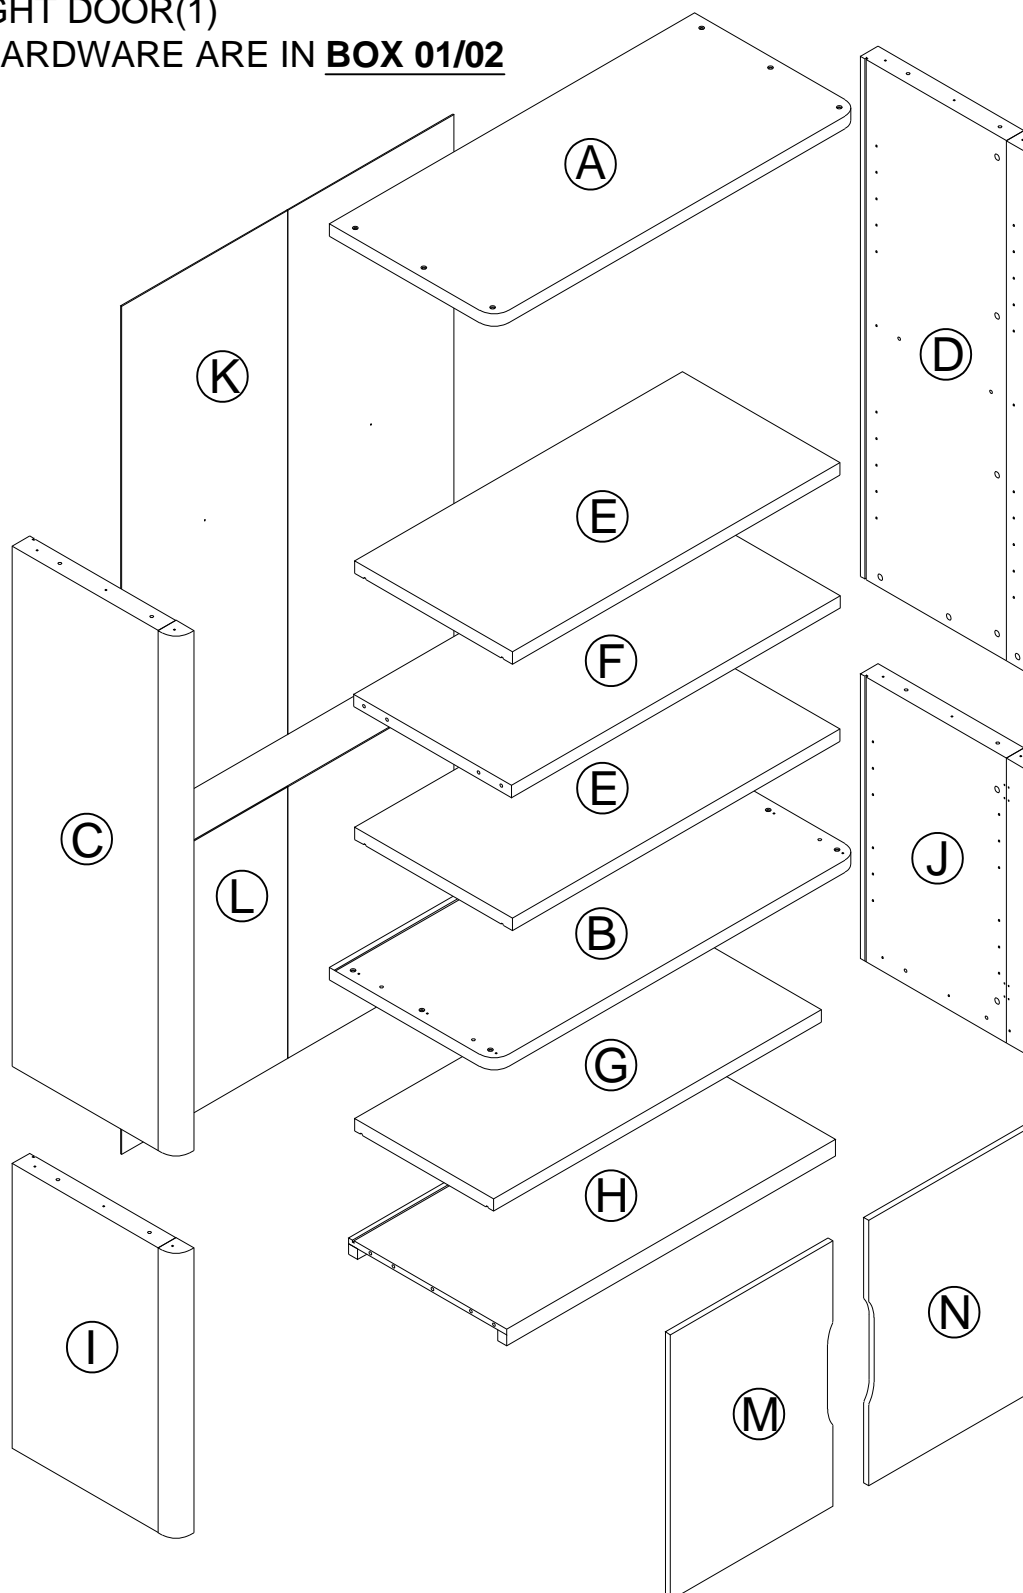


# Hardware Identification


- ① KD BOLT - 16pcs  
L=35mm




- ② KD CAM - 16pcs  
Ø15\*11mm




- ③ COVER CAP - 28pcs




- ④ WOOD DOWEL - 20pcs  
Ø8\*30mm




- ⑤ DOOR STOPPER-1pc




- ⑥ SCREW - 2pcs  
Ø3\*15mm



- ⑦ SCREW - 2pcs  
Ø4\*14mm




- ⑧ HINGE - 4pcs




- ⑨ SCREW - 24pcs  
Ø3.5\*15mm



- ⑩ PLASTIC WEDGE - 22pcs




- ⑪ SHELF SUPPORT - 12pcs




- ⑫ SCREW - 12pcs  
Ø6\*50mm




- ⑬ LOCK - 1pc




- ⑭ STRAPS - 2pcs

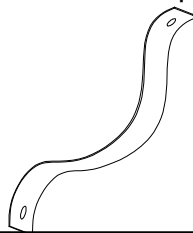


- ⑮ SCREW - 2pcs  
Ø4\*18mm




- ⑯ SCREW - 2pcs  
Ø4\*25mm




- ⑰ PLASTIC - 2pcs



- ⑱ SCREW - 22pcs  
Ø3\*17mm




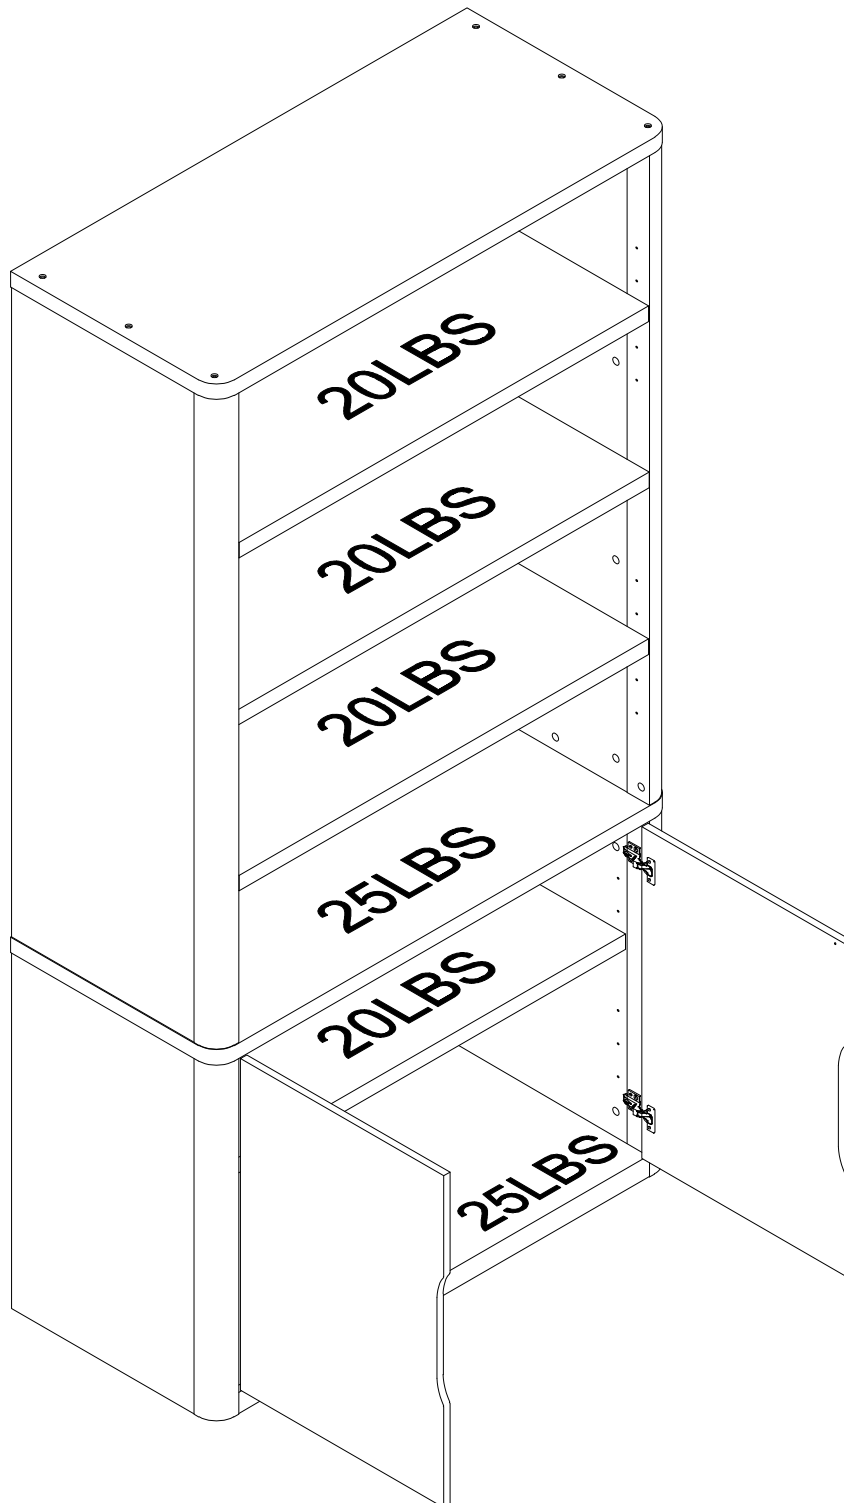


## Step 1:

\* Insert Sixteen KD BOLT (1) to the UPPER LEFT PANEL (C), UPPER RIGHT PANEL (D), LOWER LEFT PANEL (I), LOWER RIGHT PANEL (J) and BETWEEN PANEL (B)

①



( 16 PCS )

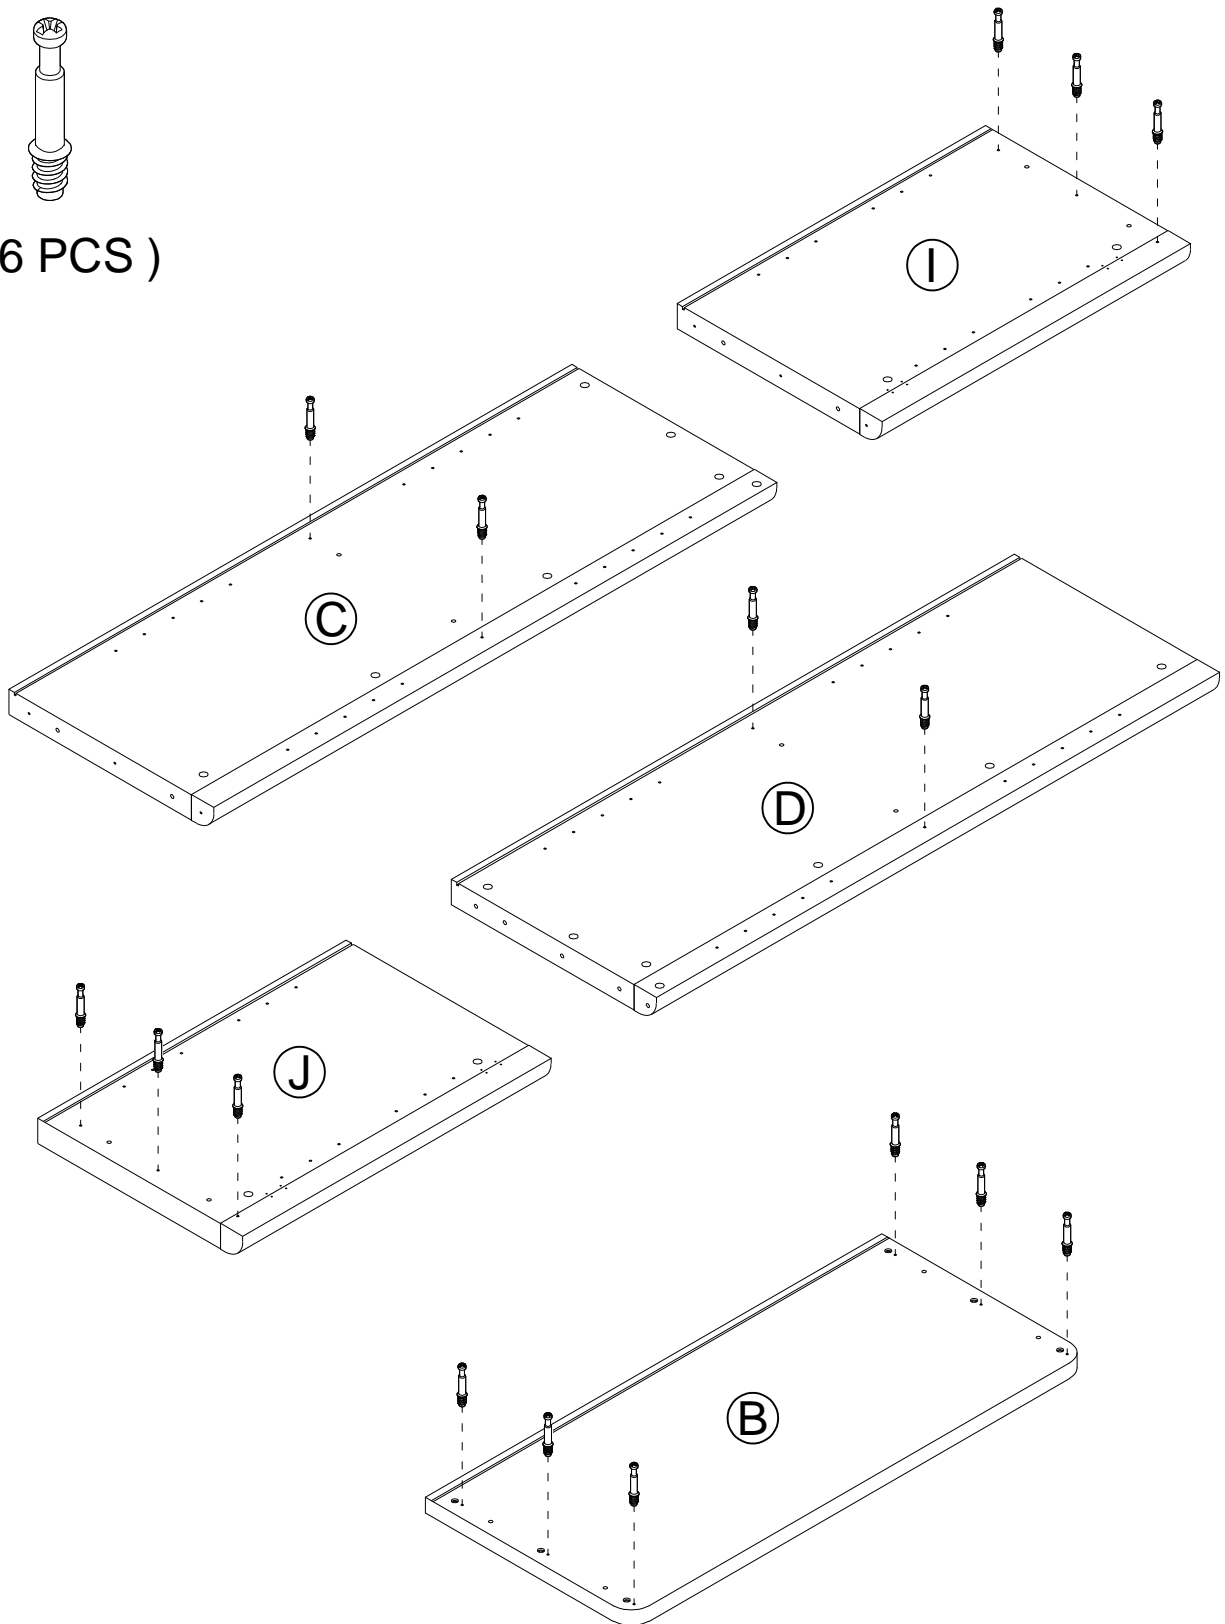


## Step 2:


---

\* Attach the LOWER LEFT PANEL(I) and LOWER RIGHT PANEL(J) to the BOTTOM PANEL (H) by the Six KD CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .


②




③



④



( 6 PCS )    ( 6 PCS )    ( 4 PCS )

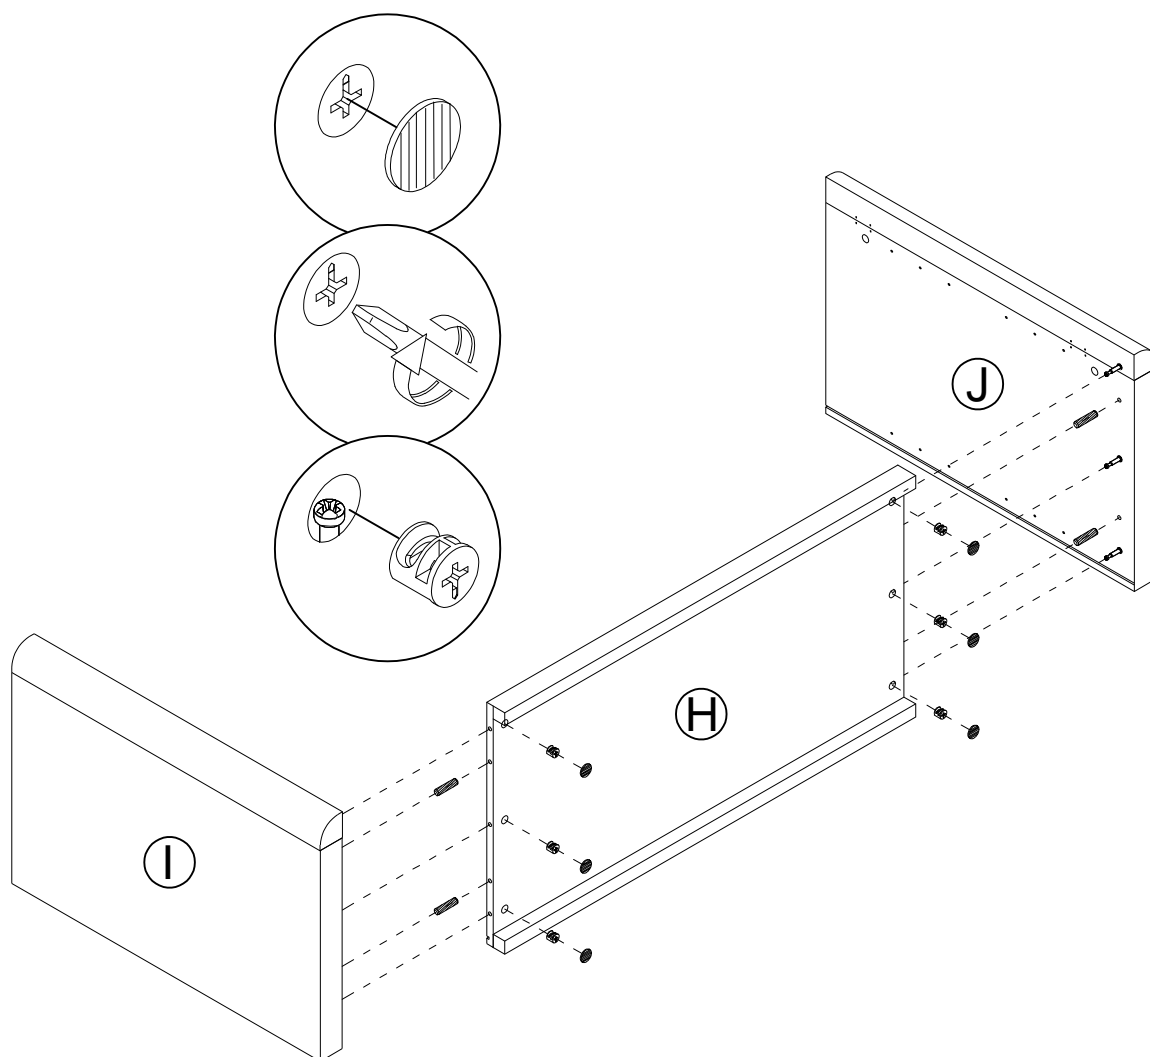


## Step 3:

\* Slide the LOWER BACK PANEL(L) to the stand.


\* Assemble the DOOR STOPPER(5) to the BETWEEN PANEL (B) by the SCREW (7) .

⑤





( 1 PC )

⑦





( 2 PCS )

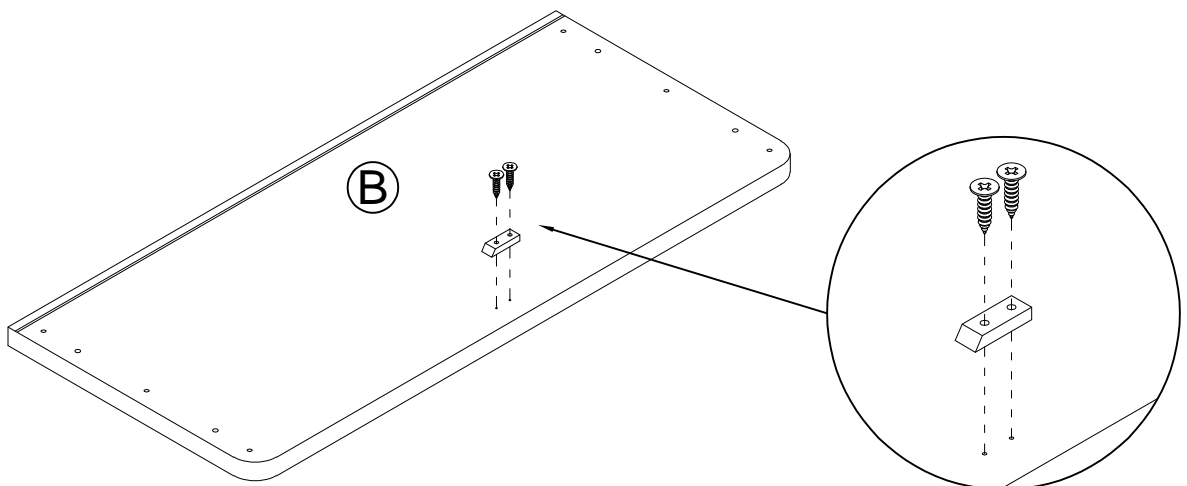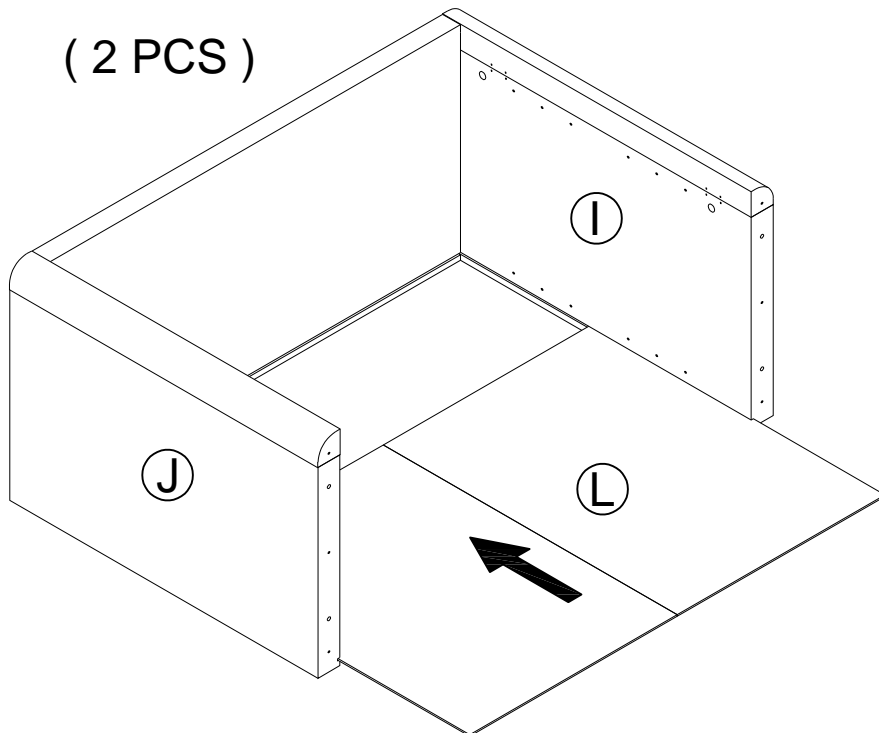



## Step 4:


\* Attach the BETWEEN PANEL(B) to the LOWER LEFT PANEL(I) and LOWER RIGHT PANEL(J) by the Six Screw(12), Four WOOD DOWEL (4) and LOCK(13).

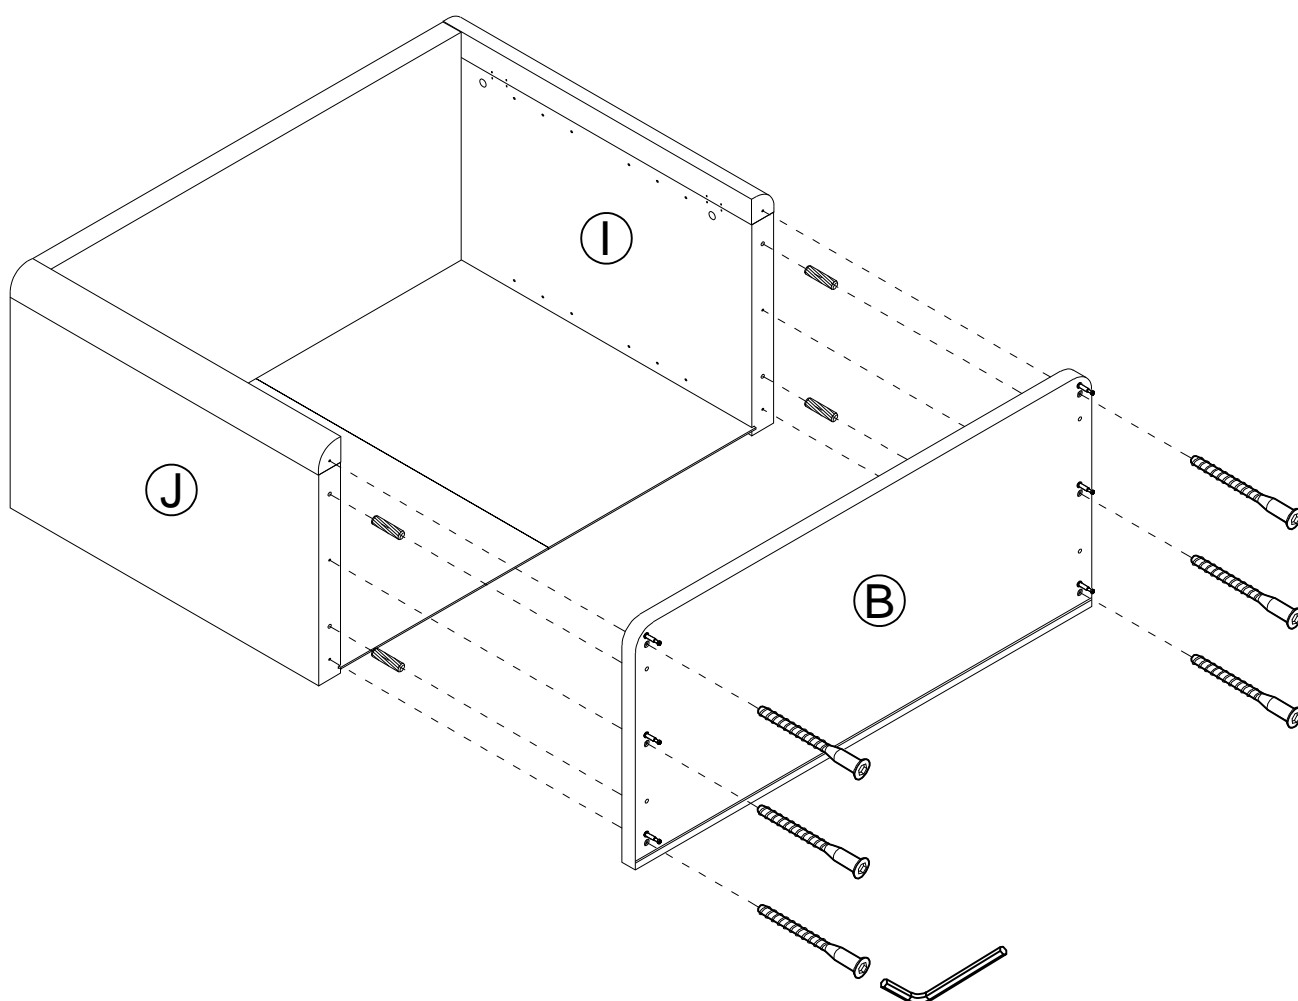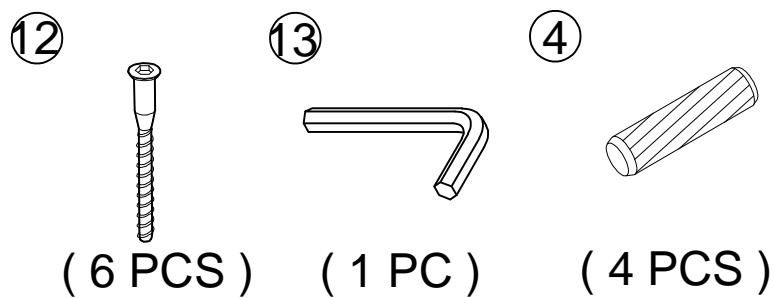

## Step 5:


\* Attach the UPPER LEFT PANEL(C) and UPPER RIGHT PANEL(D) to the FIX SHELF PANEL(F) by the Four KD CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4) .

②




( 4 PCS )

③




( 4 PCS )

④




( 4 PCS )

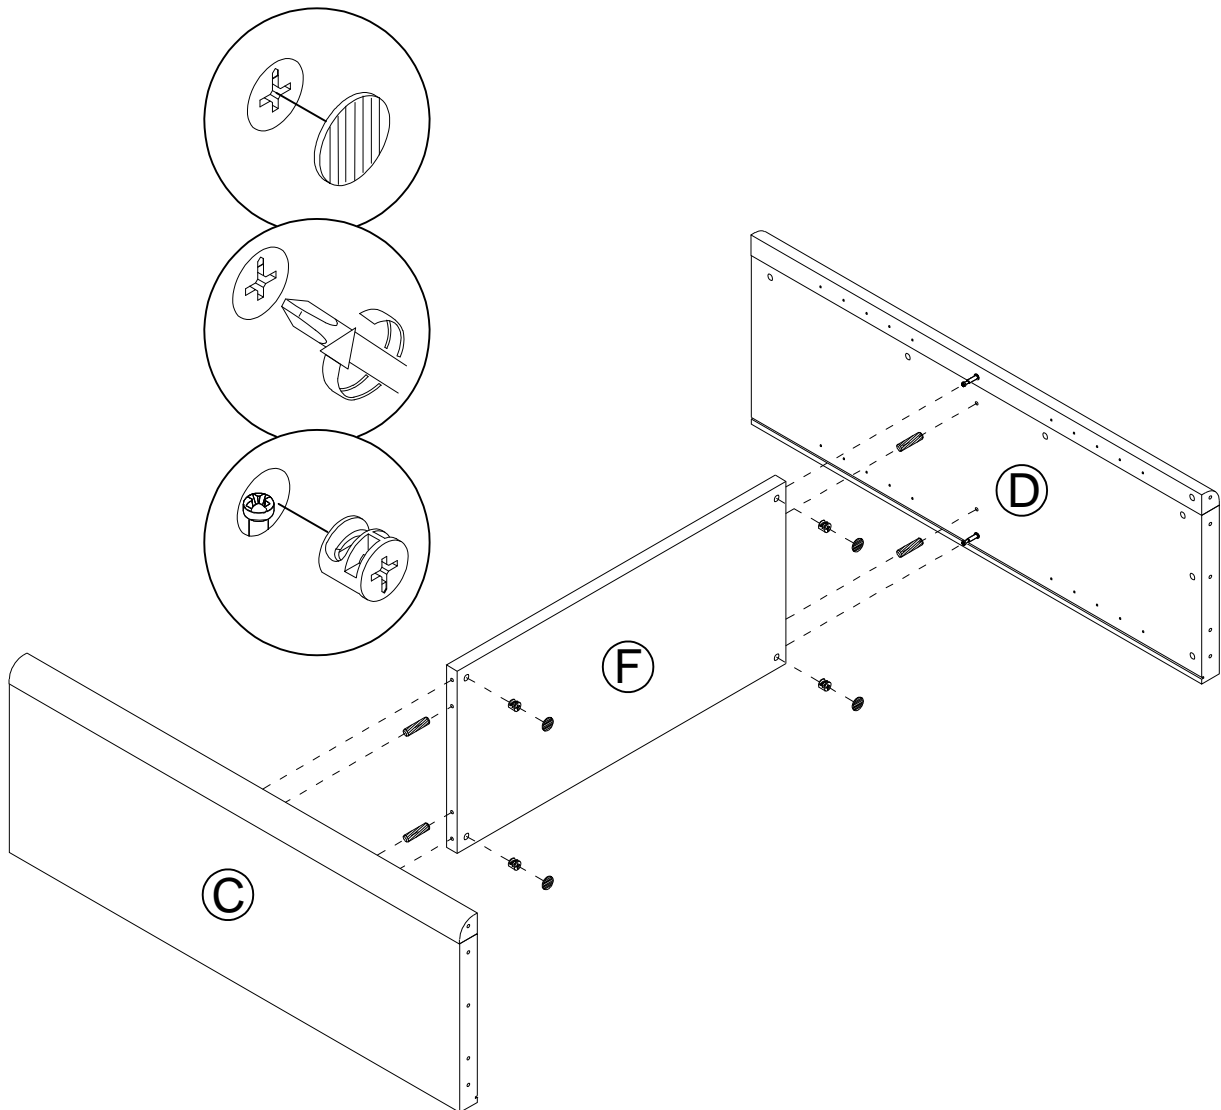


## Step 6:

\* Attach the UPPER LEFT PANEL(C) and UPPER RIGHT PANEL(D) to the BETWEEN PANEL(B) by the Six KD CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .


②




③



④






( 6 PCS )   ( 6 PCS )   ( 4 PCS )

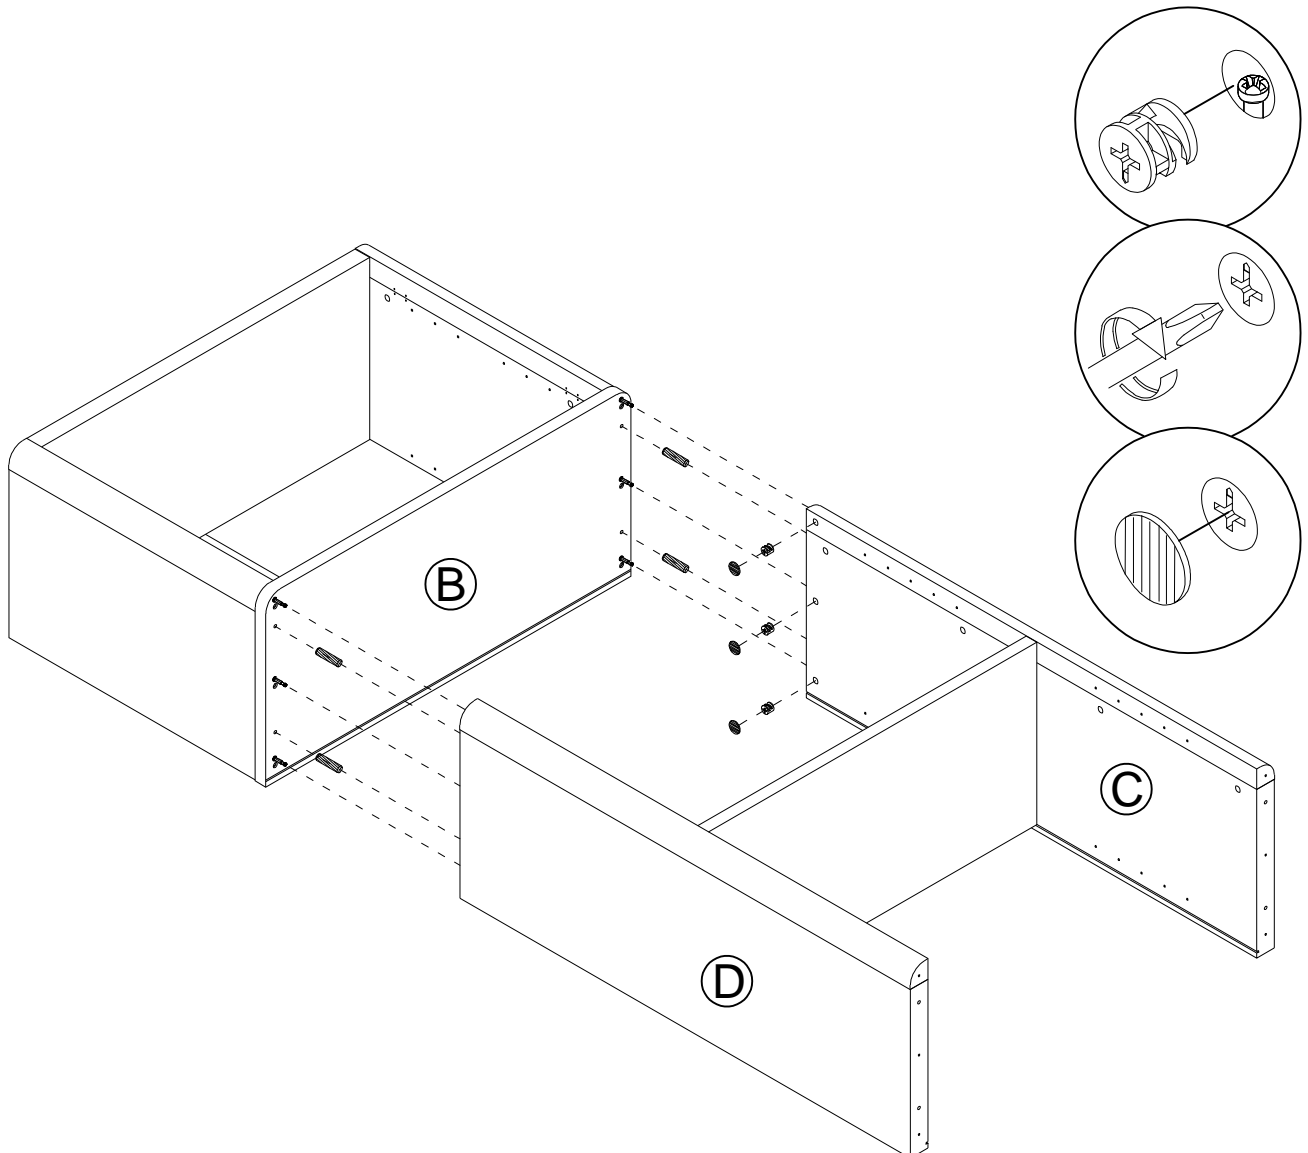

## Step 7:

\* Attach the UPPER BACK PANEL (K) to the stand by Screw(6).

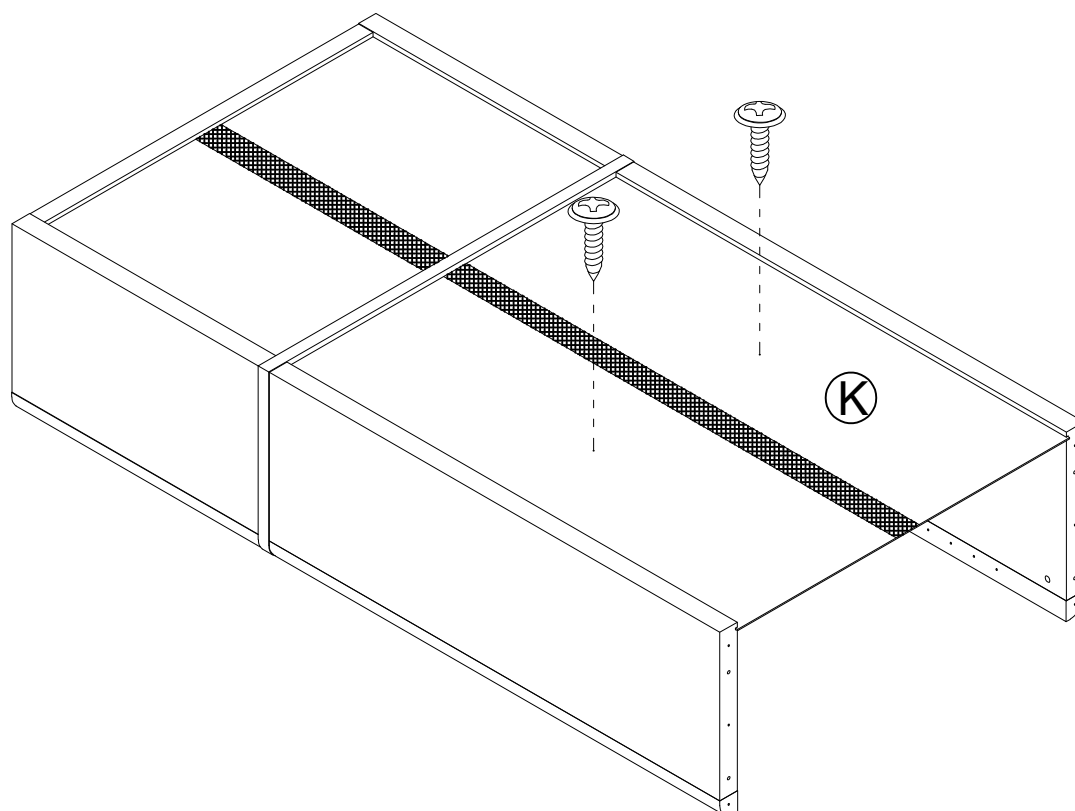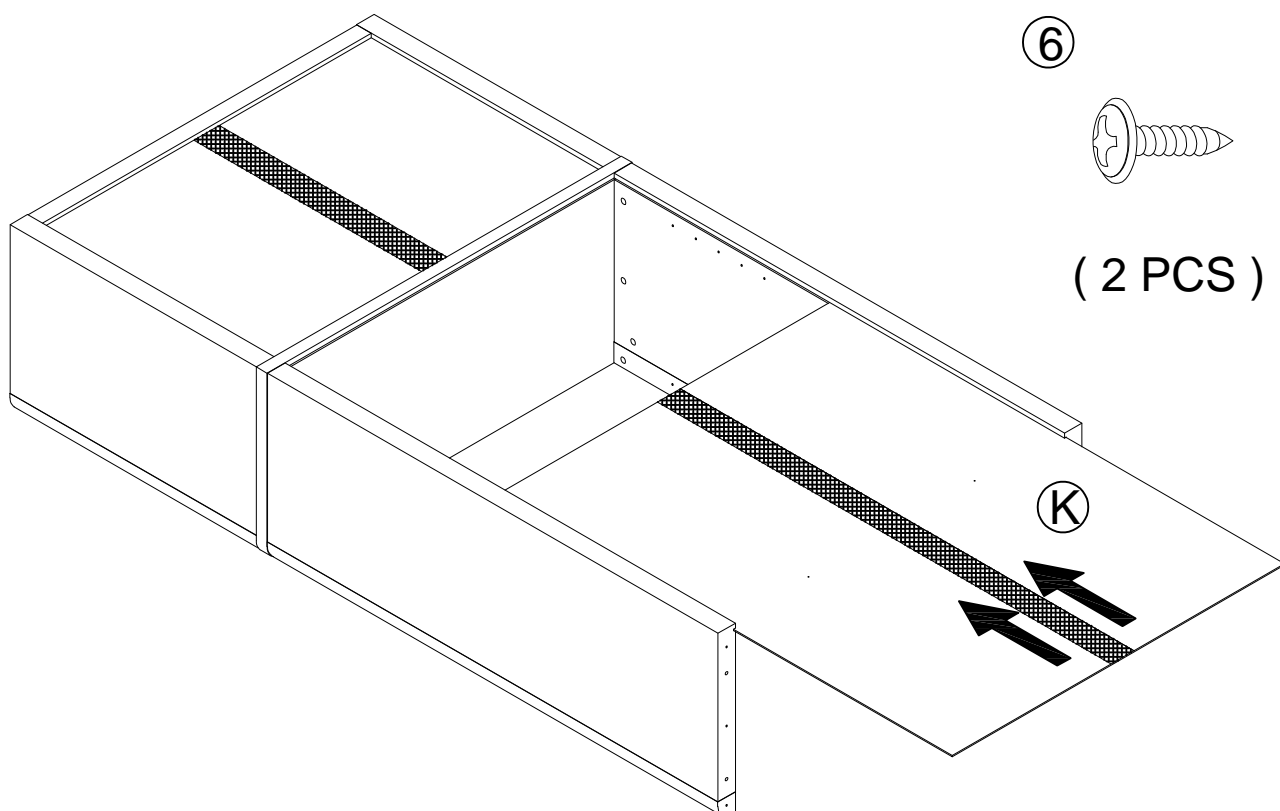


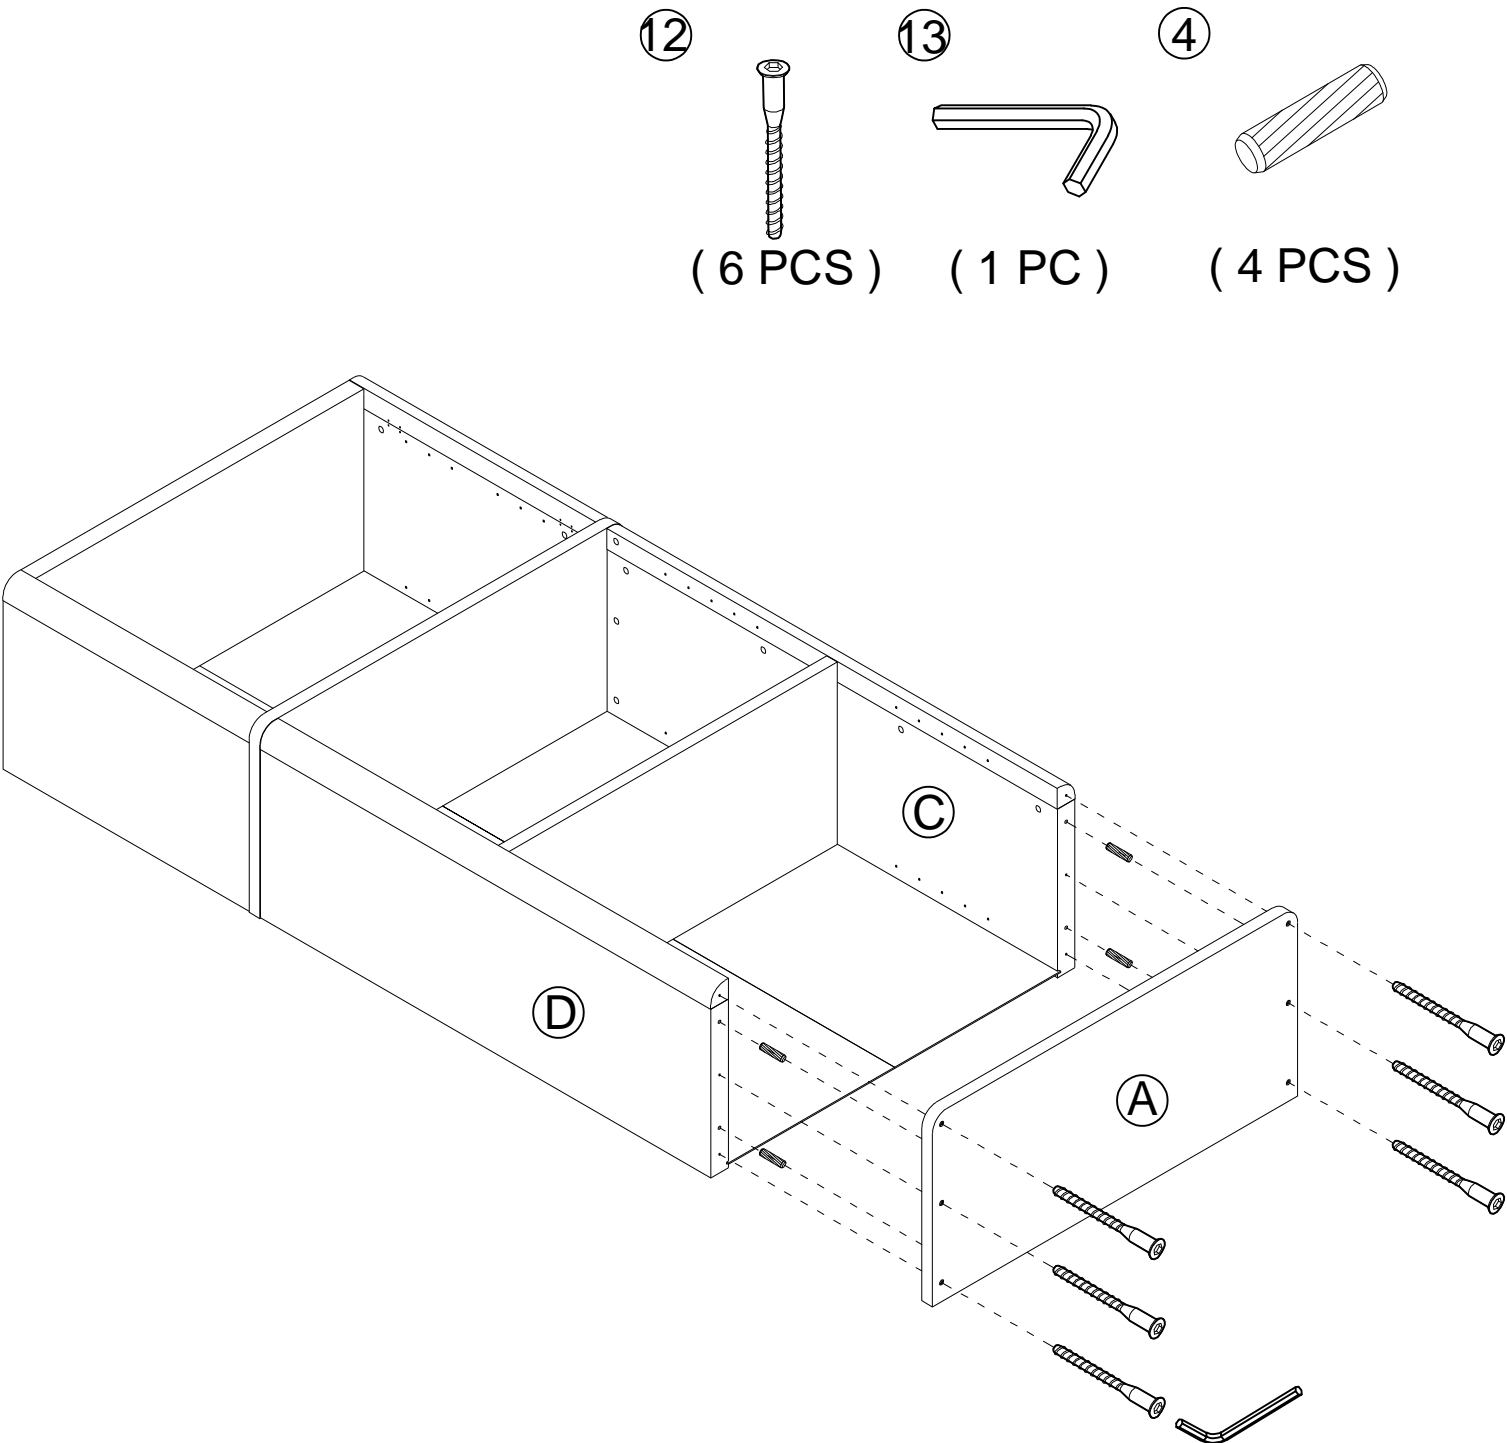

## Step 9:


\* Insert Twenty-two PLASTIC WEDGE(10) and Twenty-two SCREW(18) to the UPPER BACK PANEL(K) and LOWER BACK PANEL(L).

⑩






( 22 PCS )

⑱




( 22 PCS )

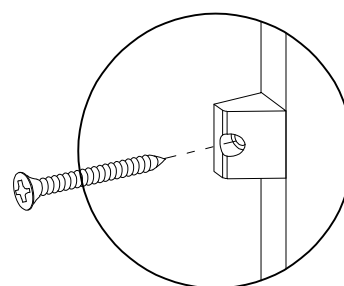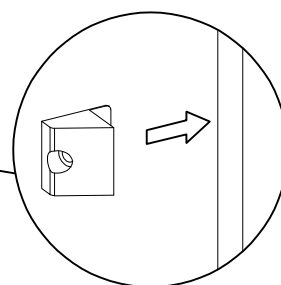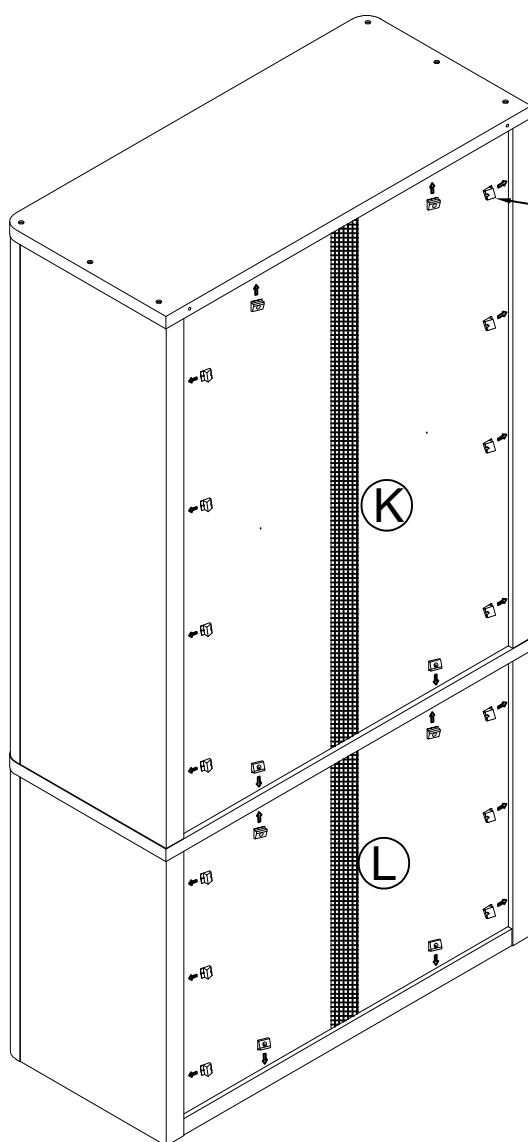

## Step 10:

\* Assemble the HINGE(8) to the LEFT DOOR (M) and RIGHT DOOR (N) with the SCREW (9) .

⑧





( 4 PCS )

⑨



( 8 PCS )

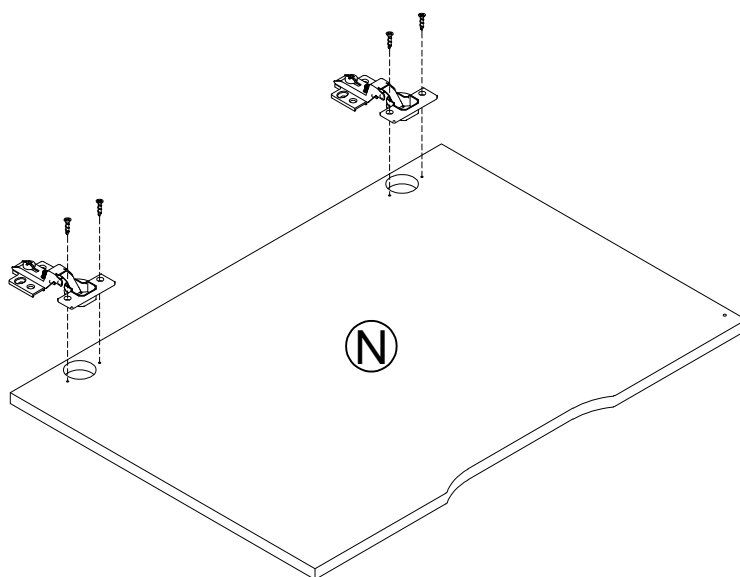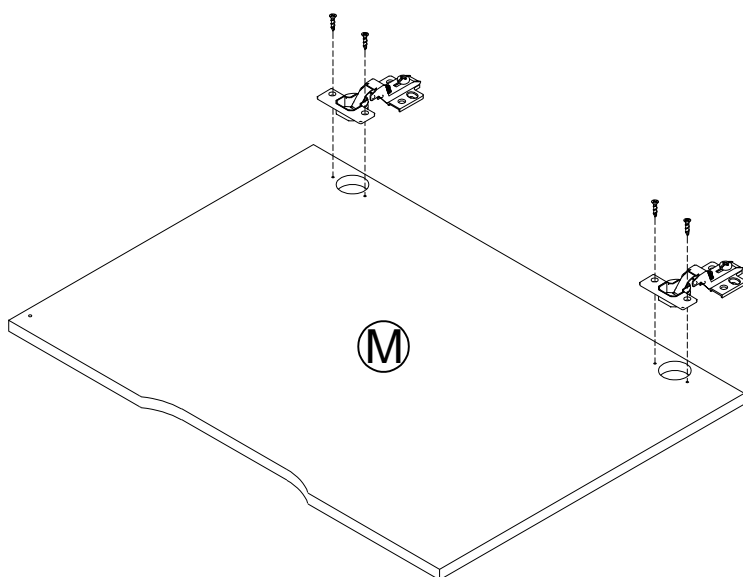

## Step 11:


---

\* Attach the LEFT DOOR (M) and RIGHT DOOR (N) to the stand with SCREW (9) .

⑨



( 16 PCS )

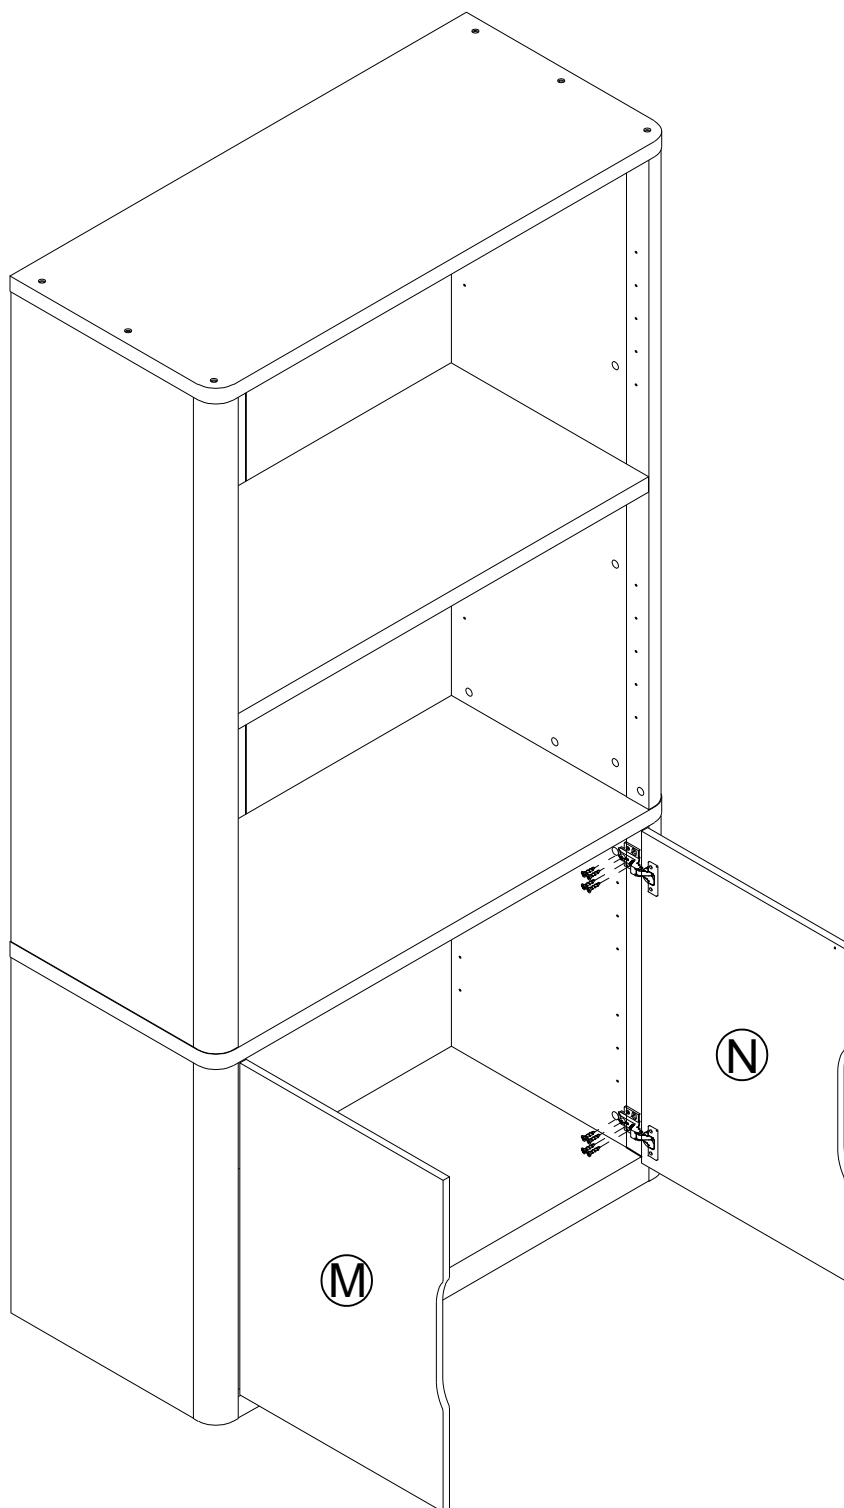





## Step 12:

\* Input the Two UPPER SHELF PANEL(E) and LOWER SHELF PANEL(G) to the stand with Twelve SHELF SUPPORT(11).

⑪






( 12 PCS )

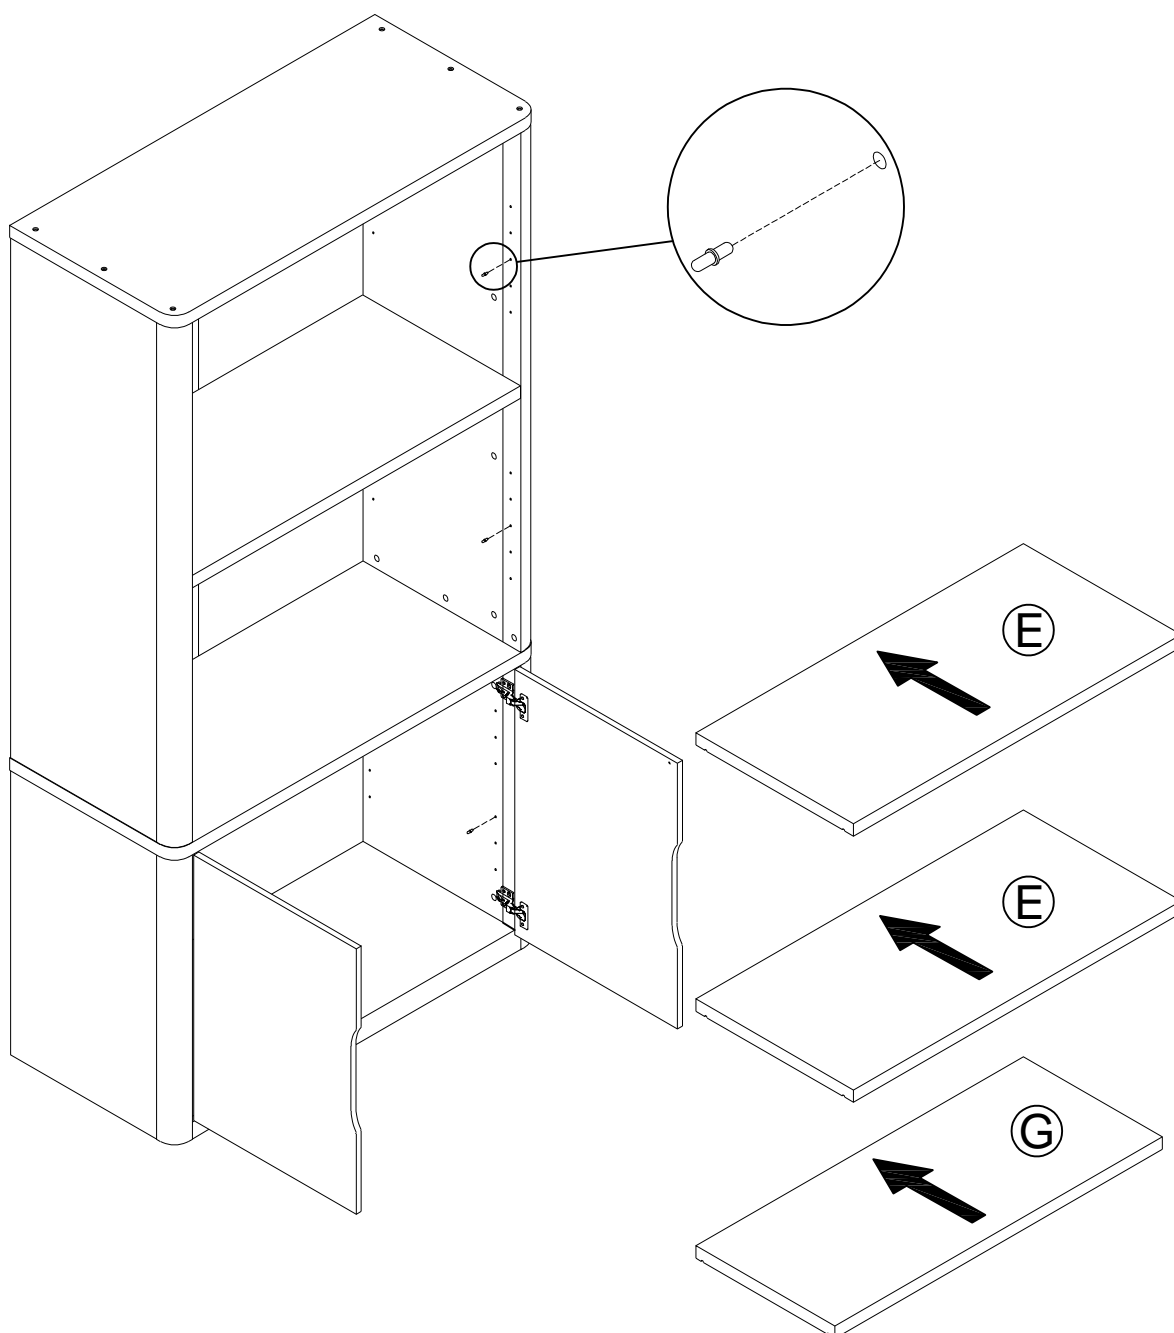

## Step 13:

---

\* Attach anti-tipping straps to the back of the stand.

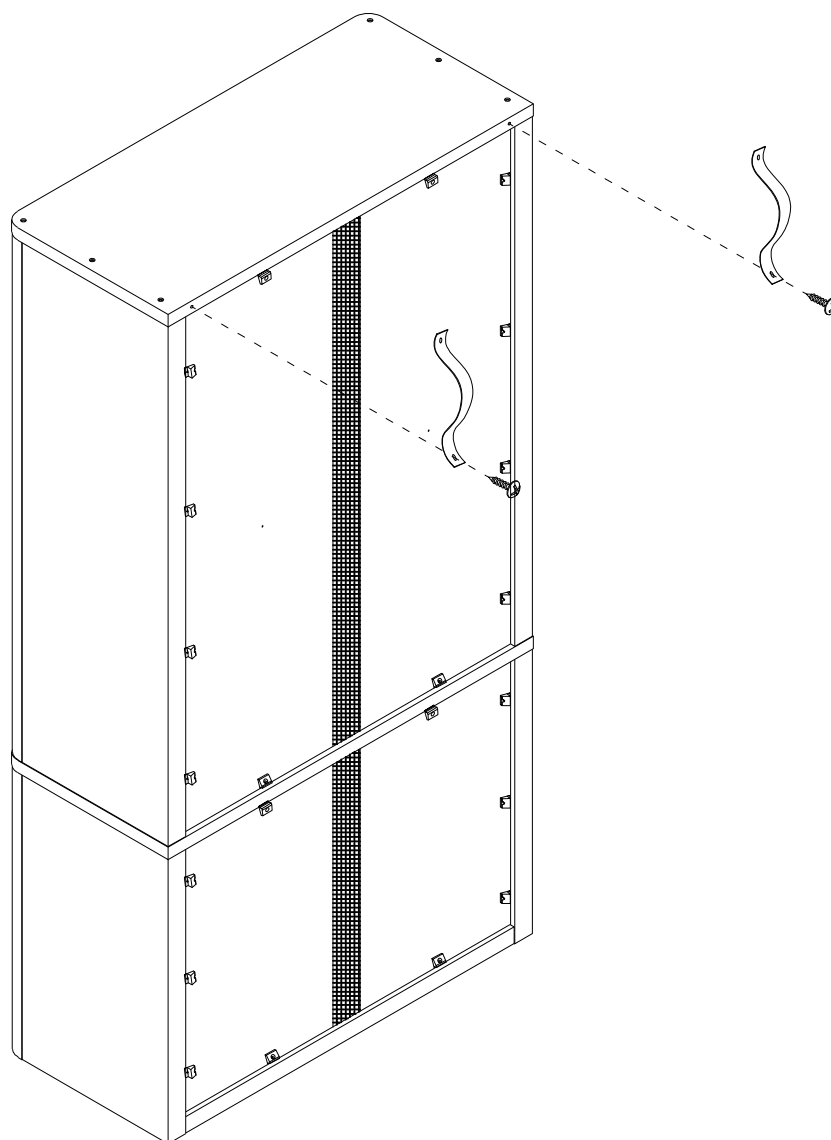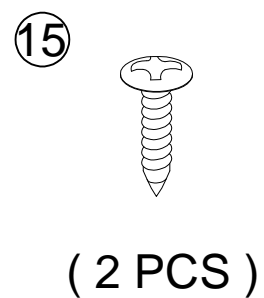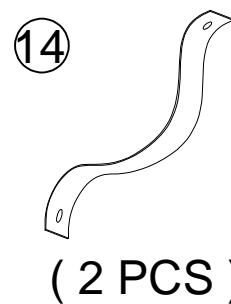

## Step 14:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (17) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

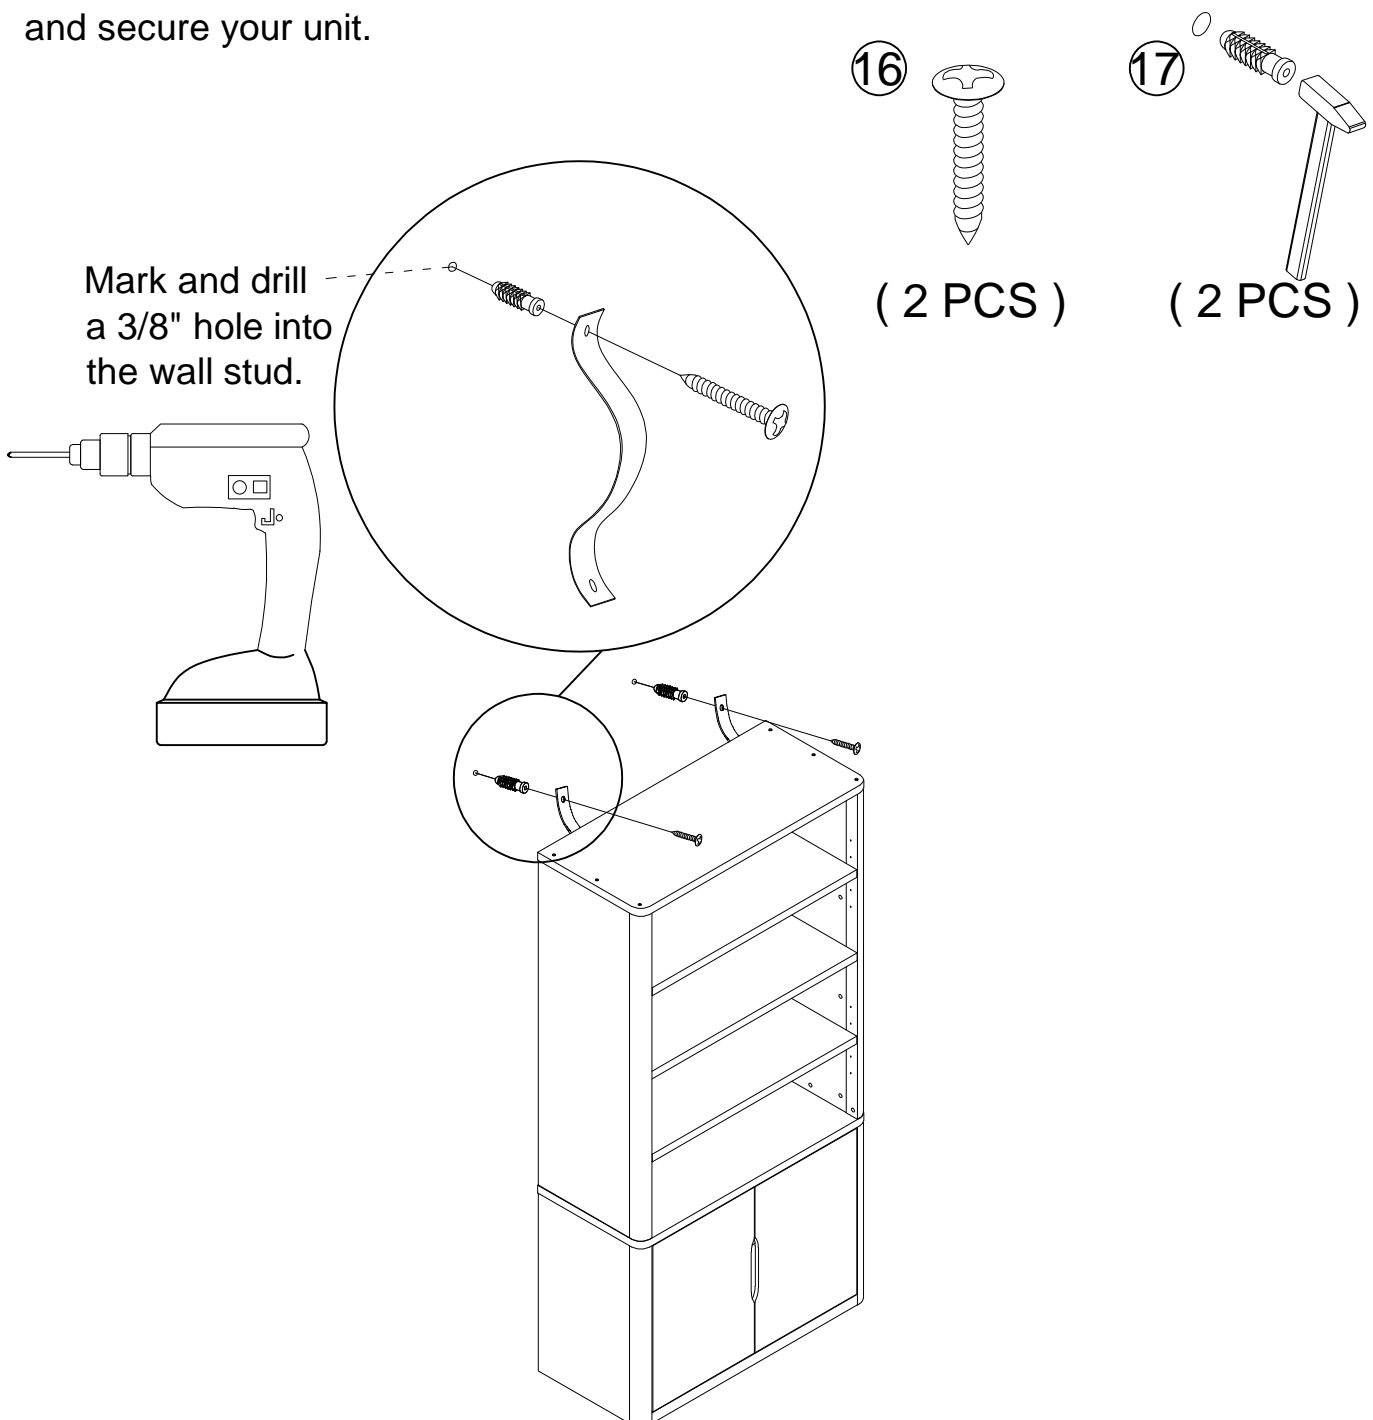



---

## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

## THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810  
908-888-0818