


BC004

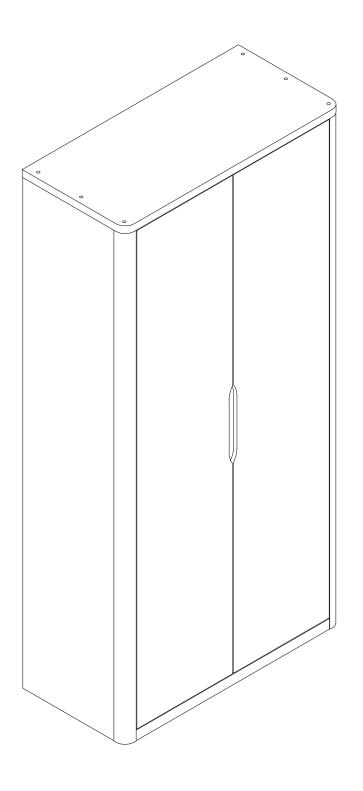




STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

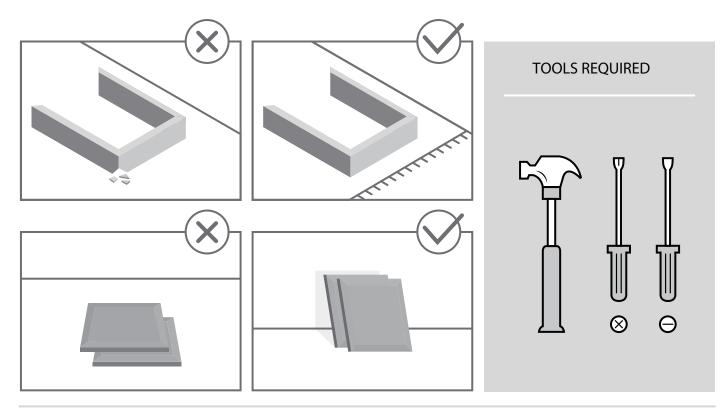



View our assembly video online: WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.

tel: 908-888-0818

e-mail: help@manhattancomfort.com

Support Site



Page 2 BC004

Included in this package:

BOX 01/02

A. TOP PANEL(1)

B. BOTTOM PANEL(1)

G. SHELF PANEL(3)

F. FIX SHELF PANEL (1)

ALL HARDWARE ARE IN **BOX 01/02**


BOX 02/02

C. LEFT PANEL (1)


D. RIGHT PANEL (1)

E. BACK PANEL (1)


H. DOOR PANEL(2)

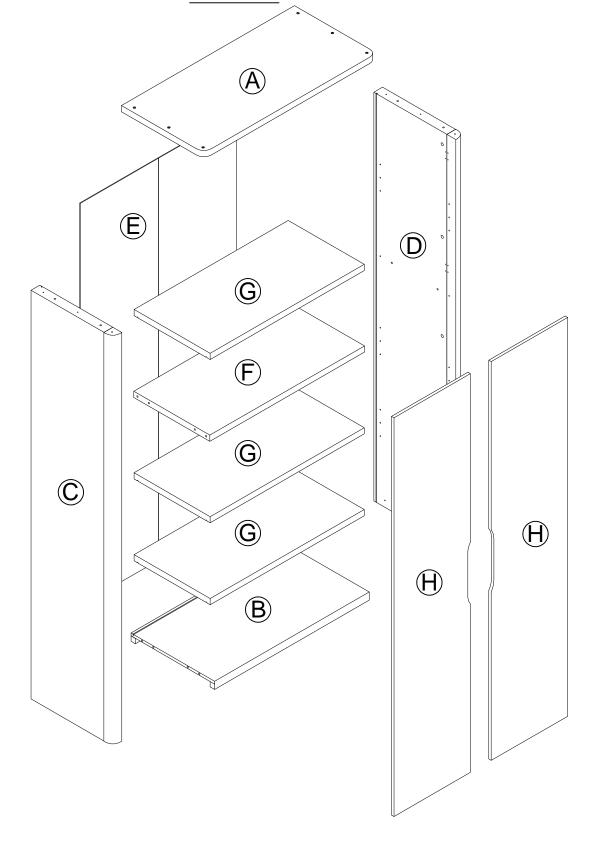

Hardware Identification

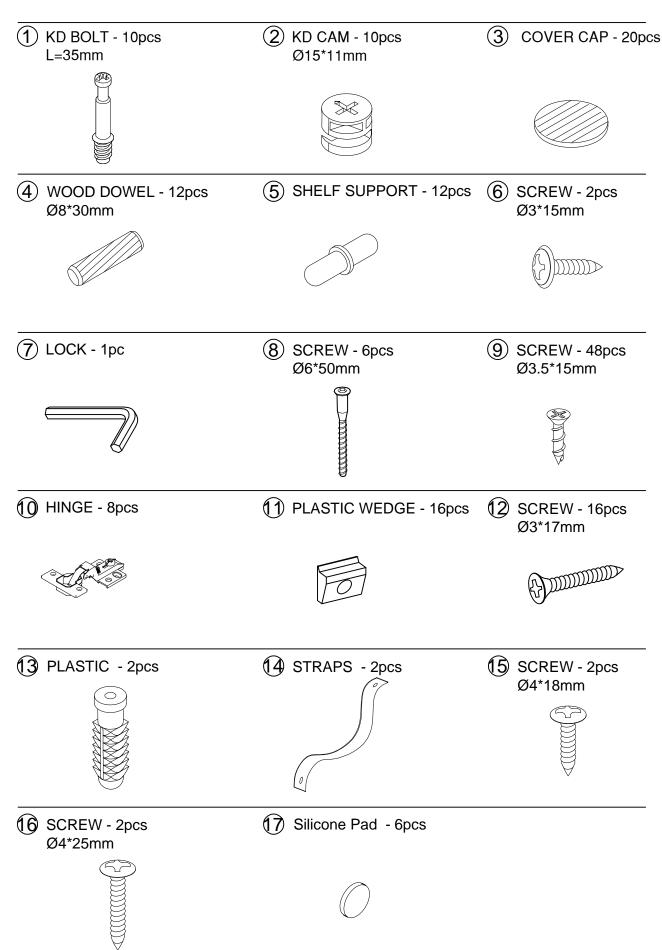


Page 4 BC004

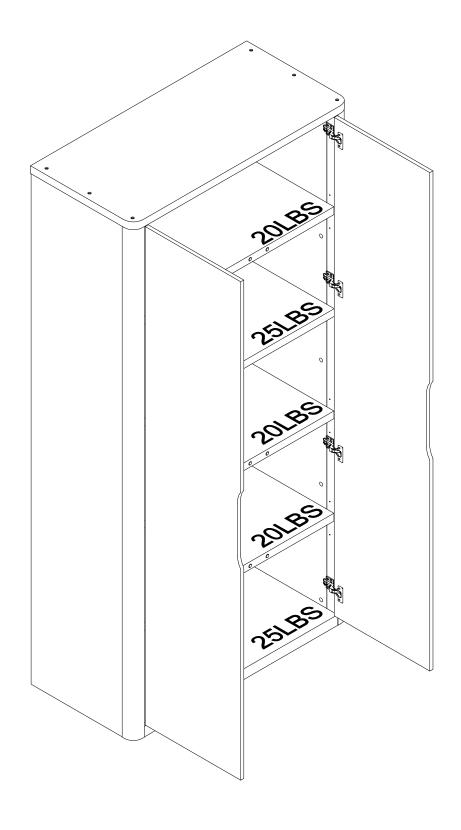

Step 1:


^{*} Insert Ten KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL(D).

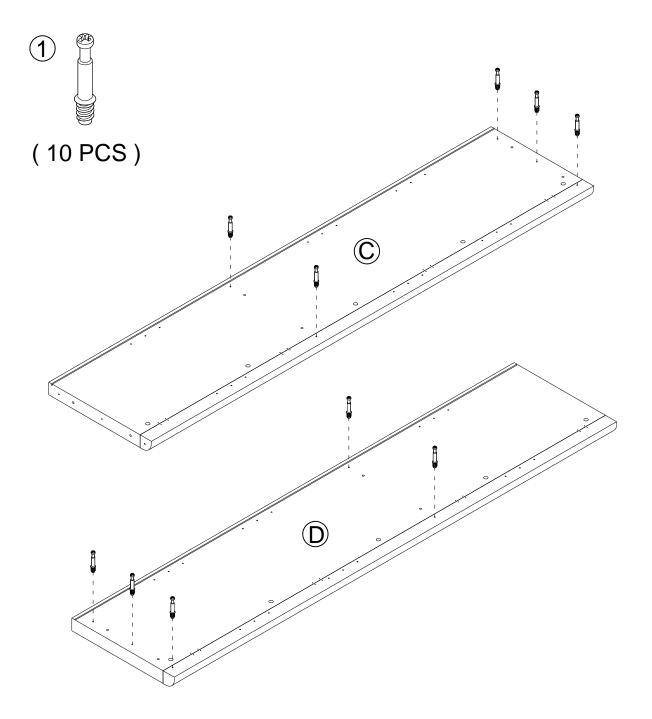


Page 6 BC004

Step 2:


* Attach the FIX SHELF PANEL (F) and BOTTOM PANEL (B) to the LEFT PANEL (C) and RIGHT PANEL(D) by the Ten KD CAM (2), Ten COVER CAP (3) and Eight WOOD DOWEL (4).



(10 PCS) (10 PCS) (8 PCS)

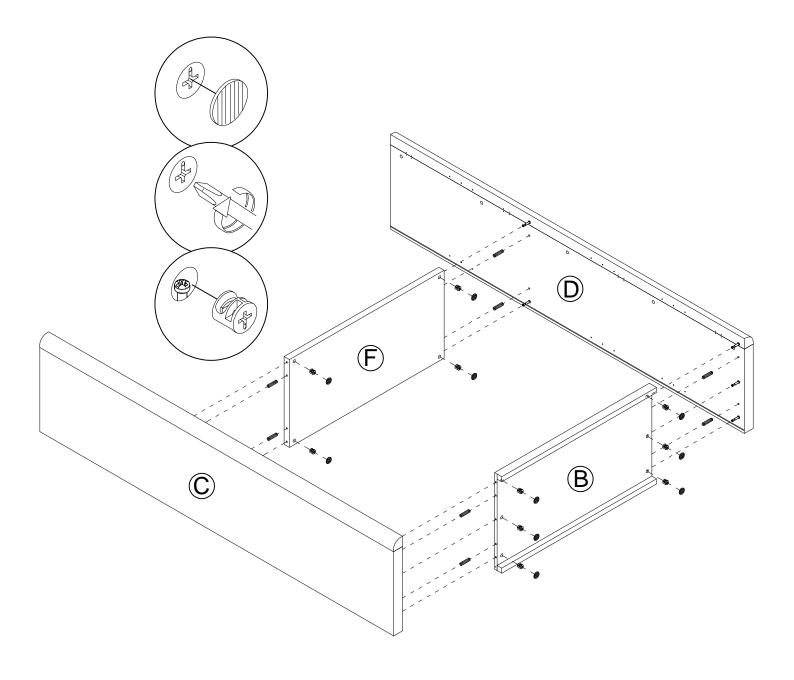


* Attach the BACK PANEL (E) to the stand.

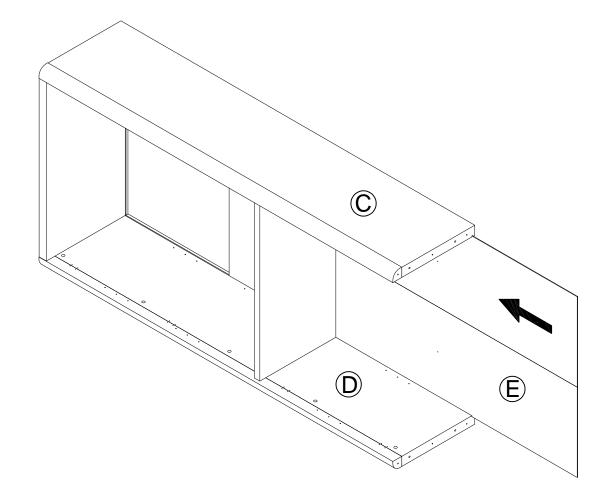



Page 8 BC004

* Attach the TOP PANEL (A) to the LEFT PANEL (C) and RIGHT PANEL(D) by the Six Screw(8), Four WOOD DOWEL (4) and LOCK(7) .

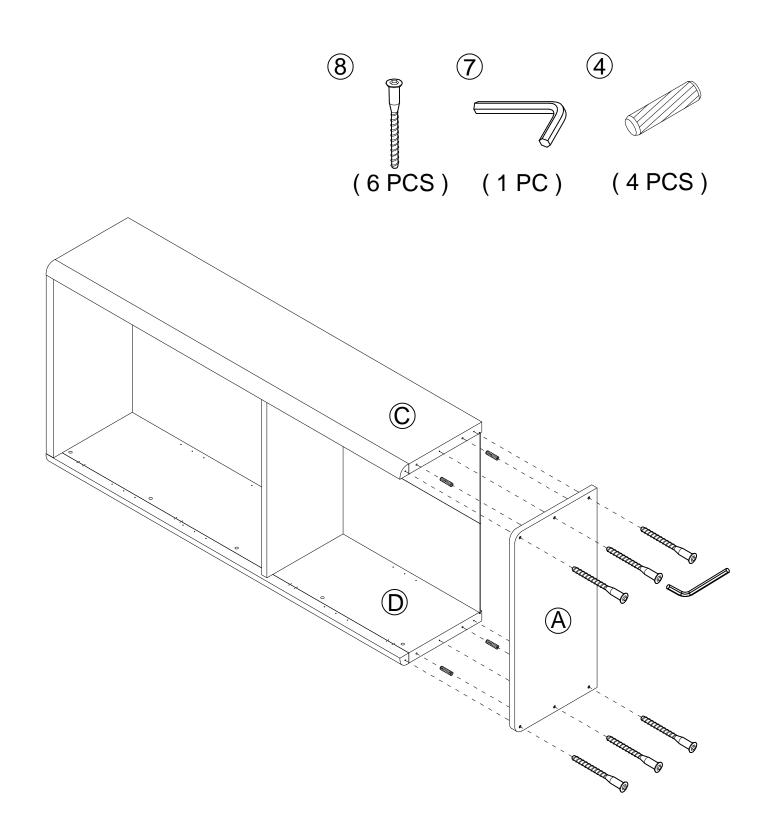

Step 5:

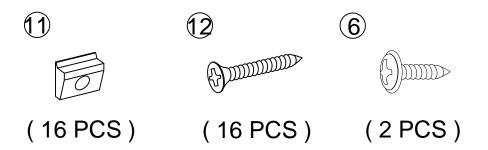

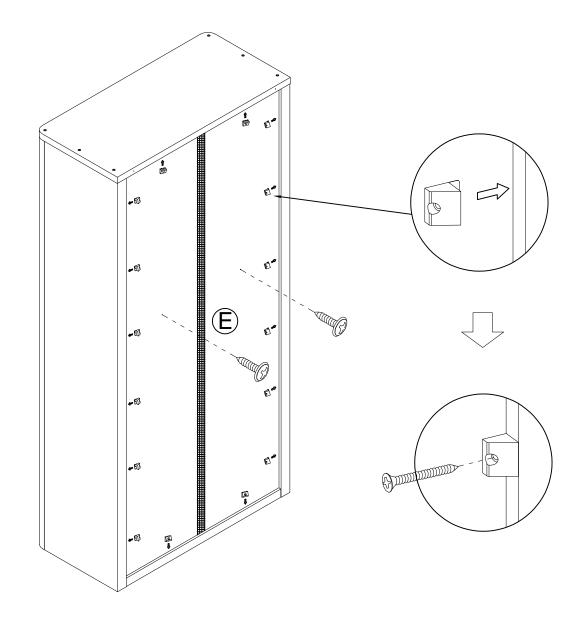


Page 10 BC004


^{*} Insert Sixteen PLASTIC WEDGE(11), Sixteen SCREW(12) and Screw(6) to the BACK PANEL (E).

Step 6:

* Assemble the HINGE(10) to the Two DOOR PANEL (H) with the SCREW (9) .

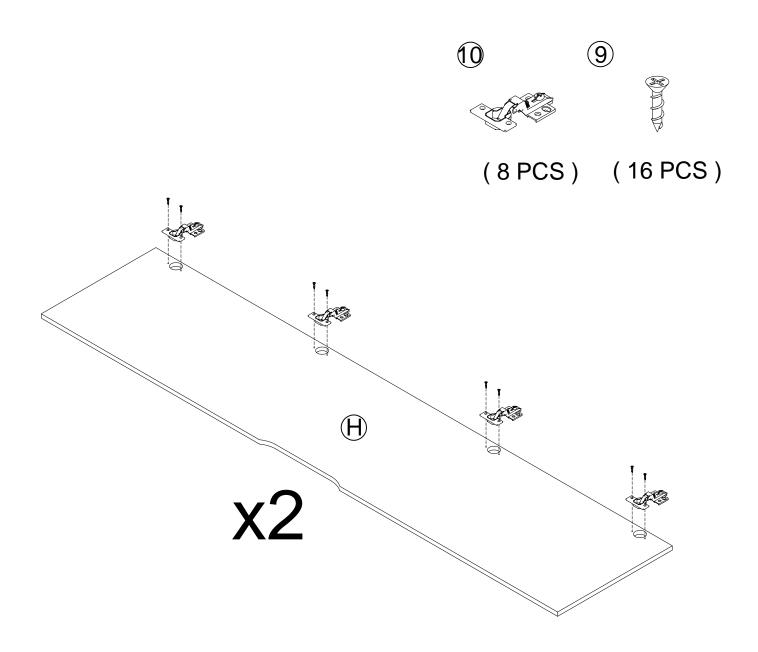

* Attach the Two DOOR PANEL (H) to the stand with the SCREW (9) .

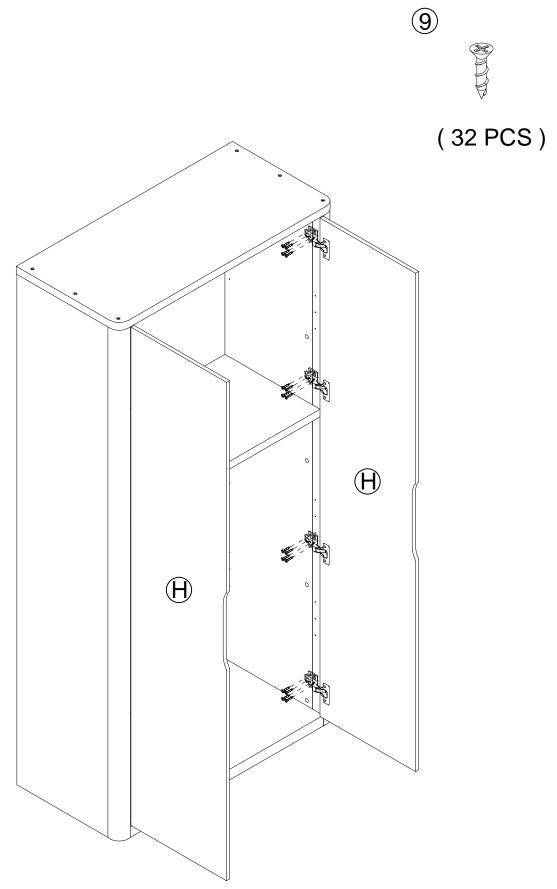


Page 12 BC004

Step 8:


*Input Three SHELF PANEL(G) to the stand with Twelve SHELF SUPPORT(5) .


* Stick Six Silicone Pad(17) to the Three SHELF PANEL(G).

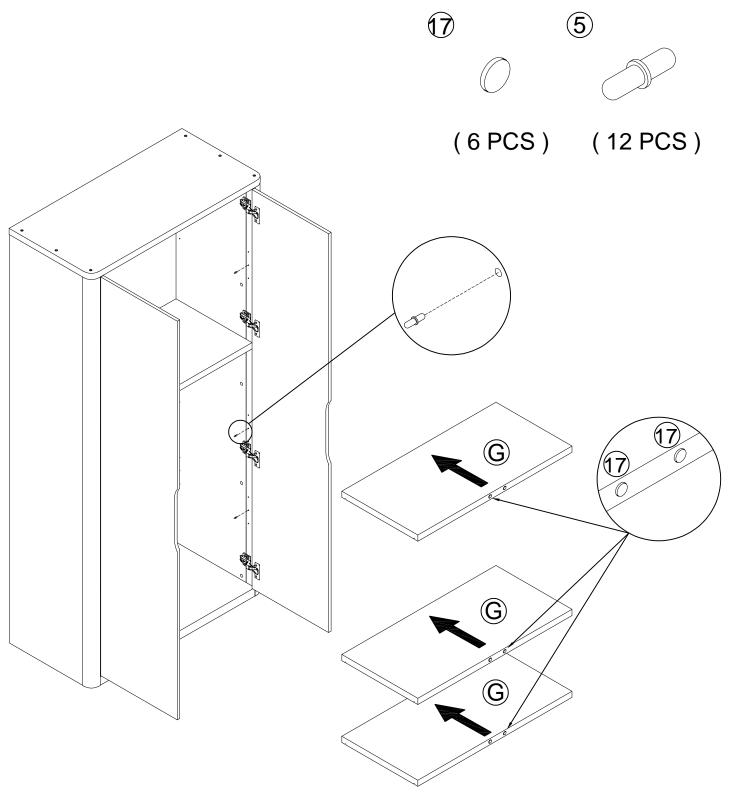

Step 9:

* Attach anti-tipping straps to the back of the stand.

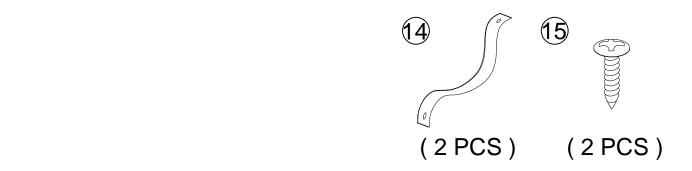

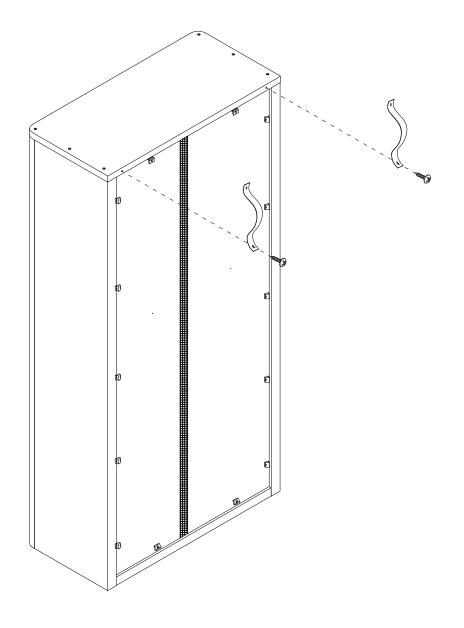

Page 14 BC004

Step 10:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (13) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten

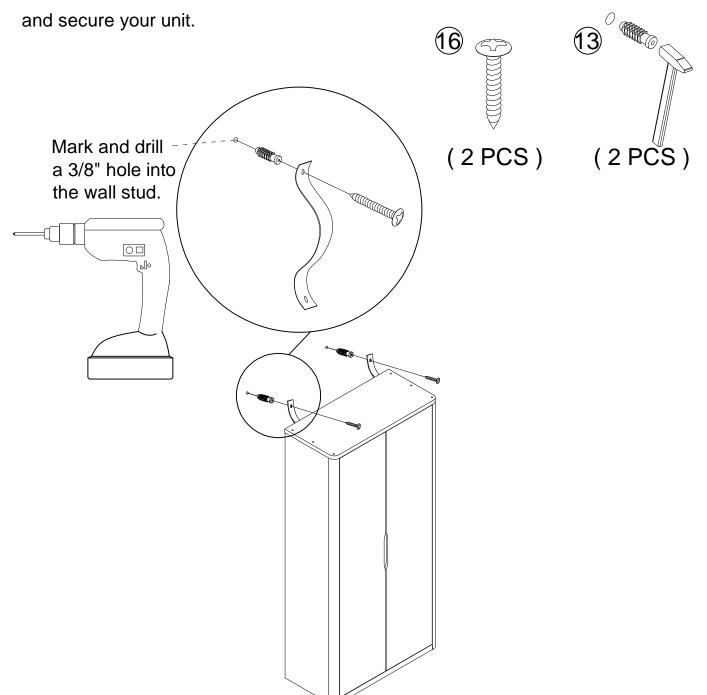



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.