





MANHATTAN COMFORT

SB008

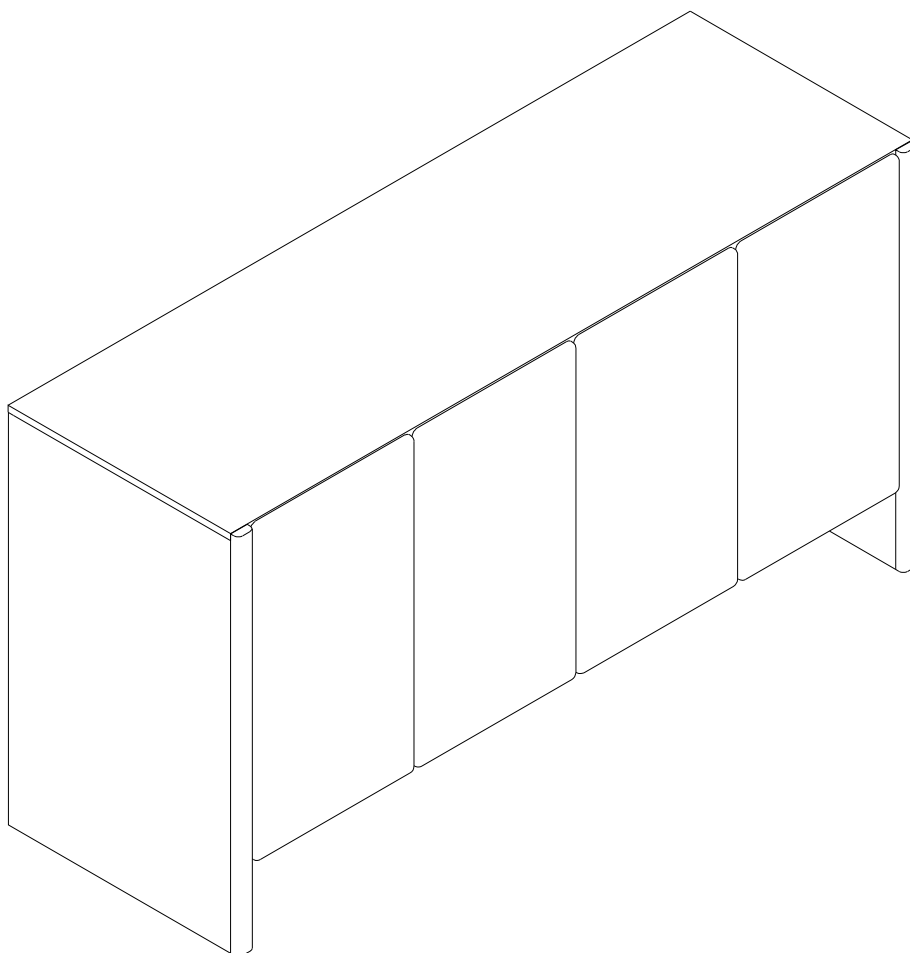

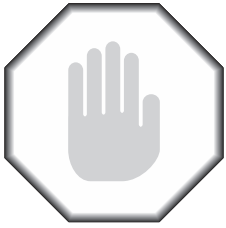


STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

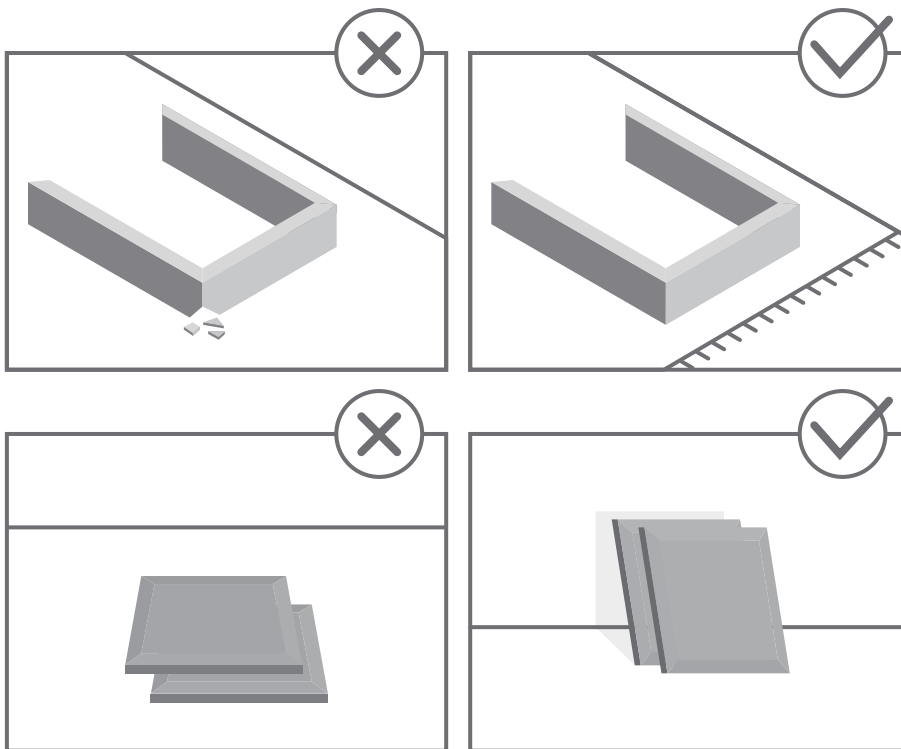

TOOLS REQUIRED

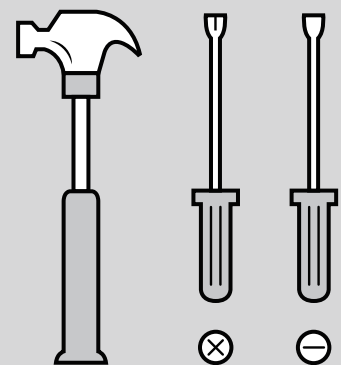

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com


Support Site



Included in this package:


A. TOP PANEL(1)
B. BOTTOM PANEL(1)
C. LEFT PANEL (1)
D. RIGHT PANEL (1)
E. BACK PANEL (1)
F. BETWEEN PANEL (1)

G. SHELF PANEL(2)
H. CENTER FOOT(1)
I. LEFT DOOR (1)
J. RIGHT DOOR (2)
K. RIGHT MIDDLE DOOR (1)

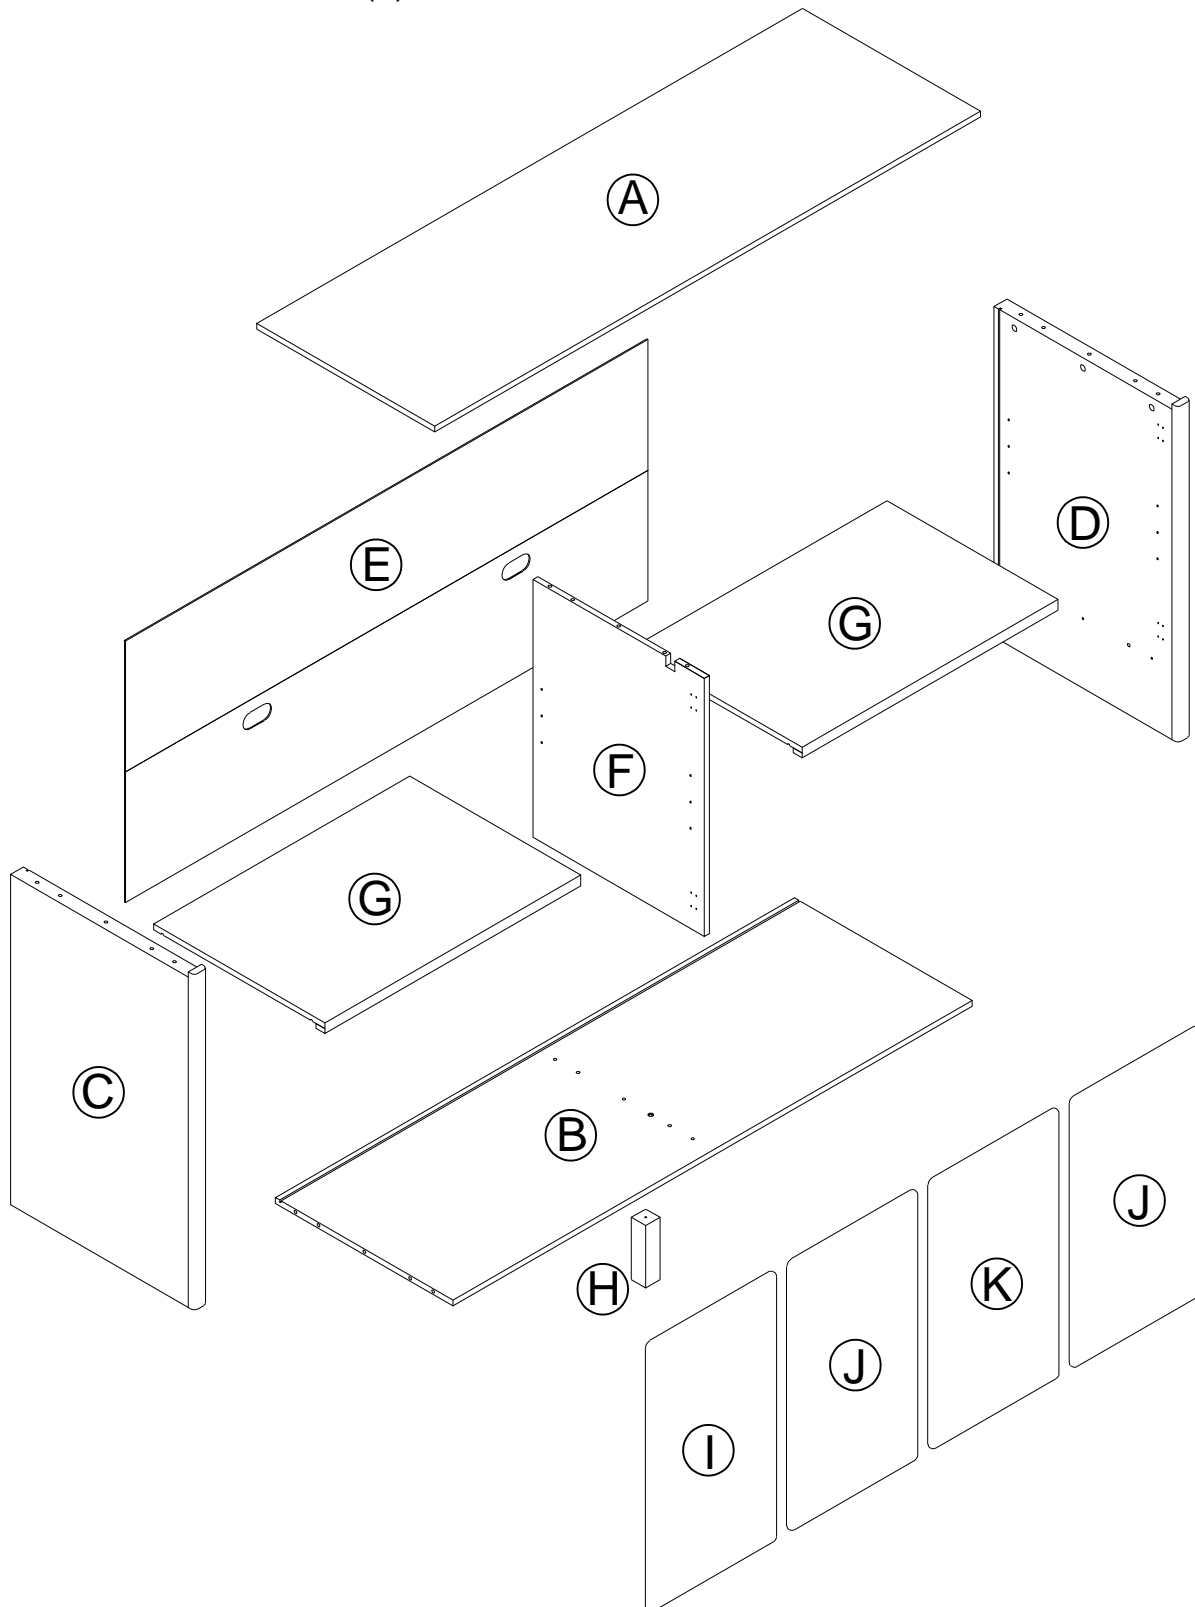


Hardware Identification


- ① KD BOLT - 15pcs
L=35mm




- ② KD CAM - 15pcs
Ø15*11mm




- ③ COVER CAP - 15pcs




- ④ WOOD DOWEL - 12pcs
Ø8*30mm




- ⑤ SHELF SUPPORT - 8pcs



- ⑥ HINGE - 4pcs




- ⑦ LOCK - 1pc




- ⑧ SCREW - 4pcs
Ø6*50mm




- ⑨ SCREW - 48pcs
Ø3.5*15mm




- ⑩ HINGE - 4pcs




- ⑪ TIP-ON - 4pcs

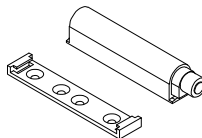


- ⑫ SCREW - 20pcs
Ø3.5*12mm



- ⑬ PLASTIC WEDGE - 14pcs




- ⑭ SCREW - 14pcs
Ø3*17mm




- ⑮ METAL PLATE - 4pcs




- ⑯ STRAPS - 2pcs

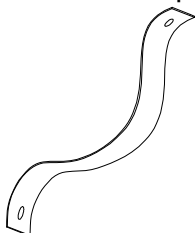

- ⑰ SCREW - 2pcs
Ø4*18mm




- ⑱ SCREW - 2pcs
Ø4*25mm




Hardware Identification


①9 PLASTIC - 2pcs




②0 SCREW - 6pcs
Ø4*40mm



②1 METAL BAR - 1pc

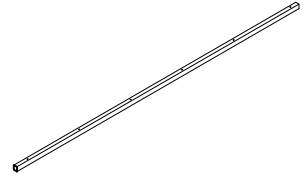


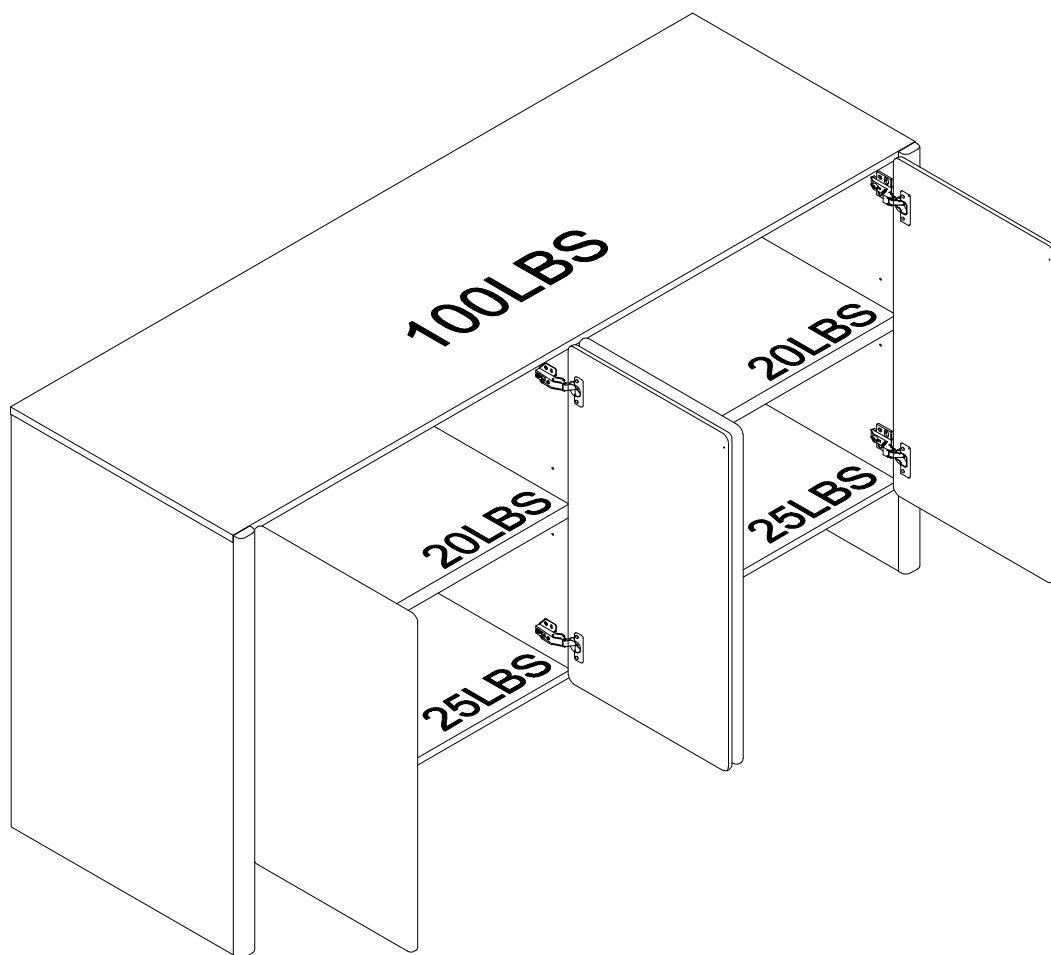

Step 1:


* Insert Fifteen KD BOLT (1) to the TOP PANEL (A), LEFT PANEL (C) and RIGHT PANEL(D).

* Assemble the METAL BAR(21) to the TOP PANEL(A) by the SCREW (20)

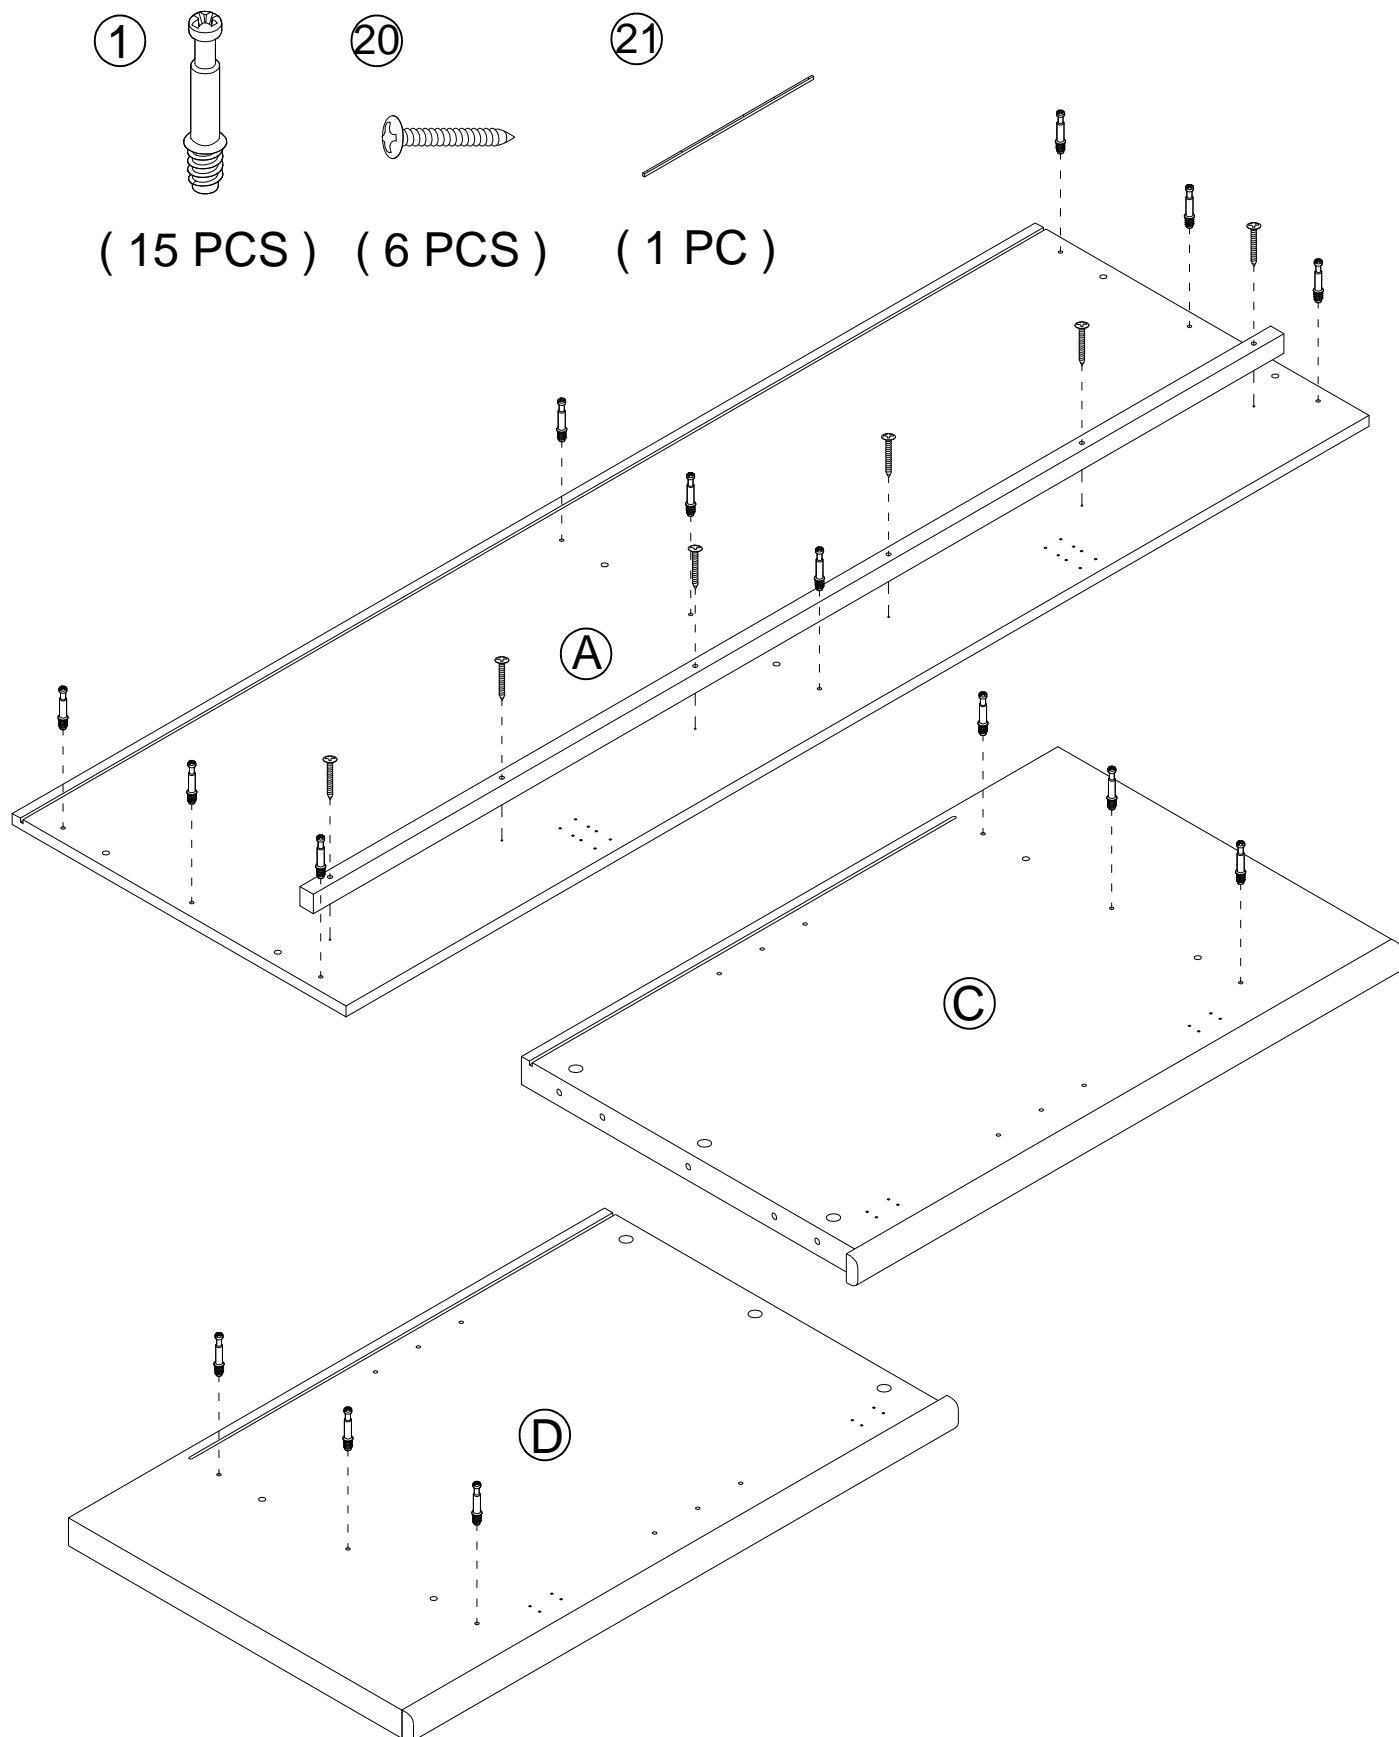



Step 2:

* Attach the CENTER FOOT(H) to the BOTTOM PANEL (B) by the One Screw(8) and LOCK(7) .

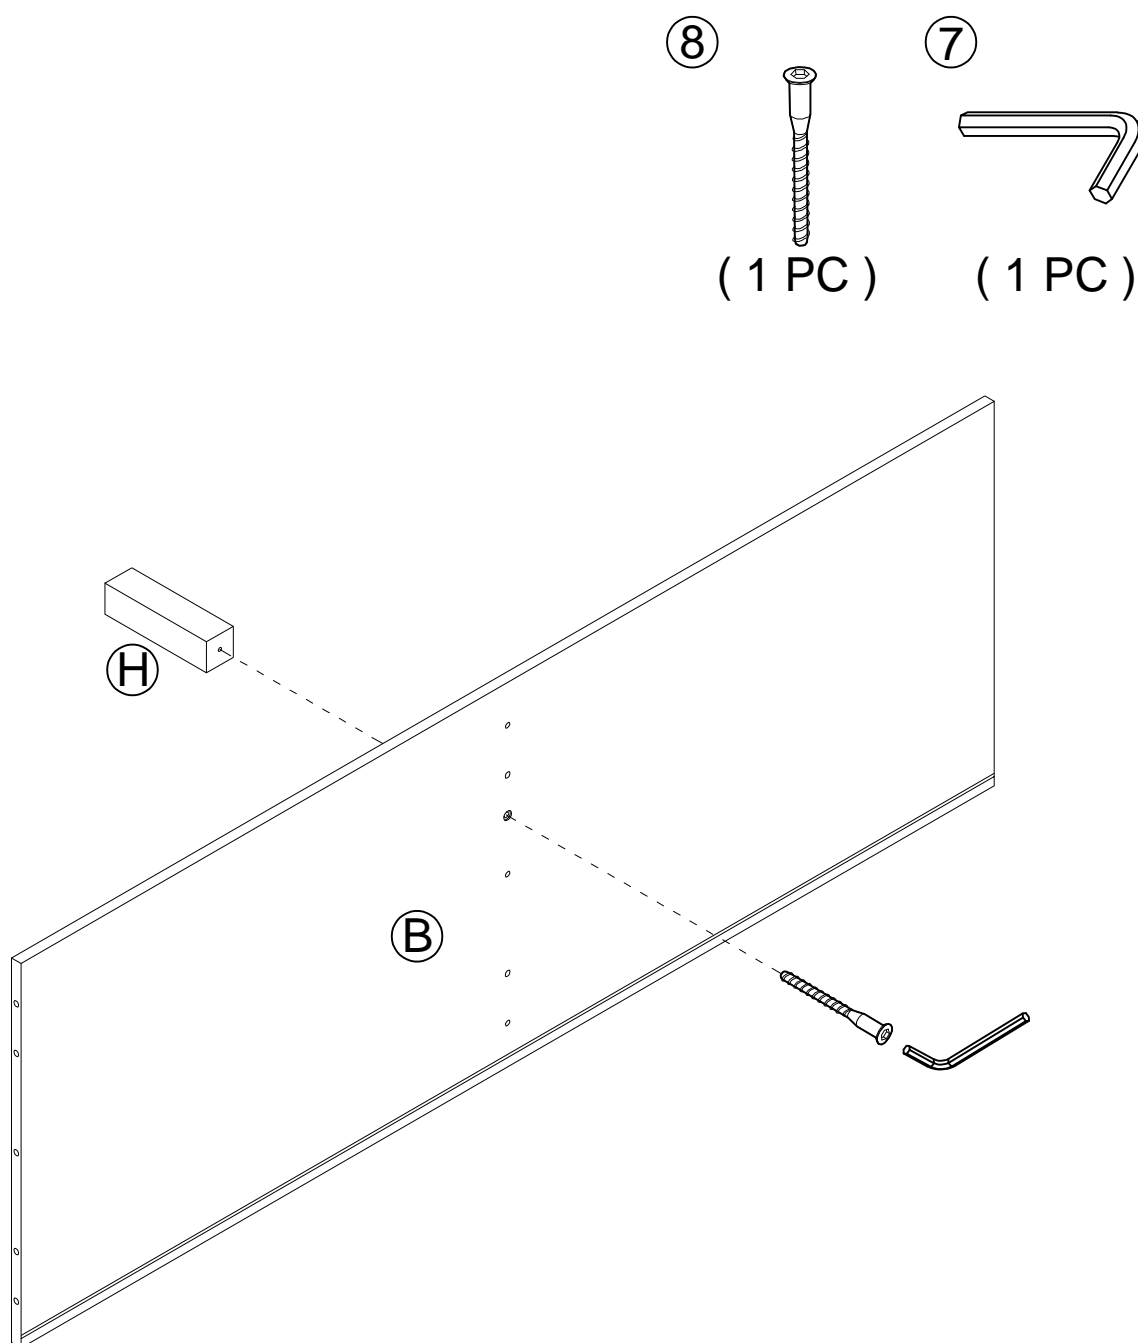

Step 3:


* Attach the BETWEEN PANEL (F) to the BOTTOM PANEL (B) by the Three Screw(8), Two WOOD DOWEL (4) and LOCK(7) .

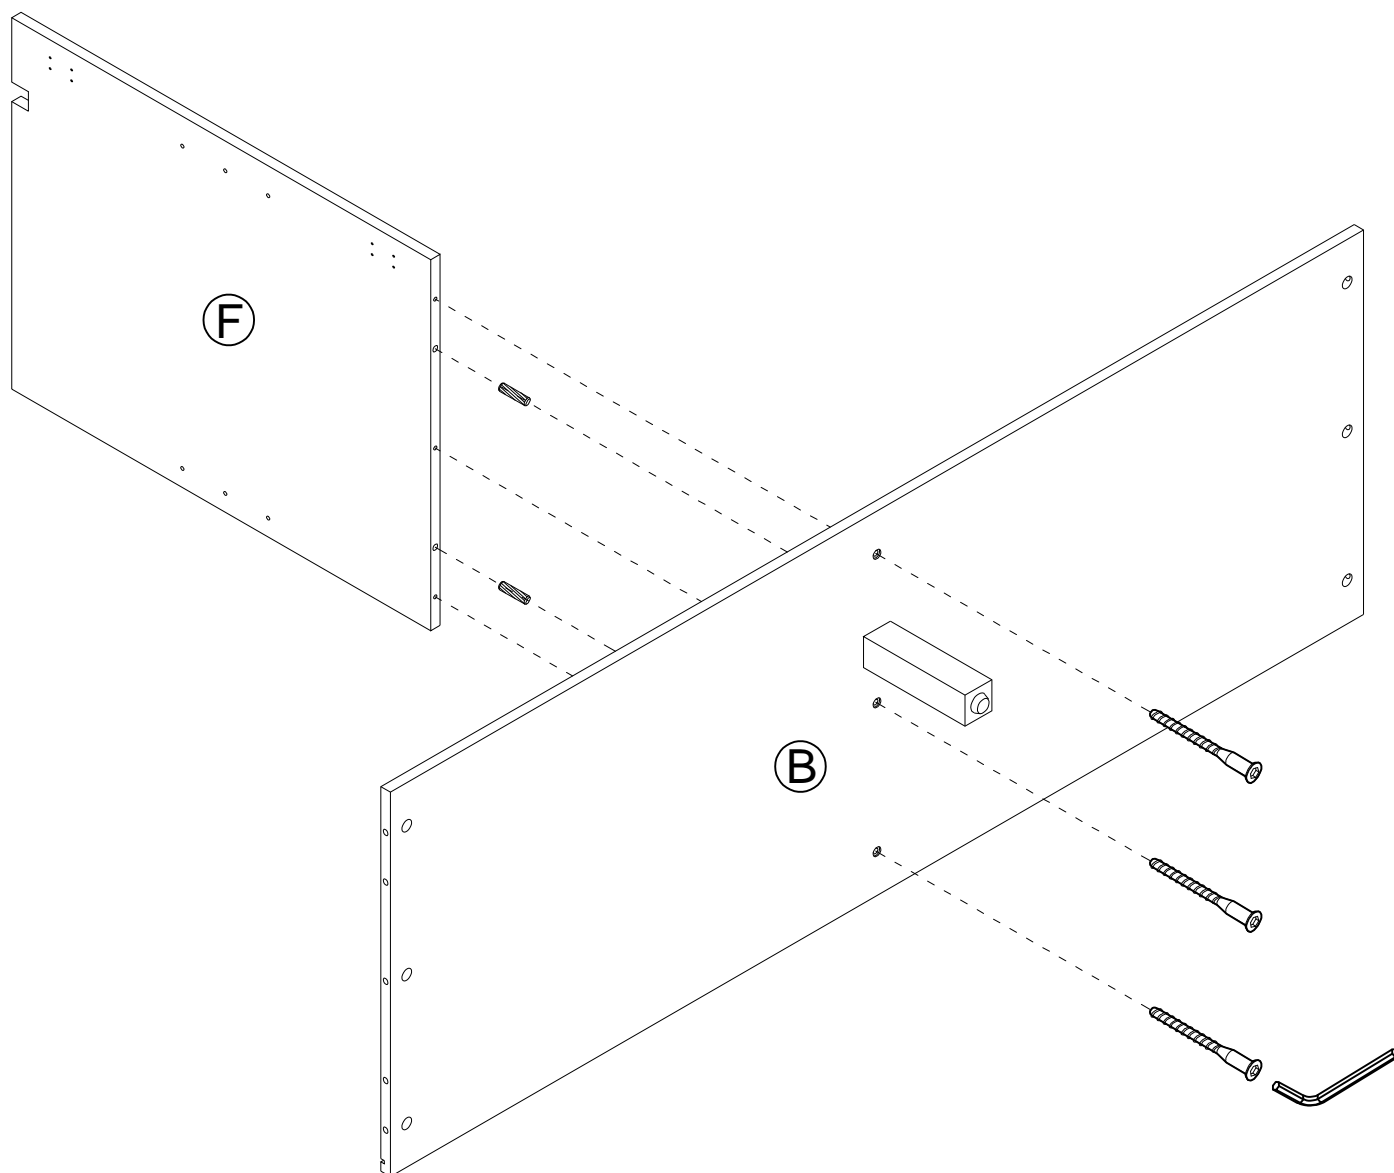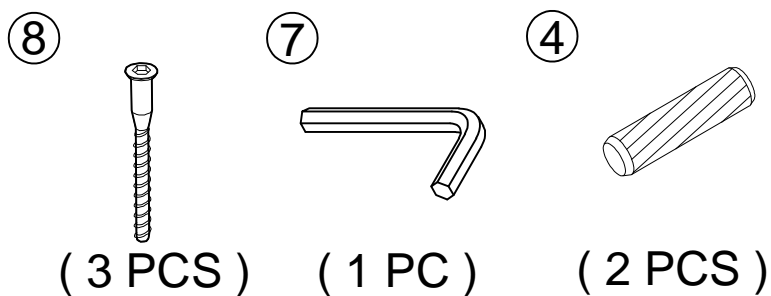


Step 4:

* Attach the LEFT PANEL (C) and RIGHT PANEL (D) to the BOTTOM PANEL (B) by the Six KD CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .


②




③



④




(6 PCS) (6 PCS) (4 PCS)

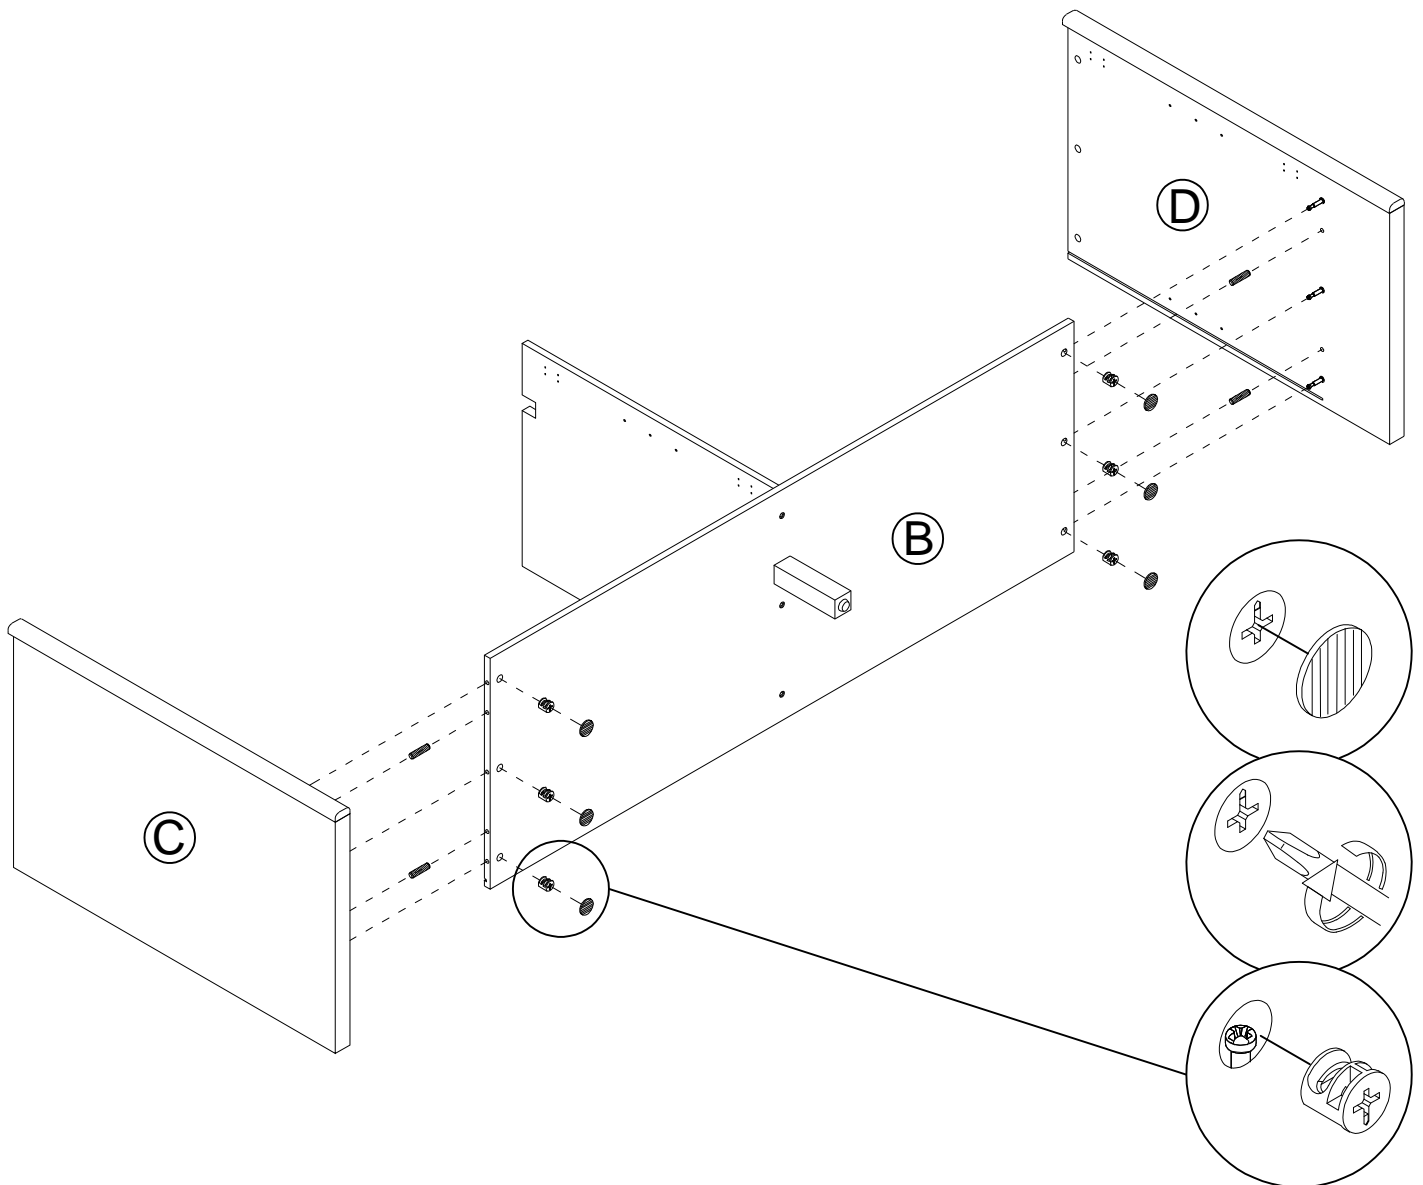


Step 5:

* Insert the BACK PANEL (E) to the sideboard.

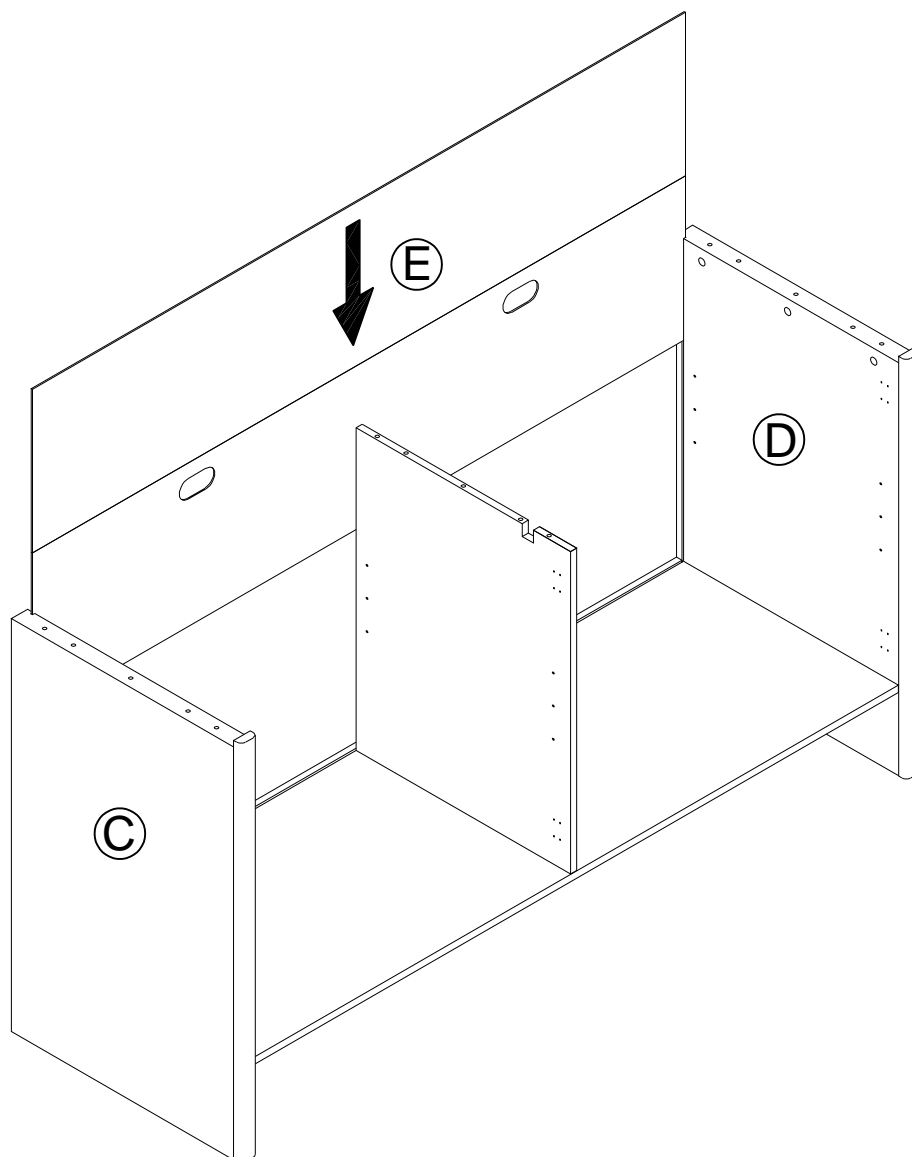

Step 6:


* Assemble the TIP-ON(11) to the TOP PANEL (A) with the SCREW (12) .

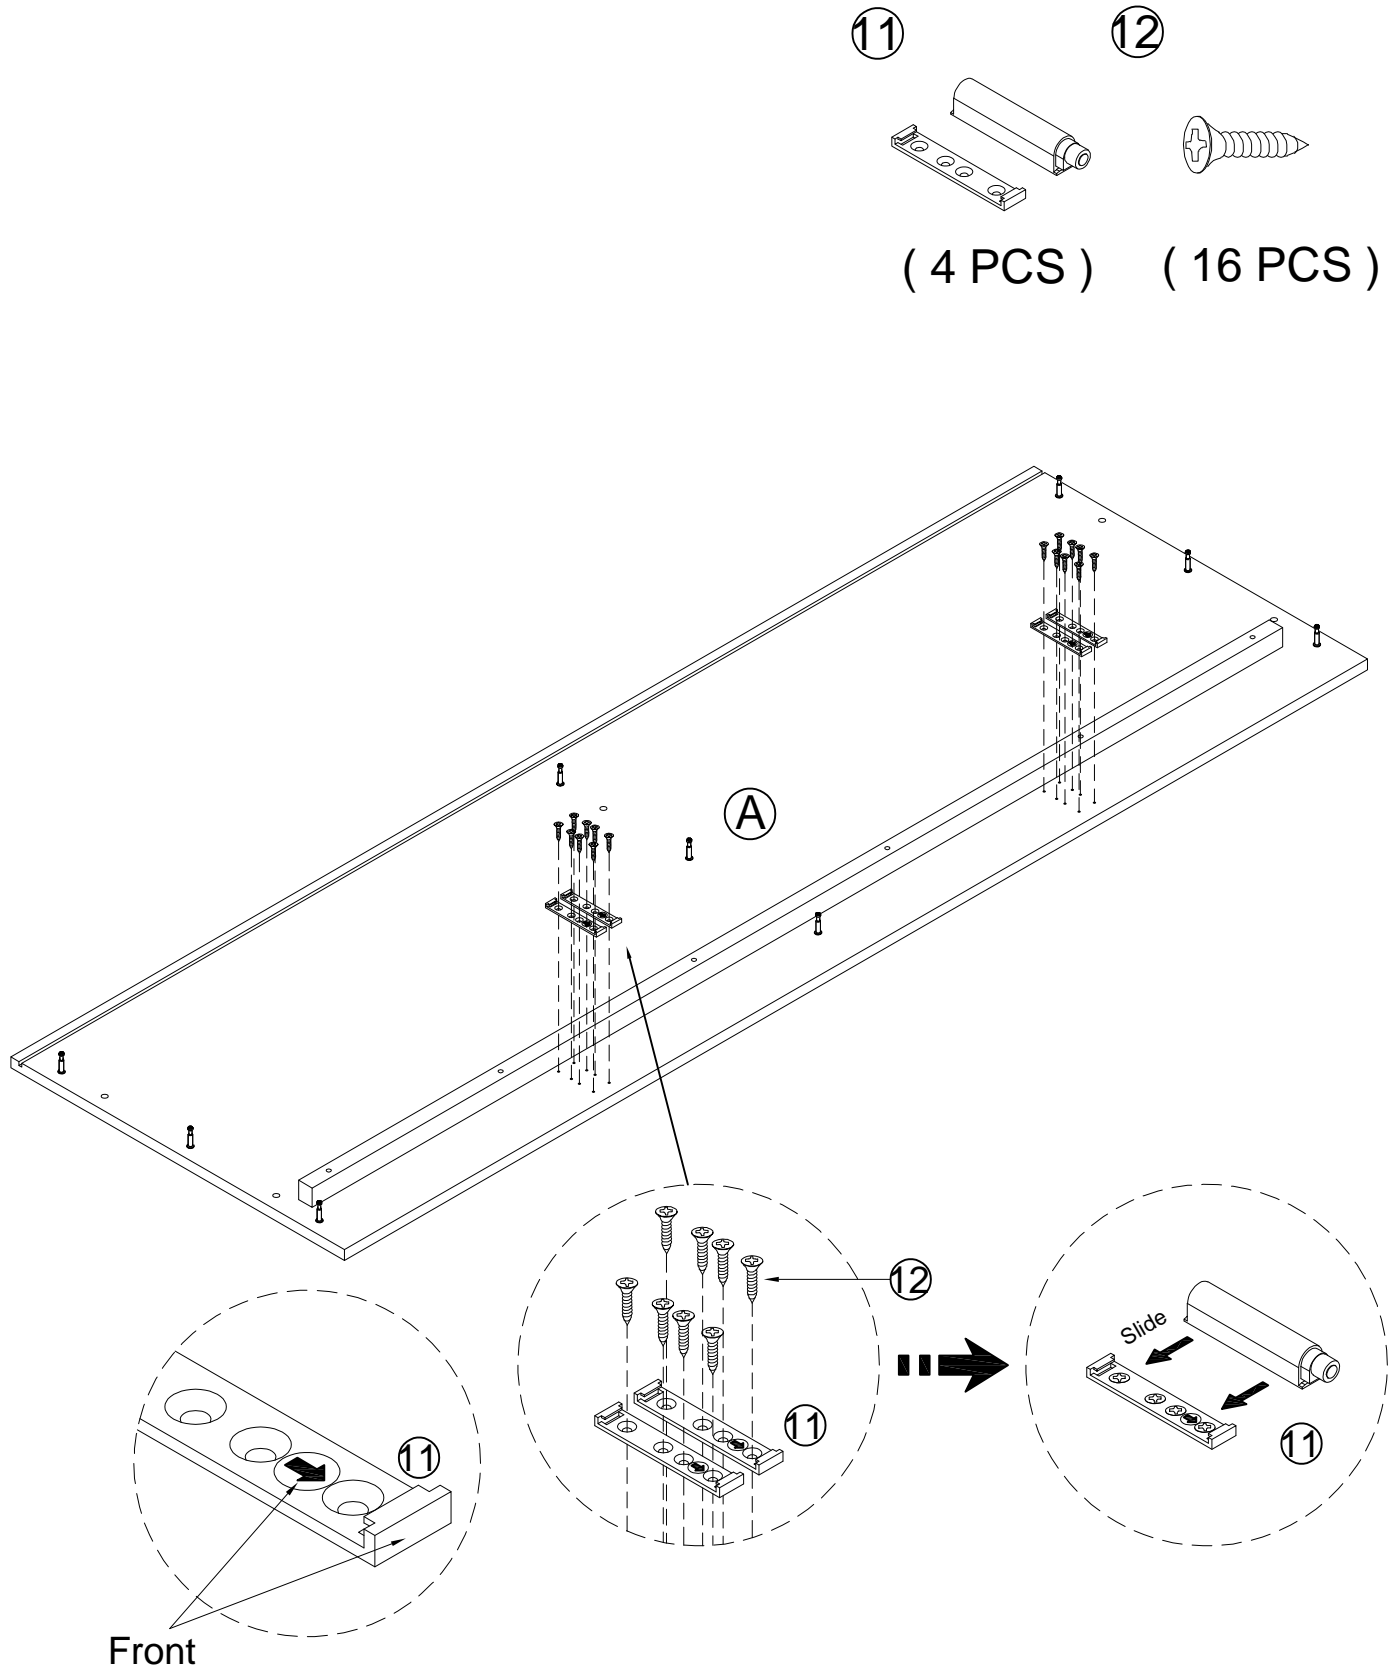


Step 7:

* Attach the TOP PANEL(A) to the LEFT PANEL(C), RIGHT PANEL(D) and BETWEEN PANEL (F) by the Nine KD CAM (2) , Nine COVER CAP (3) and Six WOOD DOWEL (4) .


②





③



④




(9 PCS) (9 PCS) (6 PCS)

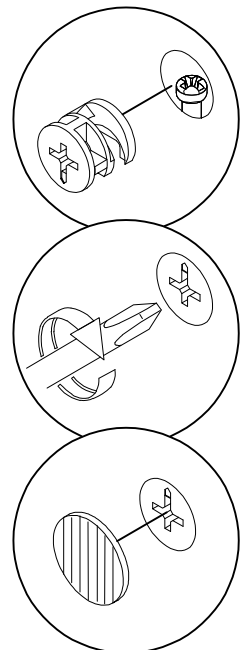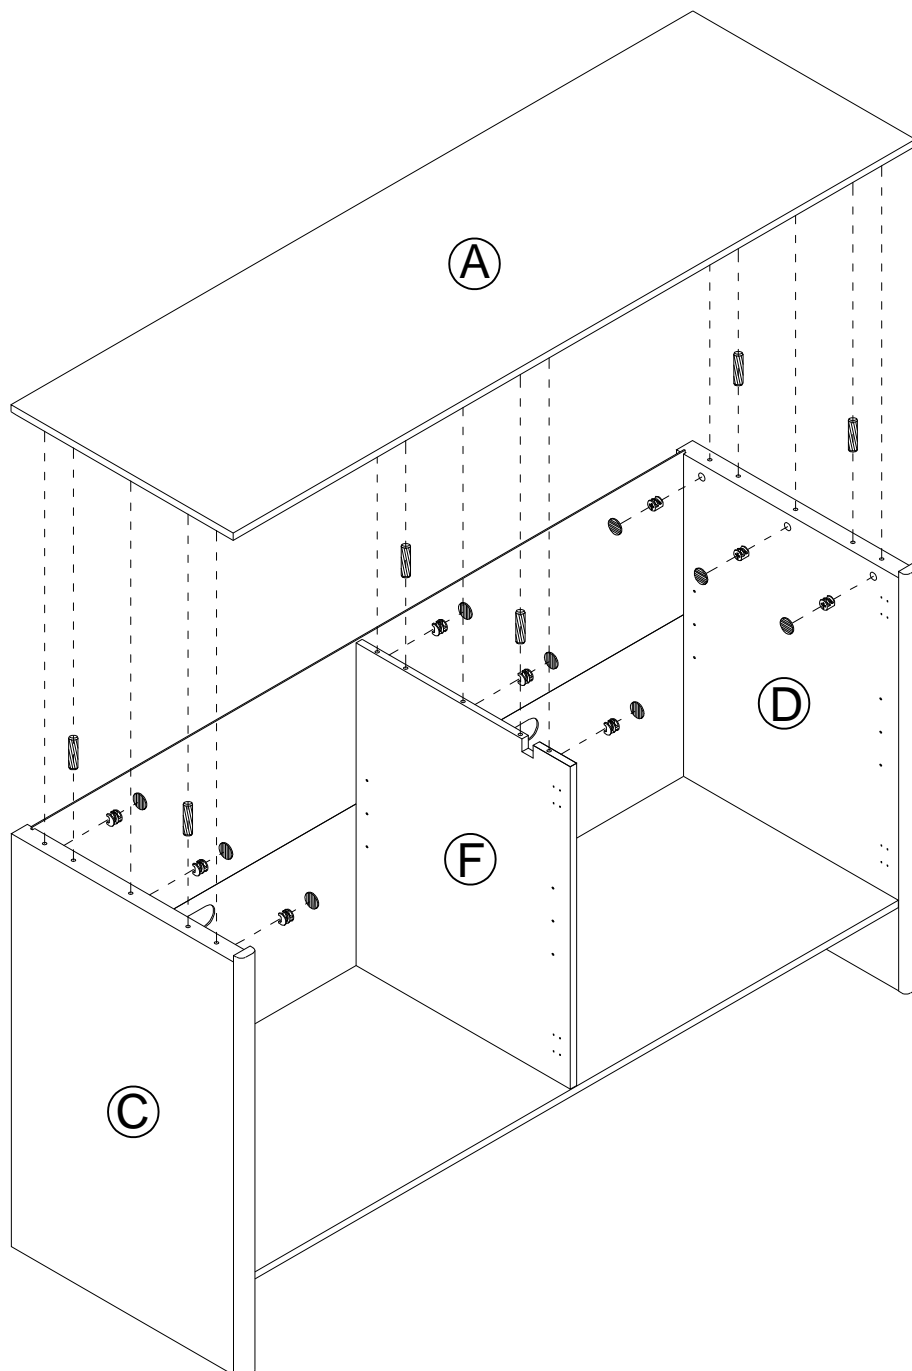

Step 8:


* Insert Fourteen PLASTIC WEDGE(13) and Fourteen SCREW(14) to the BACK PANEL (E).

13




(14 PCS)

14



(14 PCS)

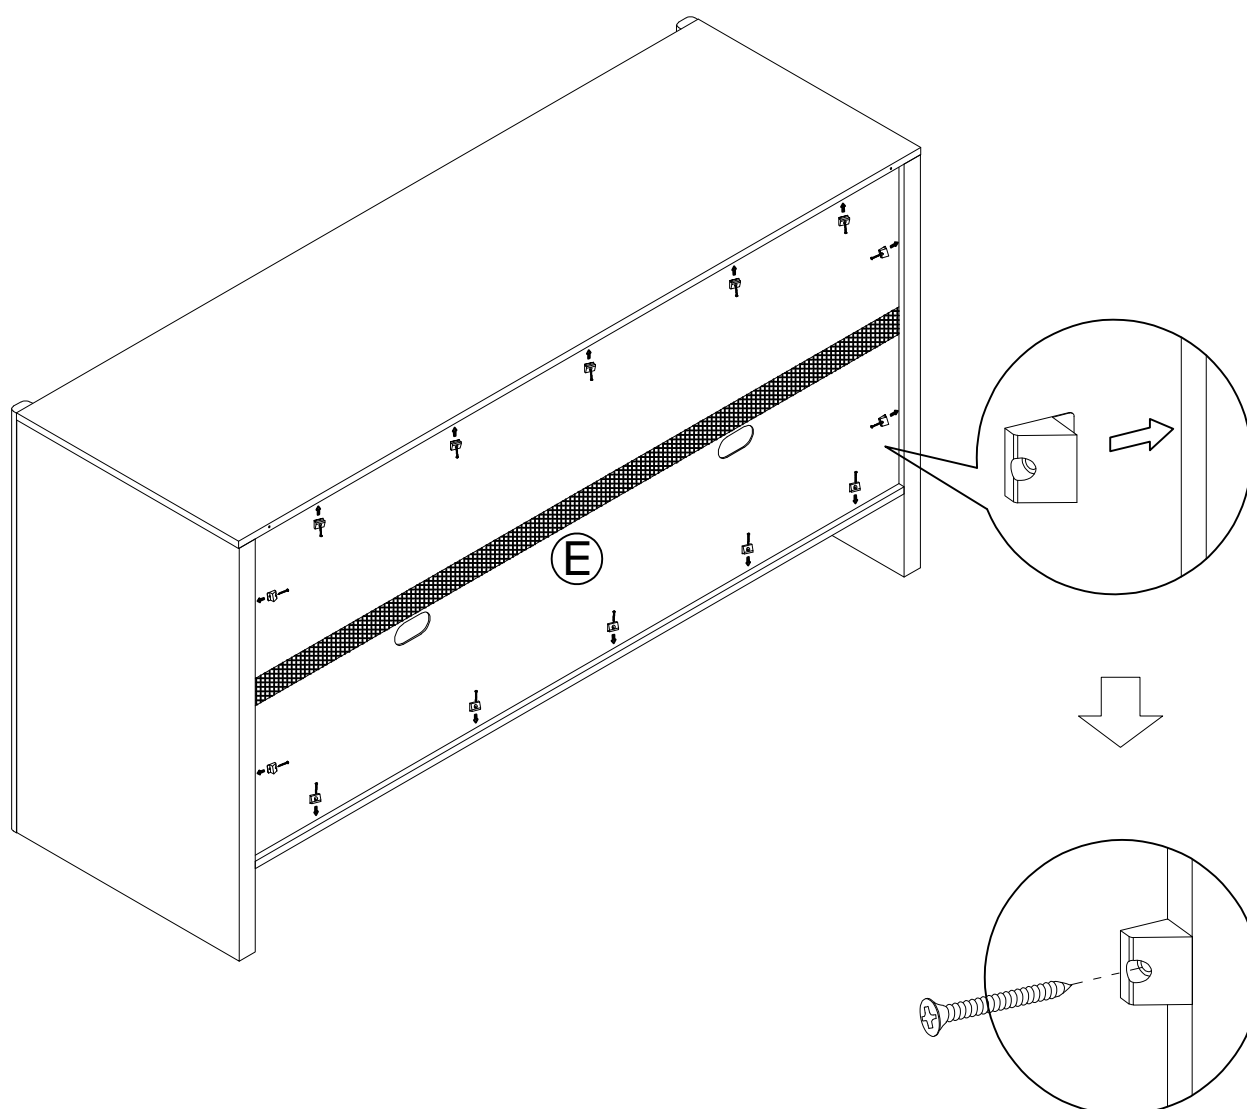


Step 9:

* Assemble the HINGE(10) to the LEFT DOOR (I) and RIGHT DOOR (J) with the SCREW (9) .


* Assemble the METAL PLATE(15) to the LEFT DOOR (I) and RIGHT DOOR (J) with the SCREW (12) .

⑮




(2 PCS)

⑫




(2 PCS)

⑩




(4 PCS)

⑨



(8 PCS)

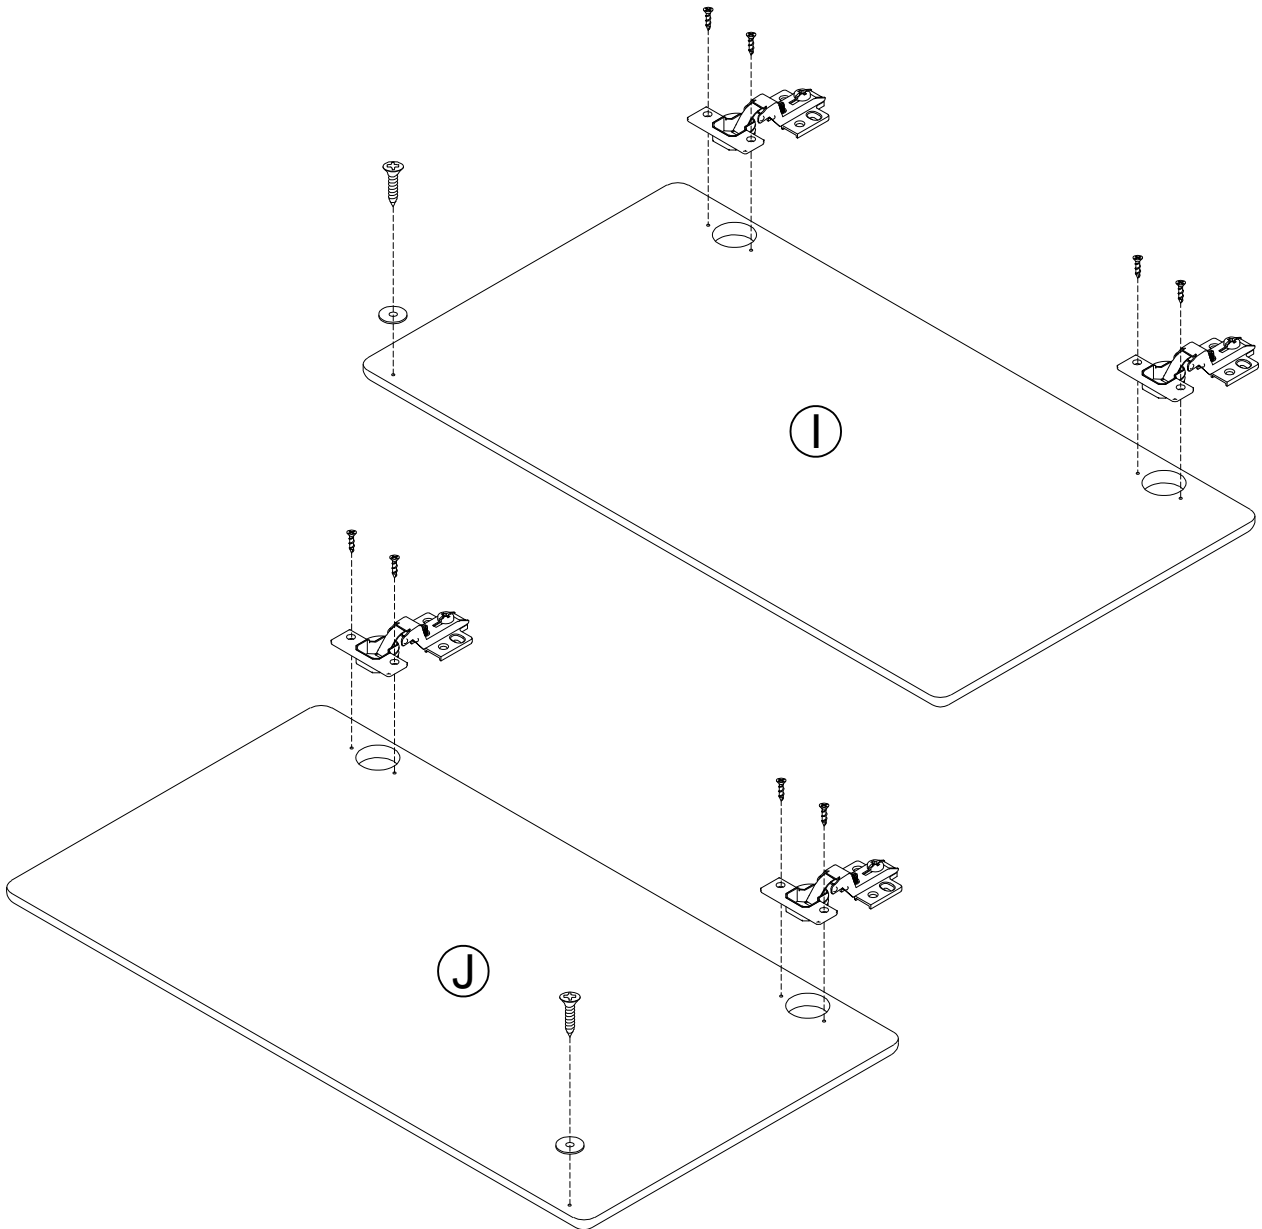


Step 10:

* Assemble the HINGE(6) to the RIGHT MIDDLE DOOR (K) and RIGHT DOOR (J) with the SCREW (9) .


* Assemble the METAL PLATE(15) to the RIGHT MIDDLE DOOR (K) and RIGHT DOOR (J) with the SCREW (12) .

⑮




(2 PCS)

⑫




(2 PCS)

⑥




(4 PCS)

⑨



(8 PCS)

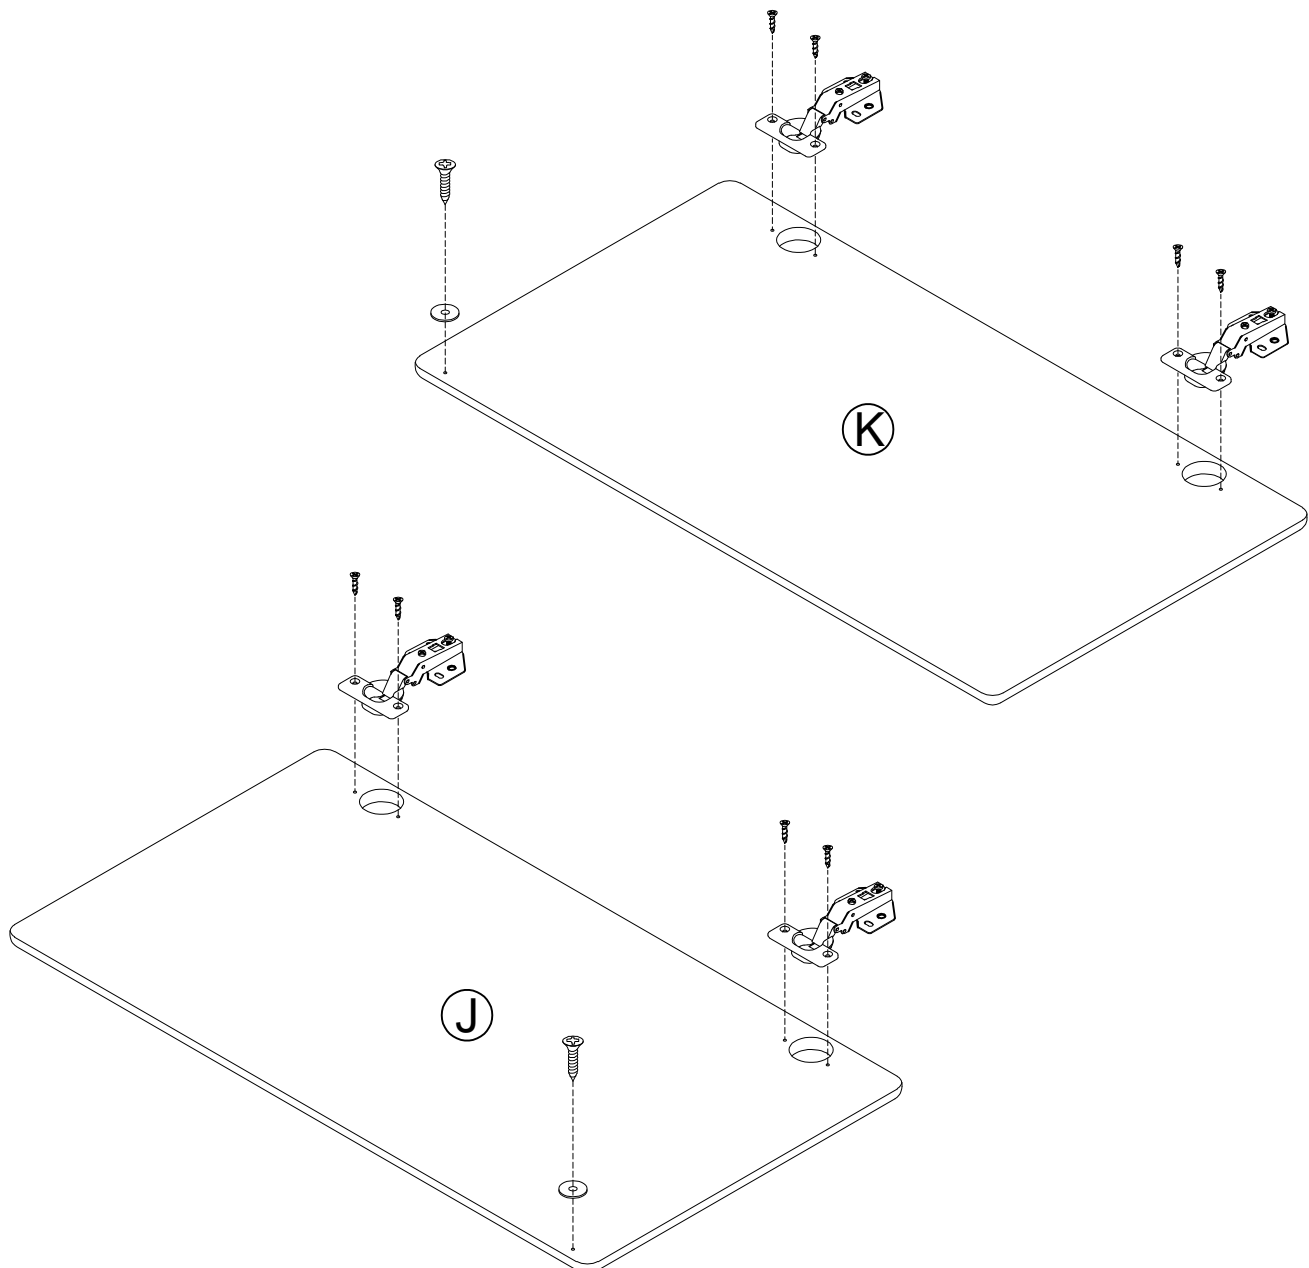


Step 11:

* Attach the LEFT DOOR (I), Two RIGHT DOOR (J) and RIGHT MIDDLE DOOR (K) to the sideboard with the SCREW (9) .

⑨




(32 PCS)

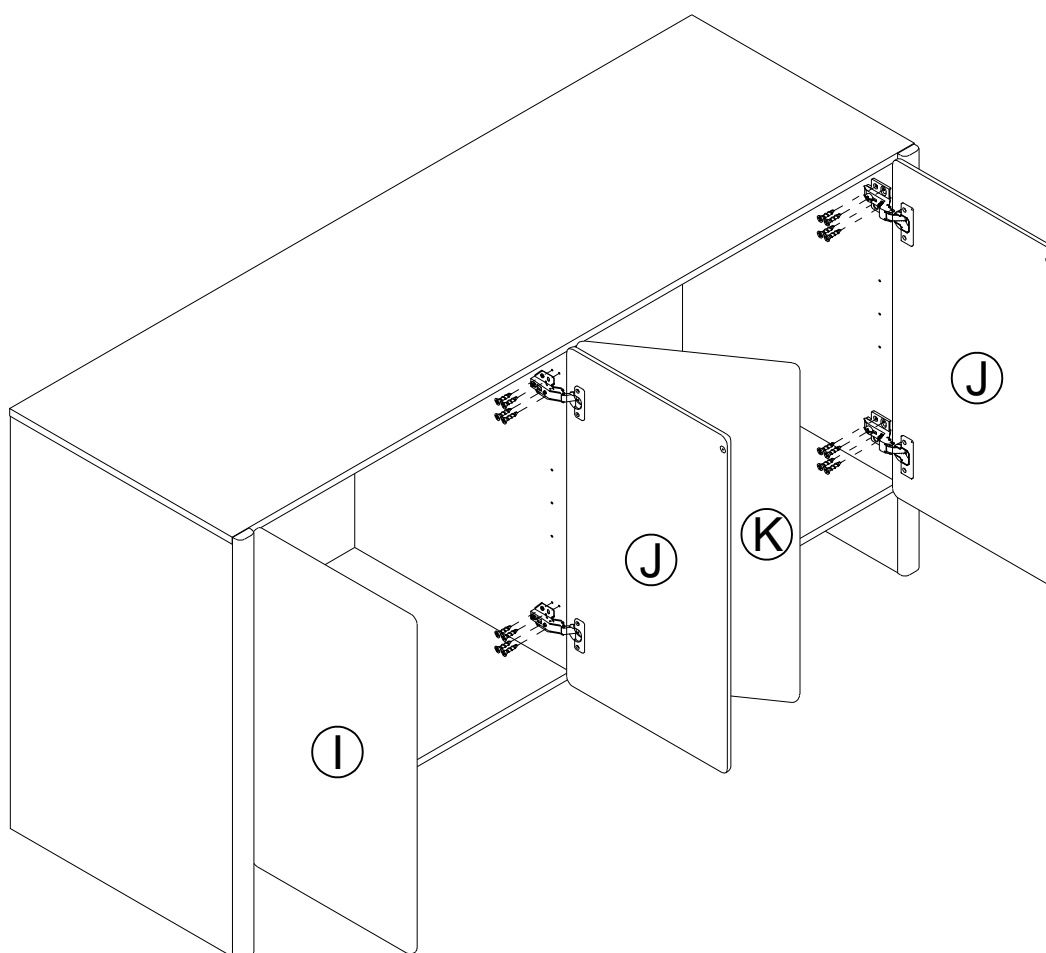


Step 12:

*Input Two SHELF PANEL(G) to the sideboard with Eight SHELF SUPPORT(5) .

⑤




(8 PCS)

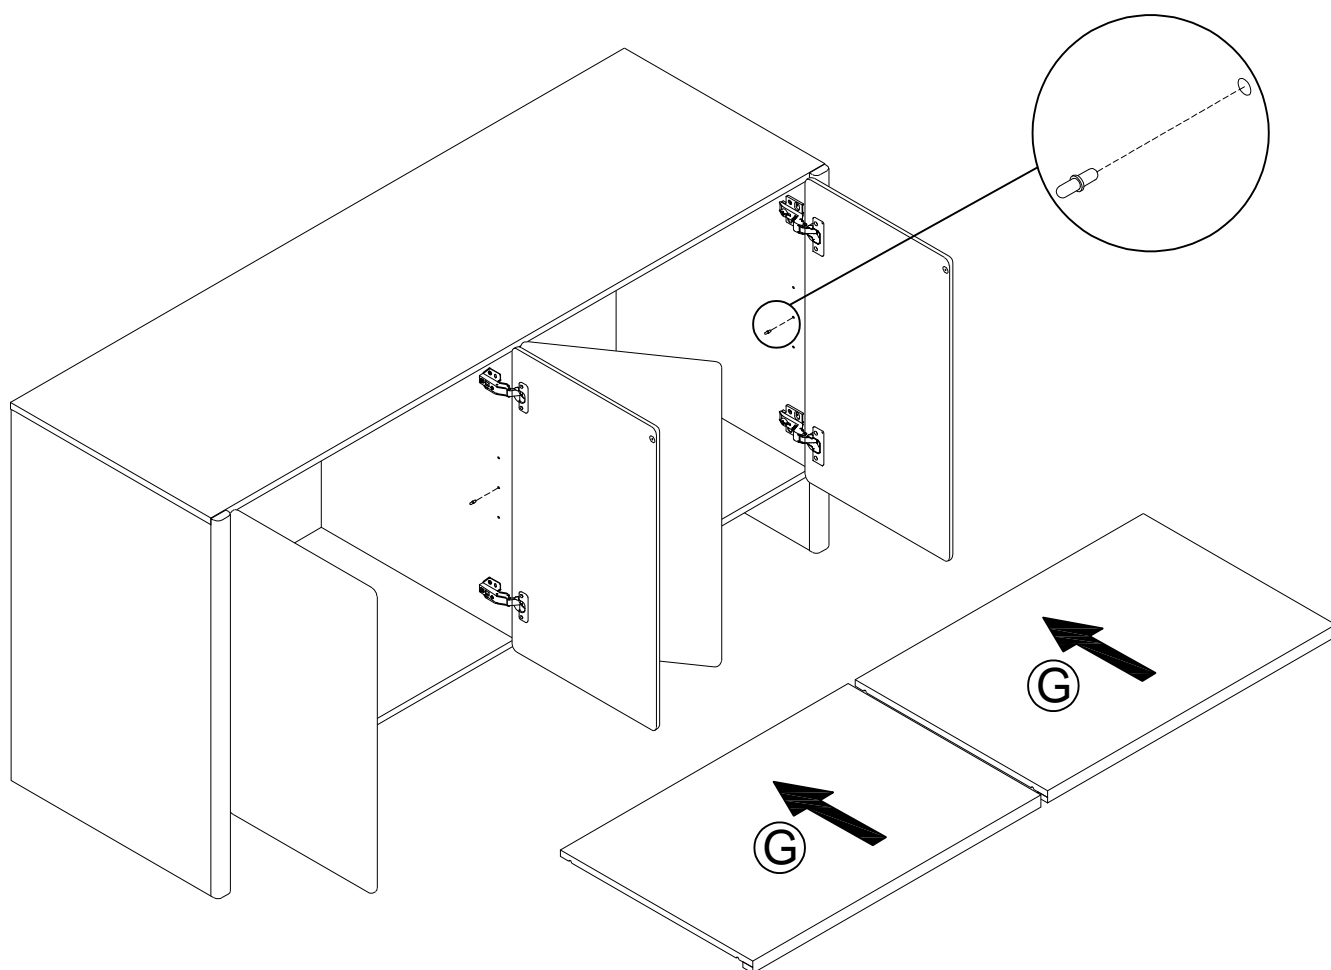

Step 13:

* Attach anti-tipping straps to the back of the stand.

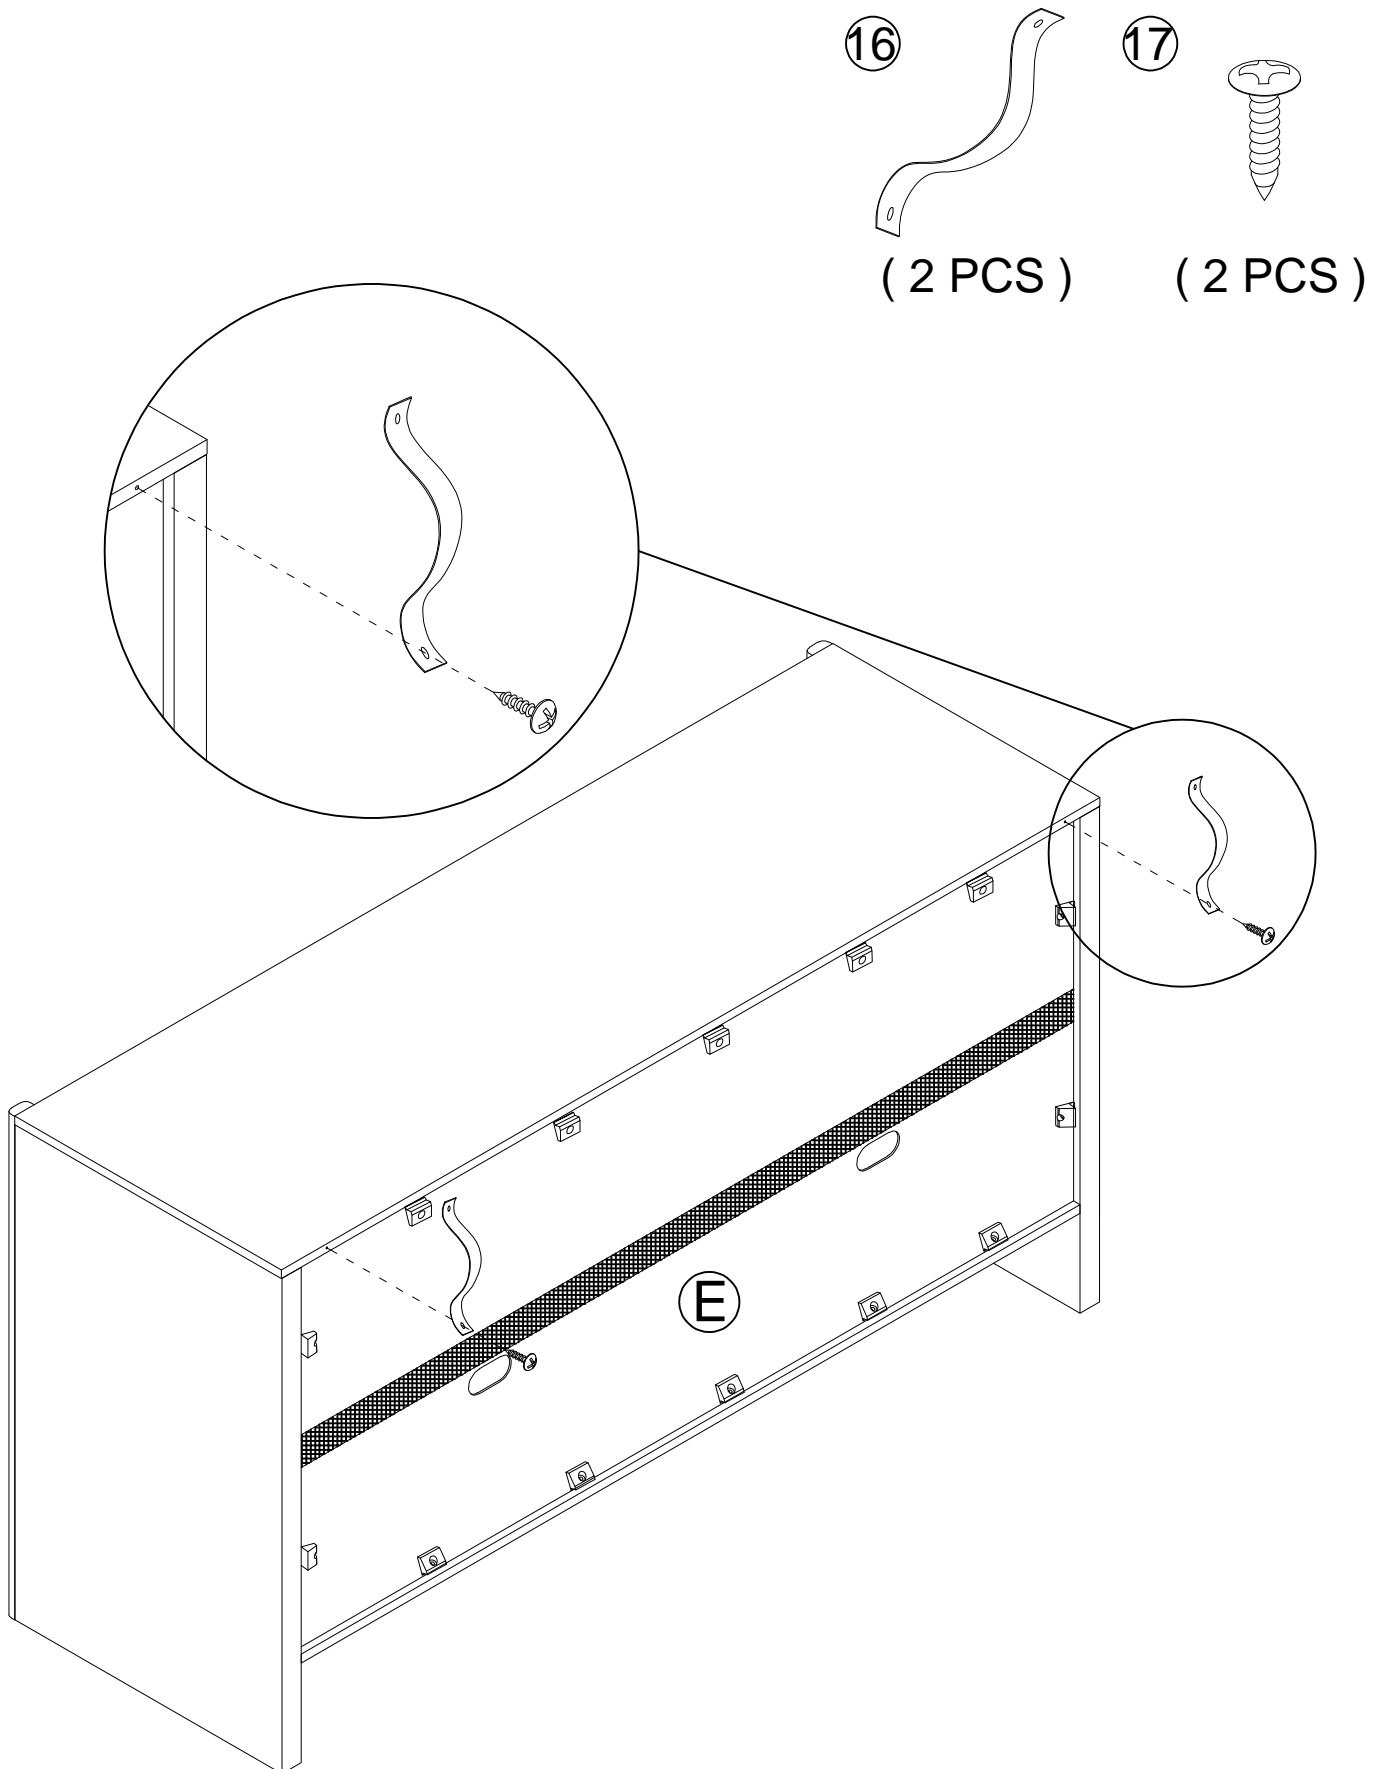

Step 14:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (19) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

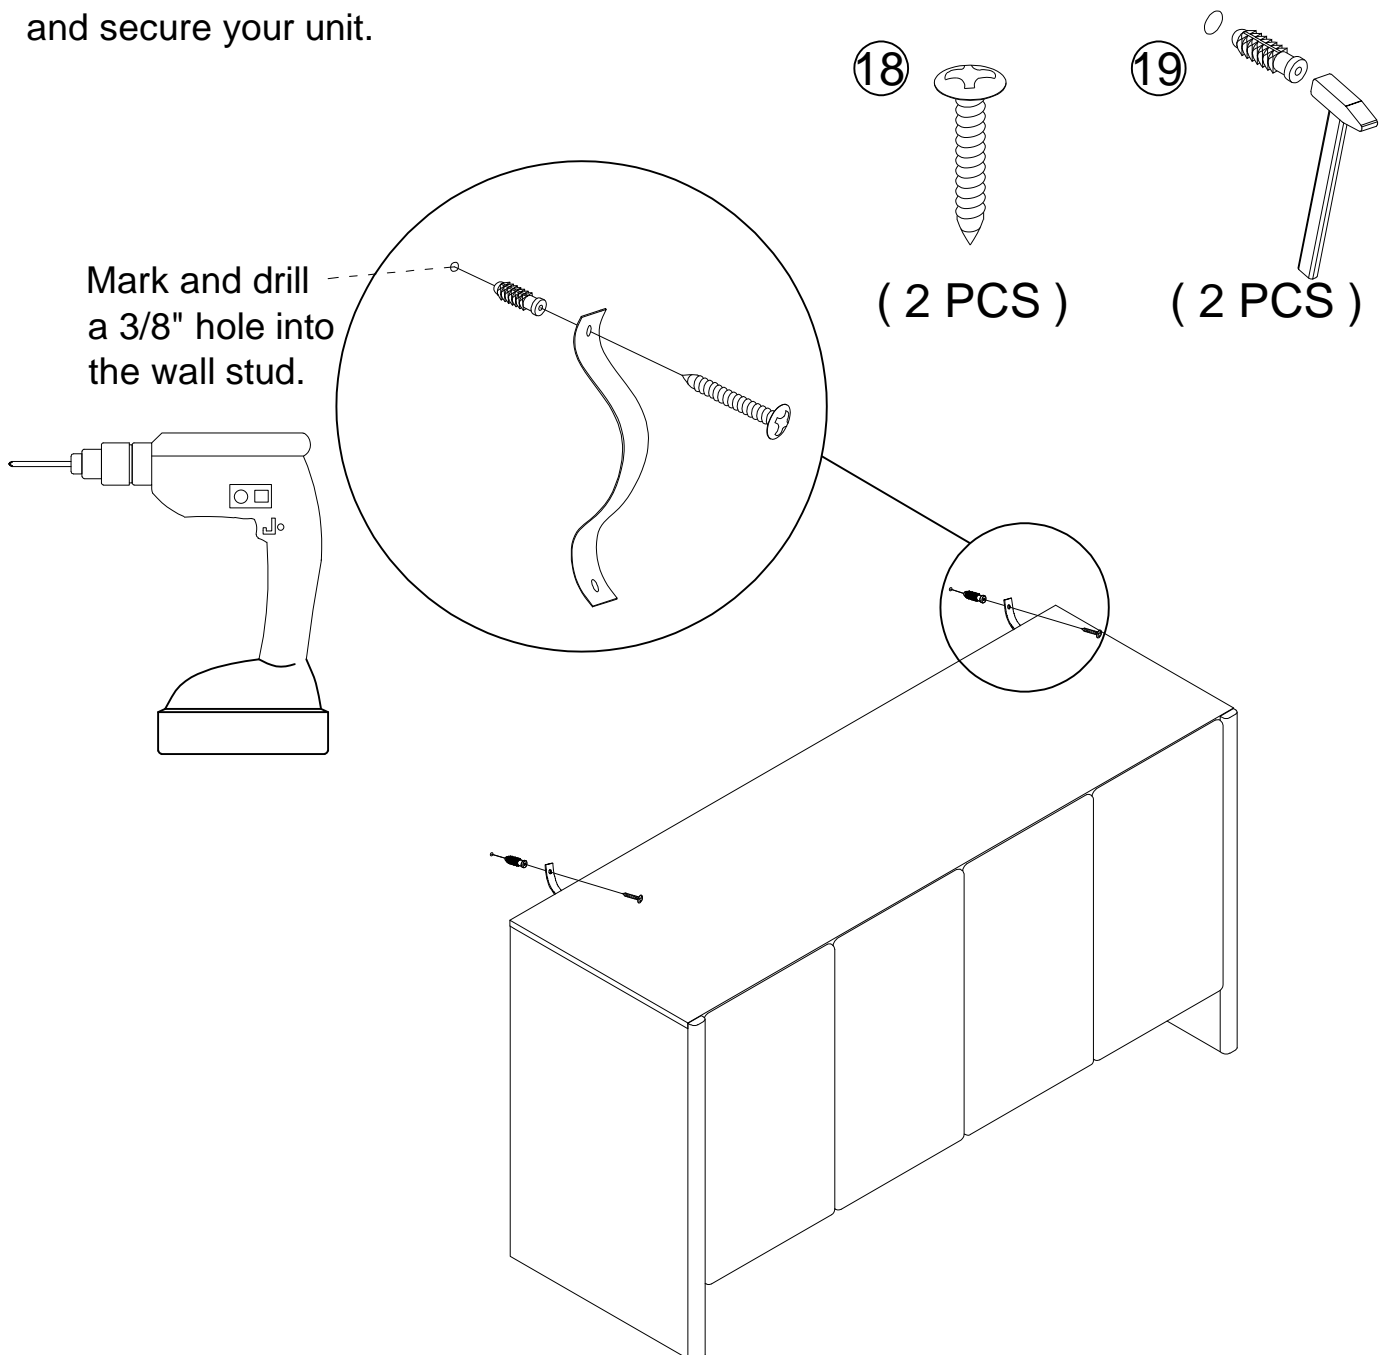



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818