



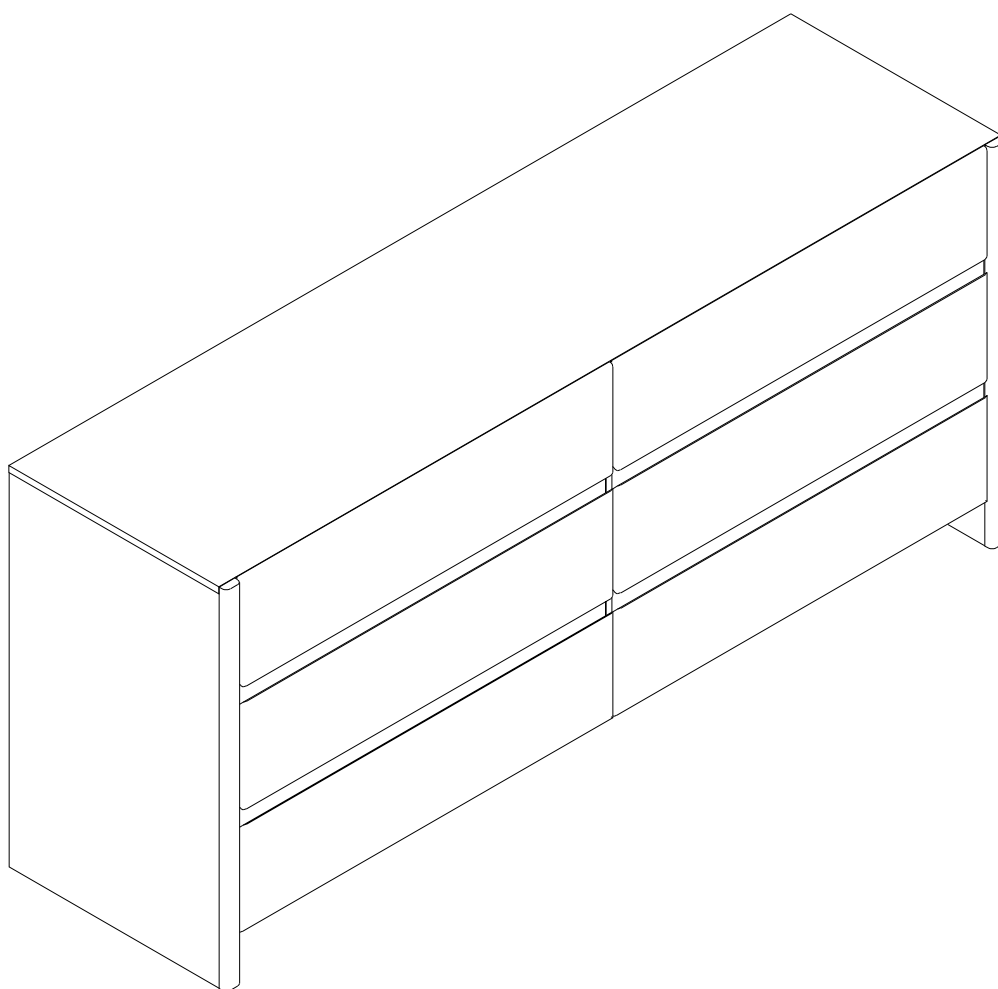

**MANHATTAN
COMFORT**

DR011



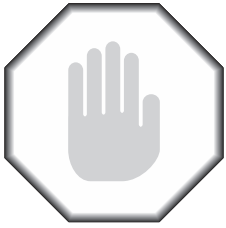


STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

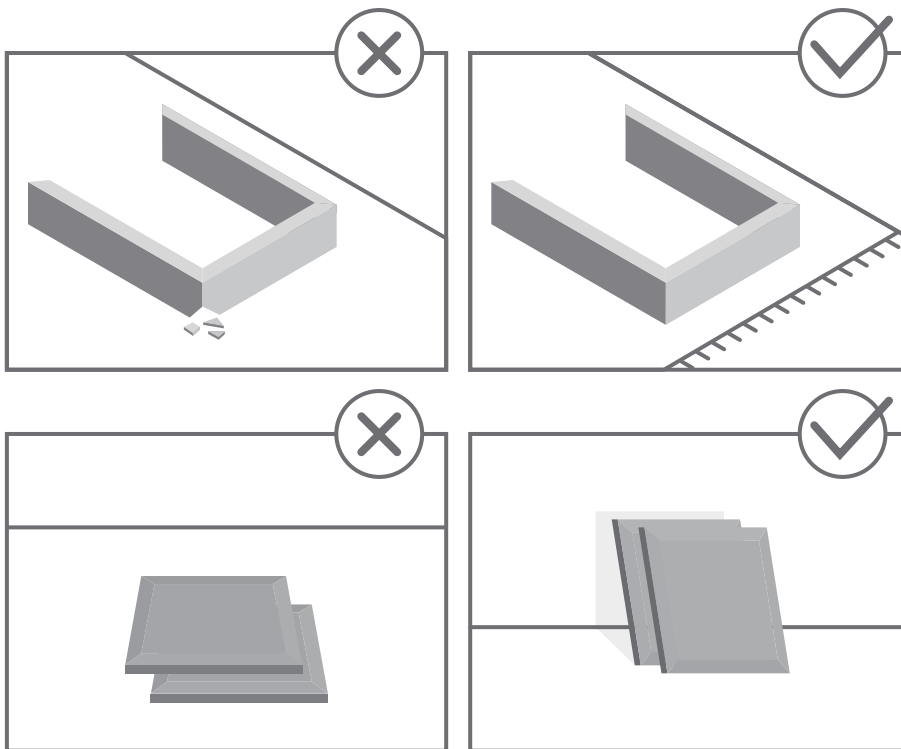

TOOLS REQUIRED

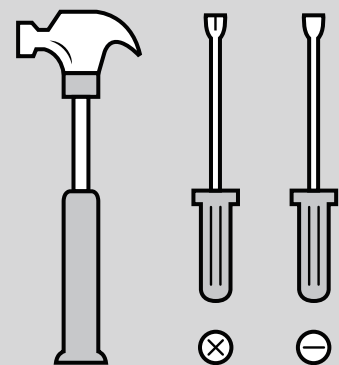

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site




Included in this package:

BOX 01/02

- B. BETWEEN PANEL(1)
 - C. LEFT PANEL (1)
 - D. RIGHT PANEL (1)
 - J. LOWER DRAWER LEFT PANEL (4)
 - K. LOWER DRAWER RIGHT PANEL (4)
 - O. DRAWER LEFT FRONT UPPER PANEL (1)
 - P. DRAWER RIGHT FRONT UPPER PANEL (1)
 - Q. DRAWER LEFT FRONT MIDDLE PANEL (1)
 - R. DRAWER RIGHT FRONT MIDDLE PANEL (1)
 - S. DRAWER LEFT FRONT LOWER PANEL (1)
 - T. DRAWER RIGHT FRONT LOWER PANEL (1)
 - U. UPPER DRAWER LEFT PANEL (2)
 - V. UPPER DRAWER RIGHT PANEL (2)
- ALL HARDWARE ARE IN **BOX 01/02**

BOX 02/02

- A. TOP PANEL(1)
- E. BACK UPPER PANEL (1)
- F. BACK LOWER PANEL (1)
- G. FRONT LEFT UPPER PANEL(2)
- H. FRONT RIGHT UPPER PANEL(2)
- I. FRONT LOWER PANEL (1)
- L. LOWER DRAWER BACK PANEL (4)
- M. DRAWER BOTTOM PANEL (6)
- N.DRAWER SUPPORT PANEL (12)
- W. UPPER DRAWER BACK PANEL (2)

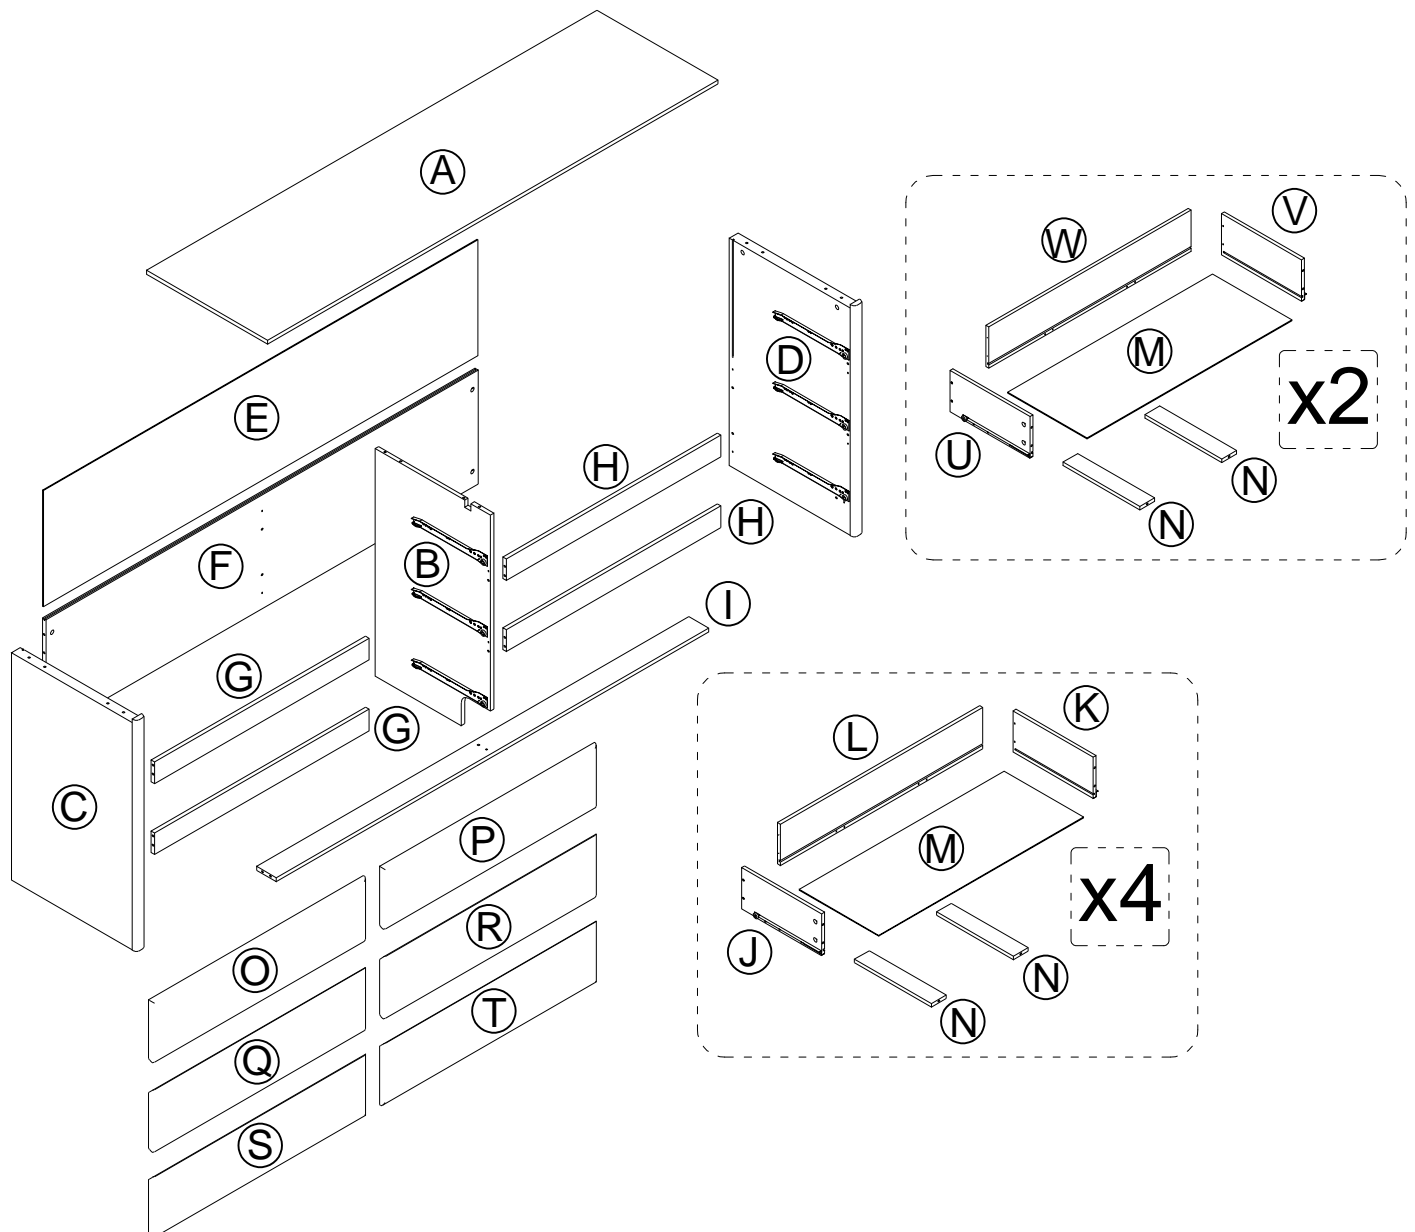


Hardware Identification


- ① KD BOLT - 58pcs
L=35mm




- ② KD LARGE CAM - 22pcs
Ø15*11mm




- ③ COVER CAP - 58pcs



- ④ WOOD DOWEL - 23pcs
Ø8*30mm




- ⑤ KD SMALL CAM - 36pcs
Ø15*9mm



- ⑥ SCREW - 48pcs
Ø4*38mm




- ⑦ LOCK - 1pc




- ⑧ SCREW - 1pc
Ø6*50mm




- ⑨ PLASTIC WEDGE - 10pcs




- ⑩ SCREW - 10pcs
Ø3*17mm




- ⑪ STRAPS - 2pcs

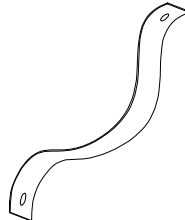

- ⑫ SCREW - 2pcs
Ø4*18mm




- ⑬ SCREW - 2pcs
Ø4*25mm




- ⑭ PLASTIC - 2pcs




- ⑮ SCREW - 6pcs
Ø4*40mm



- ⑯ METAL BAR - 1pc

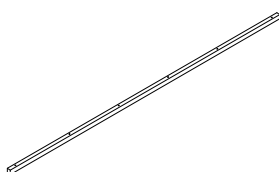


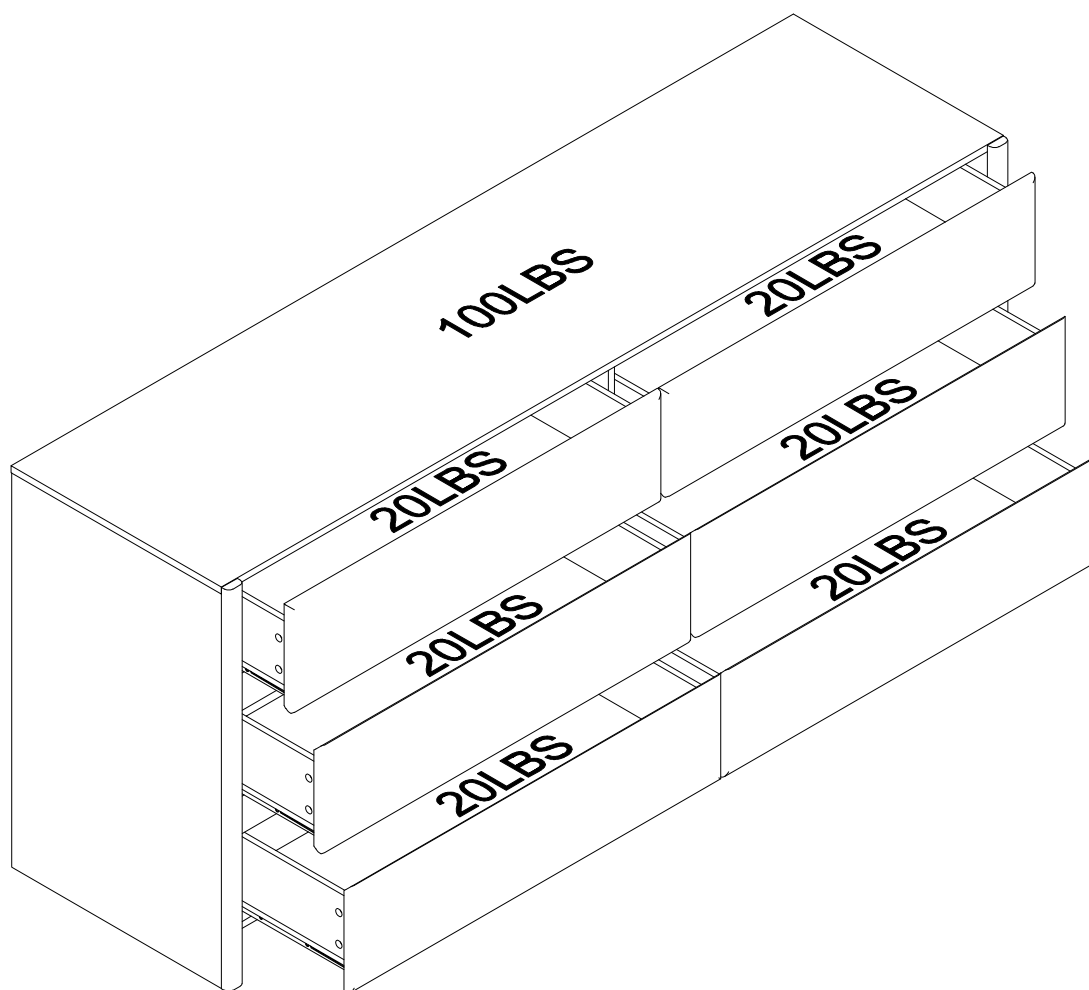

Step 1:




* Insert Eight KD BOLT (1) to the TOP PANEL (A) and BACK LOWER PANEL(F).

* Assemble the METAL BAR(16) to the TOP PANEL(A) by the SCREW (15) .

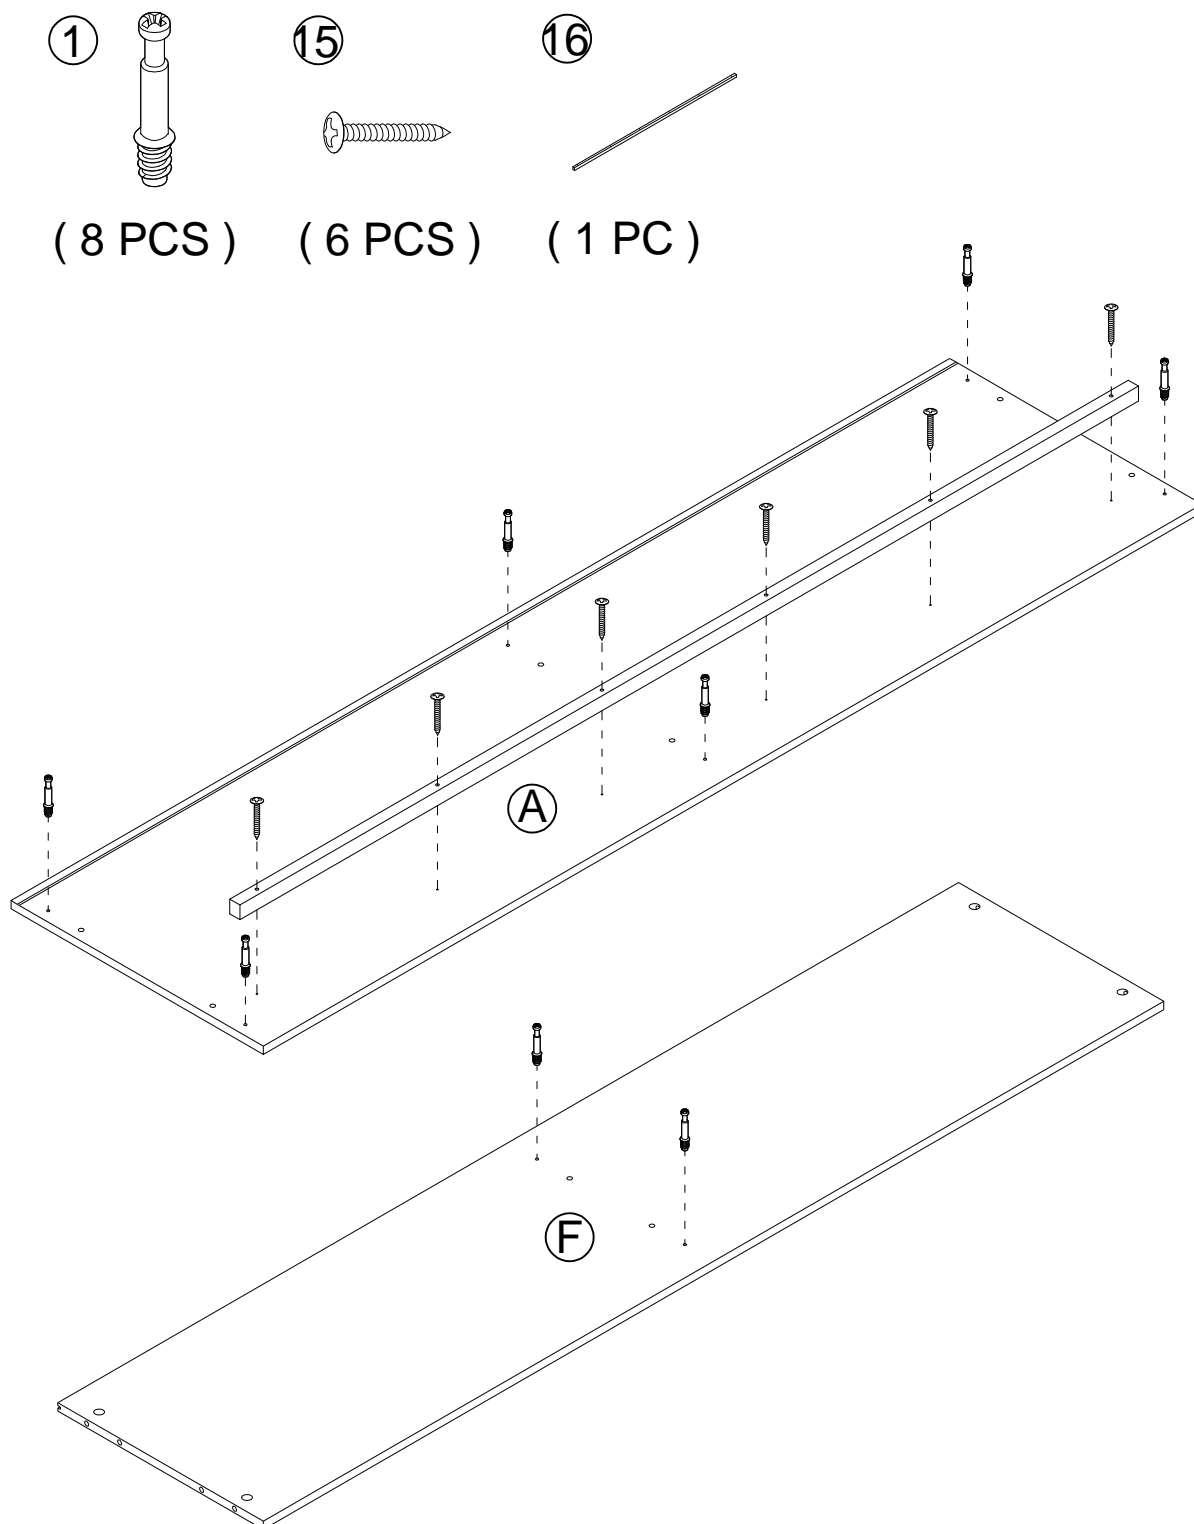

Step 2:


* Insert Ten KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL (D).

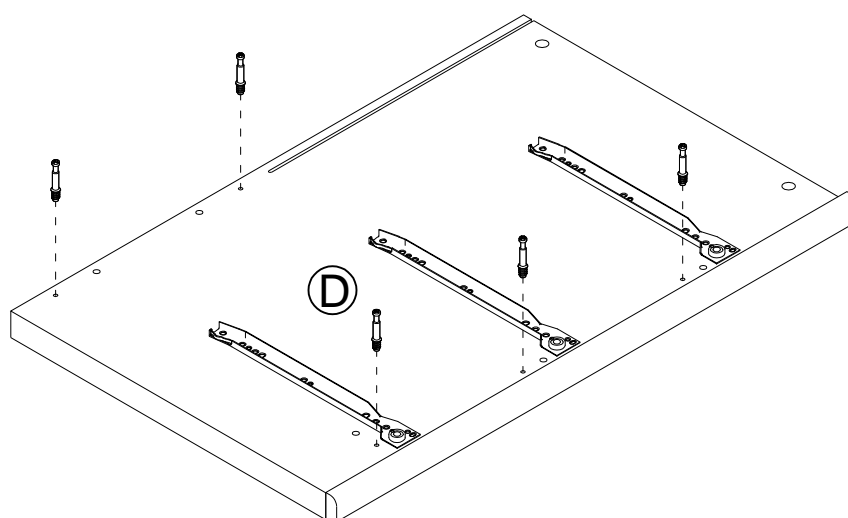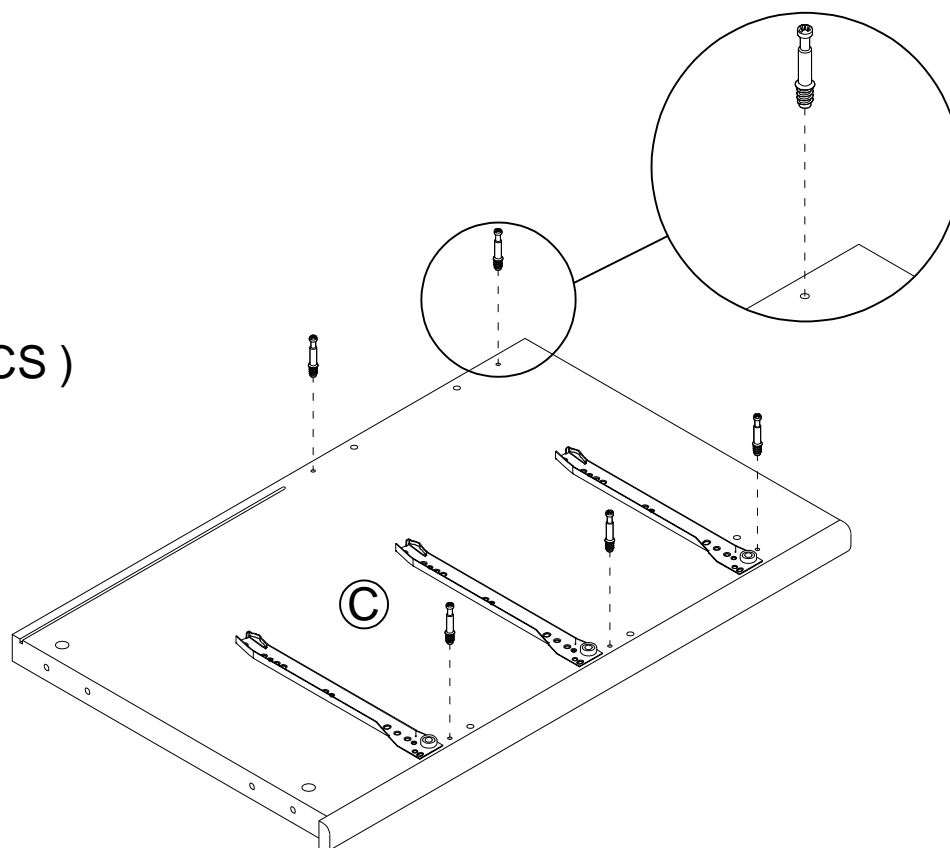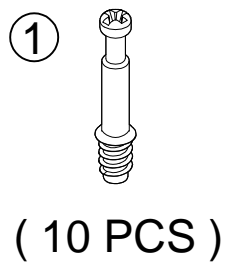


Step 3:

* Insert Four KD BOLT (1) to the both side of BETWEEN PANEL(B).

①




(4 PCS)

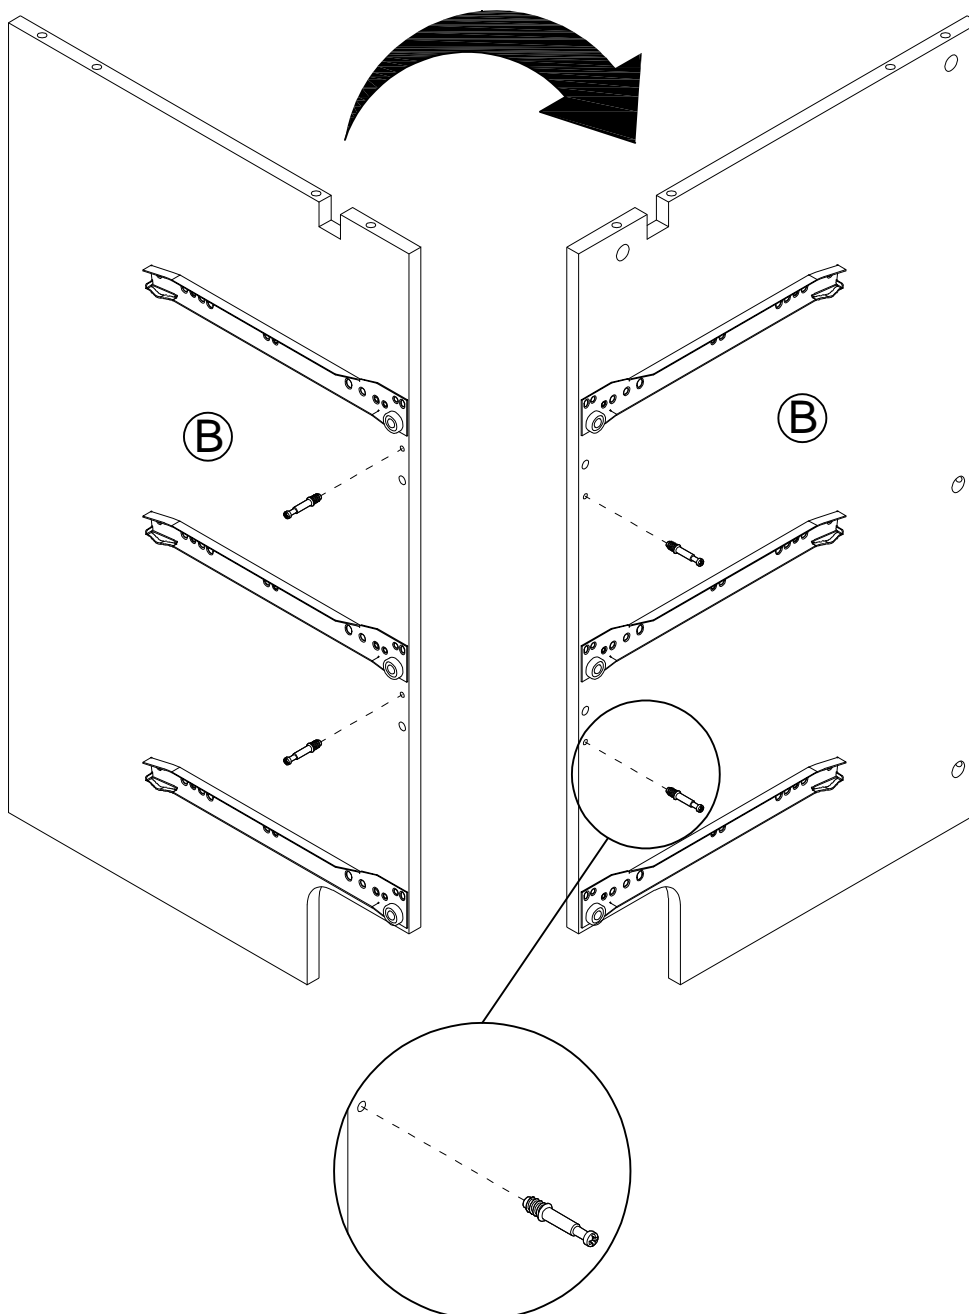

Step 4:


* Attach the BETWEEN PANEL(B) to the BACK LOWER PANEL(F) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

②




(2 PCS)

③






(2 PCS)

④





(2 PCS)

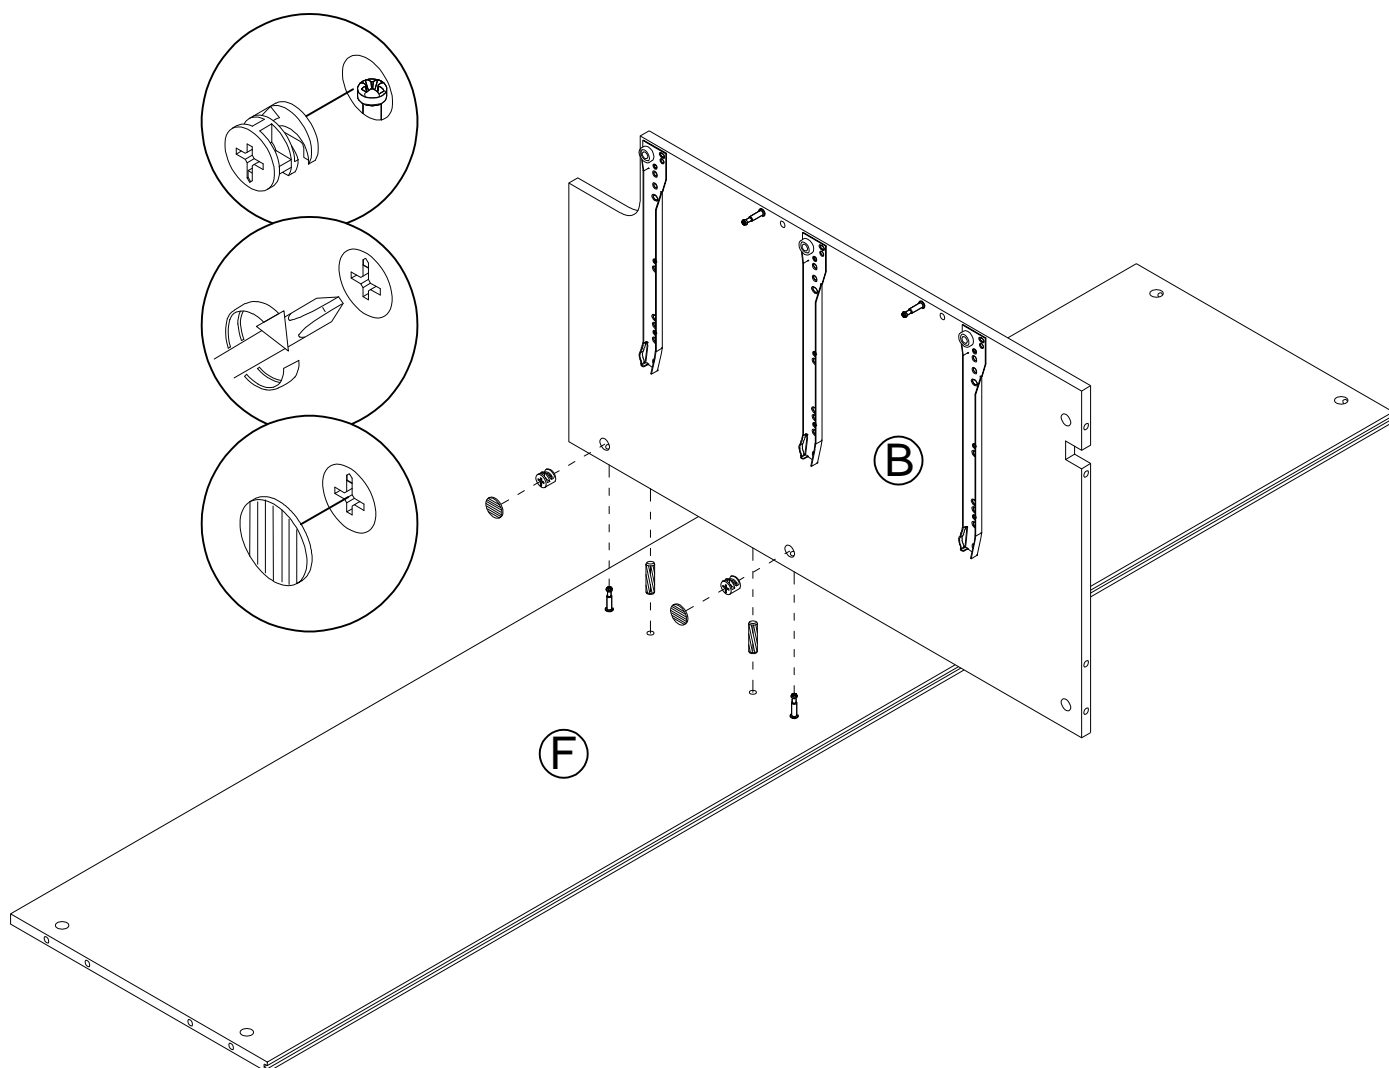

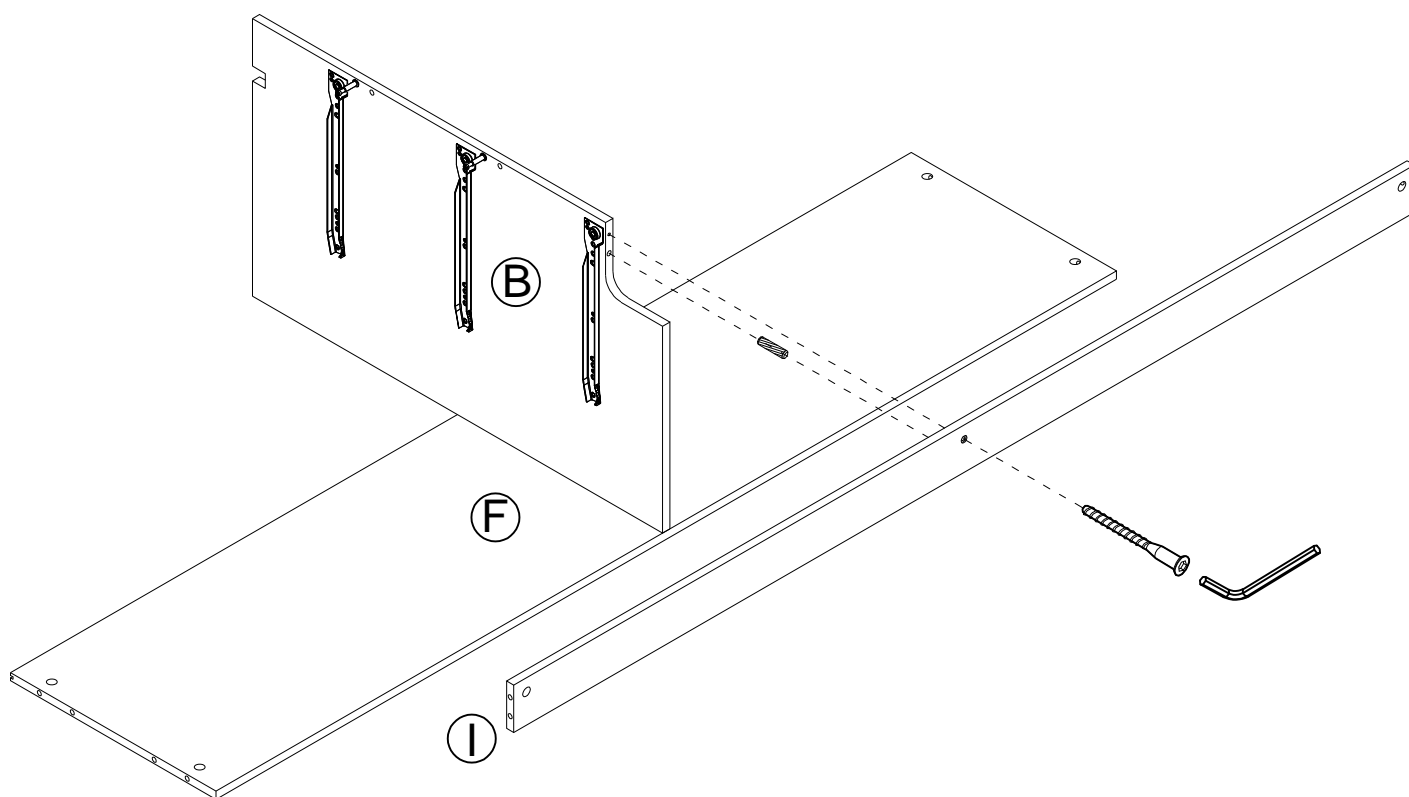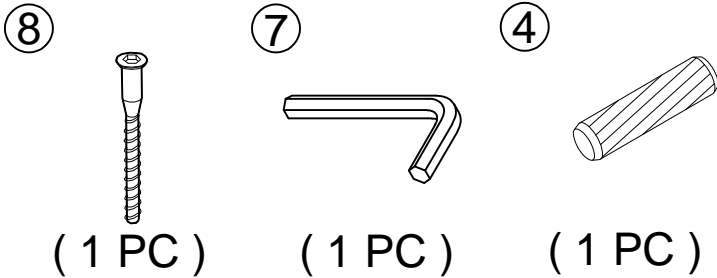

Step 6:


* Attach the Two FRONT LEFT UPPER PANEL(G) to the BETWEEN PANEL(B) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

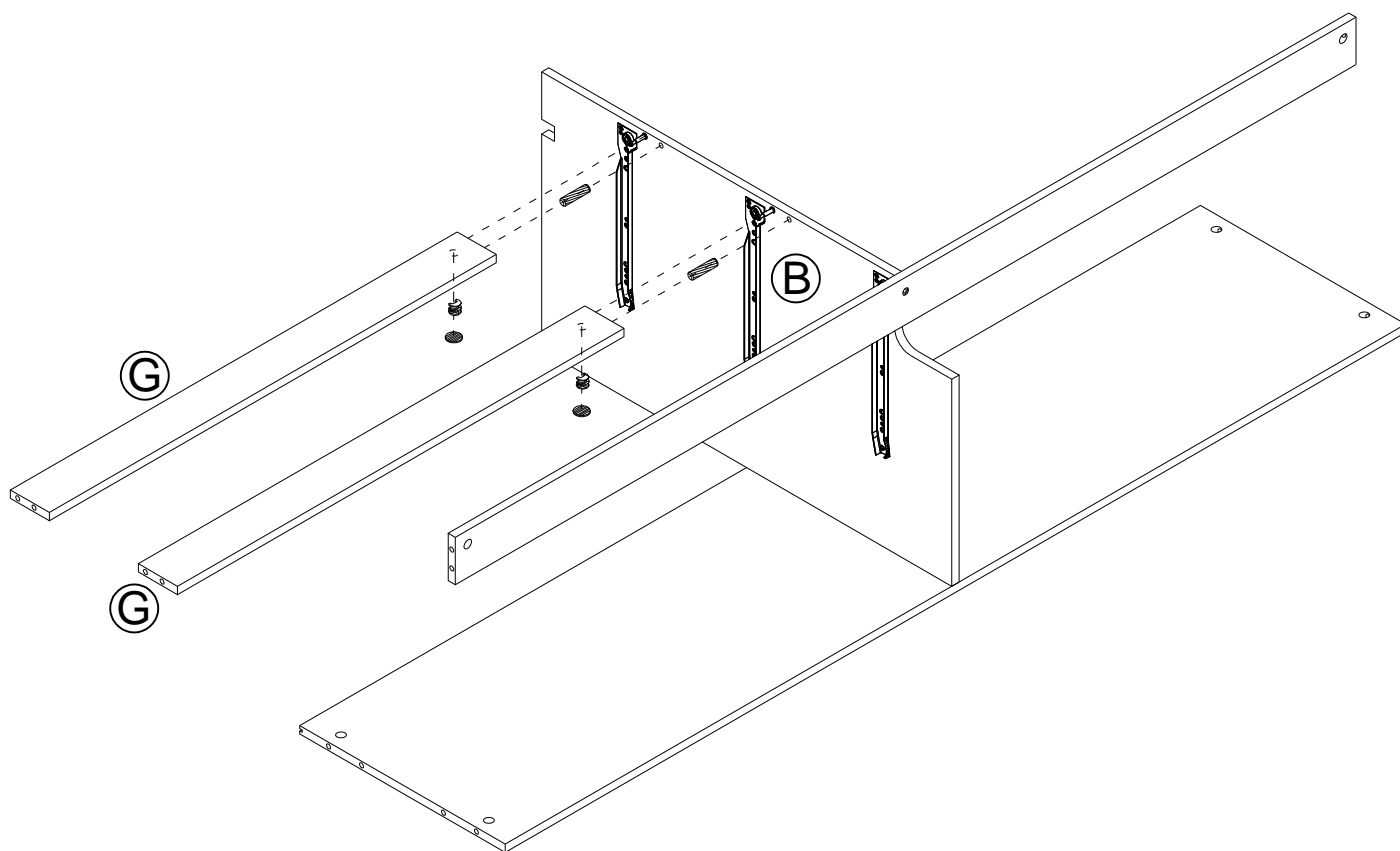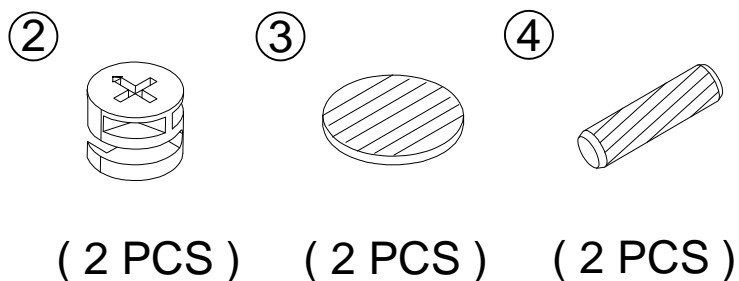

Step 7:


* Attach the LEFT PANEL (C) to the Two FRONT LEFT UPPER PANEL(G) , FRONT LOWER PANEL (I) and BACK LOWER PANEL(F) by the Five KD LARGE CAM (2) , Five COVER CAP (3) and Five WOOD DOWEL (4) .

②




(5 PCS)

③




(5 PCS)

④





(5 PCS)

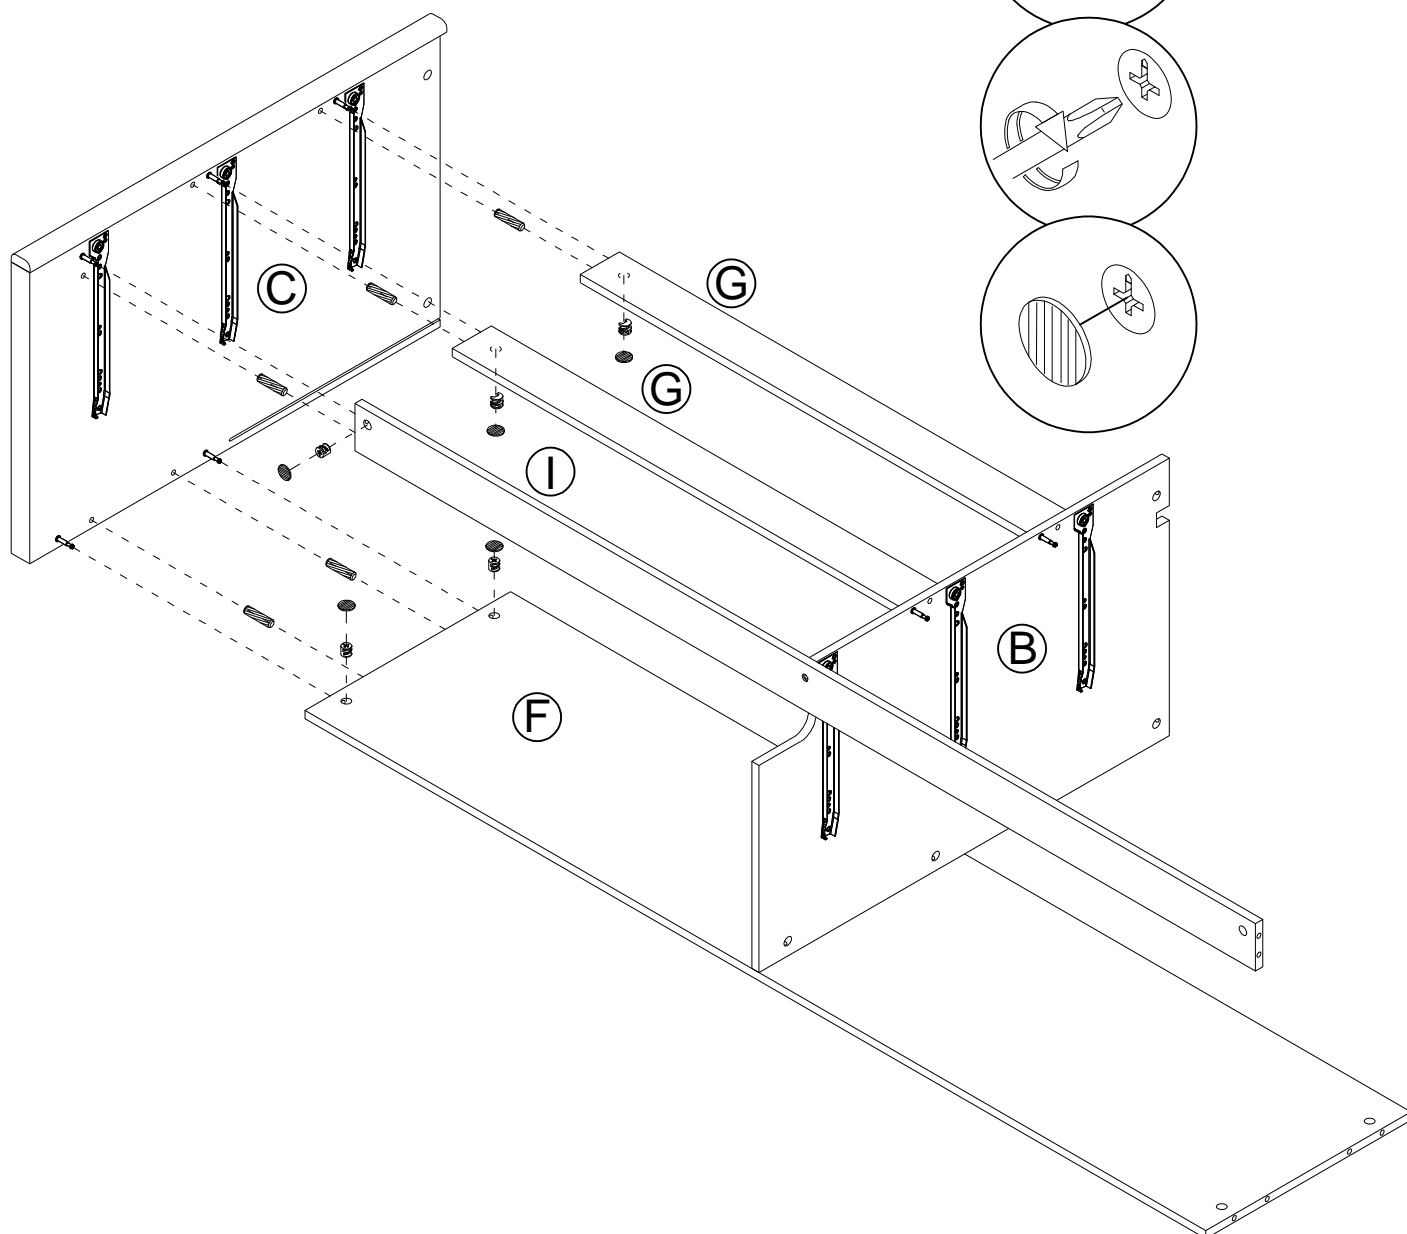



Step 8:

* Attach the Two FRONT RIGHT UPPER PANEL(H) to the BETWEEN PANEL(B) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

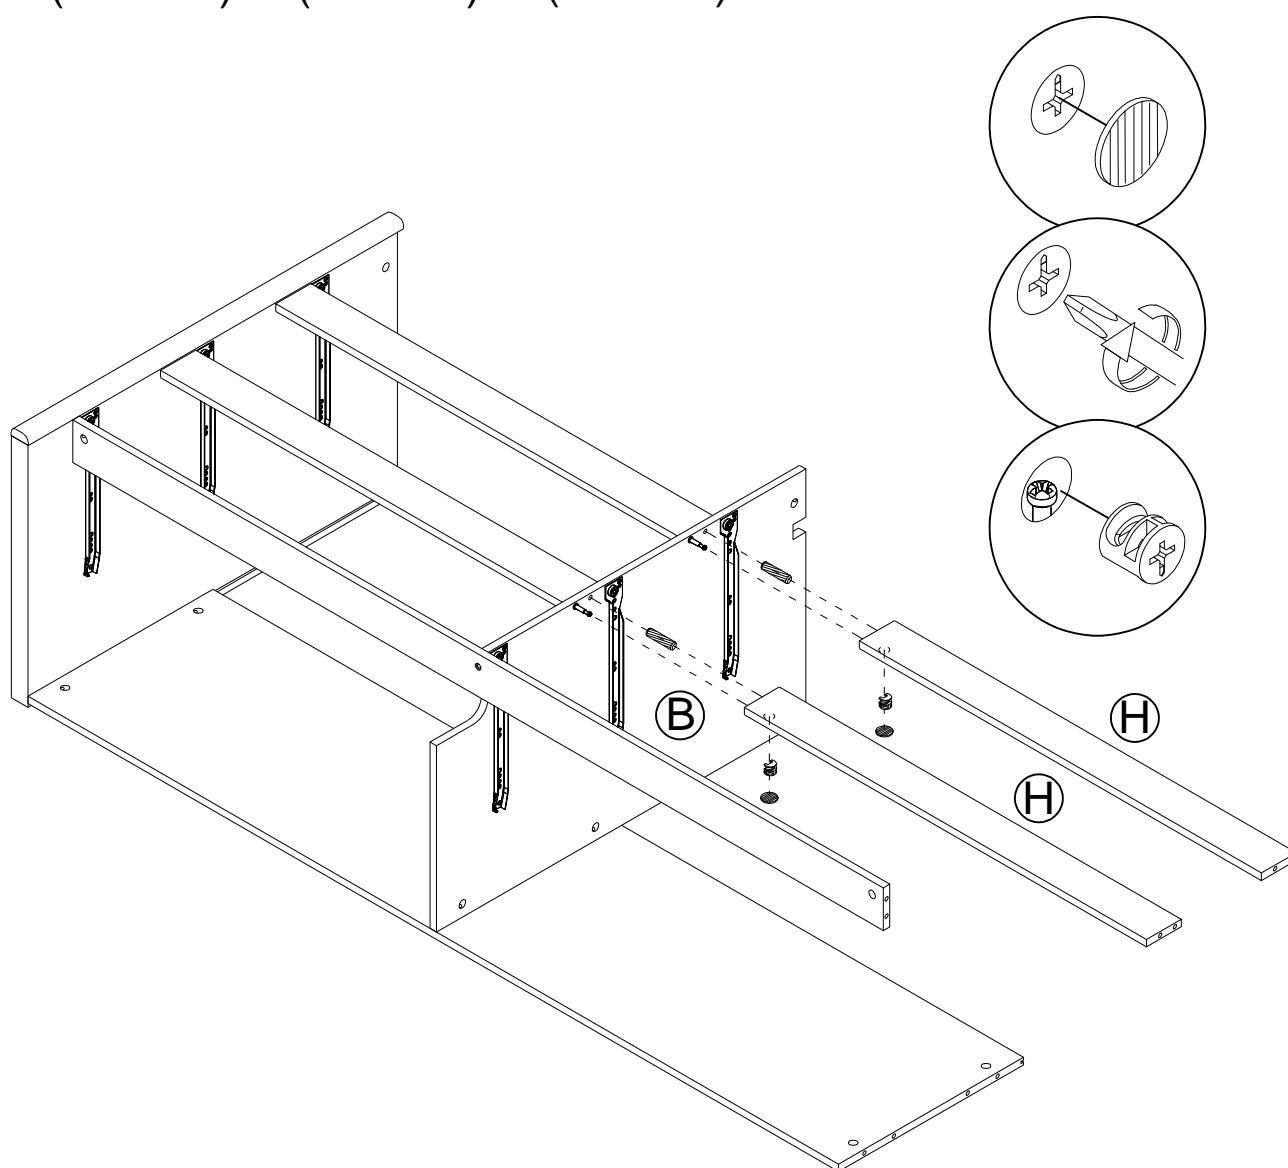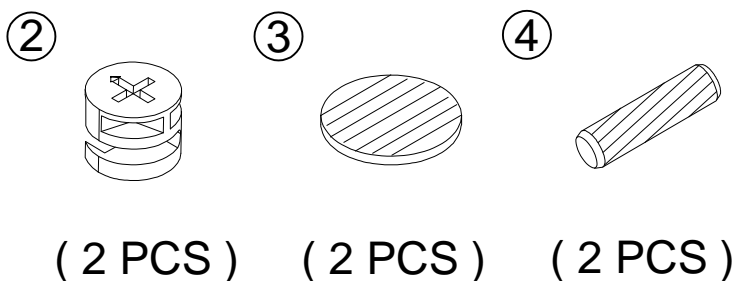


Step 9:

* Attach the RIGHT PANEL (D) to the Two FRONT RIGHT UPPER PANEL(H) , FRONT LOWER PANEL (I) and BACK LOWER PANEL(F) by the Five KD LARGE CAM (2) , Five COVER CAP (3) and Five WOOD DOWEL (4) .

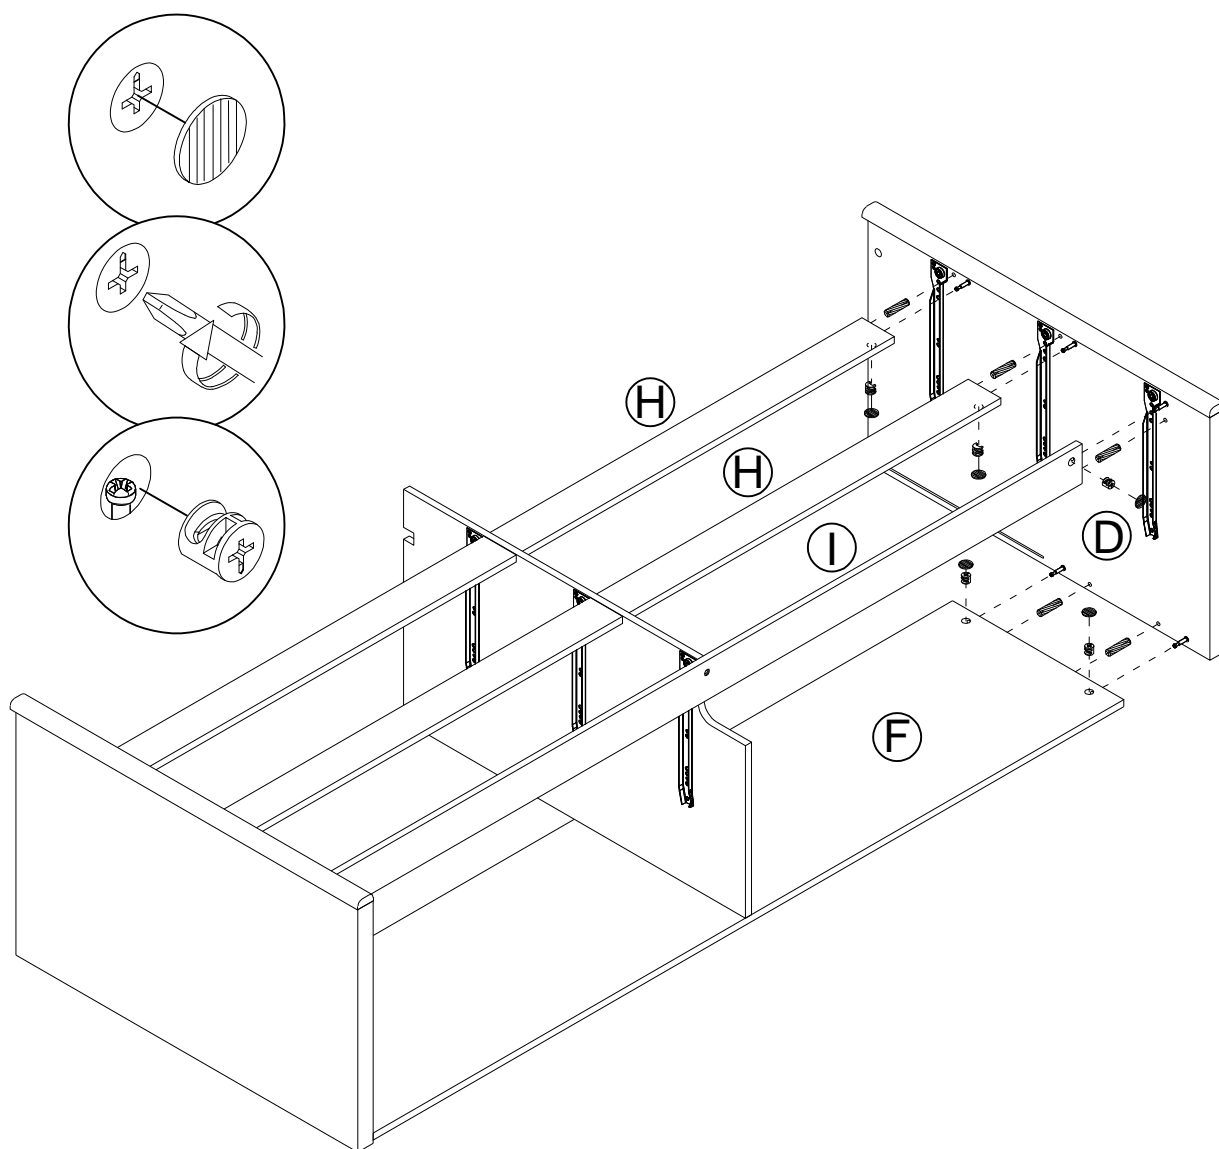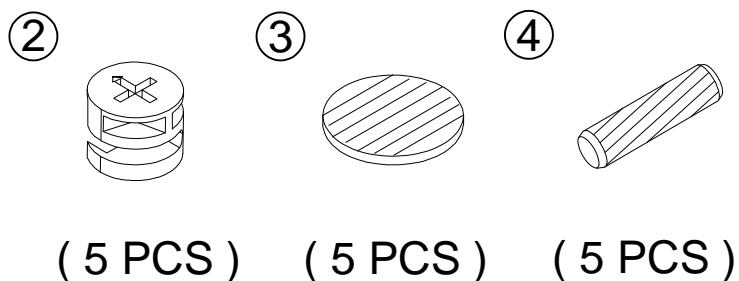



Step 10:

* Insert the BACK UPPER PANEL(E) to the stand.

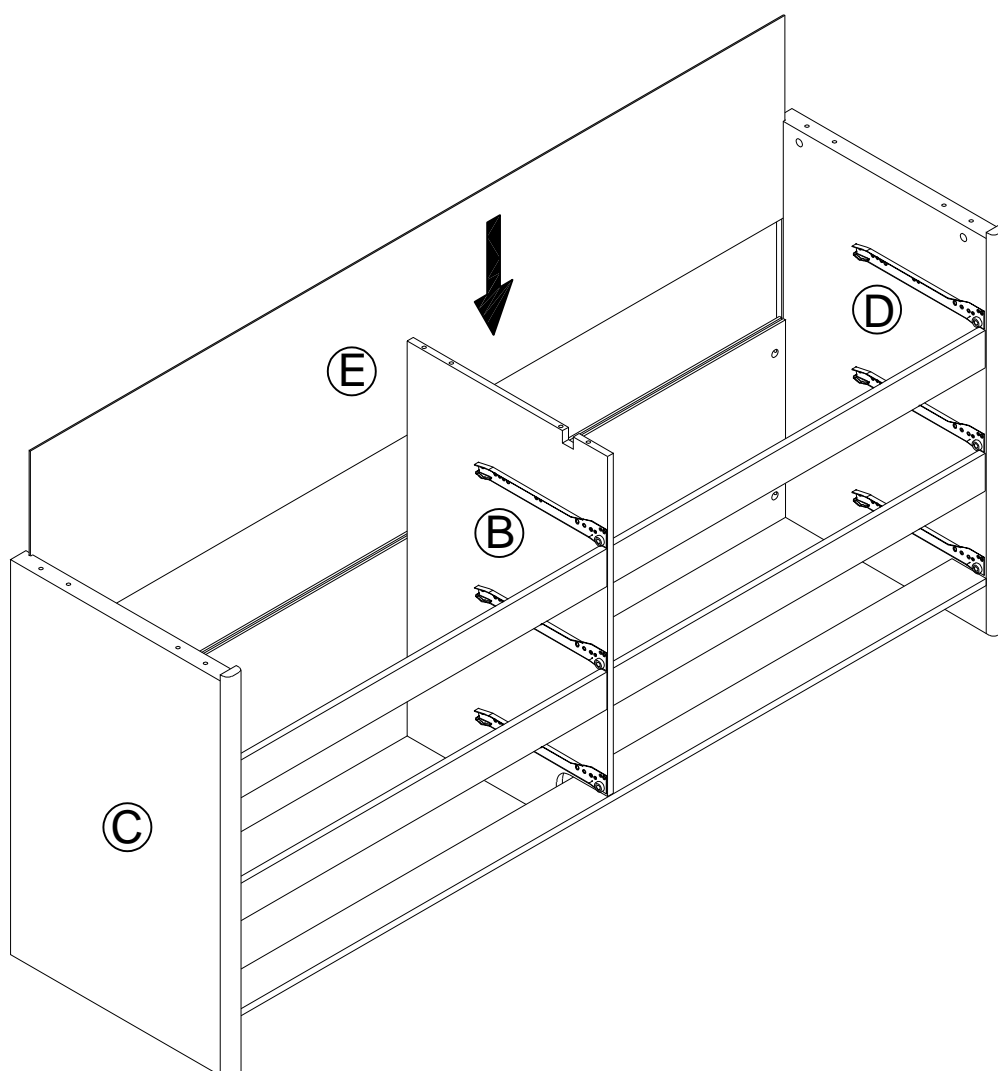

Step 11:


* Attach the TOP PANEL(A) to the LEFT PANEL(C), RIGHT PANEL(D), BETWEEN PANEL (B) by the Six KD LARGE CAM (2) , Six COVER CAP (3) and Six WOOD DOWEL (4) .

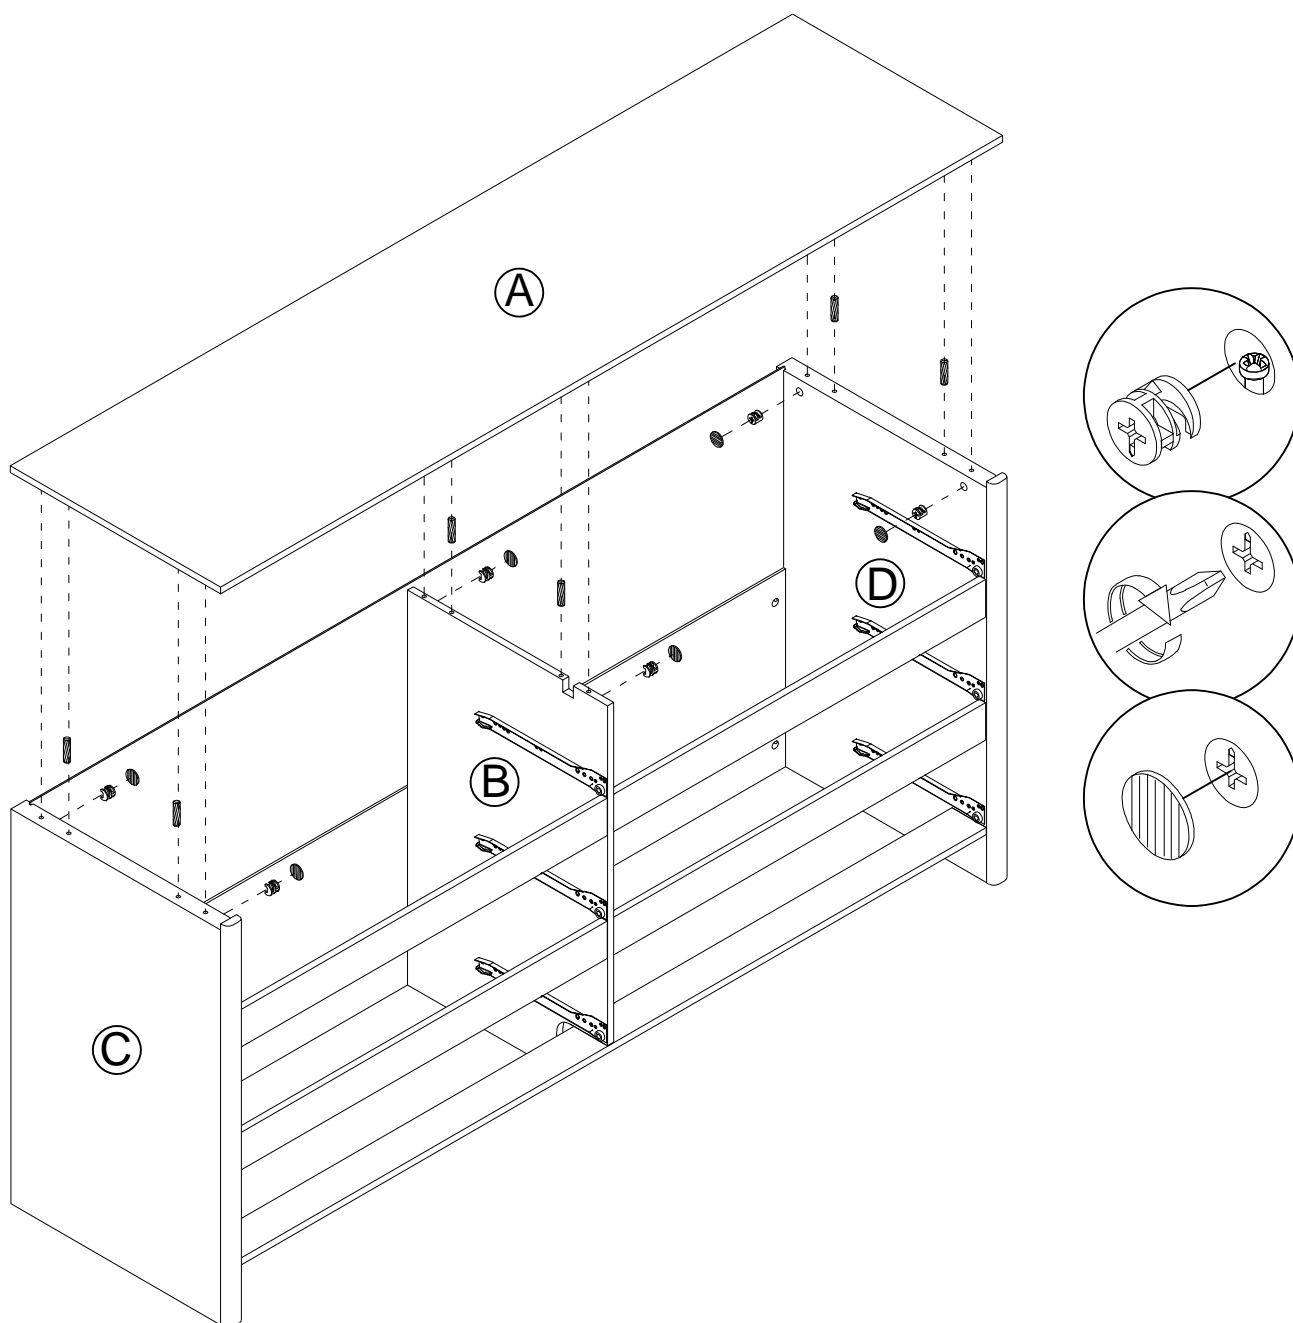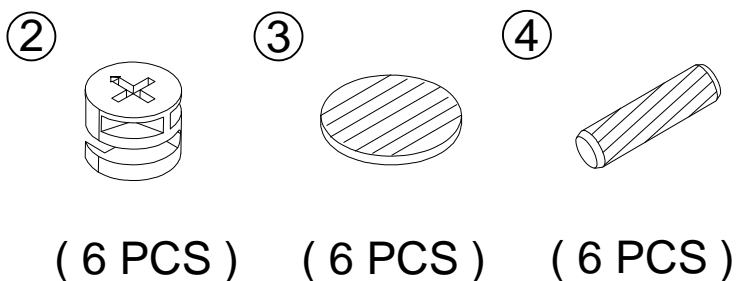

Step 12:


* Insert Ten PLASTIC WEDGE(9) and Ten SCREW(10) to the BACK UPPER PANEL(E).

⑨




(10 PCS)

⑩




(10 PCS)

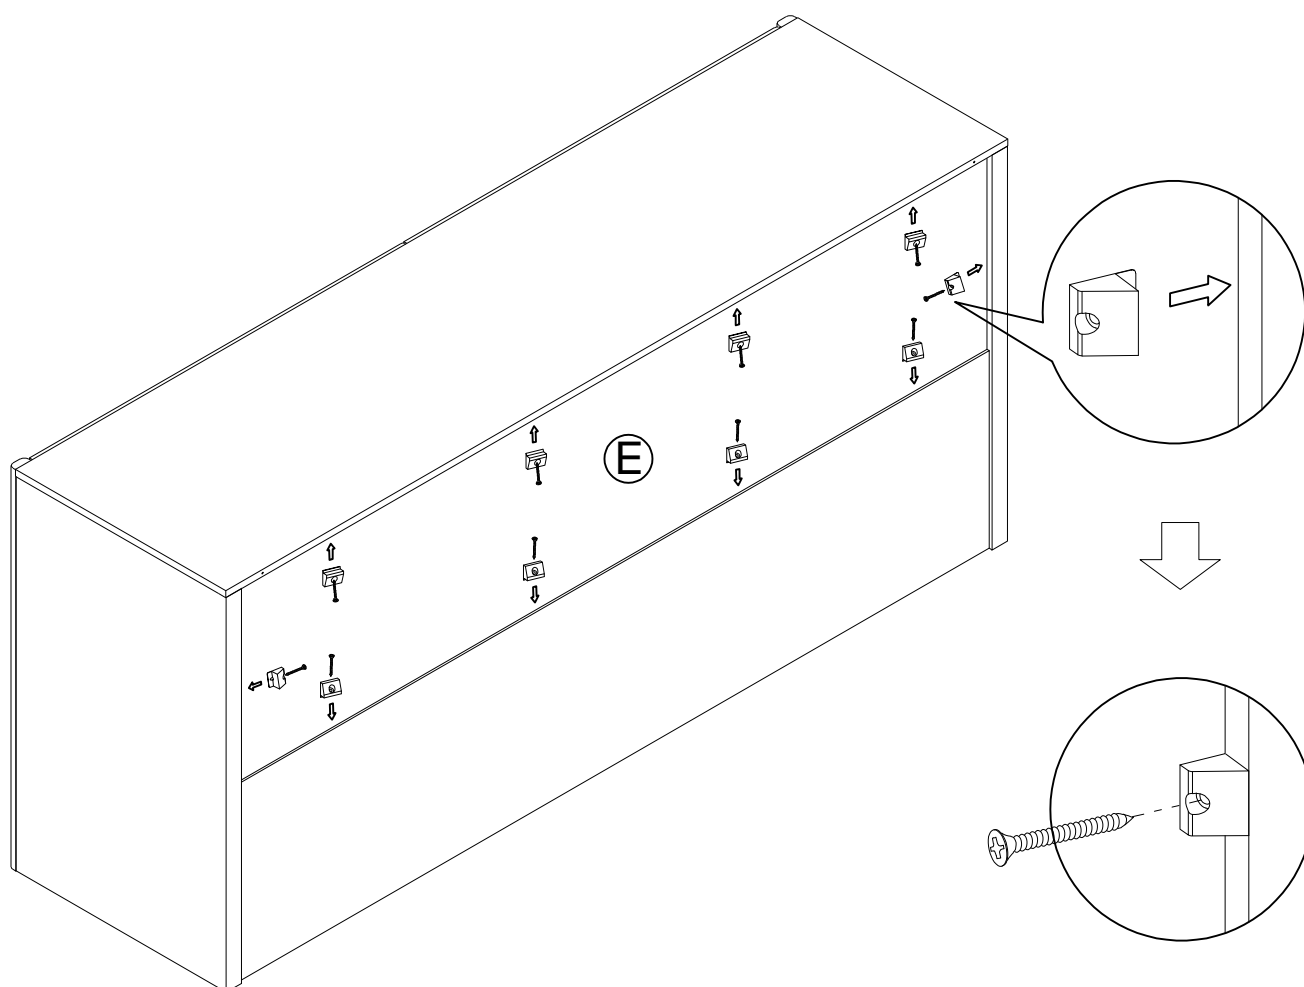


Step 13:

* Assemble the LOWER DRAWER BACK PANEL(L) to the LOWER DRAWER LEFT PANEL (J) and LOWER DRAWER RIGHT PANEL (K) by the SCREW (6) .

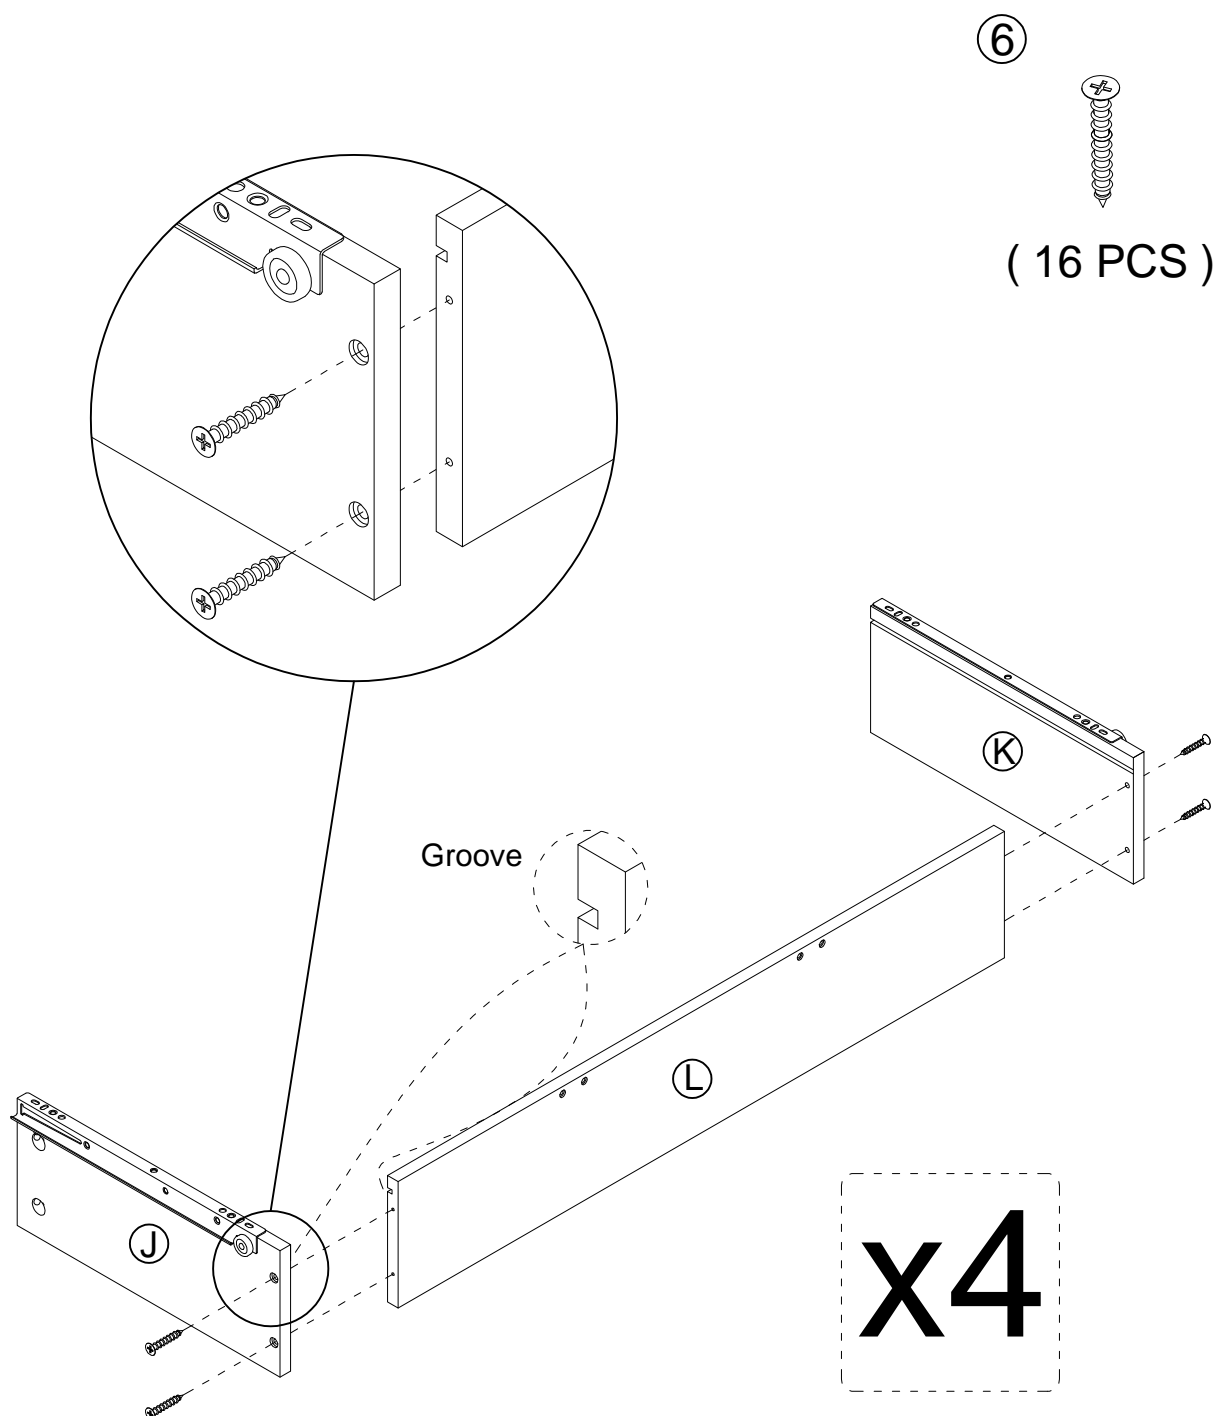


Step 14:

- * Slide in the DRAWER BOTTOM PANEL (M).
- * Assemble the Two DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (6) .

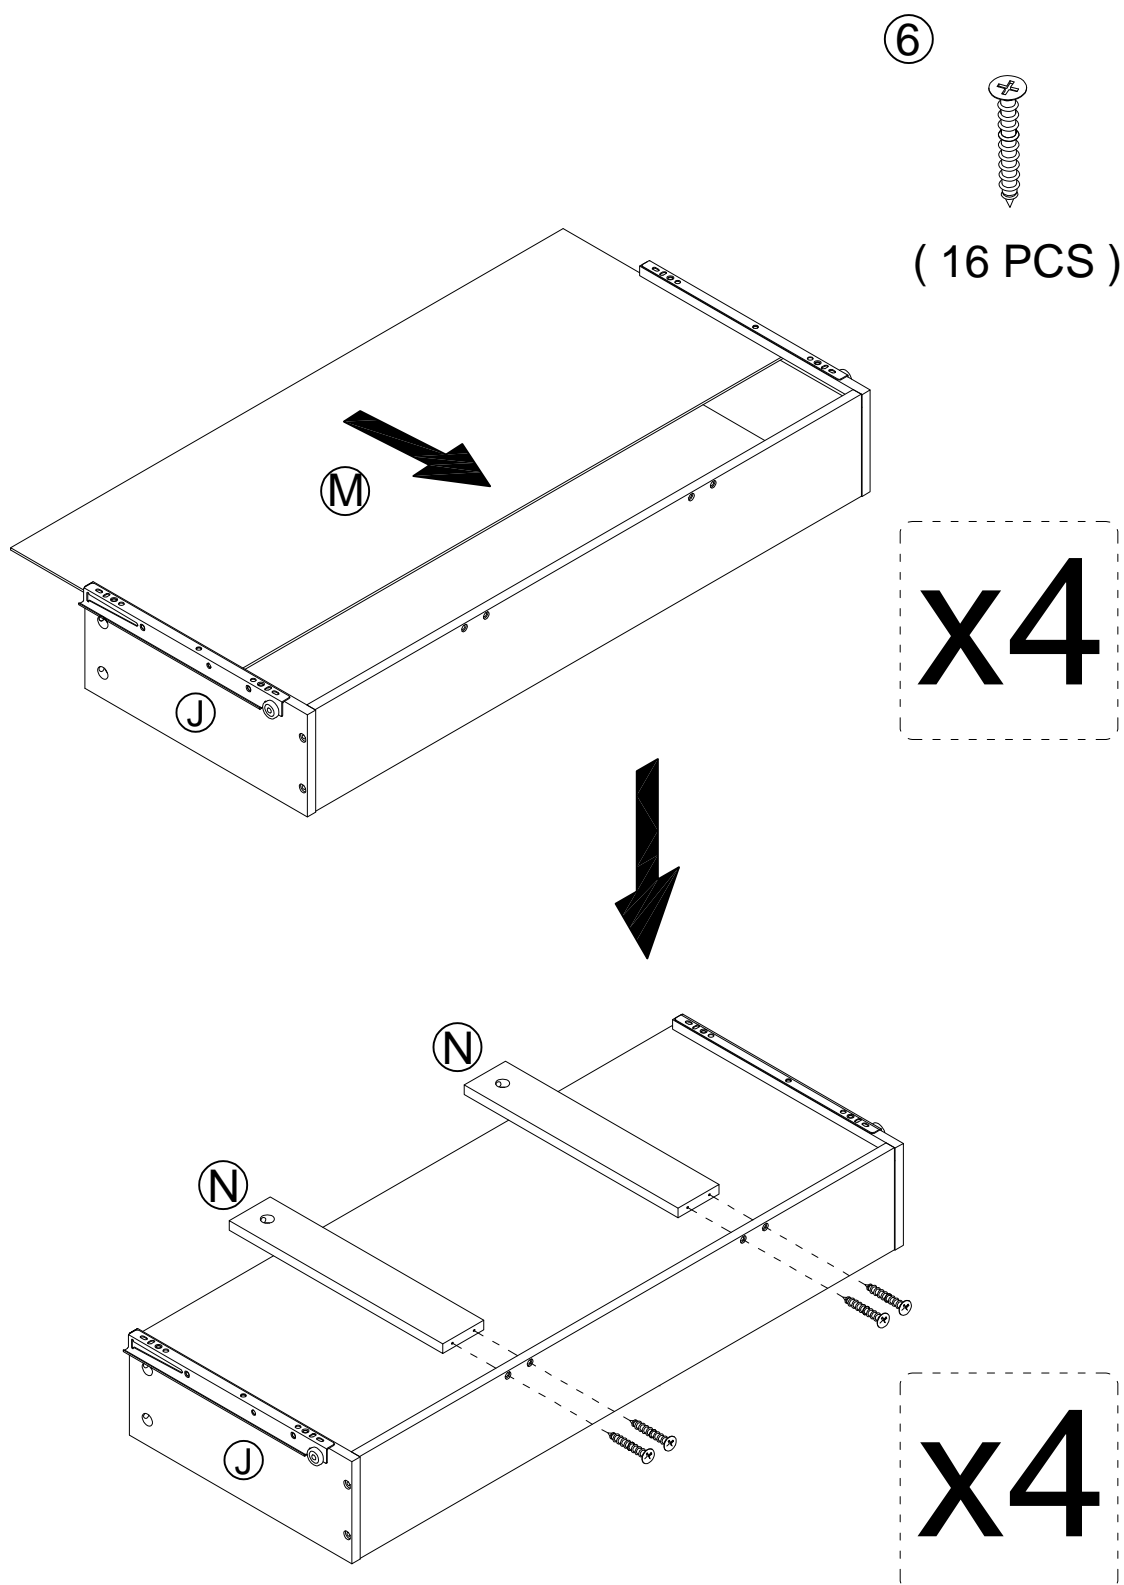


Step 15:

* Assemble the UPPER DRAWER BACK PANEL(W) to the UPPER DRAWER LEFT PANEL (U) and UPPER DRAWER RIGHT PANEL (V) by the SCREW (6) .

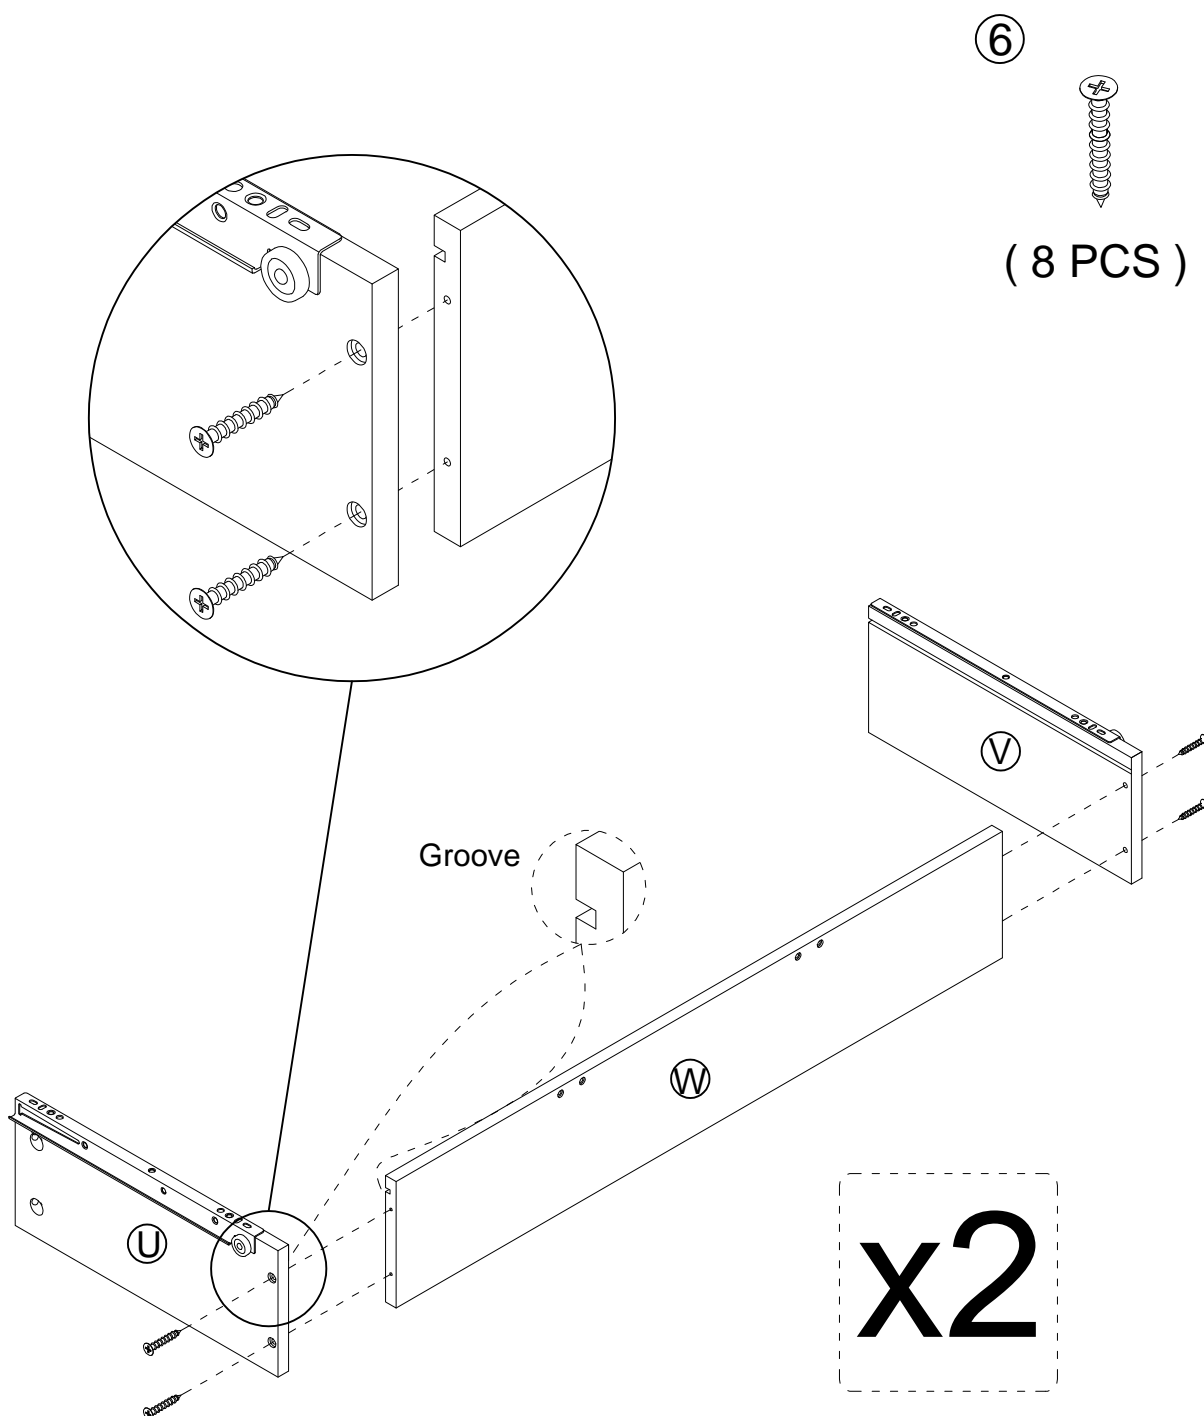


Step 16:

- * Slide in the DRAWER BOTTOM PANEL (M).
- * Assemble the Two DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (6) .

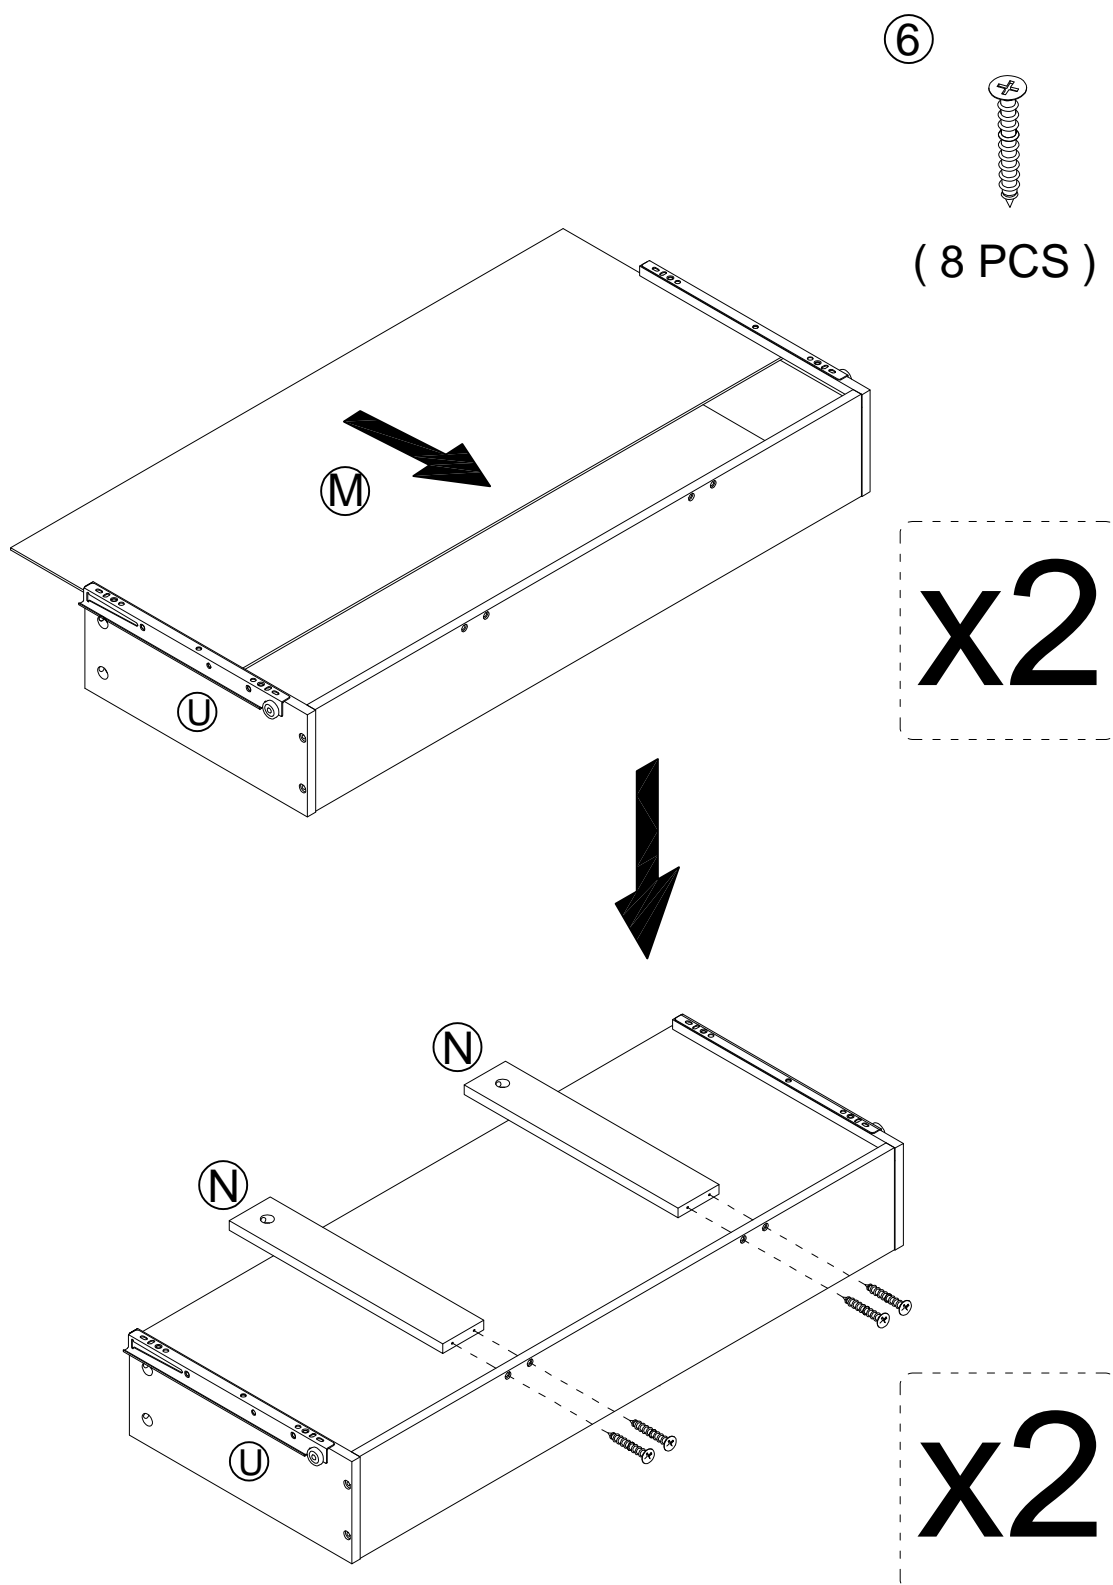

Step 17:

* Insert Thirty-Six KD BOLT (1) to the DRAWER LEFT FRONT UPPER PANEL (O), DRAWER RIGHT FRONT UPPER PANEL (P), DRAWER LEFT FRONT MIDDLE PANEL (Q), DRAWER RIGHT FRONT MIDDLE PANEL (R), DRAWER LEFT FRONT LOWER PANEL (S), DRAWER RIGHT FRONT LOWER PANEL (T).

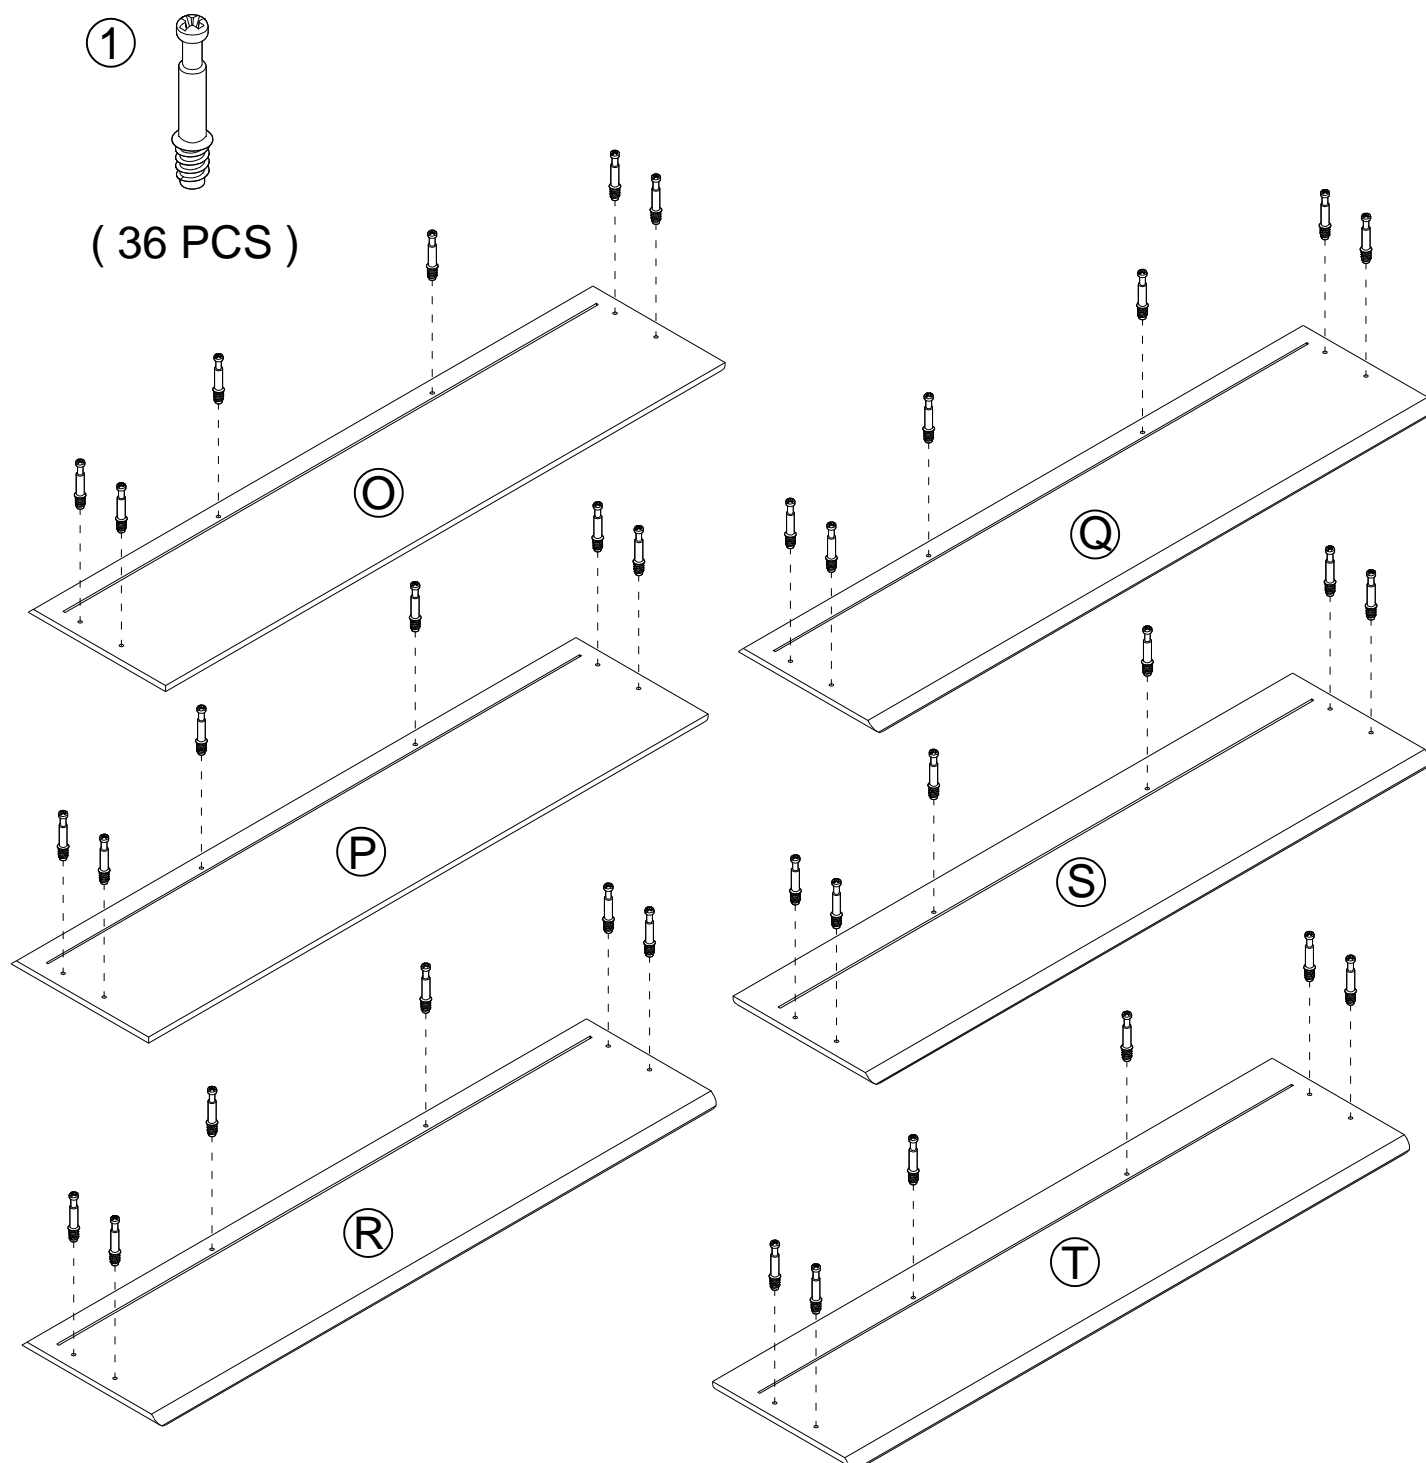


Step 18:

* Assemble the DRAWER LEFT FRONT MIDDLE PANEL (Q), DRAWER RIGHT FRONT MIDDLE PANEL (R), DRAWER LEFT FRONT LOWER PANEL (S), DRAWER RIGHT FRONT LOWER PANEL (T) to the Four LOWER DRAWER TRAY by the Twenty-four KD SMALL CAM (5) and Twenty-four COVER CAP (3).


⑤



③



(24 PCS) (24 PCS)

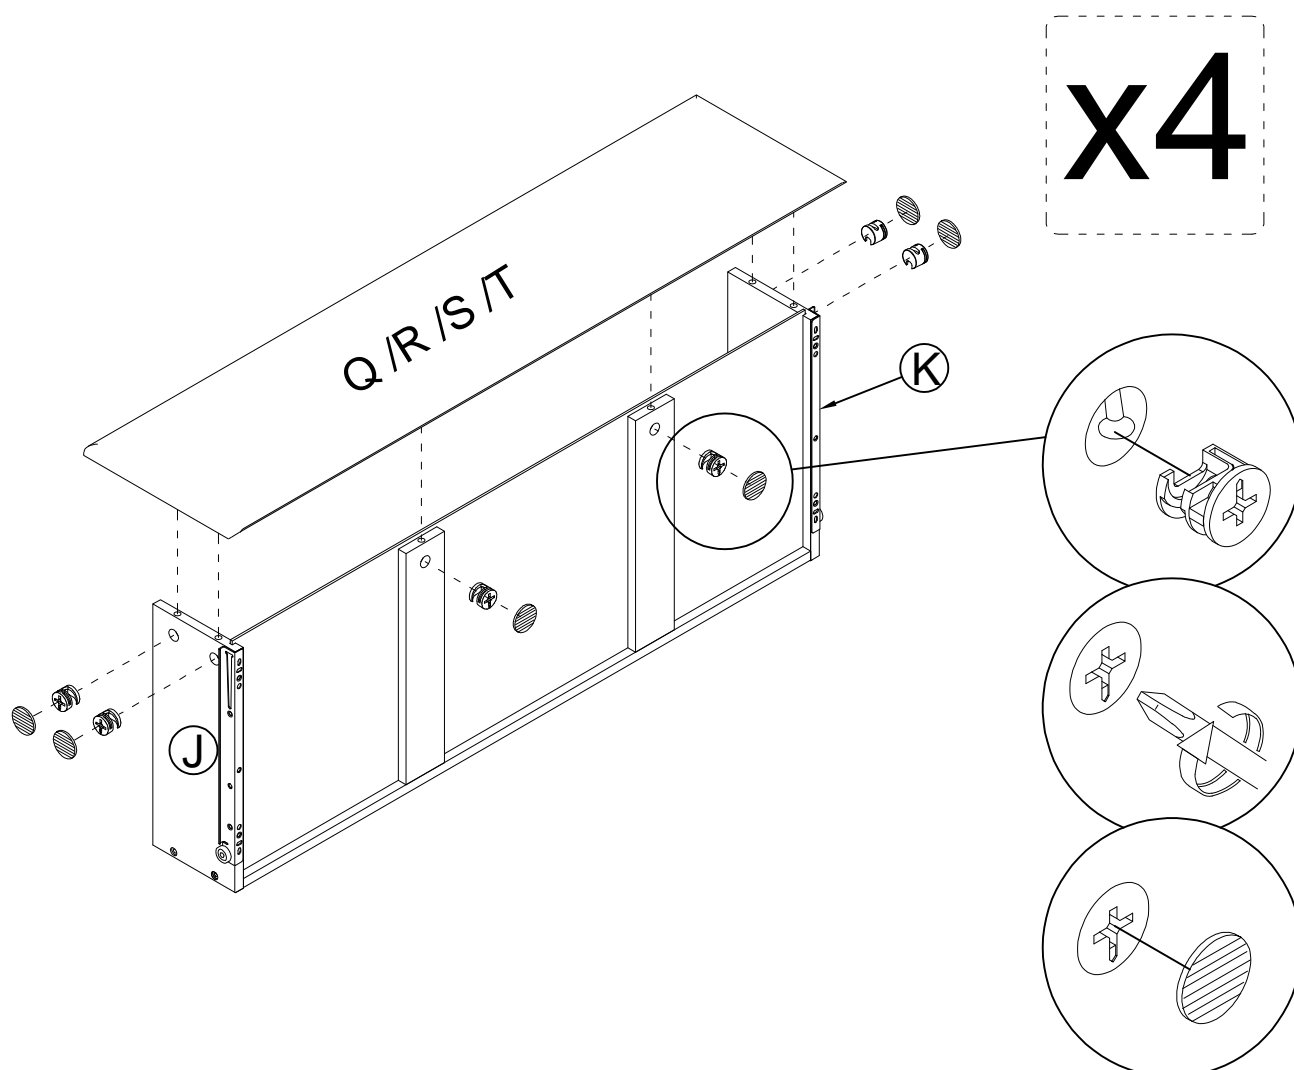


Step 19:

* Assemble the DRAWER LEFT FRONT UPPER PANEL (O) and DRAWER RIGHT FRONT UPPER PANEL (P) to the Two UPPER DRAWER TRAY by the Twelve KD SMALL CAM (5) and Twelve COVER CAP (3).

⑤




③








(12 PCS) (12 PCS)

x2

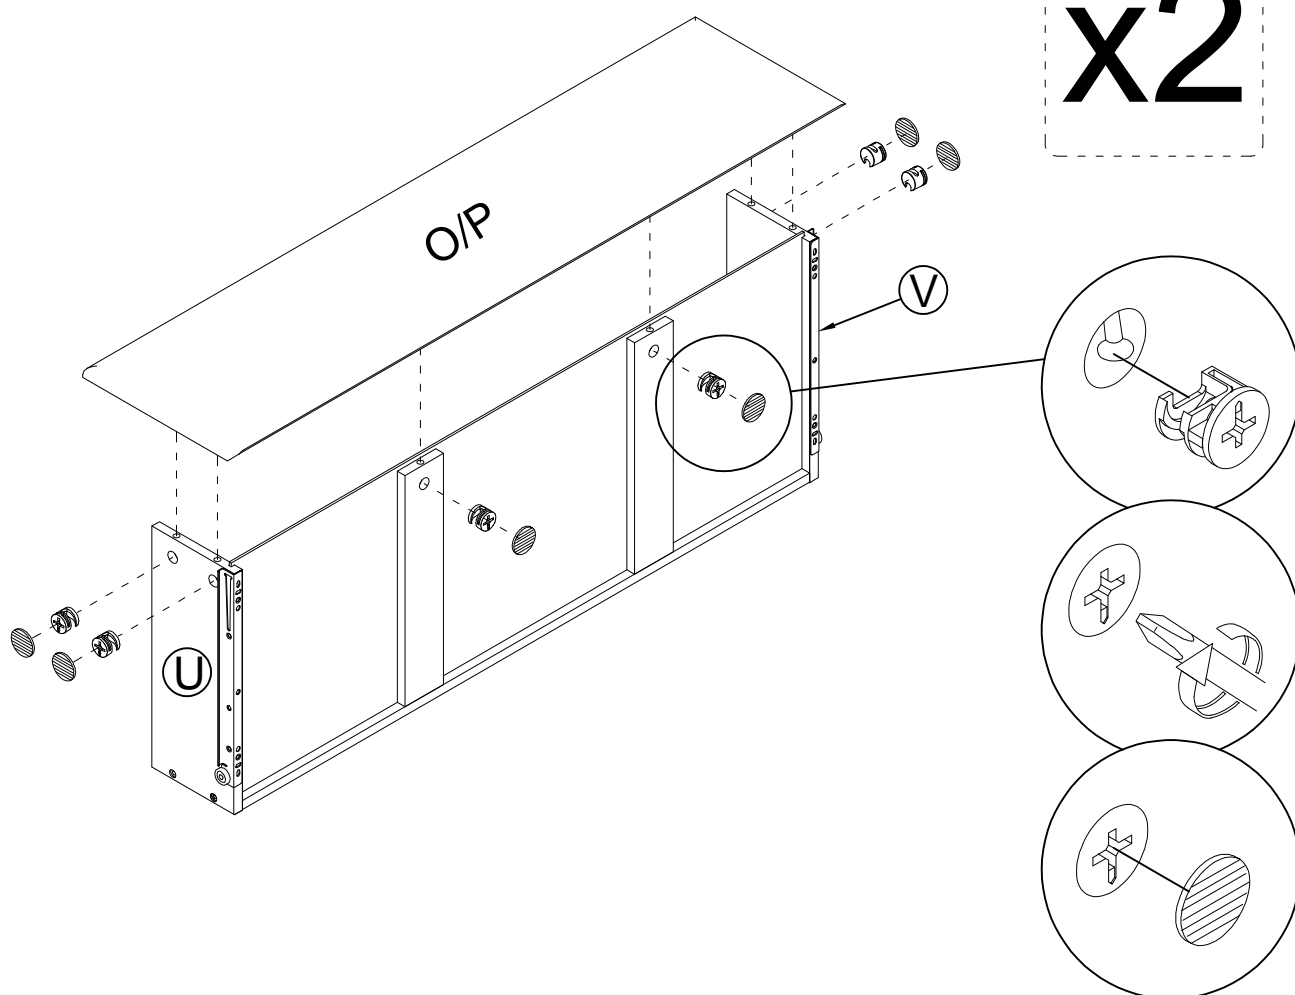


Step 20:

*Input Six Drawer tray to the stand.

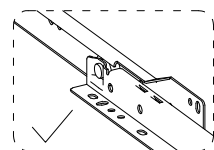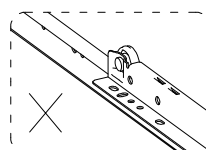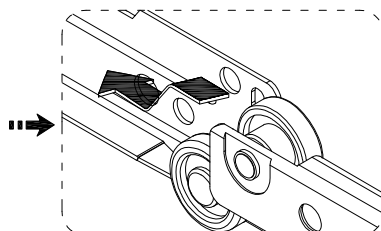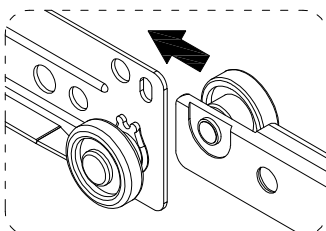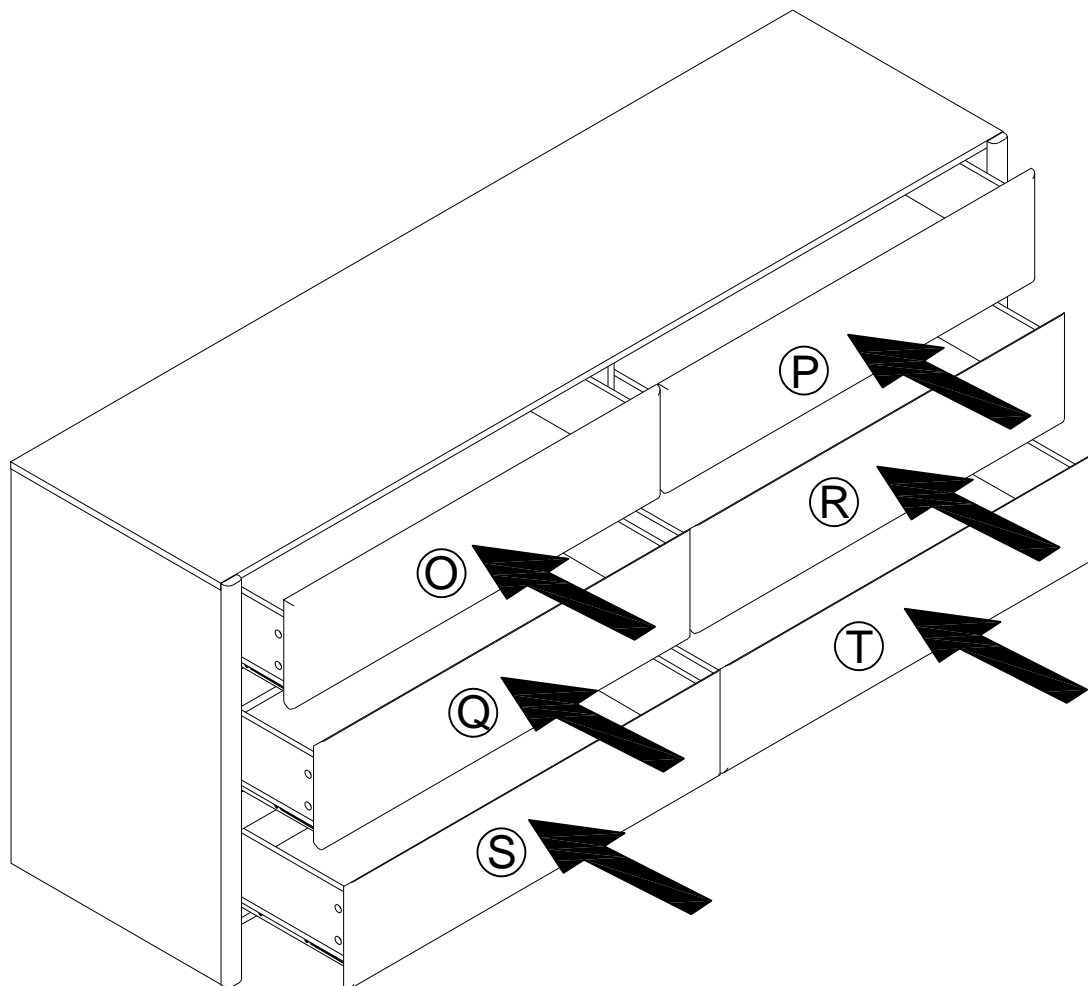

Step 21:

* Attach anti-tipping straps to the back of the stand.

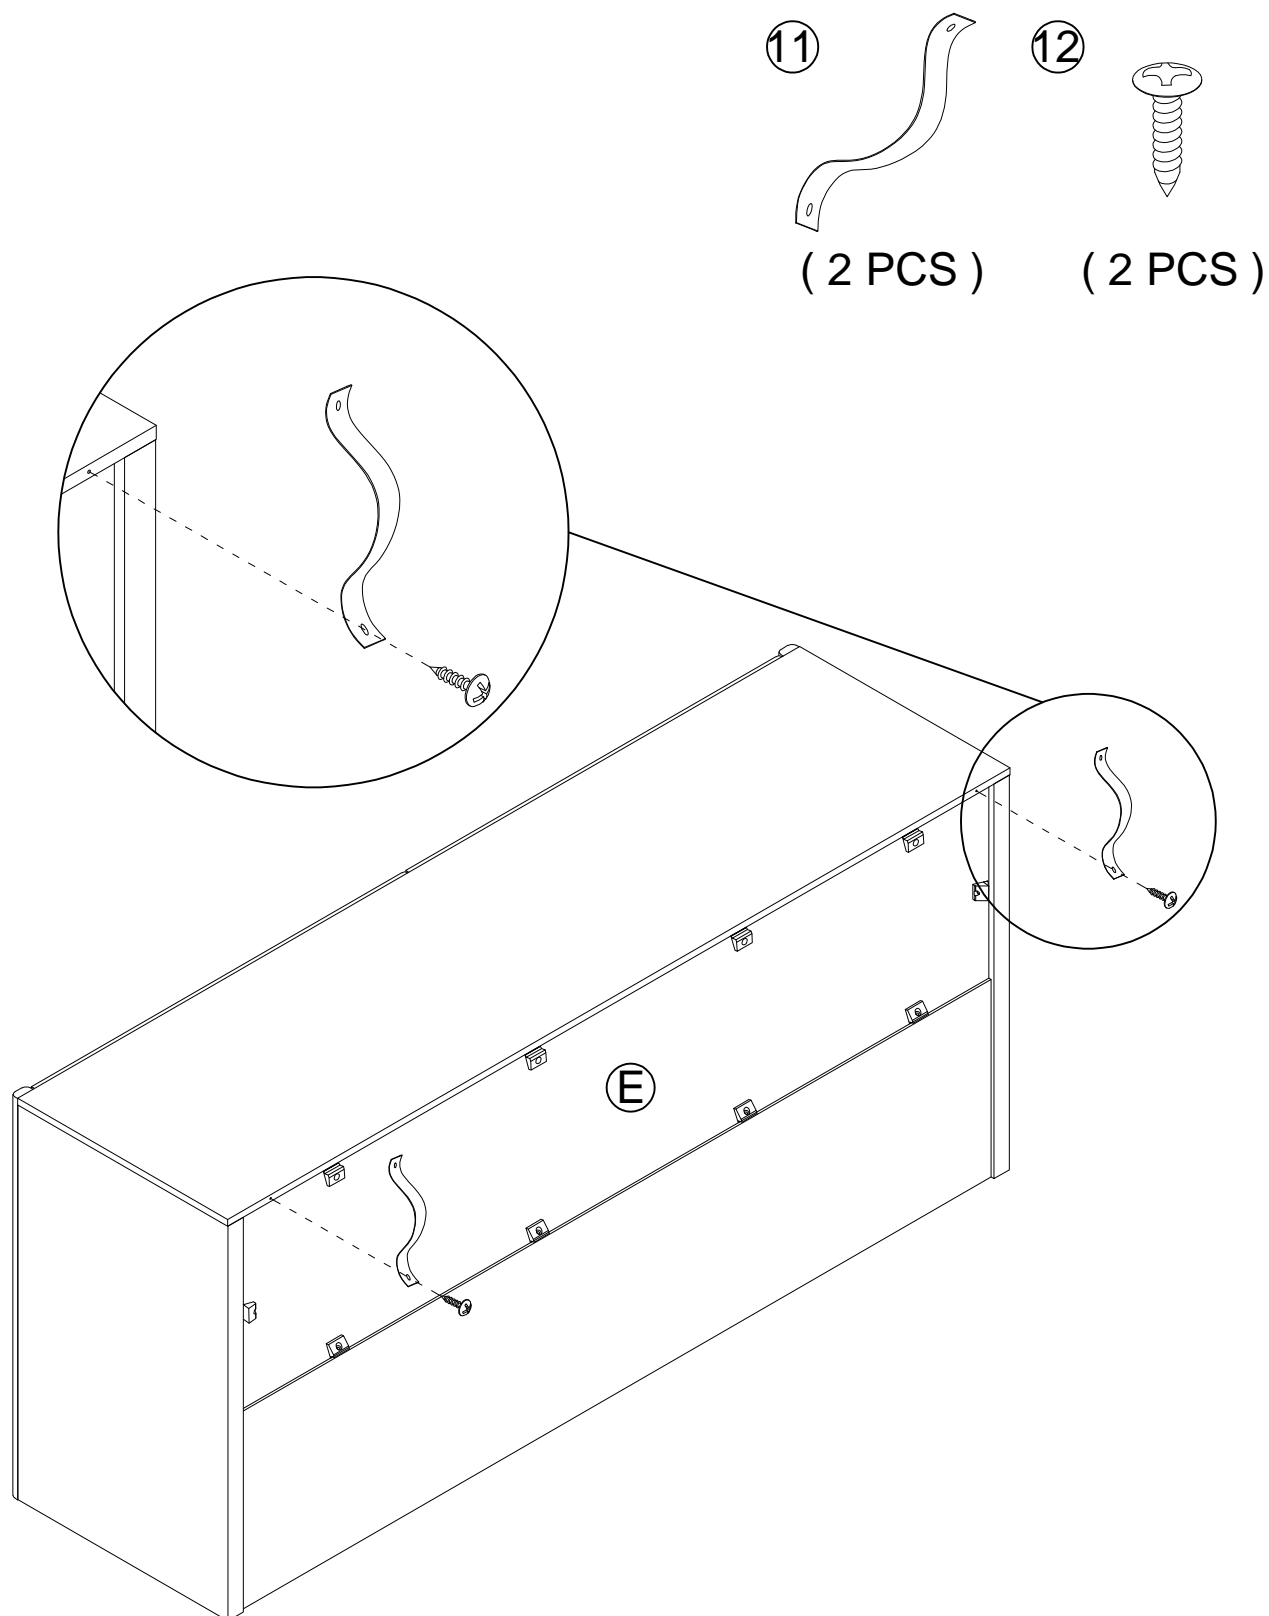

Step 22:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (14) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

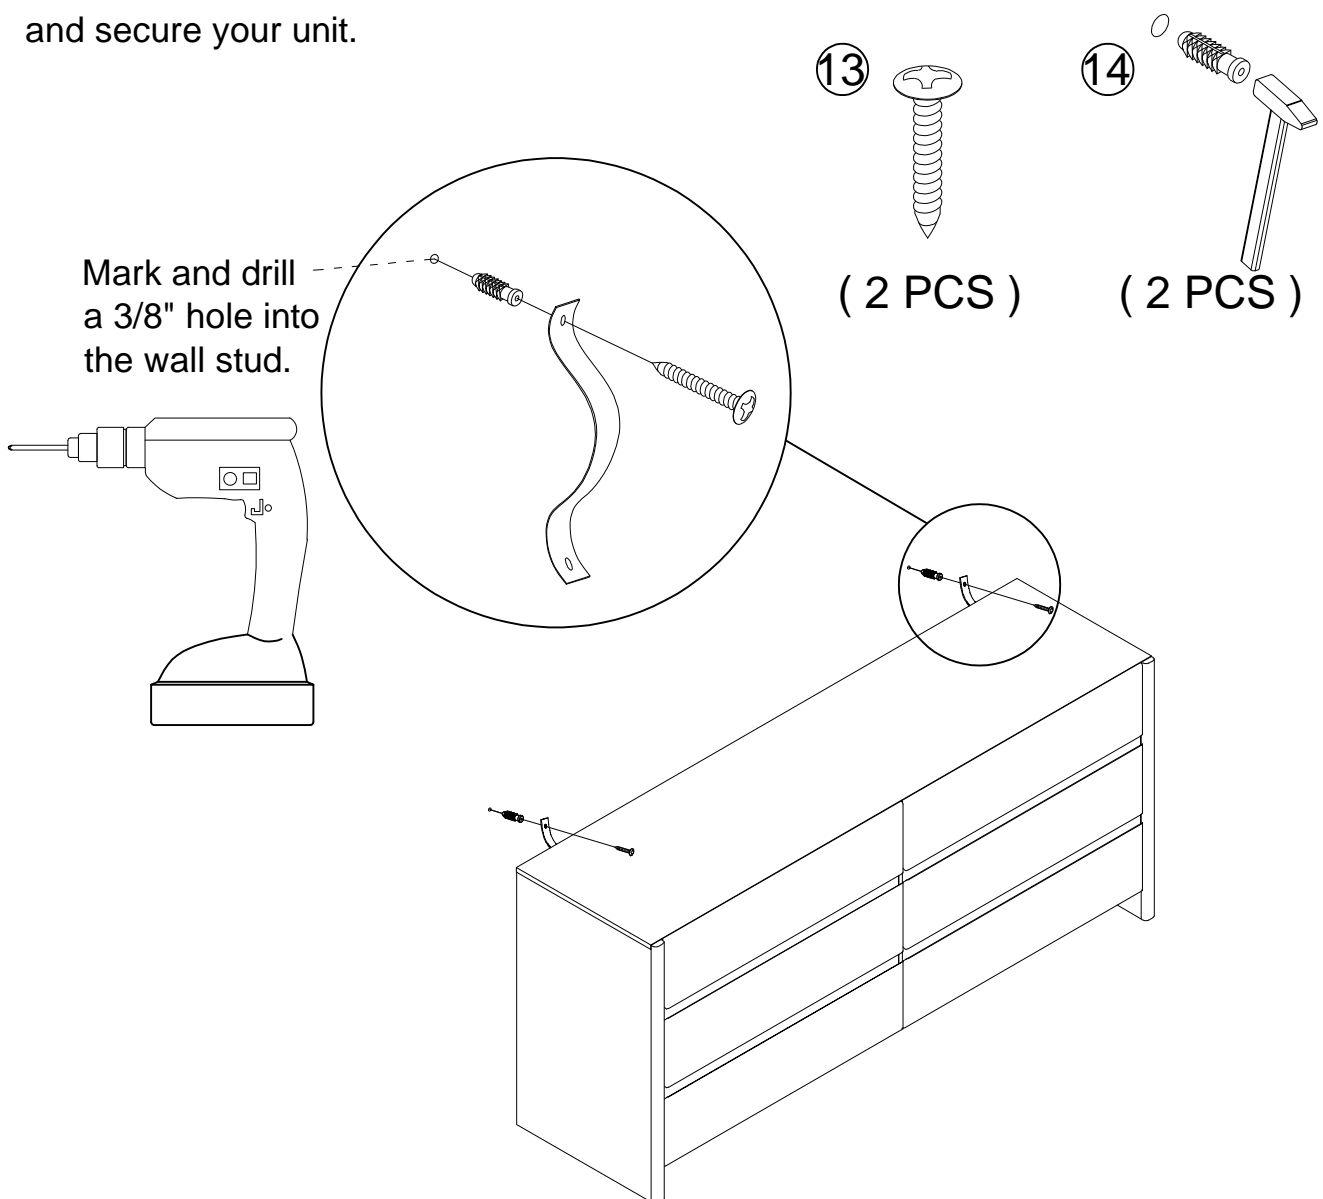



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818