












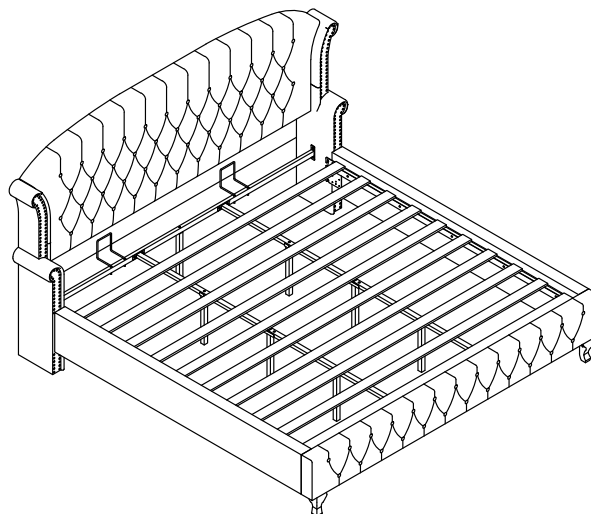
Assembly Instructions

Caution : You must read this before you proceed.

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside. For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED



NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.













The Daybed is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.






Assembly Preparation

Before
Beginning
Assembly.








N761P300691

#2  Bed ear-Left	#3  Bed ear-Right	#15  Angle iron	#16  Leg	
A  Bolt M8*50mm	B  Bolt M8*30mm	C  Washer M8-Ø12	D  Washer M8-Ø19	E  Nut M8
F  Wrench	G  Screw M4*40mm	H  Allen Key M8		

N761P300692

#1  Headboard	#11  Vertical iron pipes	#12  Iron feet-a	#13  Iron feet-b	#14  Iron feet-c
---	--	--	--	--

N761P300693

#4  Headboard bezel	#5  Bedside-Left	#6  Bedside-Right	#7  Footboard	#8  Rib strips
#9  Rear crossbar	#10  Rear gear bar			



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



























- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-






Assembly Instruction

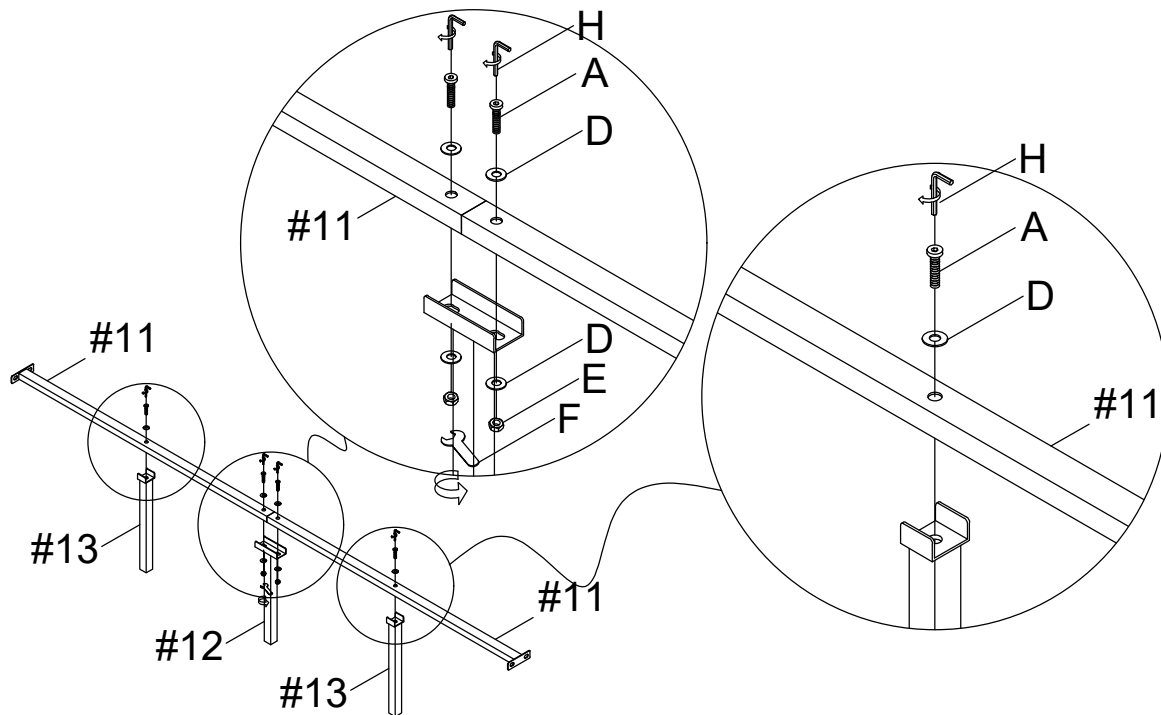
Item NO: N761P300691/N761P300692/N761P300693

NO.	Part	Qty	NO.	Hardware	Qty
#1	Headboard 	1pc	A	 Bolt M8*50mm	18pcs
#2	Bed ear-Left 	1pc	B	 Bolt M8*30mm	27pcs
#3	Bed ear-Right 	1pc	C	 Washer M8-Ø12	15pcs
#4	Headboard bezel 	1pc	D	 Washer M8-Ø19	52pcs
#5	Bedside-Left 	1pc	E	 Nut M8	9pcs
#6	Bedside-Right 	1pc	F	 Wrench	1pc
#7	Footboard 	1pc	G	 Screw M4*40mm	5pcs
#8	Rib strips 	1pc	H	 Allen Key M8	1pc
#9	Rear crossbar 	1pc			
#10	Rear gear bar 	2pcs			
#11	Vertical iron pipes 	4pcs			
#12	Iron feet-a 	2pcs			
#13	Iron feet-b 	4pcs			
#14	Iron feet-c 	1pc			
#15	Angle iron 	2pcs			
#16	Leg 	2pcs			

Step 1




x2

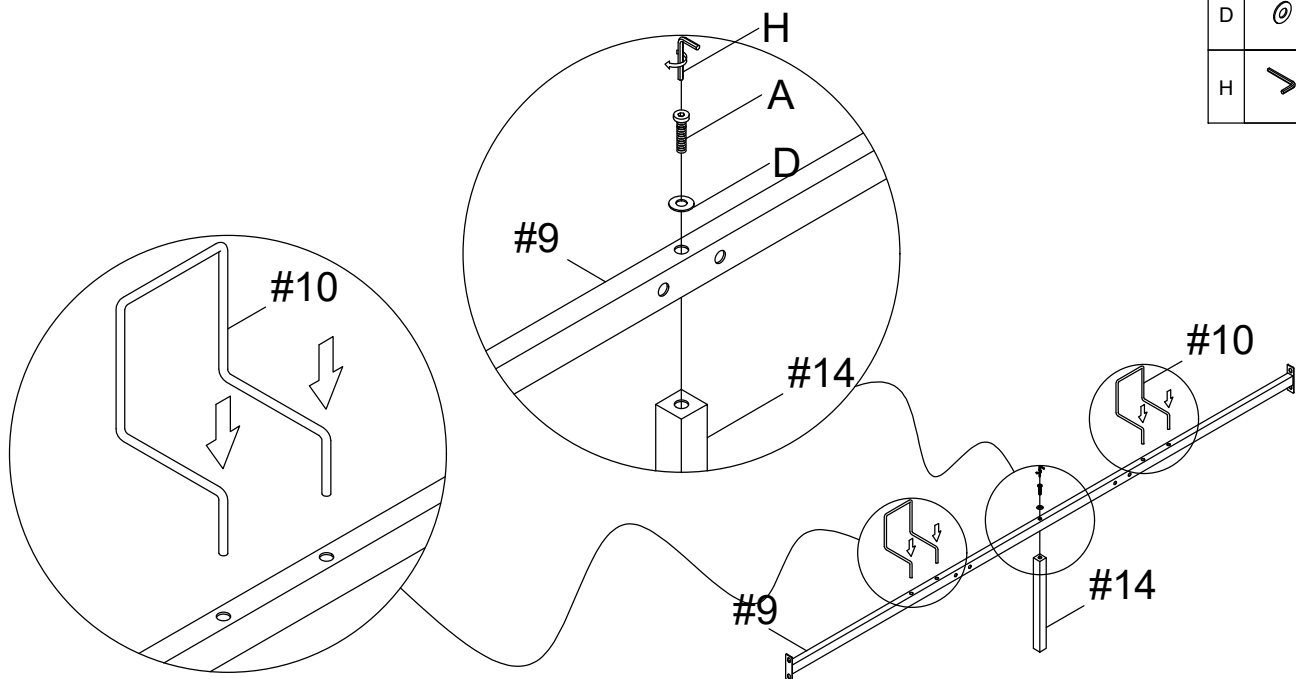
A		8pcs
D		12pcs
E		4pcs
F		1pc
H		1pc



Assemble the Iron feet (12 & 13) to Vertical iron pipes (11)




Step 2

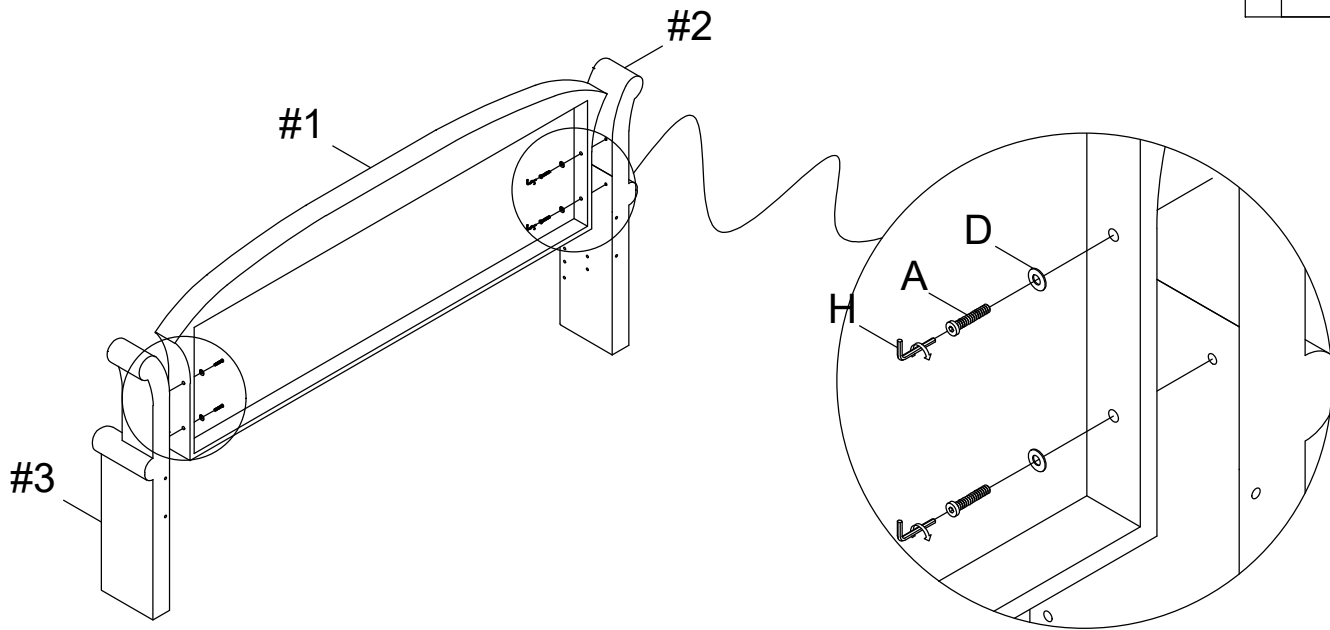
A		1pc
D		1pc
H		1pc



Assemble Rear gear bar(10) and iron feet (14) to Rear crossbar (9)




Step 3

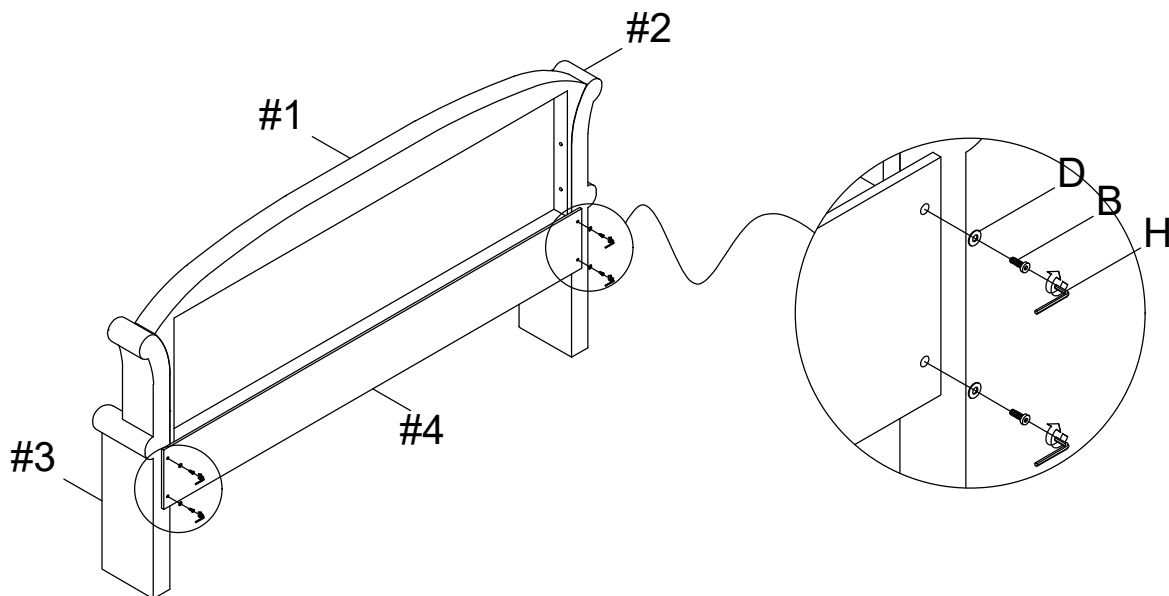
A		4pcs
D		4pcs
H		1pc



Assemble bed left ear(2)and bed right ear(3) to headboard(1)


Step 4

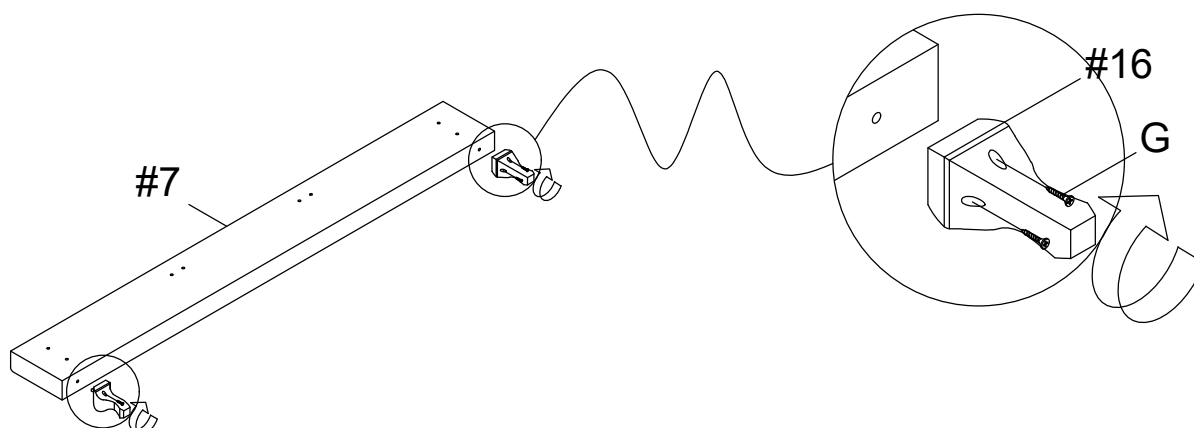
B		4pcs
D		4pcs
H		1pc



Assemble the Headboard bezel(4) to the back of the headboard




Step 5

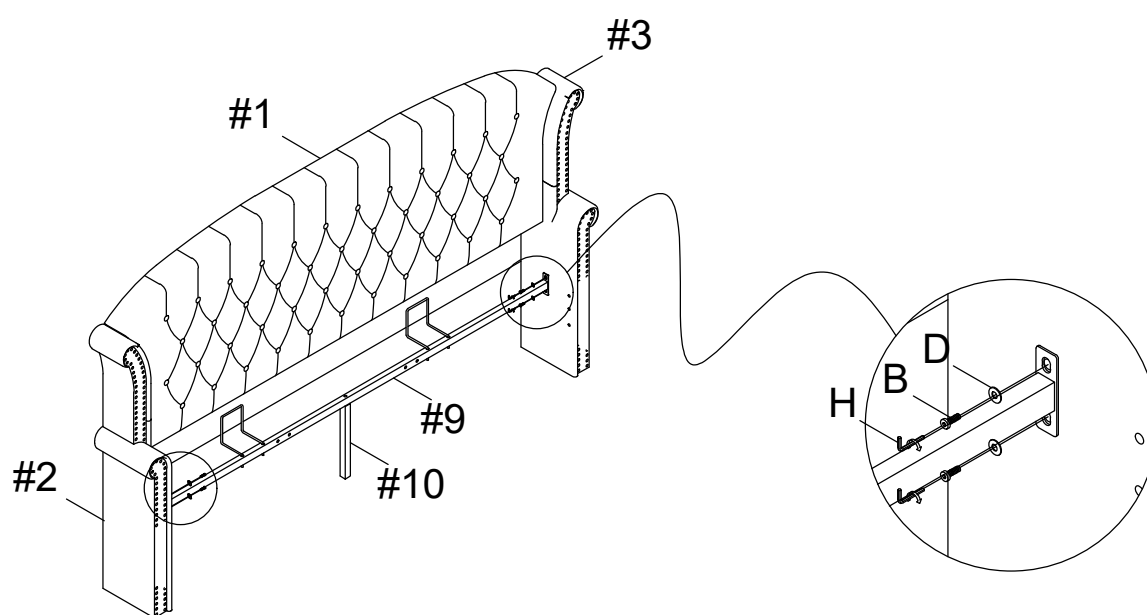
G		4pcs
---	---	------



Assemble wood leg (16) to footboard (7)

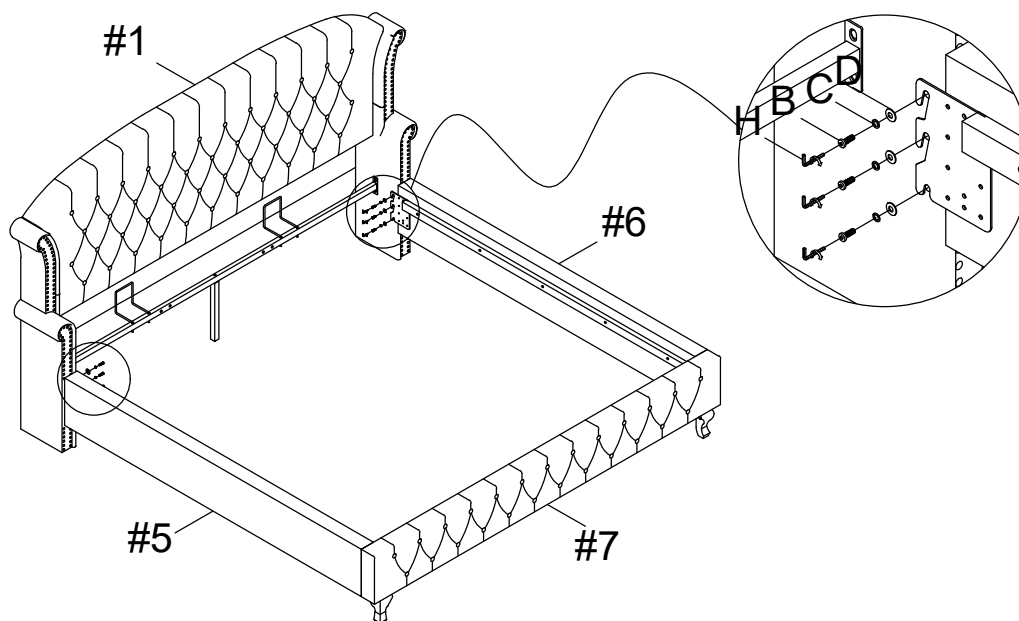
Step 6

B		4pcs
D		4pcs
H		1pc



Assemble the rear crossbar (9) to headboard, connect to two bed ear

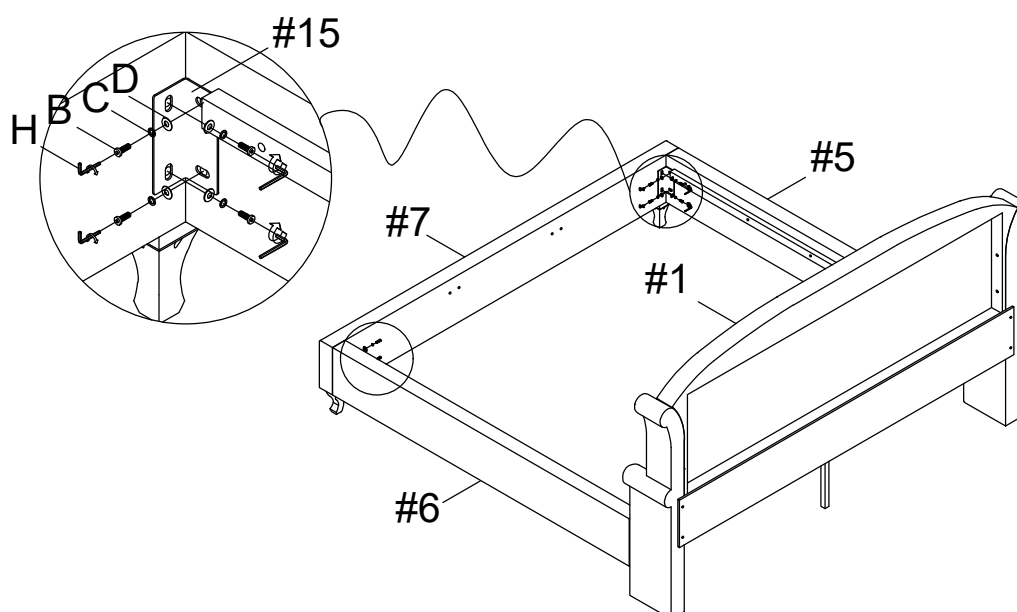
Step 7



B		6pcs
C		6pcs
D		6pcs
H		1pc

Assemble the right and left bedside (5&6) to bed ear




Step 8

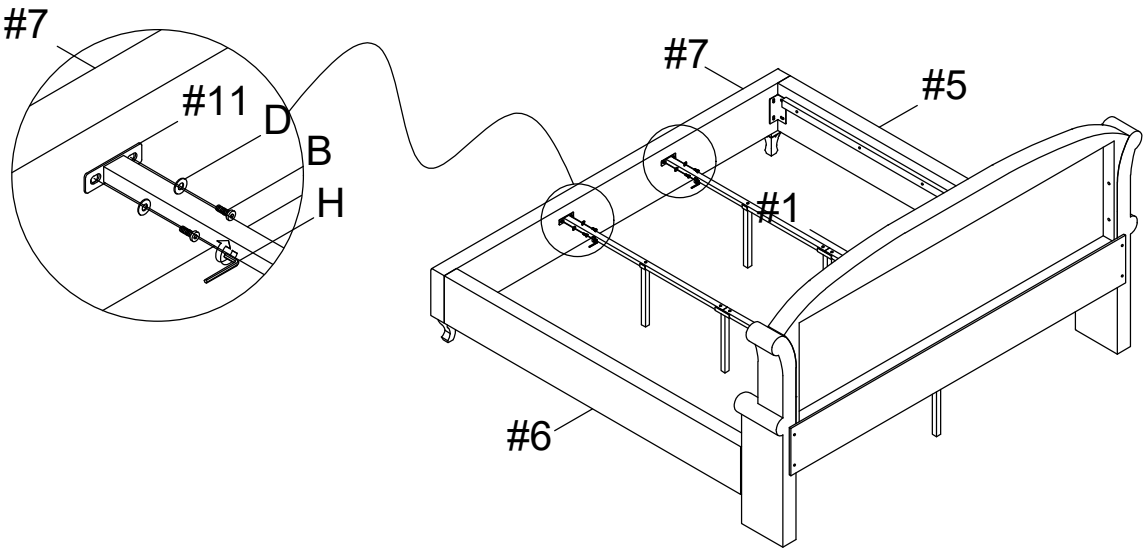


B		8pcs
C		8pcs
D		8pcs
H		1pc

Assemble the right and left bedside (5&6) to footboard(7)






Step 9

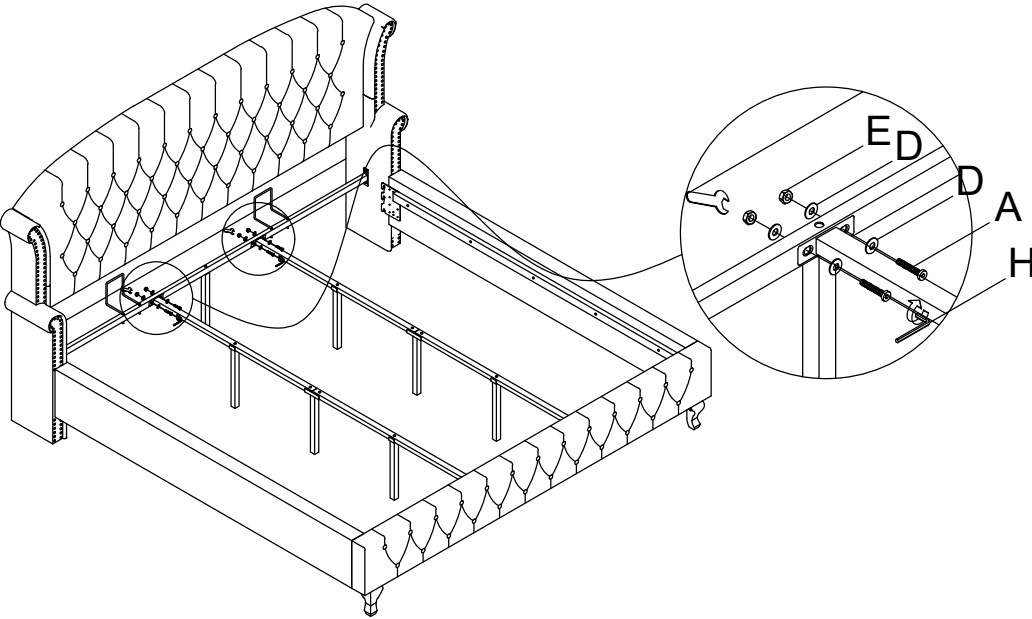
B		4pcs
D		4pcs
H		1pc



Assemble the 2 Vertical iron pipes (11) with footbaord(7)

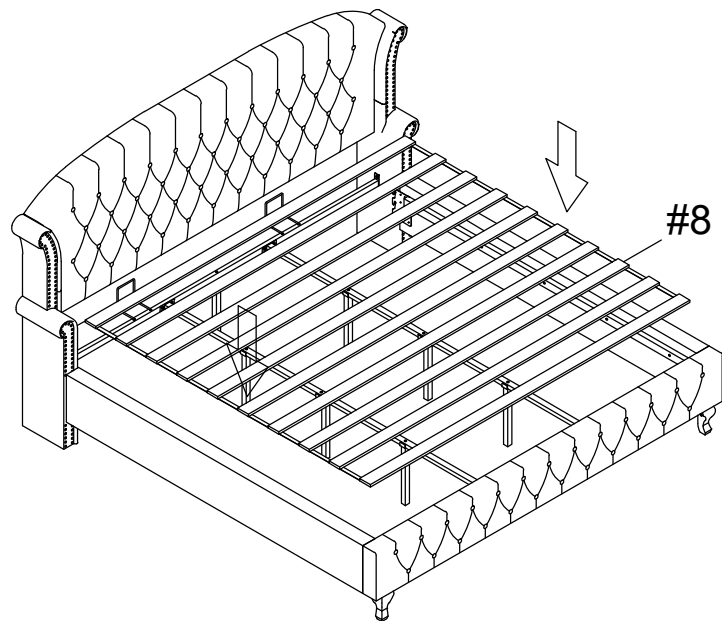
Step 10

A		4pcs
D		8pcs
E		4pcs
F		1pc
H		1pc



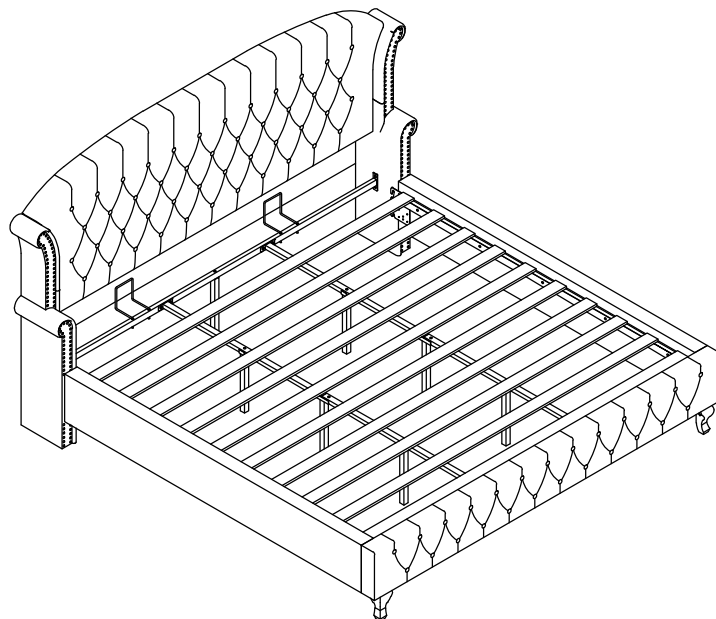
Assemble the 2 Vertical iron pipes (11) with rear crossbar(10)

Step 11



put the Rib strips (8) on the 2 Vertical iron pipes (11)

Step 12



Assemble Finished