


LM085



Scan for Help!

Assembly Guide/Customer Support

Item # : LM085-BD65 Assembly Instructions

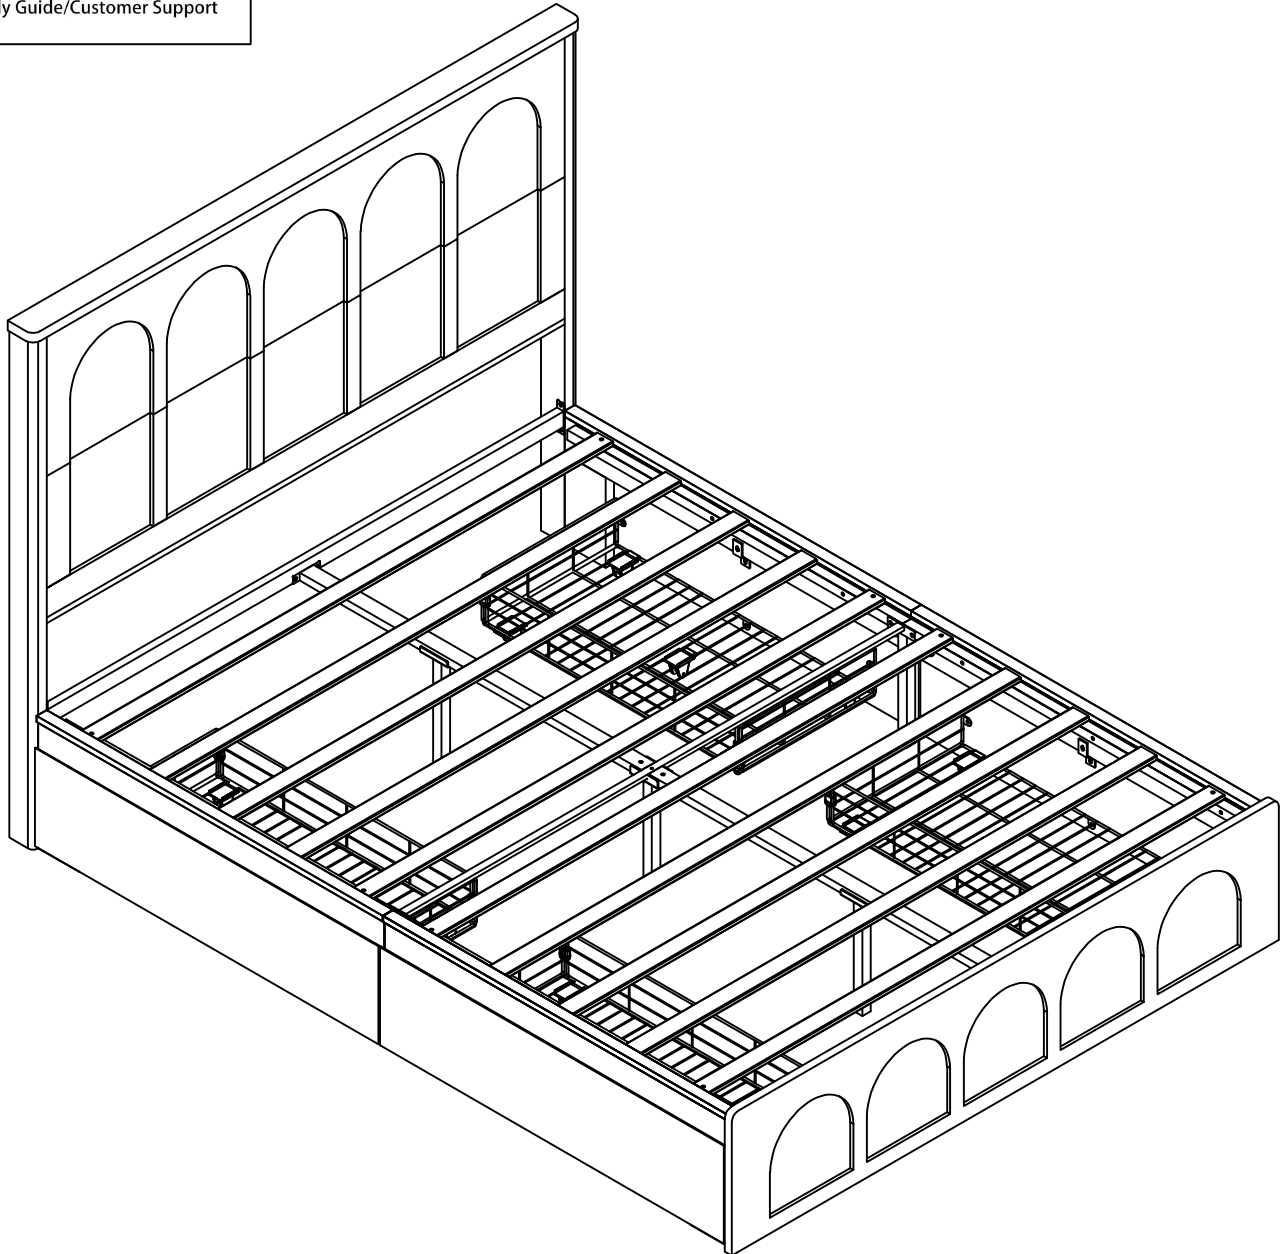


If you have any questions, please follow these steps(“Find Your Orders” - “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revised 03/03/2025

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

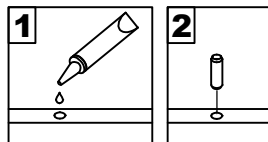


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

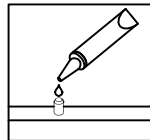


- VI. A Phillips head screwdriver is required for the assembly of this product .

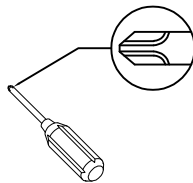


- VII. Power tools should not be used to assemble this product .

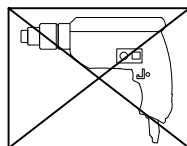



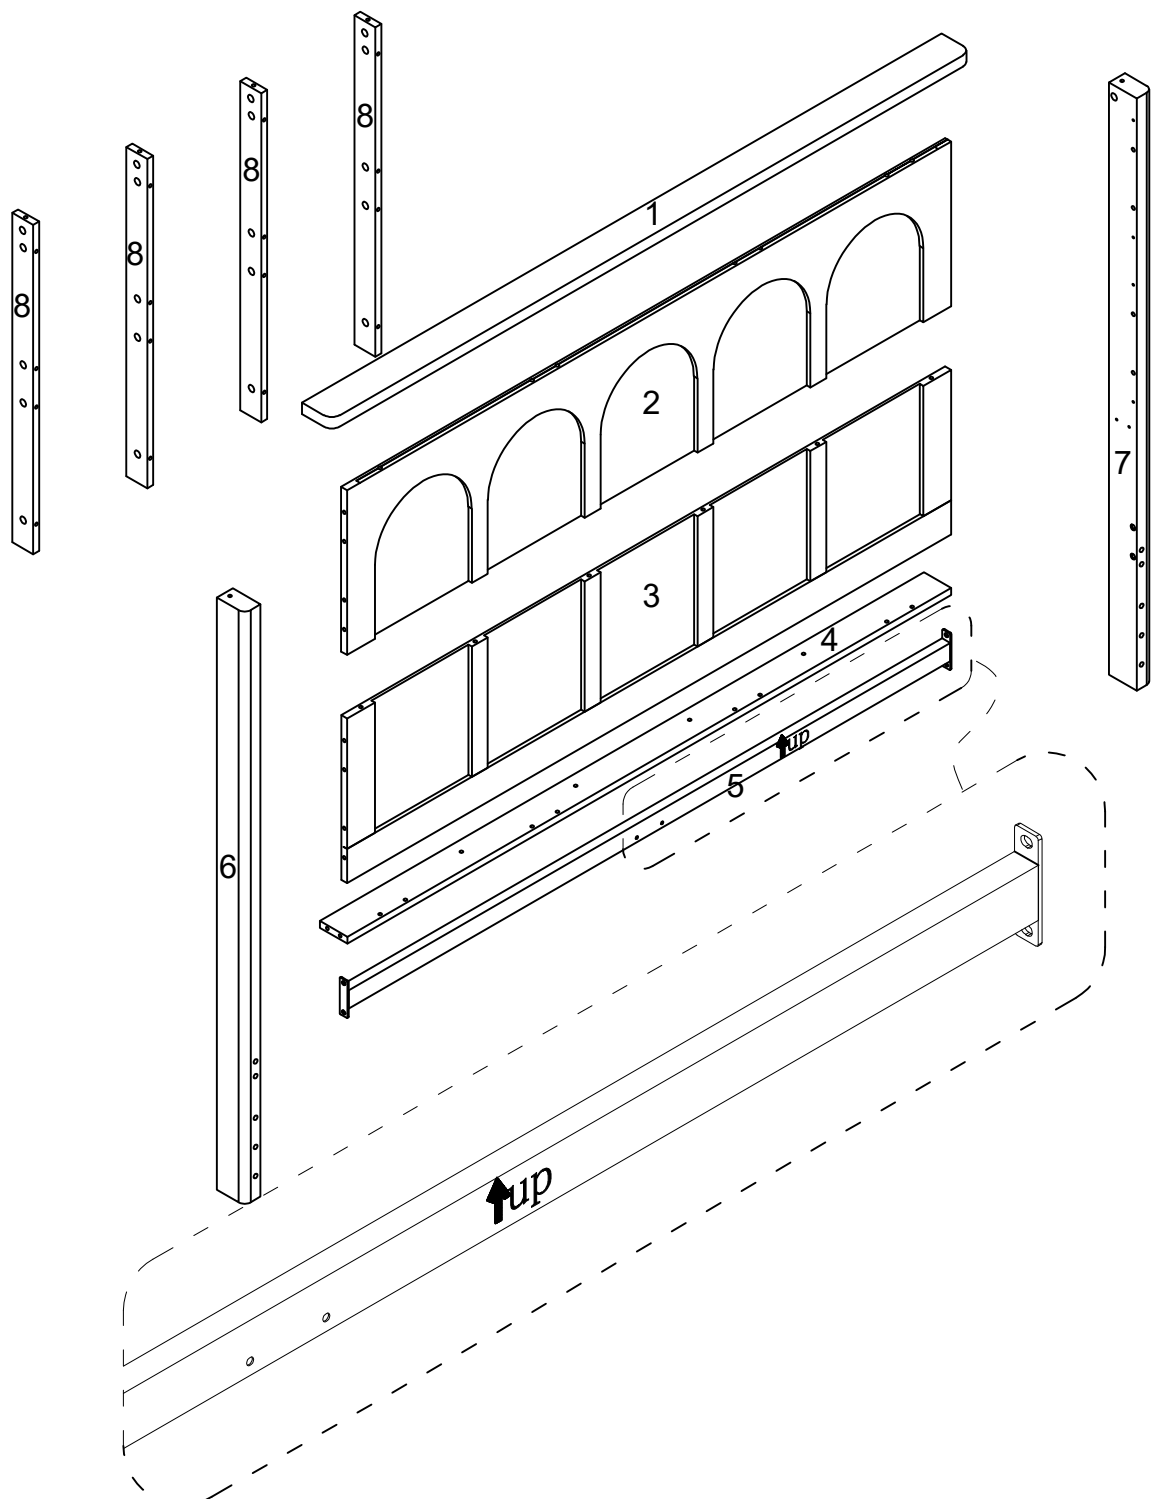




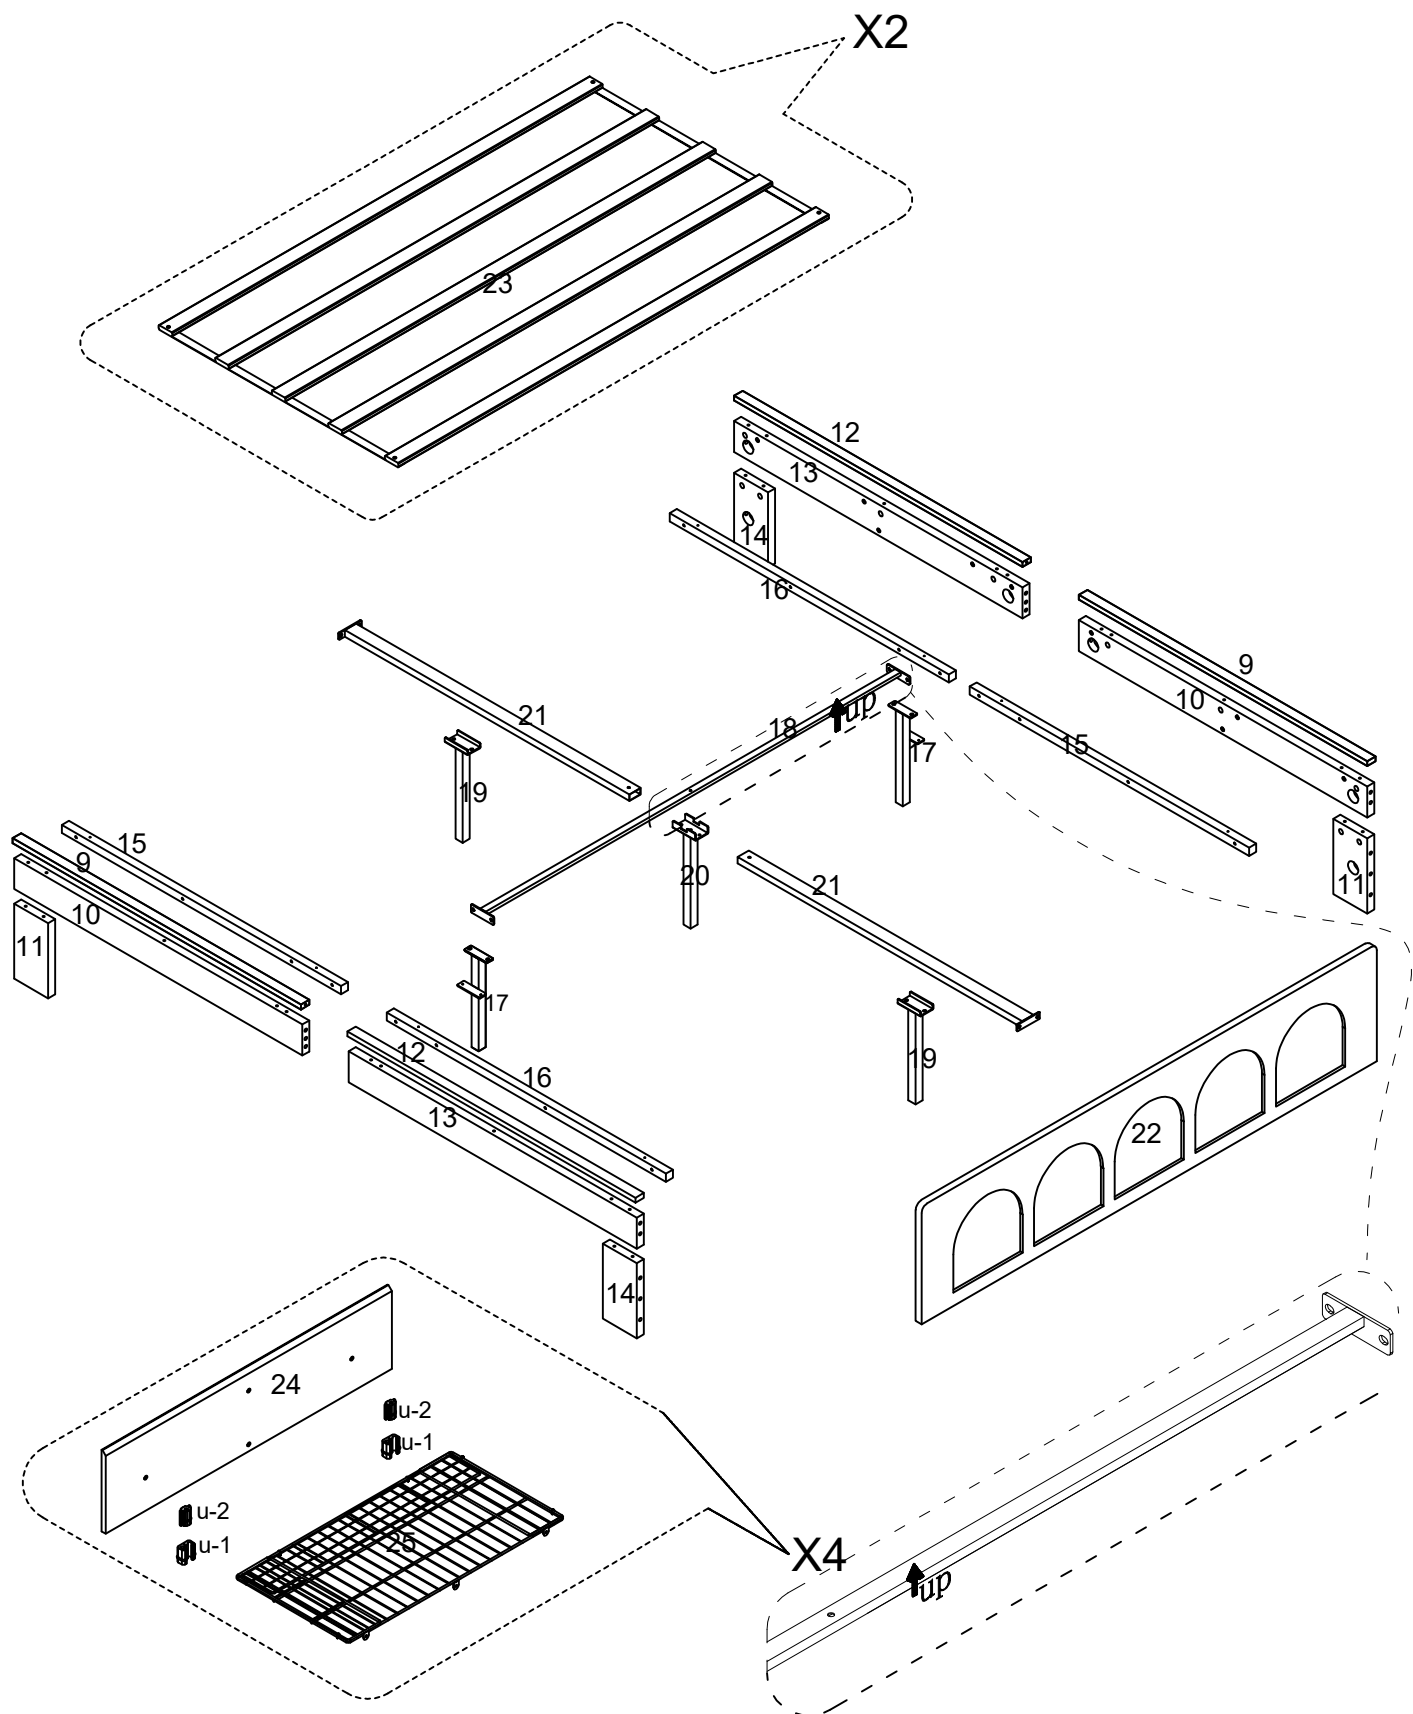






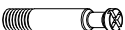





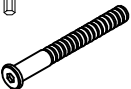



Parts List




Parts List



Hardware List

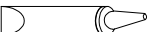
A		Ø8x30mm	Wooden dowel	32	pcs
GG		Ø10x40mm	Wooden dowel	16	pcs
B		Ø6x32mm	Cam bolt	58	pcs
C		Ø15x11mm	Cam lock	58	pcs
D		Ø30mm	Sticker	58	pcs
E		M6*20mm	Bolt	4	pcs
F		Ø6x50mm	Screw	8	pcs
G		M 4	Hex Key	1	pc
H		M6*12mm	Bolt	32	pcs
I		M6*40mm	Bolt	19	pcs
J		M 5	Hex Key	1	pc
K		M8*115mm	Bolt	4	pcs
L		Ø5/16in	Nuts	12	pcs
M		Ø5/16in	Arc-shaped washer	12	pcs
N		Ø5/16in	Wrench	2	pc
O		Ø8x60mm	Bolt	4	pcs
P		Ø8x100mm	Bolt	2	pcs
Q			Metal plate	4	pcs
R		M8x14mm	flat washer	4	pcs
S			Wheel	16	pcs
T		Ø4x20mm	Screw	8	pcs
U			Drawer locker set	8	sets
V		Ø5x12mm	Screw	4	pcs
W			Glue tube	2	pcs

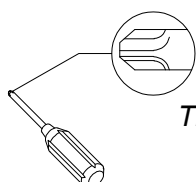



Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

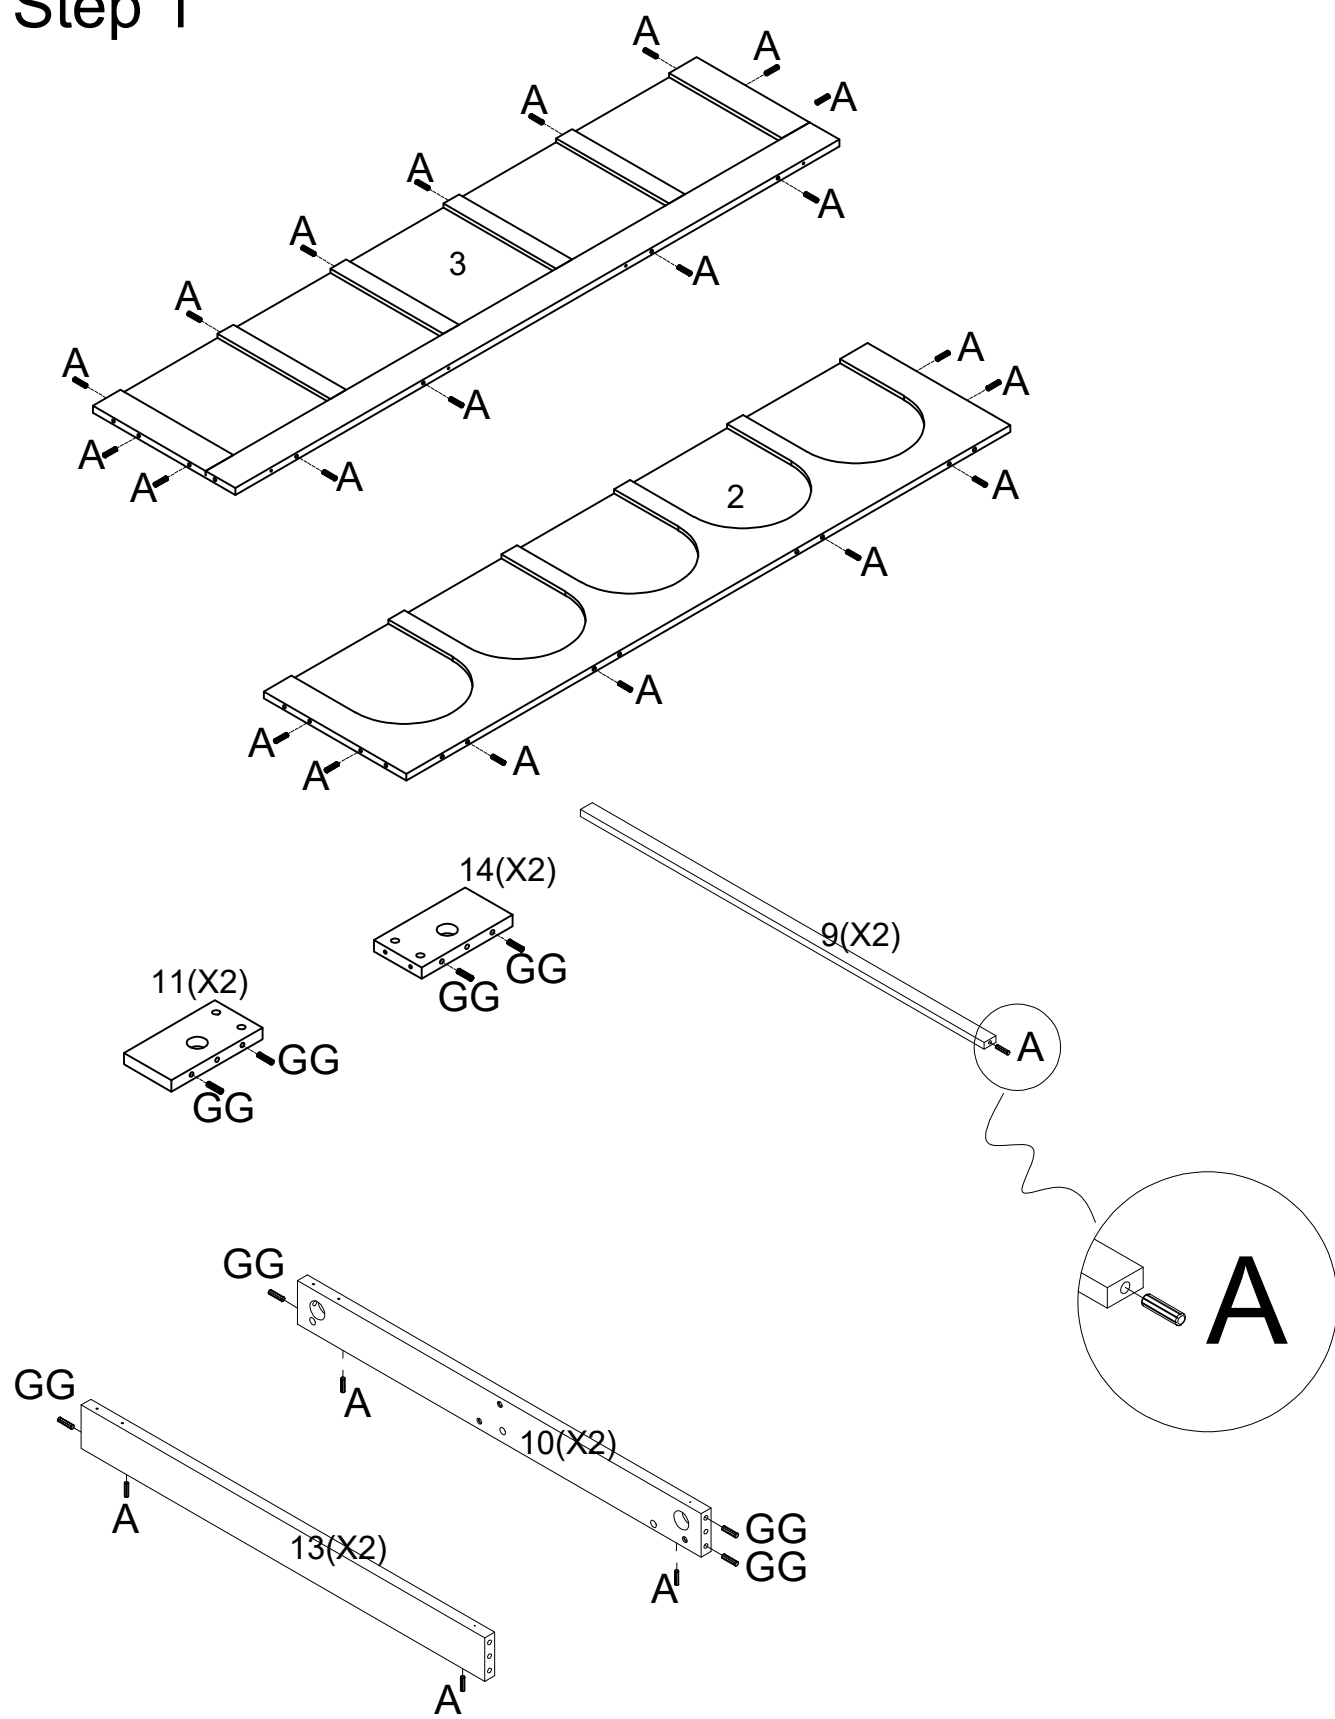
Step 1




GG	A
	
X16	X32

Step 2


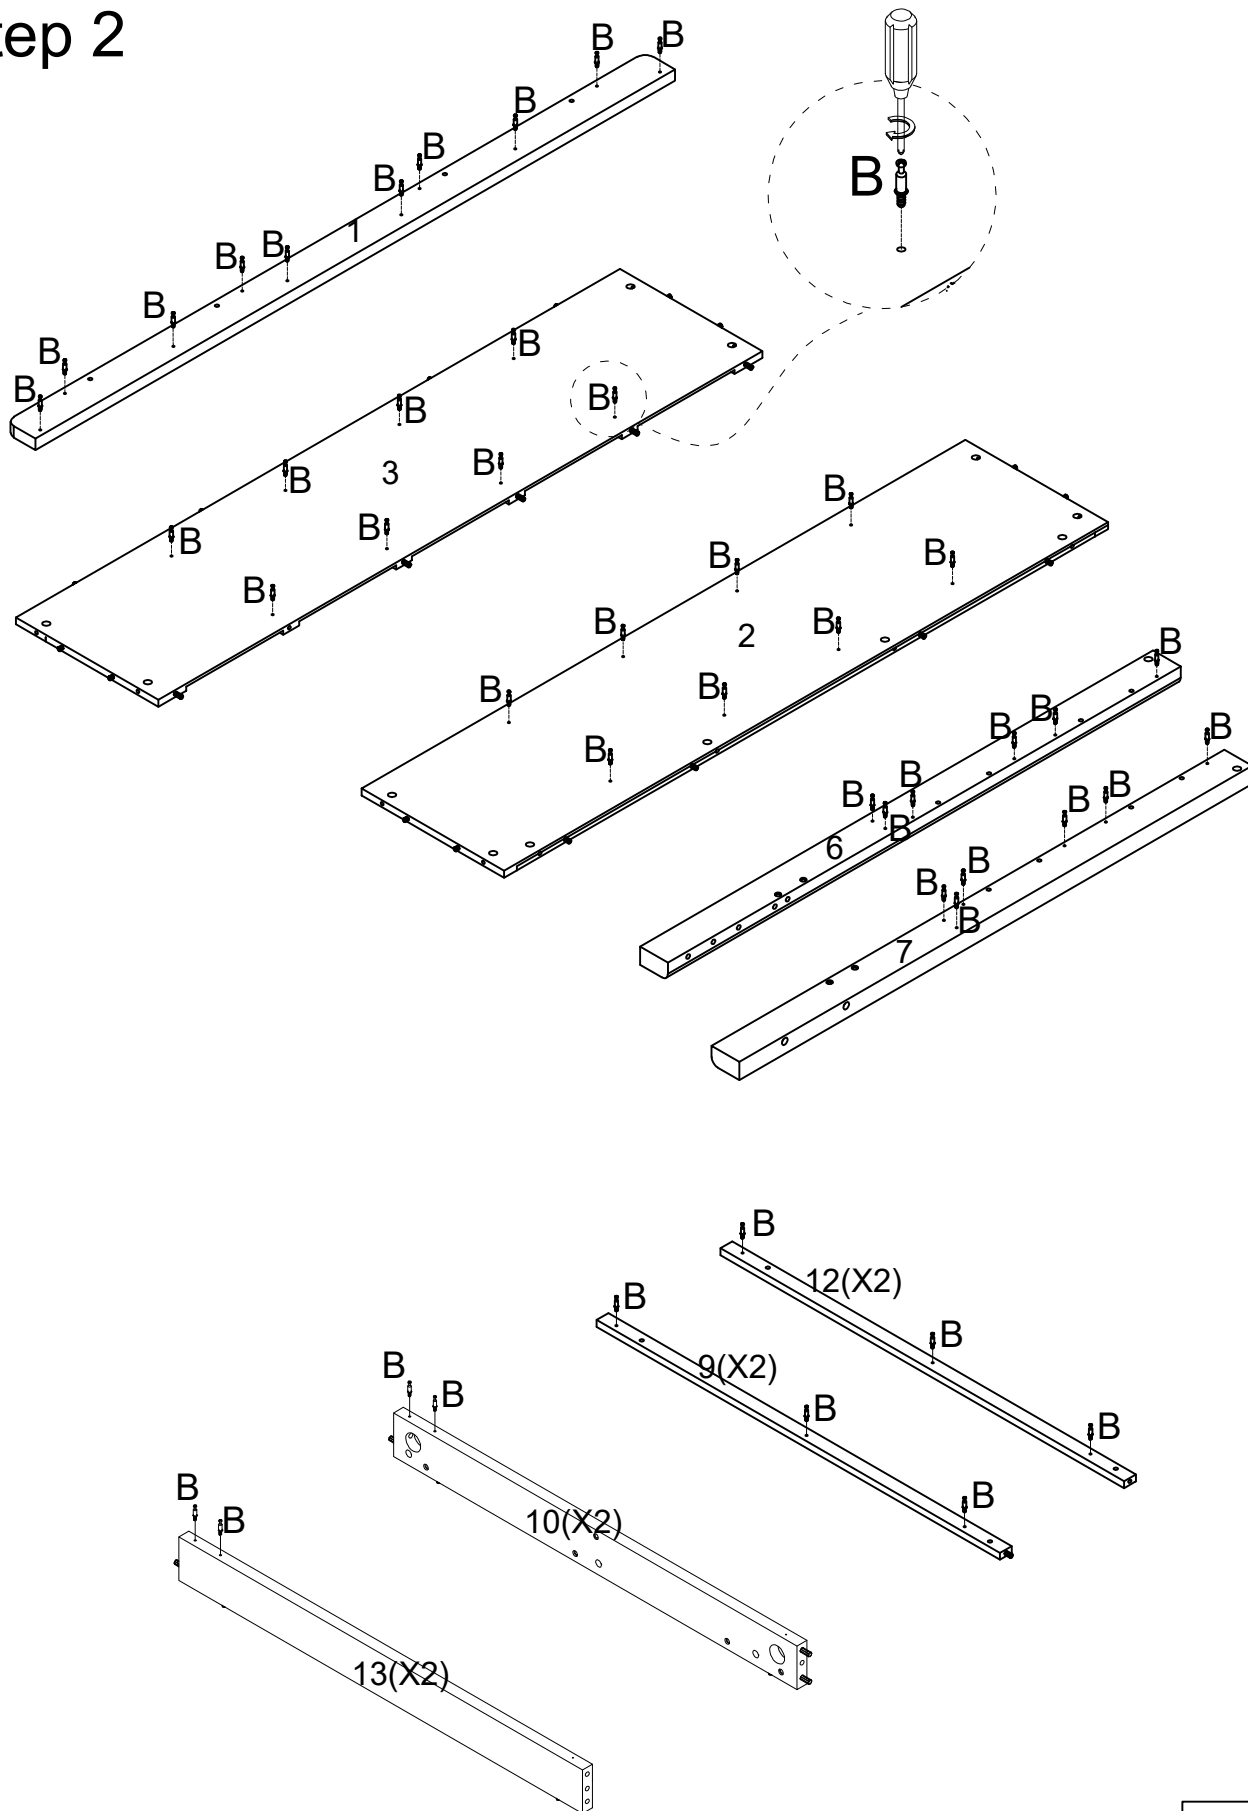



B

X58

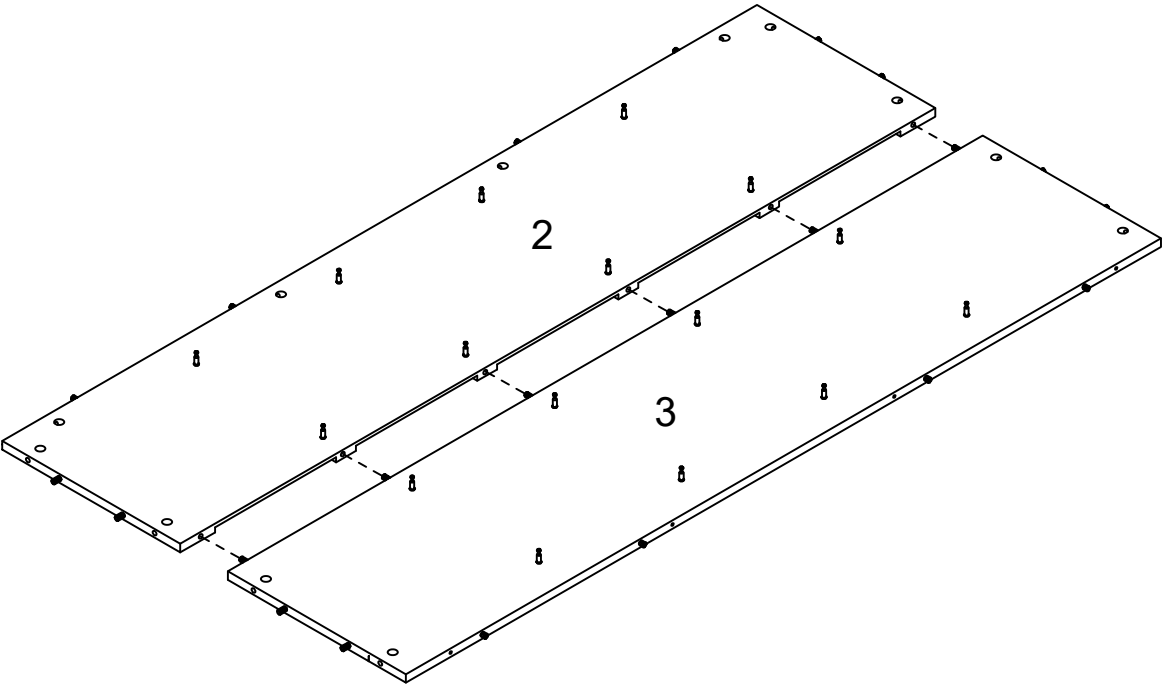Step 3

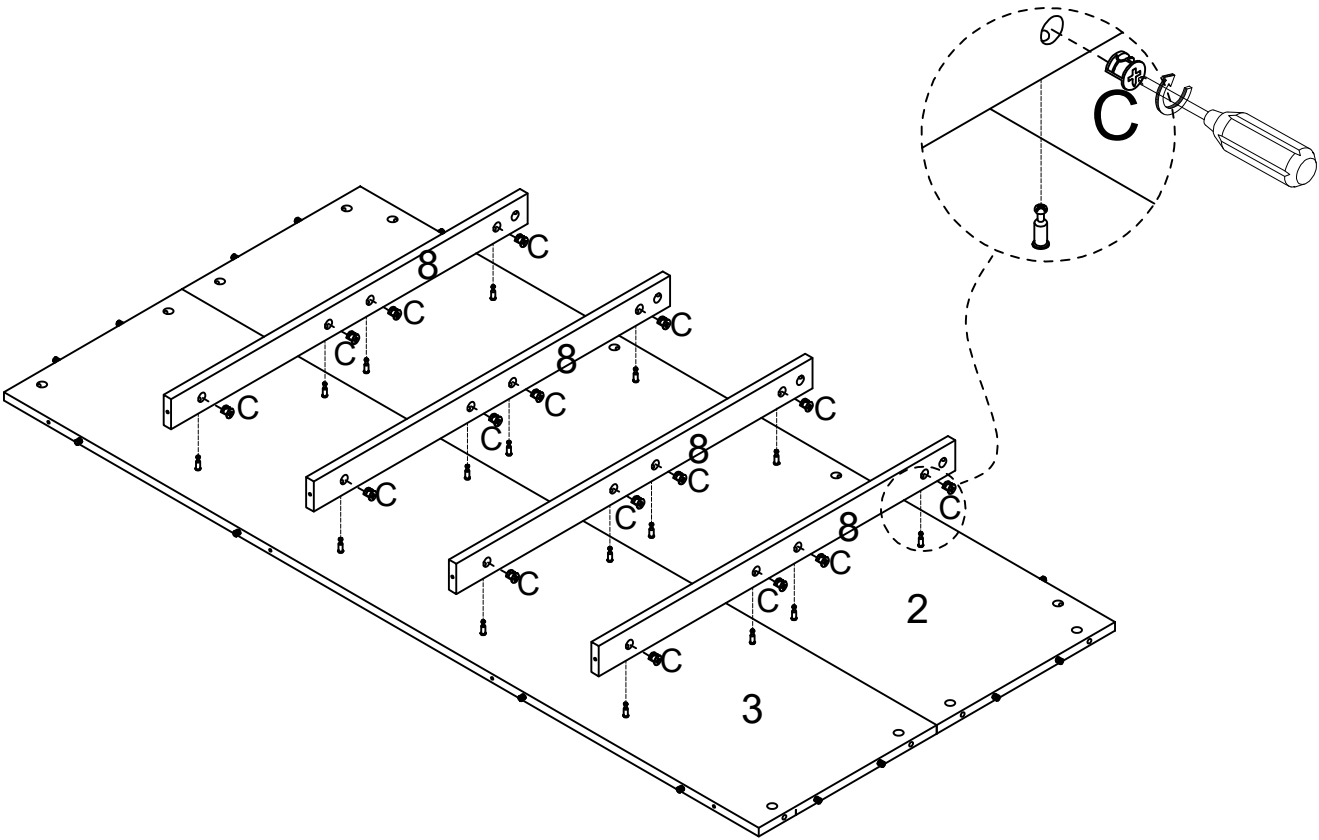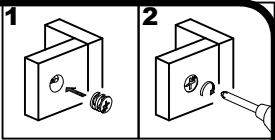




Step 4





C

X16

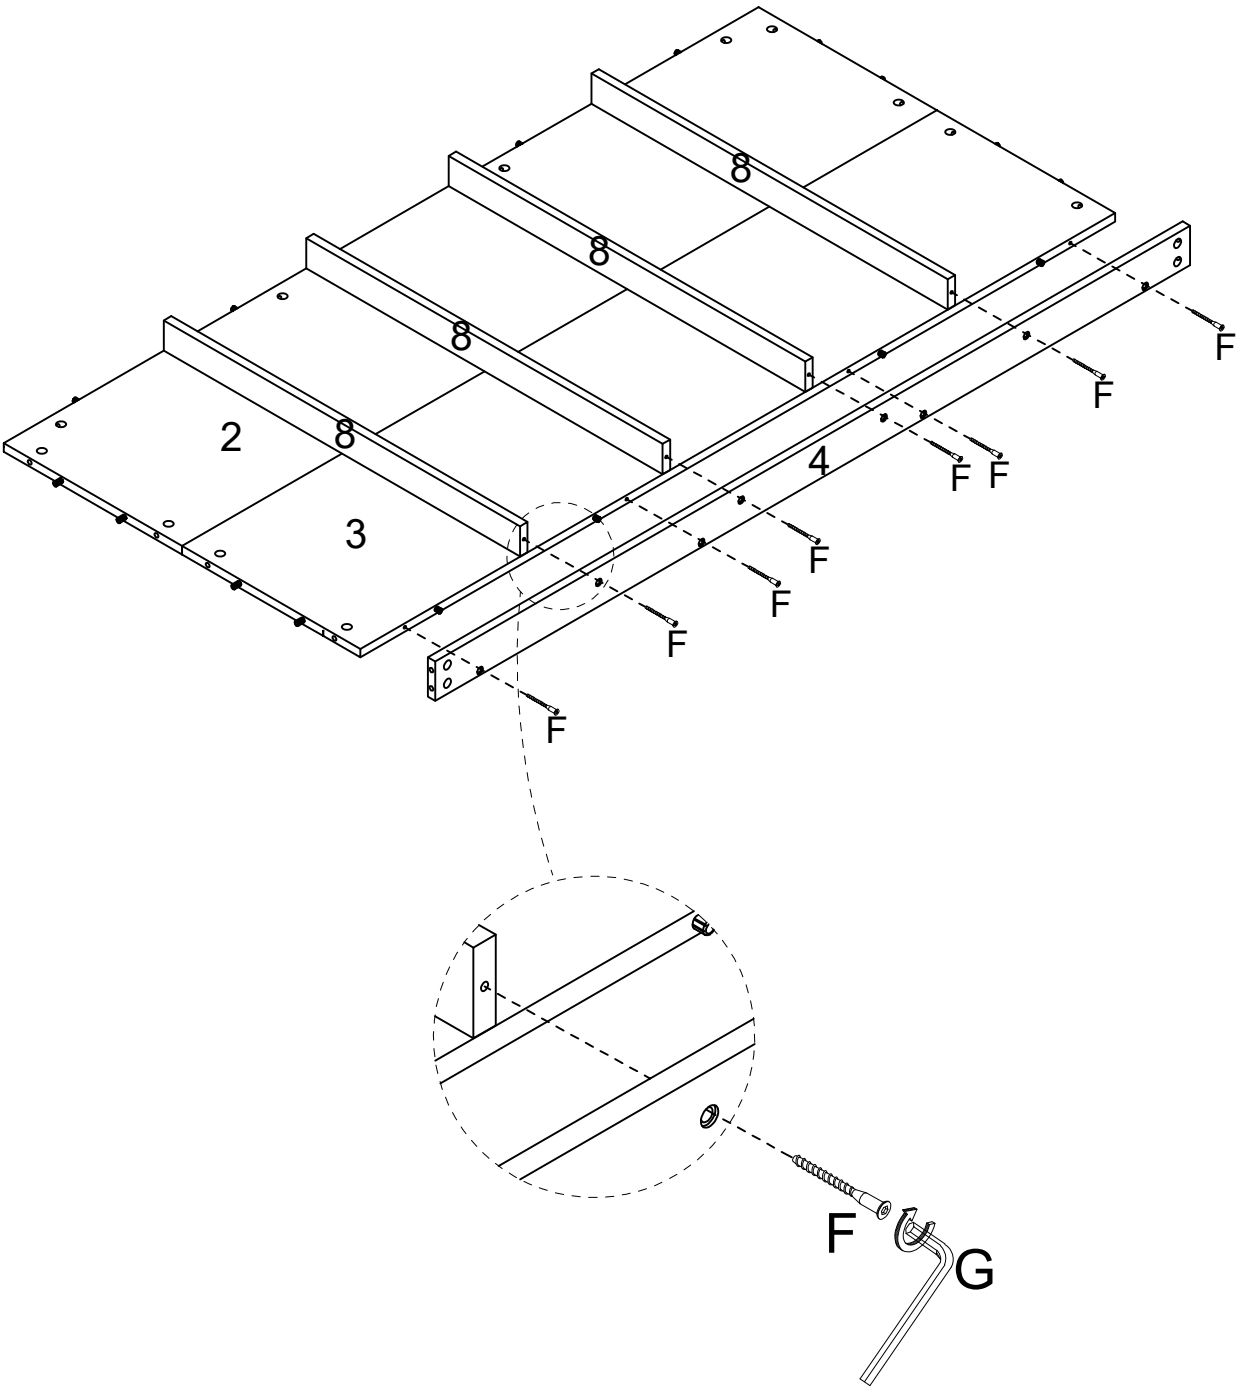
Step 5





G	F
	
X1	X8

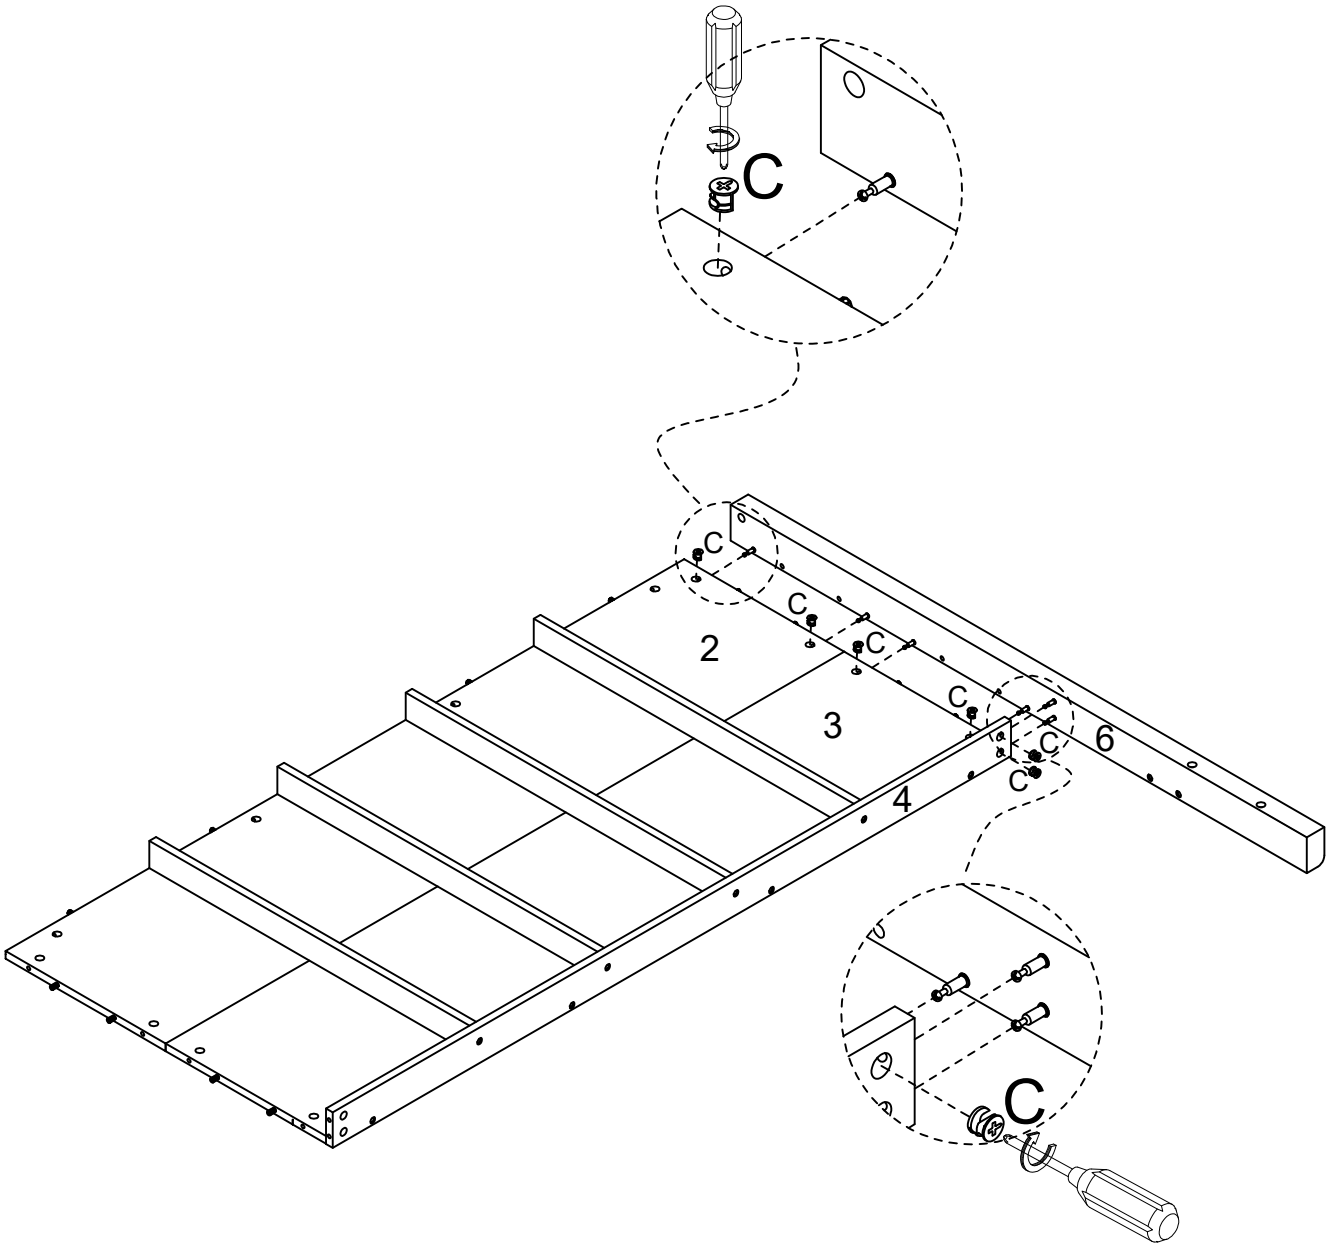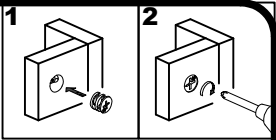
Step 6





C

X6

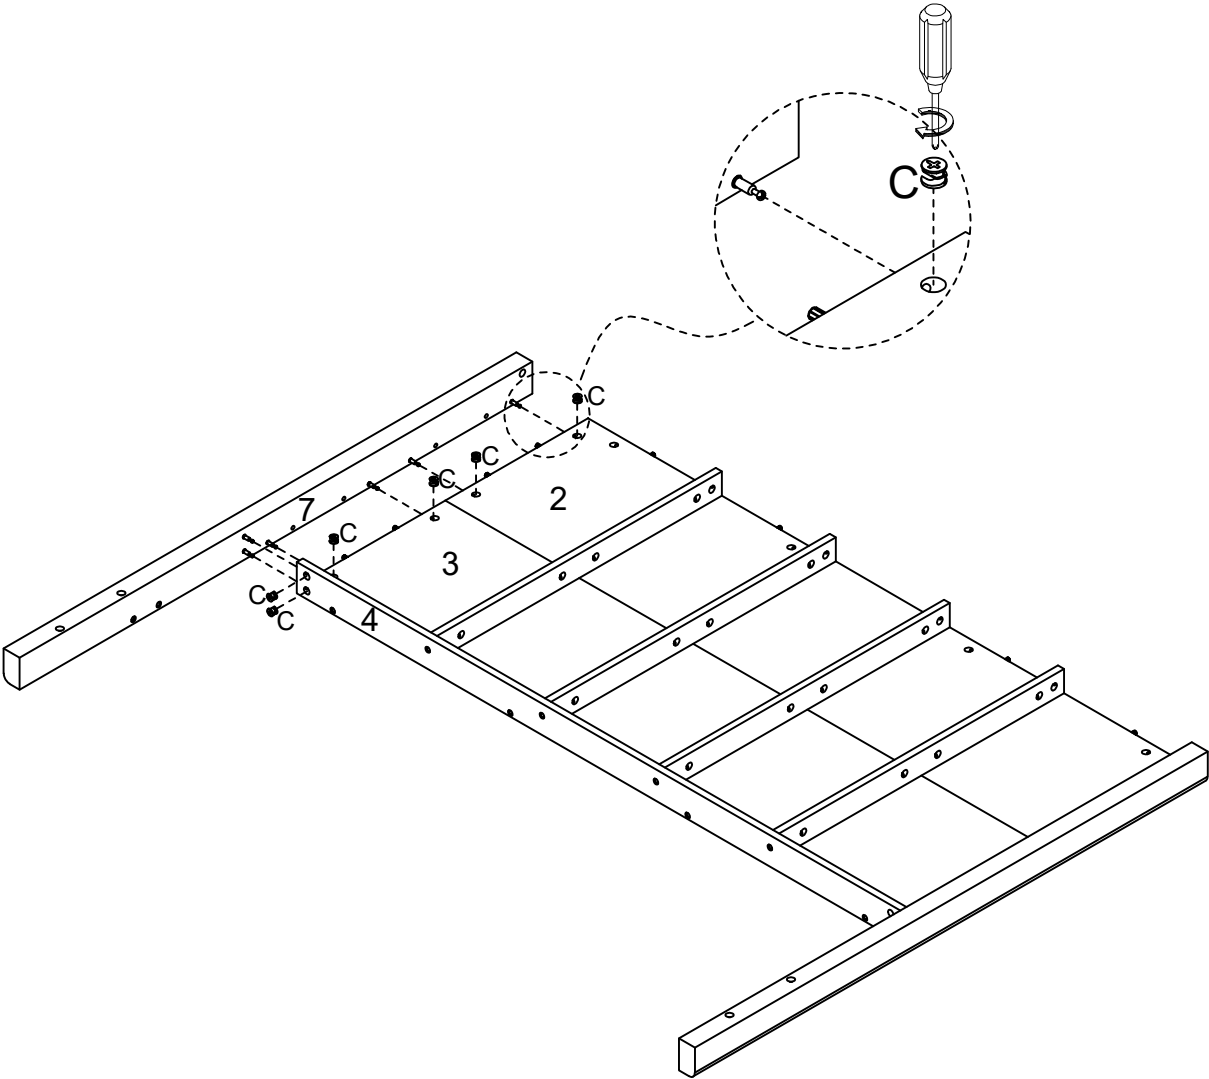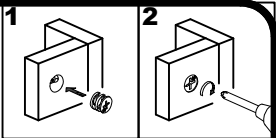
Step 7




C

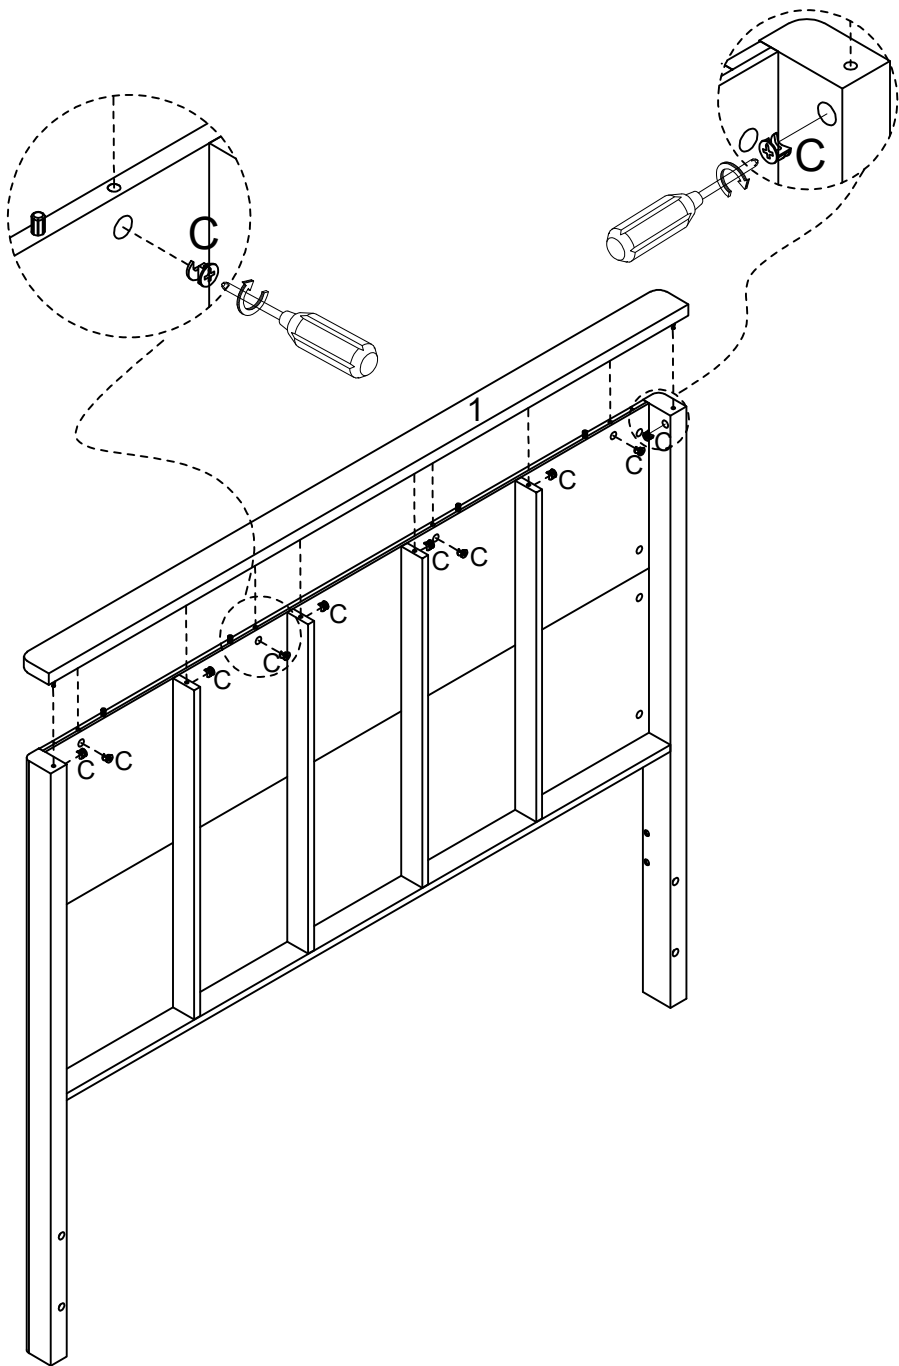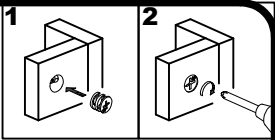X6



Step 8





C

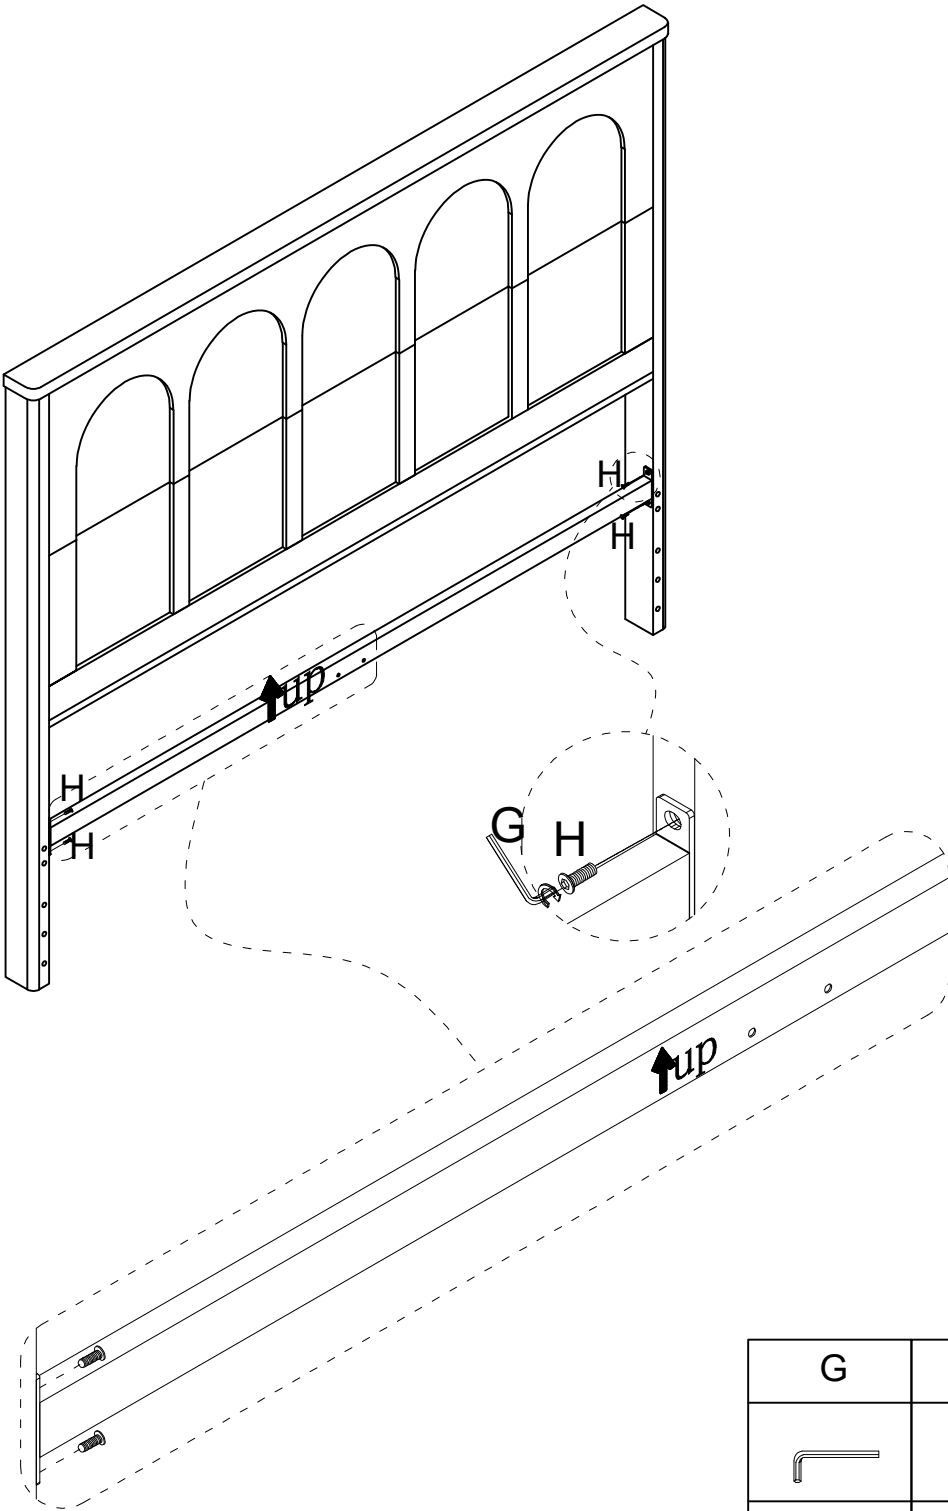X10


Step 9





G	H
	
X1	X4

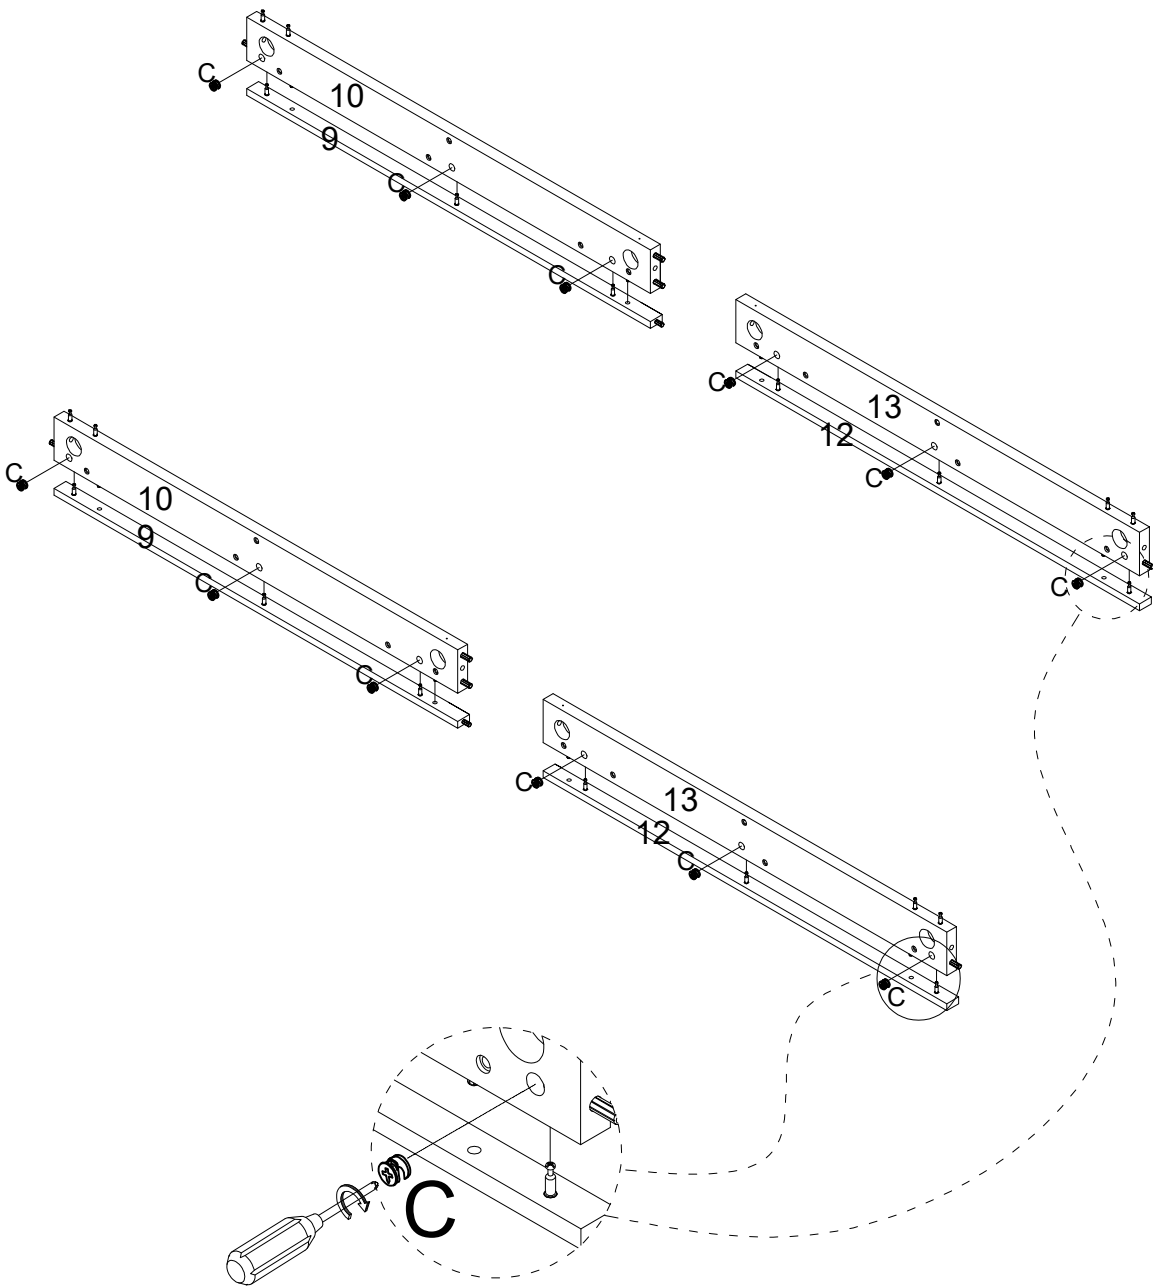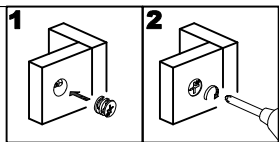
Step 10




C

X12

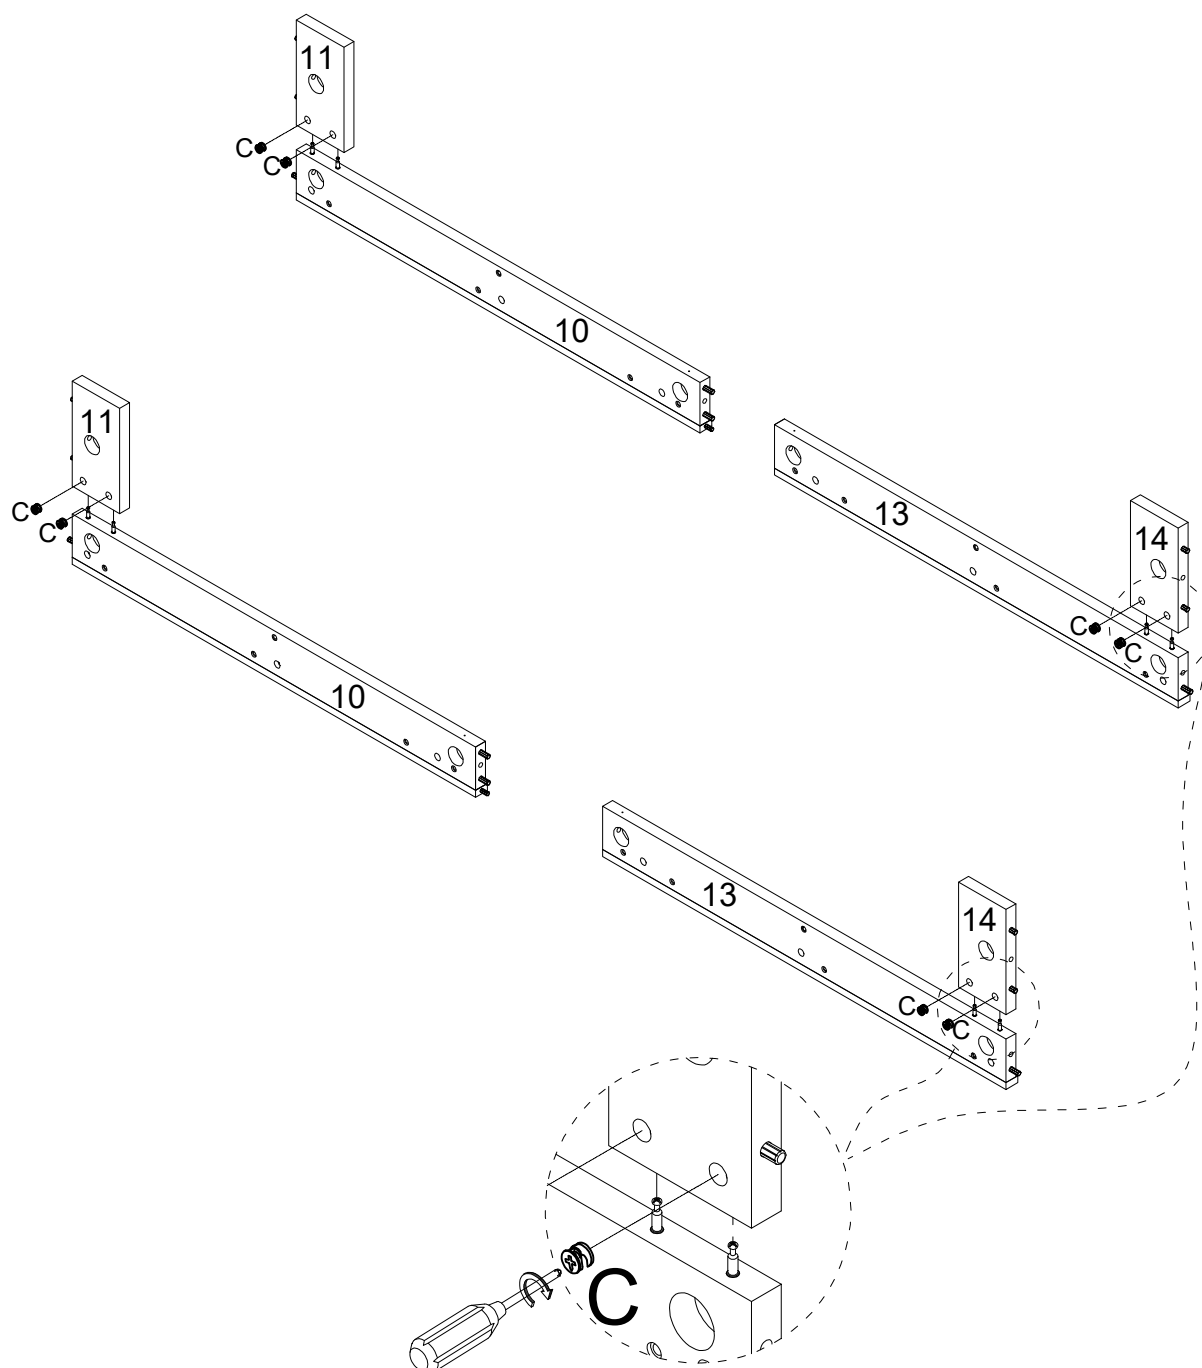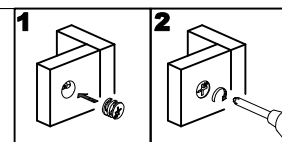



Step 11

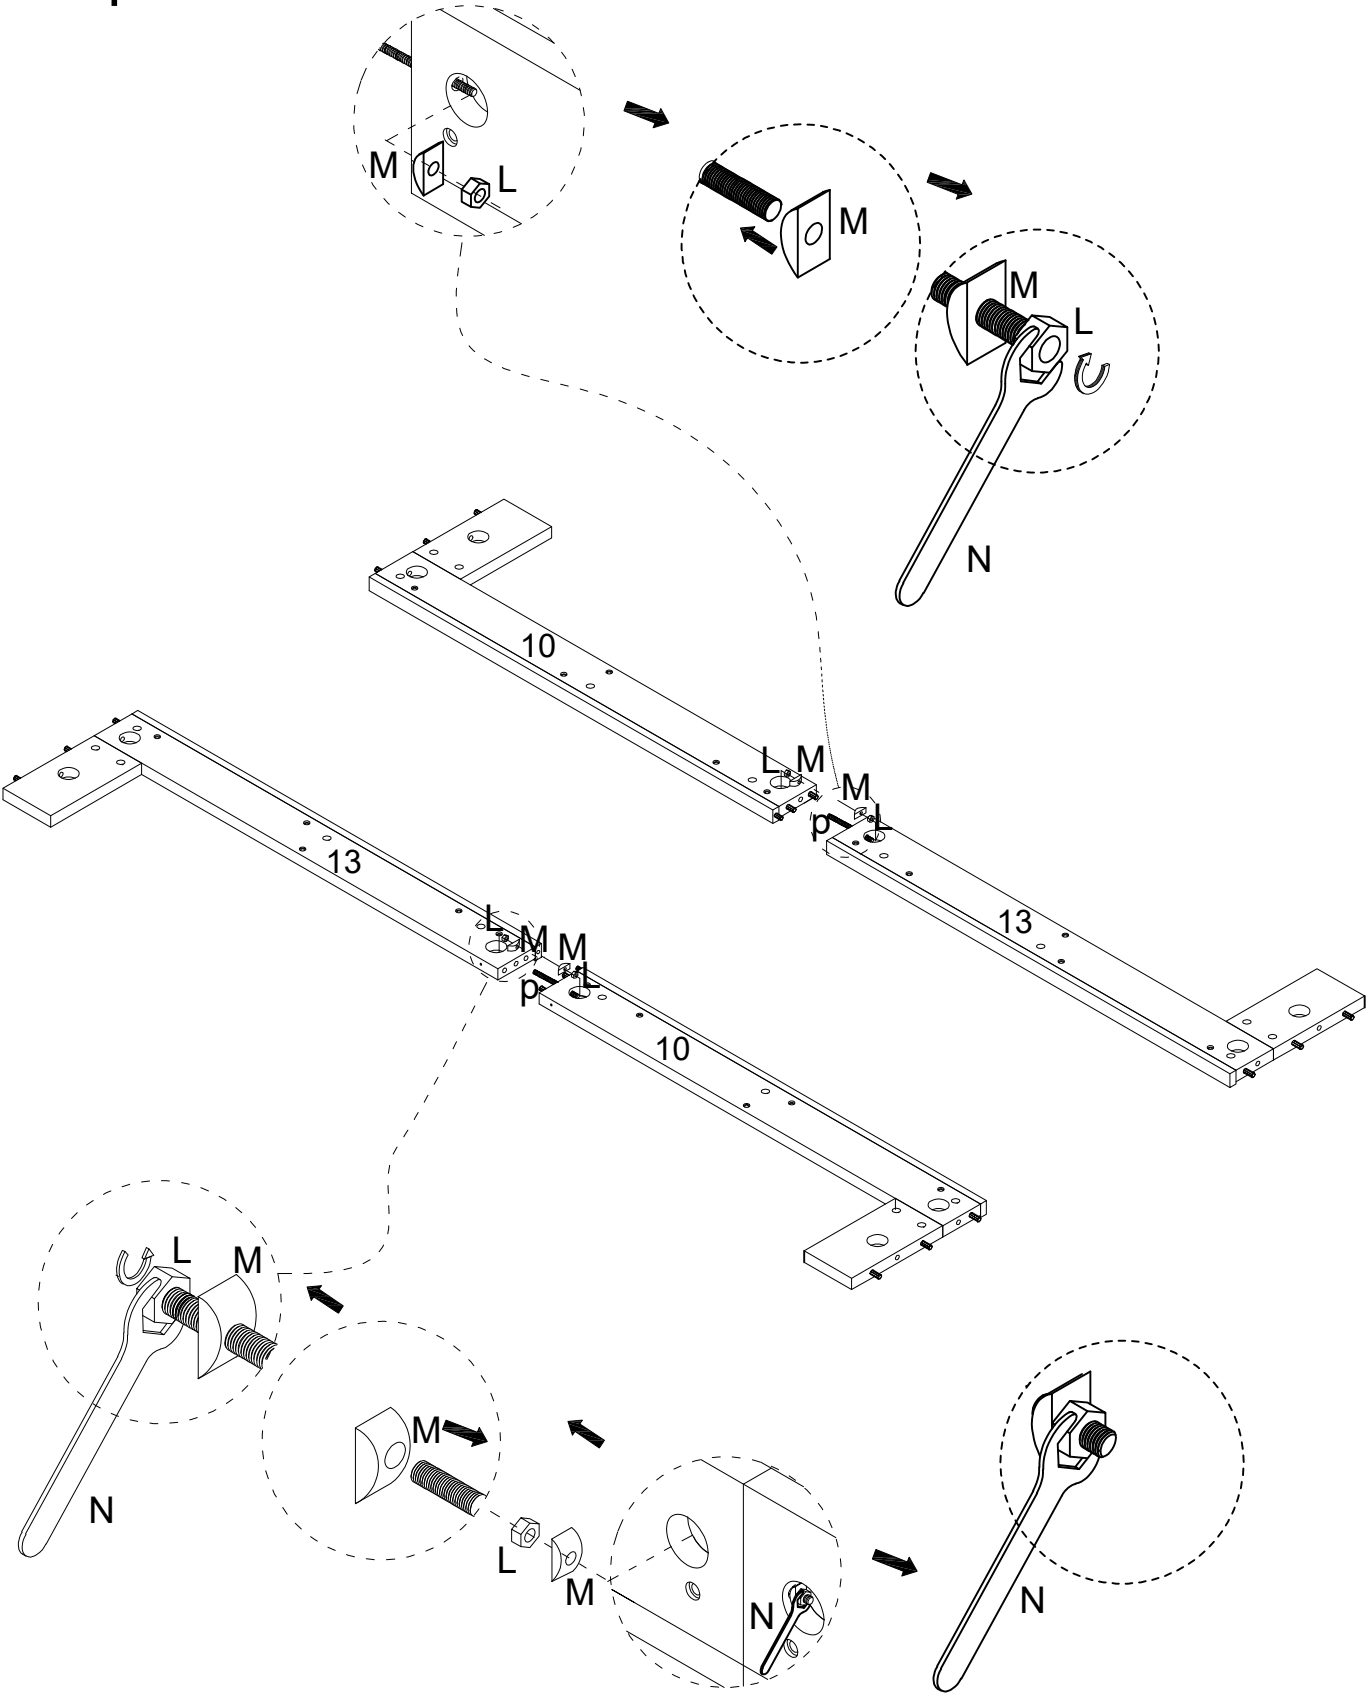


C

X8





Step 12

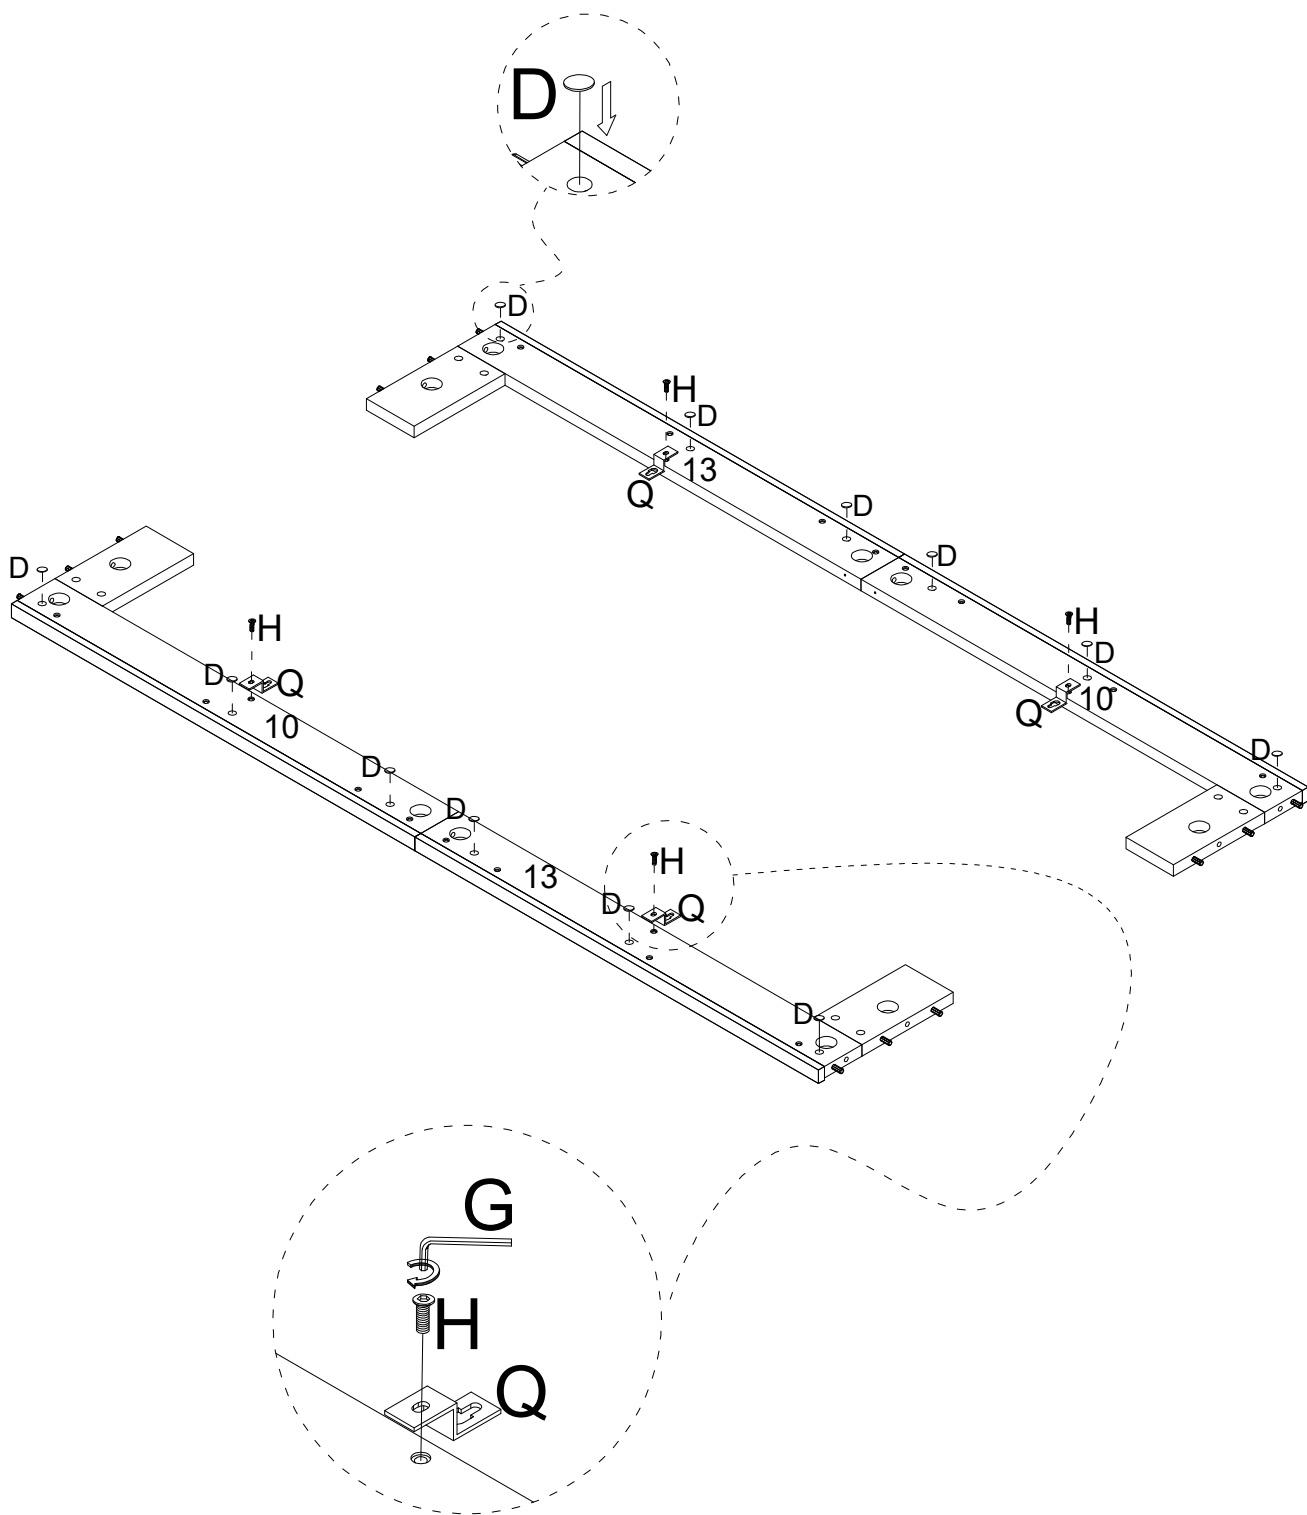


N	M	L	p
			
X2	X4	X4	X2



Step 13




G	H	Q	D
			
X1	X4	X4	X12

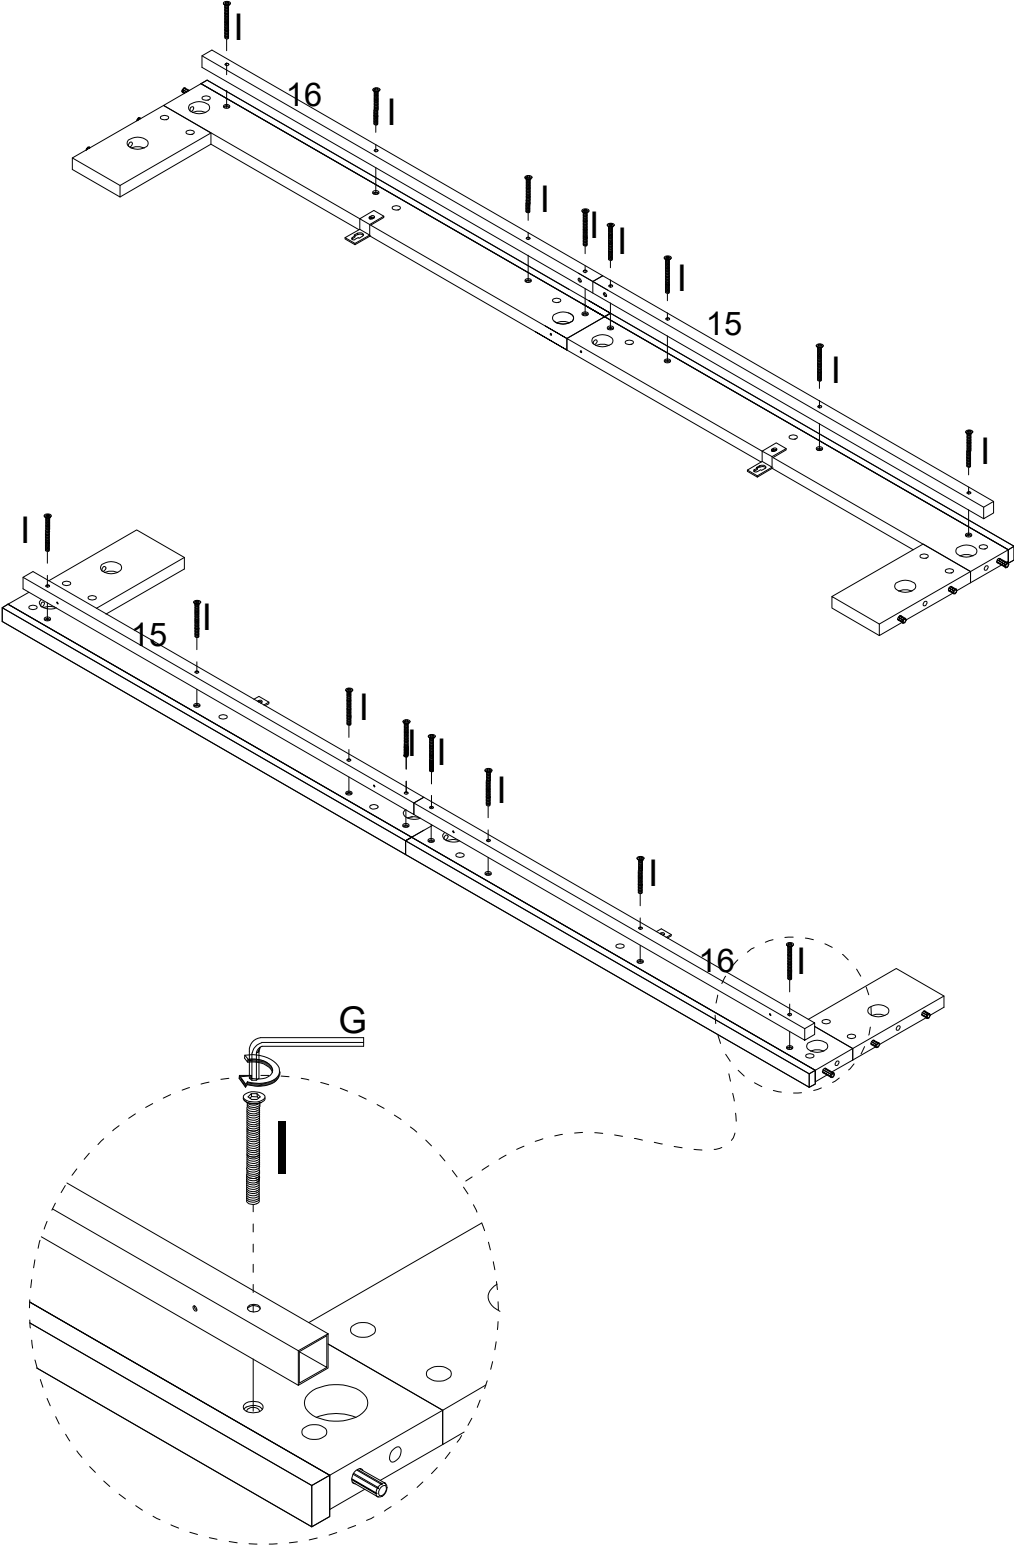


Step 14




G	I
	
X1	X16

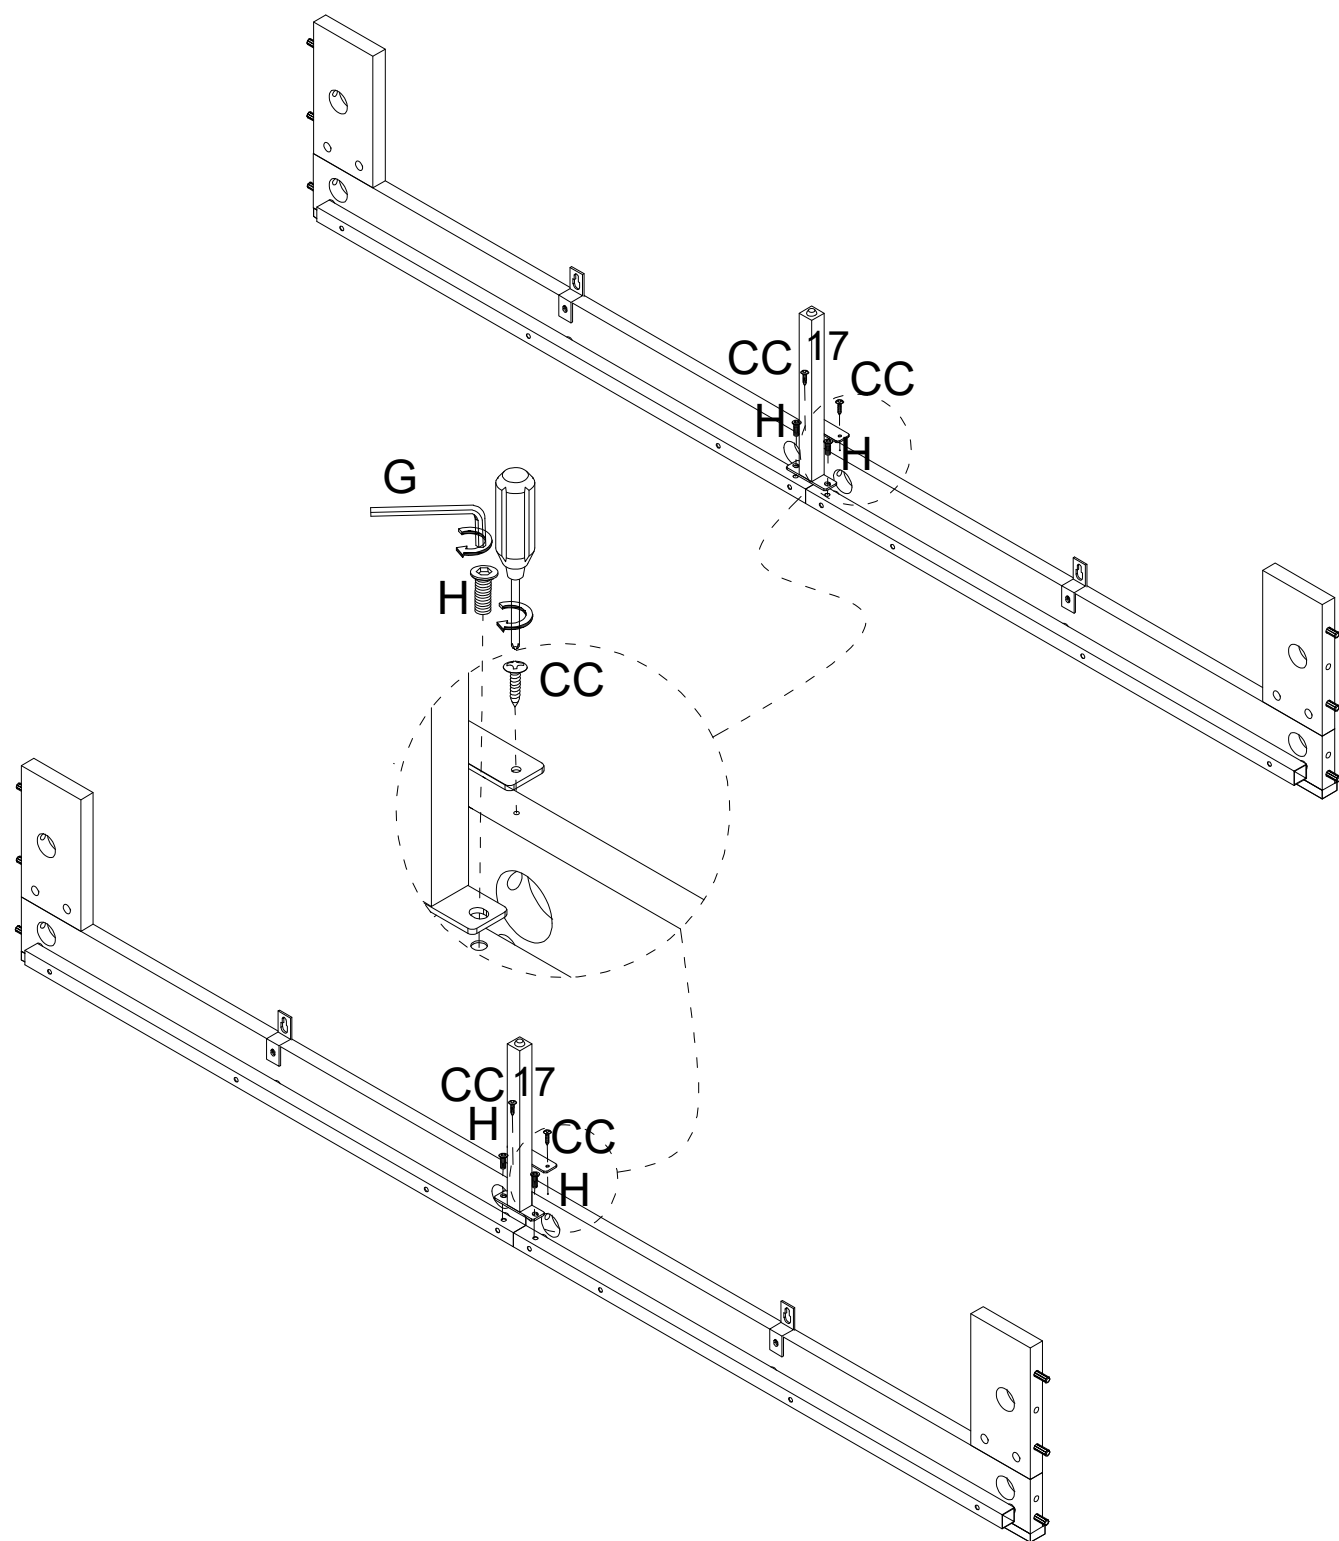Step 15





G	H	V
		
X1	X4	X4

Step 16

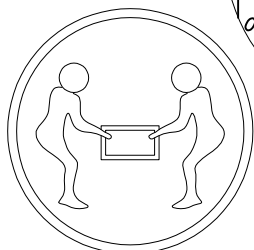




CAUTION: Heavy! You may need assistance with this step.

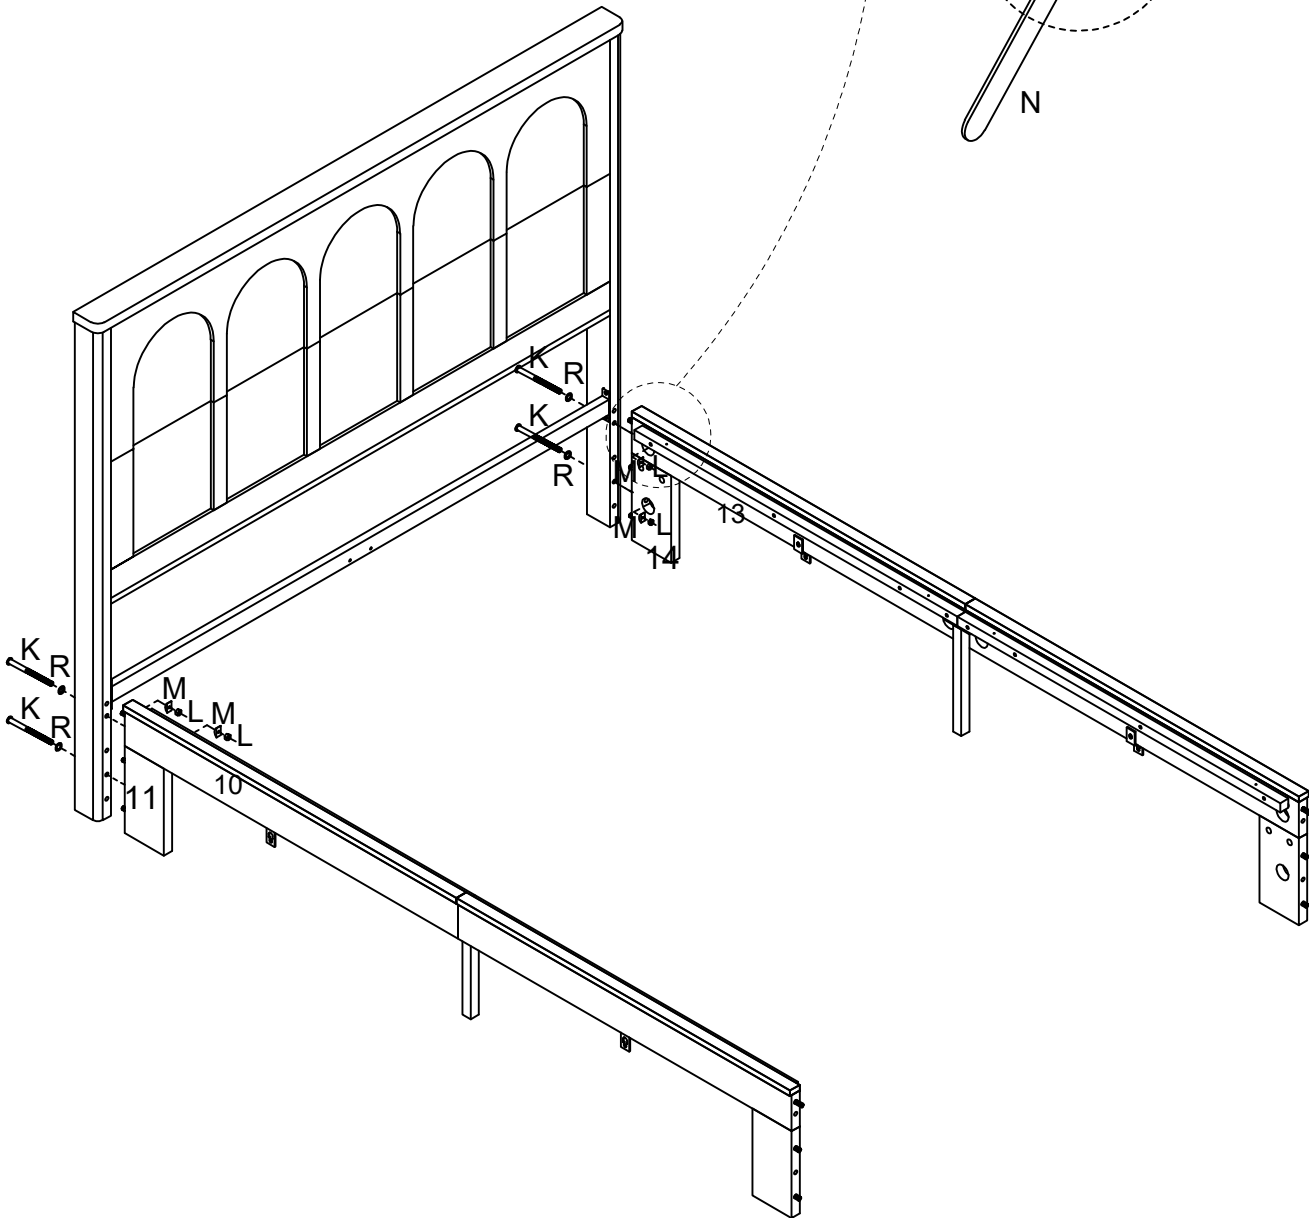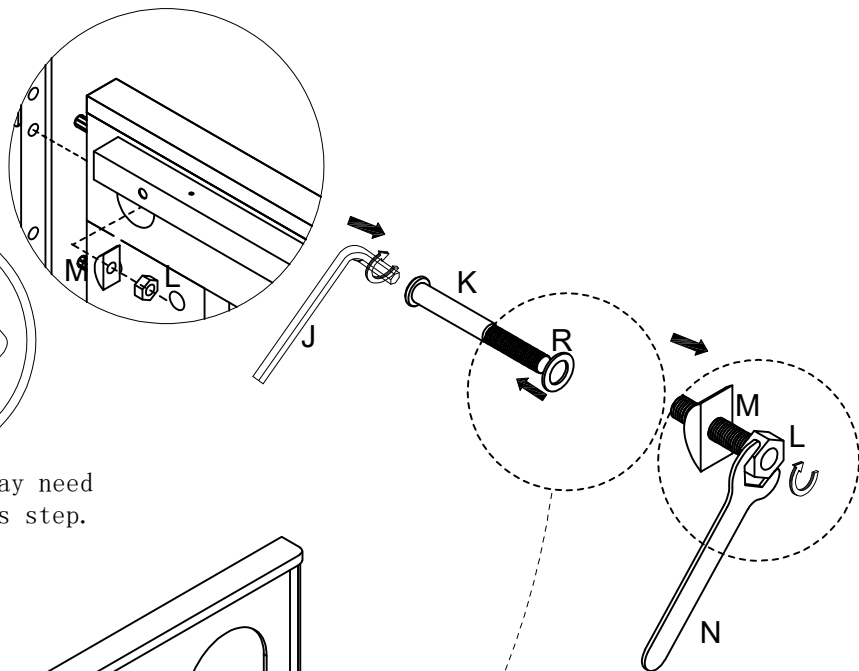


J	N	M	L	K	R
X1	X1	X4	X4	X4	X4



Step 17

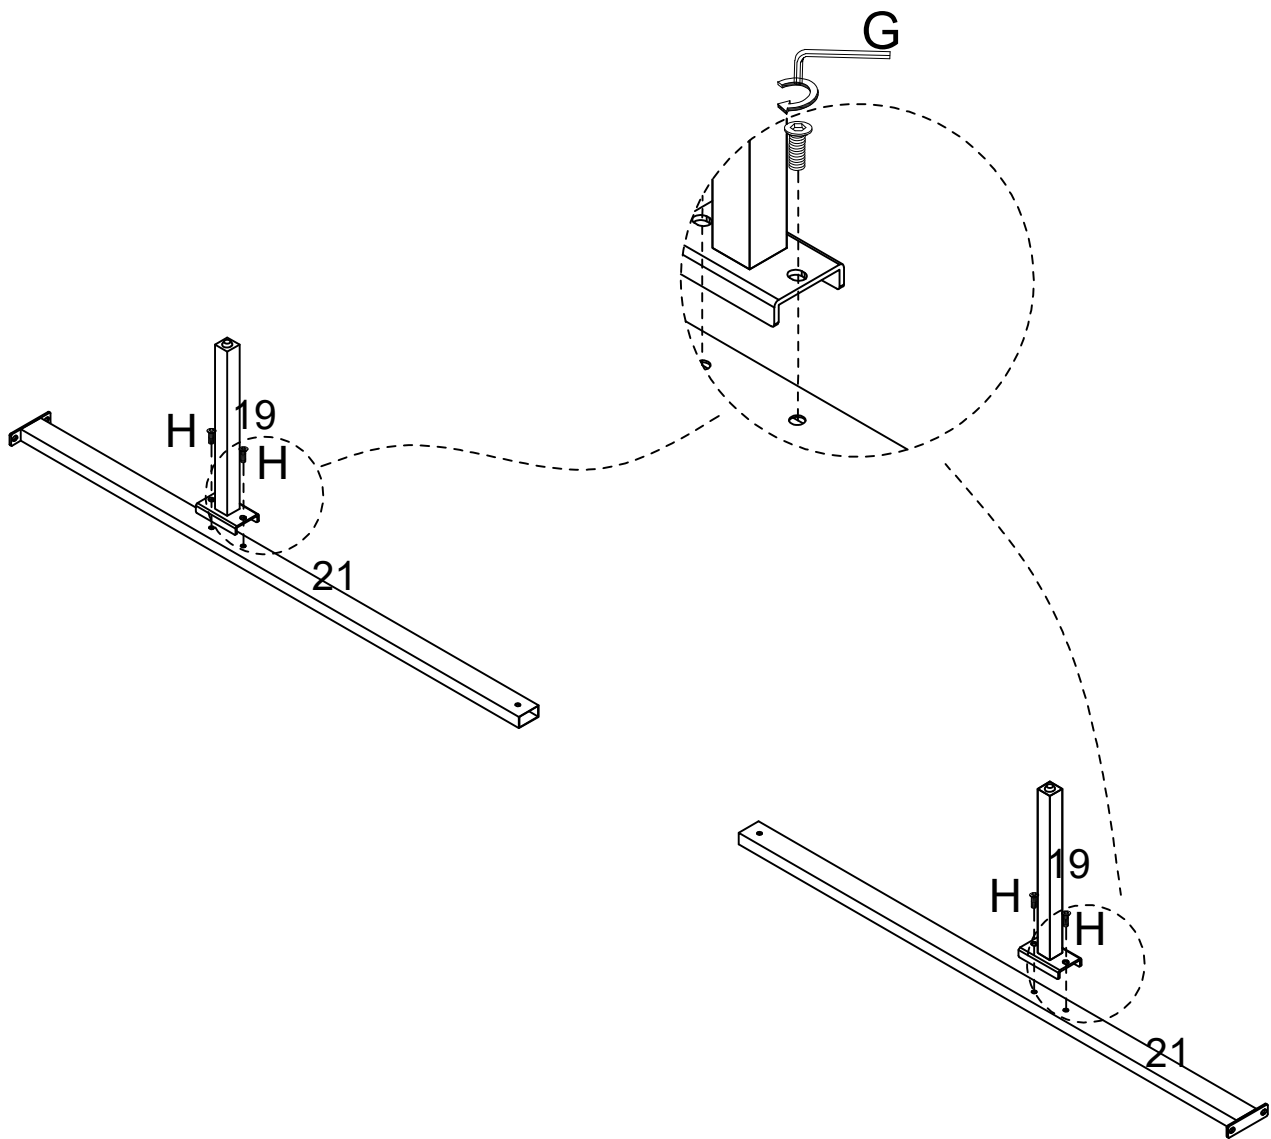

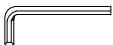
G	H
	
X1	X4



Step 18

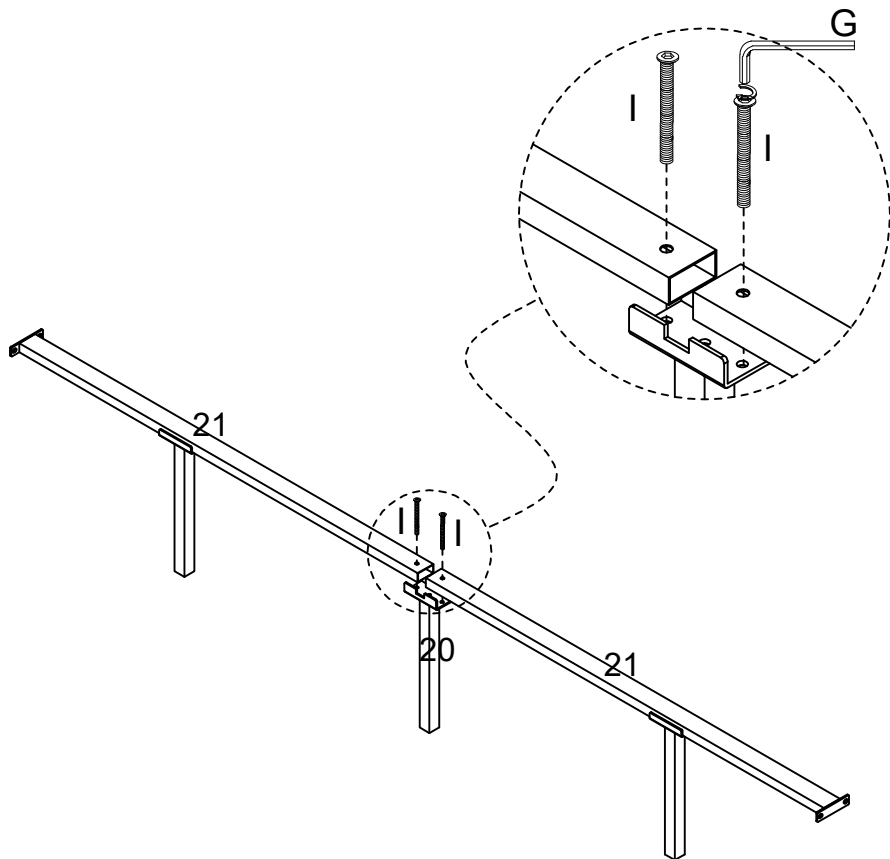


G	I
	
X1	X2

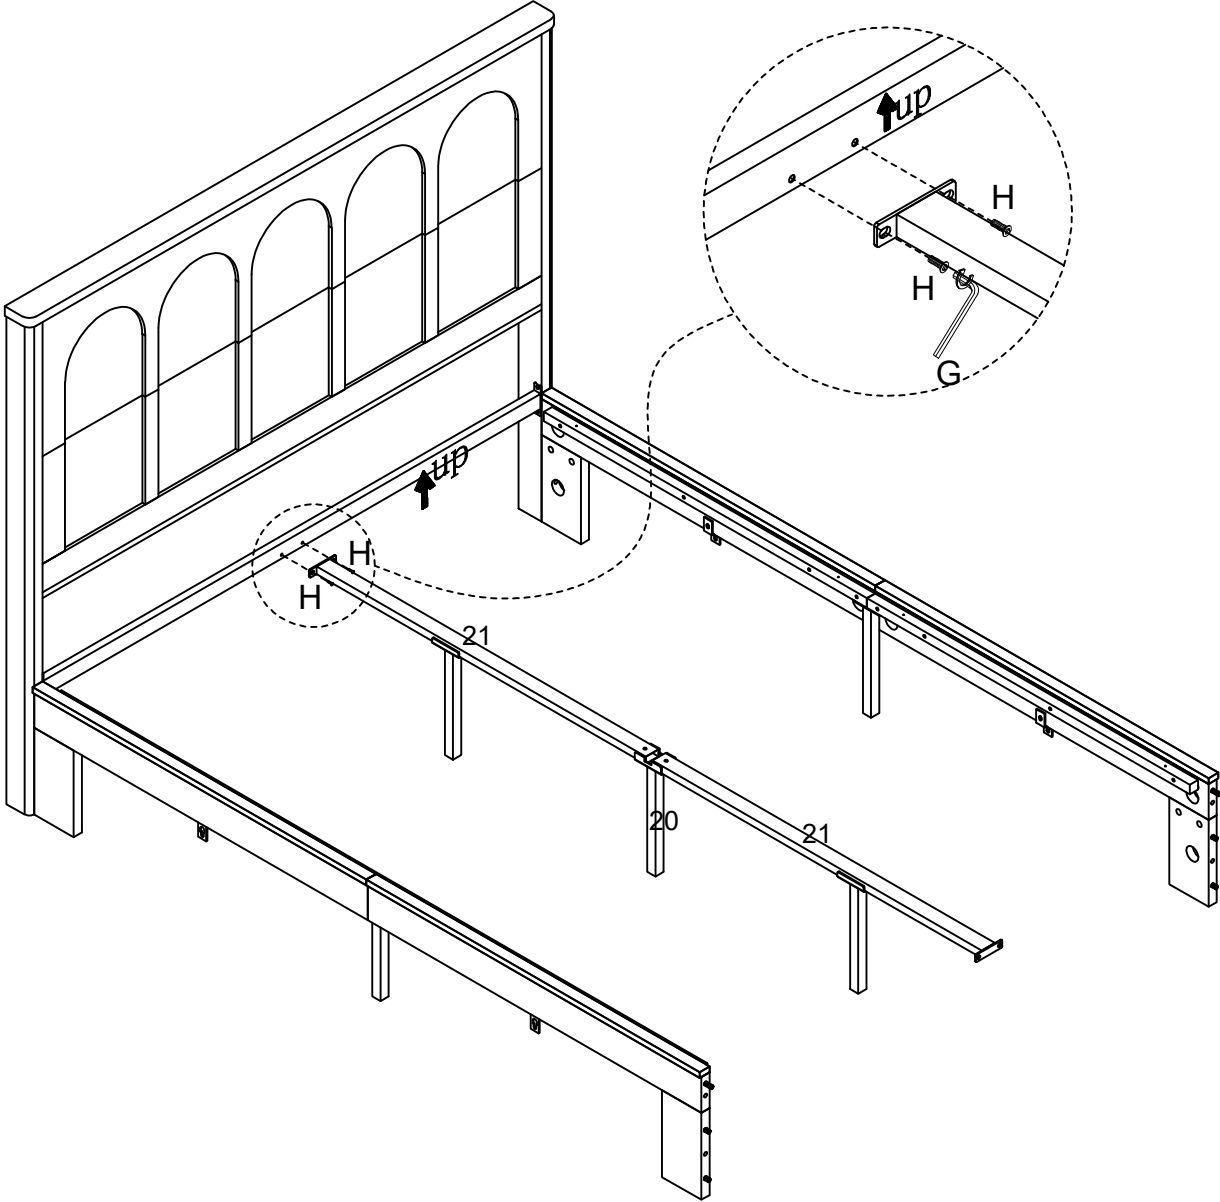

Step 19




G	H
	
X1	X2

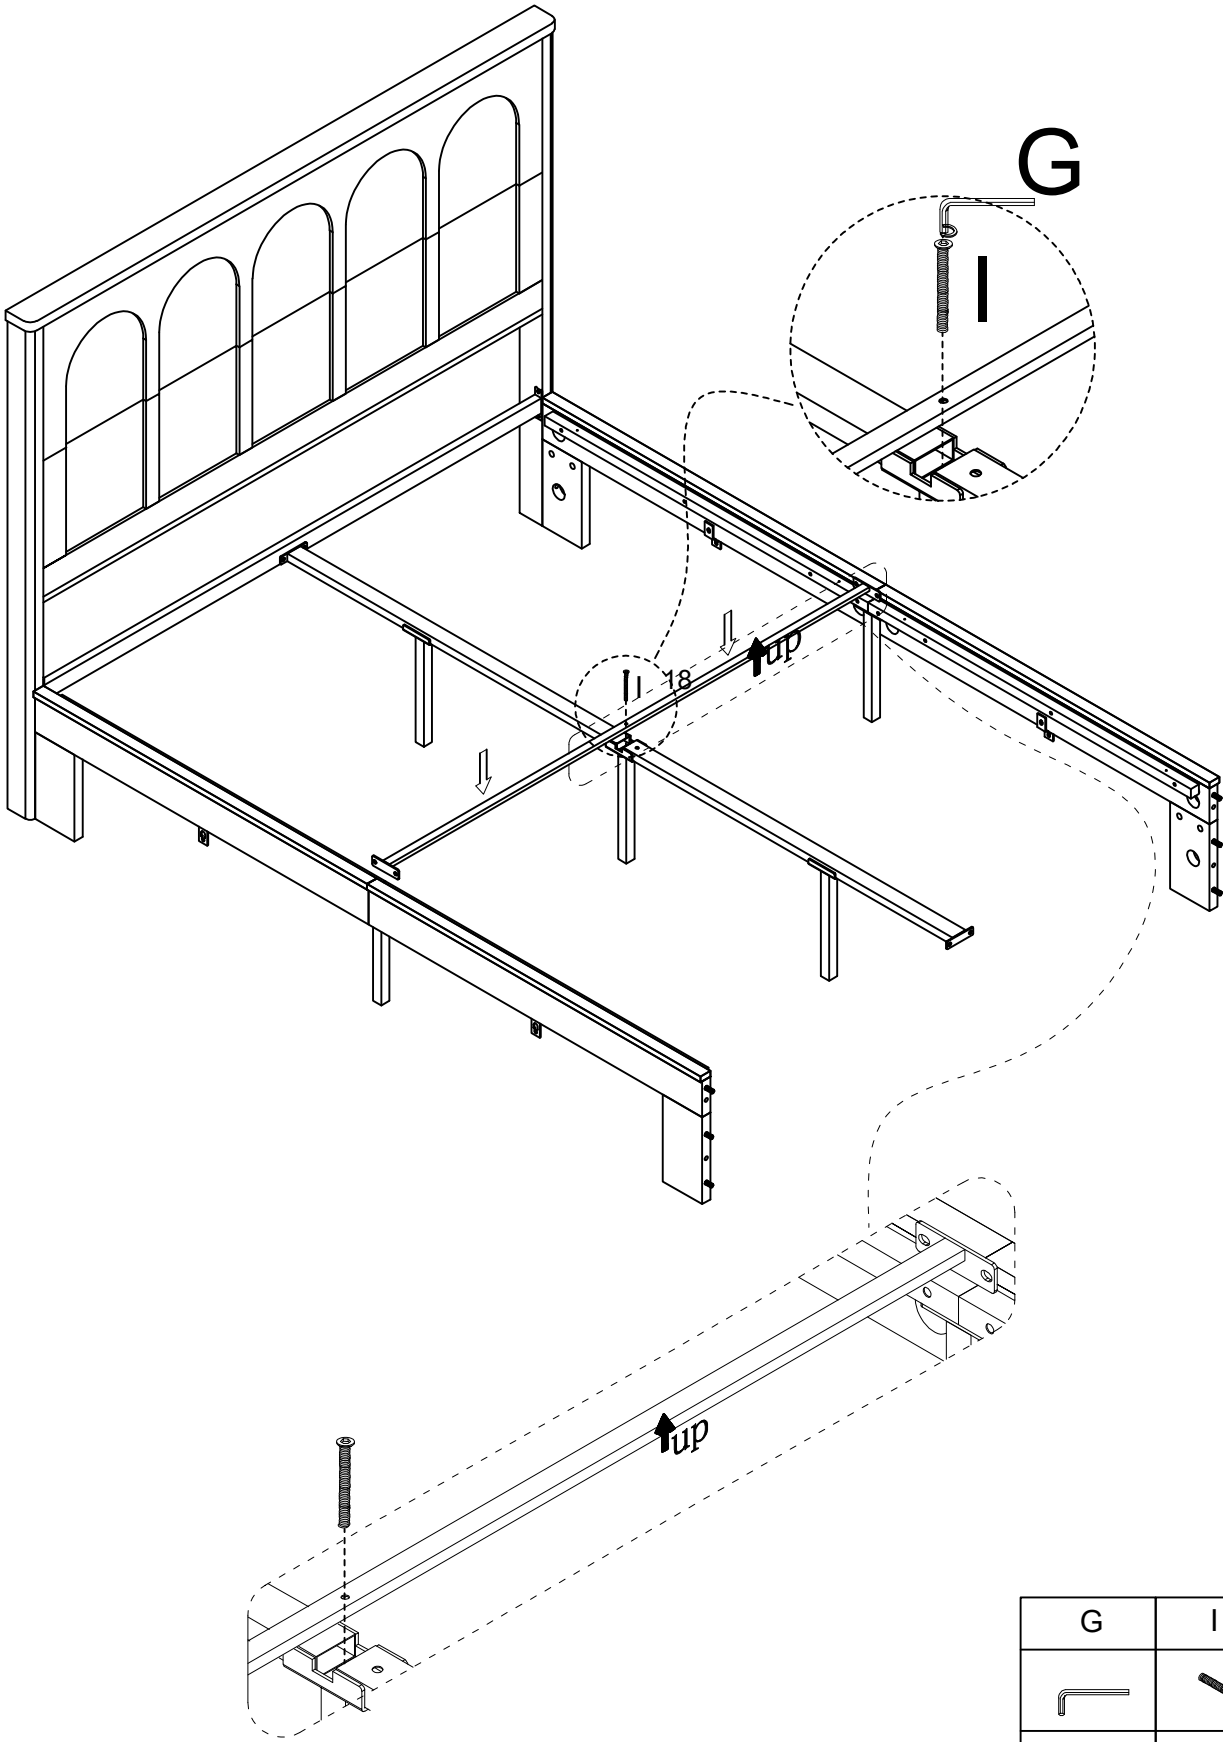

Step 20




G	I
	
X1	X1

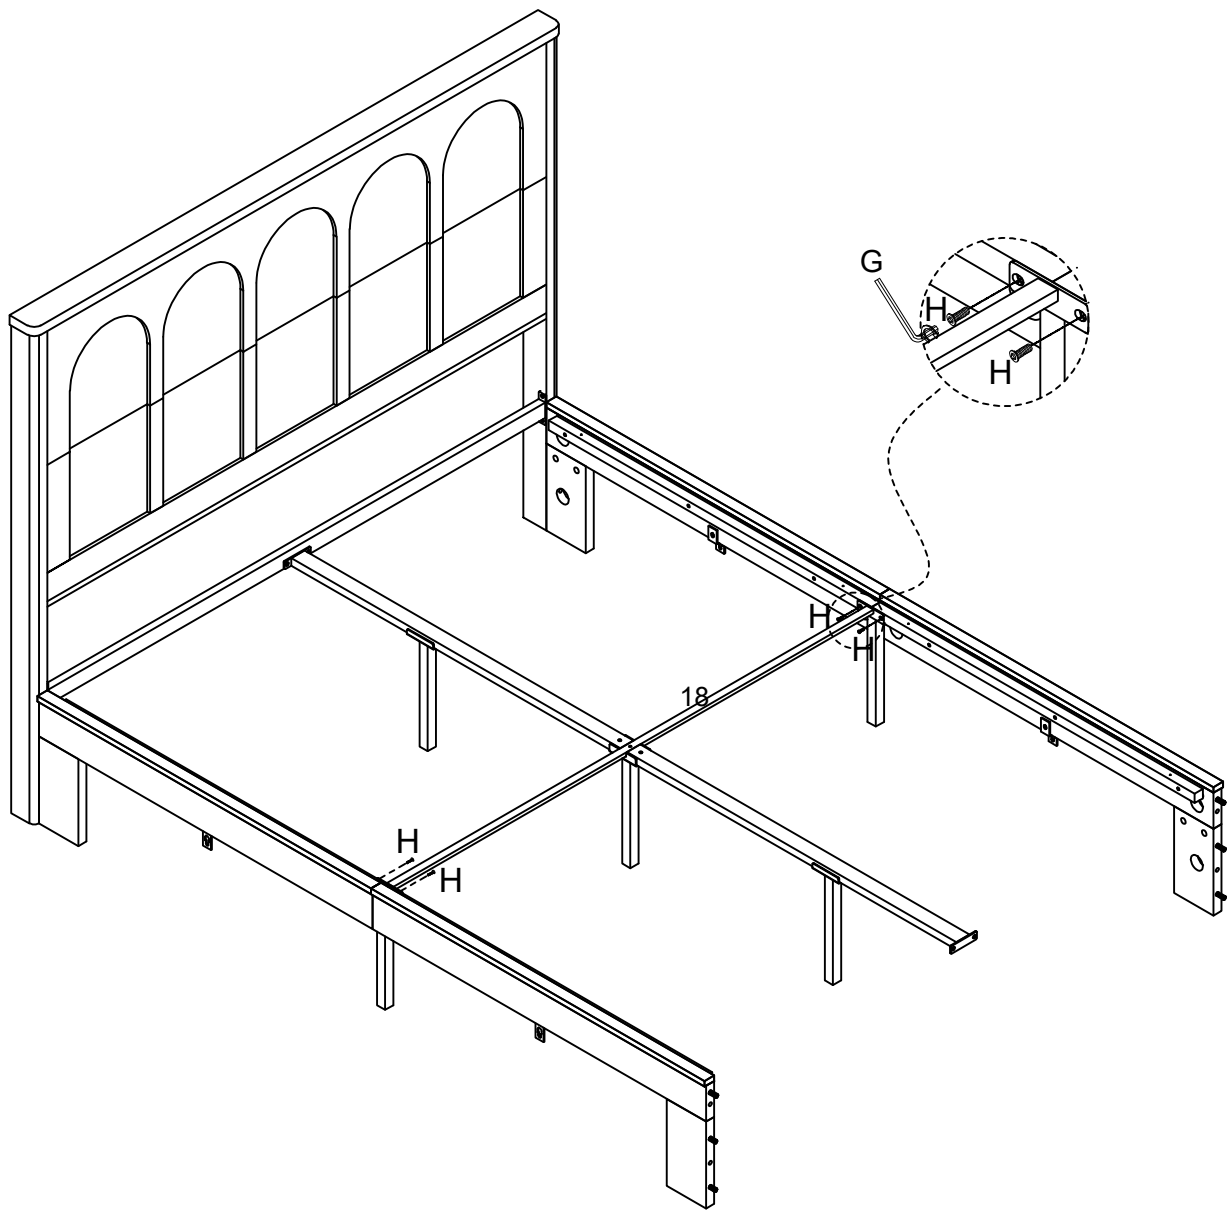
Step 21




G	H
	
X1	X4



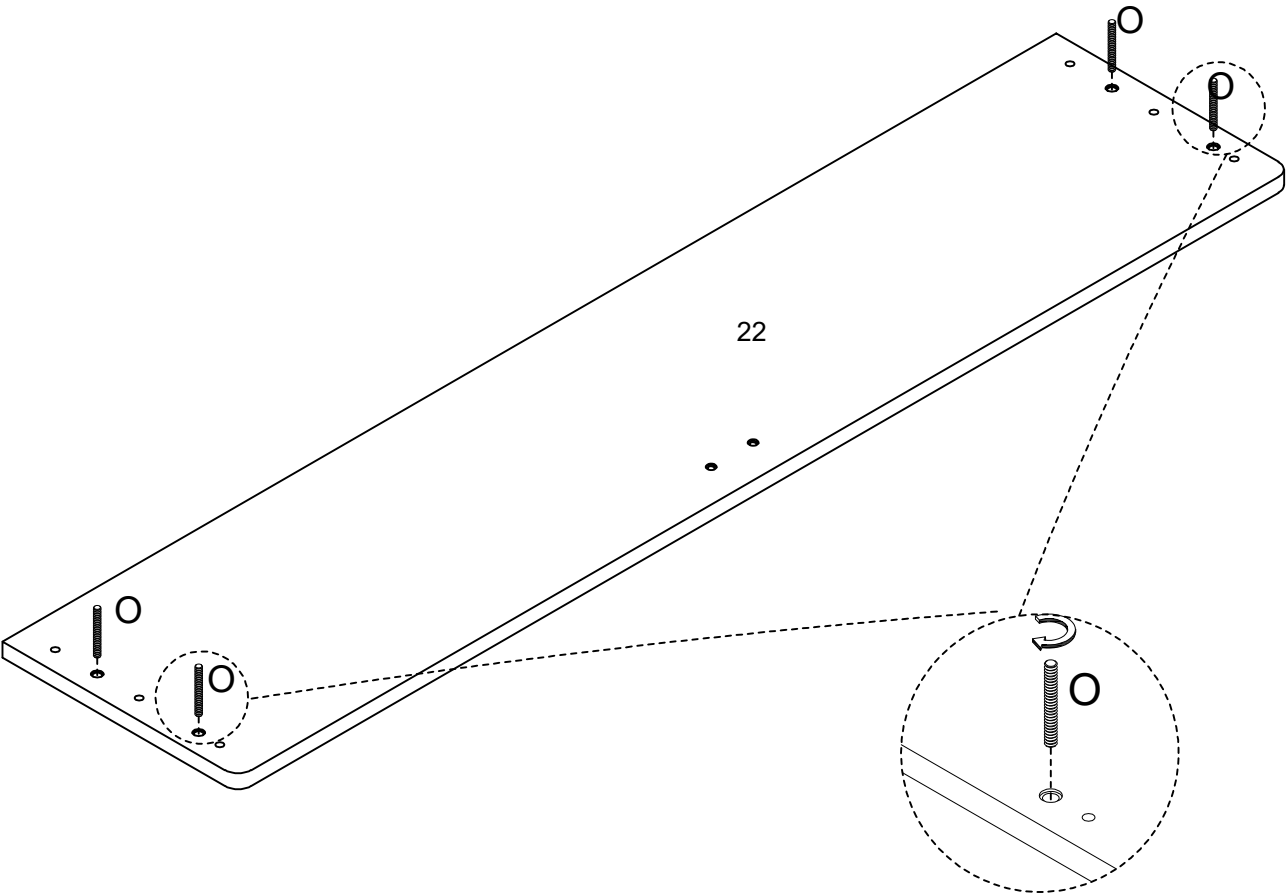


Step 22

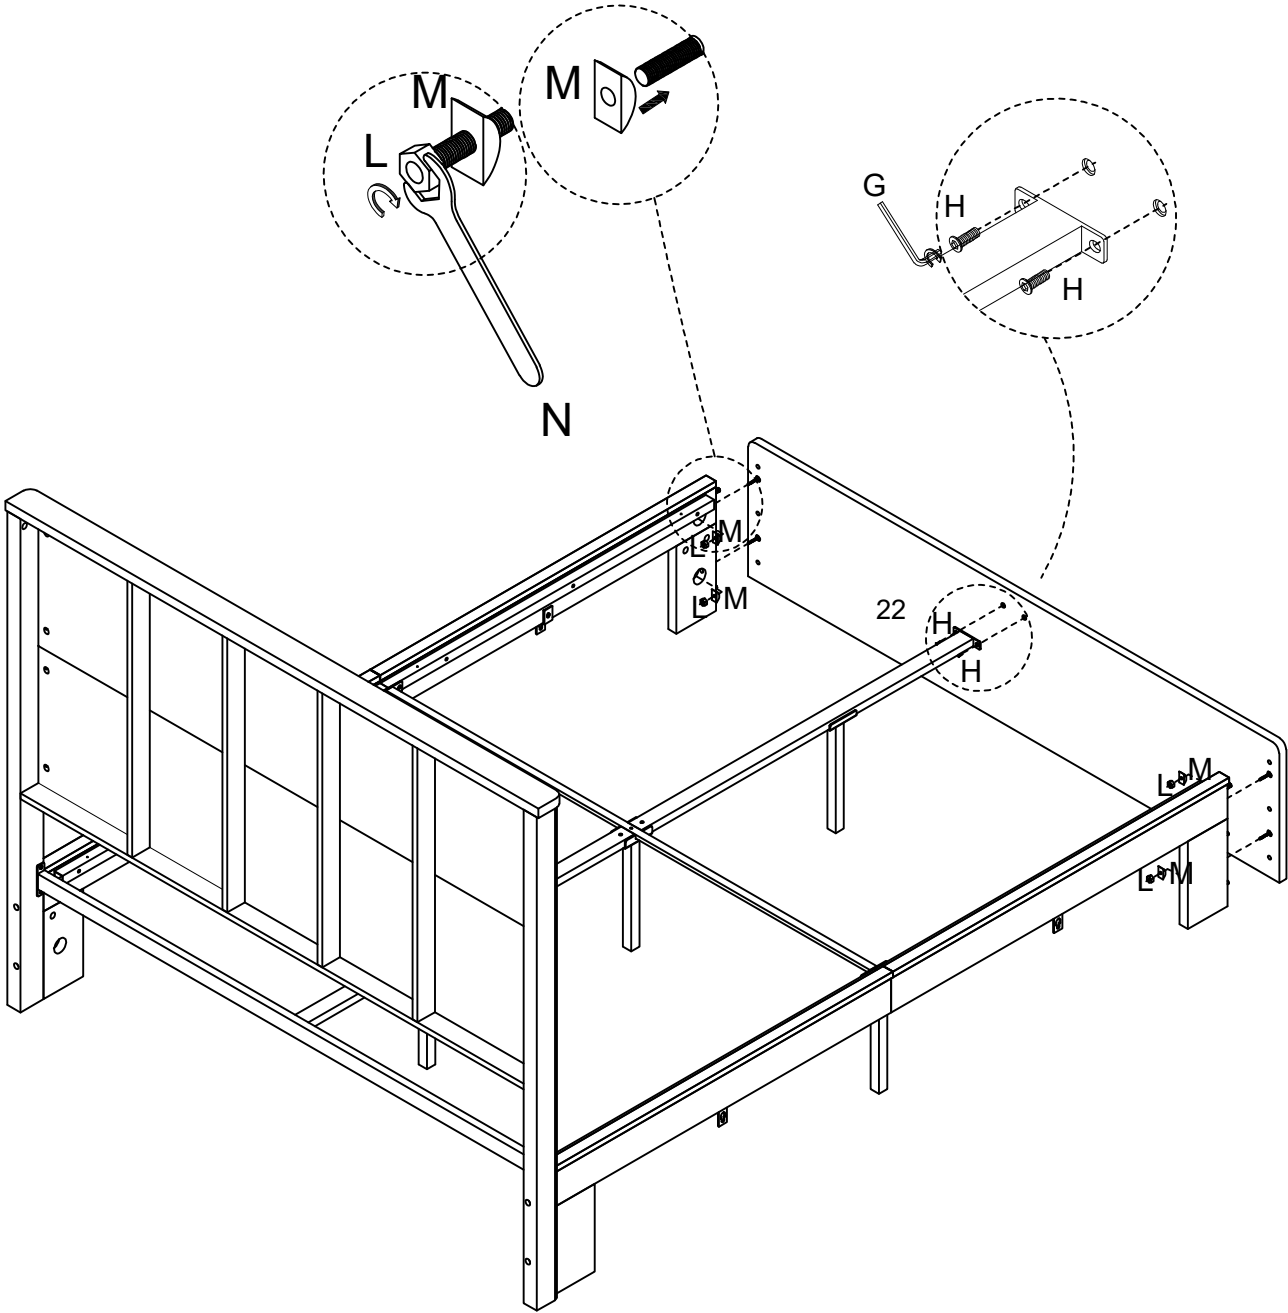


O

X4

Step 23



N	M	L	G	H
				
X1	X4	X4	X1	X2

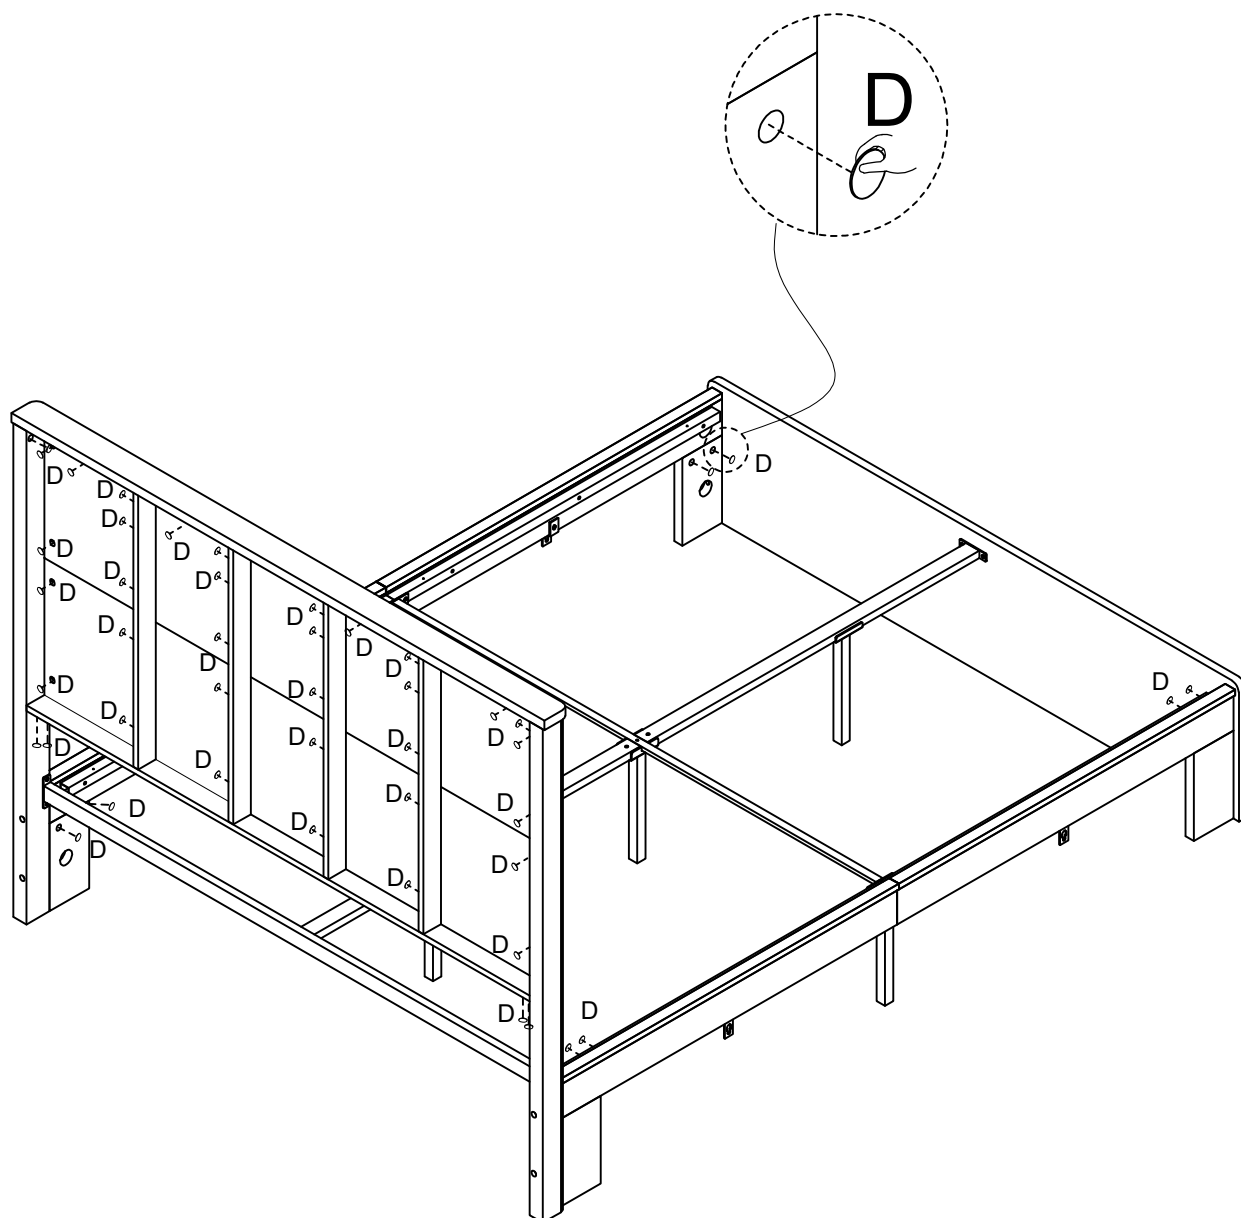Step 24





D
○
X46


Step 25

U-2


U-1

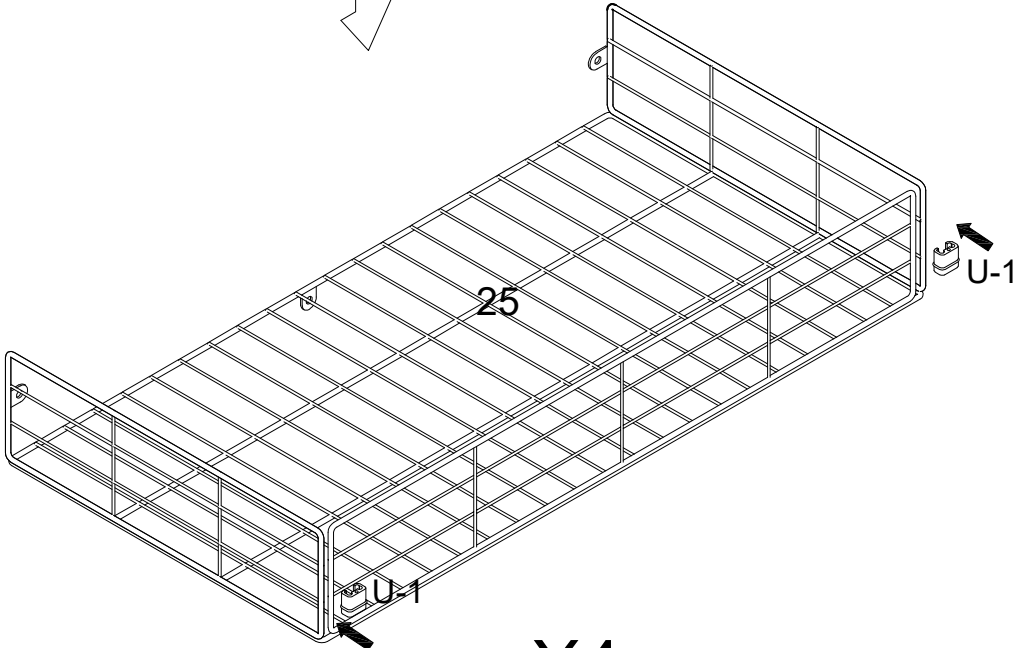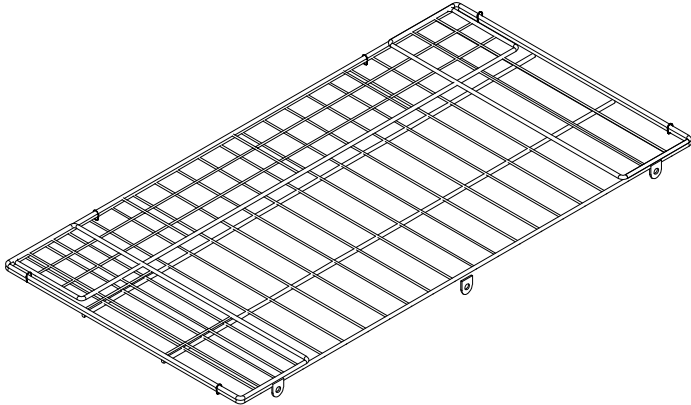

X4

U-1

X8

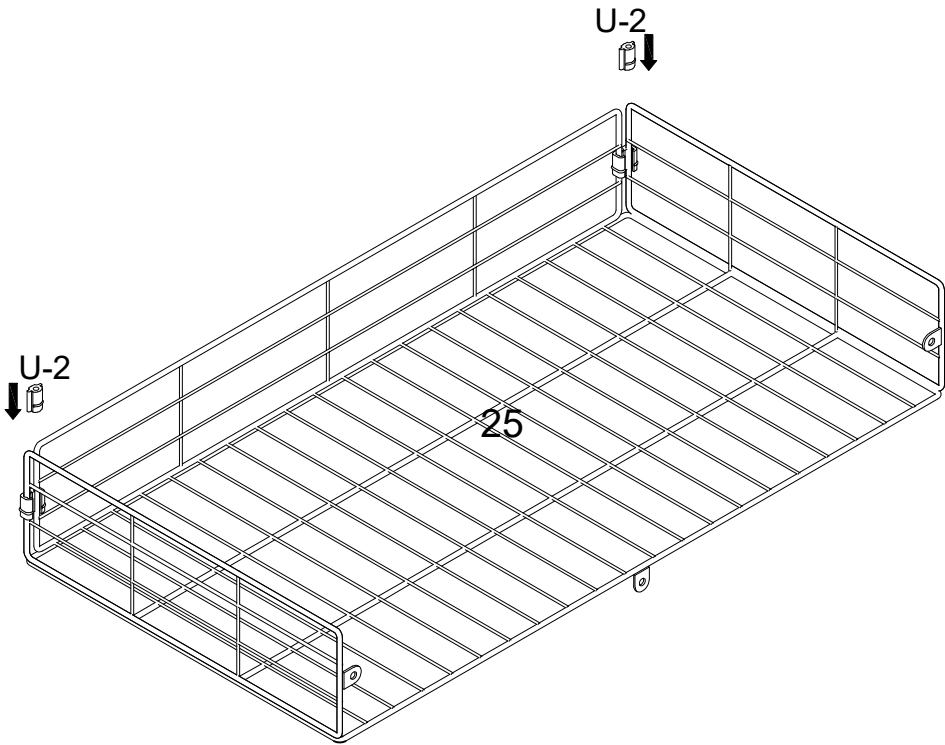Step 26






X4

U-2


X8

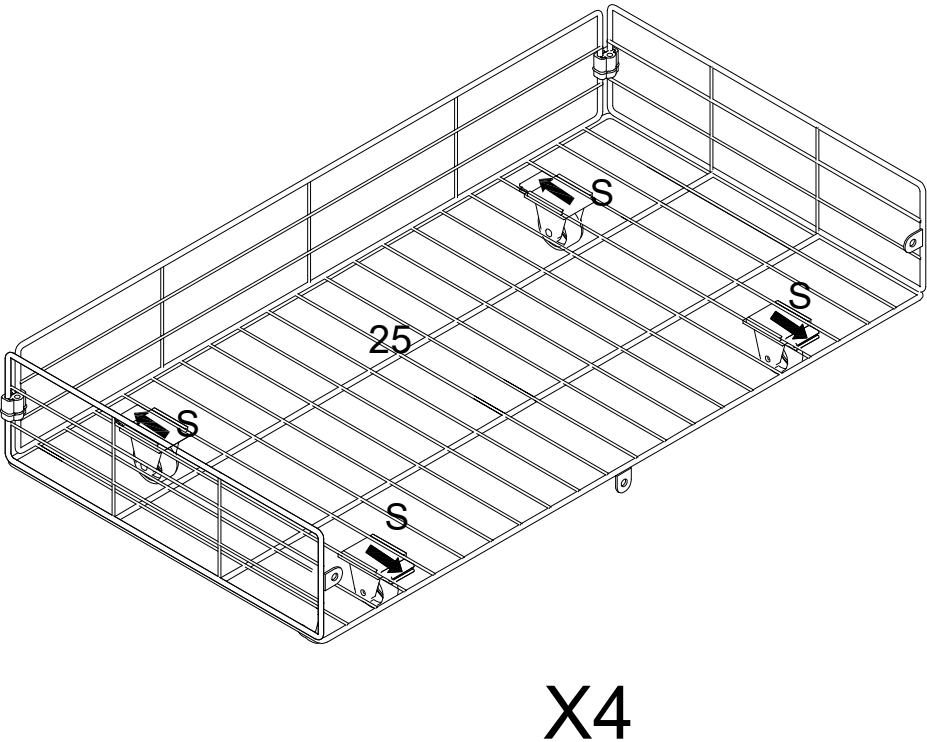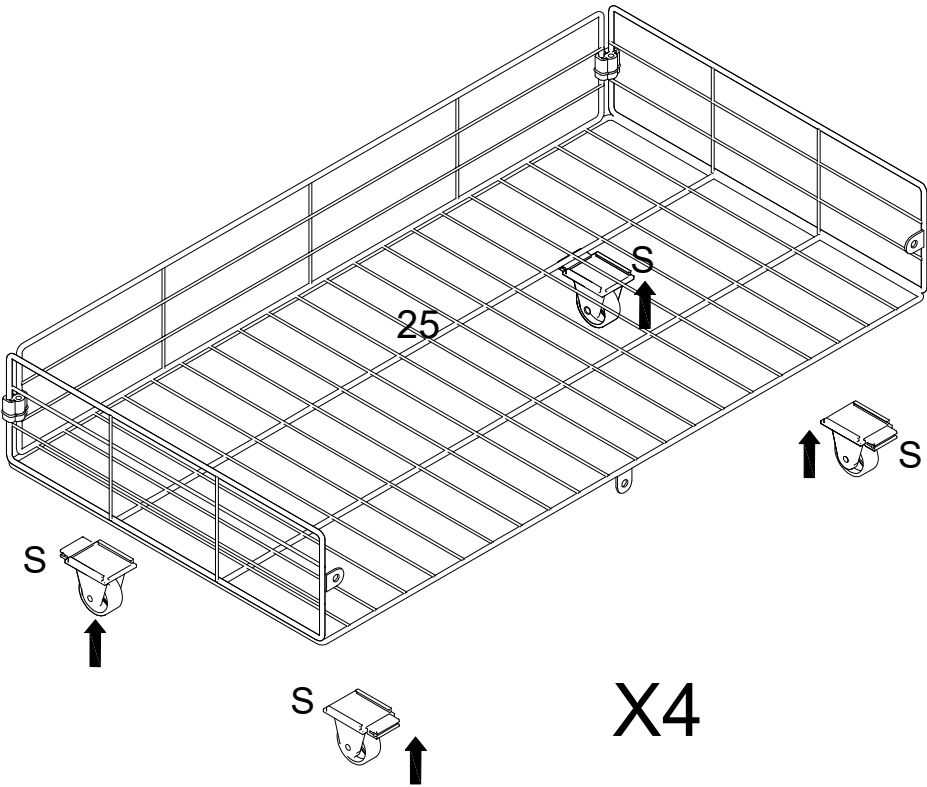


Step 27




S

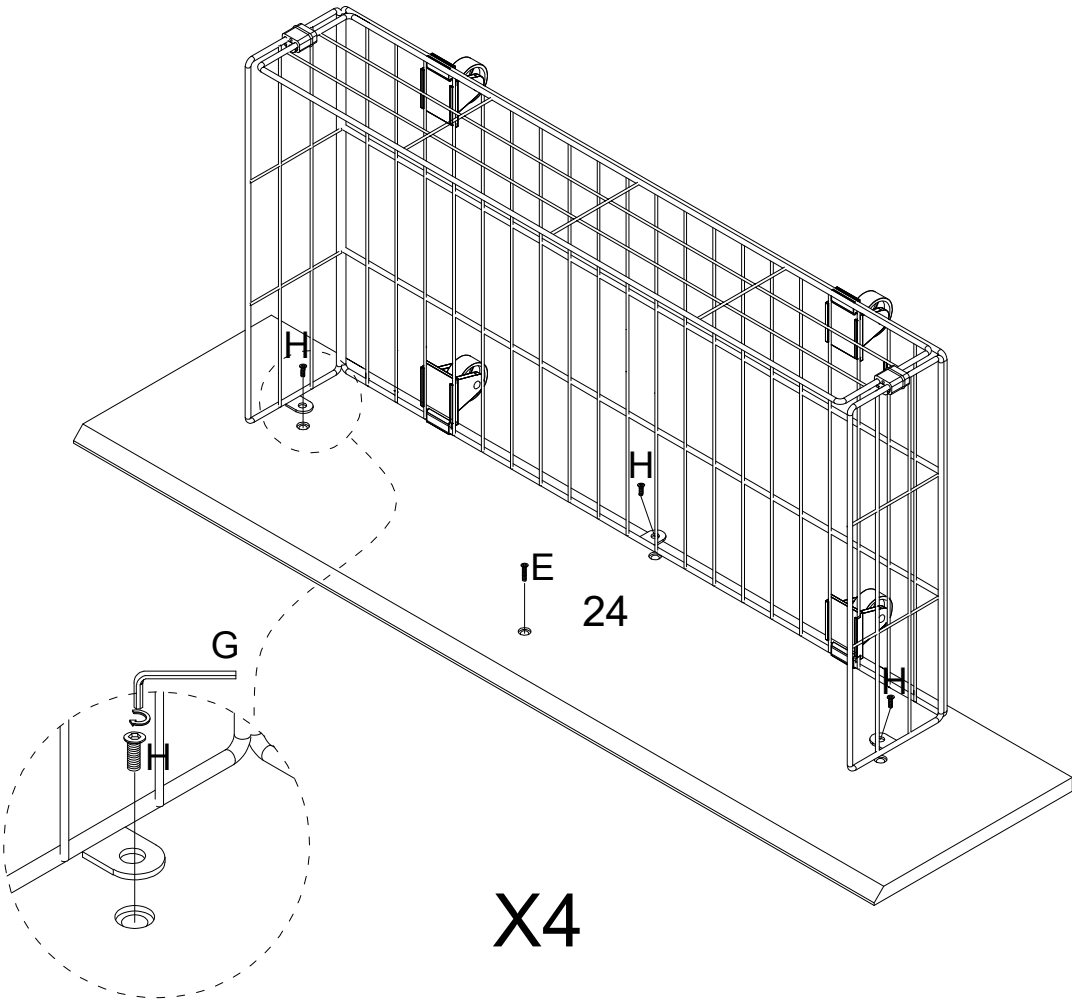X16

Step 28




G	H	E
		
X1	X12	X4

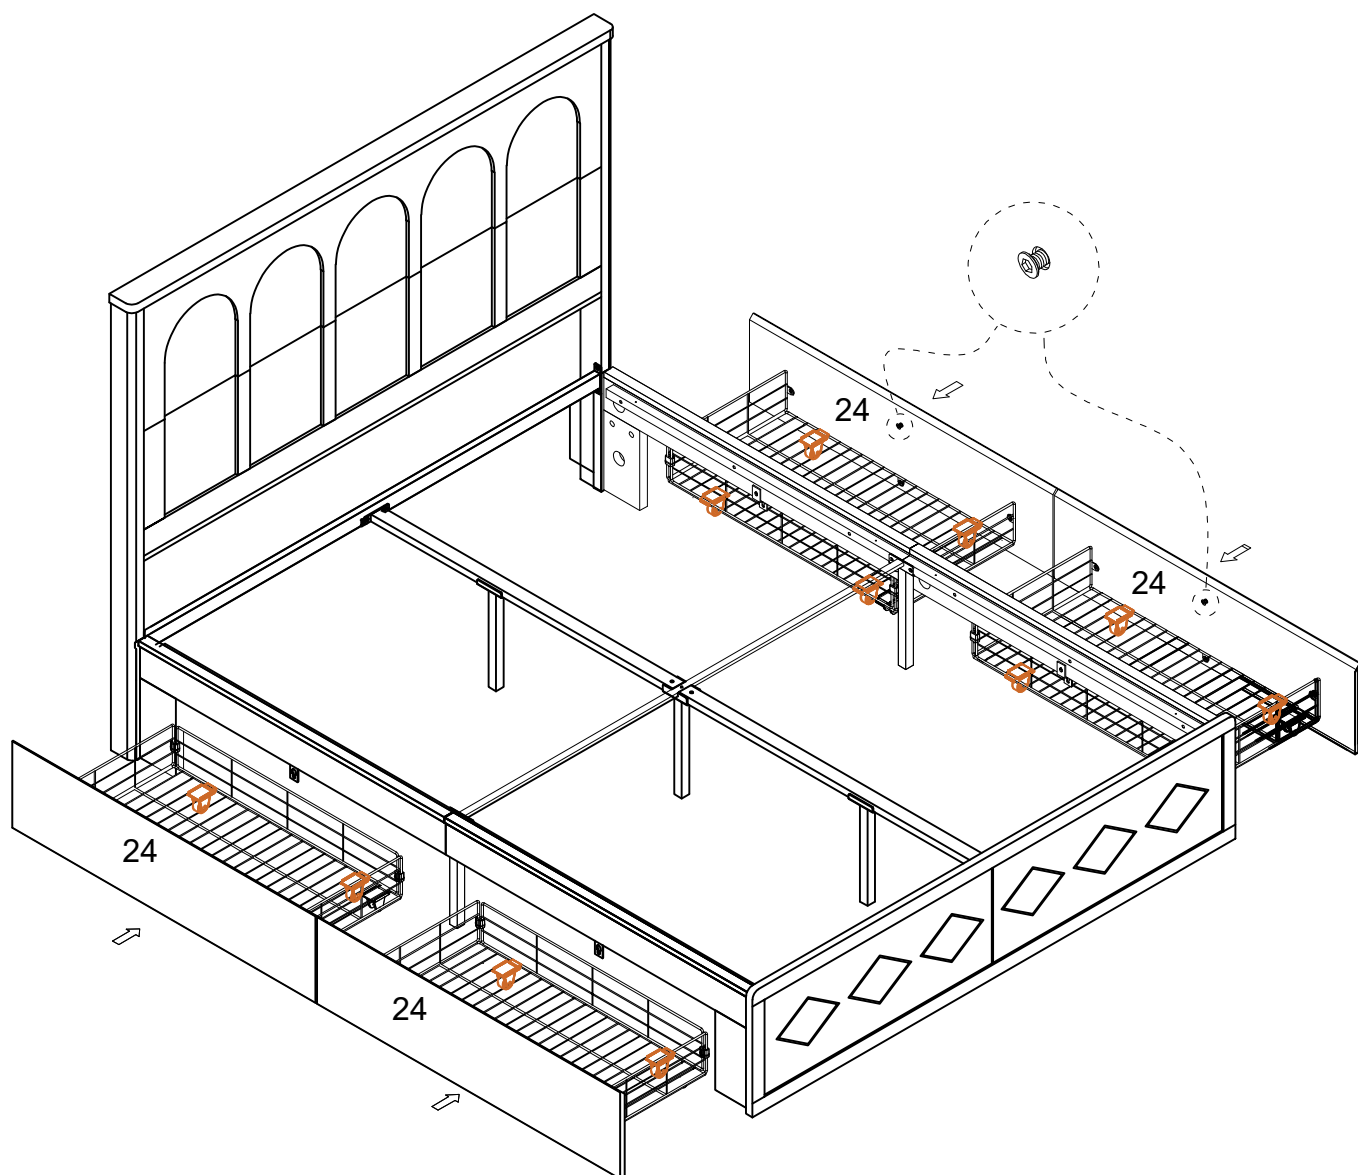
Step 29




Step 30

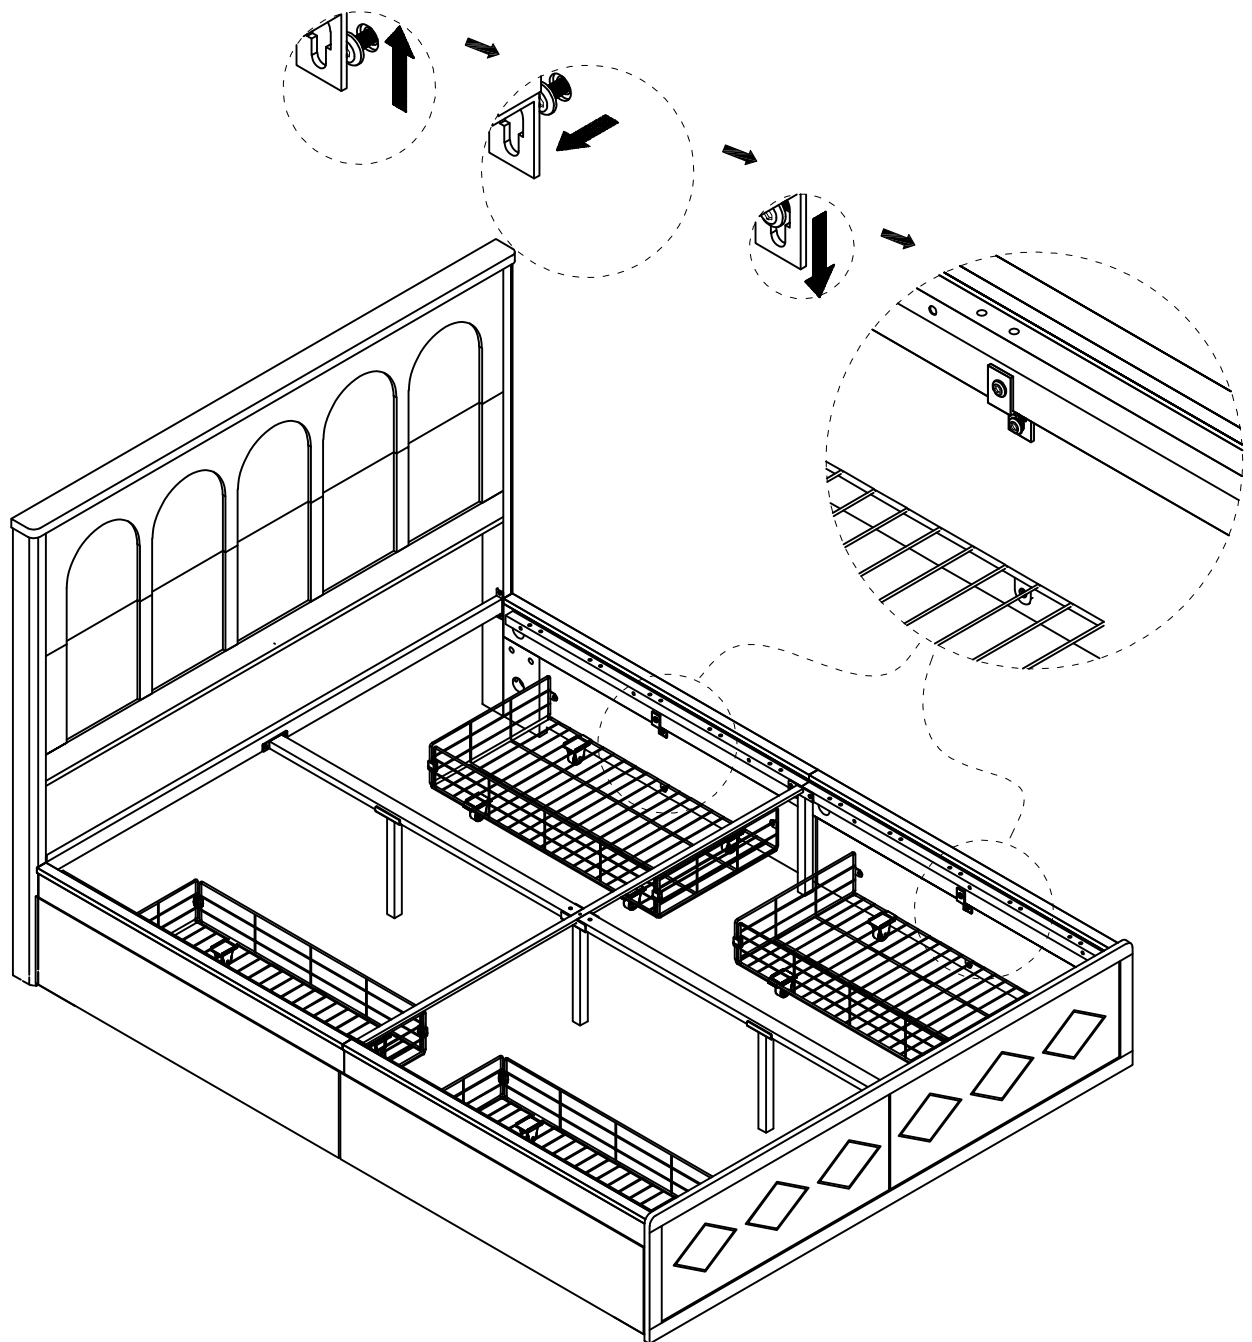


Step 31

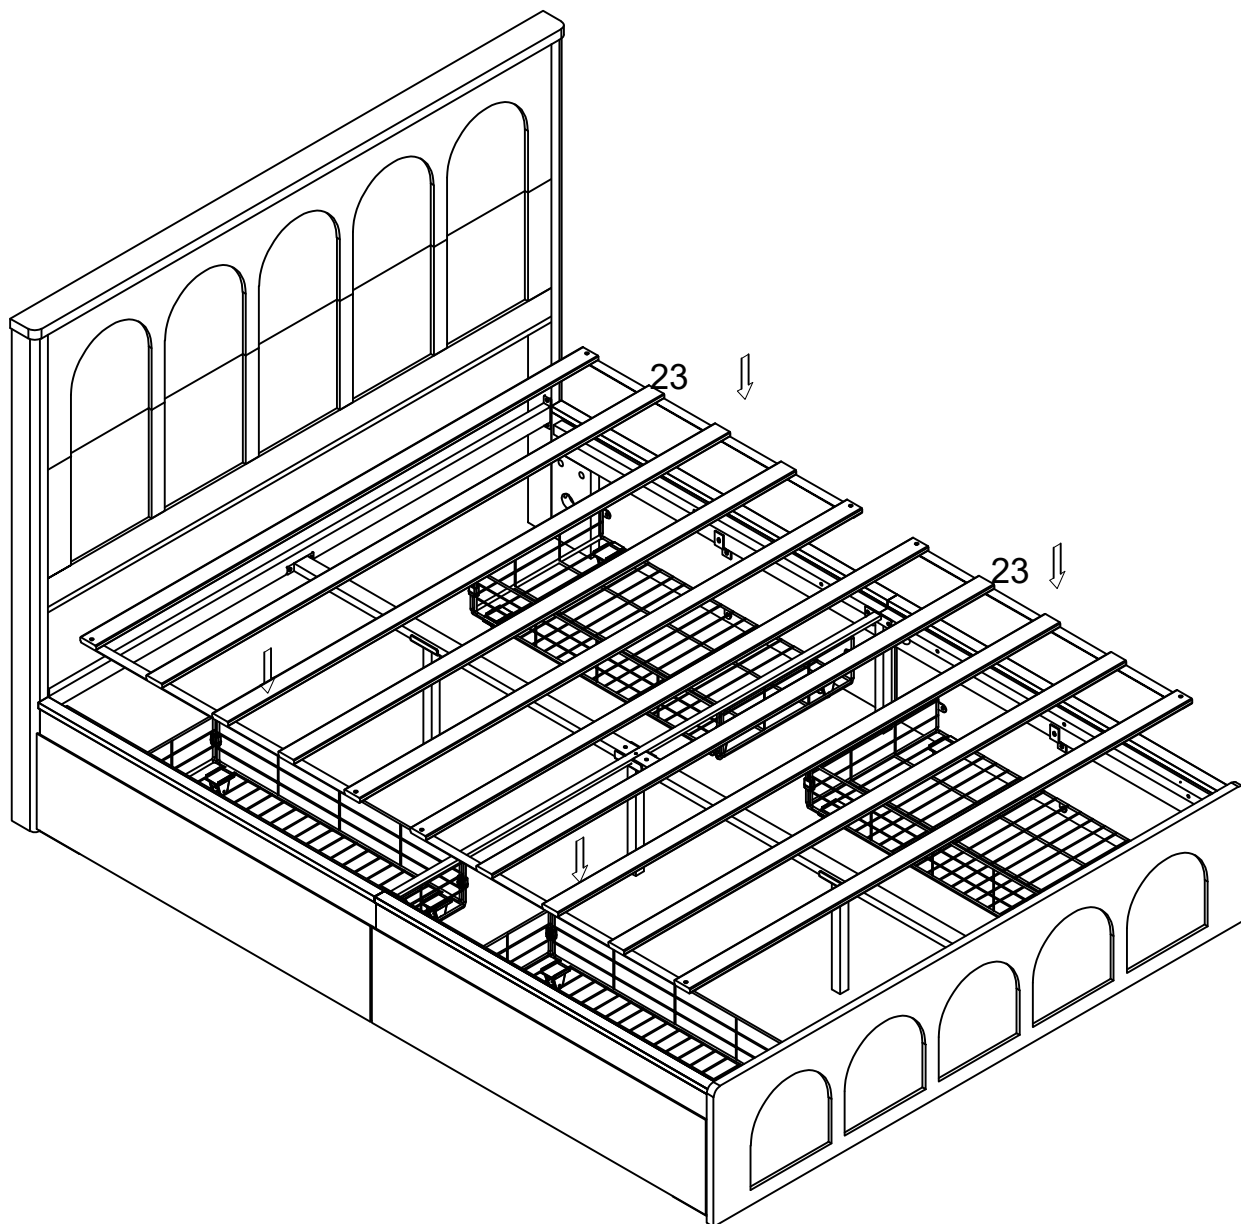

Step 32

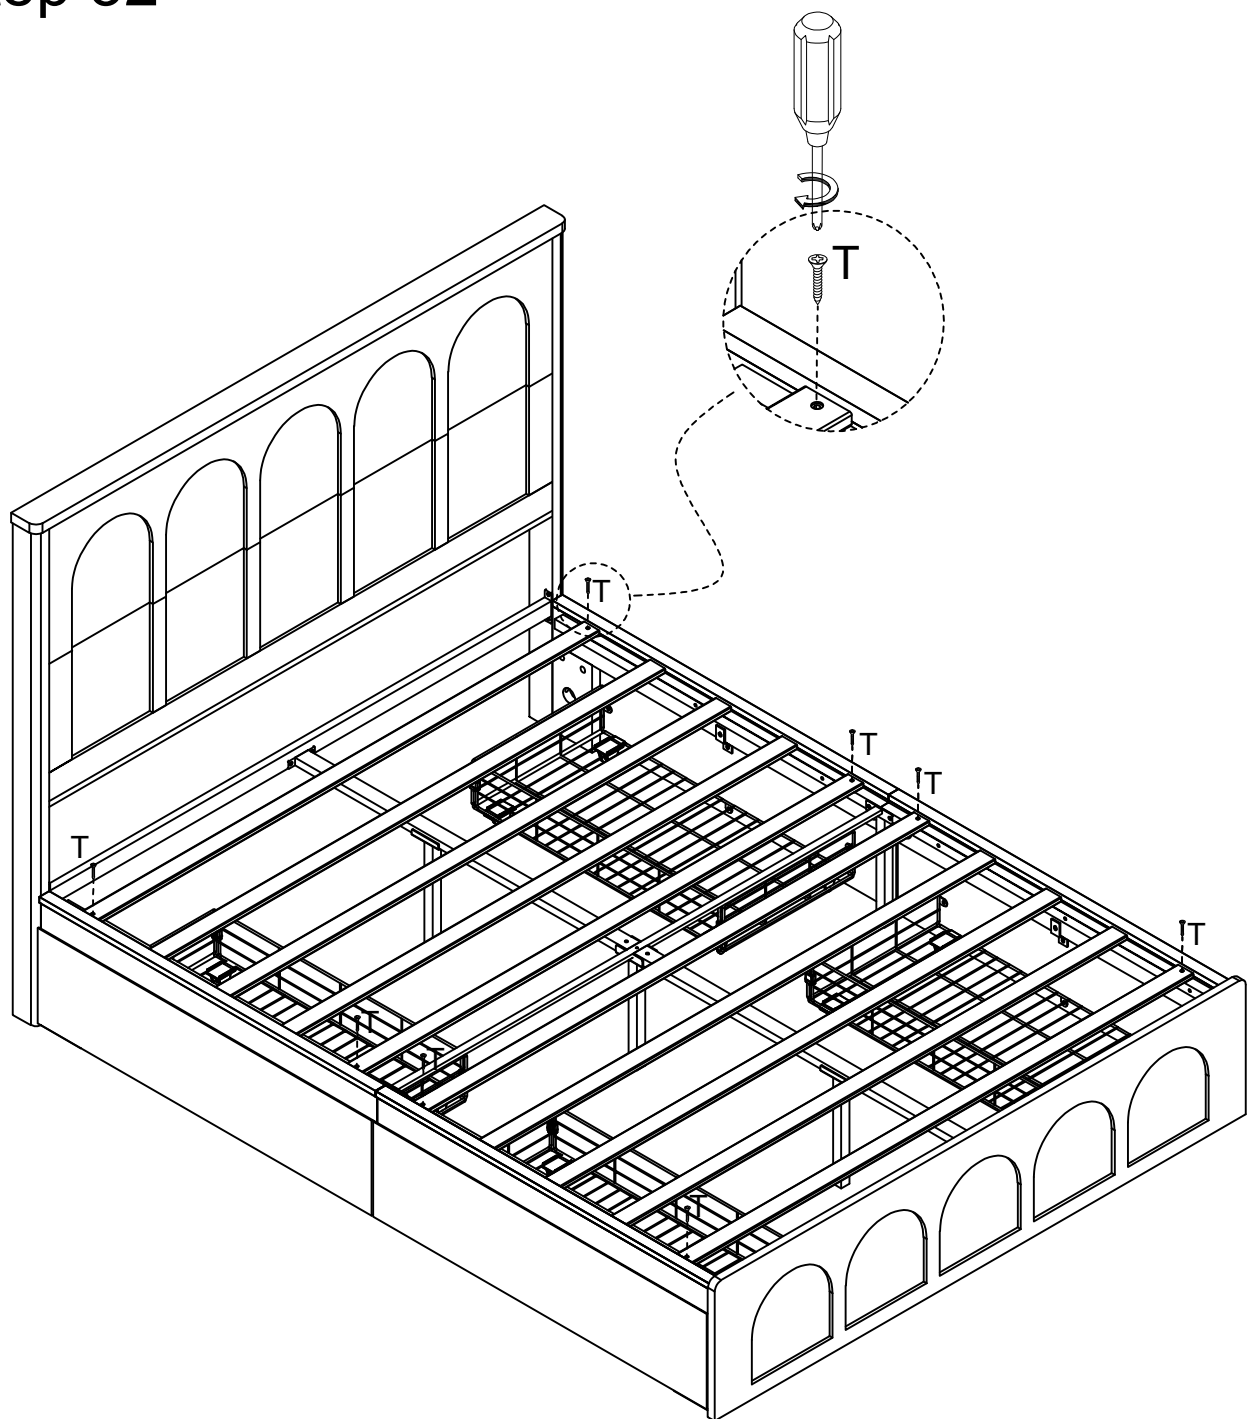

T

X8

Step 33

