


LM087



Scan for Help!
Assembly Guide/Customer Support

Item # :LM087-221D

Assembly Instructions

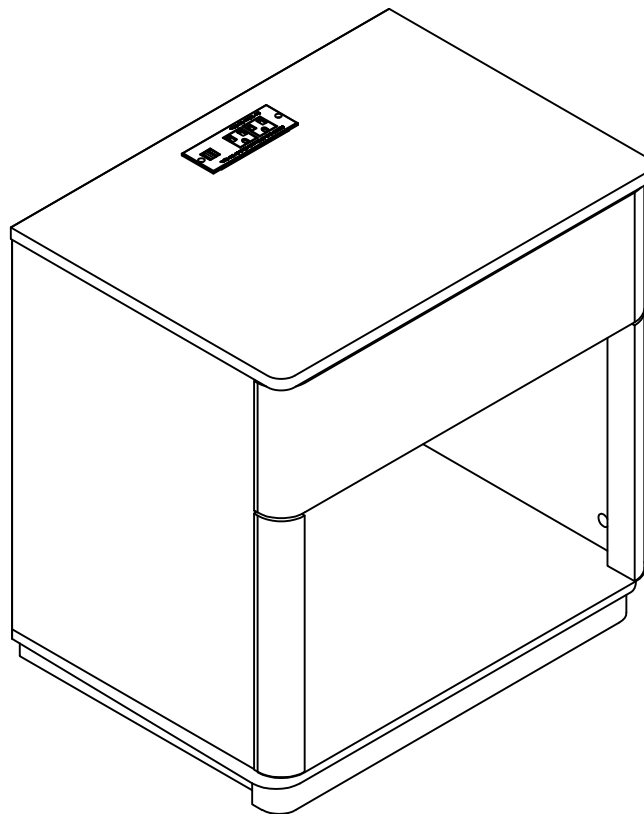


If you have any questions, please follow these steps(“Find Your Orders” - “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!


Revised 21/04/2025

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

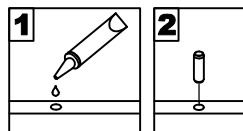


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

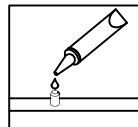


- VI. A Phillips head screwdriver is required for the assembly of this product .

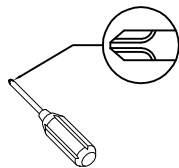



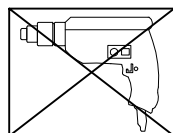



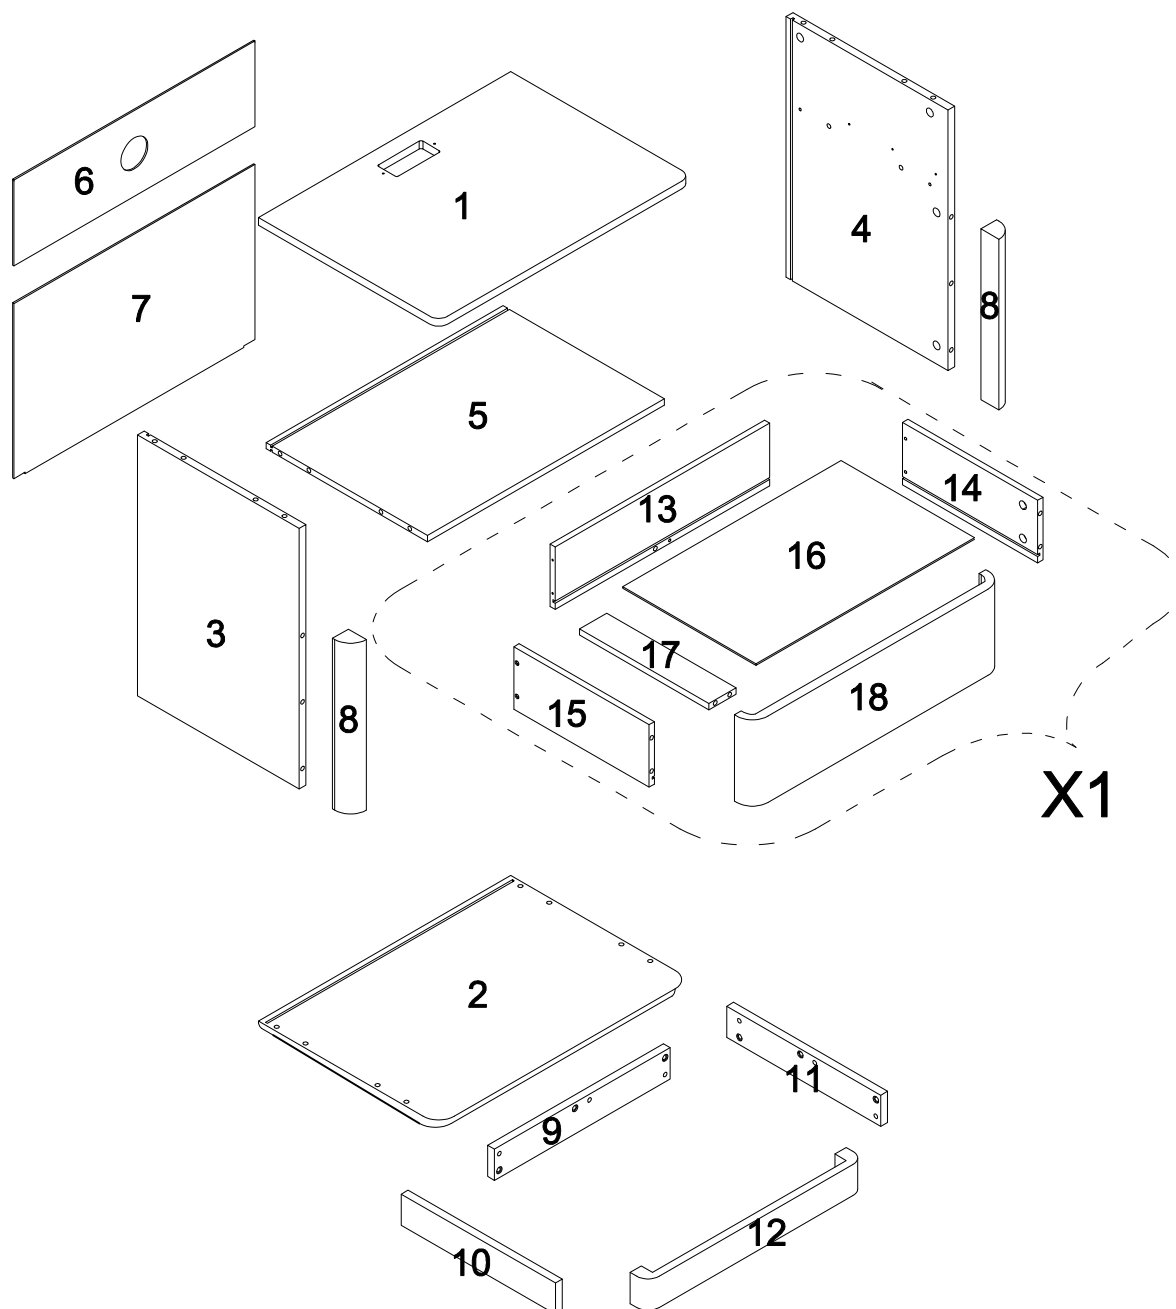









- VI. Power tools should not be used to assemble this product .




Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	16	pcs
B		Ø6x32mm	Cam bolt	17	pcs
C		Ø15x11mm	Cam lock	8	pcs
D		Ø15x9mm	Cam lock	9	pcs
E		Ø30mm	Sticker	17	pcs
F		Ø6x50mm	Screw	4	pcs
G		M4	Hex Key	1	pc
H		M6*12mm	Bolt	16	pcs
I			Plastic wedge	8	pcs
J			Plastic wedge	8	pcs
K		Ø3x17mm	Screw	8	pcs
L		Ø3x12mm	Screw	12	pcs
M		10"	Drawer slides	1	set
O		Ø4x32mm	Screw	5	pcs
P			Glue tube	1	pc
Q			Electric socket	1	pc

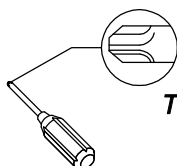


**Philips head screwdriver required for assembly
(not included)**


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

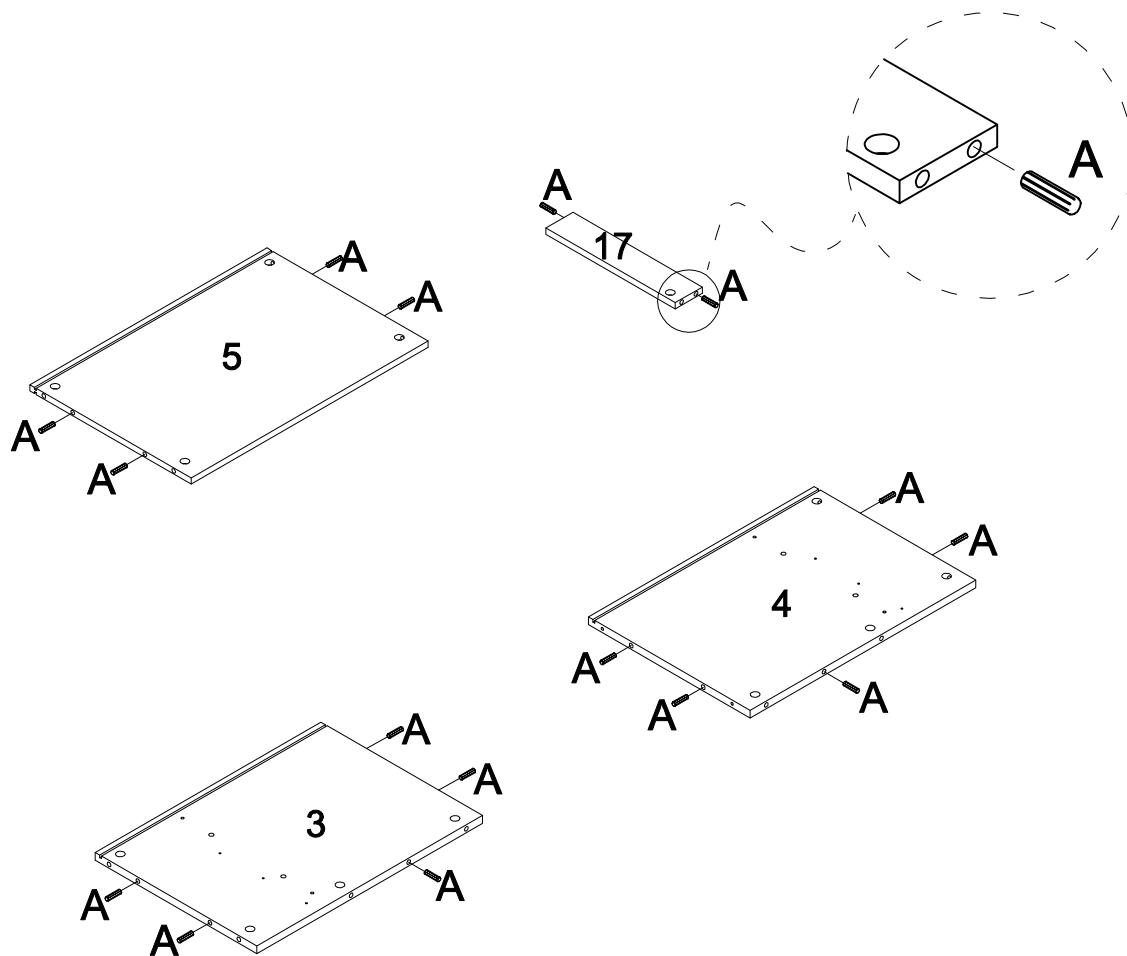

A

X16

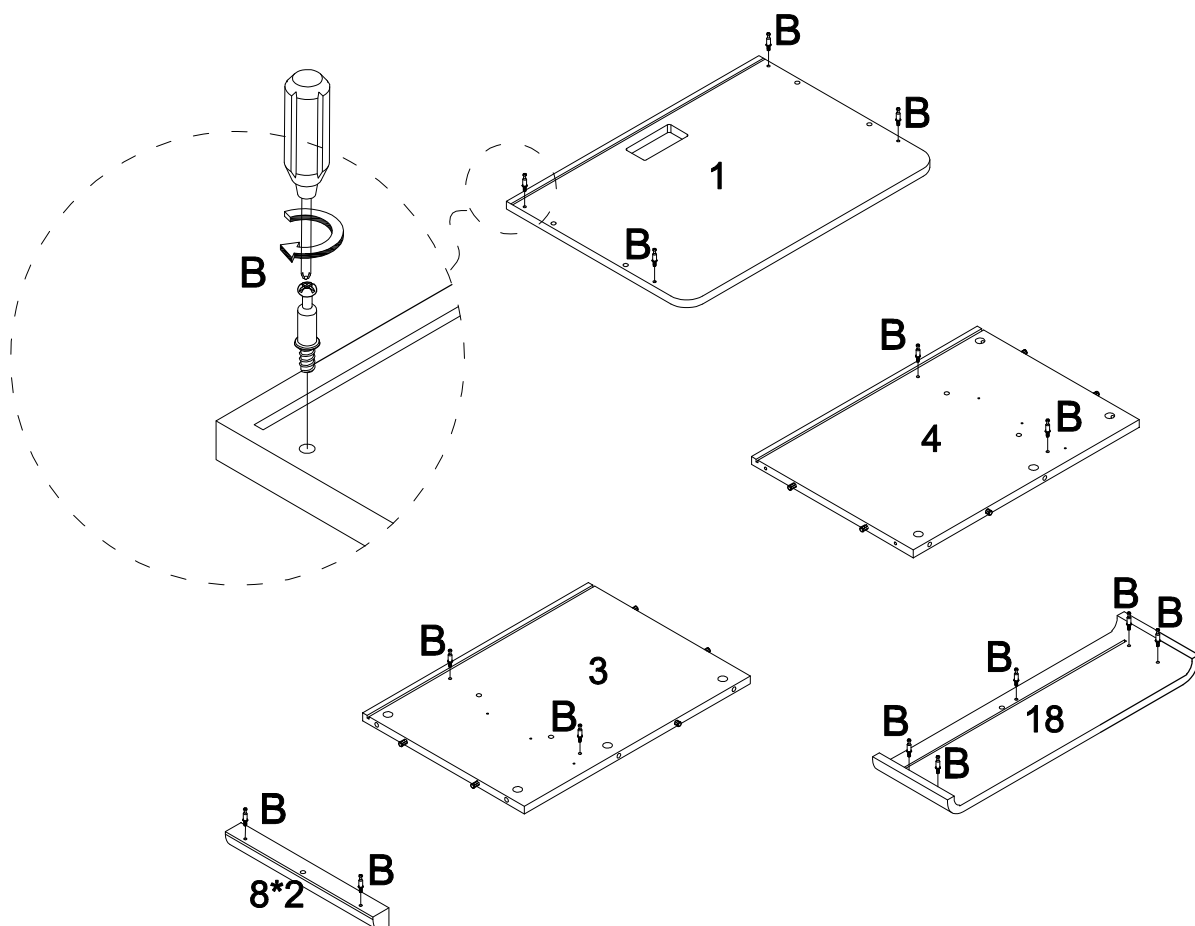Step 2





B

X17

Step 3


M-CL

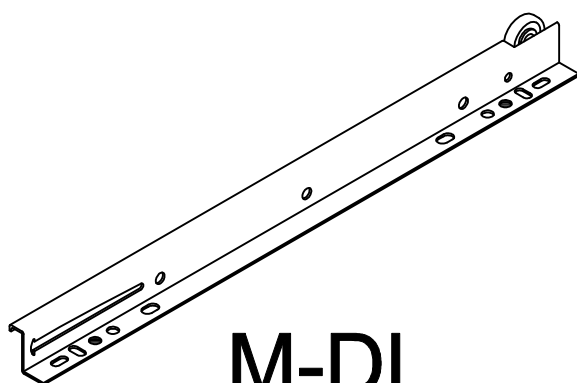

M-CR



M-DL

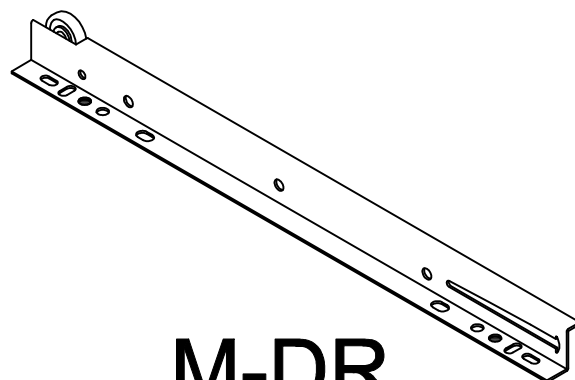




M-DR



Step 4

NOTE:





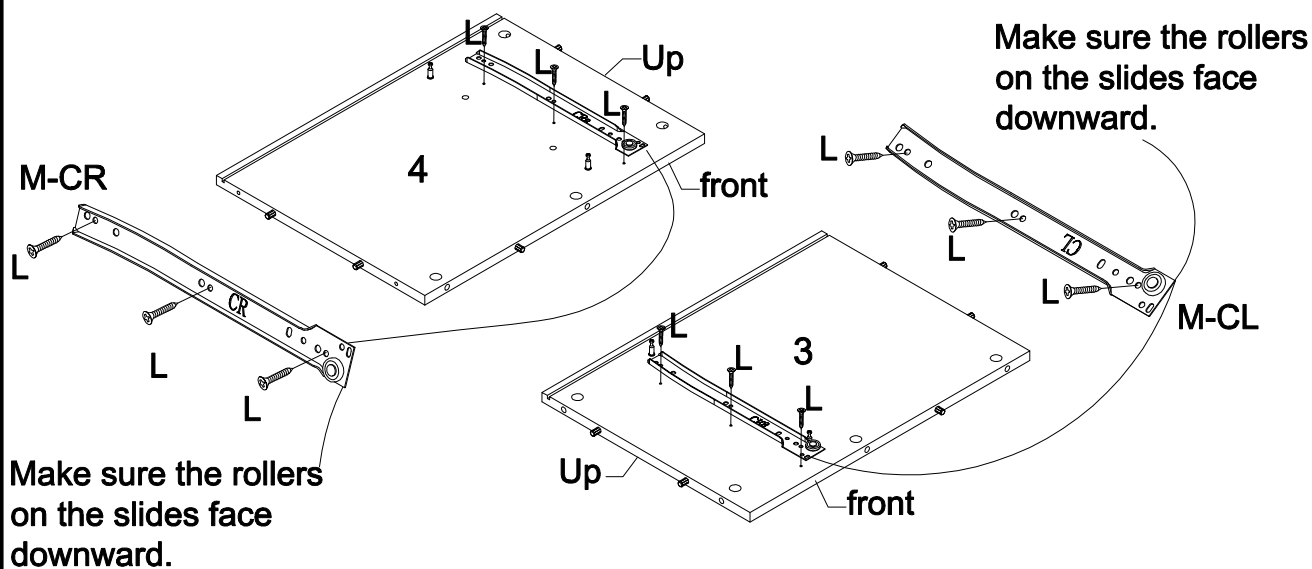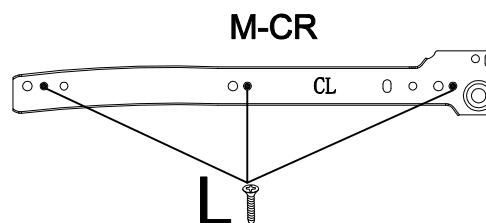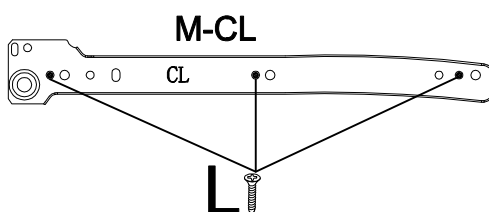

Refer to the images to identify M-CL (left) and M-CR (right). Attach M-CL to #3 panel and M-CR to #4 panel. [L] screws must go in the exact spots shown.

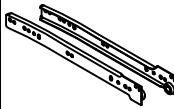



L	M
	
X6	X1

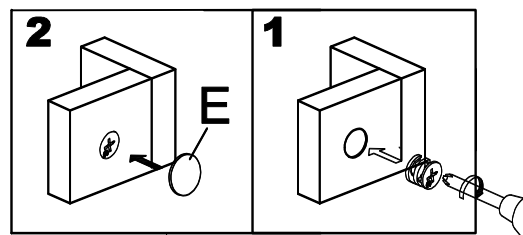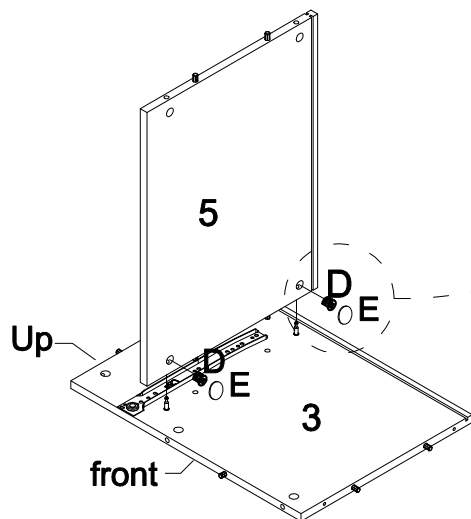

Step 5




E	D
	
X2	X2

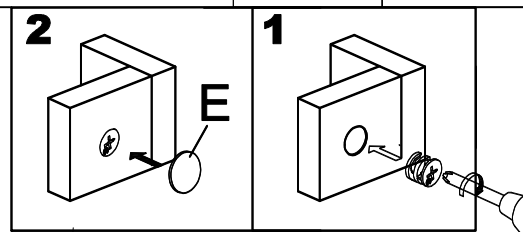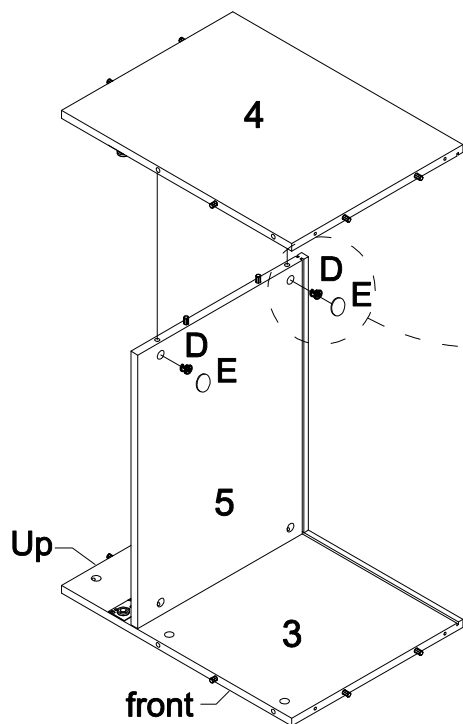Step 6





E	D
	
X2	X2

Step 7

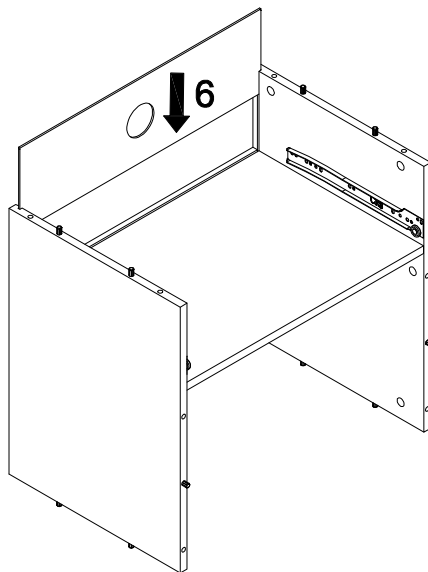


Step 8

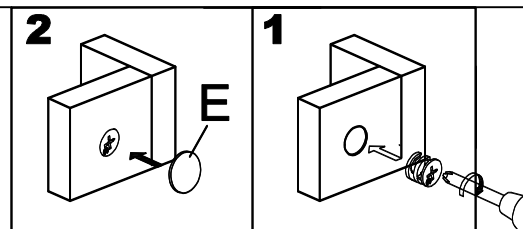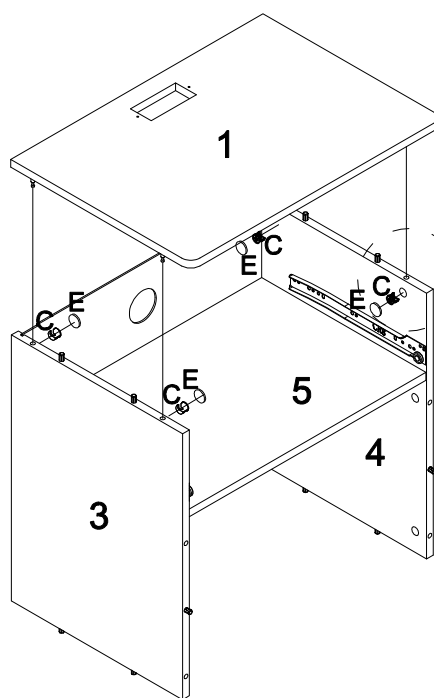




E	C
X4	X4

Step 9

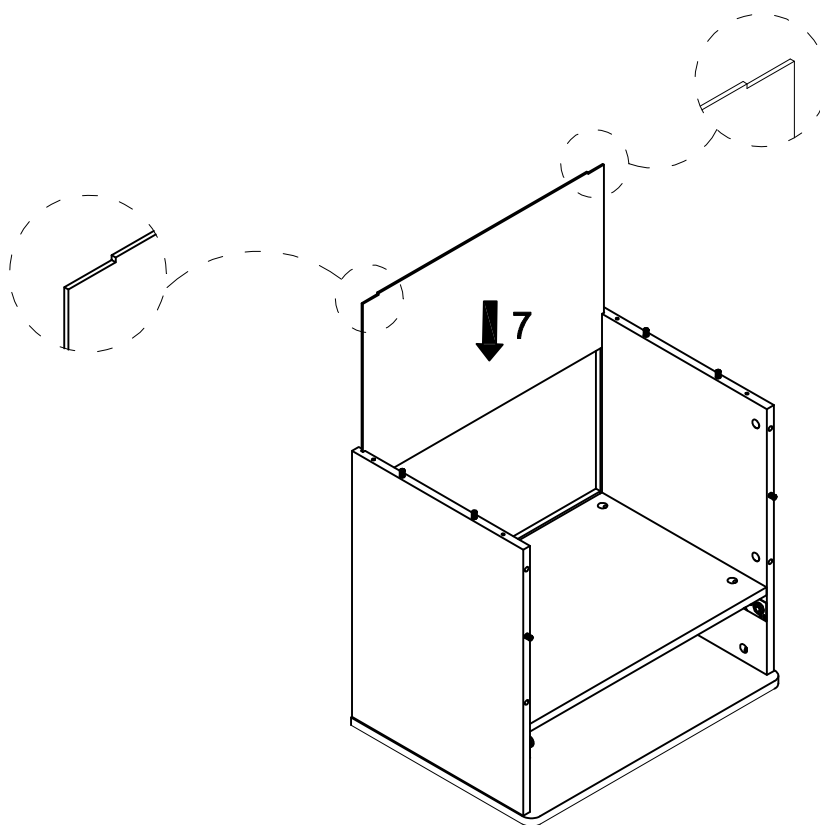


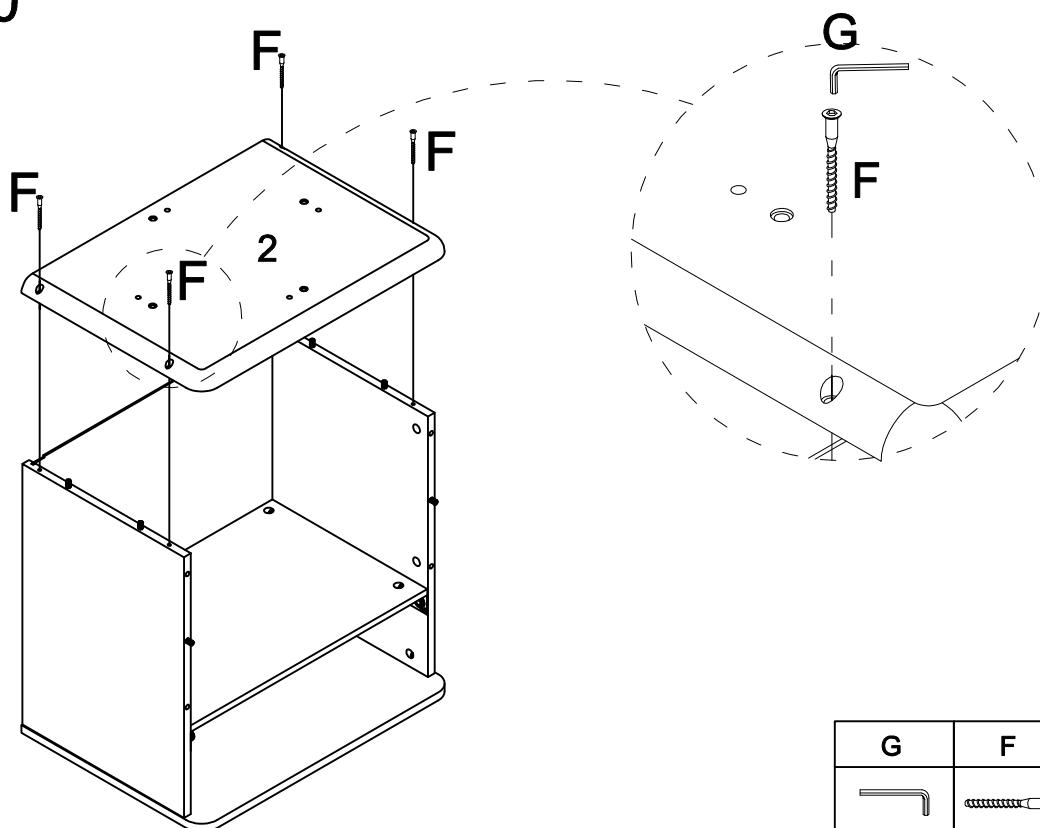

Step 10




G	F
	
X1	X4

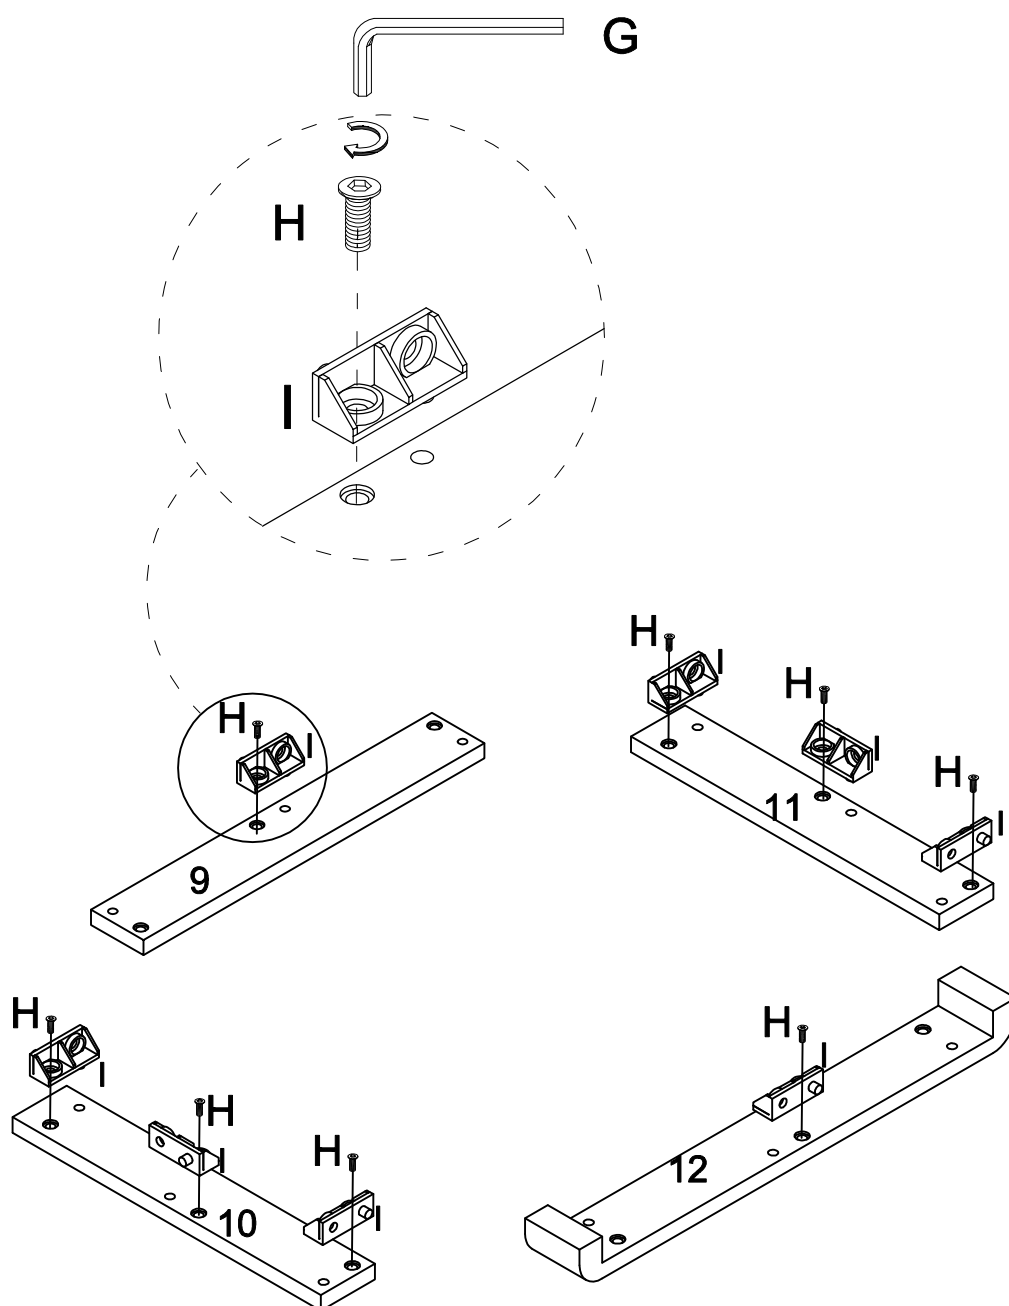

Step 11




H	I
	
X8	X8

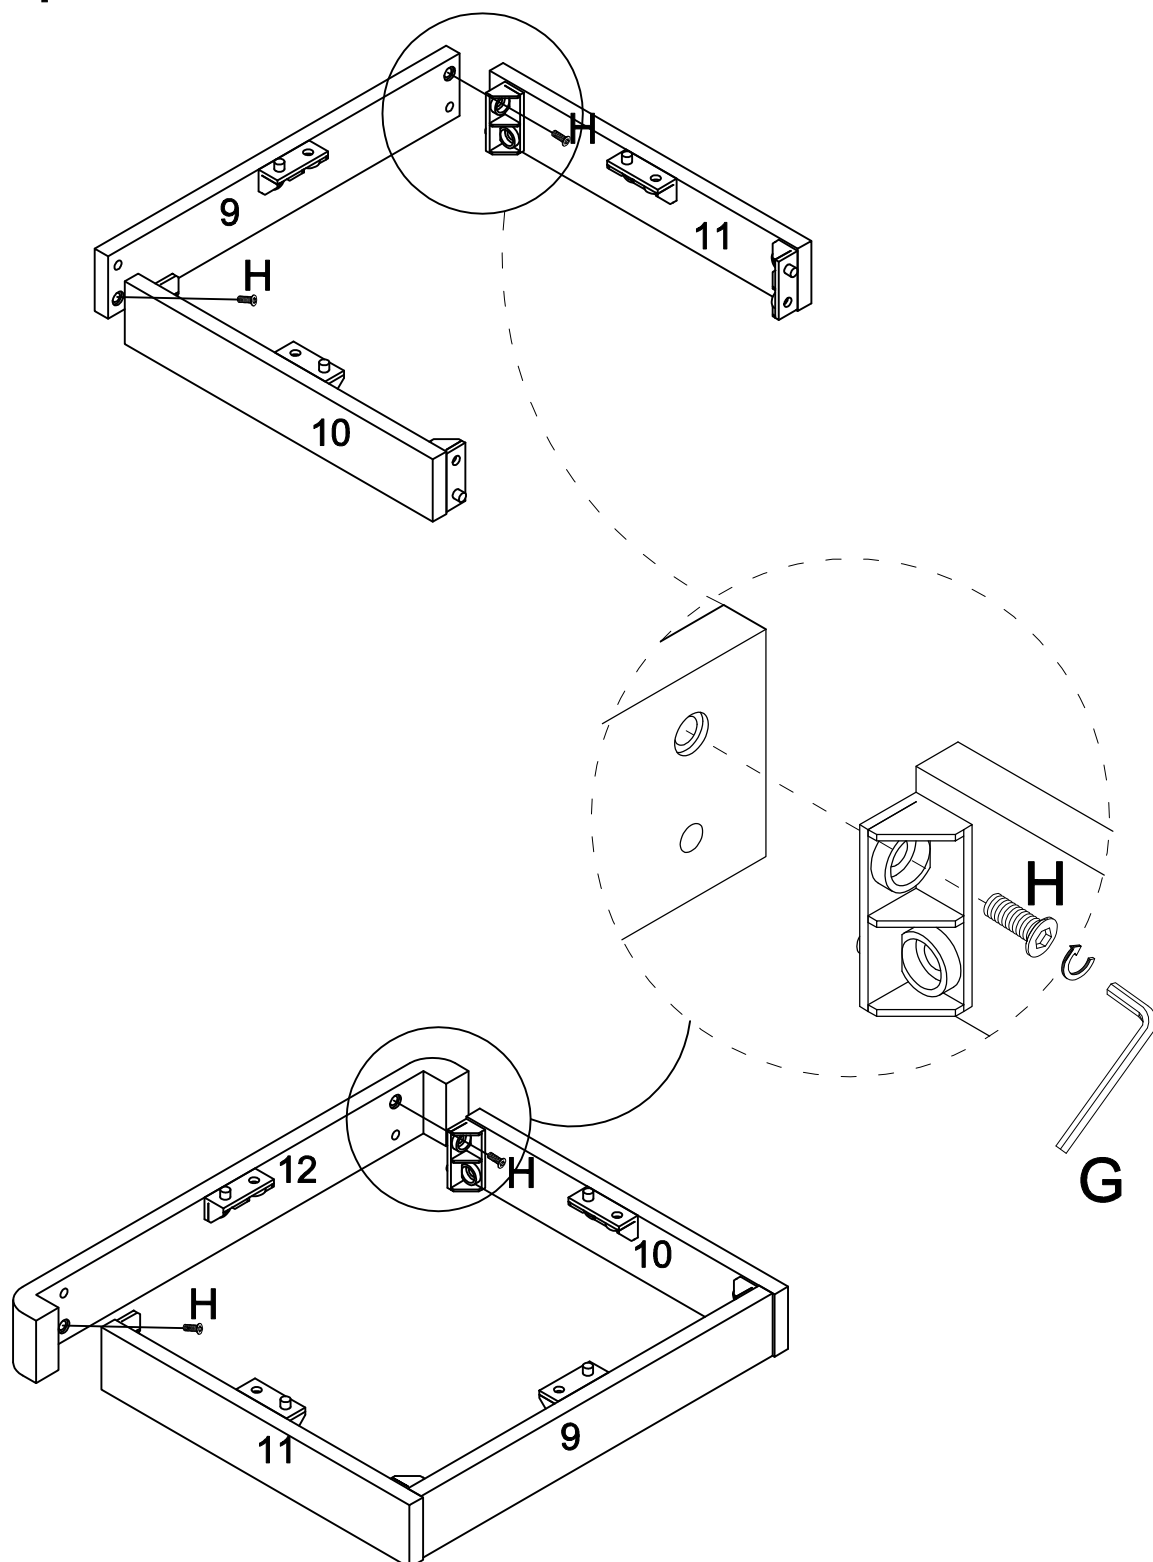Step 12




G	H
	
X1	X4

Step 13

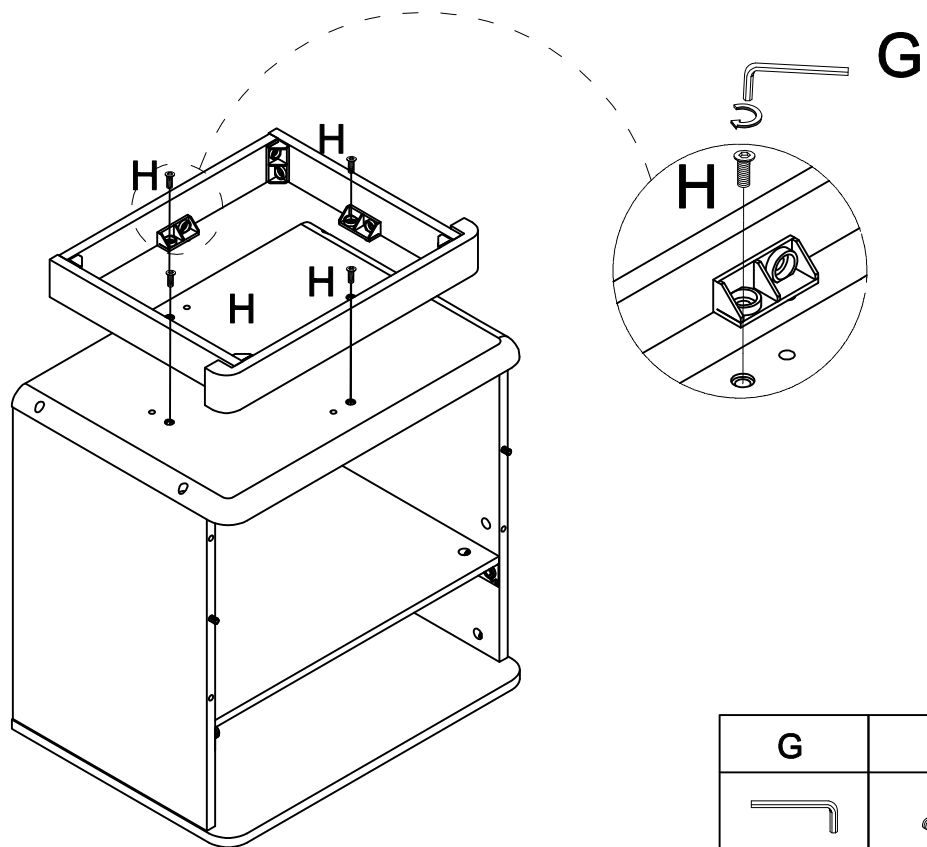


G	H
X1	X4

Step 14

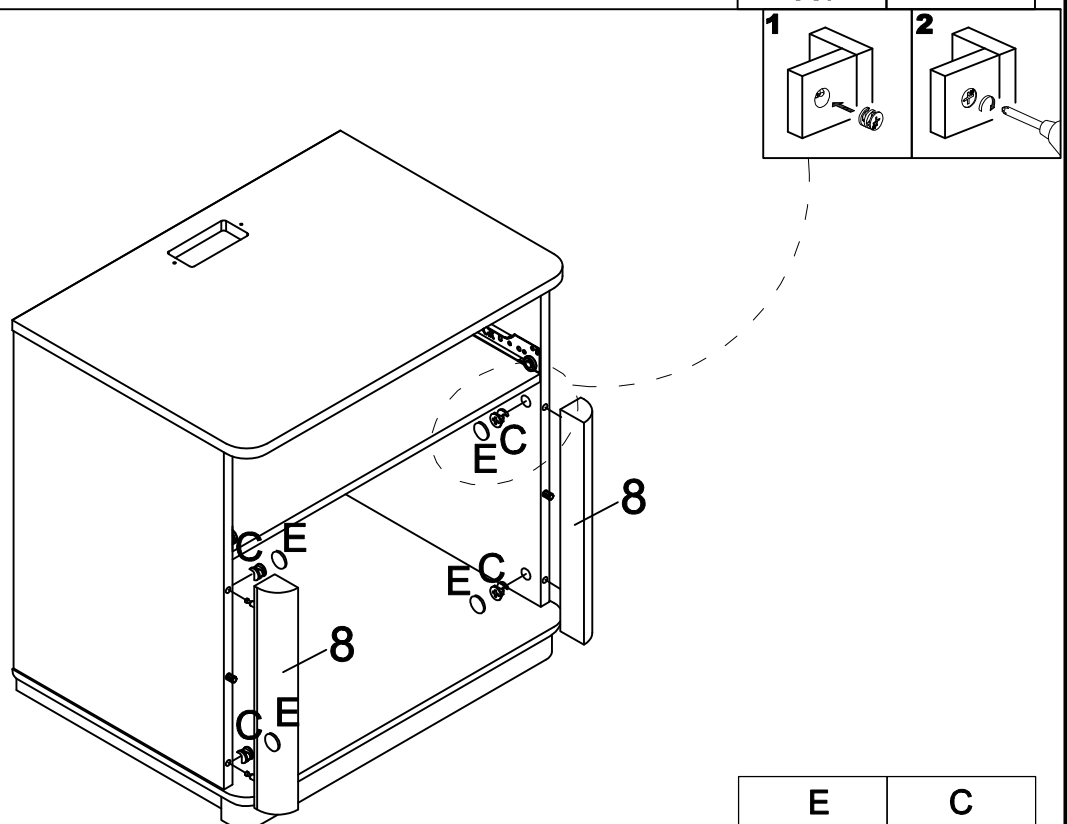


E	C
X4	X4

Step 15

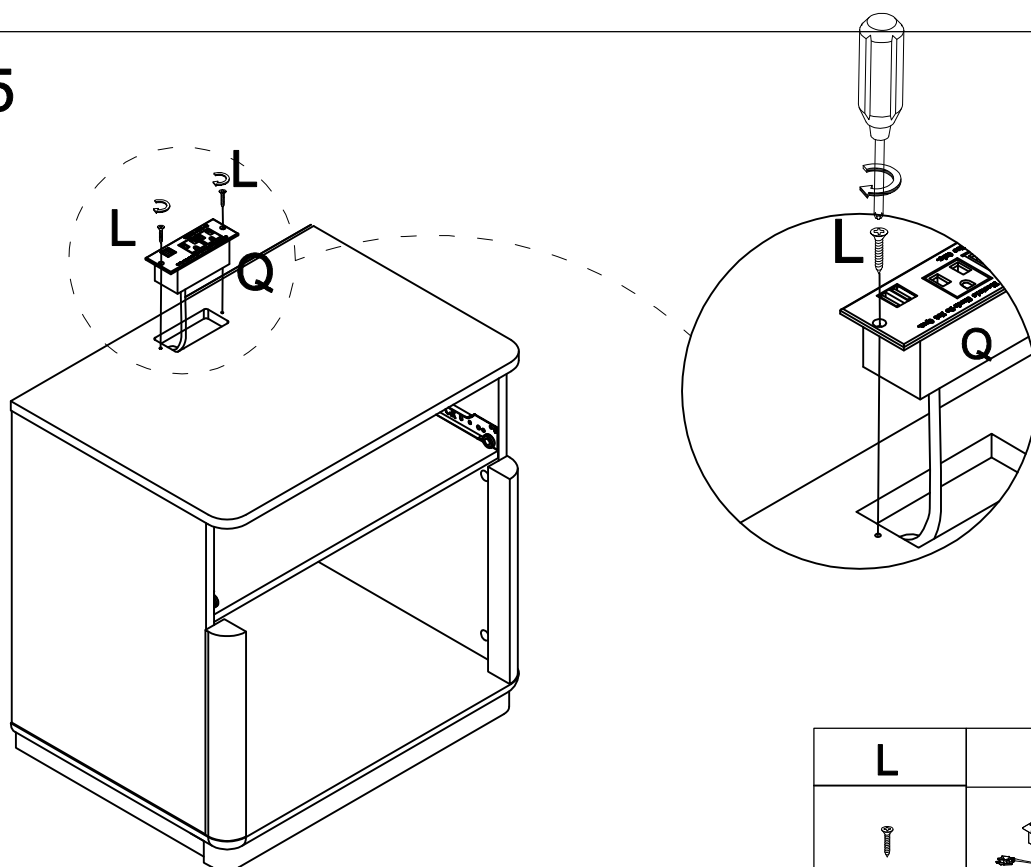


L	Q
X2	X1

Step 16

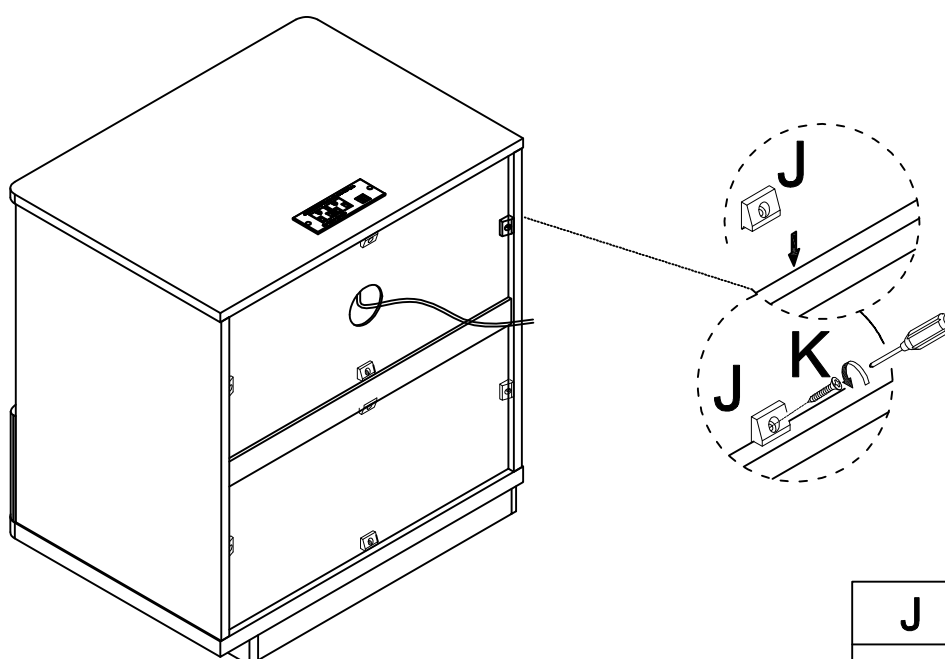


J	K
X8	X8


Step 17

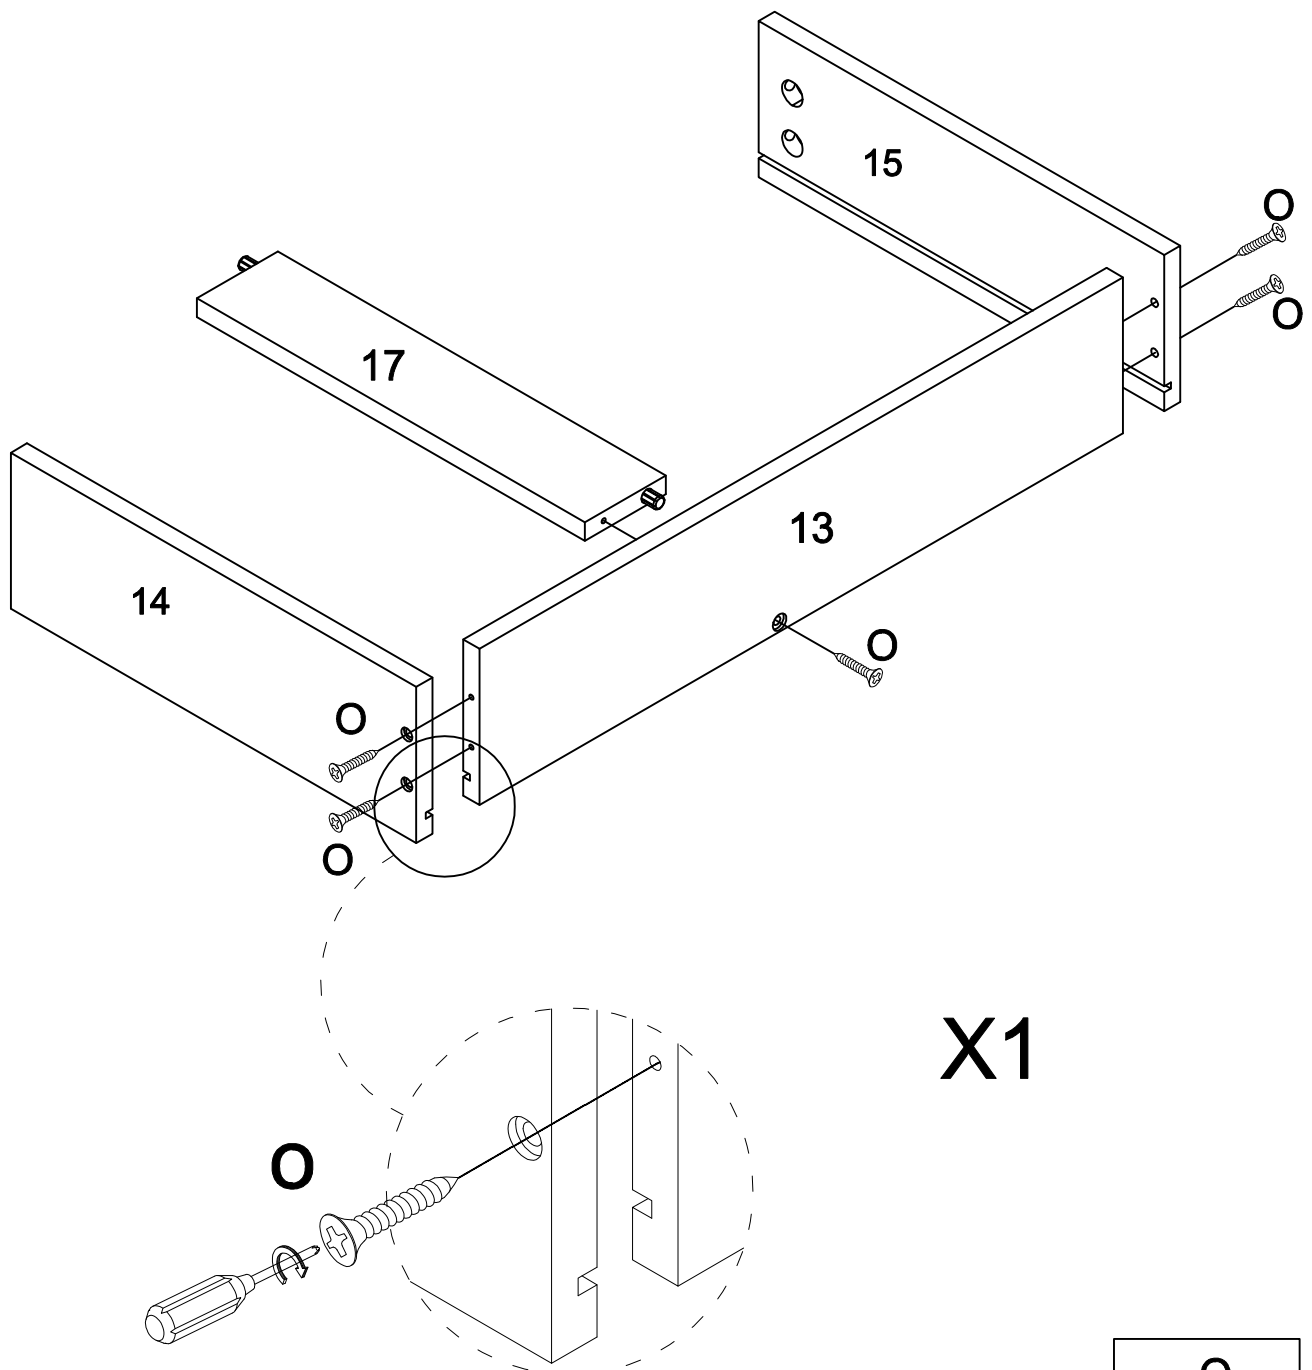

X1



O

X5

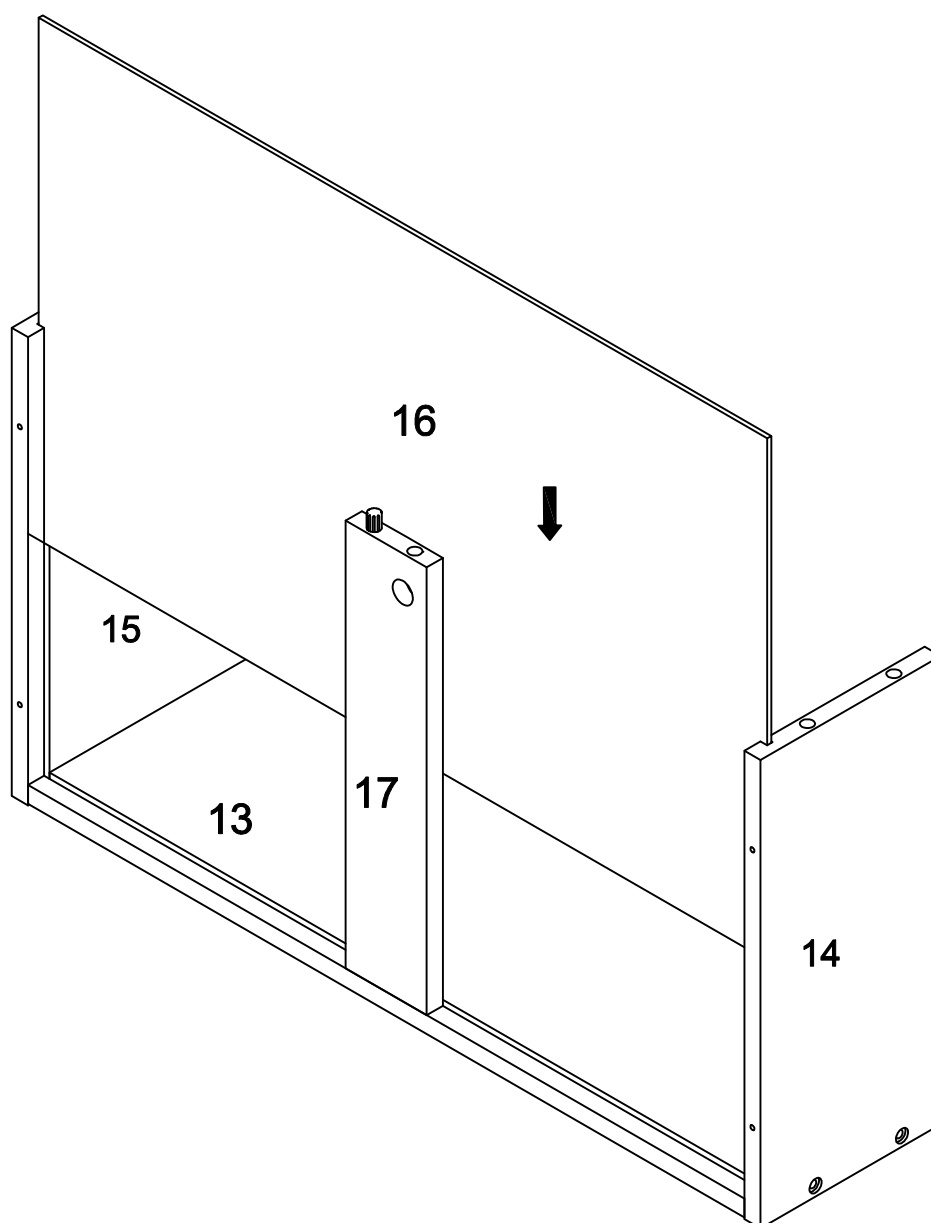

Step 18

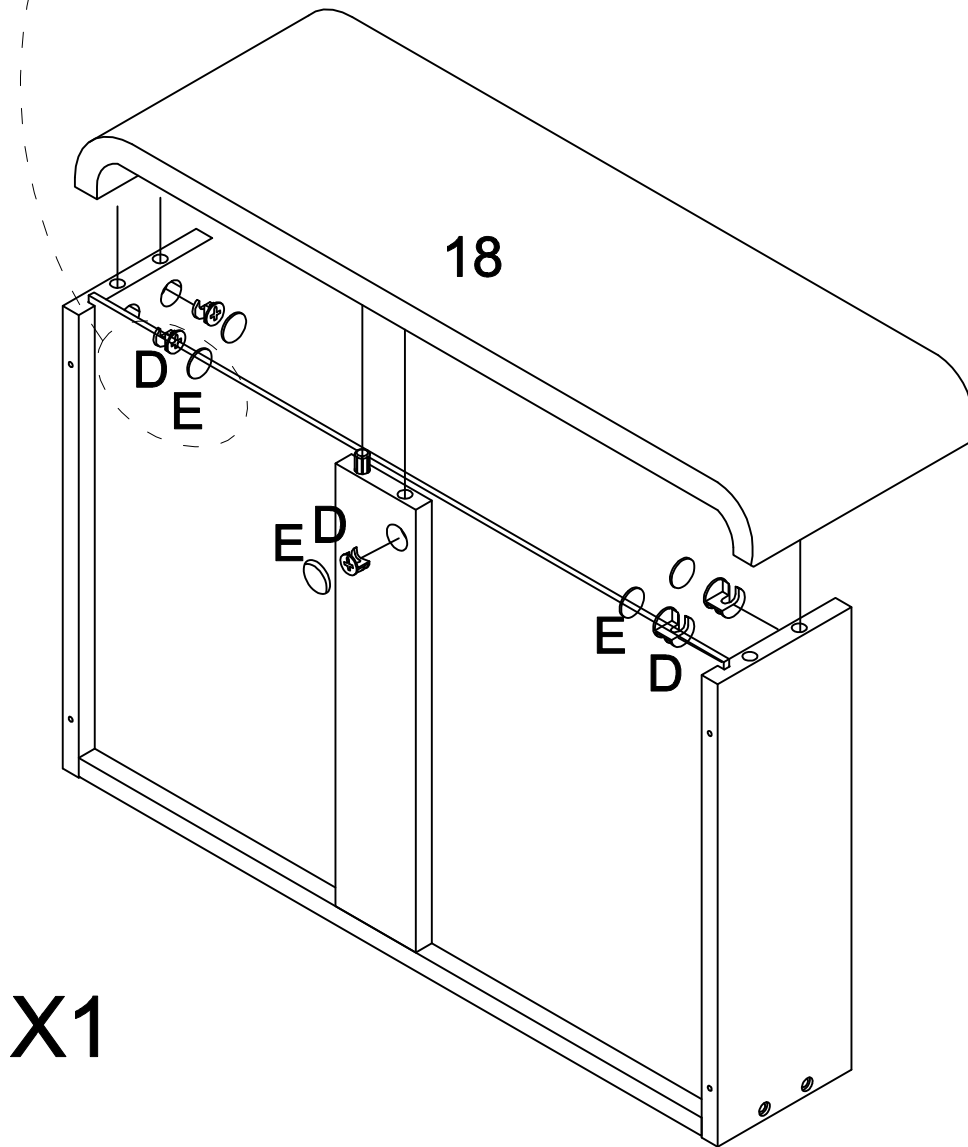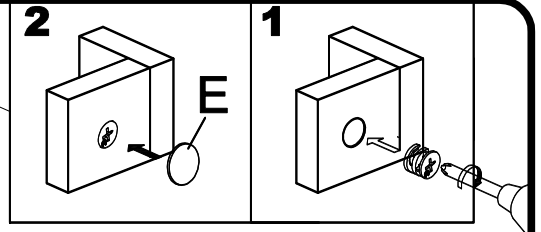

X1

Step 19



E	D
	
X5	X5


Step 20

NOTE:



Refer to the images to identify M-DL (left) and M-DR (right). Attach M-DL to #14 panel and M-DR to #15 panel. [L] screws must go in the exact spots shown.

M-DL

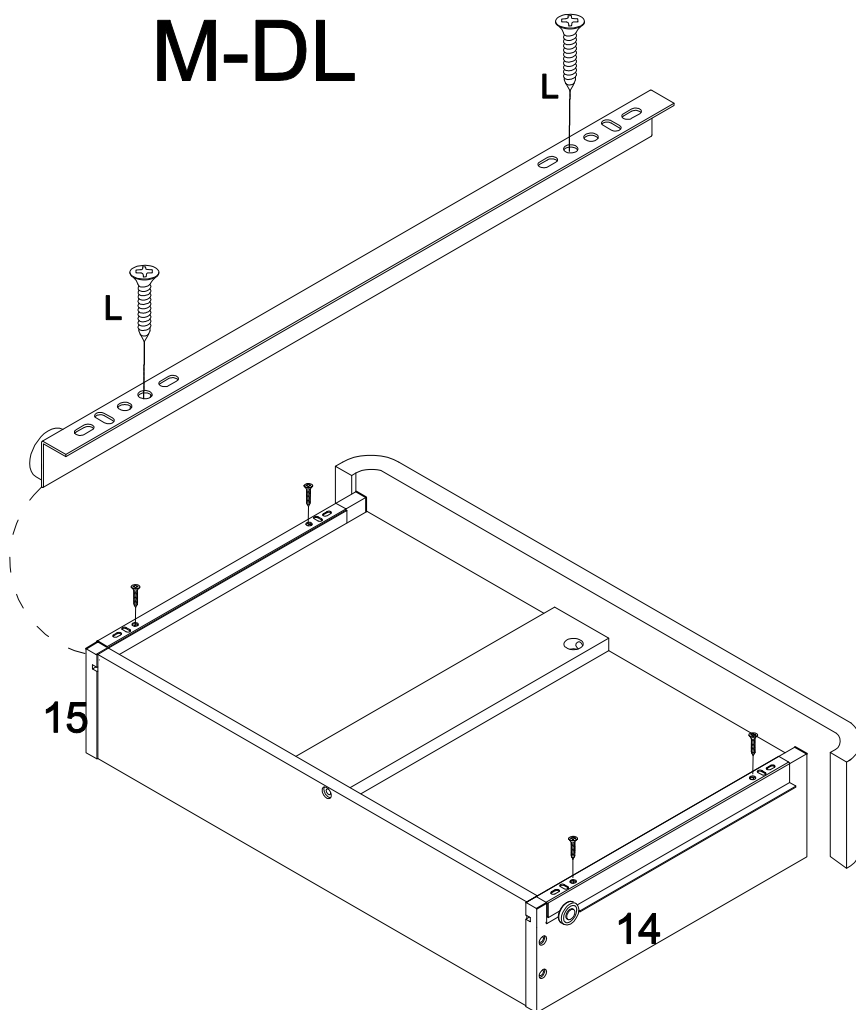


15

14

X1

M-DR

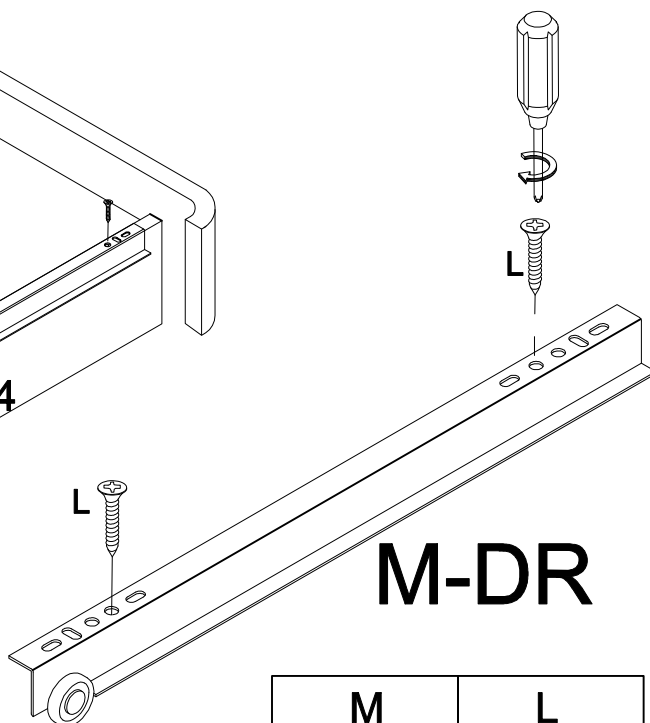

M	L
X1	X4

Step 21

