

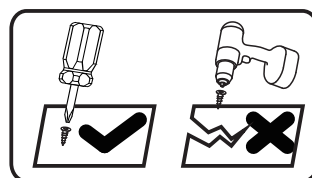
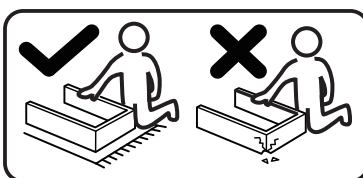
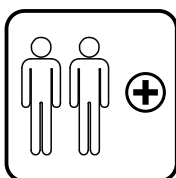
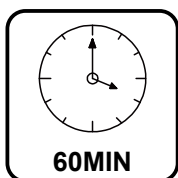


## SRN-DORMI 5011T

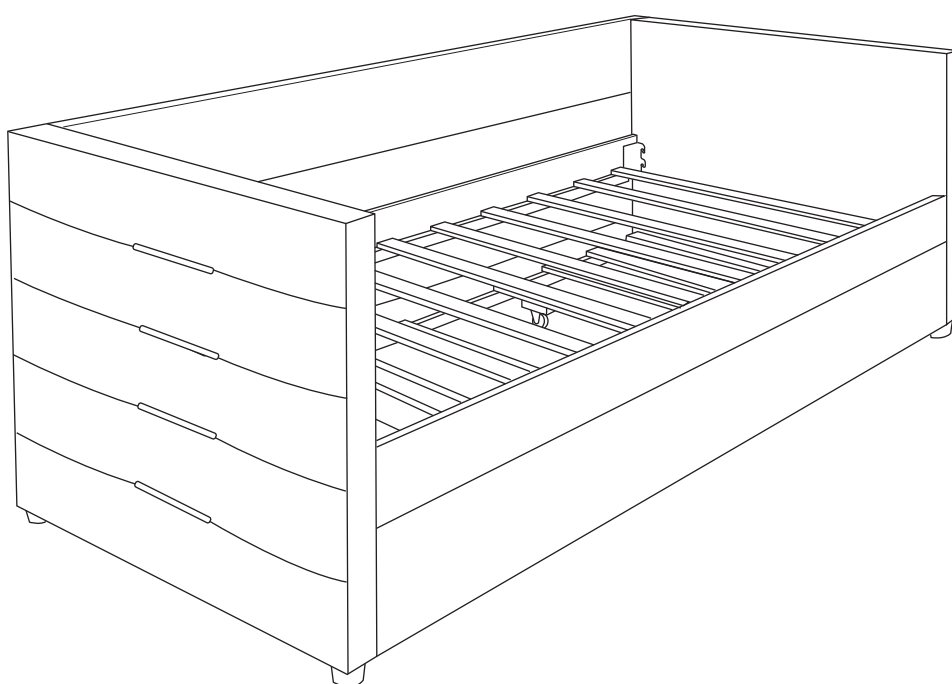


### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Please confirm that all components are present before beginning assembly.
- For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Please assemble the furniture by 2 persons or more.
- Do not confuse similar screws.
- Do not tighten bolts fully until all parts are connected!
- Please periodically check all fitting and re-tighten as necessary.

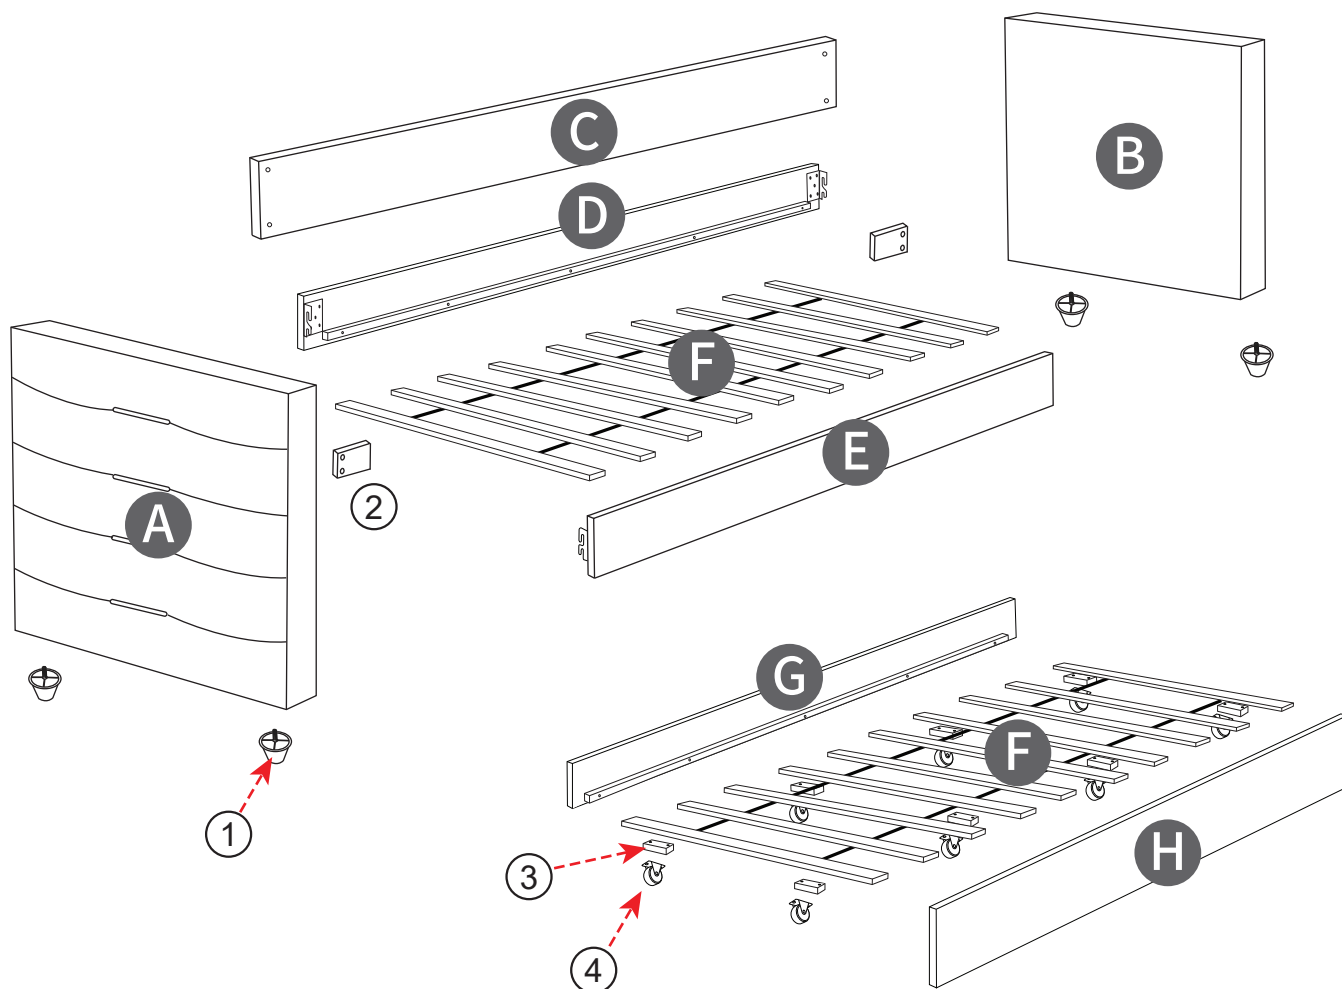


# PACKING DETAILS: TOTAL 2 BOXES

## BOX -1/2

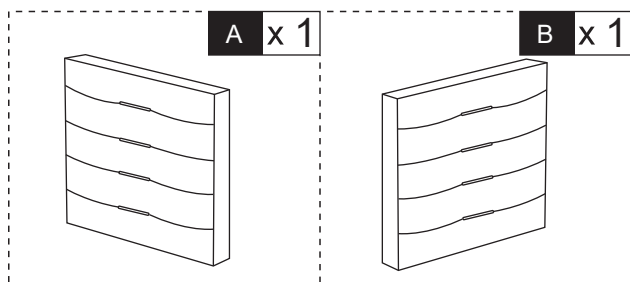


## BOX -2/2

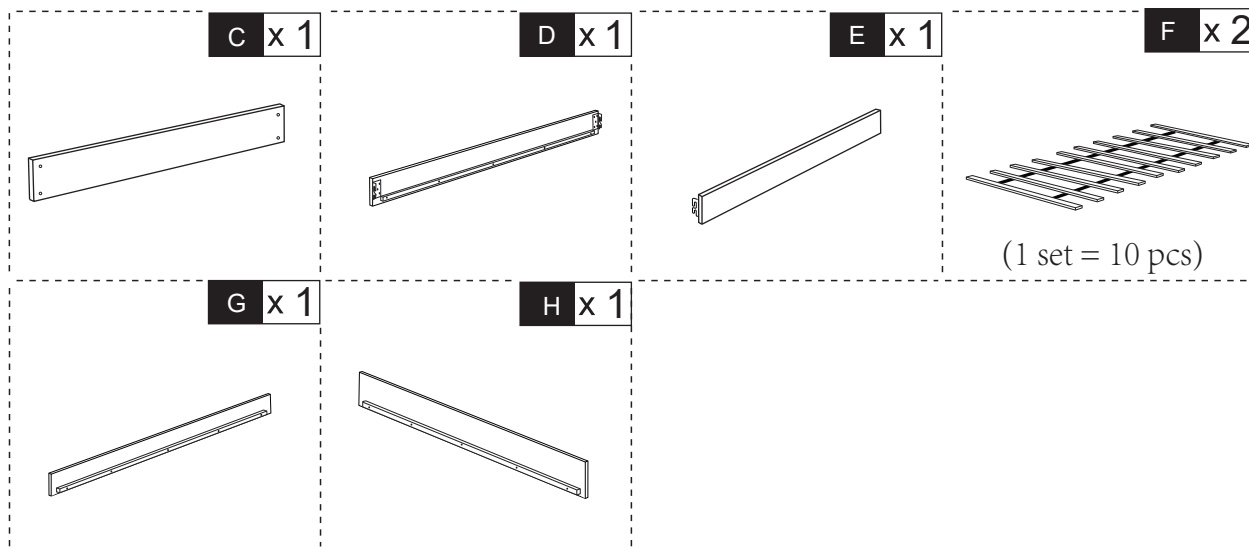

## BOX -2/2


## HARDWARE

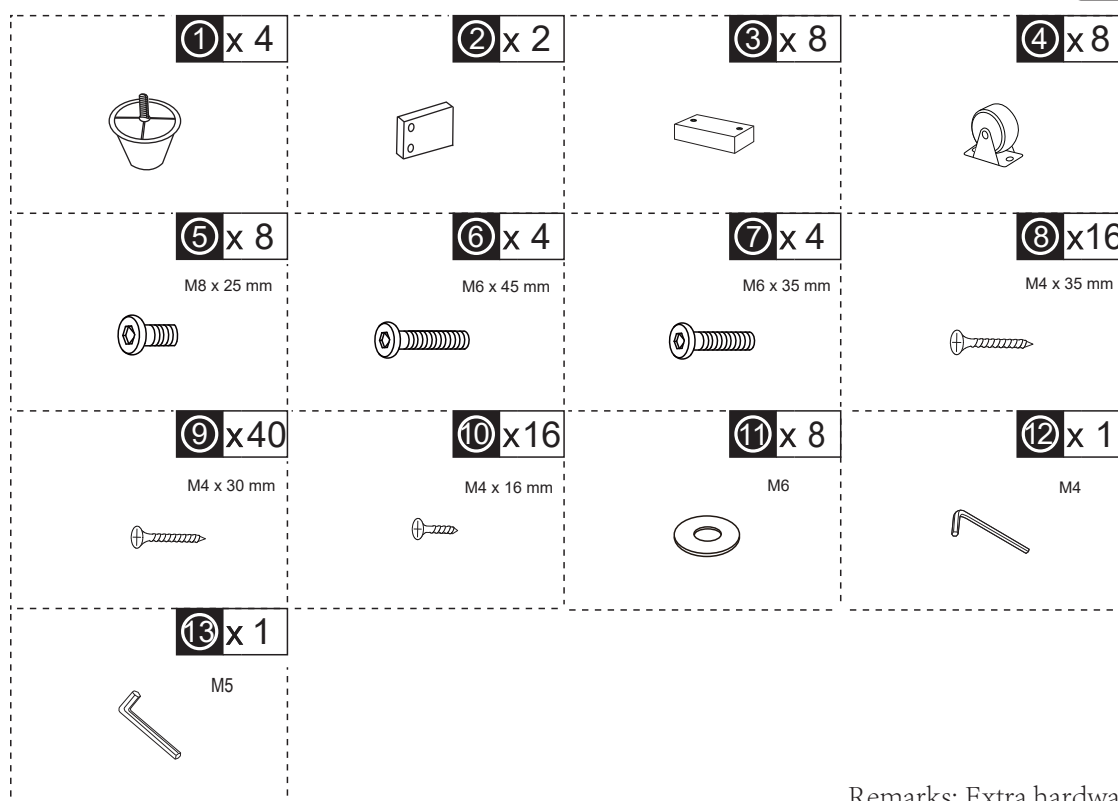

Remarks: Extra hardware provided




① x 4

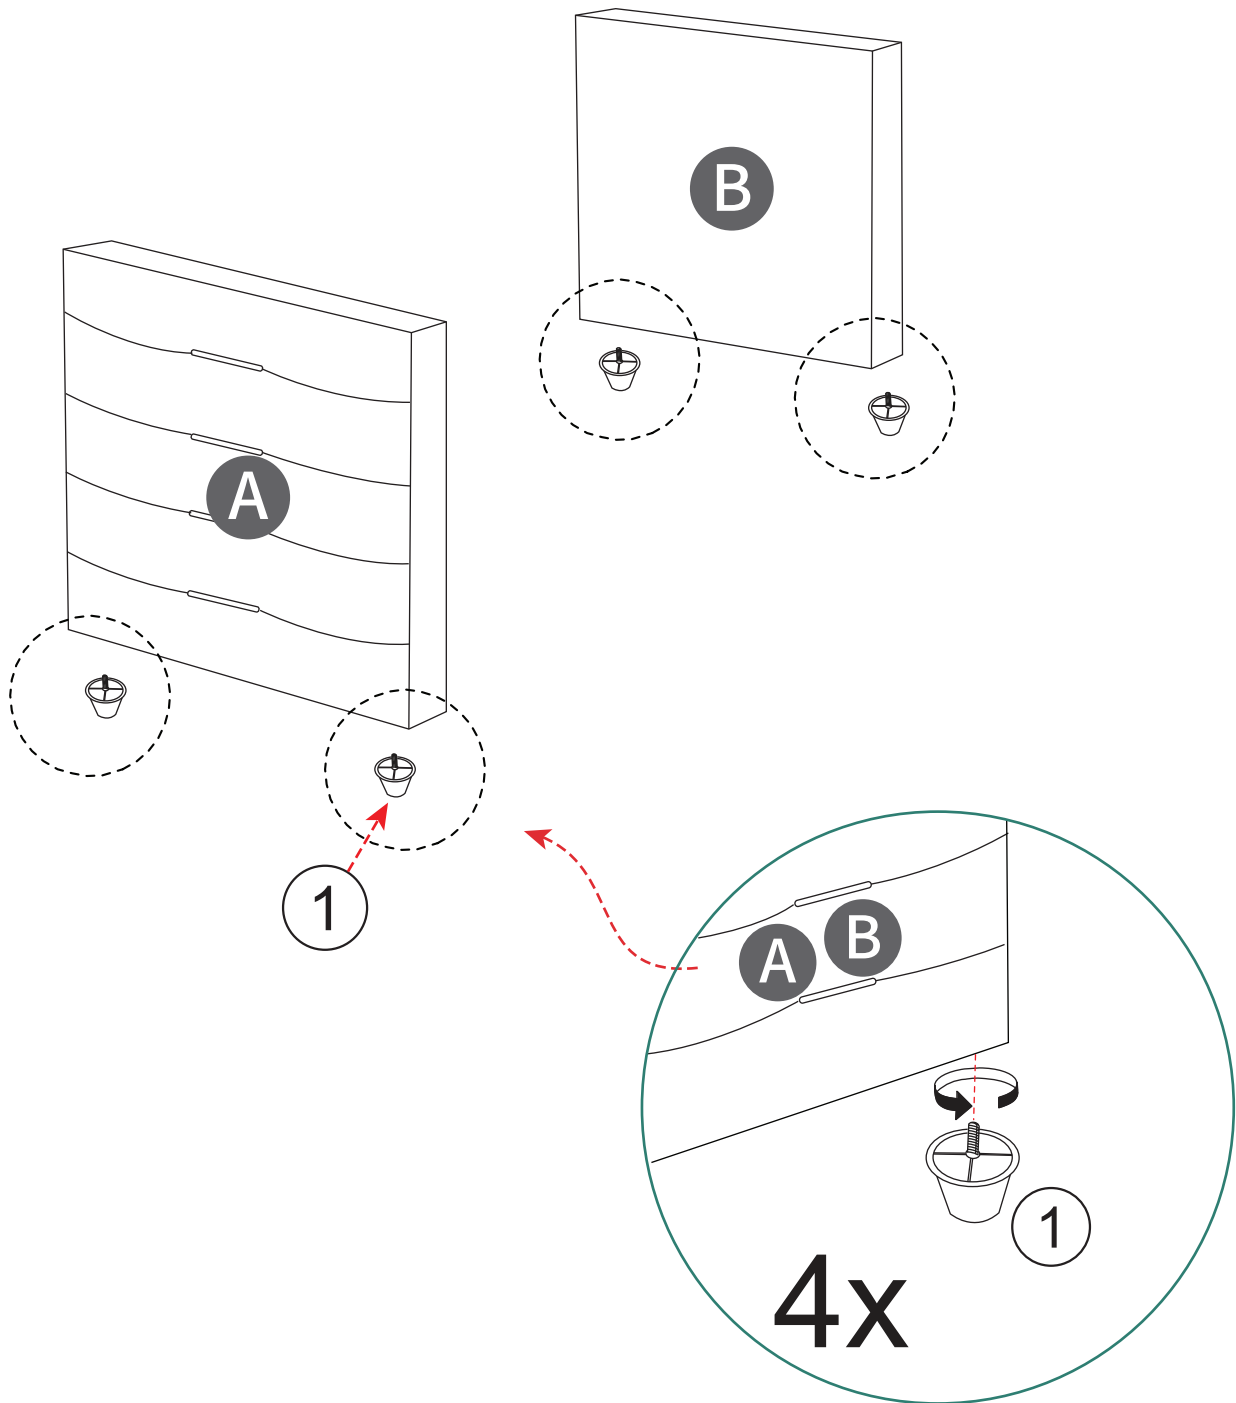





M8 x 25 mm

⑤ x 8

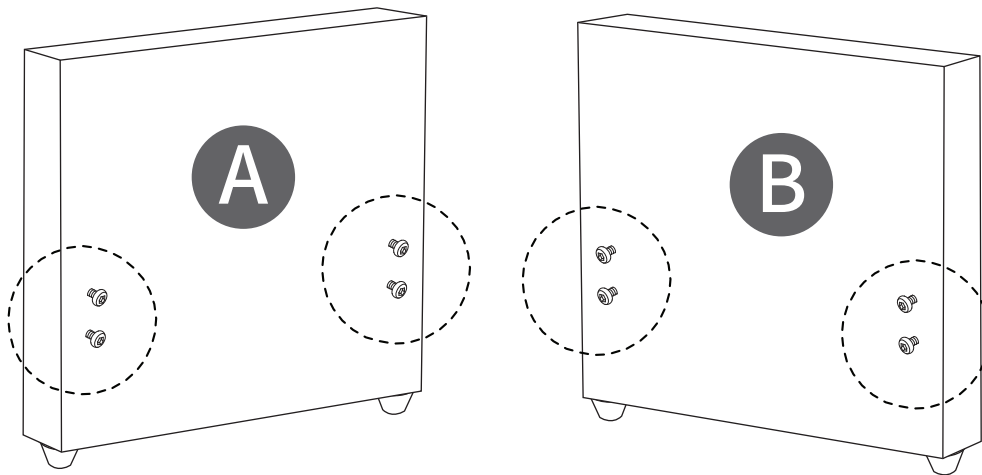


Do not fully tighten screws  
before completing step 3.

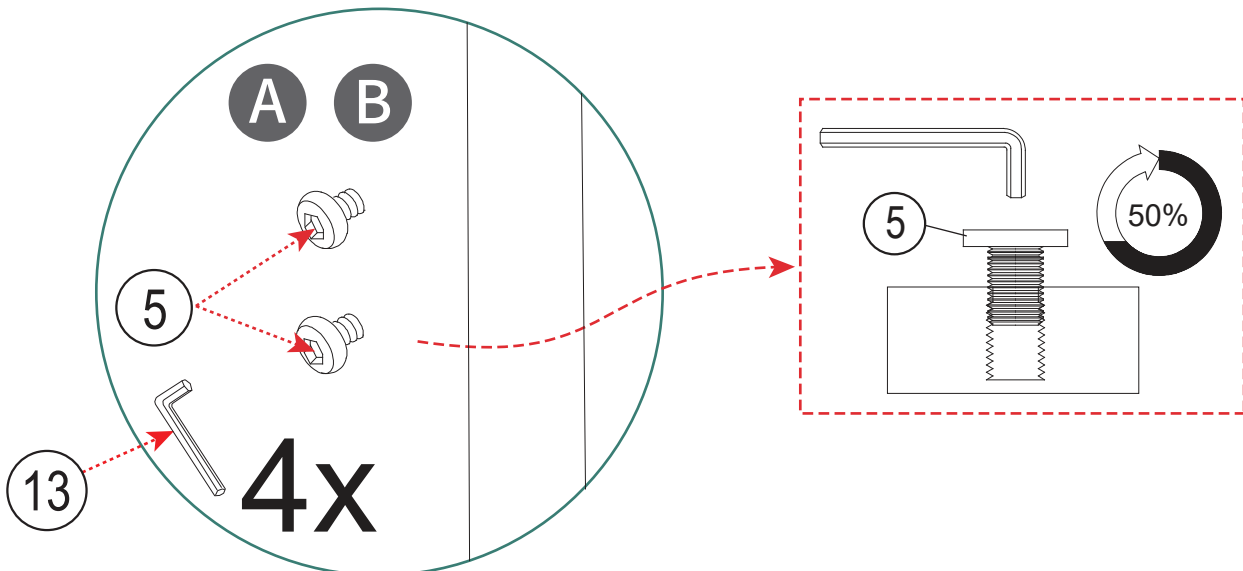

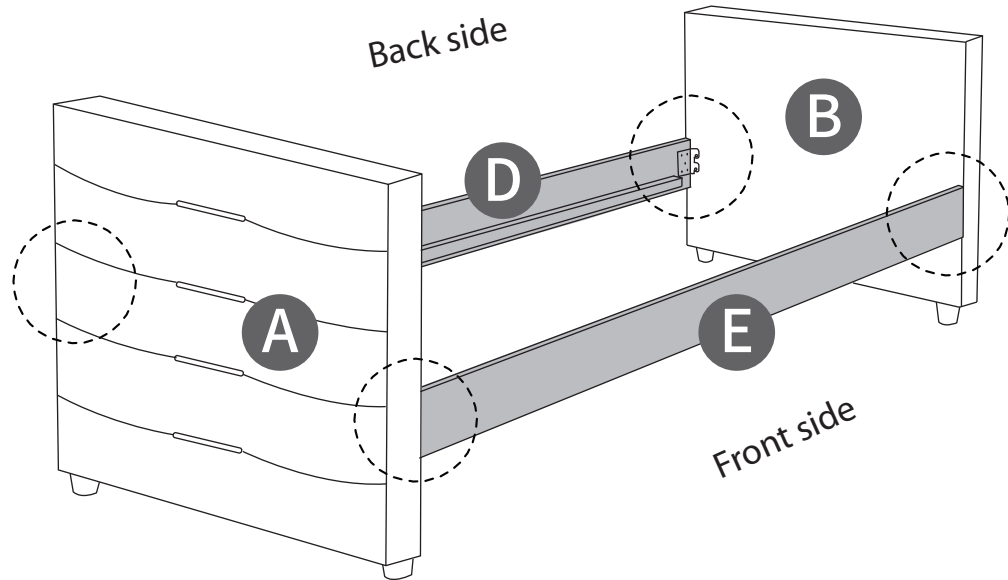

4x

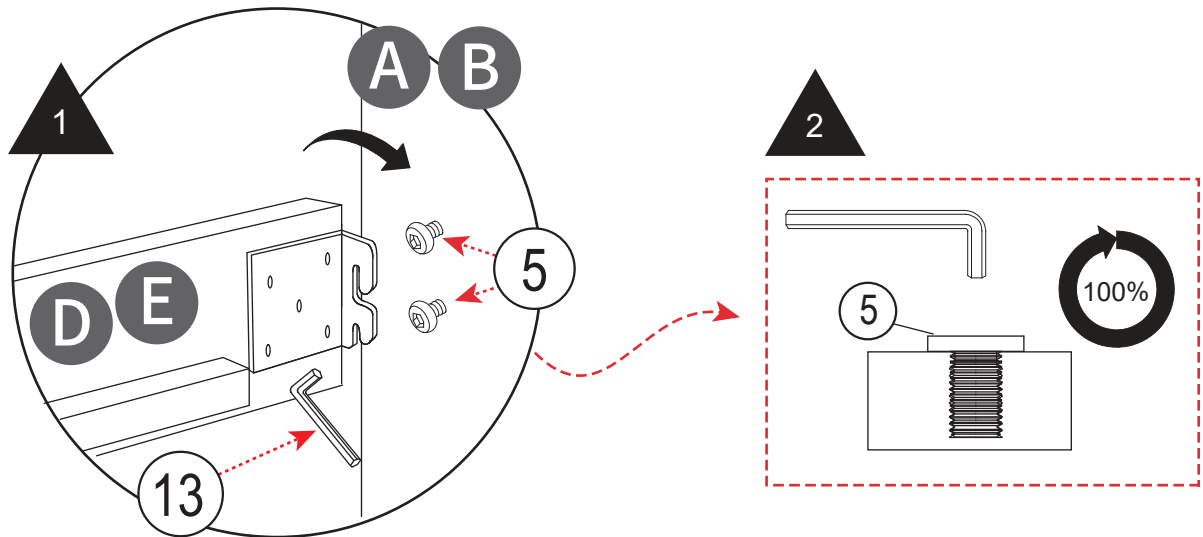




M6 x 45 mm

⑥ x 4




M6

⑪ x 4

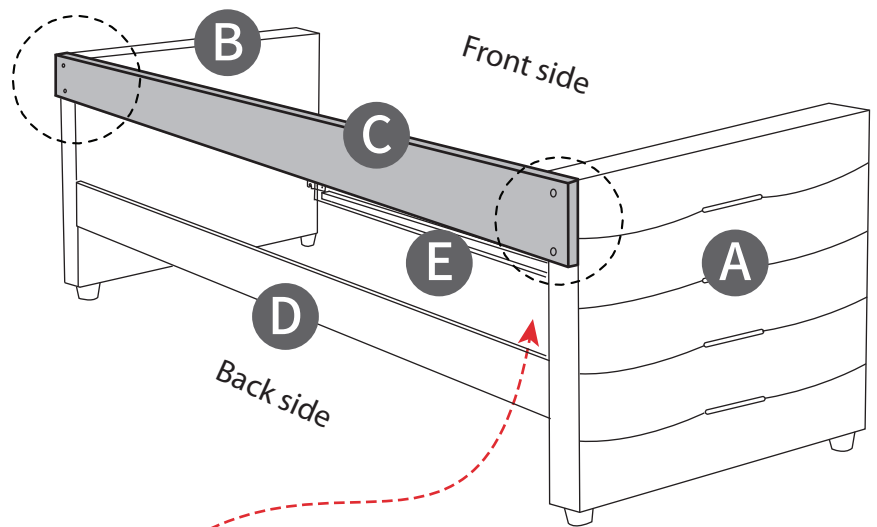

2x

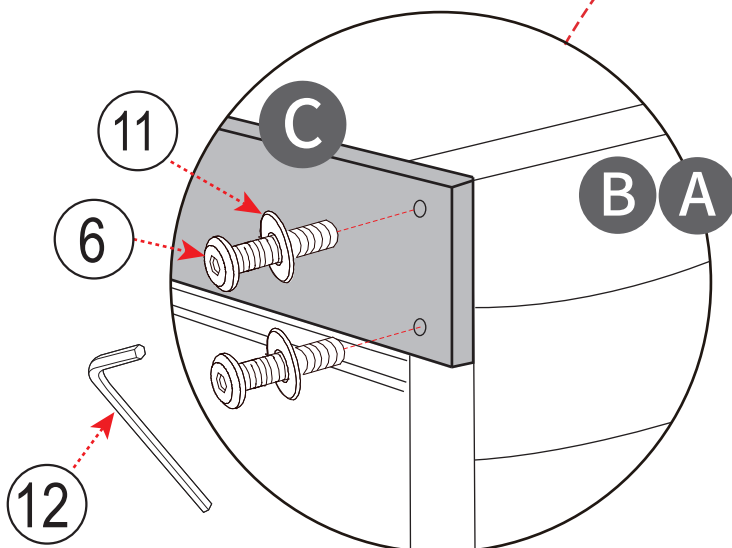



M6 x 35 mm

⑦ x 4




M6


⑪ x 4



② x 2

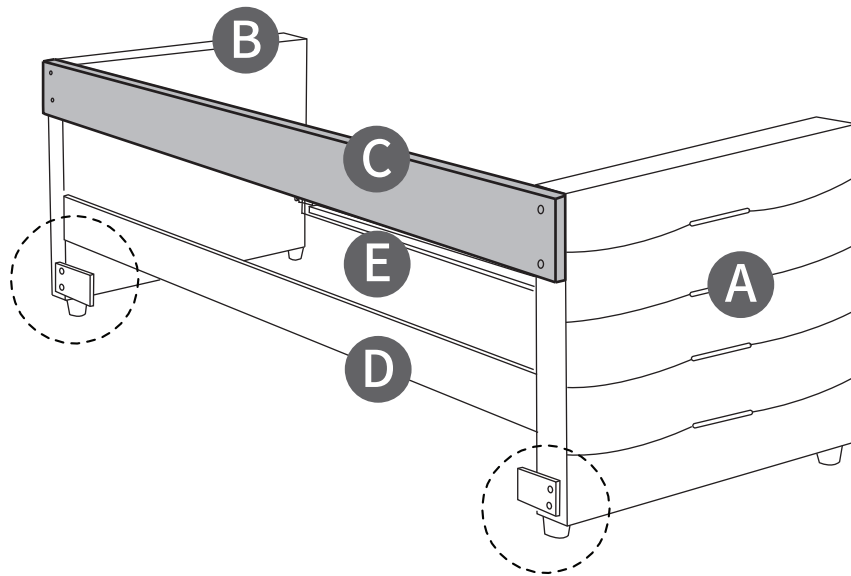

2x

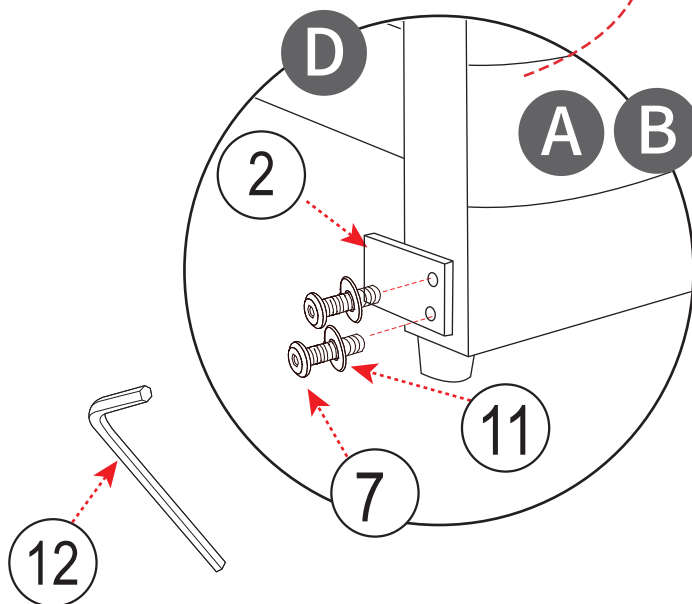







M4 x 30 mm

⑨x20



Screwdriver  
Not Provided

20x

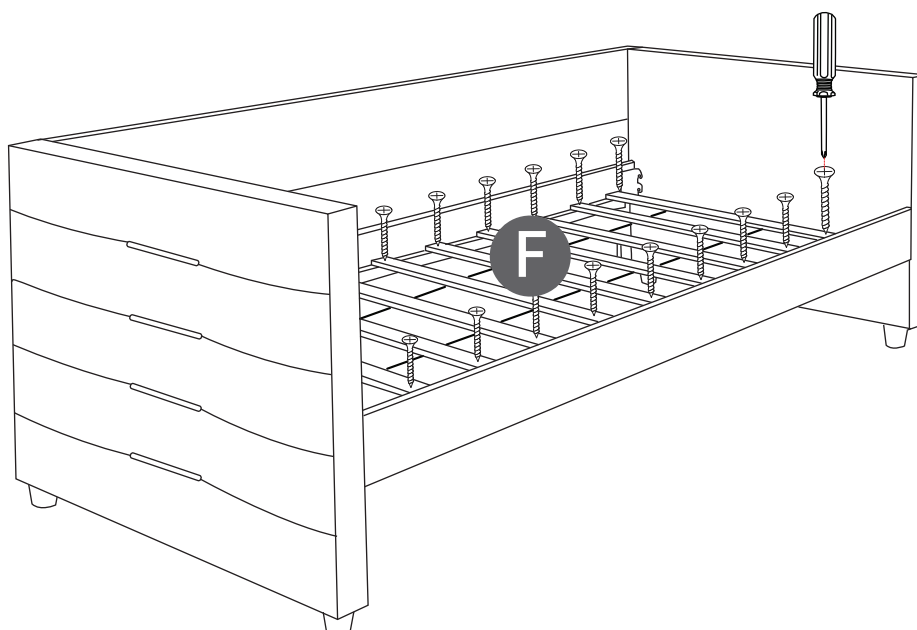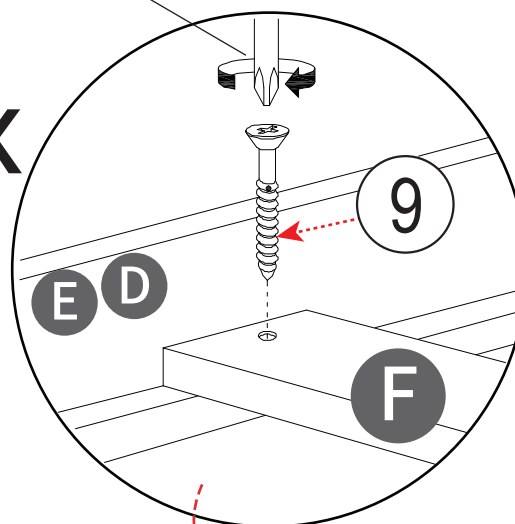



M4 x 35 mm

⑧ x 16



M4 x 30 mm

⑨ x 20



M4 x 16 mm

⑩ x 16




④ x 8




③ x 8


Fix the cube at the bottom  
of 1st, 4th, 7th, and 10th slat.

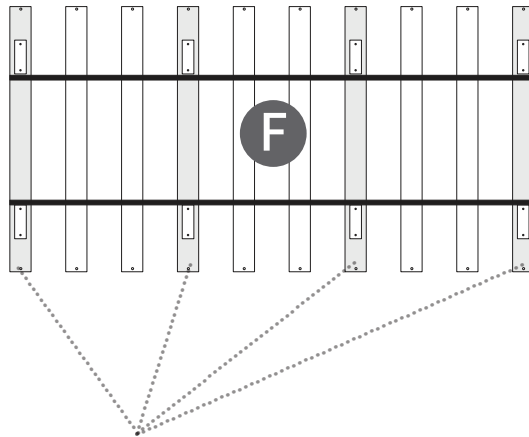

### Step 7.1


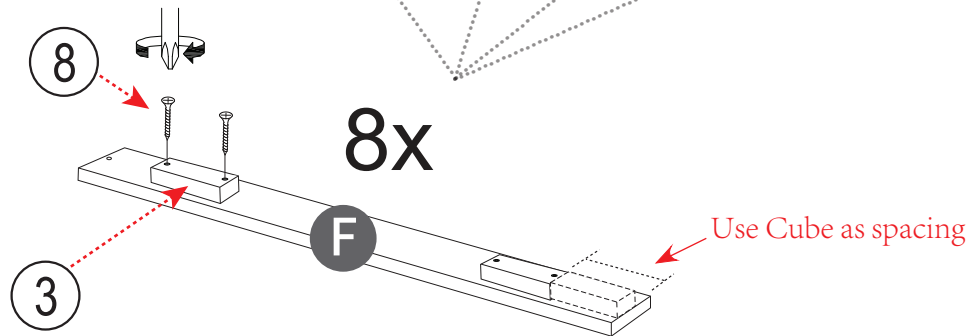


### Step 7.2

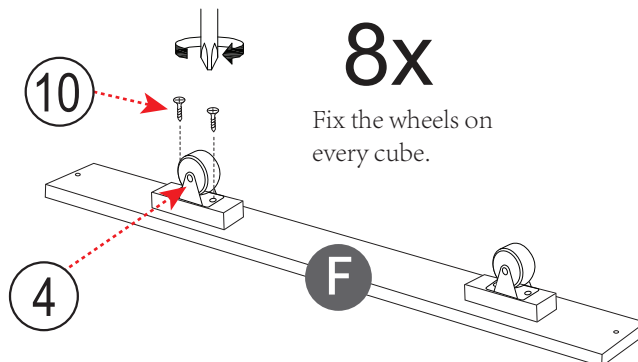


Screwdriver  
Not Provided

### Step 7.3

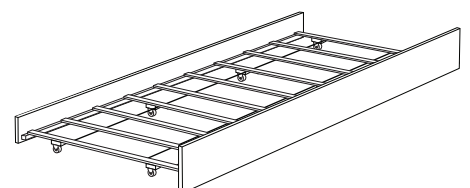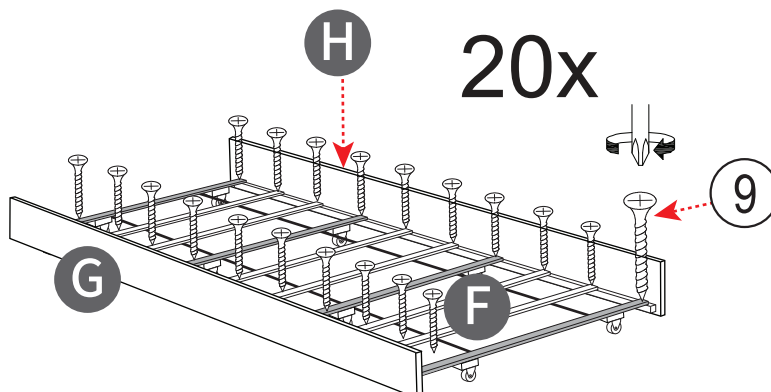

TRUNDLE COMPLETED  
ASSEMBLY

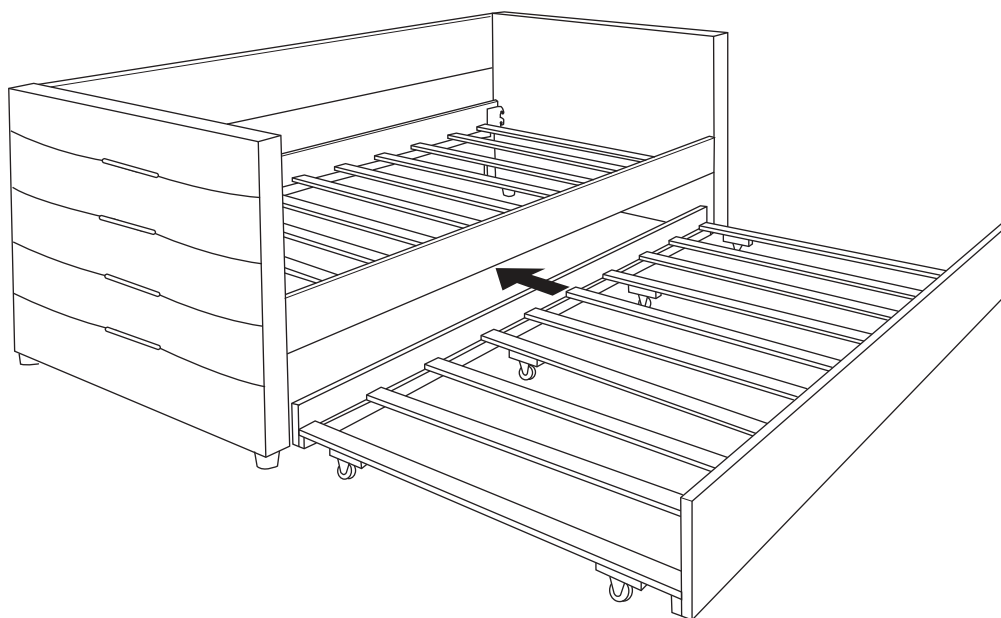

COMPLETED  
ASSEMBLY