


---

# Rocking Chair








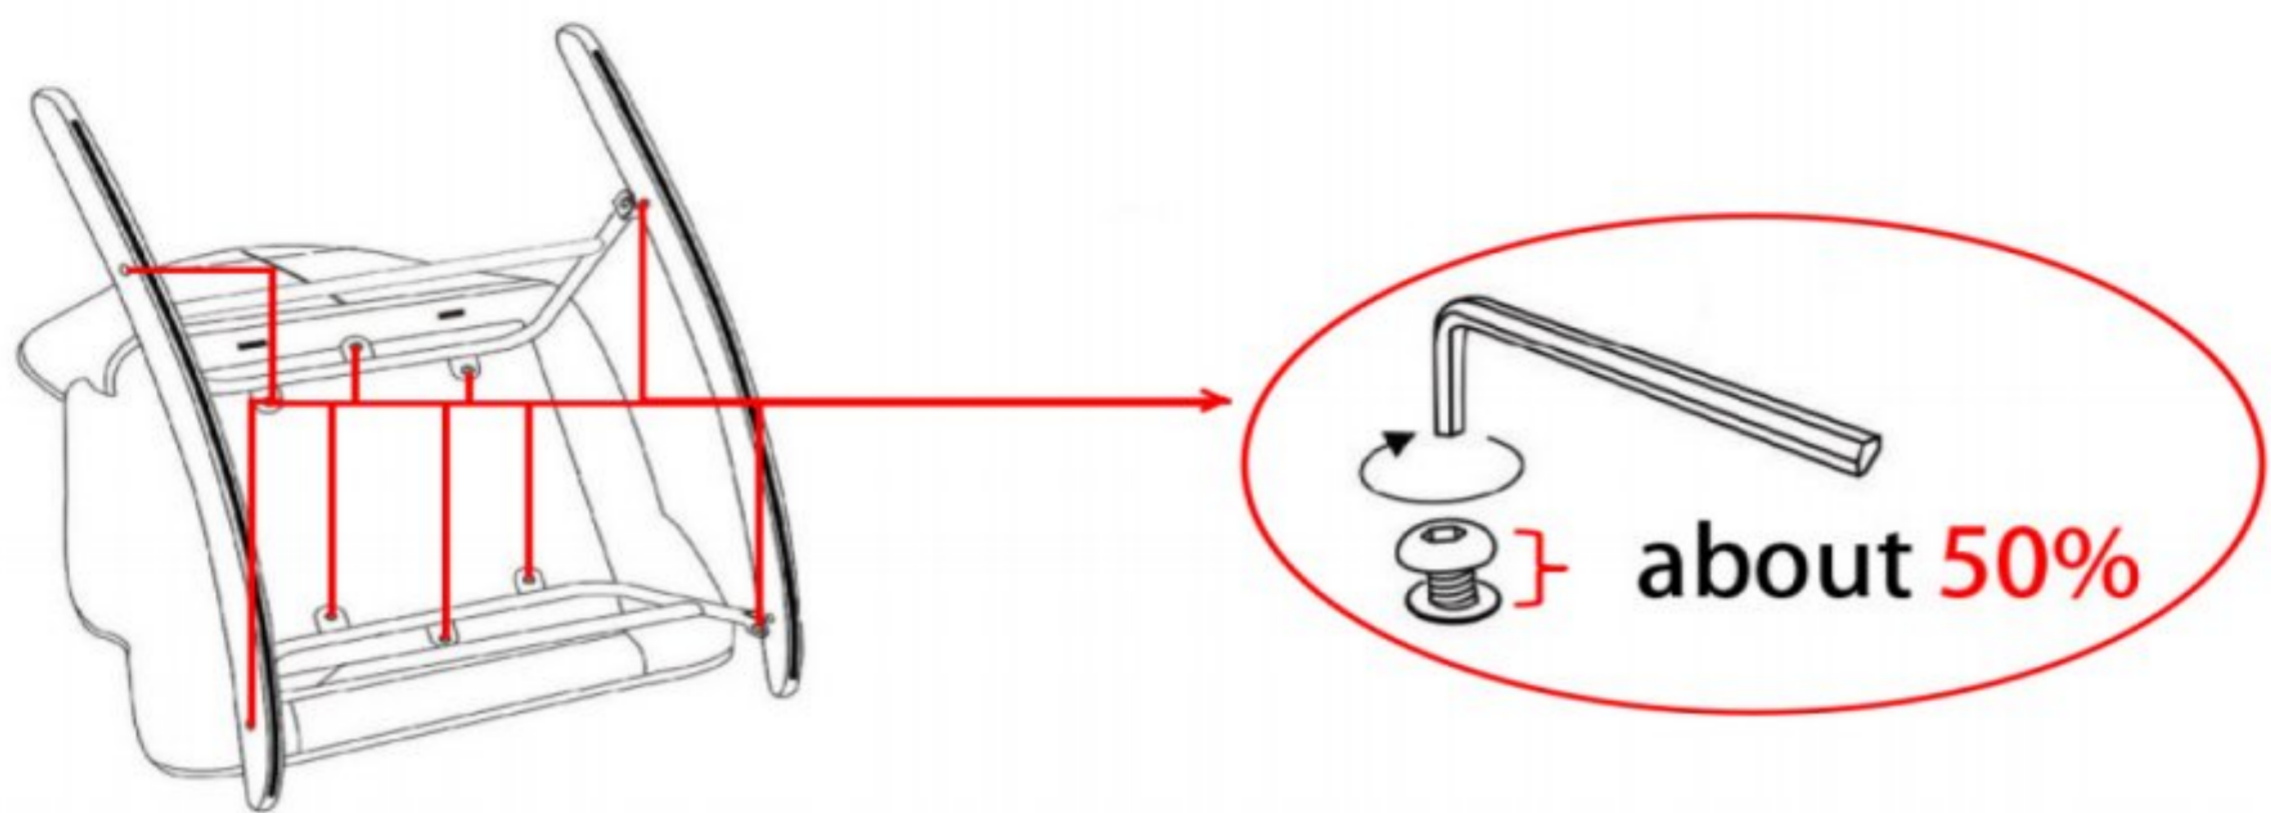






# Assembly Instructions

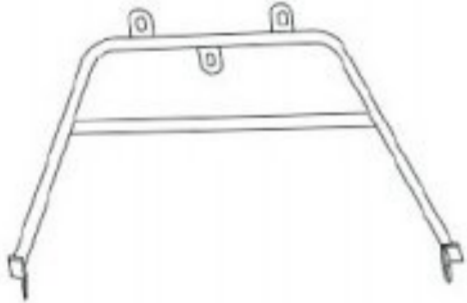**Tips:** For optimal results, we recommend tightening the **all screws** to approximately **50%** before assembling the chair legs. This should ensure chair legs proper alignment and a secure fit.




After installing the components, fully tighten the screws.

<b>A</b> Seat Back  x 1	<b>B</b> Seat Bottom  x 1	<b>C</b> Left Wooden Leg  x 1	<b>D</b> Right Wooden Leg  x 1
<b>E</b> Back Metal Frame  x 1	<b>F</b> Front Metal Frame  x 1	<b>G</b> Small Washers  x 10	<b>H</b> Short Bolts  x 10
<b>I</b> Long Bolts  x 2	<b>J</b> Allen Wrench  x 1	<b>K</b> Large Washers  x 2	<b>L</b> Lumbar Pillow  x 1

1

Line up the plug of the Seat Back(A) with the holes on the armrests of Seat Bottom(B).

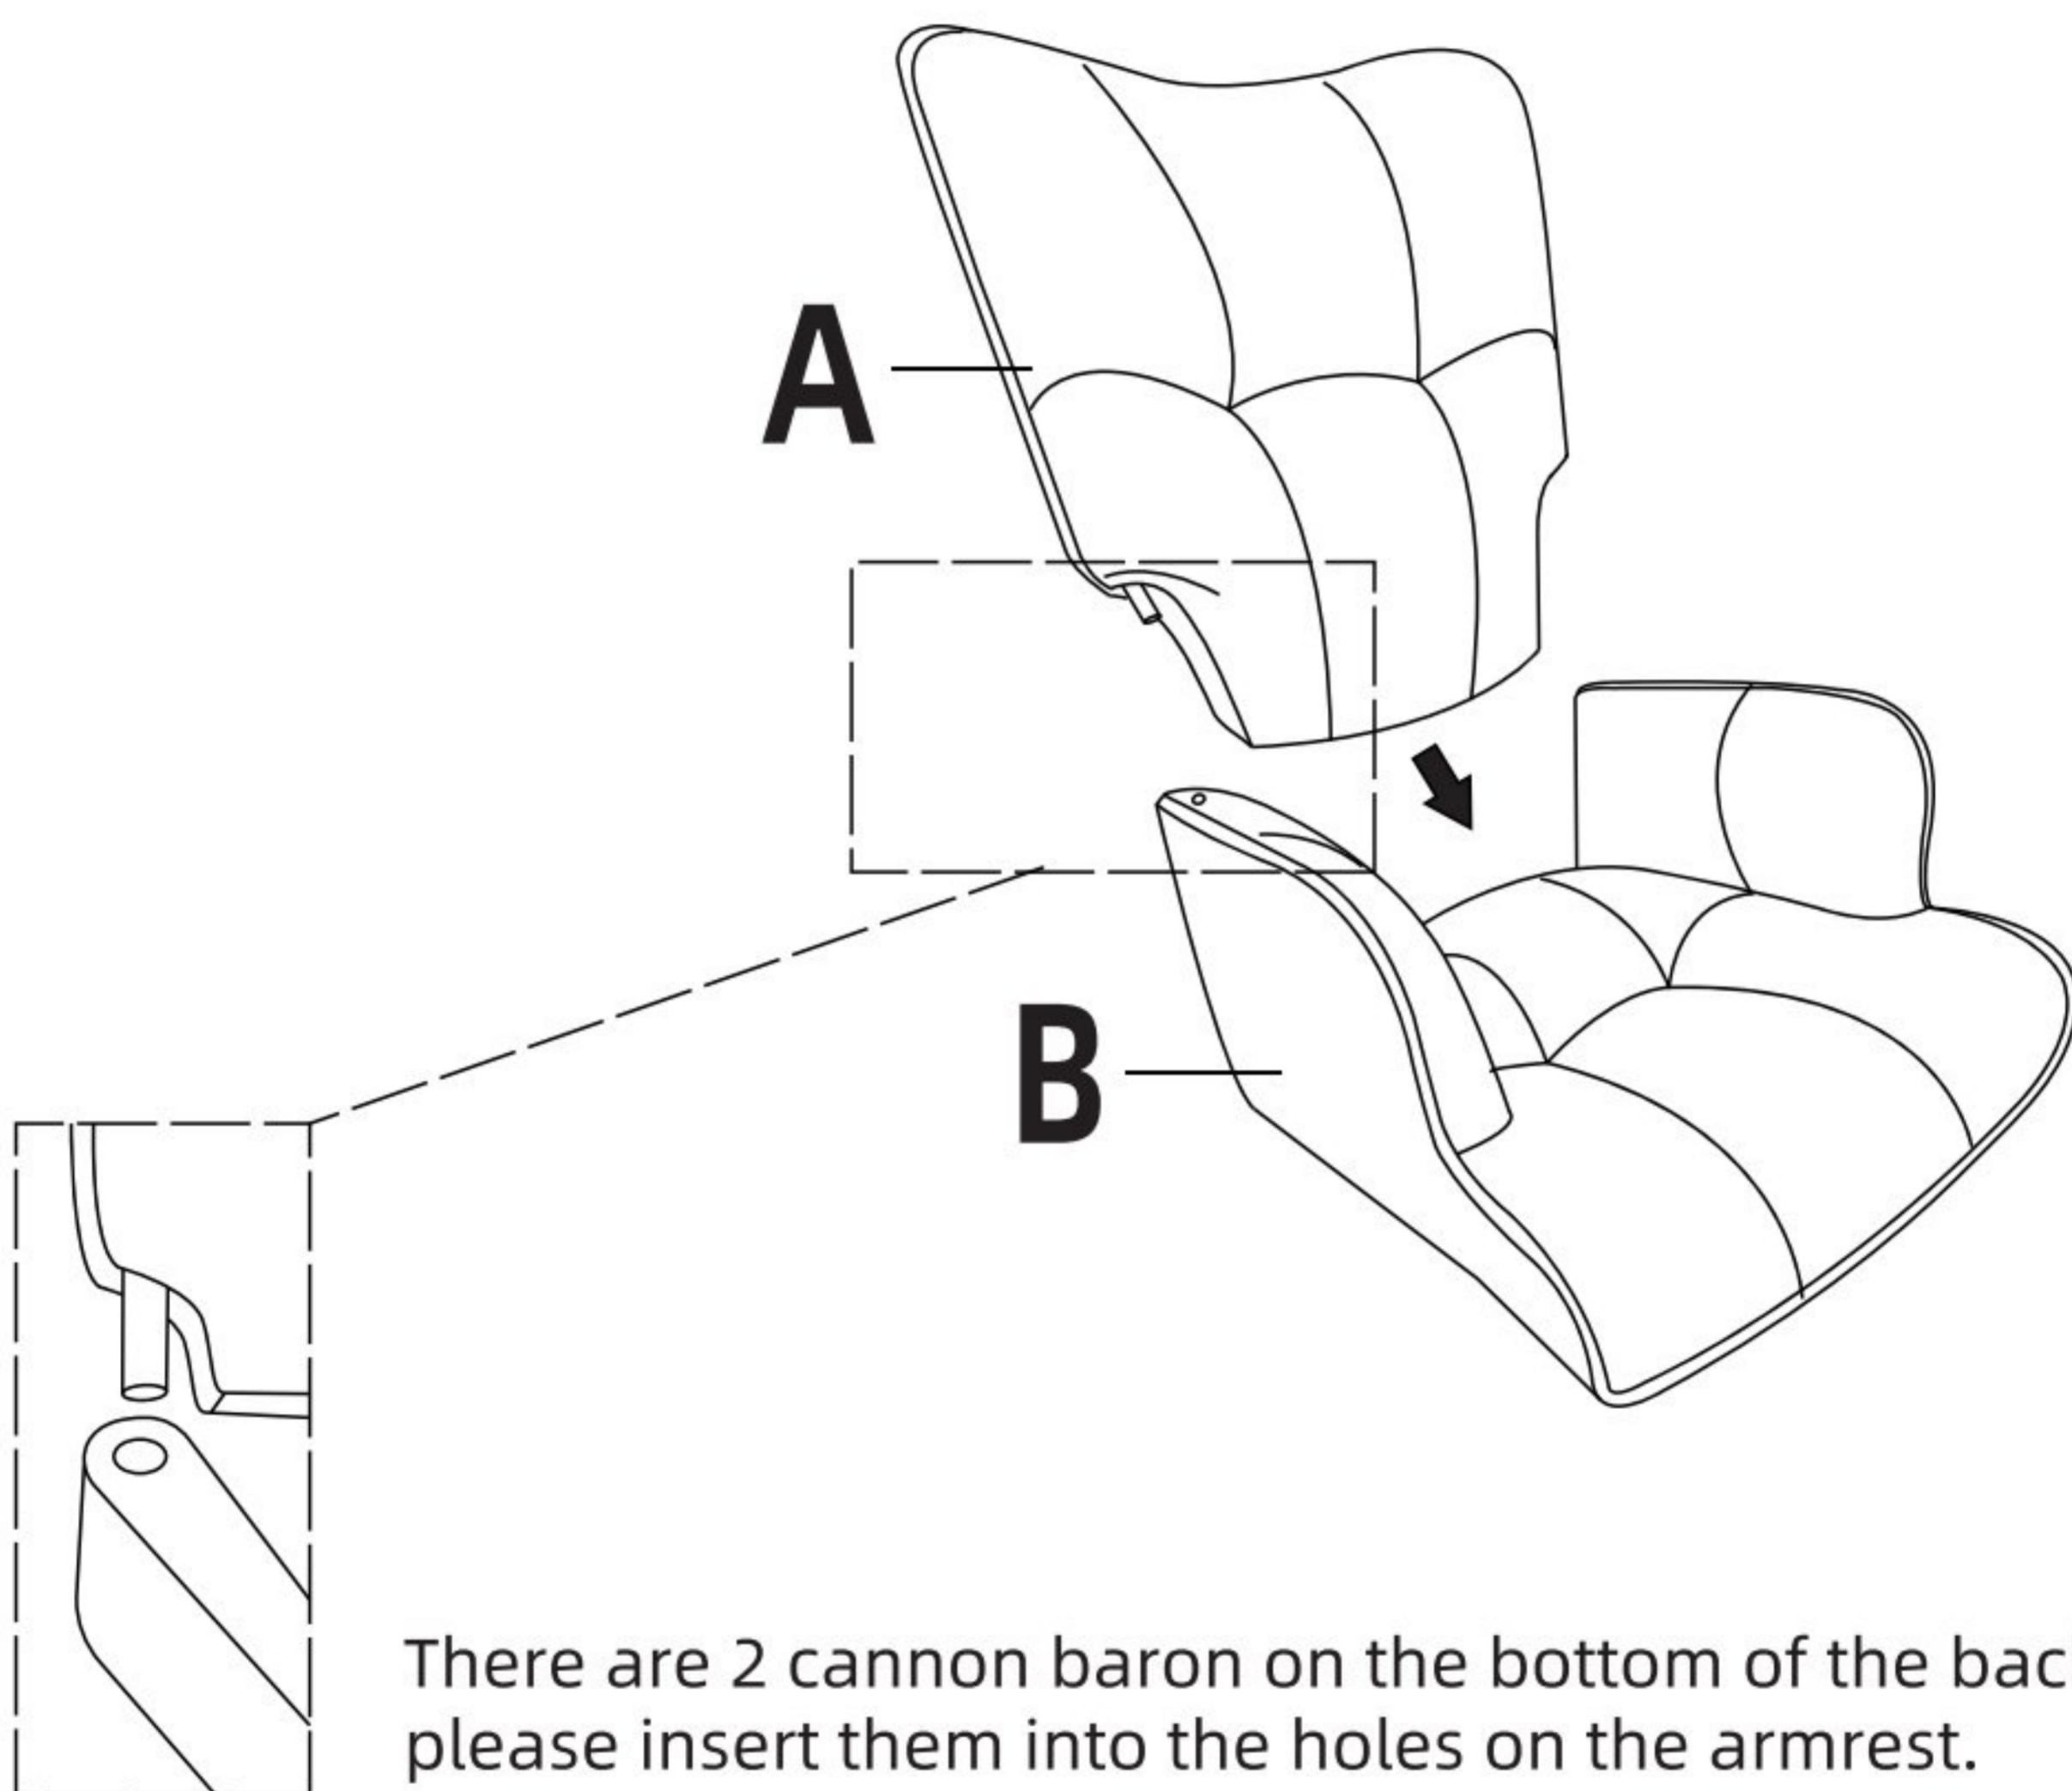


There are 2 cannon bar on the bottom of the back, please insert them into the holes on the armrest.

2


Align the Seat Back(A) with two arms, and insert the Seat Back(A) to the Seat Bottom(B).

Hold the backrest and press down

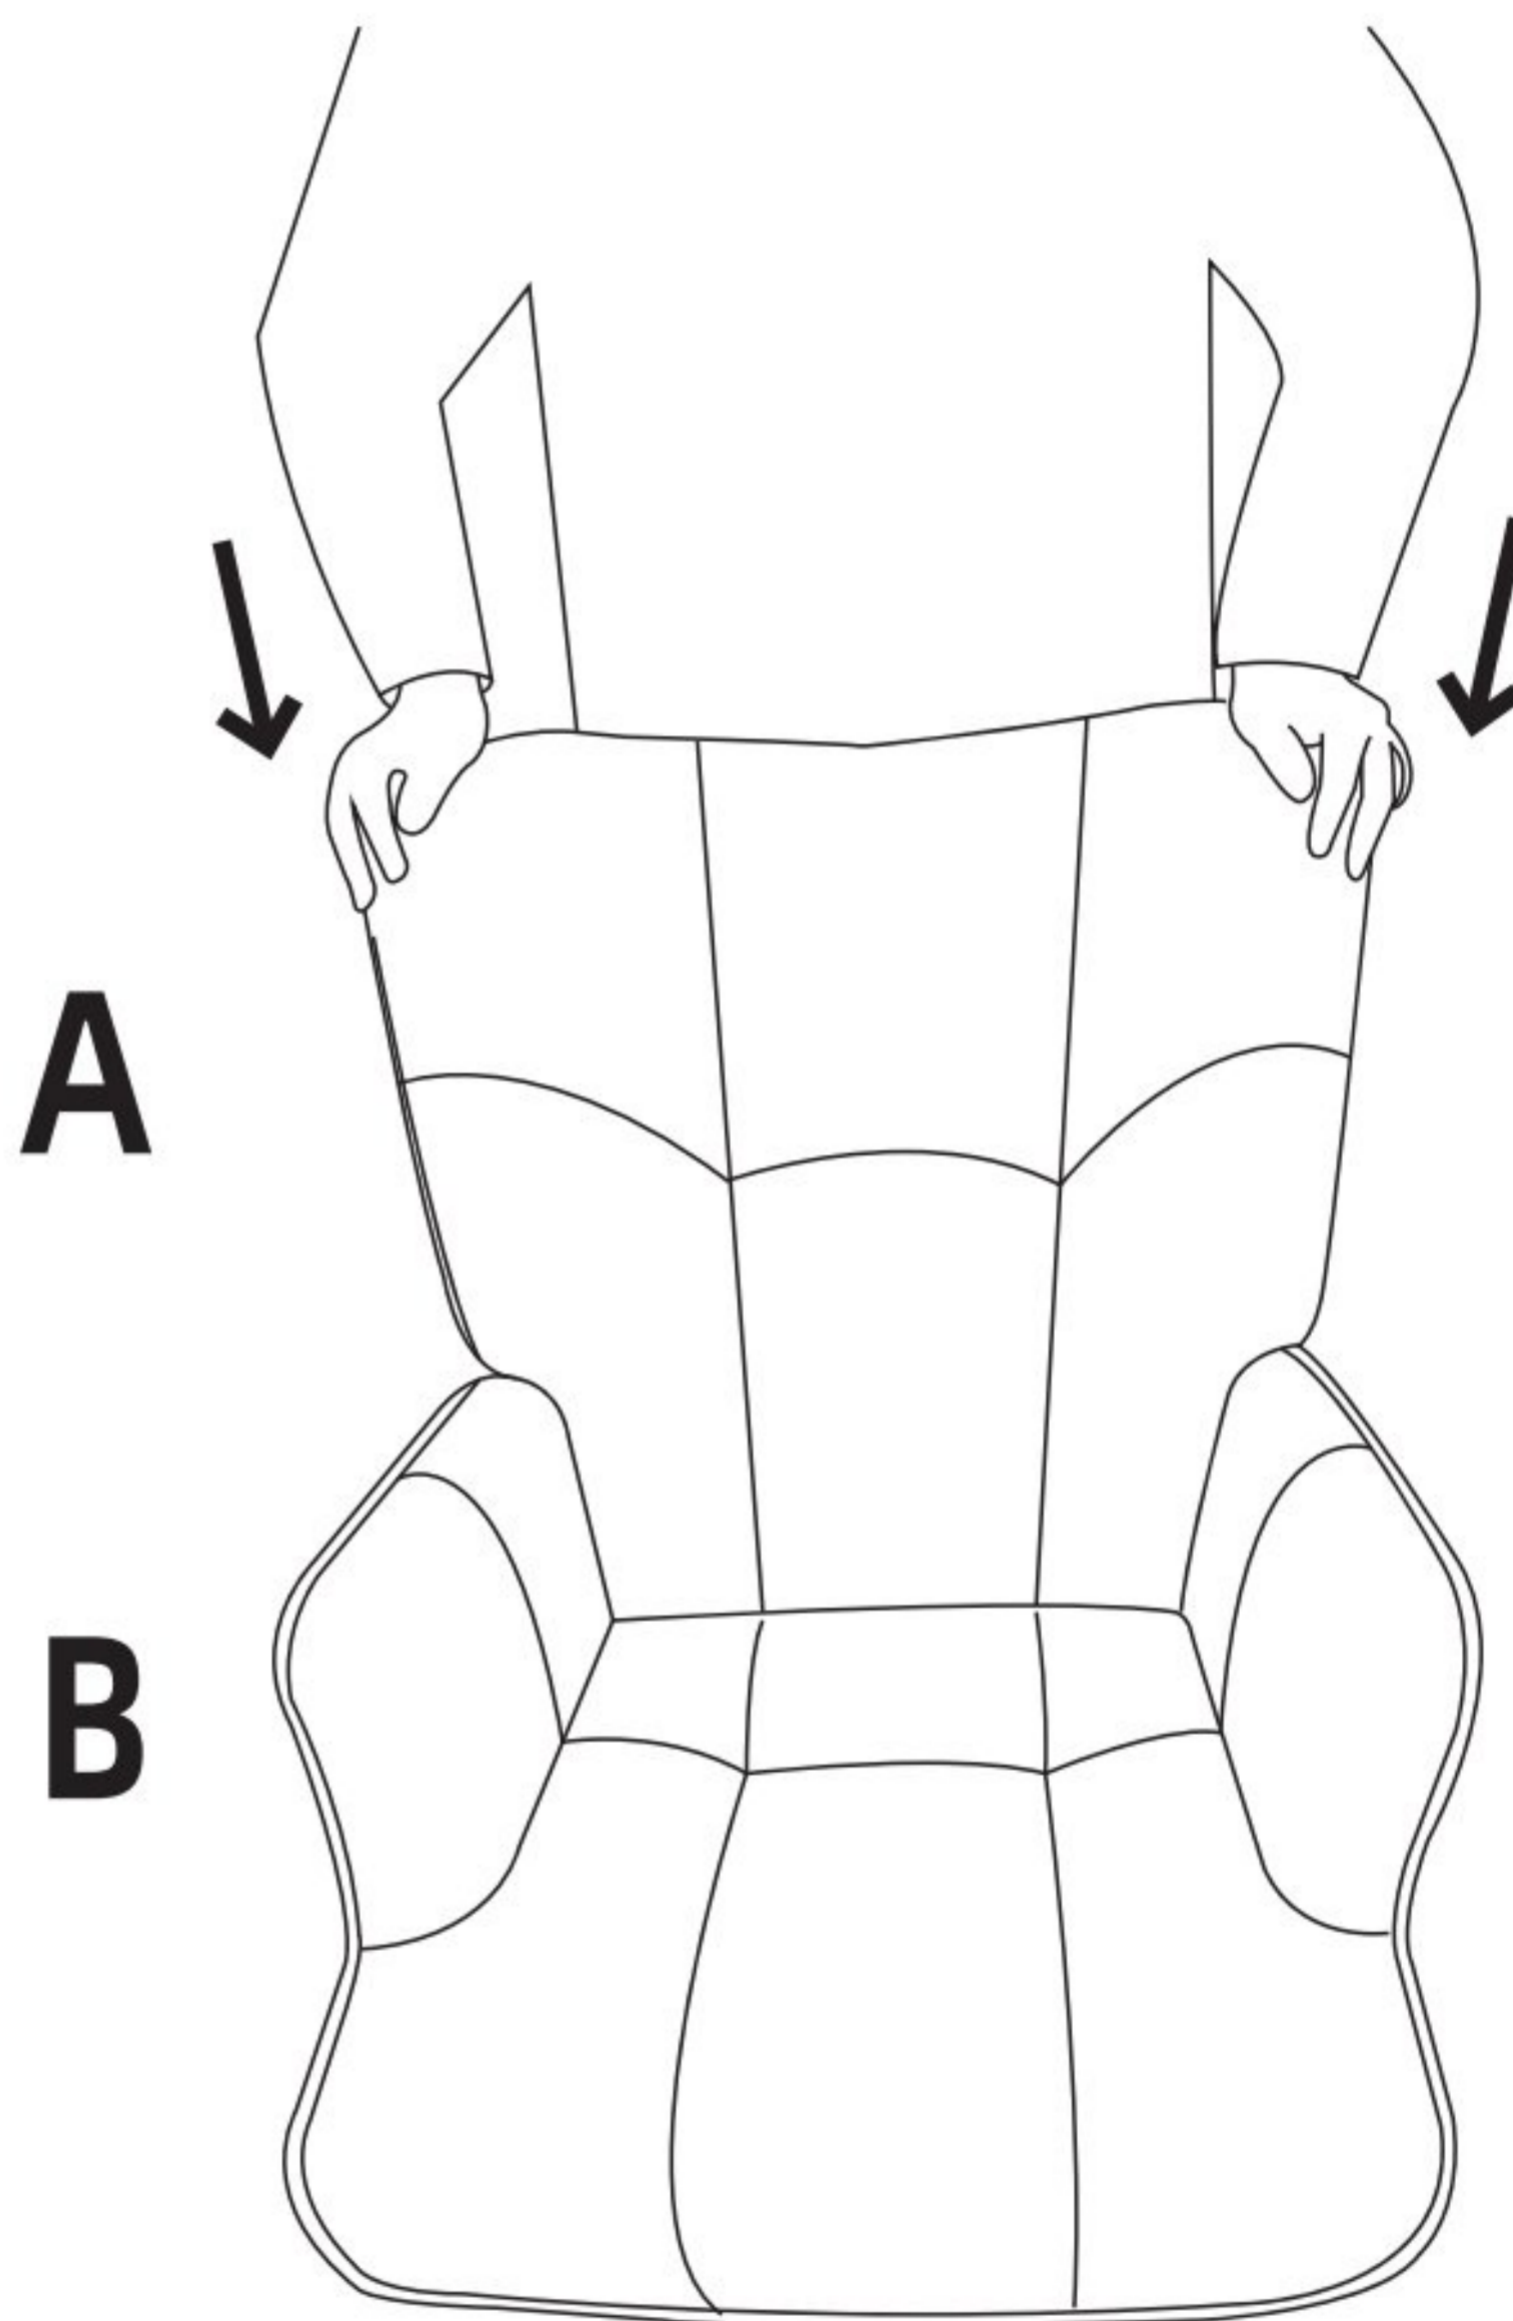

3

Make sure the back and the bottom tight fit, then drew the bolts in, then tighten.

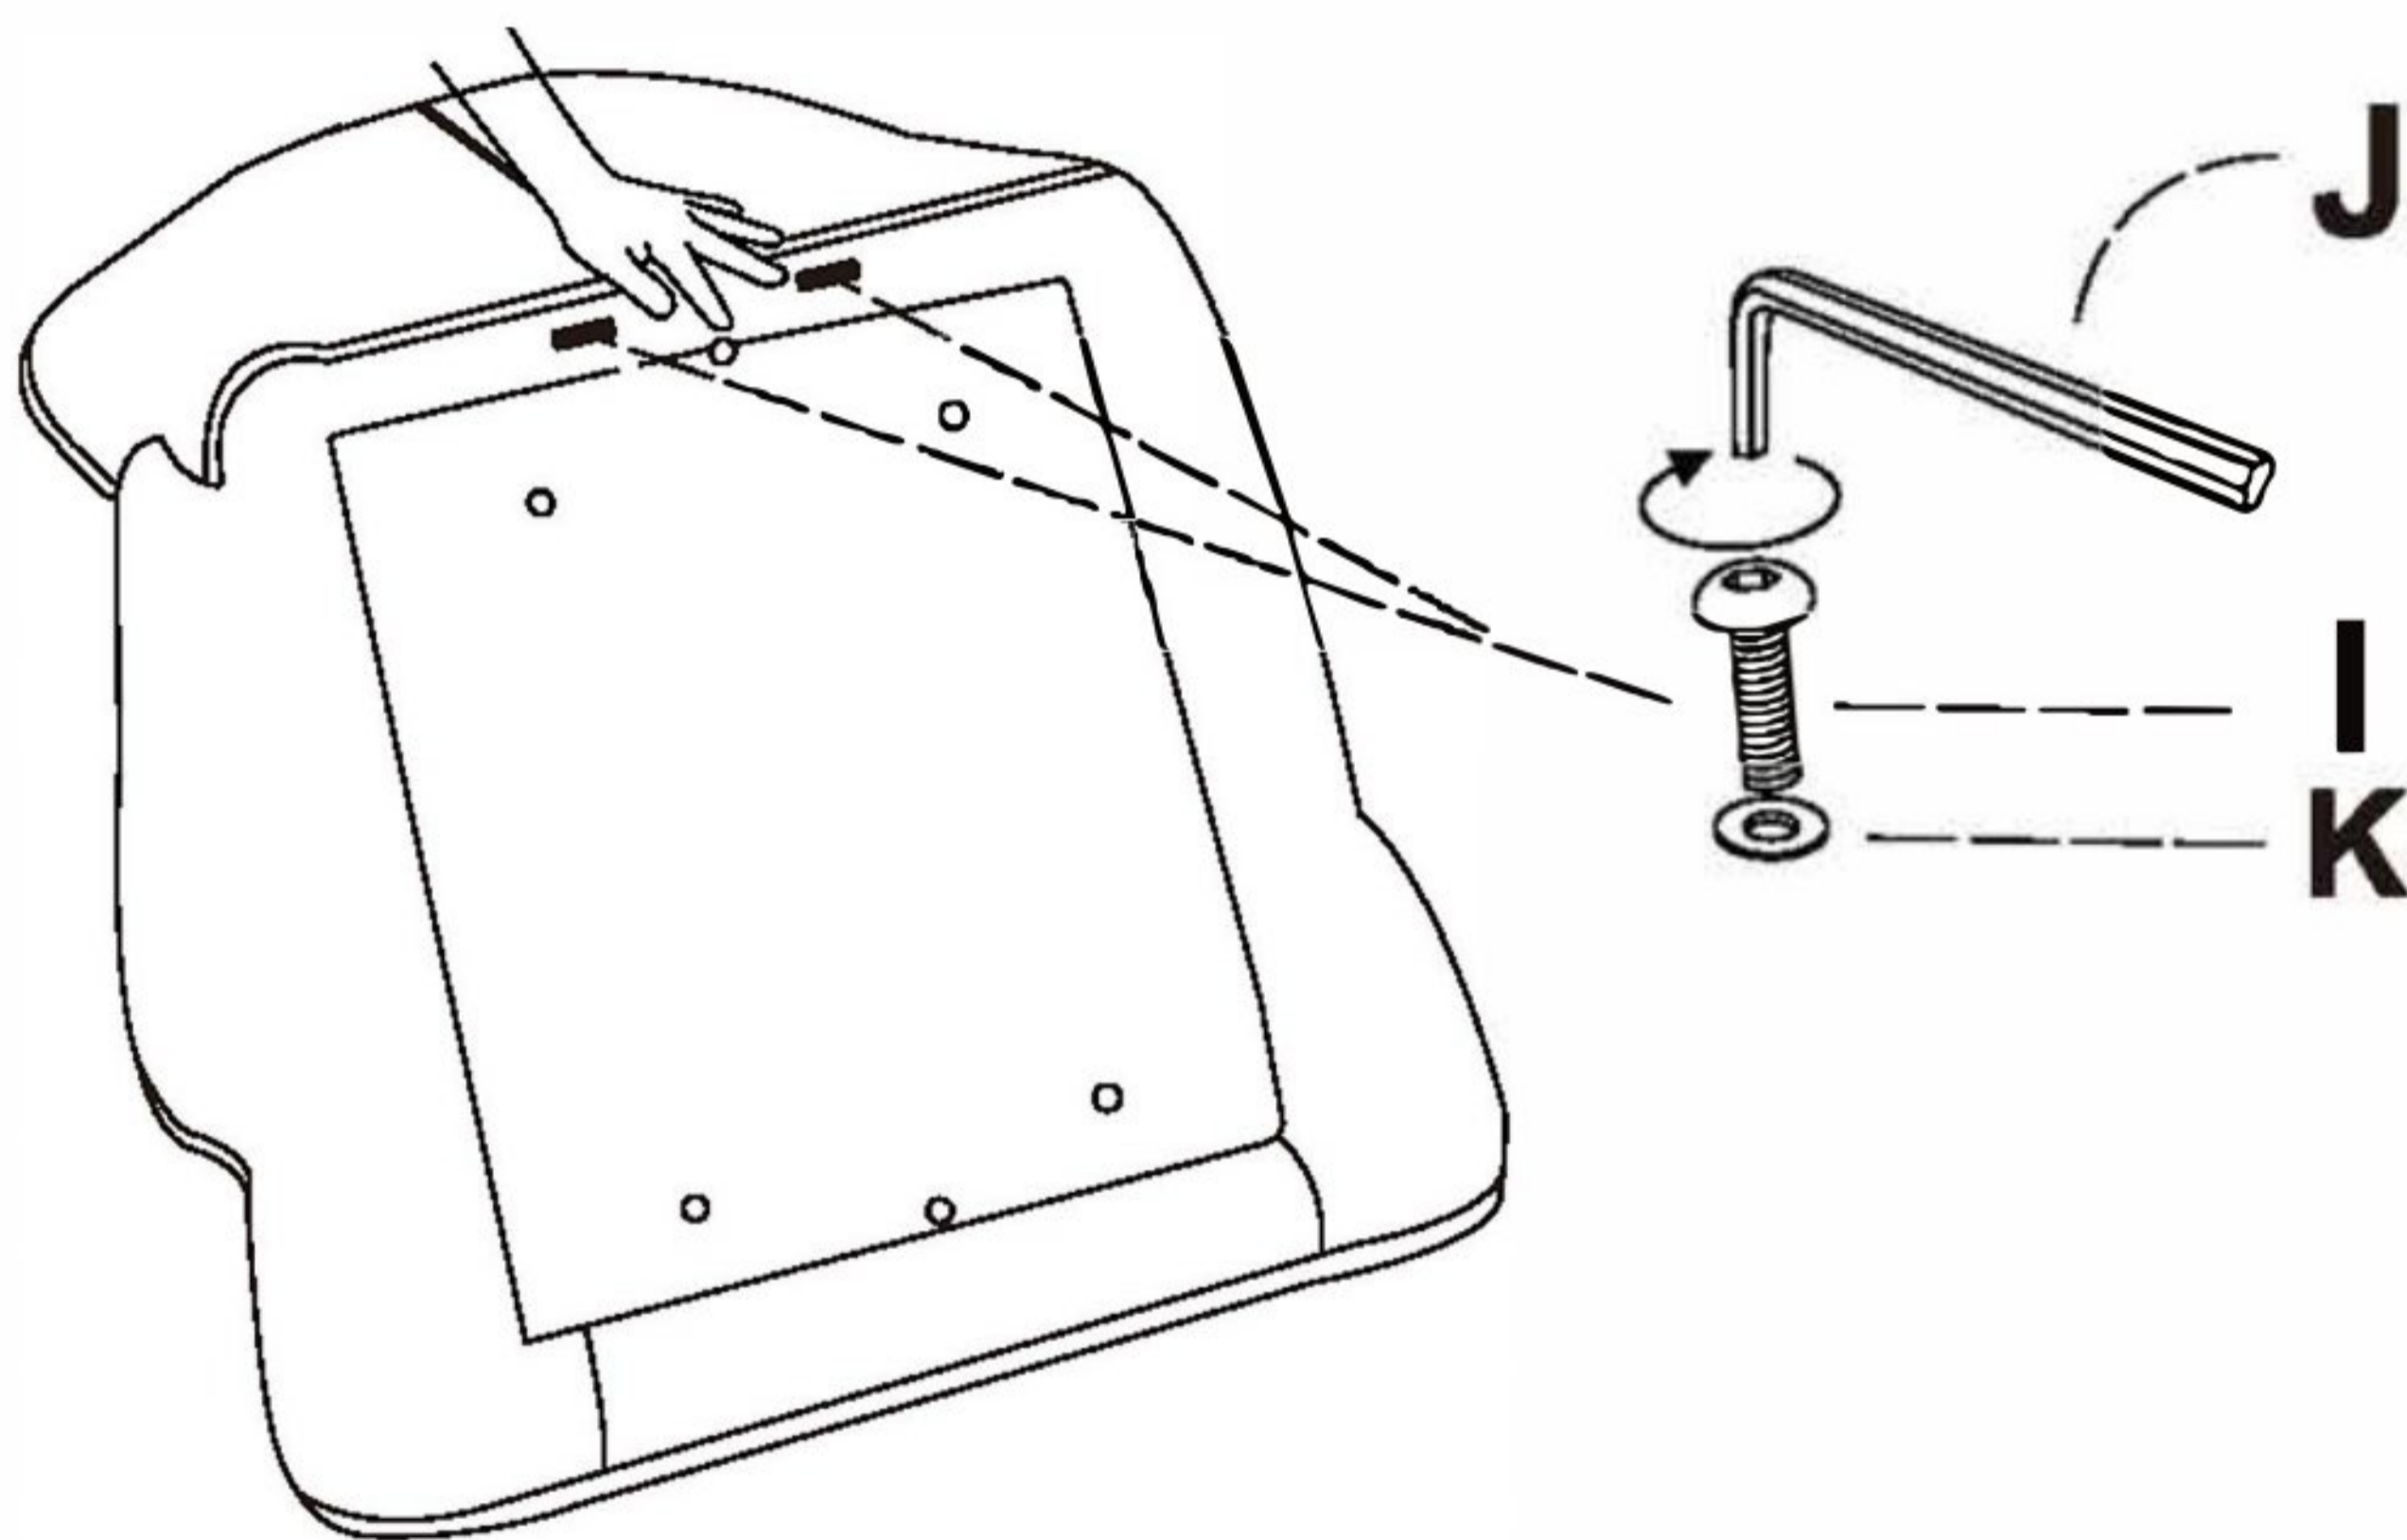

**K**



2 PCS


**I**



2 PCS

4

Insert nearly half of all bolts into below position first, then tighten all bolts.

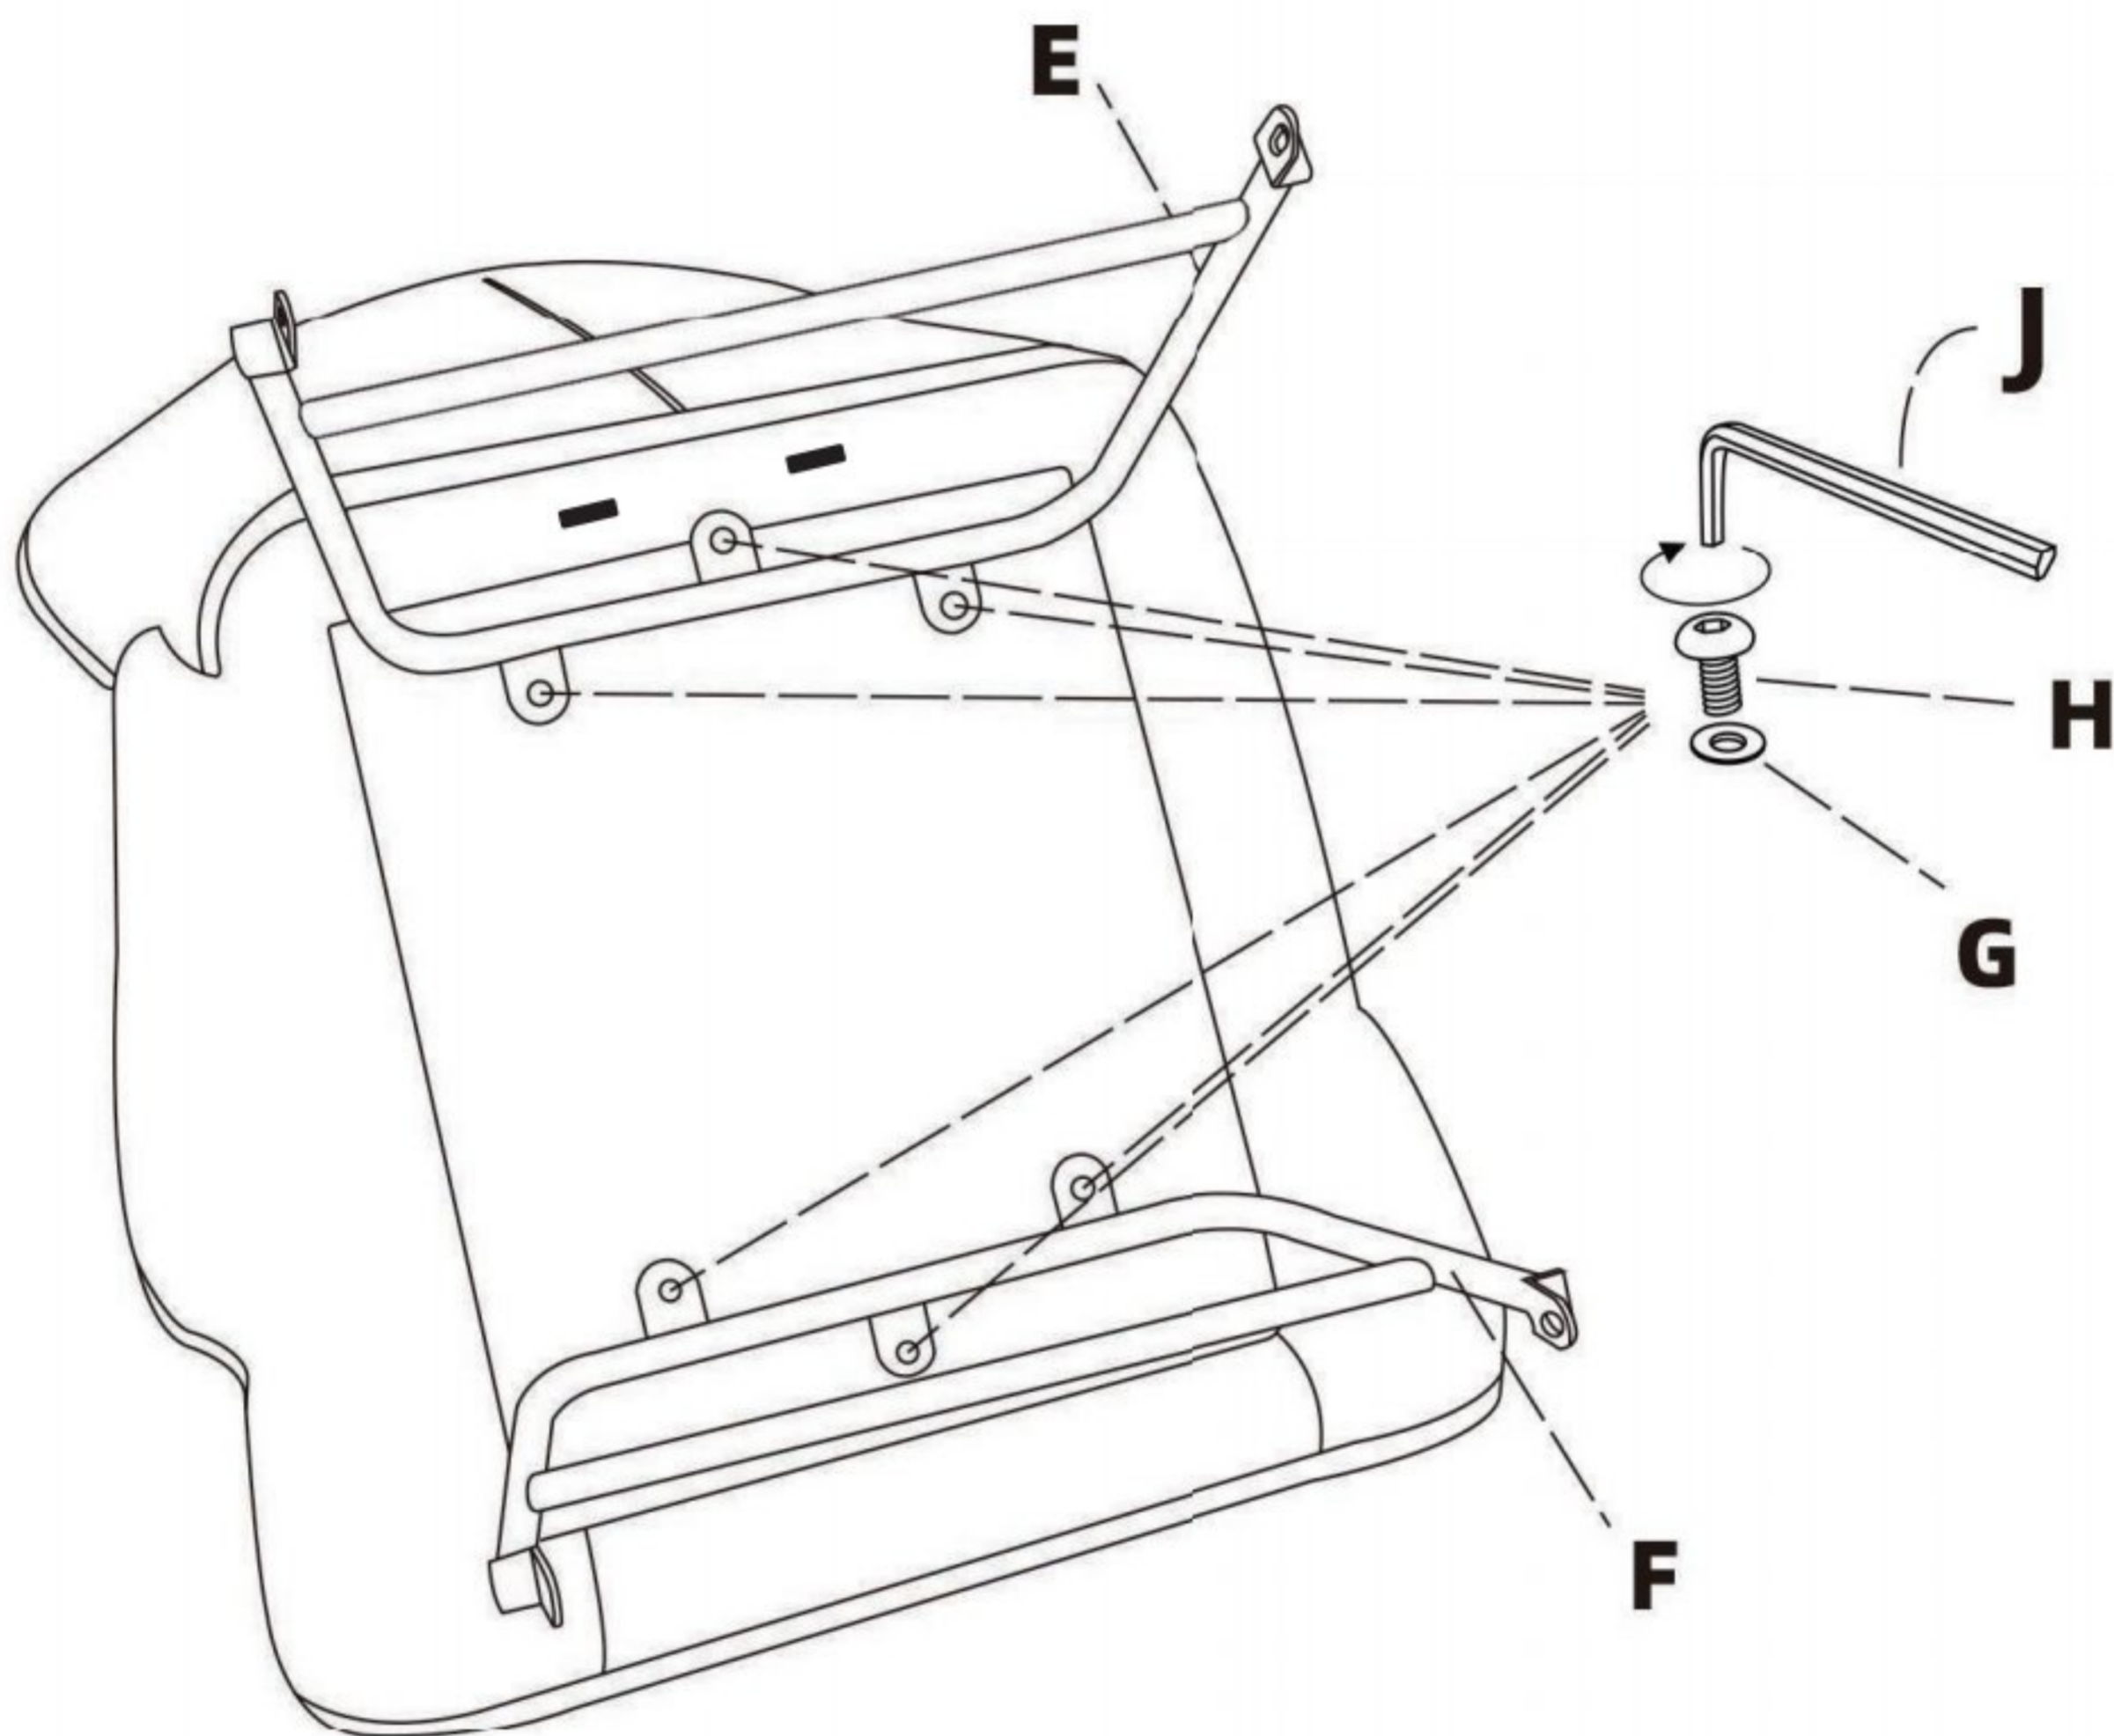

**H**



6 PCS


**G**



6 PCS

5

Make sure the longer side of C and D is facing the back of the chair. Then tighten all the bolts.

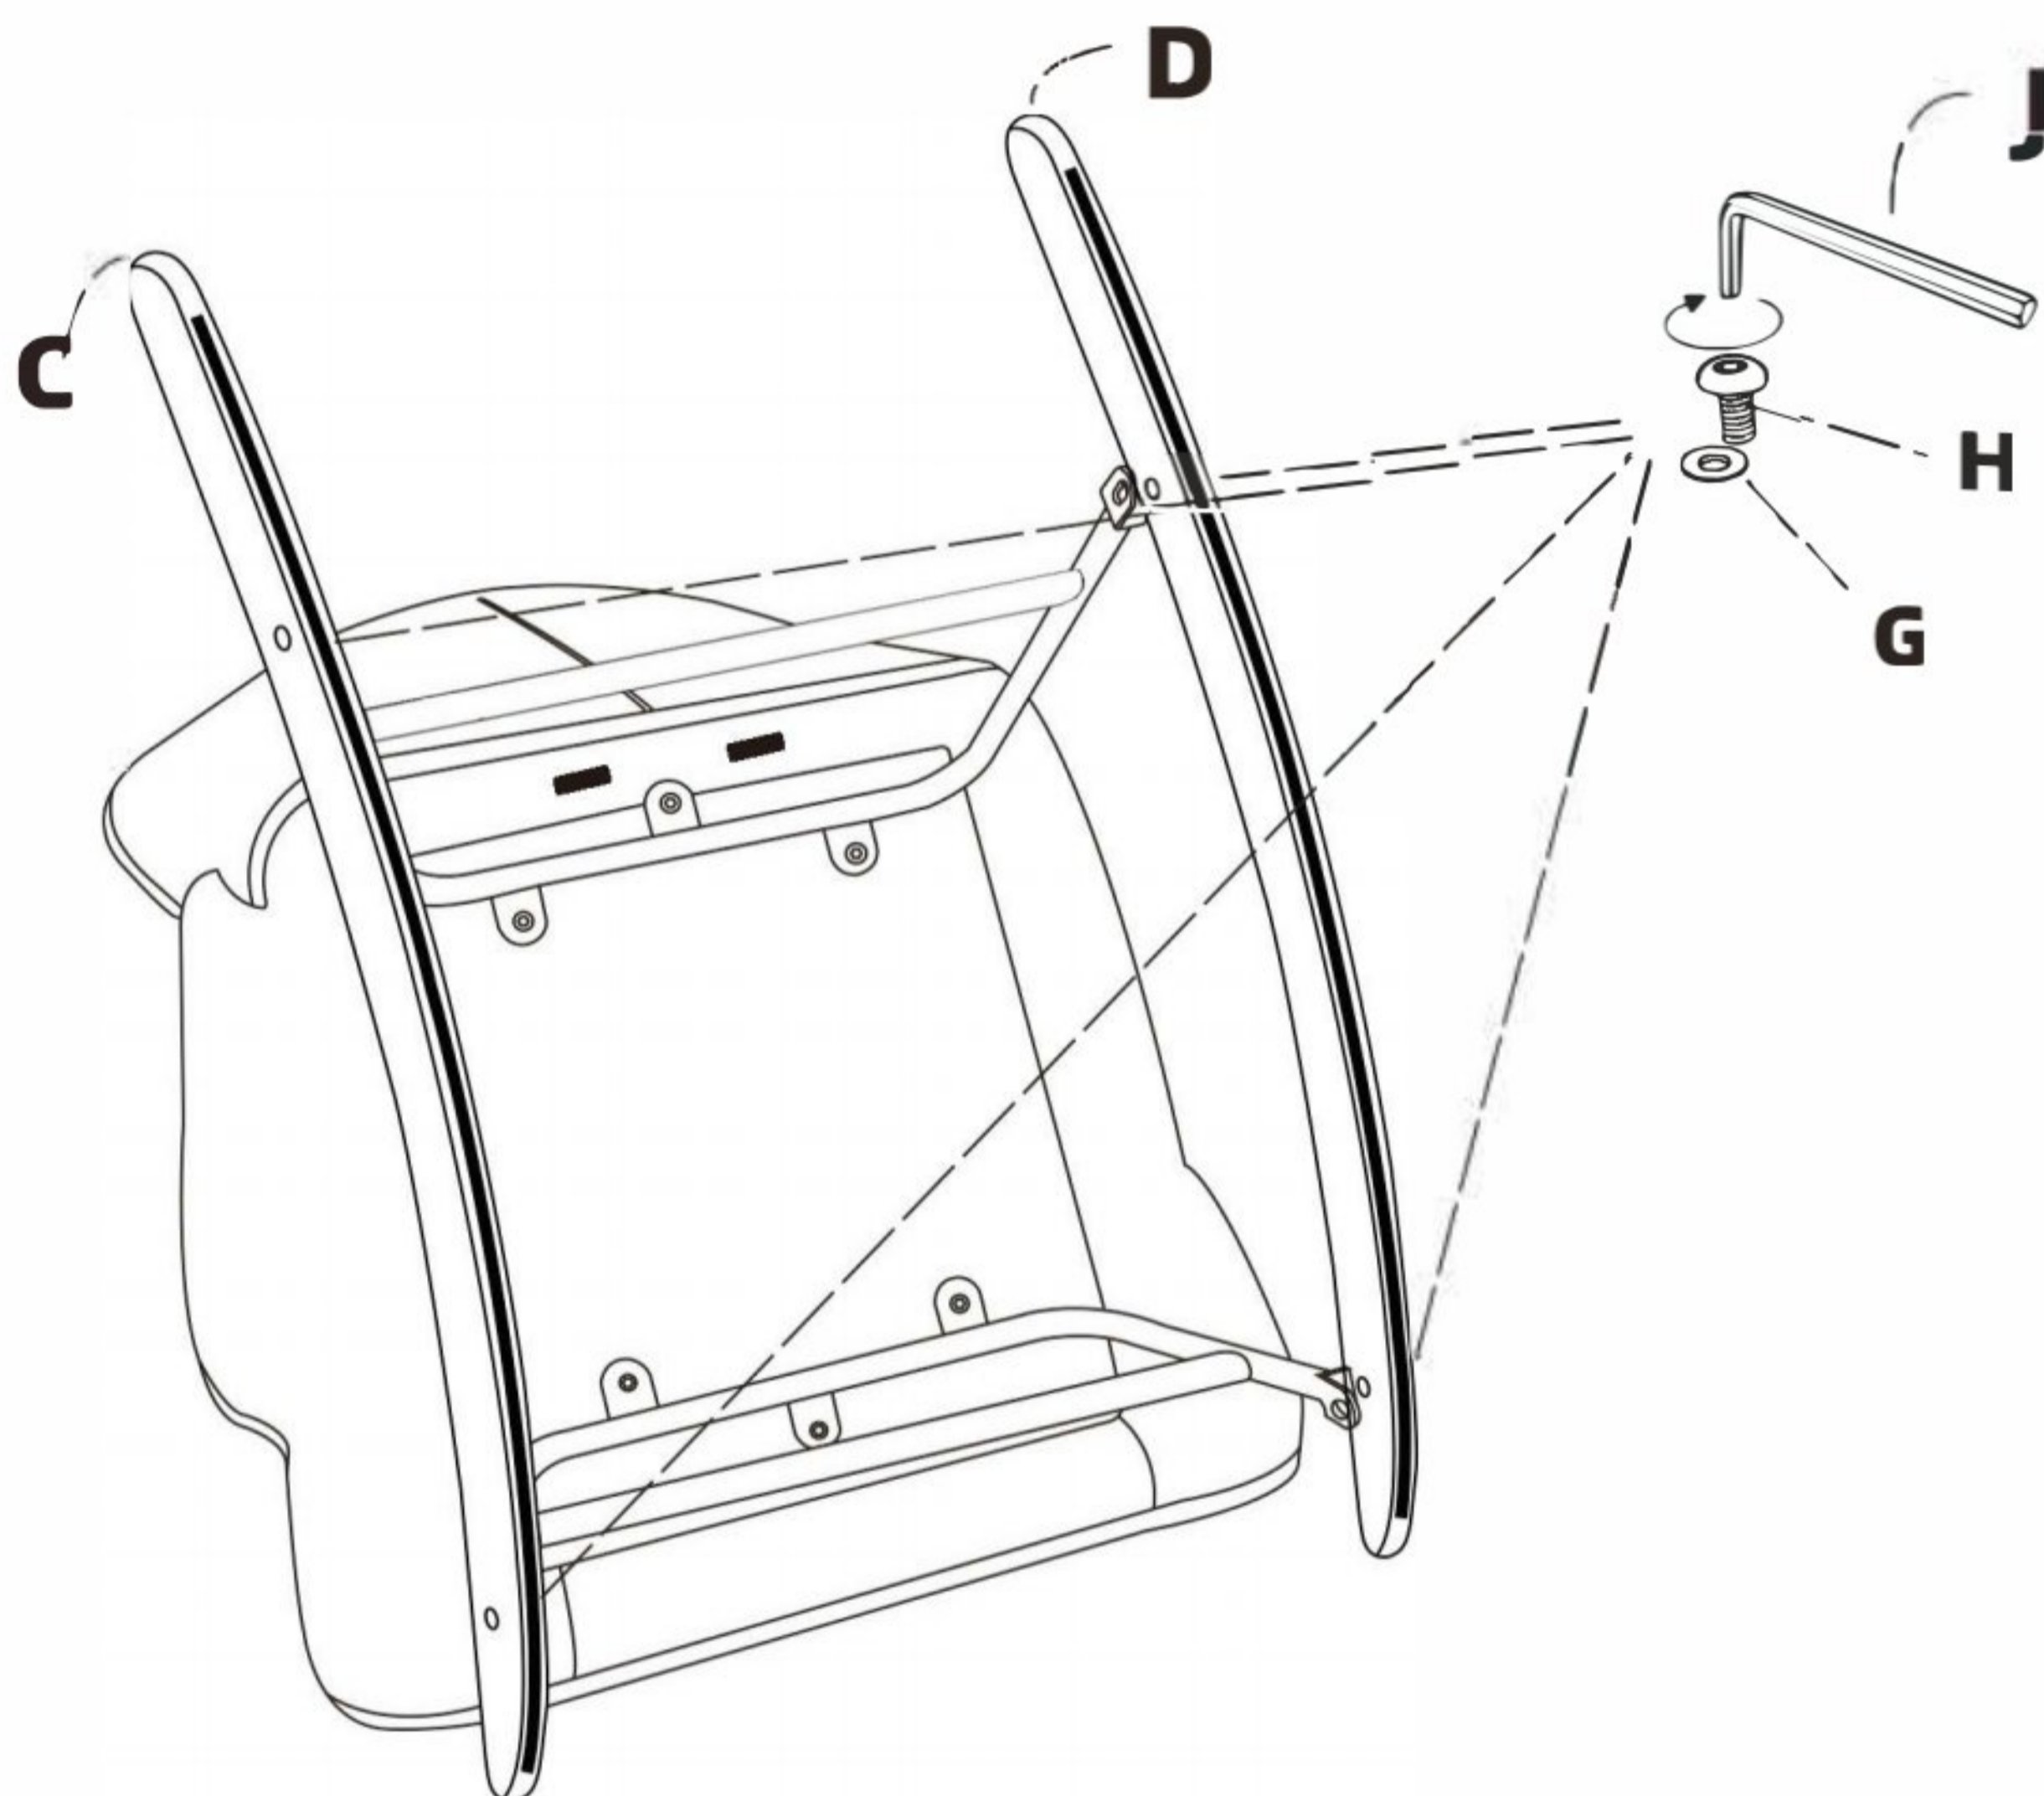

**H**



4 PCS

**G**



4 PCS

**6**

**After assembly, please check that all bolts are tight**

