

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

1. Do not stand on the product.



WARNING



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided
- For use with televisions weighing 88.18lb(40kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.





- Dust and pick-up spills using a clean, non-colored, lint-free cloth.


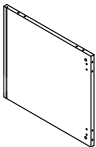

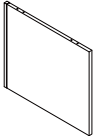
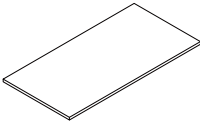
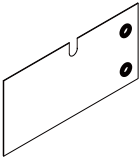
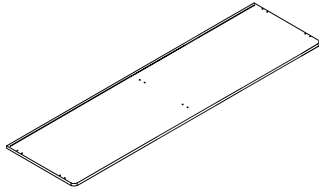

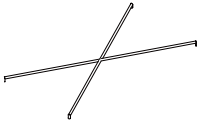
Please look in carton for hardware packs and legs.





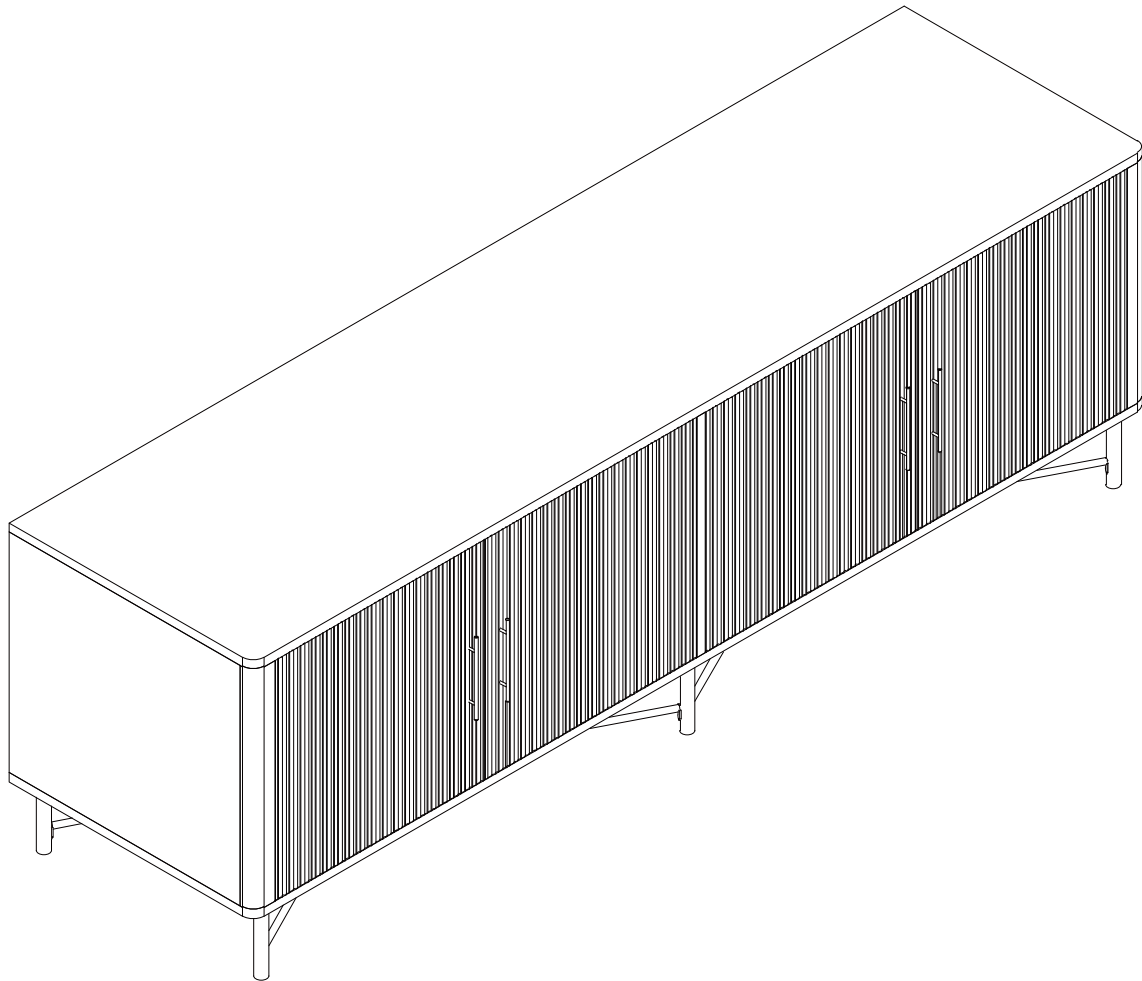



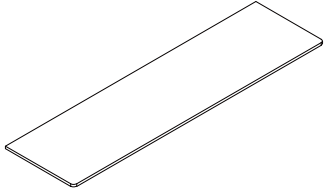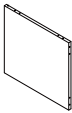








Cabinet

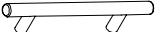

Parts List


Label	Picture	Description	QTY
1		Top Panel	1
2		Left Side Board	1

3		Side Panel Trim	2
4		Right Side Board	1
5		Block	4
6		Bulkhead	1
7		Laminate	2
8		Backplane	2
9		Base Plate	1
10		Door	4
11		Iron Crossbar	2

12		Iron Supporting Foot	2
13		Iron Supporting Foot	1
Hardware			
Label	Picture	Description	QTY
Ⓐ		biasing wheel	10+1
Ⓑ		two-in-one screw	10+1
Ⓒ		dowel	16+2
Ⓓ		4x30mm	8+1
Ⓔ		staple	8+1
Ⓕ		6x30mm	6
Ⓖ		6x10mm	8+1
Ⓗ		4x20mm	8+1
Ⓘ		handle	4
Ⓙ		4x14mm	52+2
Ⓚ		hinge	8
Ⓛ		retainer	2
Ⓜ		anti-tipping kit	2
Ⓞ		4x35mm	6
Ⓝ		gaskets	6

Assembly Preparation

Before
Beginning
Assembly
:

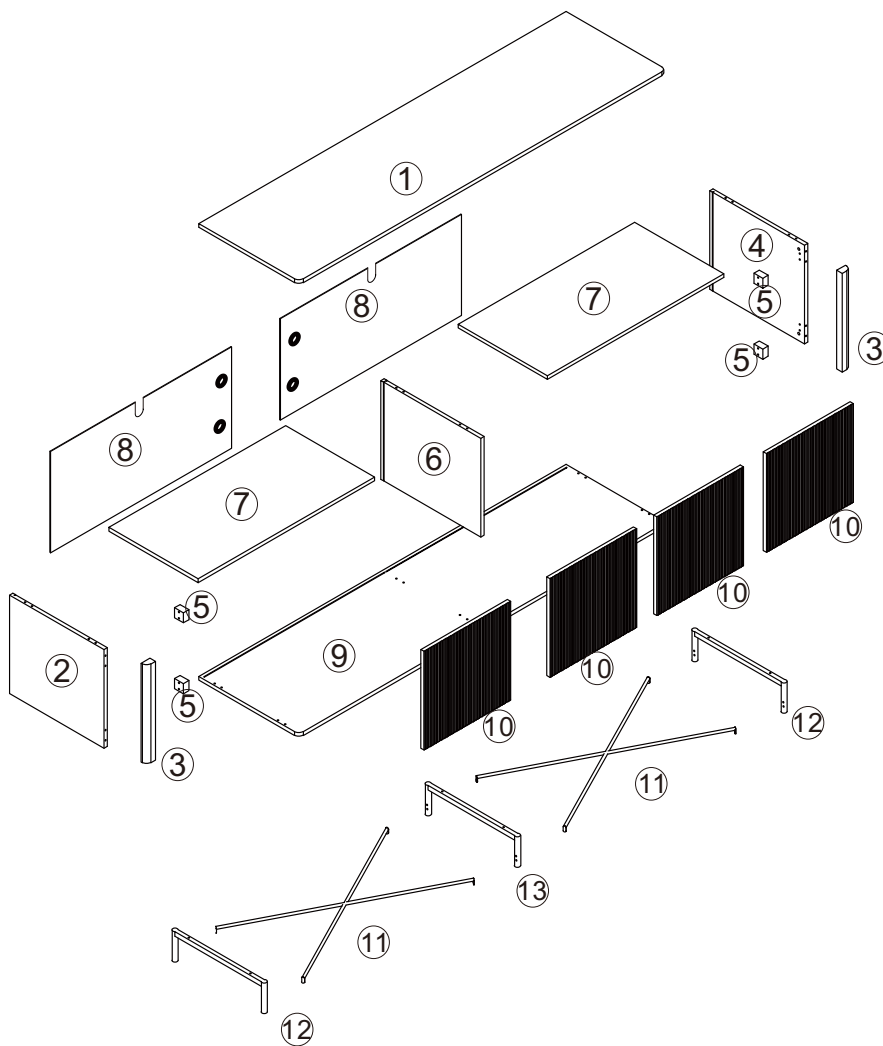

A		x10
B		x10
C		x16
D		x8
E		x8
F		x6
G		x8
H		x8
I		x4
J		x52
K		x8
L		x2
M		x2
N		x6
O		x6



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

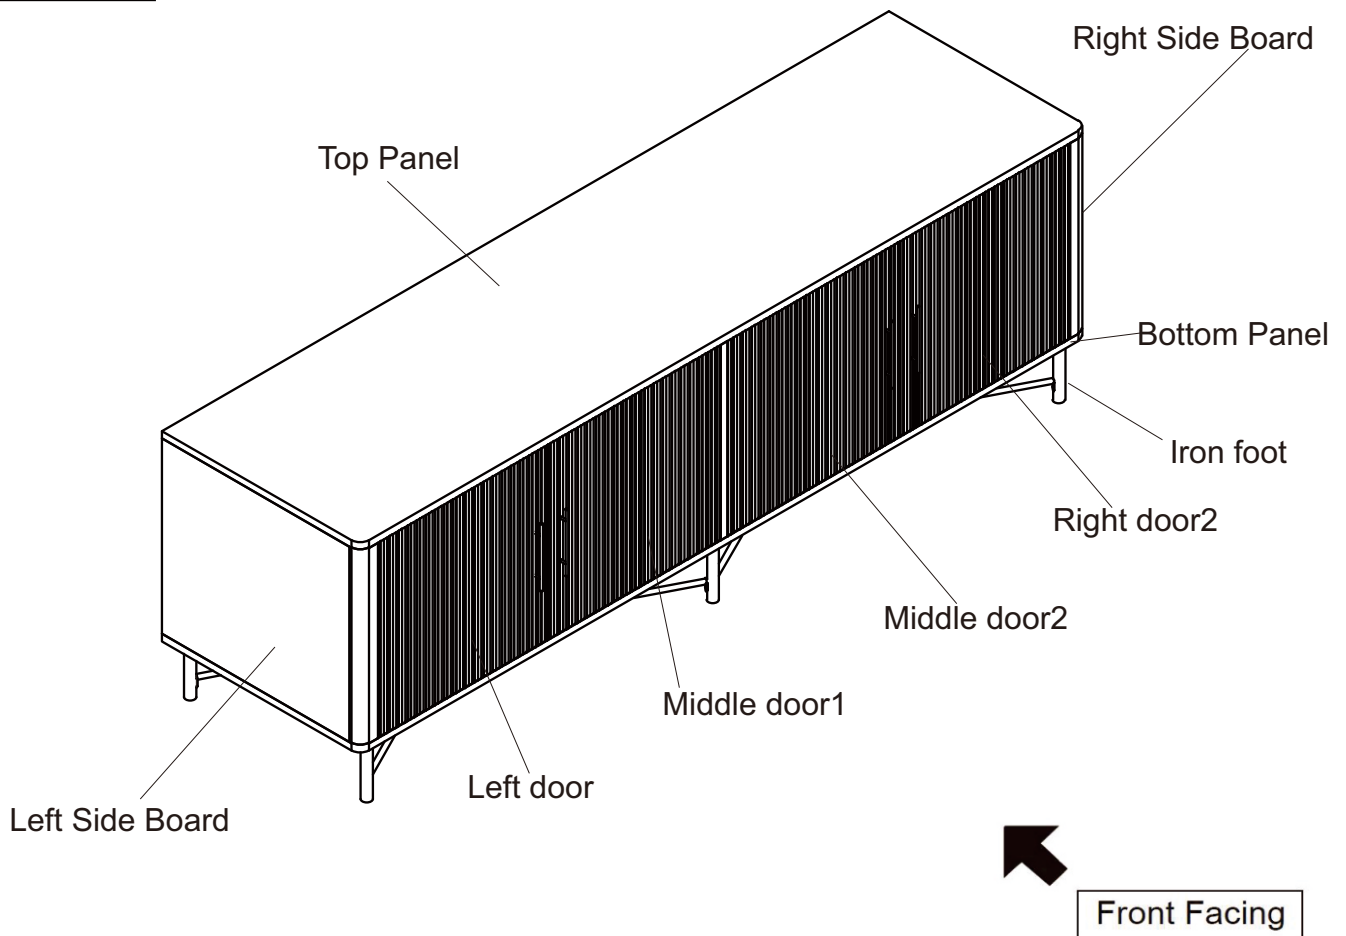




This Cabinet has multiple parts and may require up to 50 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

Ax2
Bx2
Cx2

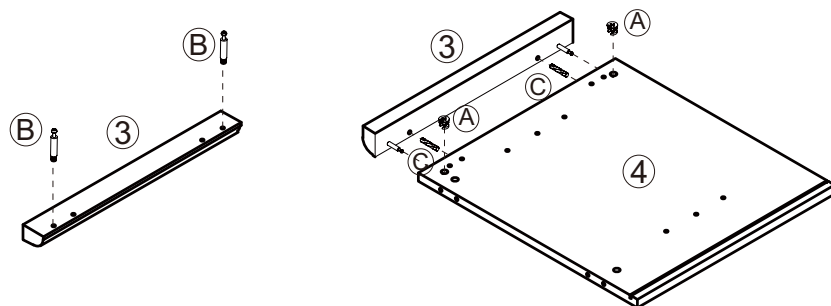


Install hardware B onto panel 3. Connect panel 3 and Panel 4 with hardware A and C.
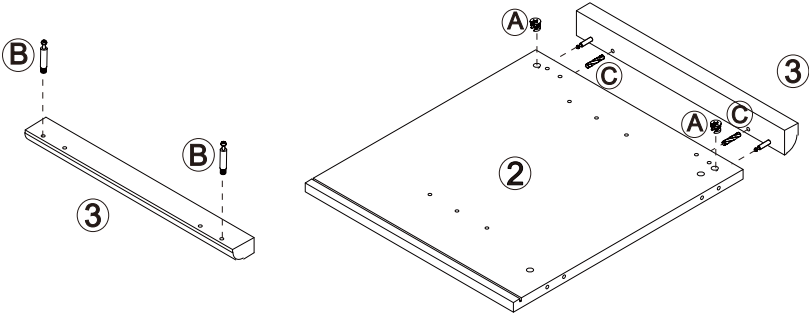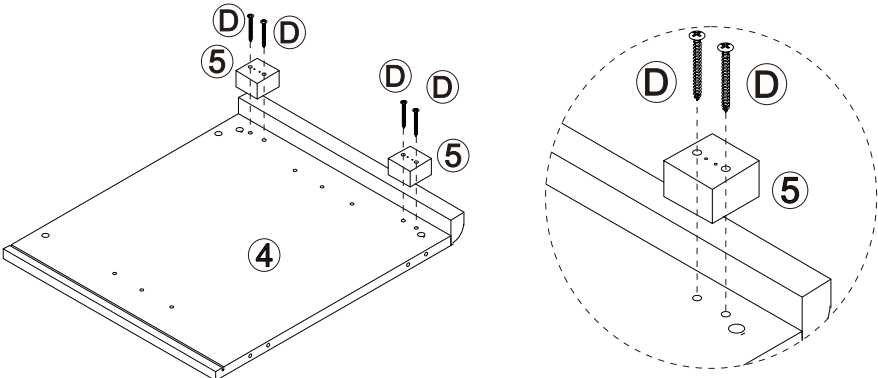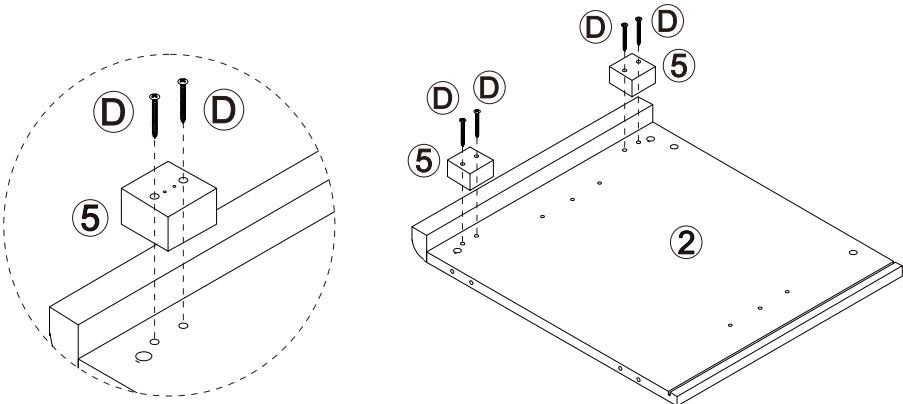
<p><u>Step 2</u></p> <p>Ax2 Bx2 Cx2</p>	
<p>Install hardware B onto panel 3. Connect panel 3 and Panel 2 with hardware A and C.</p>	
<p><u>Step 3</u></p> <p>Dx4</p>	
<p>Connect plate 5 and plate 4 with hardware D</p>	
<p><u>Step 4</u></p> <p>Dx4</p>	
<p>Connect plate 5 and plate 2 with hardware D</p>	


Step 5

Cx6
Ox6

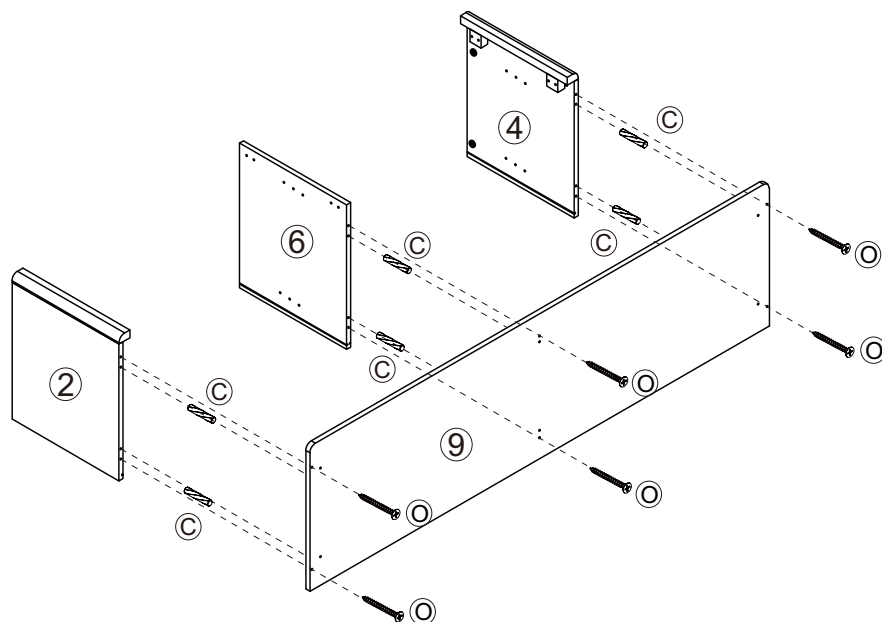

Connect Panel 2, Panel 4 and panel 6 to Panel 9 with hardware C and hardware O.


Step 6

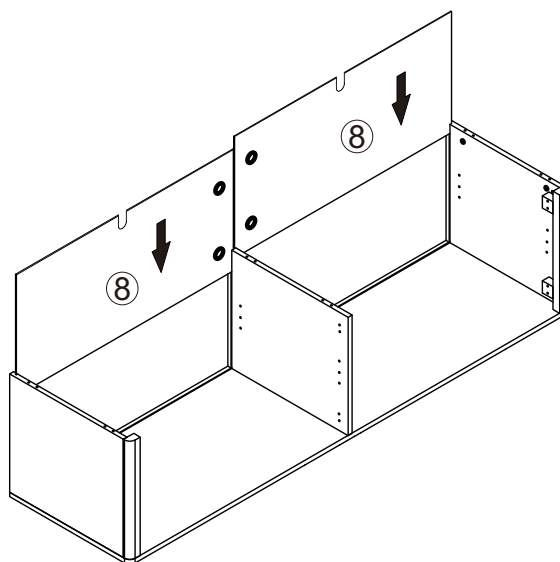

Flip the product from step 5 to the right as shown in the figure.
Insert the backing plate 8 through the slot

Step 7


Bx6
Jx4
Lx2
Mx2

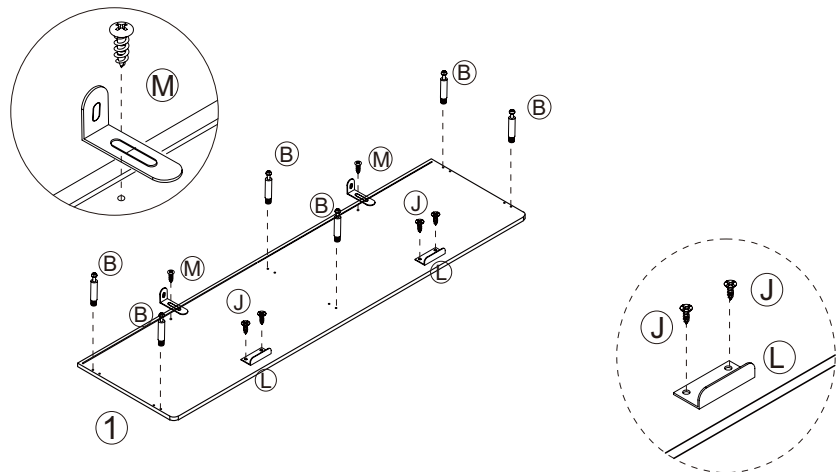

Lock hardware B to plate 1. Fix the anti-toppling M to the panel 1.
Secure the hardware L to the top of the plate 1 with screws J.

Step 8


Ax6
Cx6

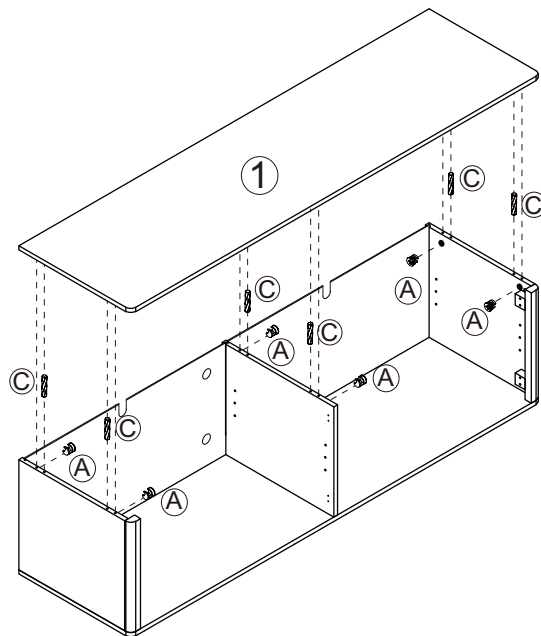

Connect the top plate 1 to the panels 2,4,6 with hardware A and dowels C.

Step 9


Fx6
Nx6

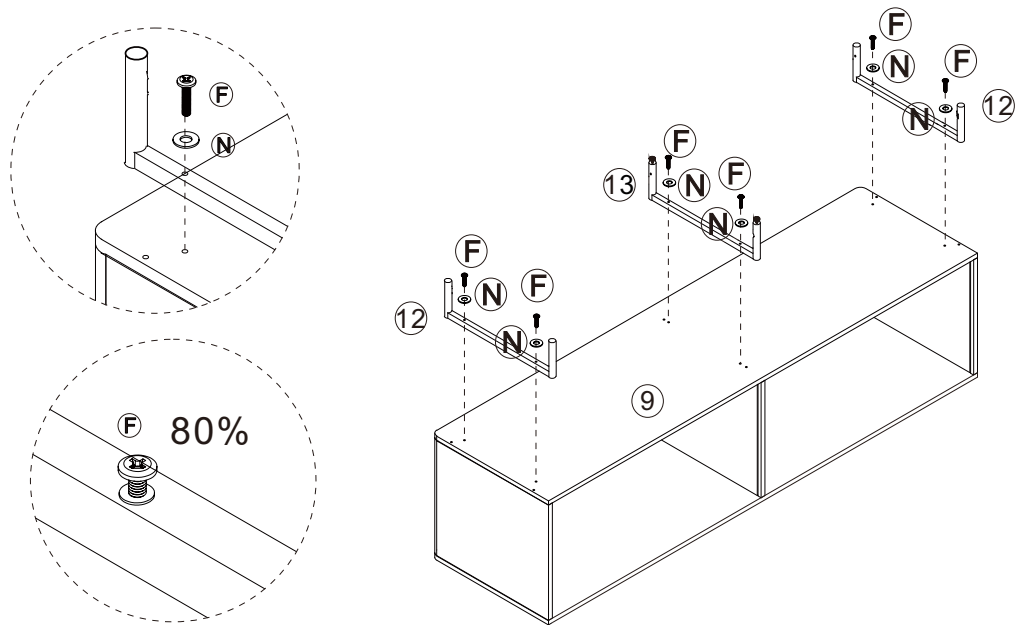

Flip the cabinet from step 8 so that the bottom is facing up as shown. Attach the assembled iron feet to the base plate 9 with hardware F/N. Screw F locks 80% first, not all the way.

Step 10

Gx8

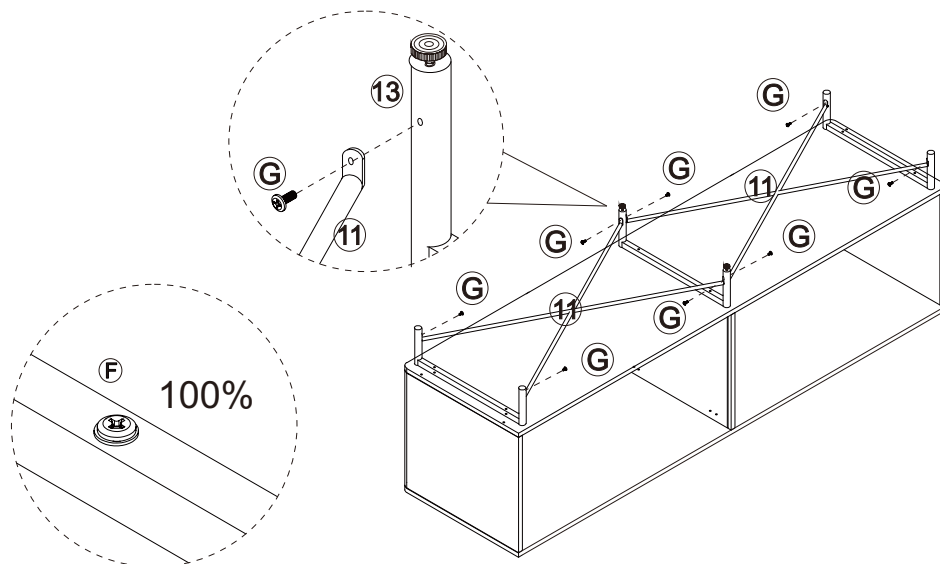


Connect iron 12 and iron 13 to iron 11 with hardware G. Tighten screws G all the way and finally lock screws F.

Step 11

x4


Hx8
Ix4
Jx16
Kx8

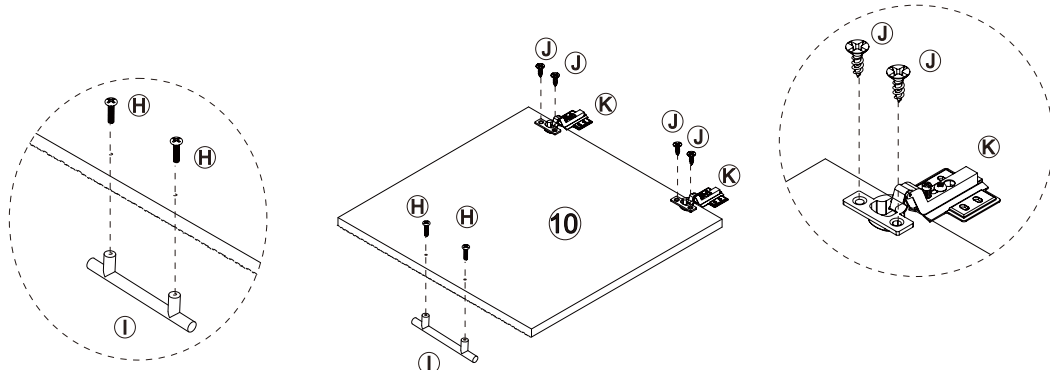

Attach pull handle I to door 10 with screw H. Attach hinge K to door 10 with screws J.
Repeat four times.


Step 12

Ex8

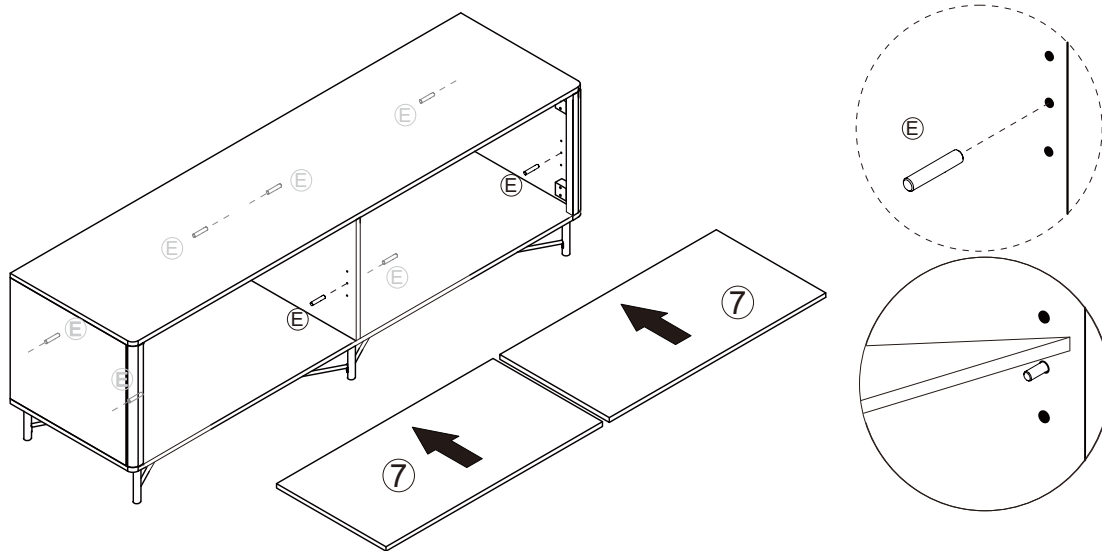

Hardware E inserted in the hole. Put laminate 7 in.


Step 13

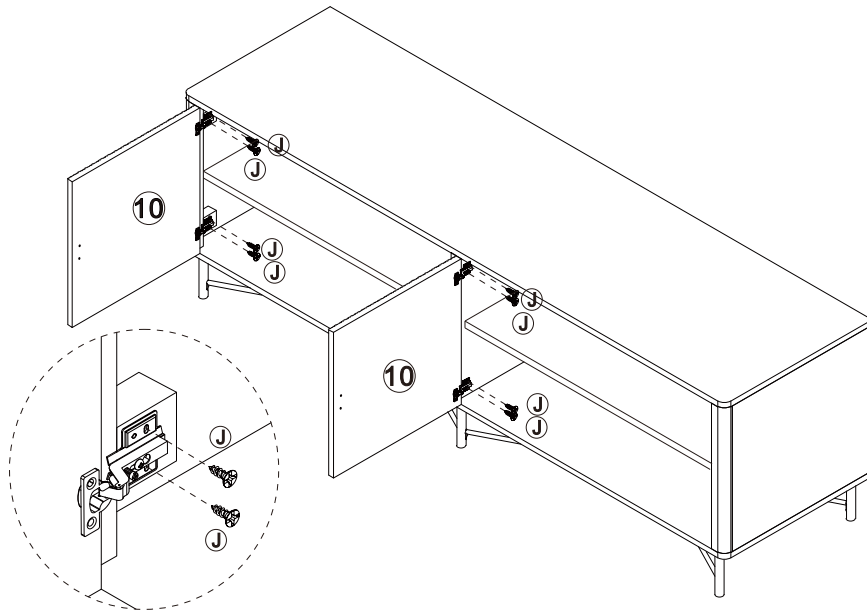

Jx8

Secure the door with screw J.


Step 14

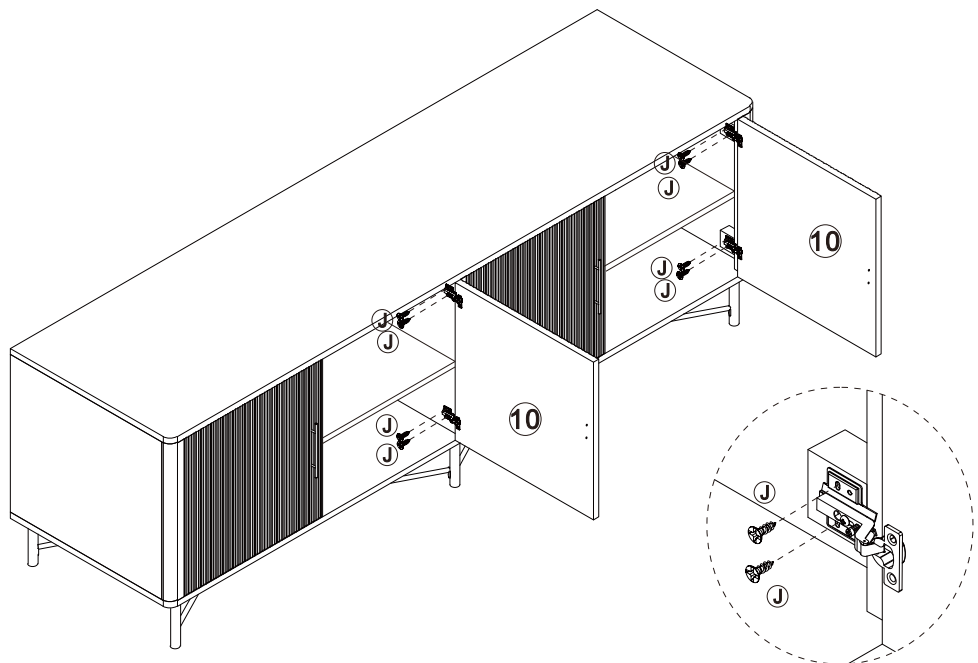

Jx8

Secure the door with screw J.

Step 15

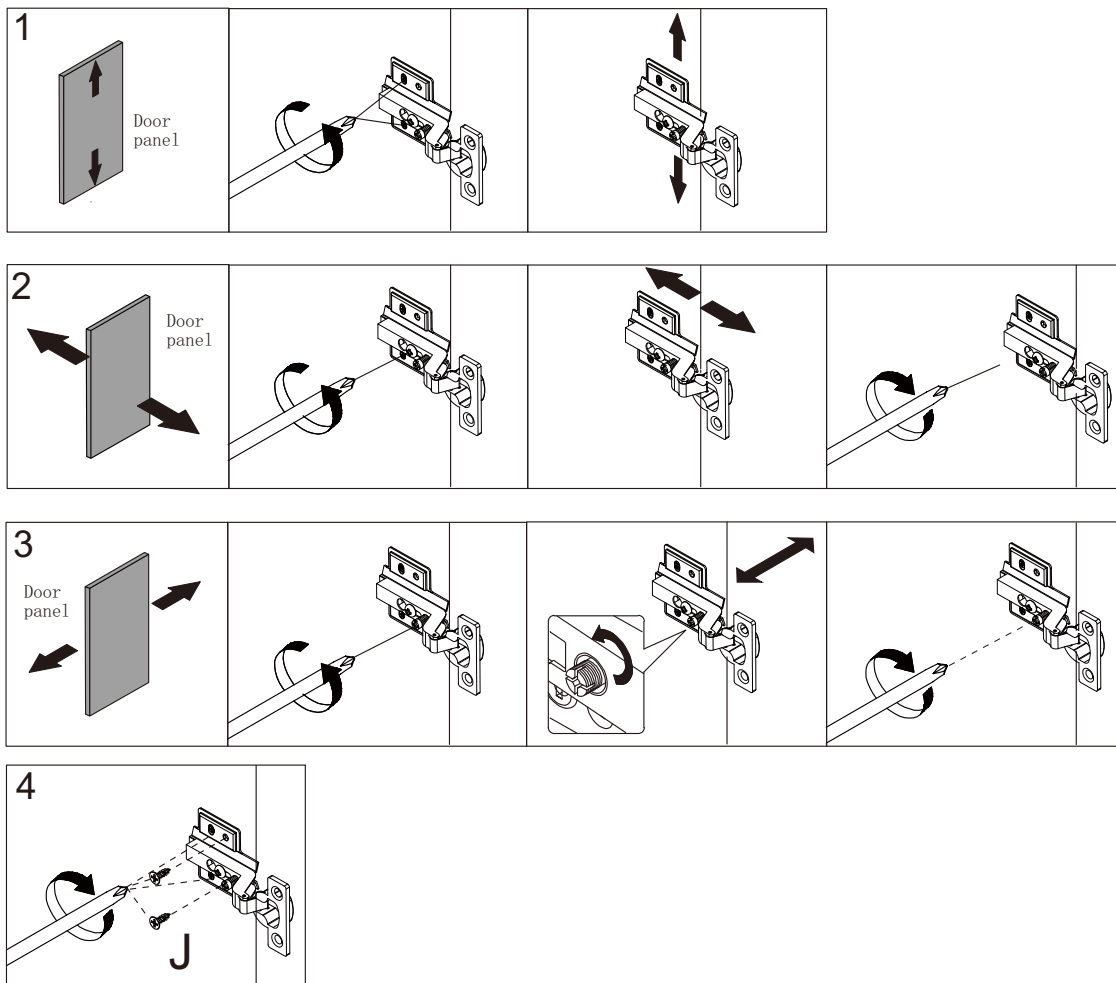


Jx16

If the door panel is not sitting at a right position or angle, follow the steps below to improve.

- (1) Loose the hinge, adjust the door panel position (up and down), then fasten the screws to secure the hinge (Step 1)
- (2) Loose the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to sucre the hinge (Step 2)
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.
- (4) After all adjustments are completed, tighten the remaining screws.


Step 16

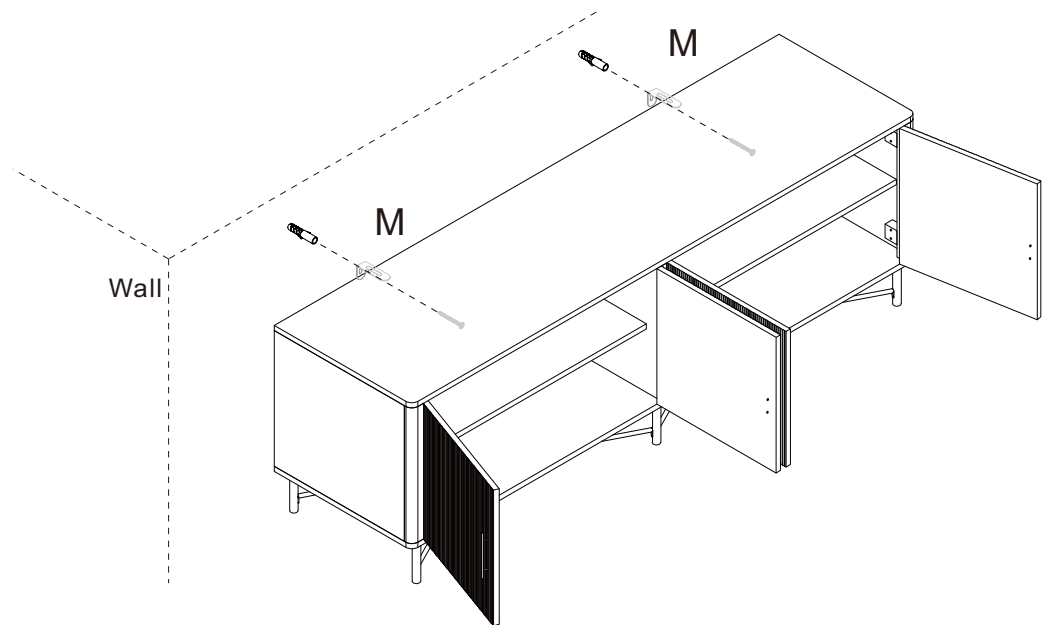

Mx2

Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over. Mark the drill position on the wall with a pencil. Drill holes on the marked position using a bit. Gently insert the wall anchor (M) into the drilled hole with the help of a hammer. Fixed the cabinet to the wall with provided screws (M)

Step 17

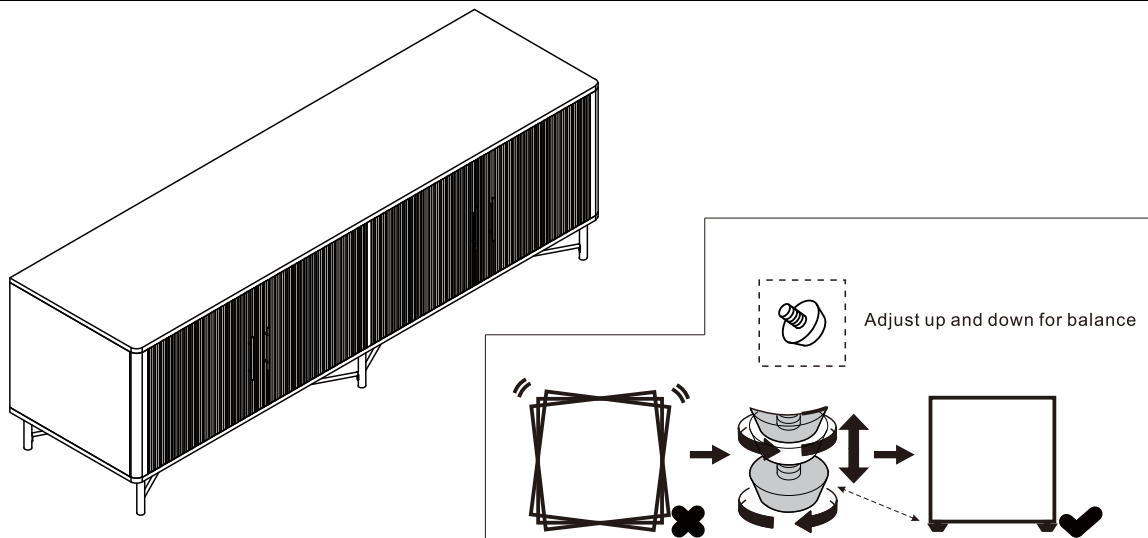

This four-door cabinet is already installed.
This four-door cabinet only be used on a flatnd level surface.