
















Sideboard

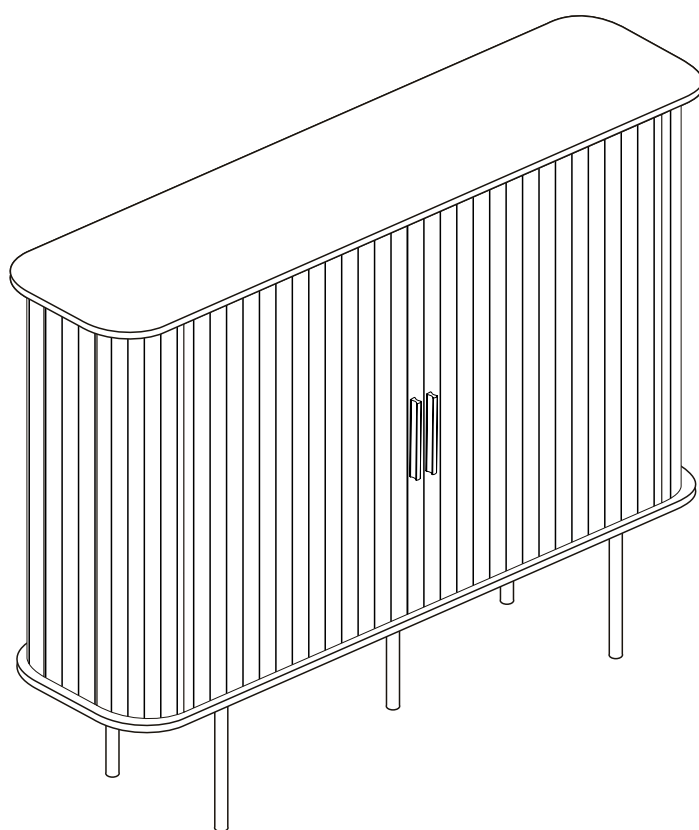


ASSEMBLY INSTRUCTION

HARDWARE LIST

 A x10 M6x35	 B x14 M15x9.5	 C x16 M6x30	 D x 6 M7x50	 E x 2 9x16x105	 F x 4 M4x10
 G x 1 57x20x4	 H x20 M4x12	 I x 8 9.5x13.5x15	 J x 8 M3x16	 K x 2 M5x71	 L x 2 M6x50
 M x 2 M4x12	 N x 2 M4x35				



PARTS LIST

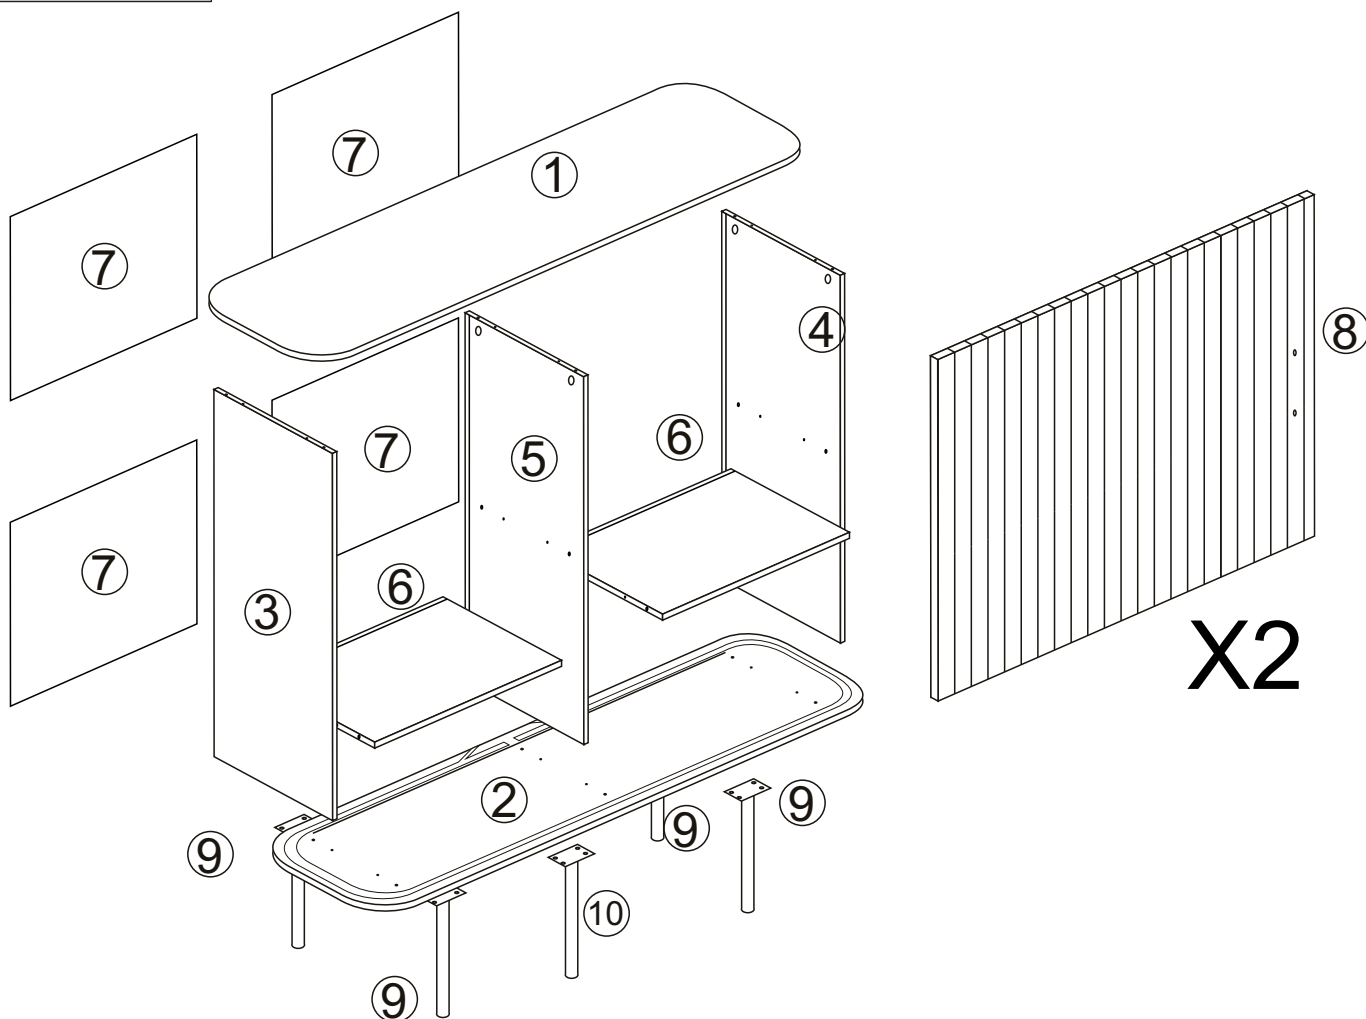

ASSEMBLY STEPS




STEP 1.

Insert quickfit screws (A) into part 1, as shown.

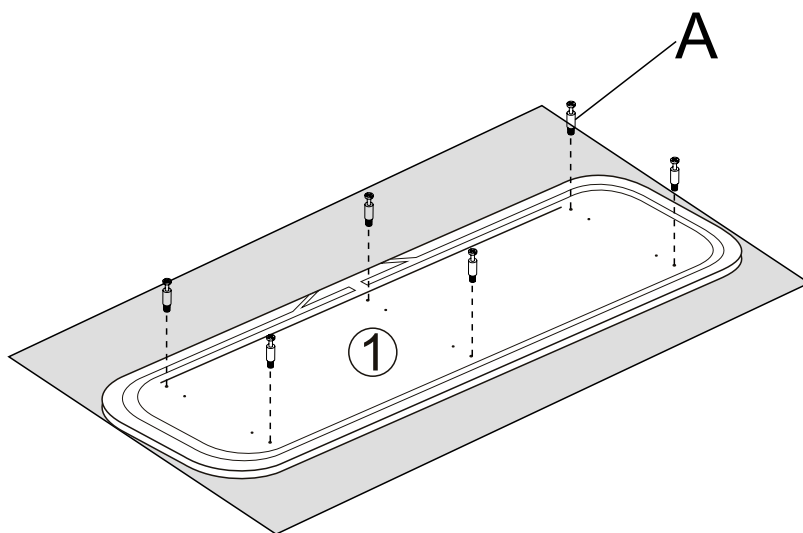

STEP 2.


Insert quickfit screws (K) and long wooden dowels (L) into part 5, as shown.
Insert cam locks (B) into parts 6.
Fit parts 6 to part 5.
Turn cam locks clockwise to tighten.

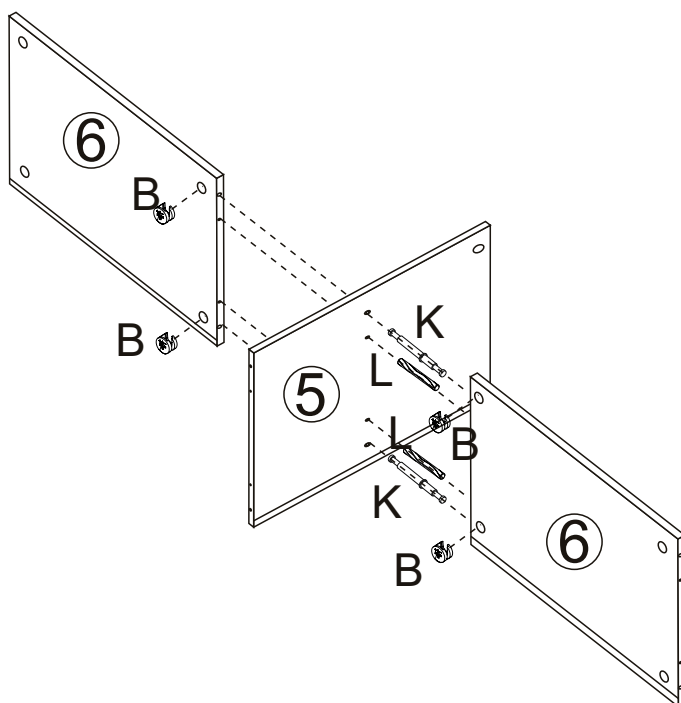

ASSEMBLY STEPS

STEP 3.

Insert quickfit screws (A) into parts 3 and 4, as shown.
 Insert cam locks (B) and wooden dowels (C) into parts 6, as shown.
 Fit parts 3 and 4 to parts 6.
 Turn cam locks clockwise to tighten.

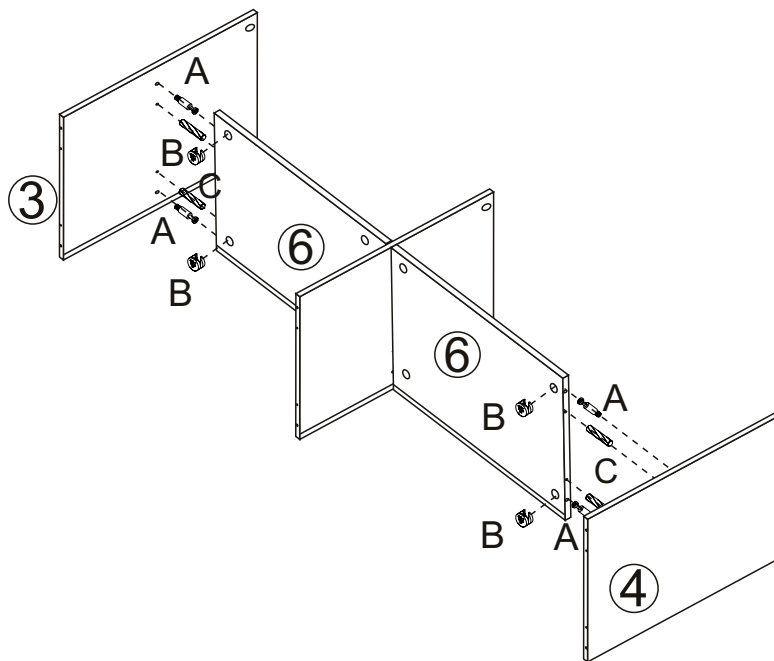

Ax4




Bx4



Cx4

STEP 4.

Insert parts 7 into grooves into between parts 3, 4 and 5, as shown.
 Insert wooden dowels (C) into part 1, as shown.
 Insert cam locks (B) into parts 3, 4 and 5, as shown.
 Fit parts 3, 4 and 5 to part 1.
 Turn cam locks clockwise to tighten.

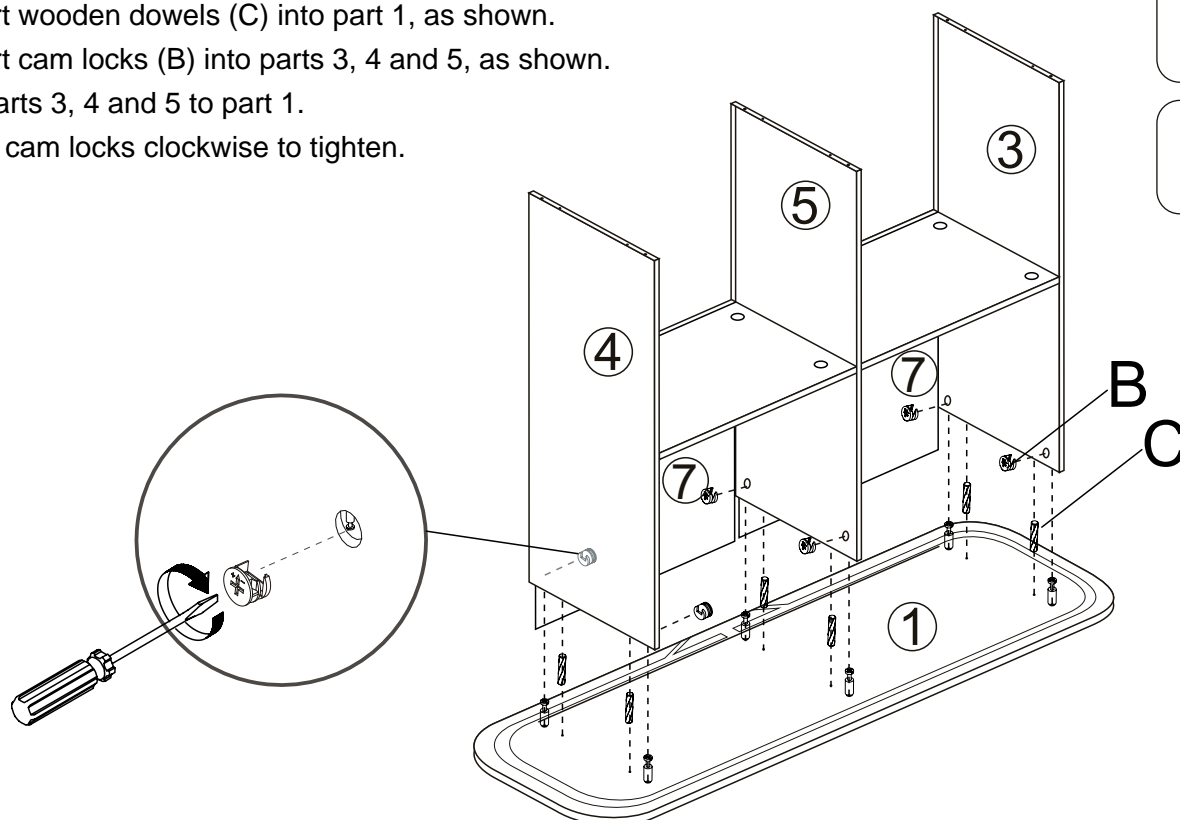

Bx6



Cx6




ASSEMBLY STEPS

STEP 5.

Insert parts 7 into grooves between parts 3, 4 and 5, as shown.



Insert wooden dowels (C) into parts 3, 4 and 5, as shown.

Fix part 2 to parts 3, 4 and 5 with screws (D) and allen key (G), as shown.

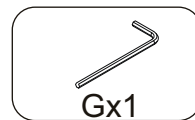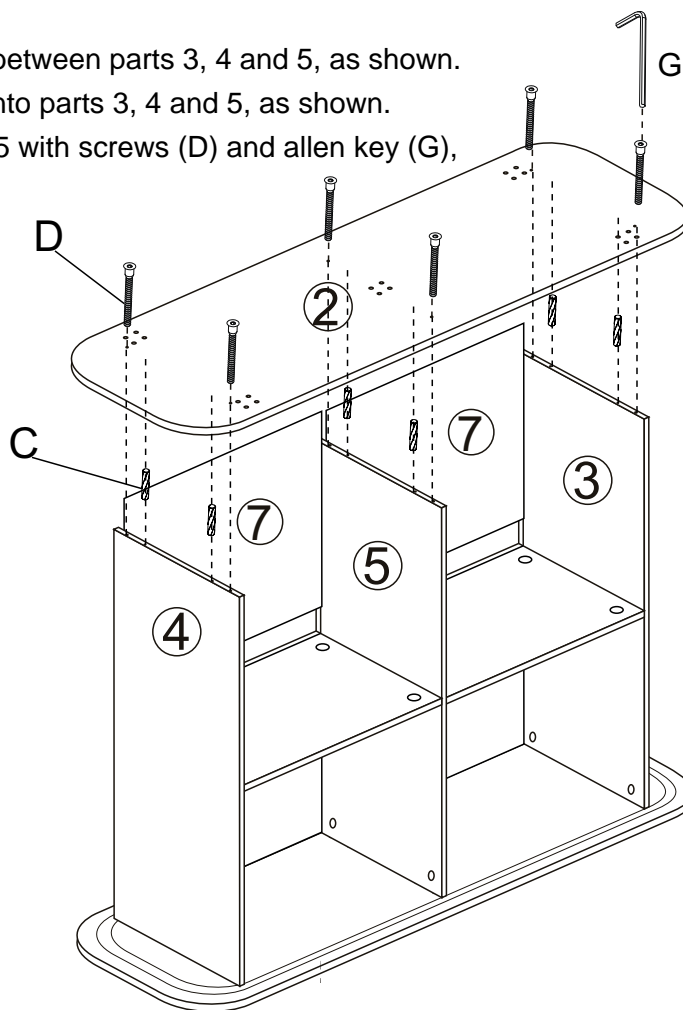

STEP 6.




Fix legs 9, 10 to part 2 using screws (H), as shown.

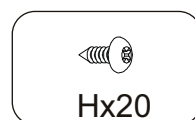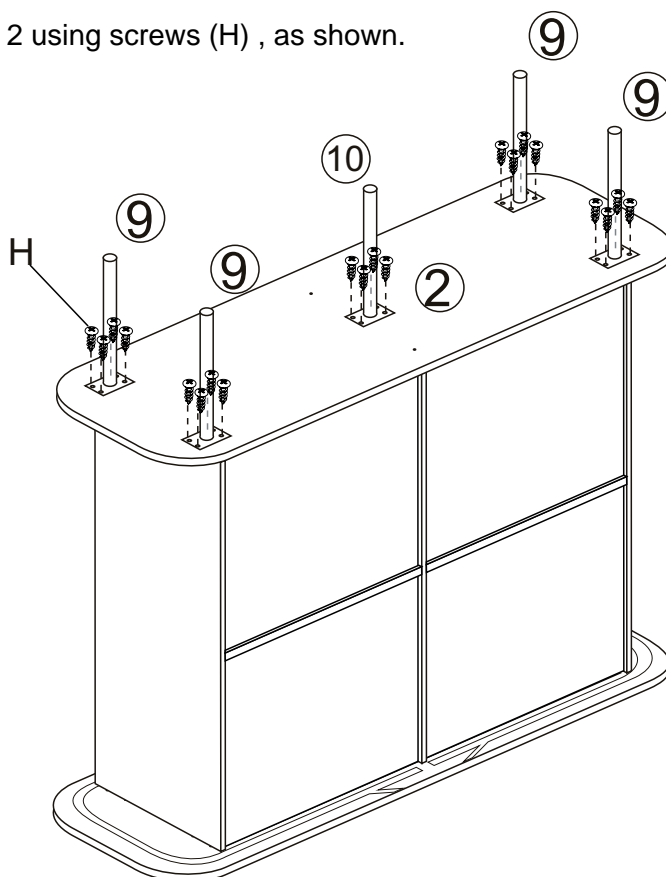

ASSEMBLY STEPS



STEP 7.

Fix wall straps (M-1) to part 1 using washers (M-2) and screws (M-3), as shown.
Secure backing panel 7 by fixing wedges (I) using screws (J), as shown.

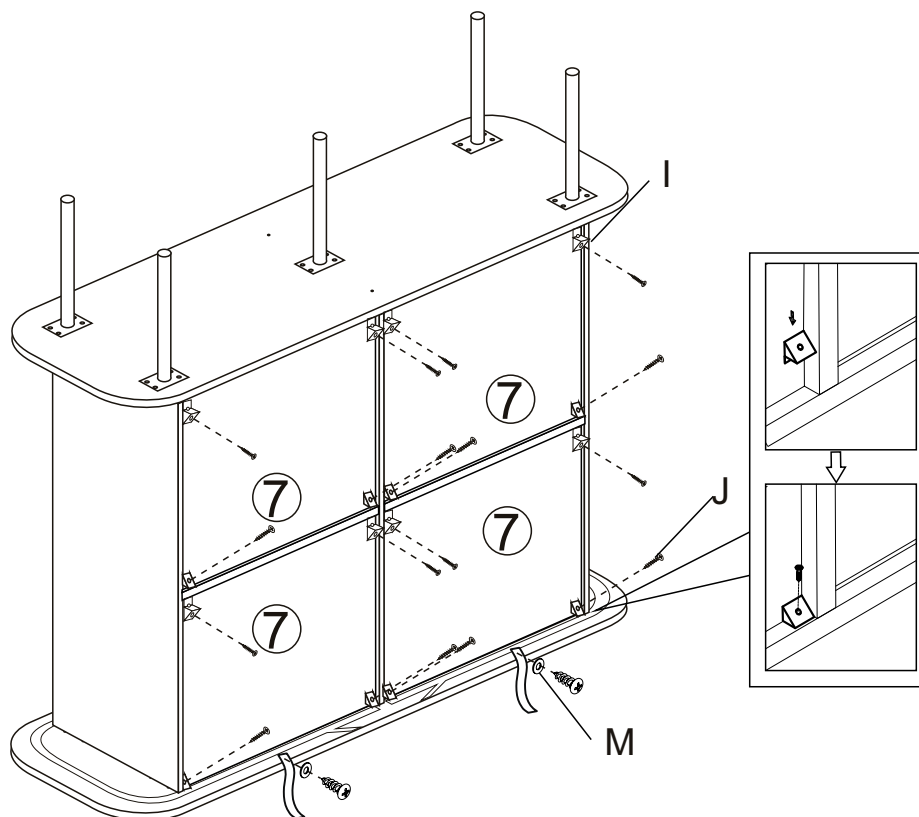

STEP 8.


Fix handles (E) to doors 8 using screws (F), as shown.

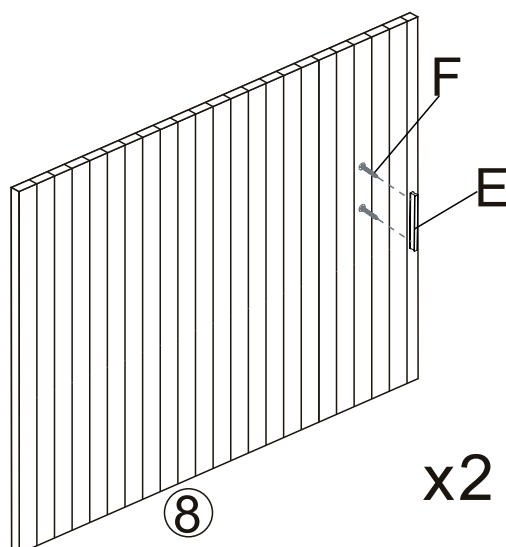

ASSEMBLY STEPS

STEP 9.

Insert doors 8 into grooves between top and bottom from back, as shown.

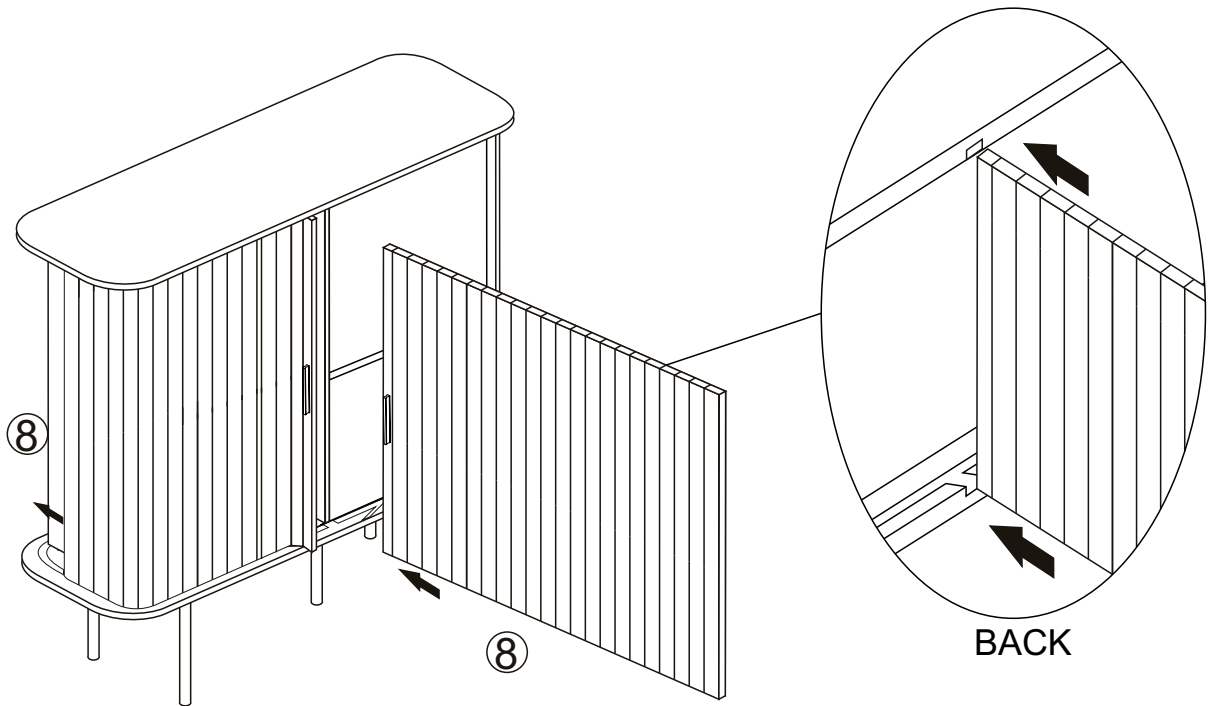

STEP 10.

For extra stability, it is recommended that you fix your cabinet to the wall using hardware (N-1, N-2 and N-3), as shown.

Screws (N-1) are fixed through washers (N-2) and wall straps and into the wall plugs (N-3).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over

