


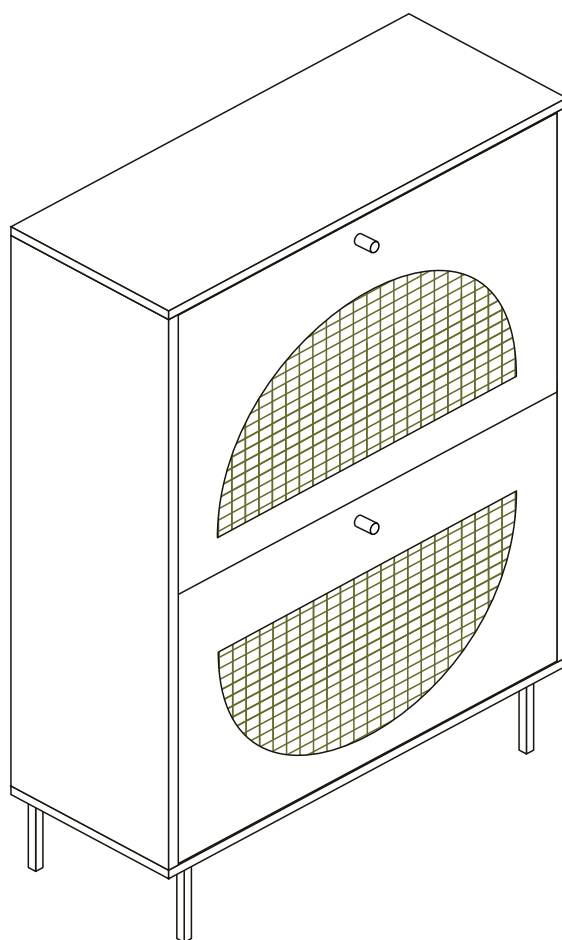
















Shoe cabinet





ASSEMBLY INSTRUCTION

HARDWARE LIST

 Ax8	 Bx8	 Cx8	 Dx4	 Ex2	 Fx4	 Gx4	 Hx24
 Ix4	 Lx2	 Rx2	 Jx18	 Kx4	 Mx4	 Nx2	 Ox2
 Px8							


PARTS LIST

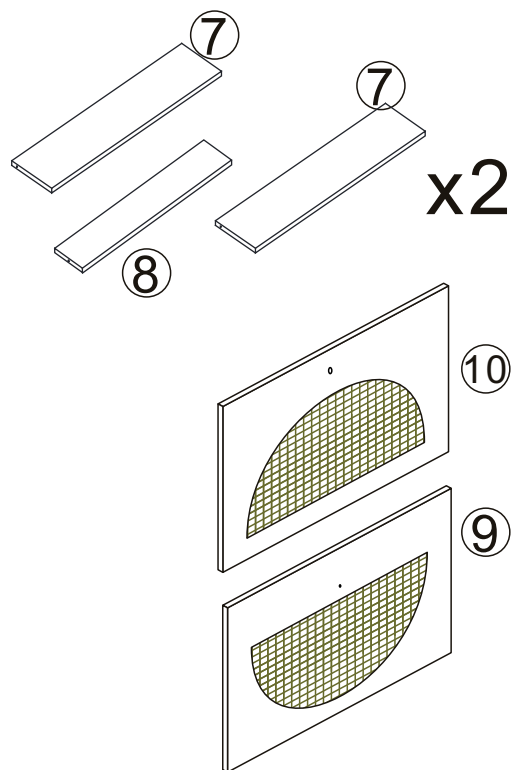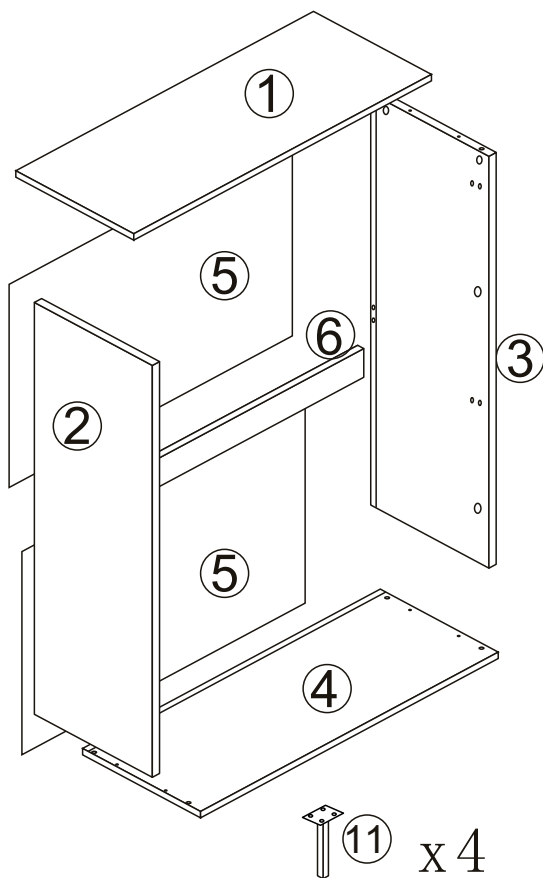

ASSEMBLY STEPS

STEP 1.

Insert door stoppers (F) and hinge sockets (I) to parts 2 and 3, as shown.

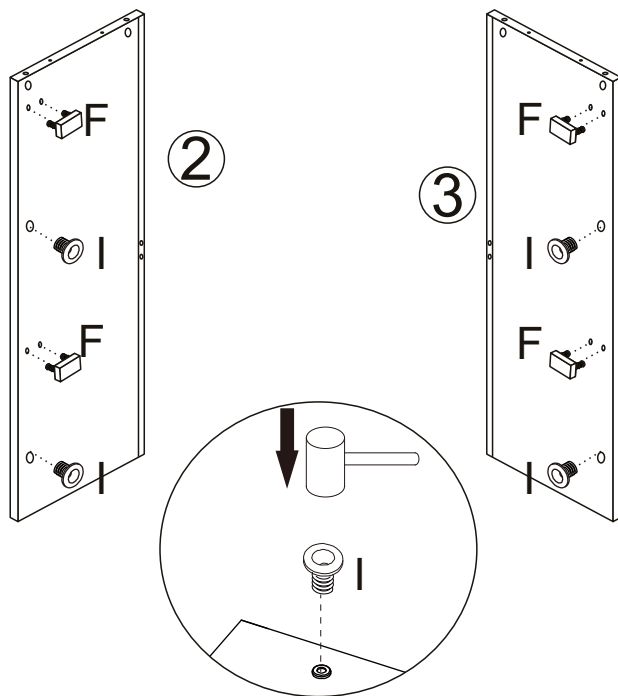

Fx4



Ix4


STEP 2.

Insert quickfit screws (A) to parts 2 and 3, as shown.

Insert cam locks (B) into part 6, as shown.

Fit parts 2 and 3 to part 6.

Turn cam locks clockwise to tighten.

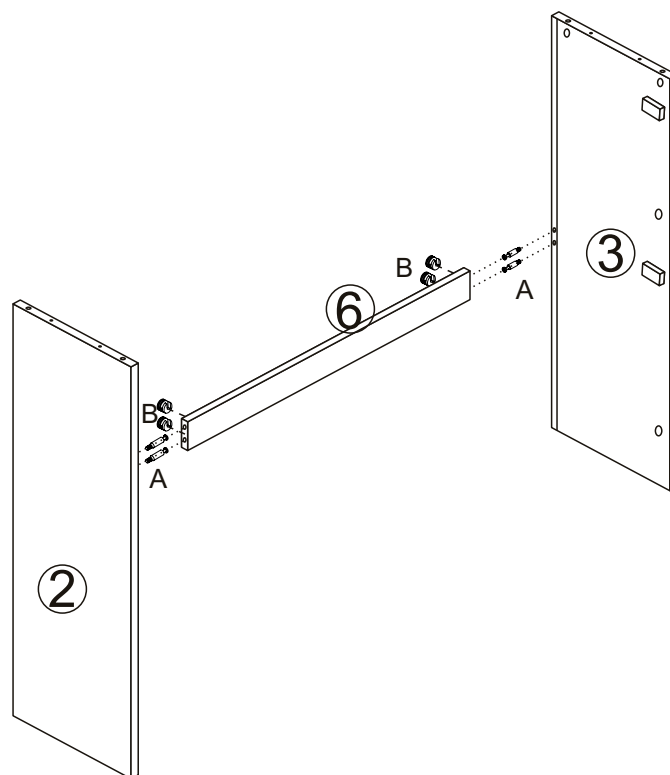

Ax4




Bx4

ASSEMBLY STEPS

STEP 3.

Slide part 5 into grooves between parts 2, 3 and 6, as shown.

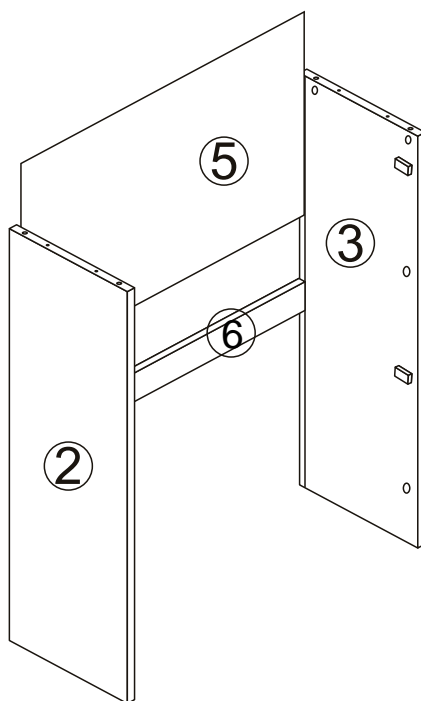



STEP 4.

Insert quickfit screws (A) to part 1, as shown.

Insert cam locks (B) and wooden dowels (C) into parts 2 and 3.

Fit part 1 to parts 2, 3 and 5, as shown.

Turn cam locks clockwise to tighten.

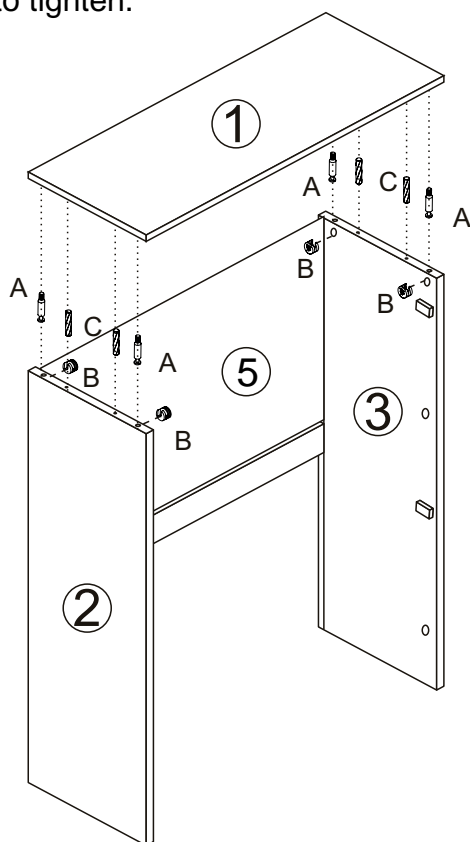

Ax4



Bx4




Cx4

ASSEMBLY STEPS



STEP 5.

Slide part 5 into grooves between parts 2, 3 and 6, as shown.

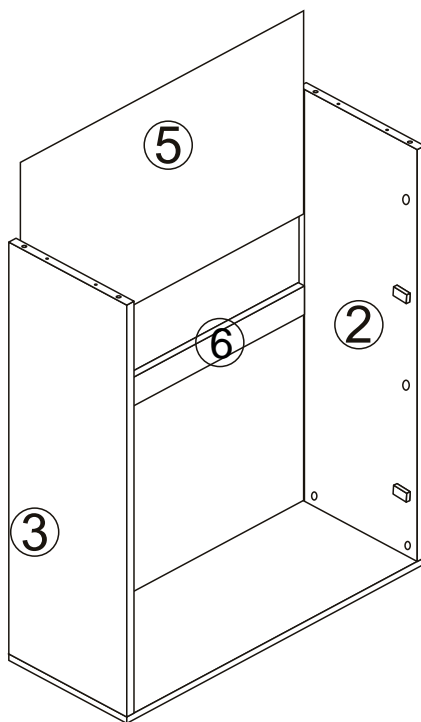

STEP 6.



Insert wooden dowels (C) into parts 2 and 3, as shown.
Fix part 4 to parts 2 and 3 with wooden dowels and screws (D), as shown.

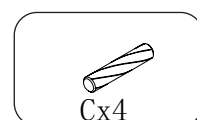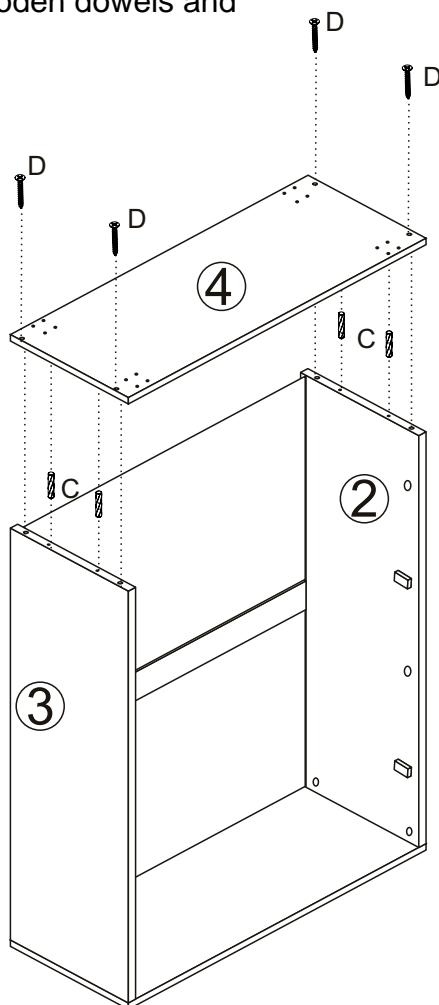

ASSEMBLY STEPS



STEP 7.

Fix parts 11 to part 4 using screws (J), as shown.

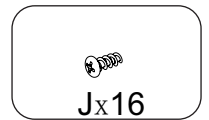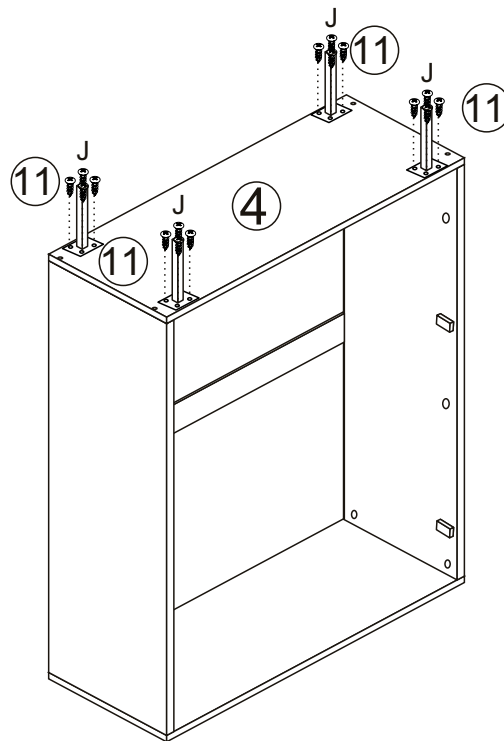

STEP 8.


Fix handles (E-1) to doors 9 and 10 using screws (E-2), as shown.

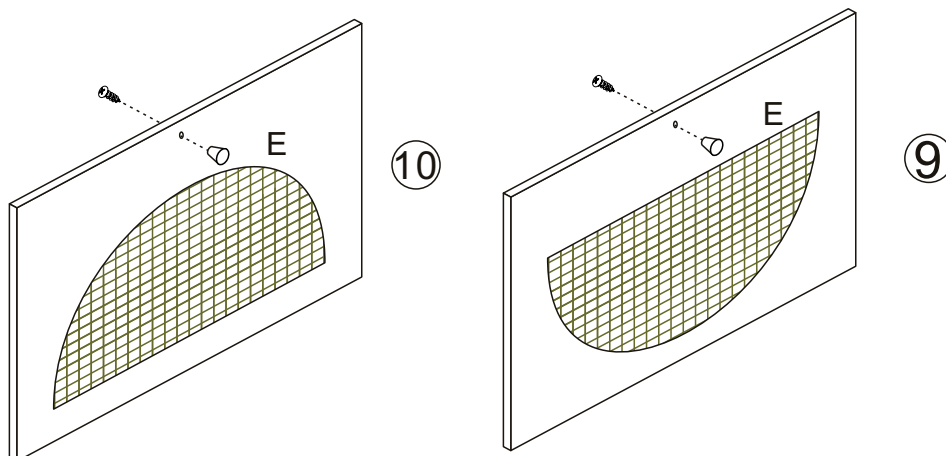

ASSEMBLY STEPS

STEP 9.

Fix side hinges (L) and (R) to parts 9 and 10 using screws (H), as shown.

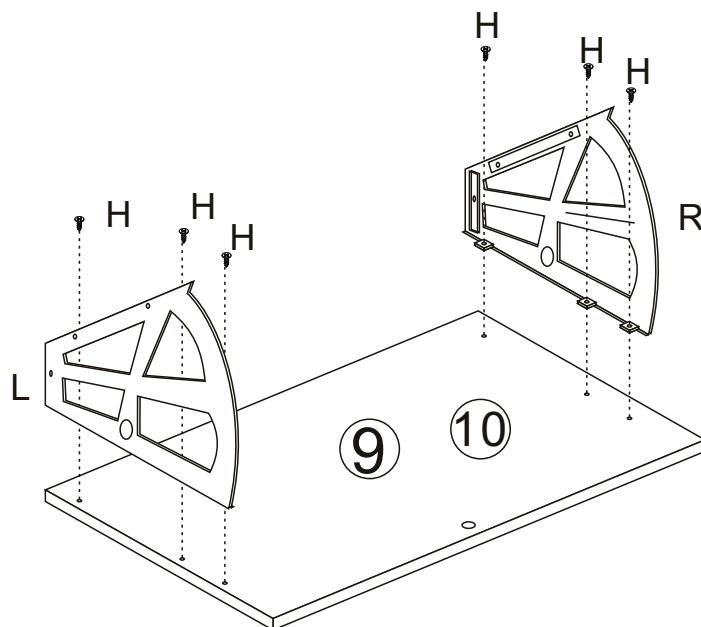

L x2



R x2



H x12



STEP 10.

Insert parts 8 into grooves of parts (L) and (R), as shown.

Fix parts 7 to side hinges using screws (H), as shown.



H x8

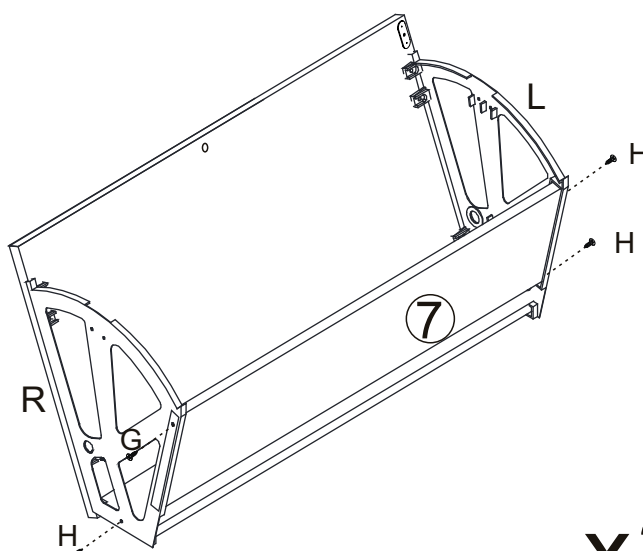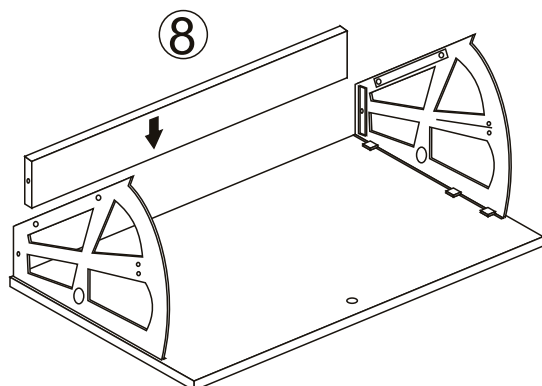

x2

ASSEMBLY STEPS

STEP 11.


Fix assembled doors to assembled unit using hinge pins (G) and screws (K), as shown.



Kx4



Gx4

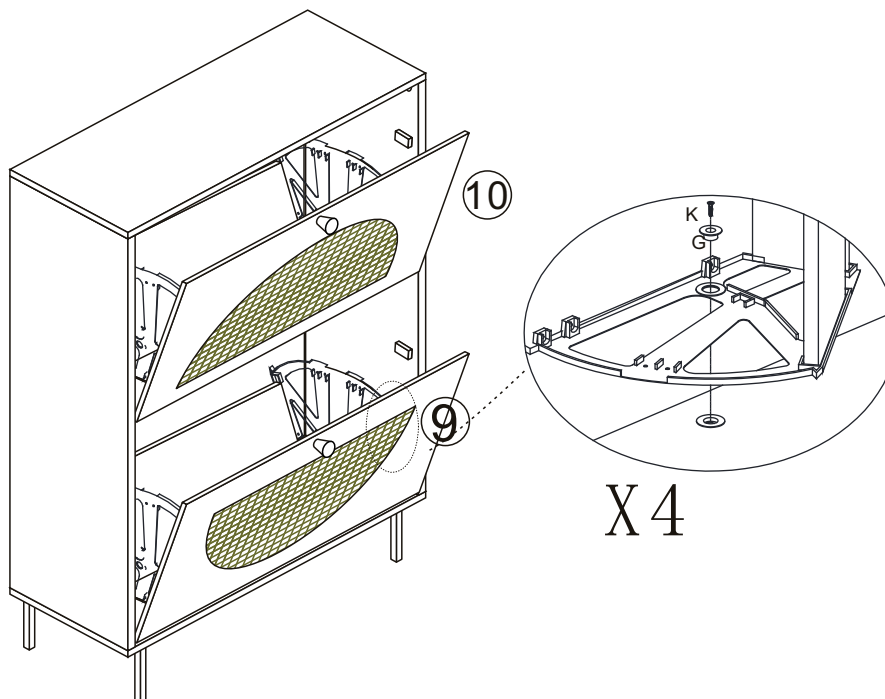


STEP 12.

Fix parts 7 to parts (L) and (R) using screws (H), as shown.




Hx4

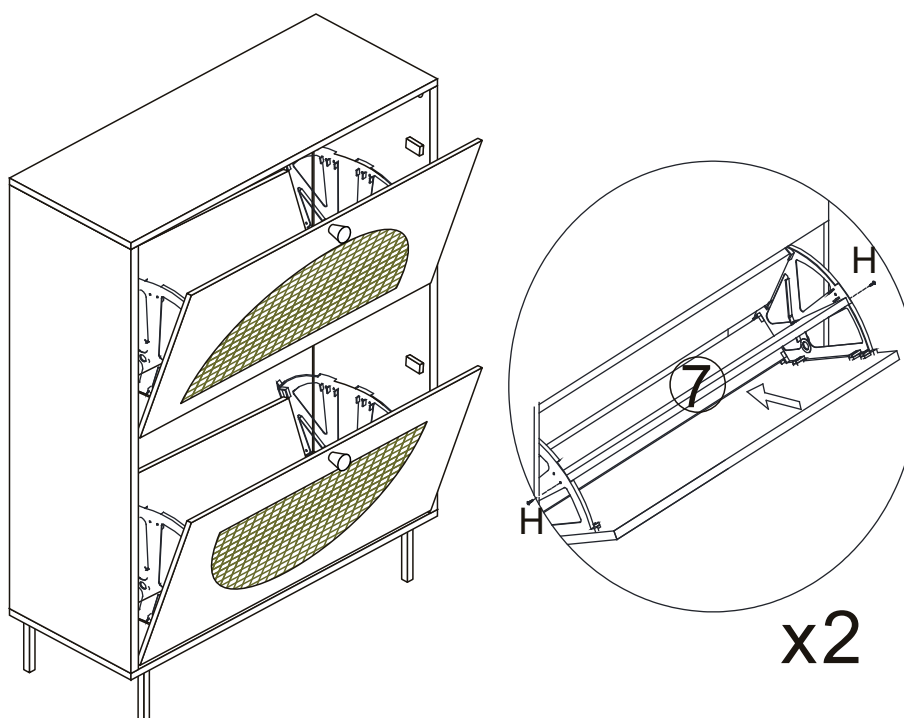

ASSEMBLY STEPS

STEP 13.

Secure backing panels 5 by fixing wedges (P-1) using screws (P-2), as shown. Fix wall straps (N) to part 1 using washers (M) and screws (J), as shown.

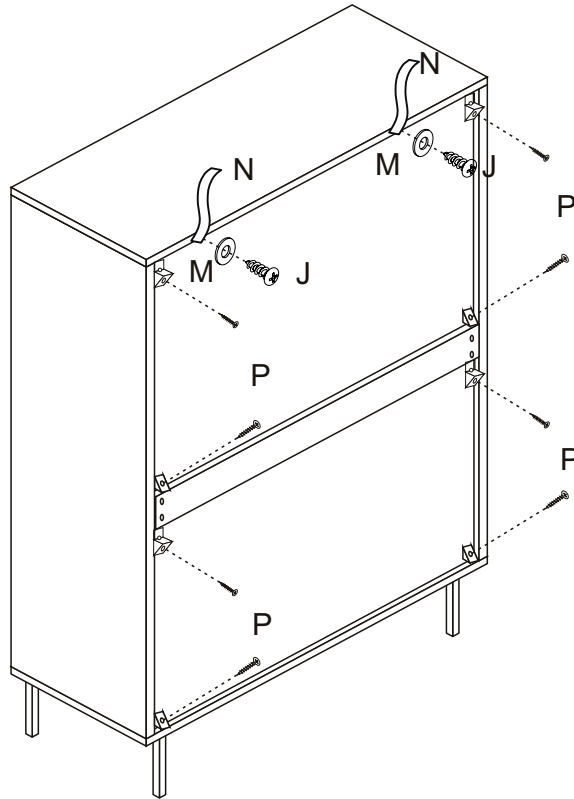

①

Mx2



Nx2



J x2




Px8

STEP 14.

For extra stability, it is recommended that you fix your Shoe cabinet to the wall using hardware (M and O), as shown.

Screws (O-1) are fixed through wall straps and into the wall plugs (O-2).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

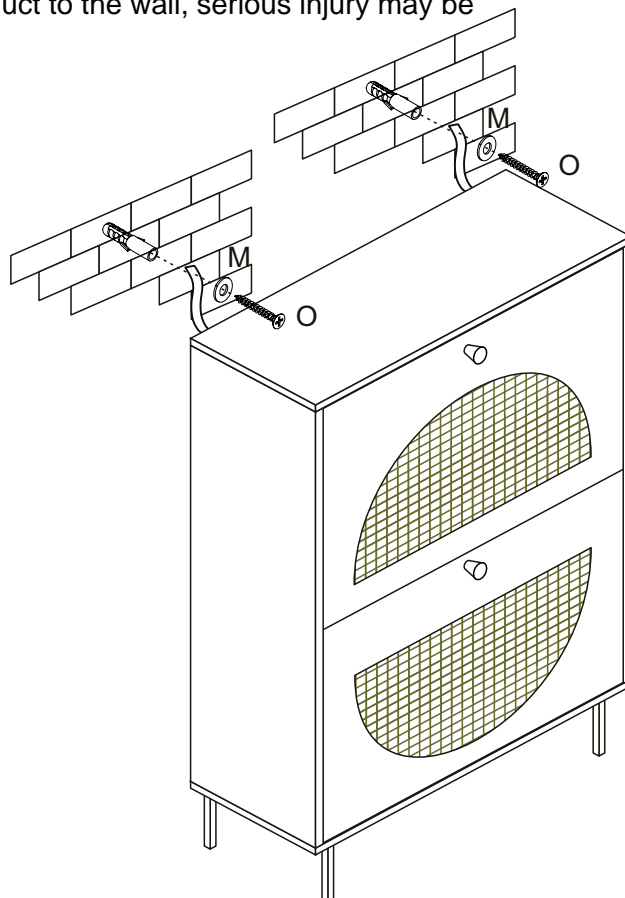

①

Mx2



Ox2