










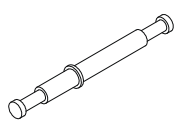





Sideboard









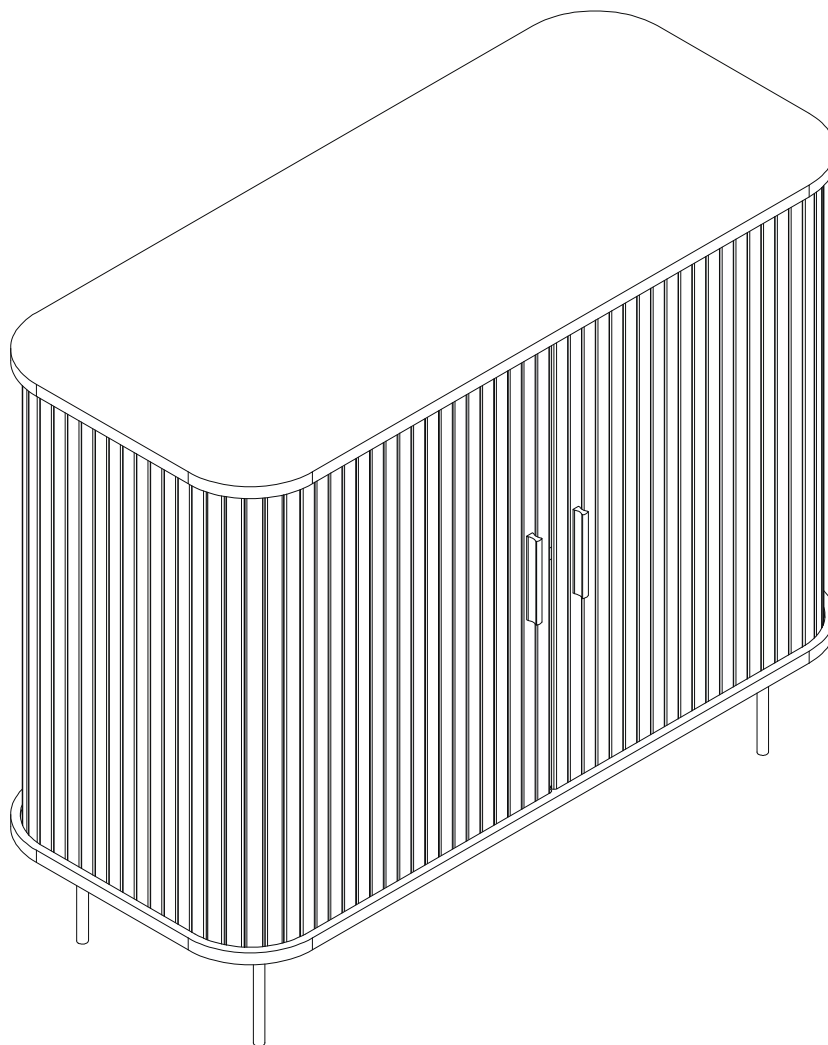



ASSEMBLY INSTRUCTION

HARDWARE LIST

A x10 M6x35 	B x14 M15x9.5 	C x16 M6x30 	D x6 M7x50 	E x2 9x16x105 	F x4 M4x10 
G x1 57x20x4 	H x20 M4x12 	I x8 9.5x13.5x15 	J x8 M3x16 	K x2 M5x71 	L x2 M6x50 
M x2 M4x12 	N x2 M4x35 				



PARTS LIST

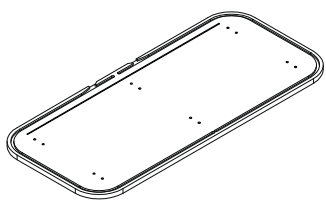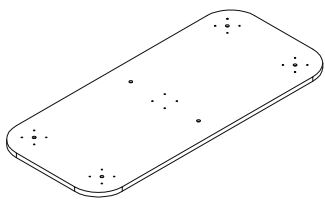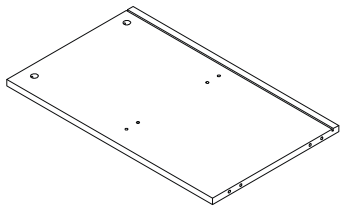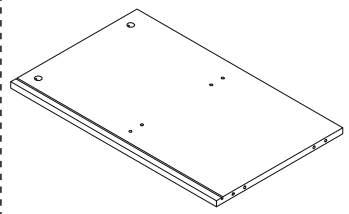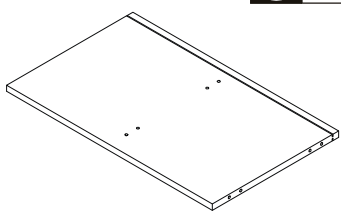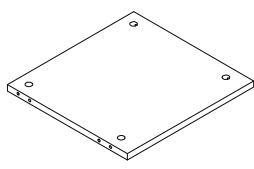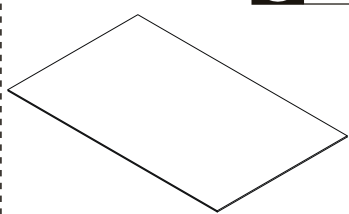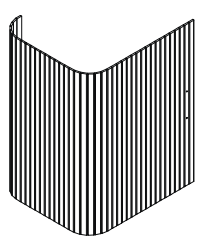① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x2 
⑦ x2 	⑧ x2 	⑨ x4 
⑩ x1 		

ASSEMBLY STEPS

STEP 1.

Insert quickfit screws (A) into parts 1, 3 and 4, as shown.

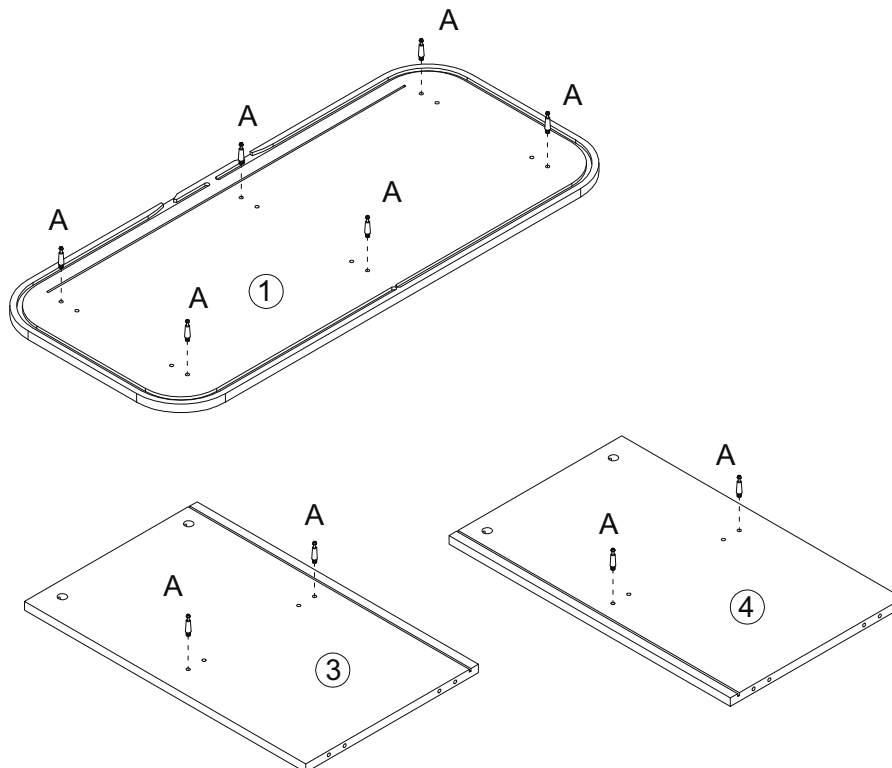




STEP 2.

Insert quickfit screws (K) and long wooden dowels (L) into part 5, as shown.

Insert cam locks (B) into parts 6, as shown.

Fit parts 6 to part 5.


Turn cam locks clockwise to tighten.

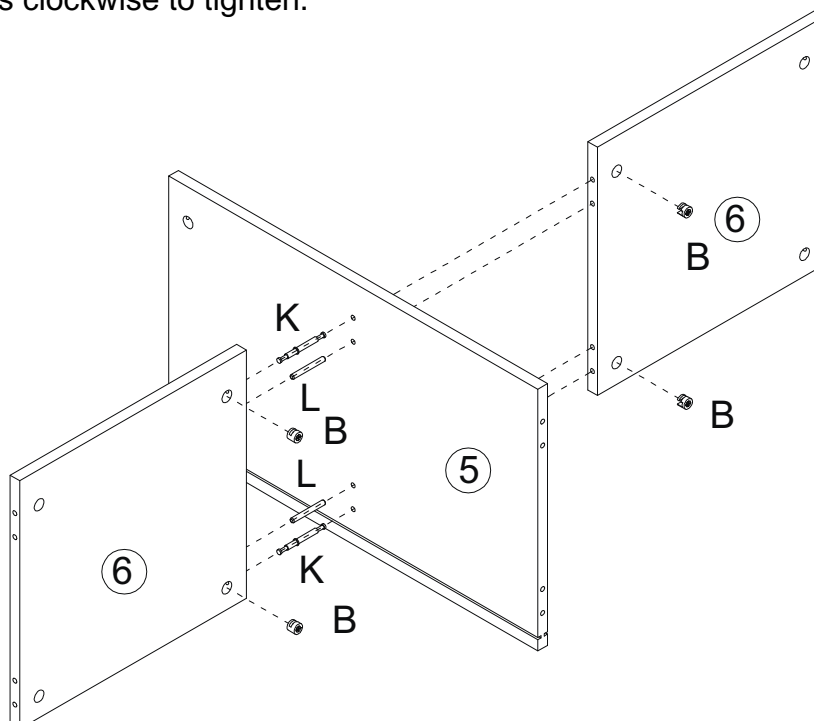

ASSEMBLY STEPS

STEP 3.

Insert cam locks (B) and short wooden dowels (C) to parts 6, as shown.
Fit parts 3 and 4 to parts 6.
Turn cam locks clockwise to tighten.

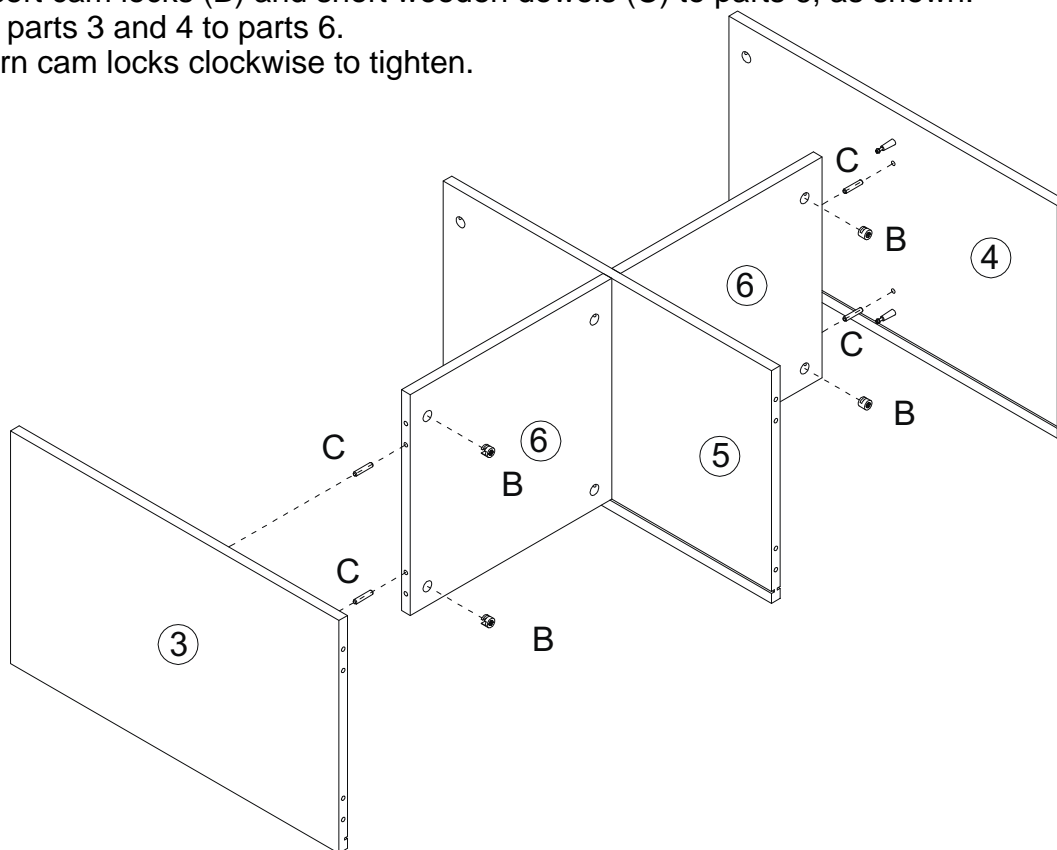


B x 4



C x 4

STEP 4.

Insert cam locks (B) and short wooden dowels (C) into parts 3, 4 and 5,
as shown.
Fit part 1 to parts 3, 4 and 5.
Turn cam locks clockwise to tighten.

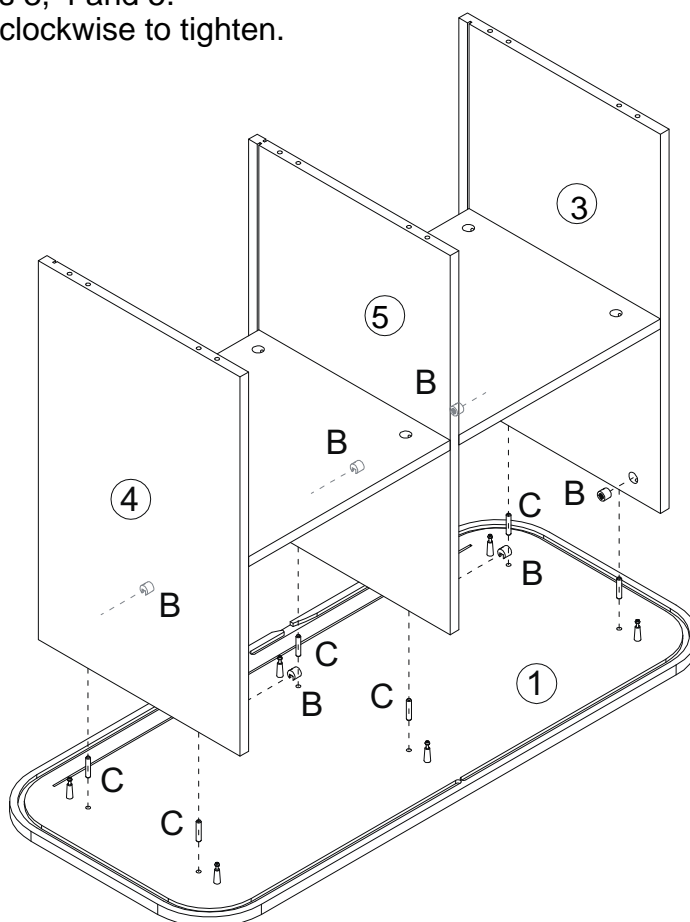

B x 6




C x 6

ASSEMBLY STEPS

STEP 5.



Insert parts 7 into grooves between parts 1, 3, 4 and 5, as shown.

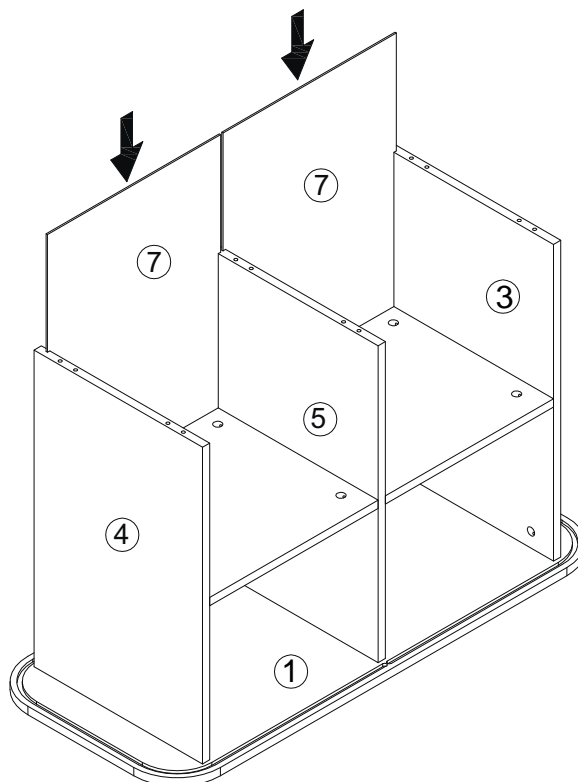

STEP 6.

Insert short wooden dowels (C) to parts 3, 4 and 5, as shown.


Fix part 2 to parts 3, 4 and 5 using screws (D) and allen key (G), as shown.

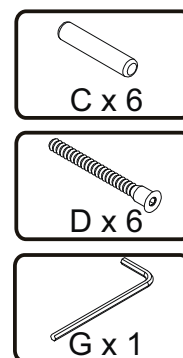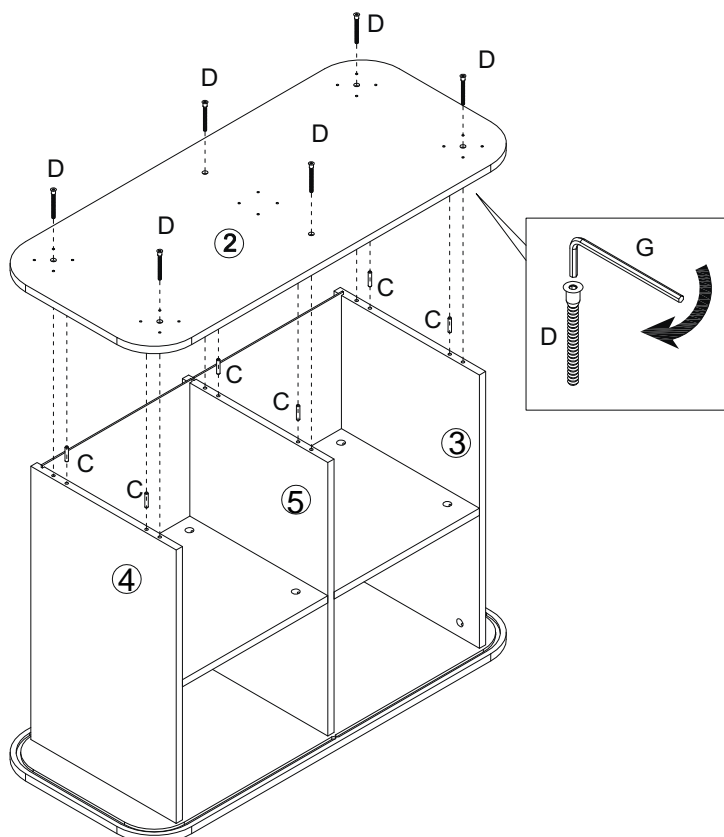

ASSEMBLY STEPS

STEP 7.


Fix legs 9 and 10 to part 2 using screws (H), as shown.

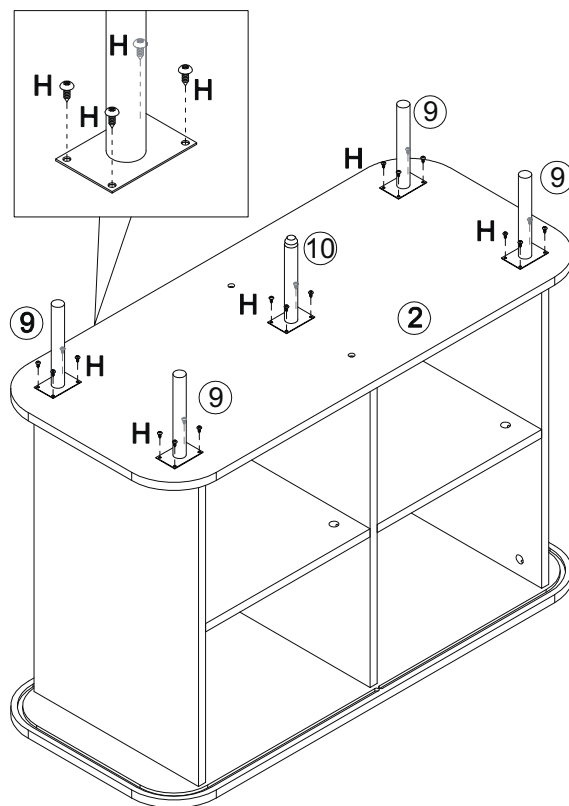

H x 20

STEP 8.

Fix wall straps (M-1) to part 1 using washers (M-2) and screws (M-3), as shown. Secure backing panel 7 by fixing wedges (I) using screws (J), as shown.

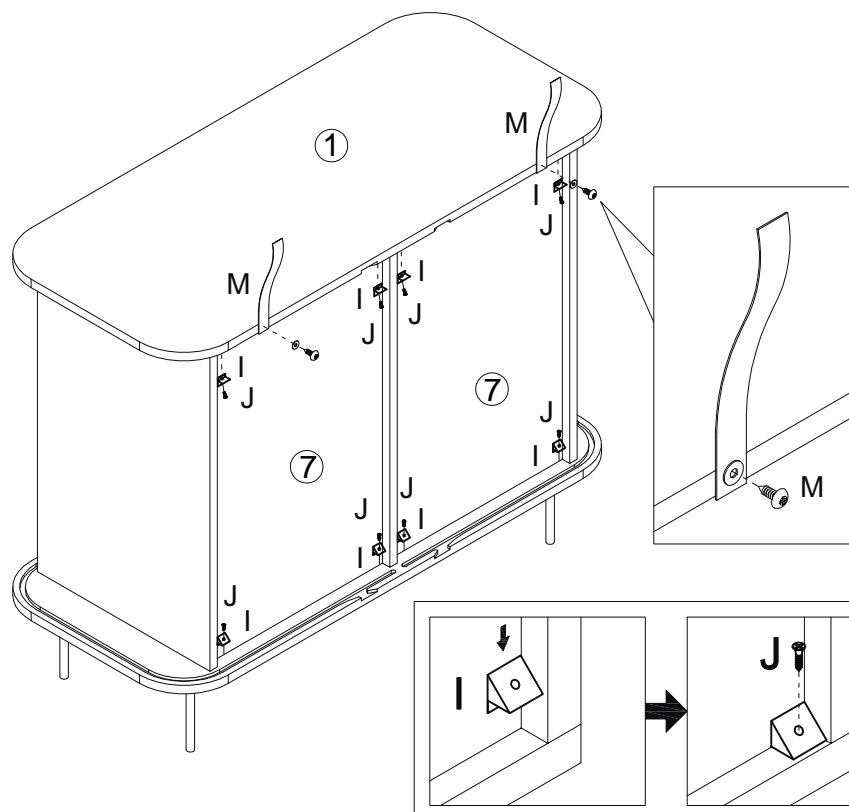

I x 8



J x 8






M x 2

ASSEMBLY STEPS


STEP 9.

Fix handles (E) to doors (8) using screws (F), as shown.

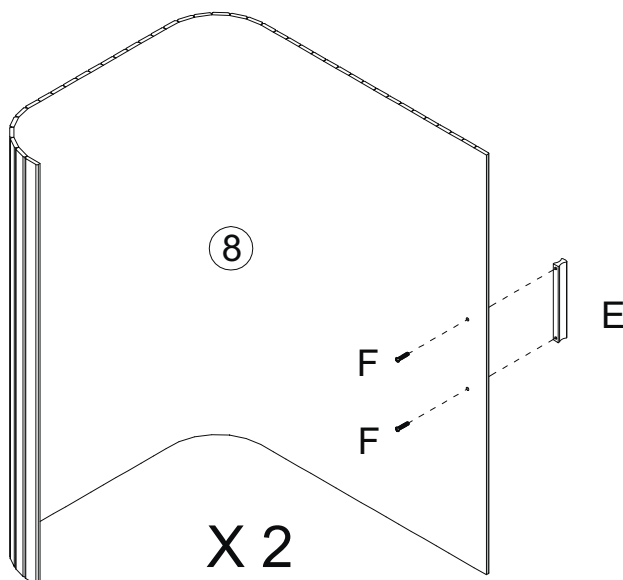

STEP 10.


Insert doors 8 into grooves between top and bottom from back, as shown.

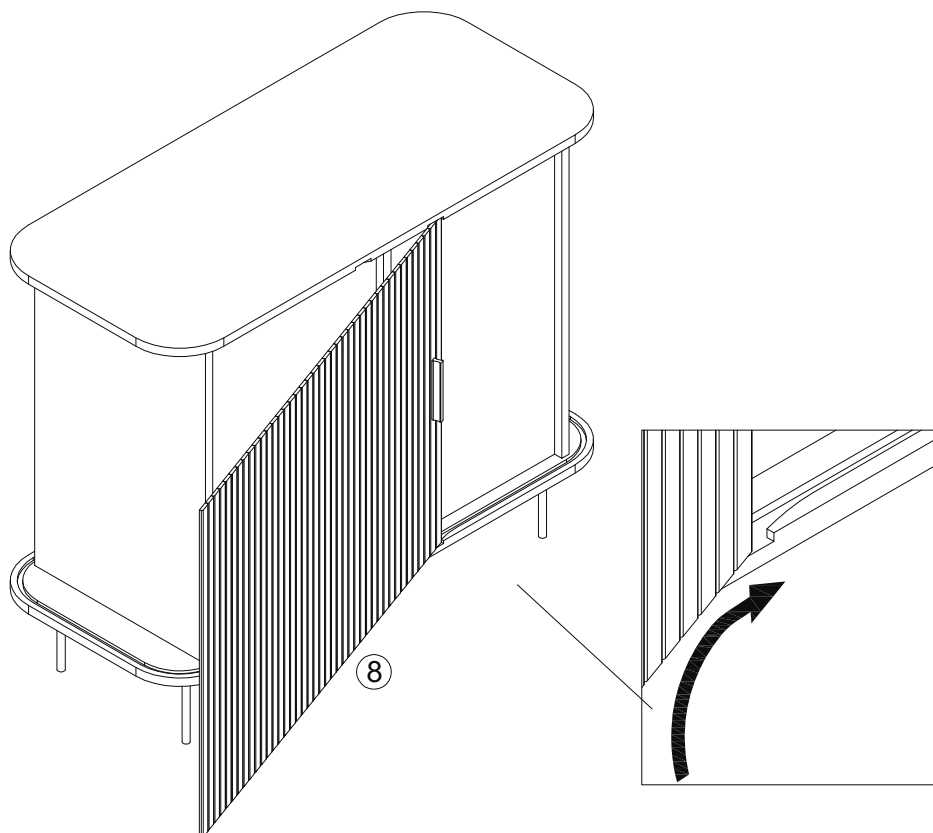

ASSEMBLY STEPS


STEP 11.

Insert doors 8 into grooves between top and bottom from back, as shown.

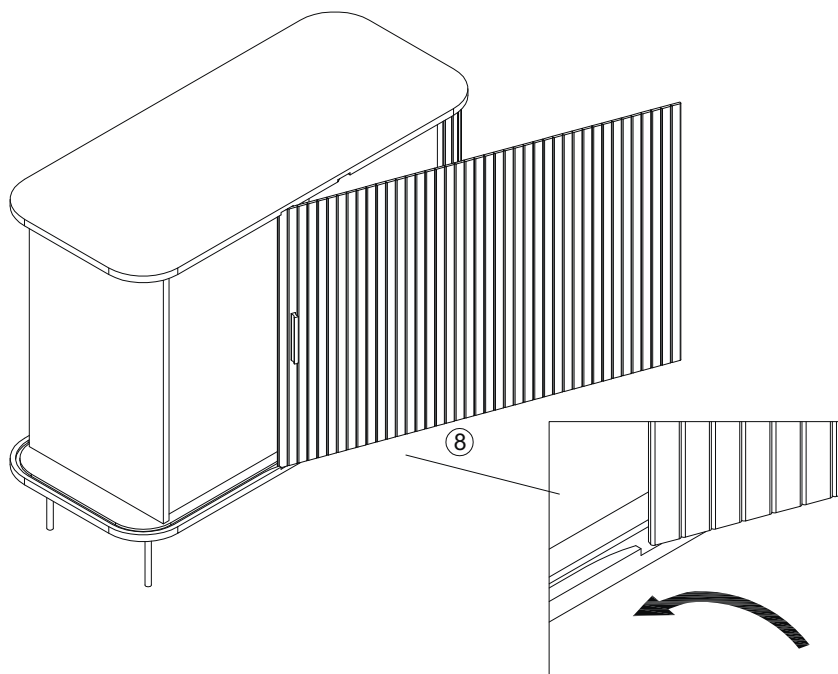

STEP 12.

Turn adjustable foot nails as your need.

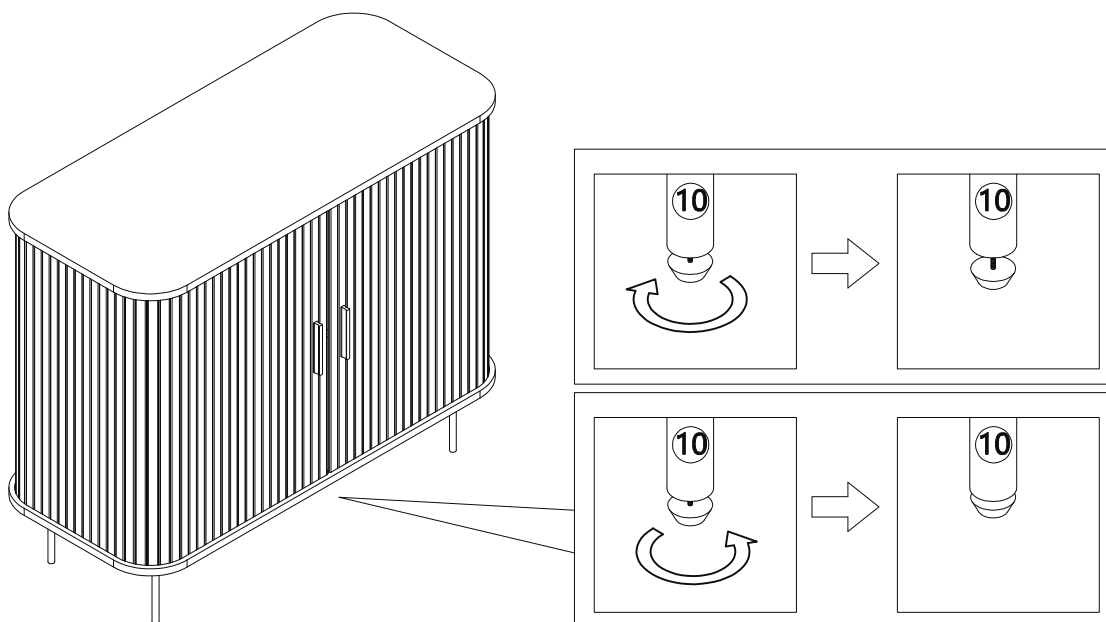

ASSEMBLY STEPS

STEP 13.

For extra stability, it is recommended that you fix your sideboard to the wall using hardwares (N-1, N-2 and N-3), as shown.

Screws (N-1) are fixed through washers (N-2) and wall straps and into the wall plugs (N-3).

Should you choose not to afix the product to the wall, serious injury may be caused if the product tips over.

