


WALKER EDISON
TM

Amira Cabinet Bookcase

SKU# WEAMI41OS2

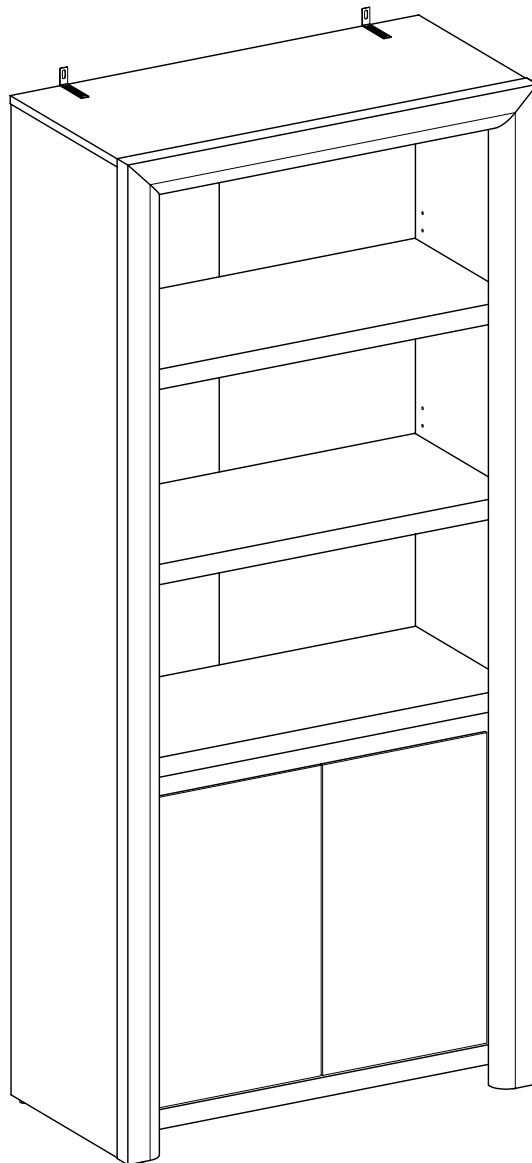


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

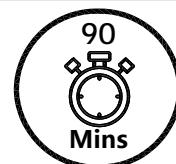

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

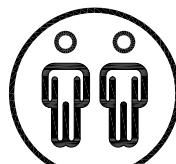

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

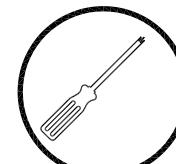

Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

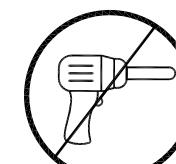

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.






Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Left Side Molding	1
5	Right Side Molding	1
6	Front Molding	1
7	Back panel	1
8	Adjustable Shelf	2
9	Fixed Divider	1
10	Front windshield	1
11	Lower active layer board	1
12	Bottom board	1
13	Left door panel	1
14	Right door panel	1
15	Door hinge pad	4

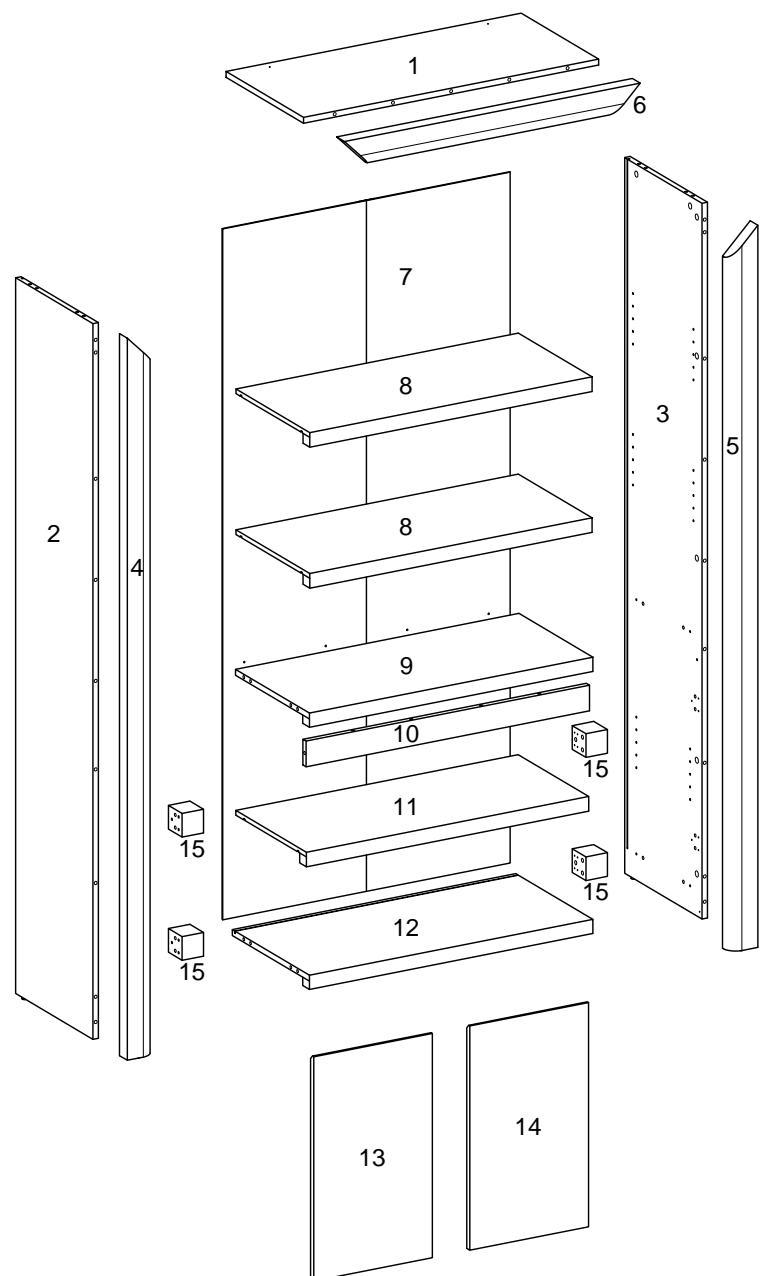

WE Hardware List

Part	Size	Name	Quantity
A		8x30mm Wooden dowel	32
B		6x35mm Cam Bolt	29
C		15x11mm Cam Lock	29
D		30mm Sticker	29
E		10g Glue Tube	1
F		20x20x1mm L Shape Bracket	2
G		4x12mm Screw	16
H		50x50x2mm Connecting iron sheet	2
J		Plastic Wedge	12
K		3x17mm Screw	12
L		5x16mm Shelf Support Pin	12
M		75x32x15x1.5mm Bracket	2
N		5x12mm Screw	2


WE Hardware List

Part	Size	Name	Quantity	
P		5x38mm	Screw	2
Q		6x30mm	Wall Anchor	2
R		35mm	Hinge	4
S		10x2mm	Rubber pad	2
T		4x16mm	Screw	24
U		5x54mm	Screw	12

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.

Step 1

Let's get started! Using a Phillips head screwdriver, screw cam bolts (B) into the Left Side Panel (2) and the Right Side Panel (3). Then, insert wooden dowels (A) into both pieces.

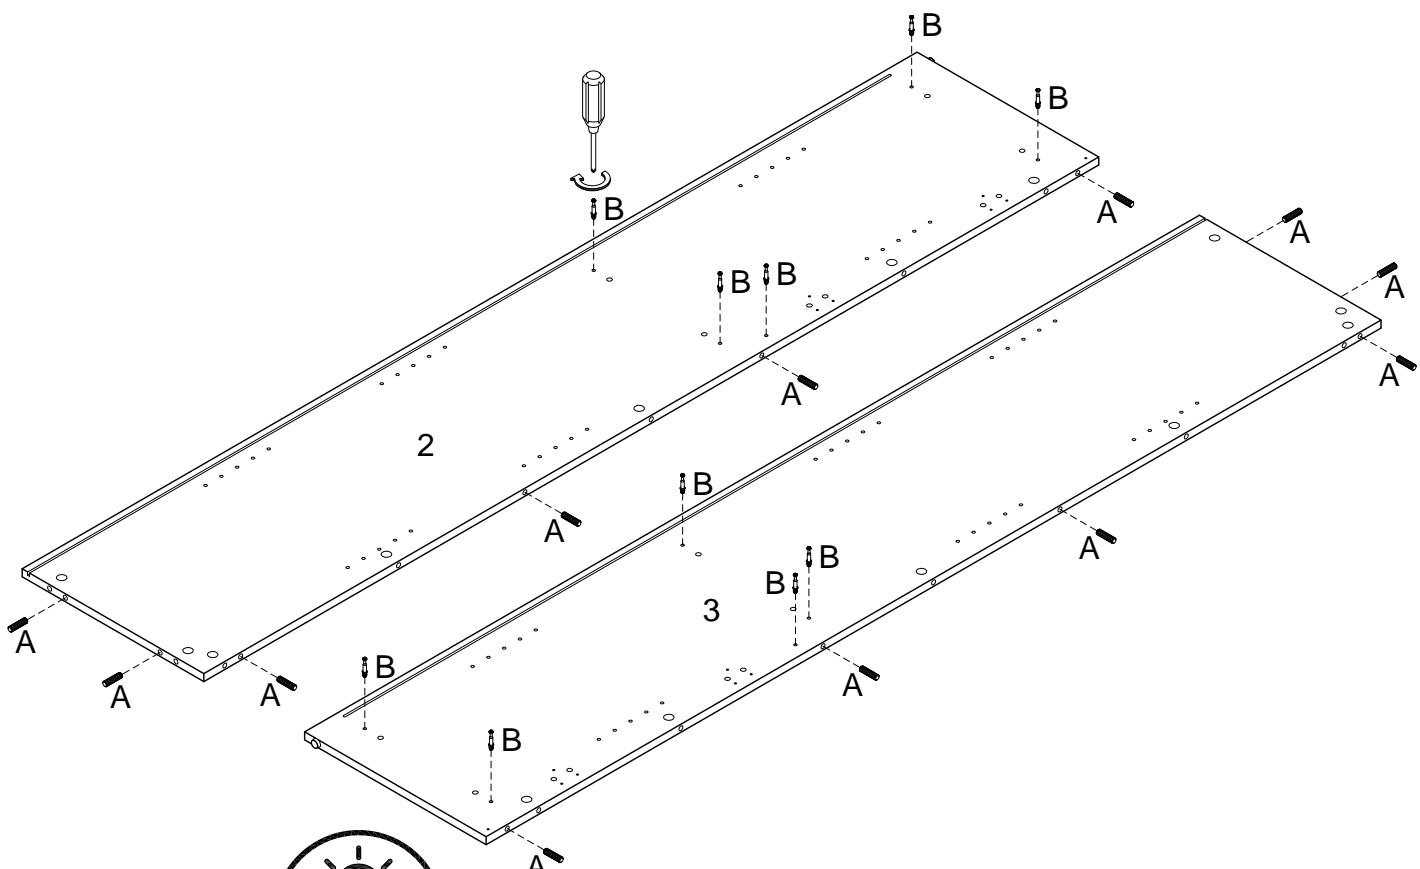


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



Step 2

Screw cam bolts (B) into the Left Side Molding (4), the Right Side Molding (5) and the Fixed Divider (9). Then, insert wooden dowels (A) into the Fixed Divider (9) , Bottom Board (12), Front windshield (10), and all four Door Hinge Pads (15).

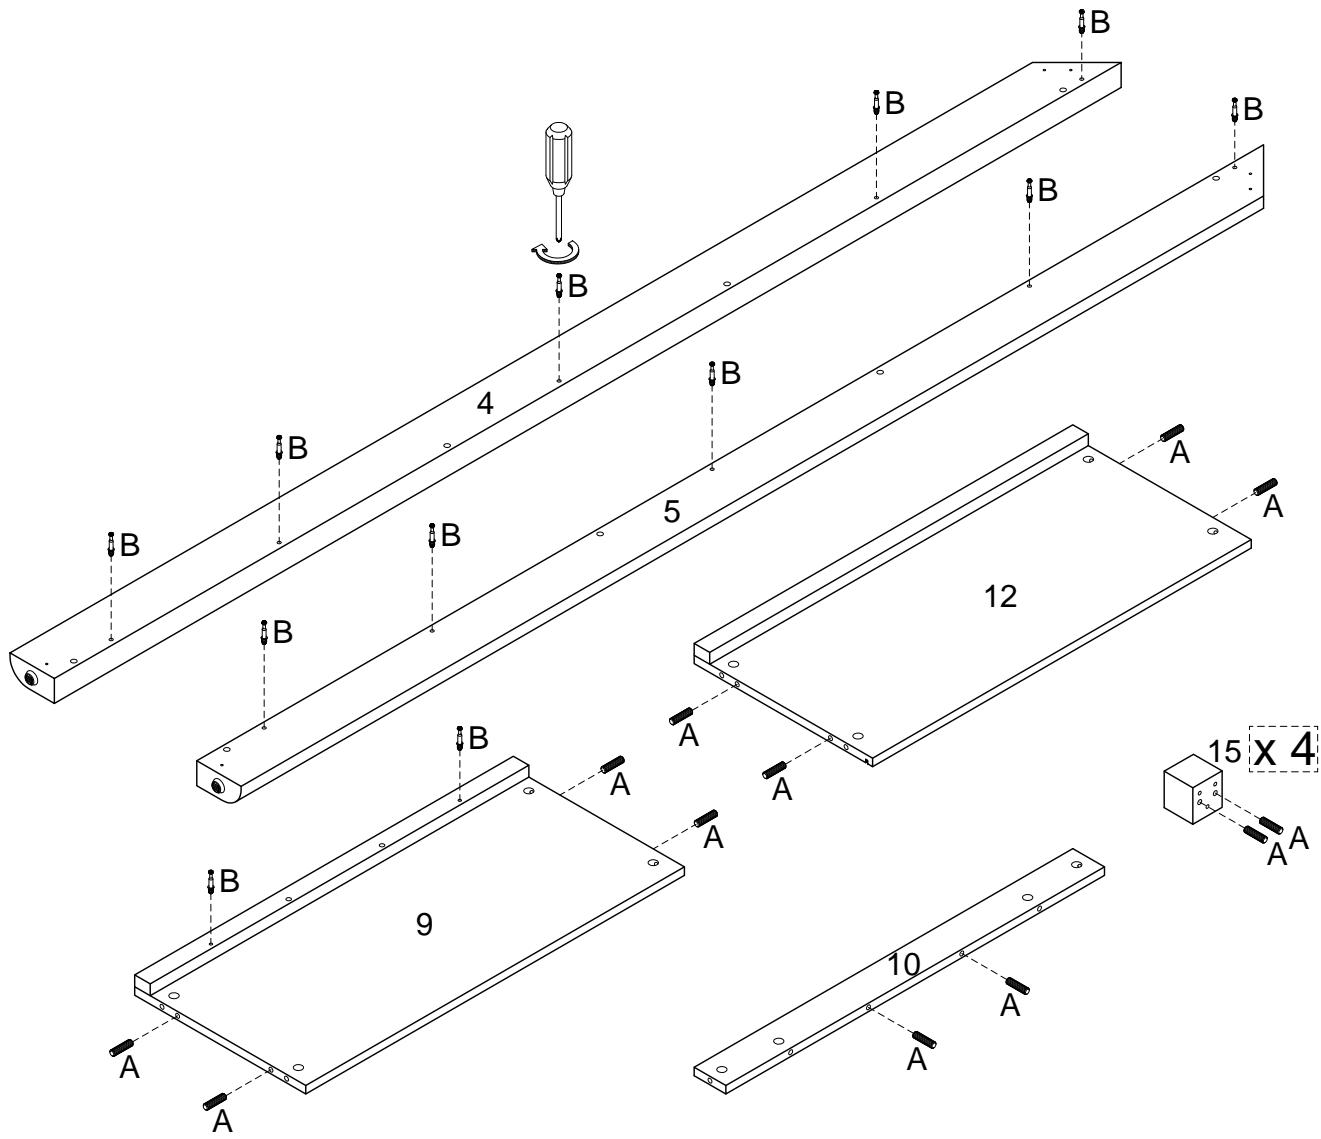


Step 3


Connect the Right Side Molding (5) to the Right Side Panel (3) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

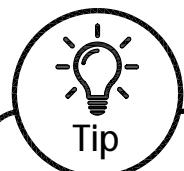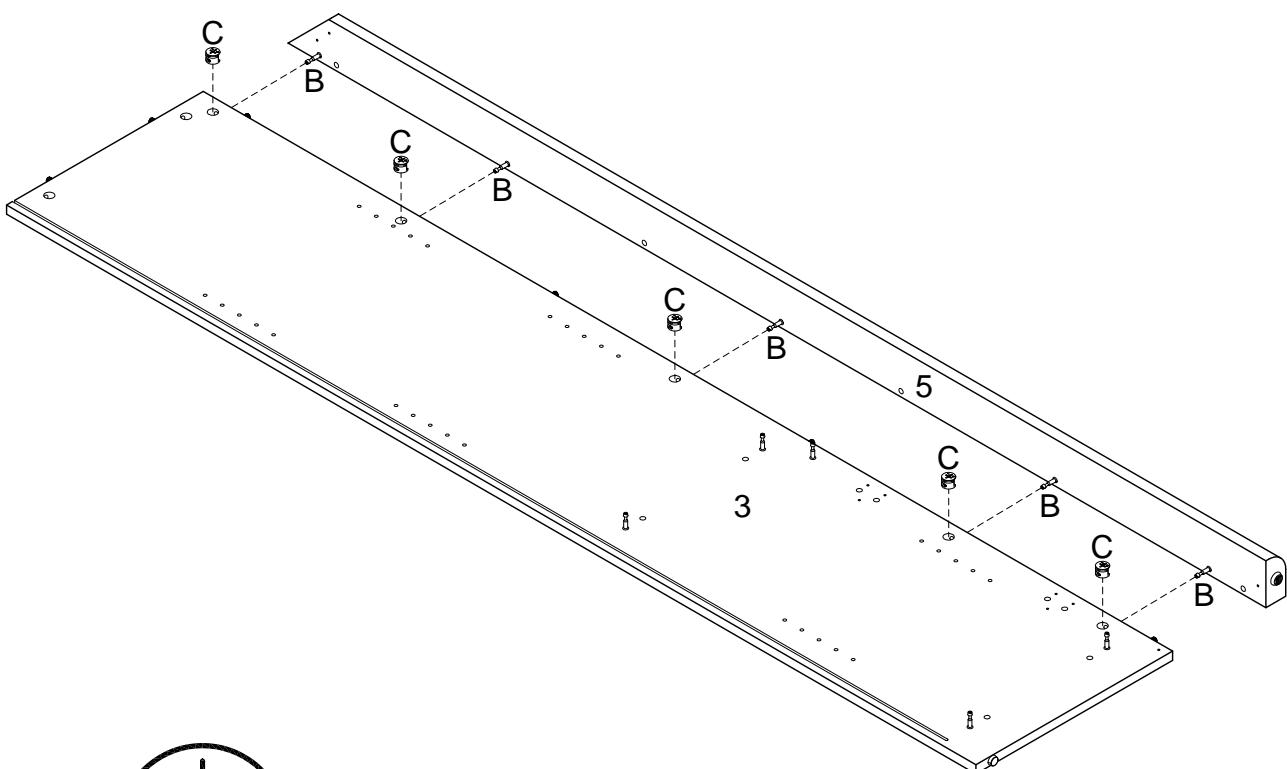


Cam Locks
Cam Locks help securely join two pieces together.
Follow these easy steps.

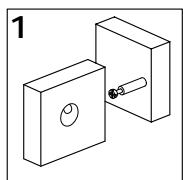

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

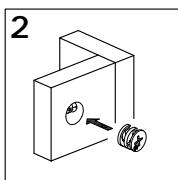


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

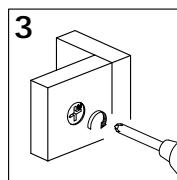

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 4

Repeat the previous step for the other side! Connect the Left Side Molding (4) to the Left Side Panel (2) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver. Then, secure the Front Windshield (10) to the Fixed Divider (9). Insert cam locks (C) and tighten with a screwdriver.

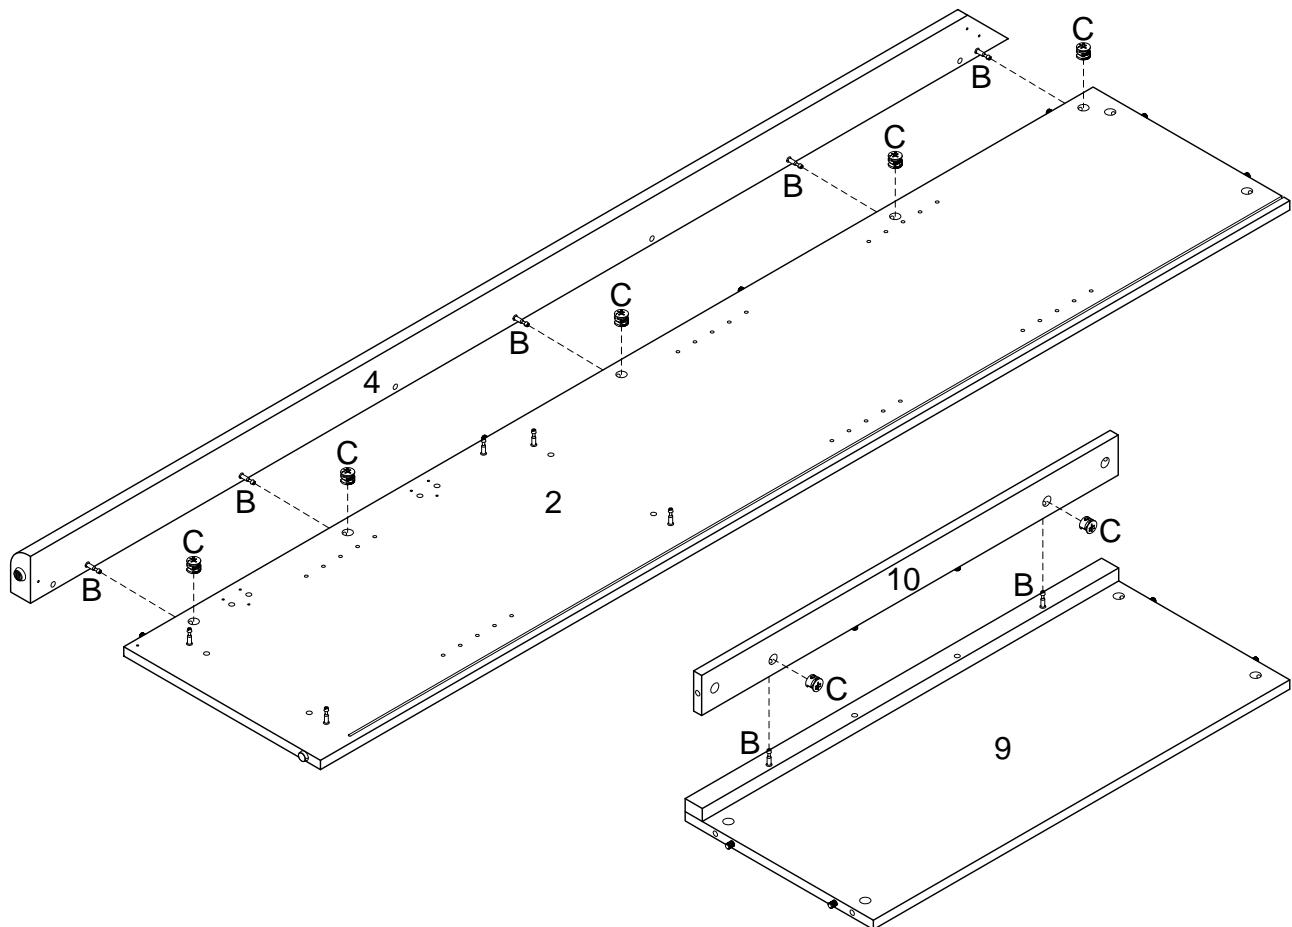


Step 5

Secure the Fixed Divider (9),Front windshield (10) and the Bottom Board (12) to the Right Side Panel (3) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

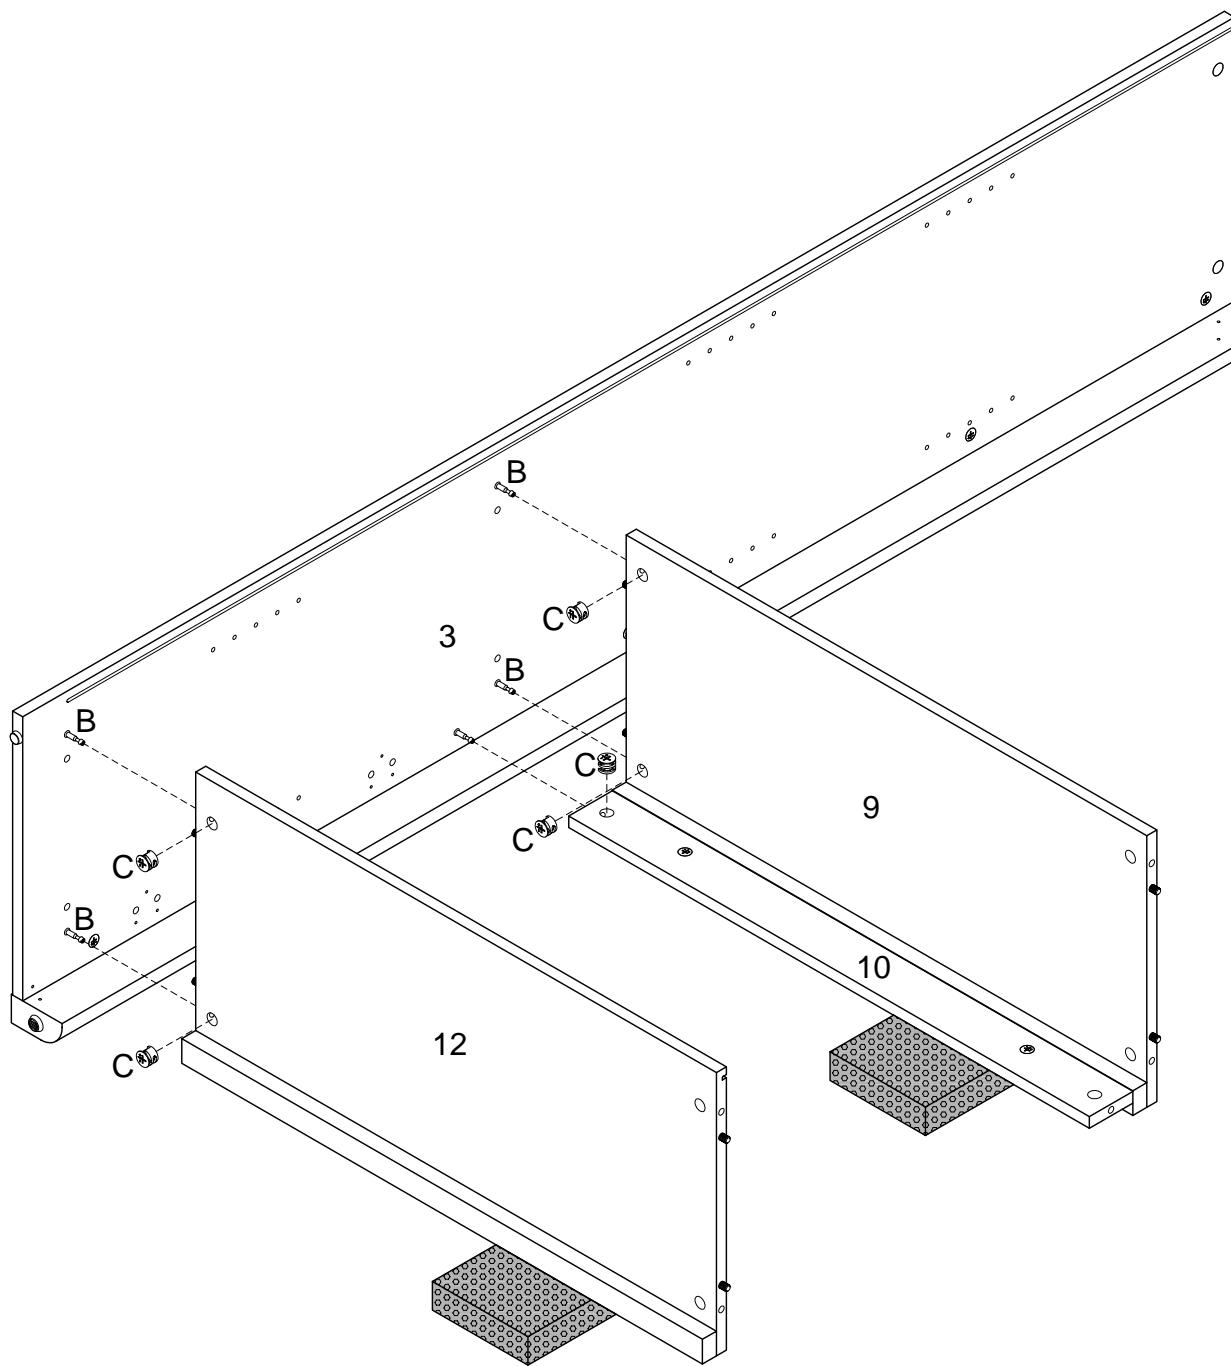


Step 6

Now, connect the Left Side Panel (2).

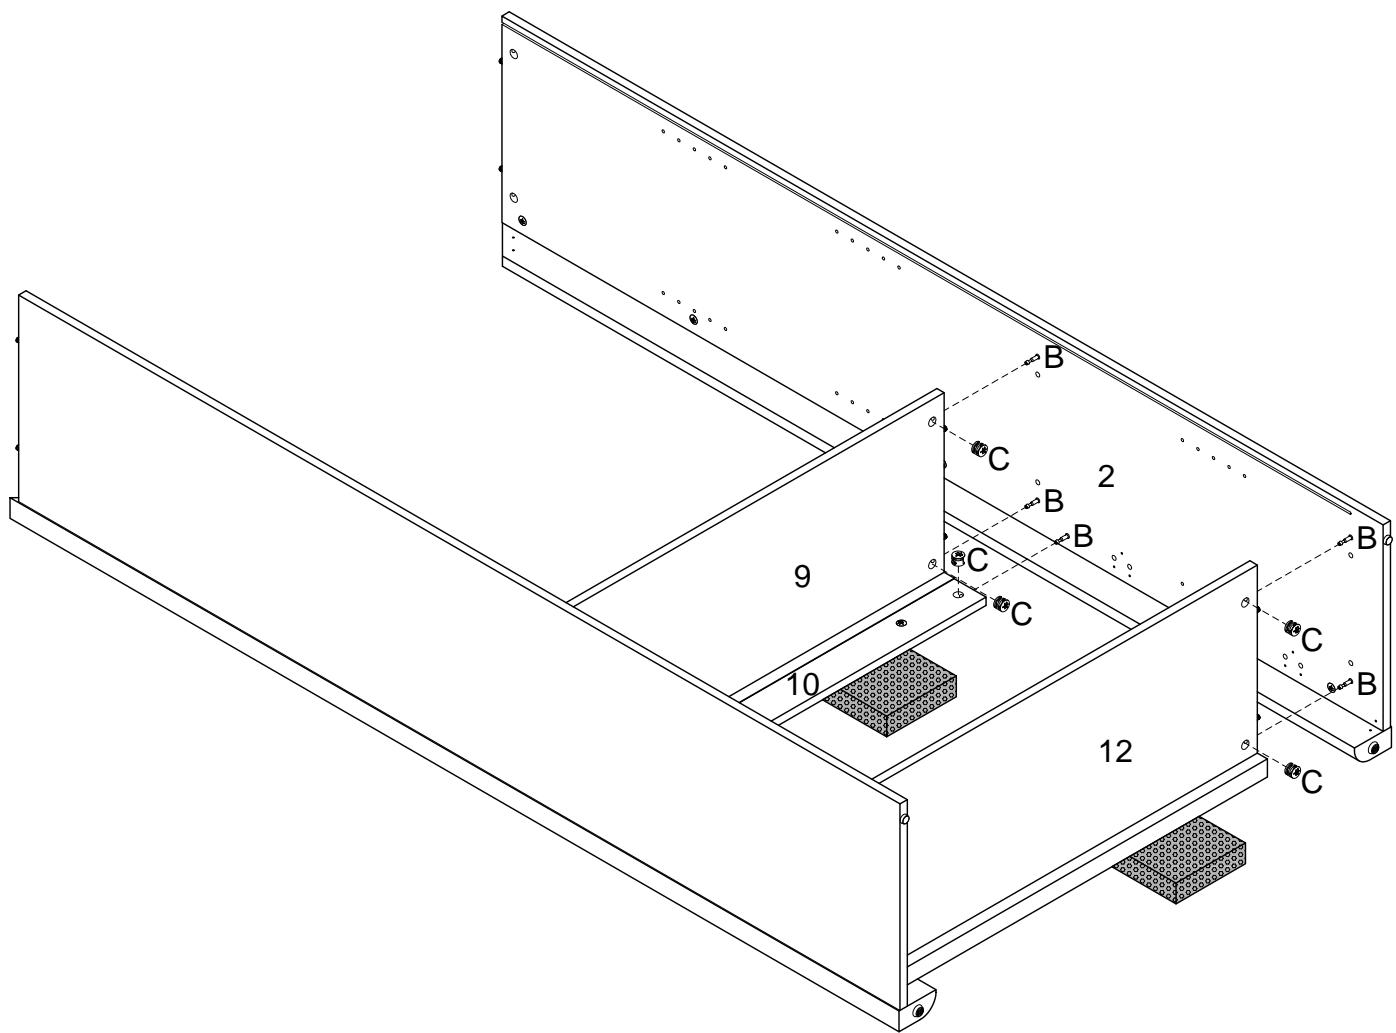


Step 7

Using the (G) screws, secure an I-shaped bracket (F) to the Right Side Panel (3) and Right Side Molding (5) as well as the Left Side Panel (2) and the Left Side Molding (4).

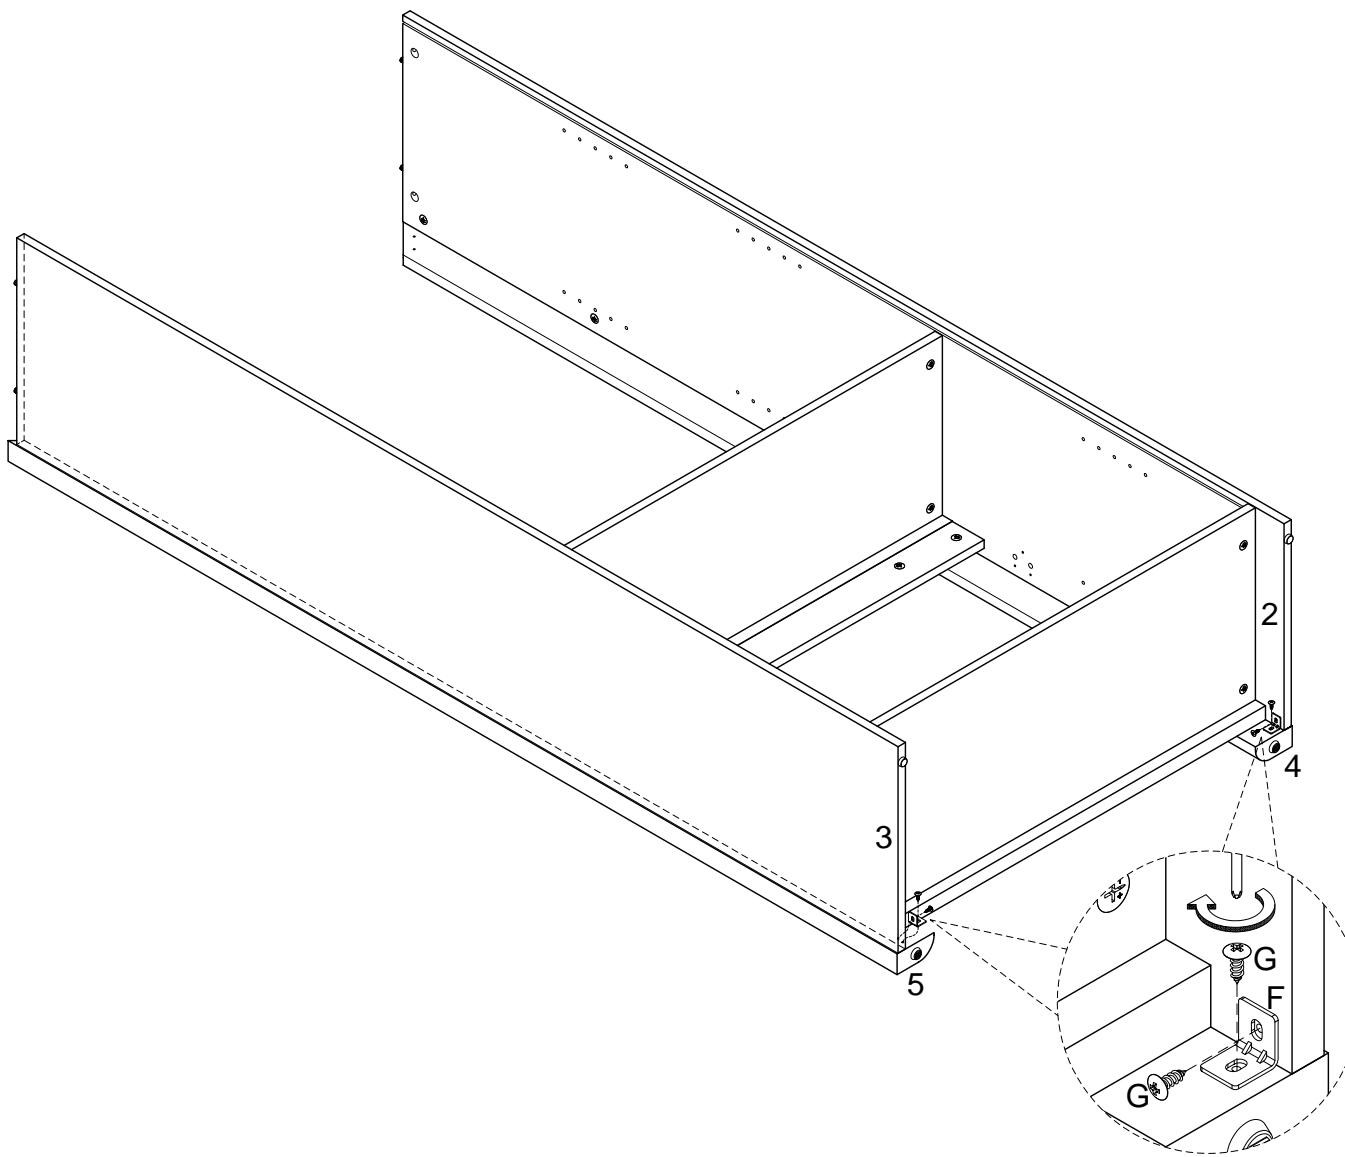


Step 8

Unfold the Back Panel (7) and slide into place using the grooves in the Bottom Board (12), Right Side Panel (3), and the Left Side Panel (2).

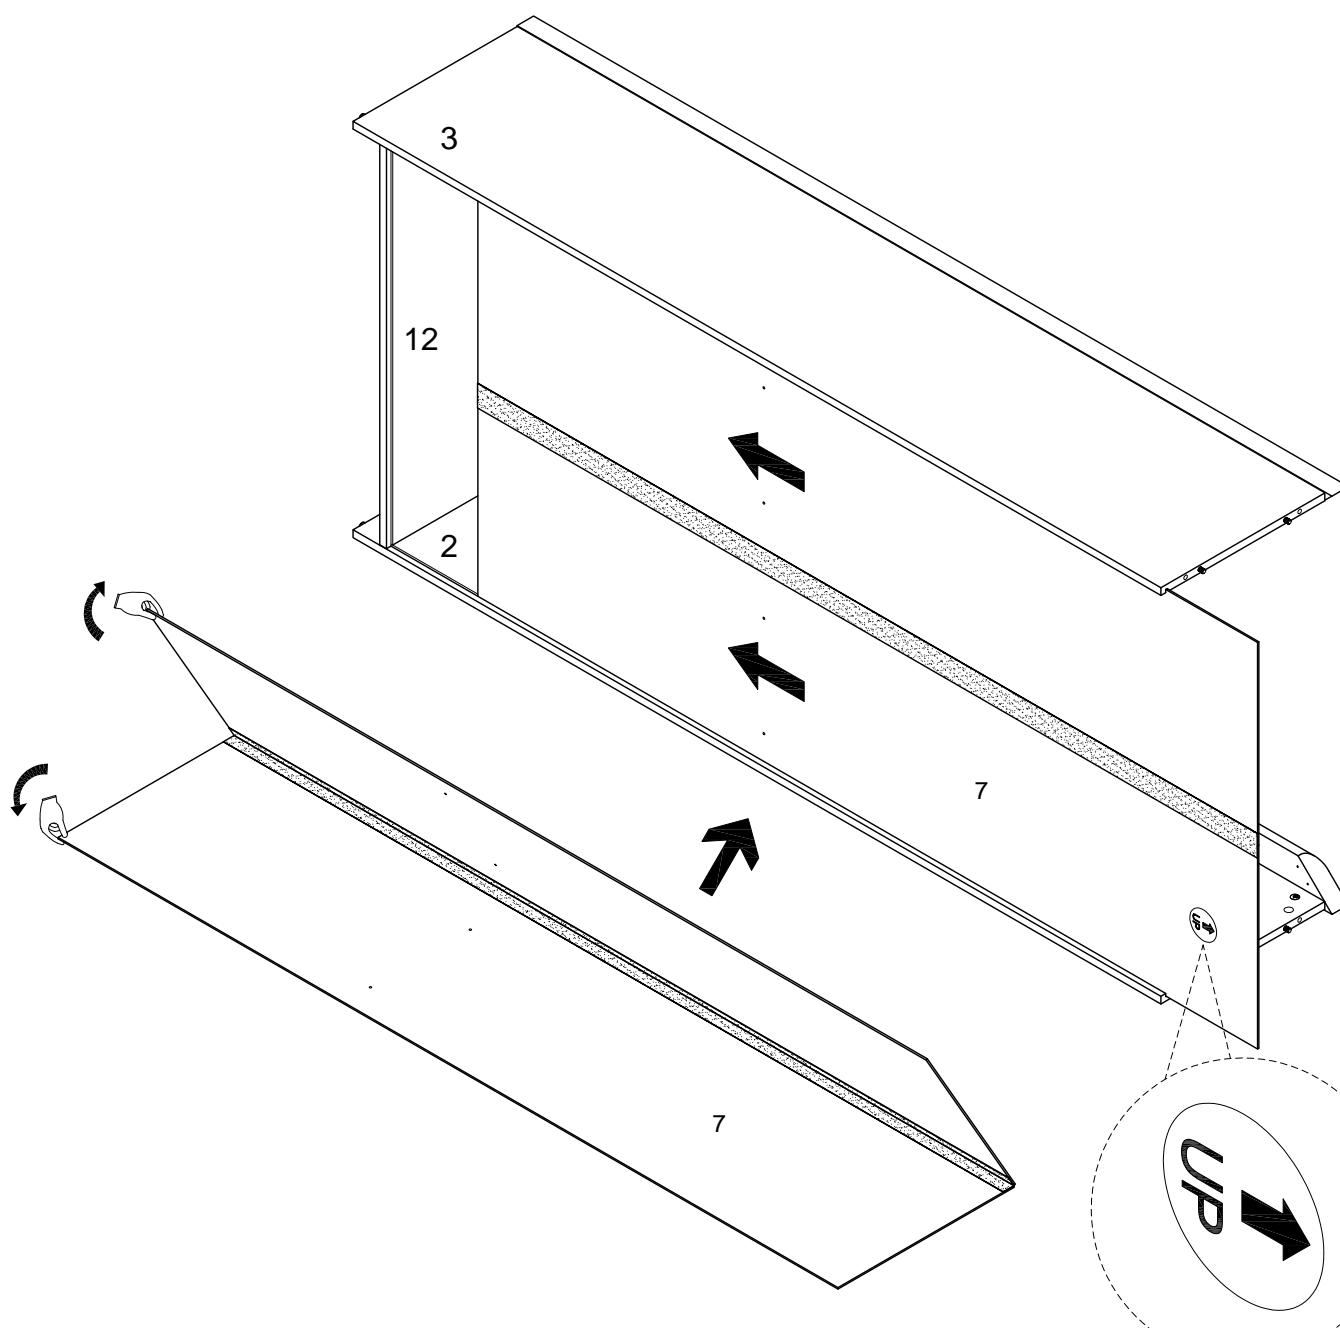


Step 9

Secure the Back Panel (7) using the (G) screws.

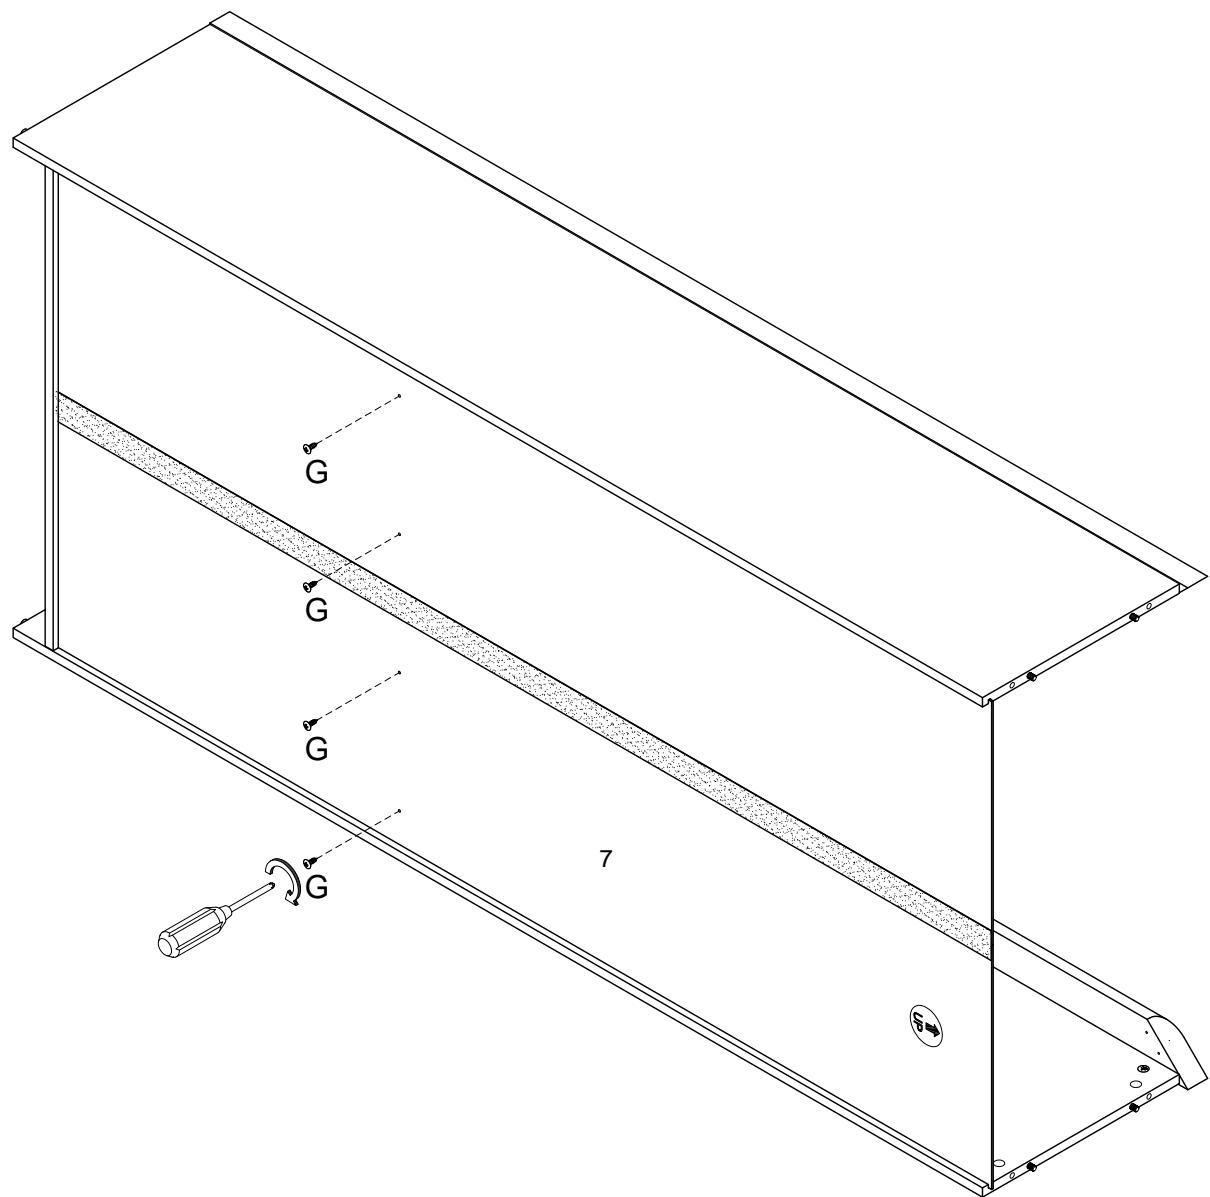


Step 10

Screw cam bolts (B) into the Top Panel (1) and the Front Molding (6). Then, insert wooden dowels (A) into the Top Panel (1) and secure a connecting iron sheet (H) to both ends of the Front Molding (6) using the (G) screws.

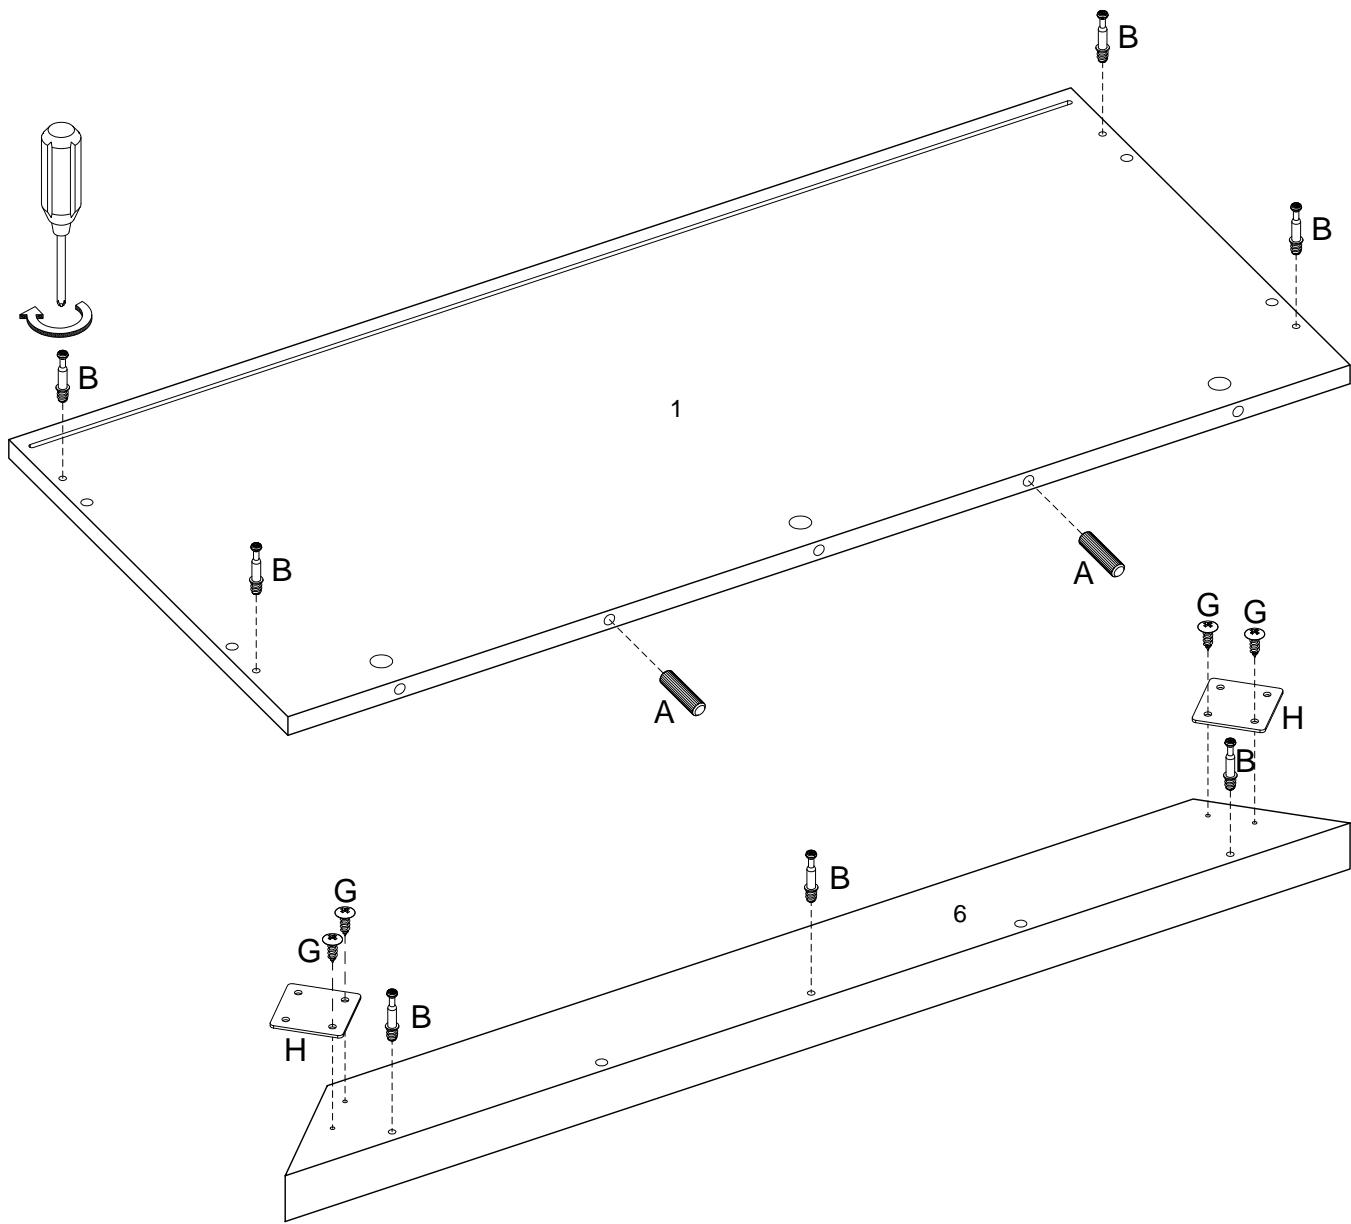


Step 11

Attach the Front Molding (6) to the Top Panel (1) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

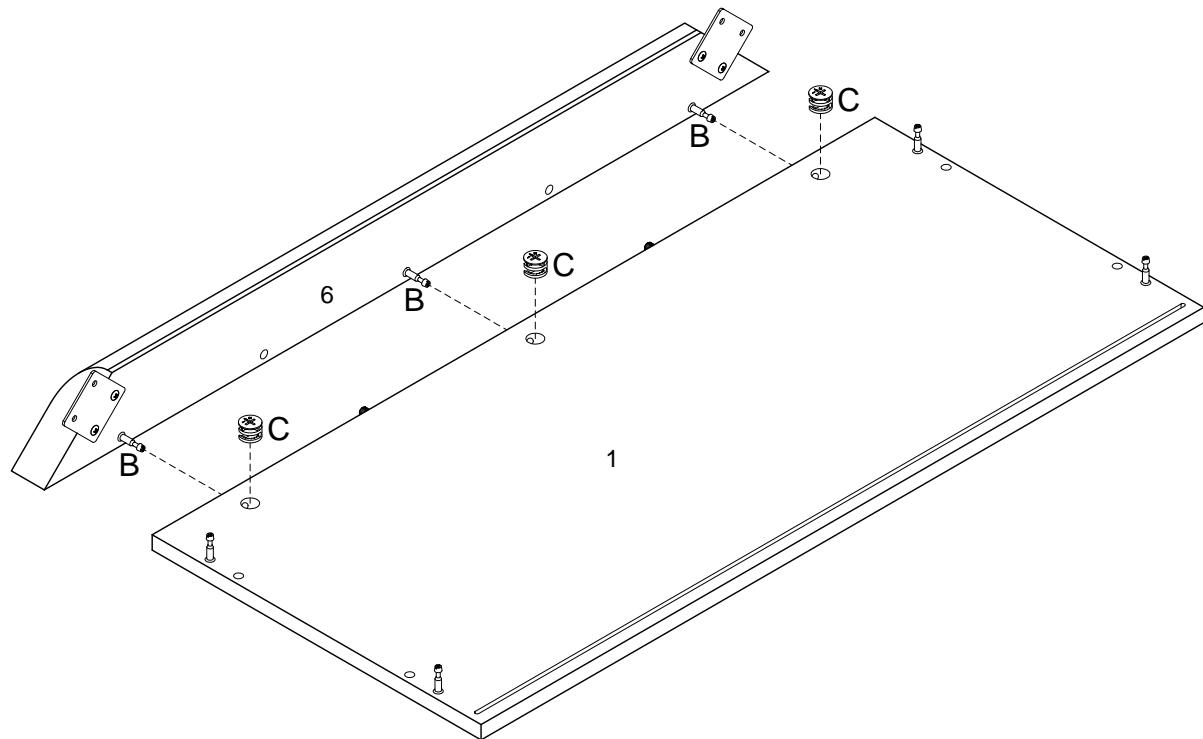


Step 12

Now, connect the Top Panel (1) and insert cam locks (C). Tighten to secure.

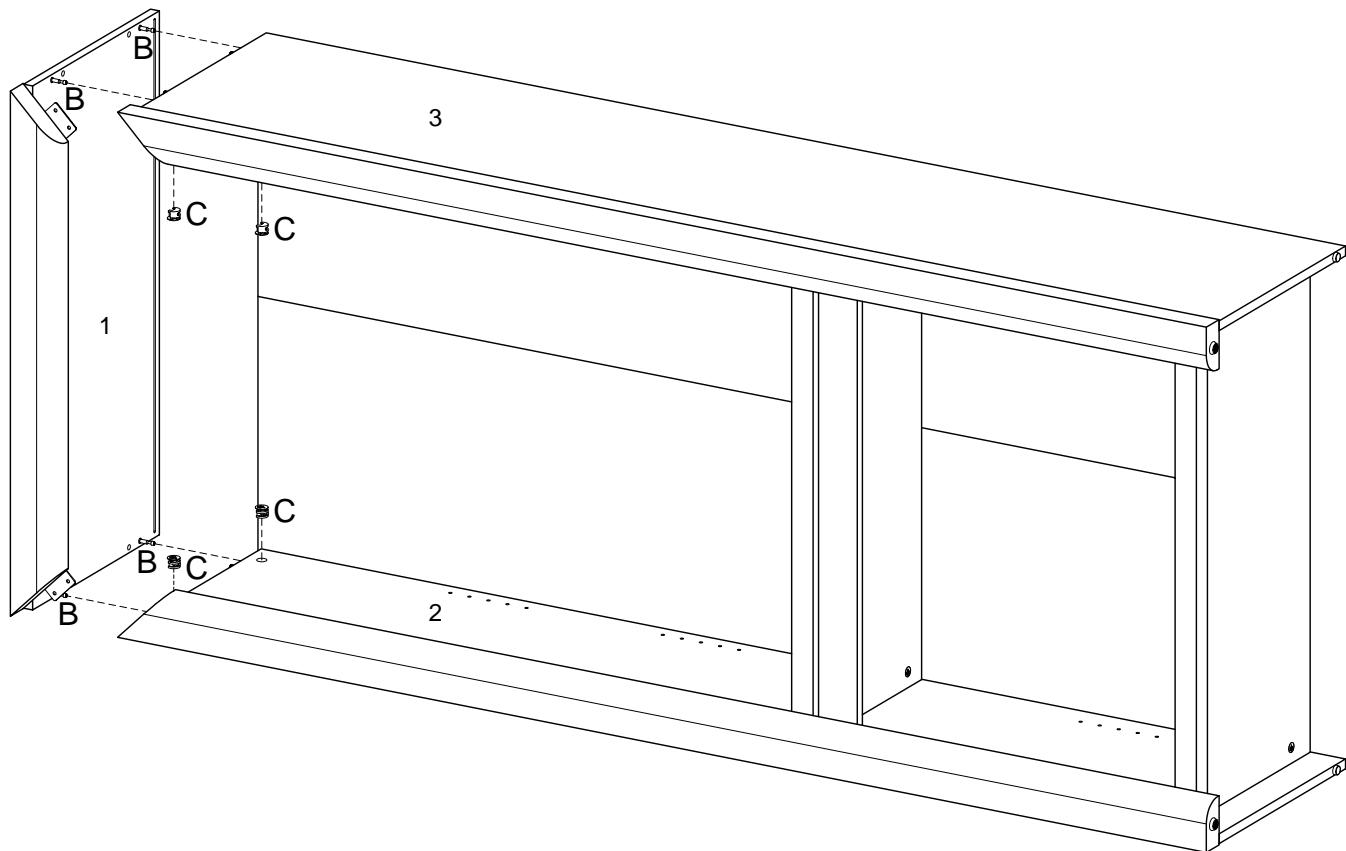


Step 13

Use (G) screws to secure the other side of the connecting iron sheet (H) to the Right Side Molding (5) and the Left Side Molding (4).

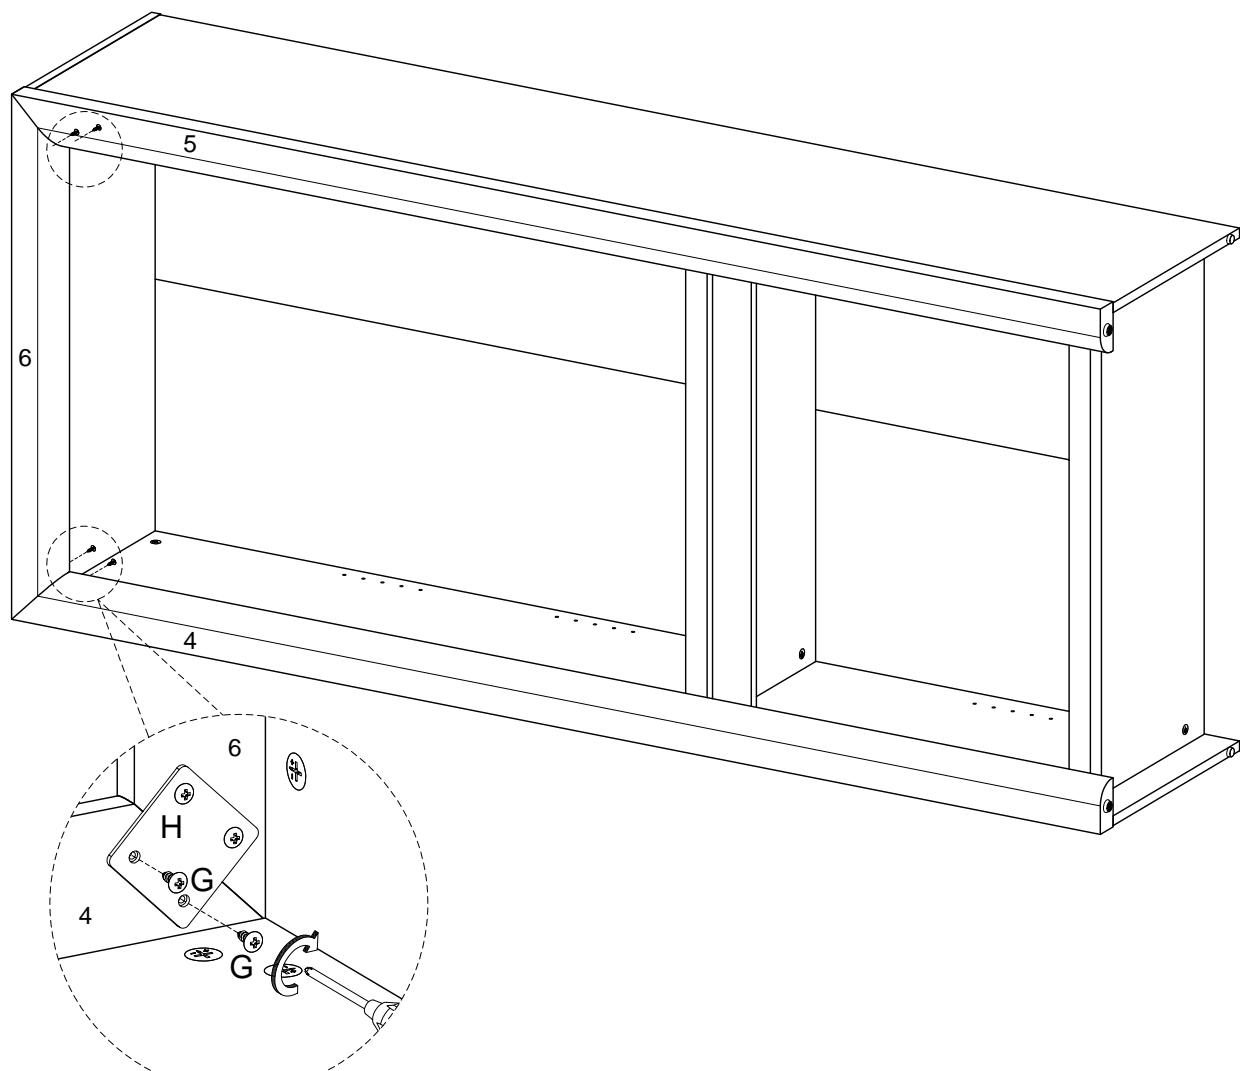


Step 14

Use the provided stickers (D) to ensure a clean finish.

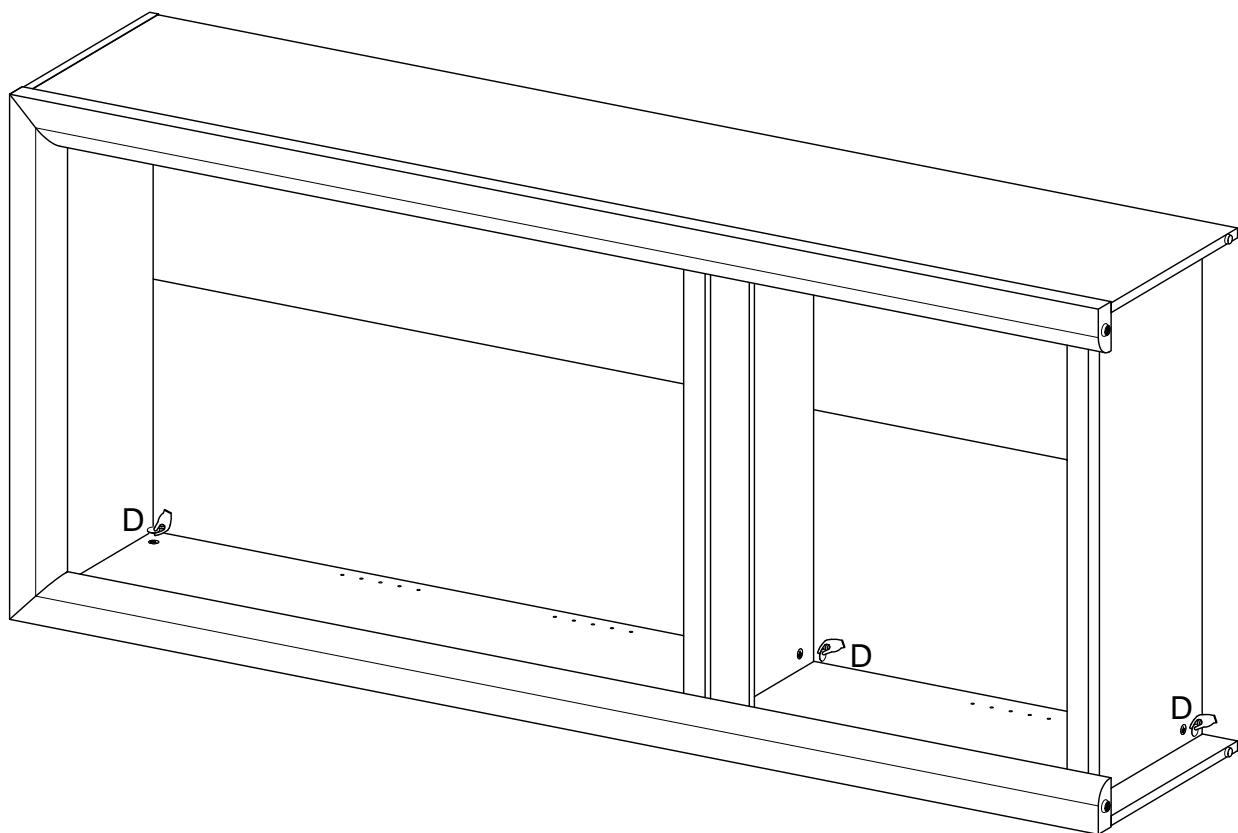


Step 15

Attach the Bracket (M) to the Top Panel (1) using the (N) screws.

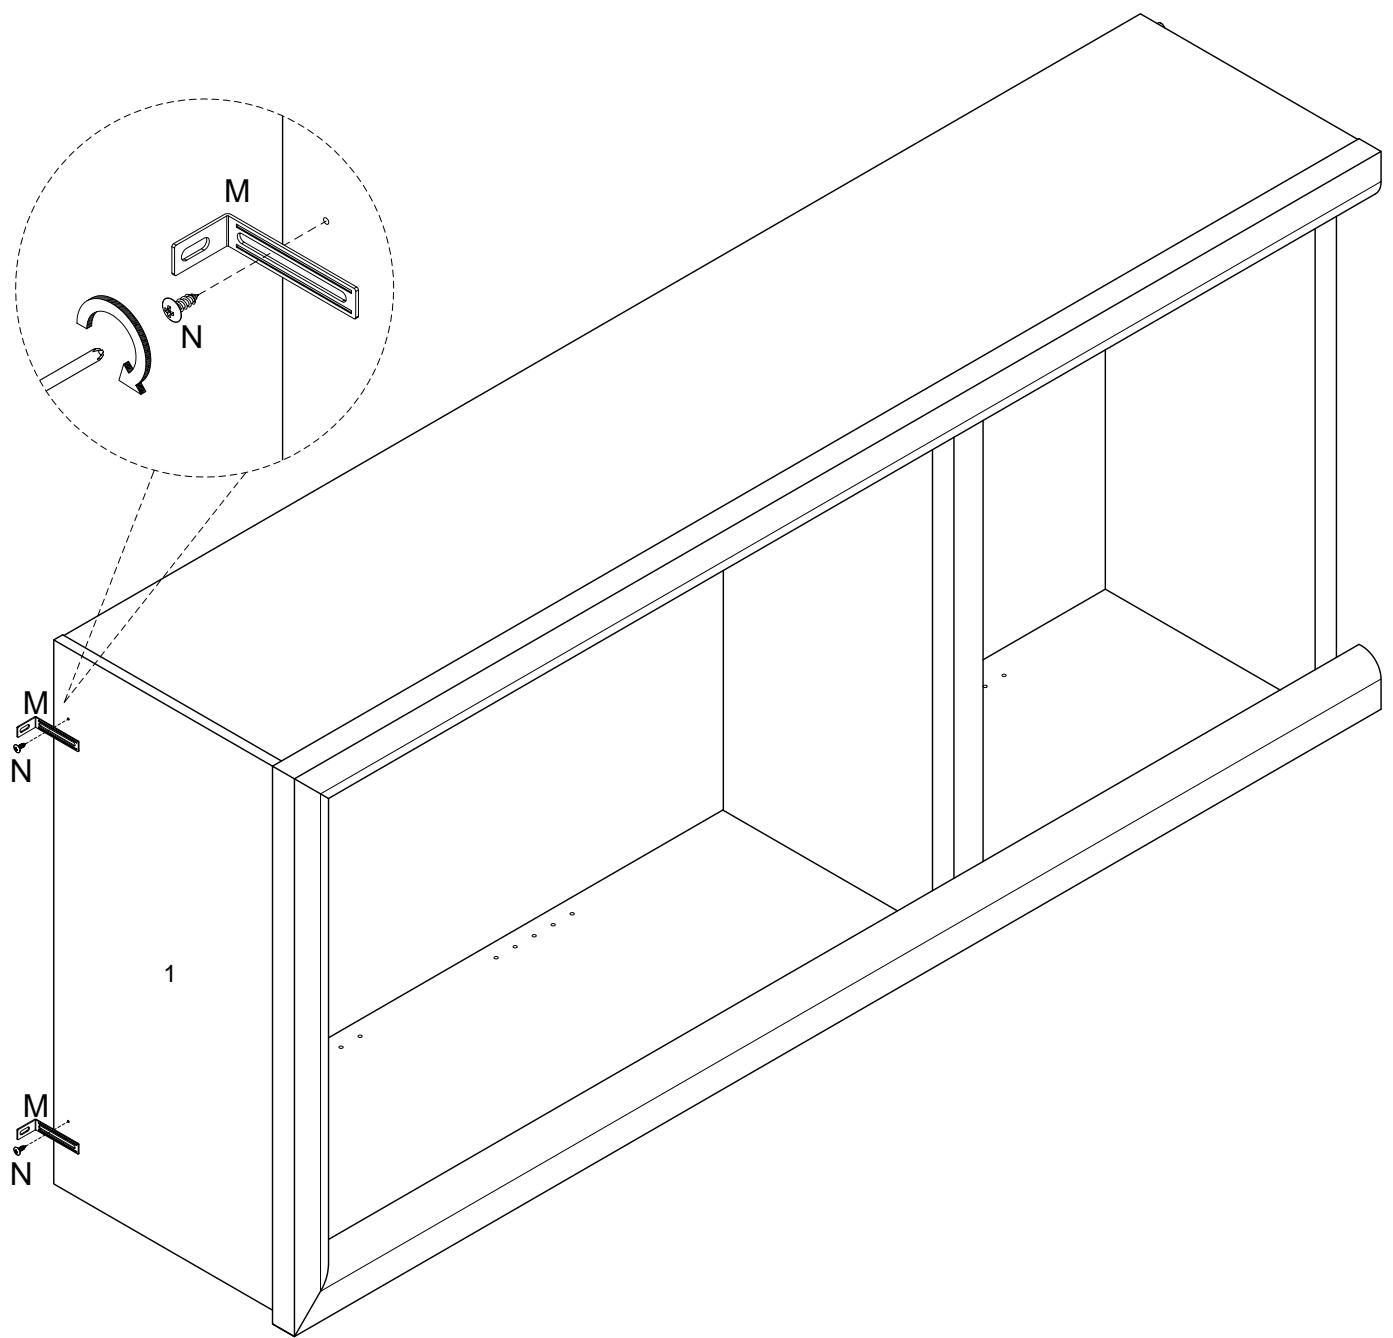


Step 16

Evenly space the plastic wedges (J) in between the Back Panel (7) and the frame. Secure with the (K) screws.

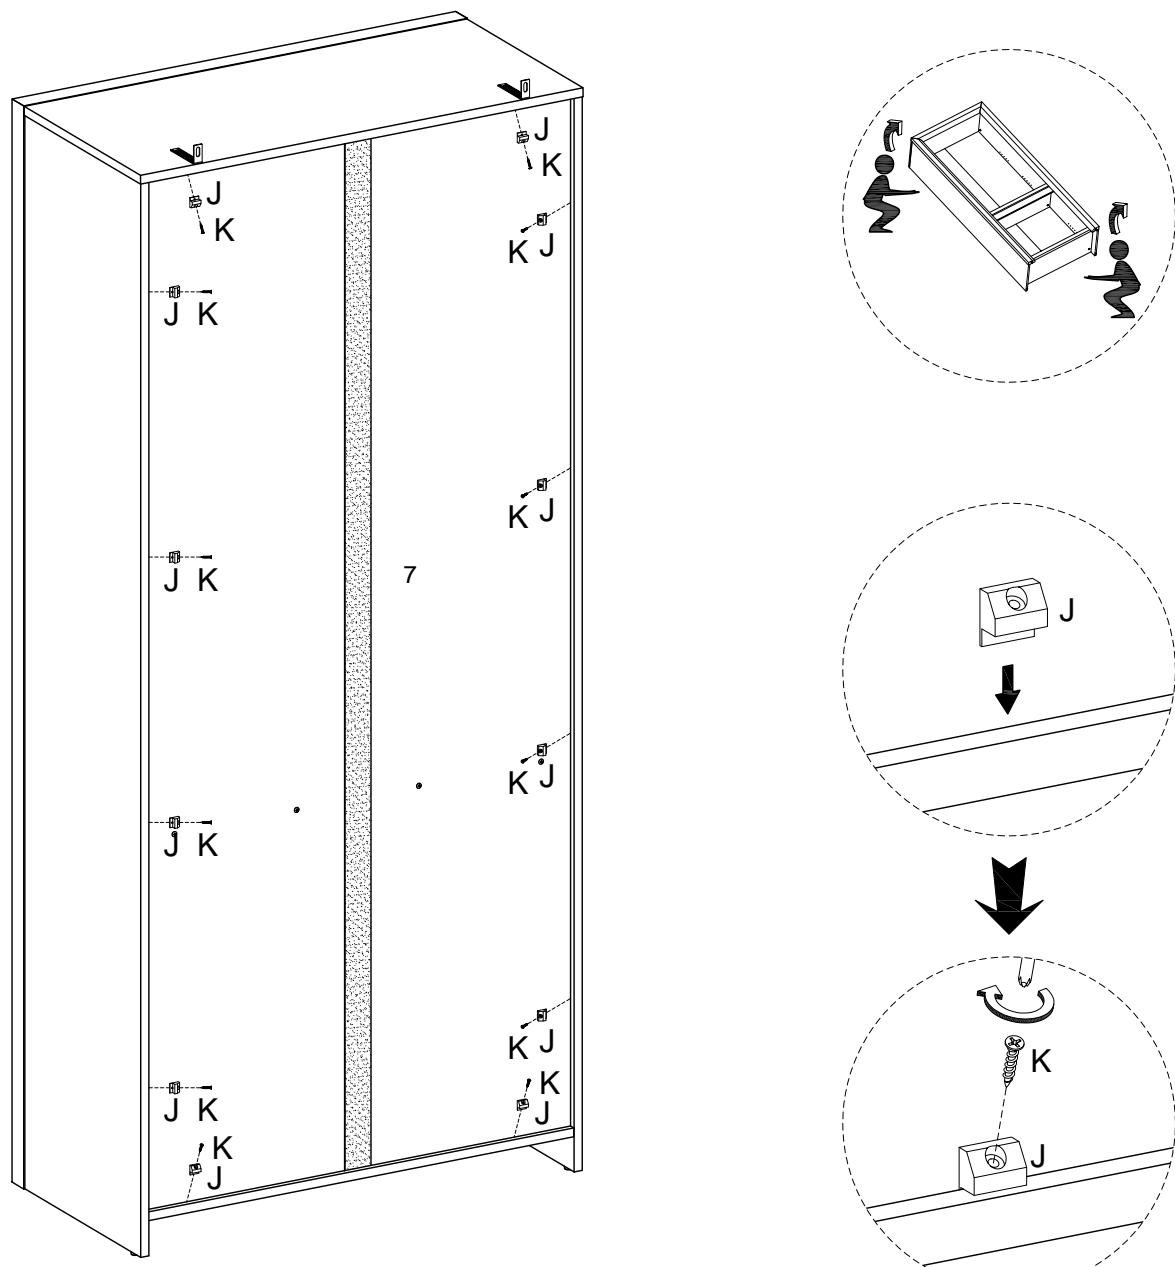


Step 17

Insert shelf support pins (L), then slide in the Adjustable Shelves (8) and the Lower active layer board (11) ensuring the notch in the shelf fits to the shelf support pin (L).

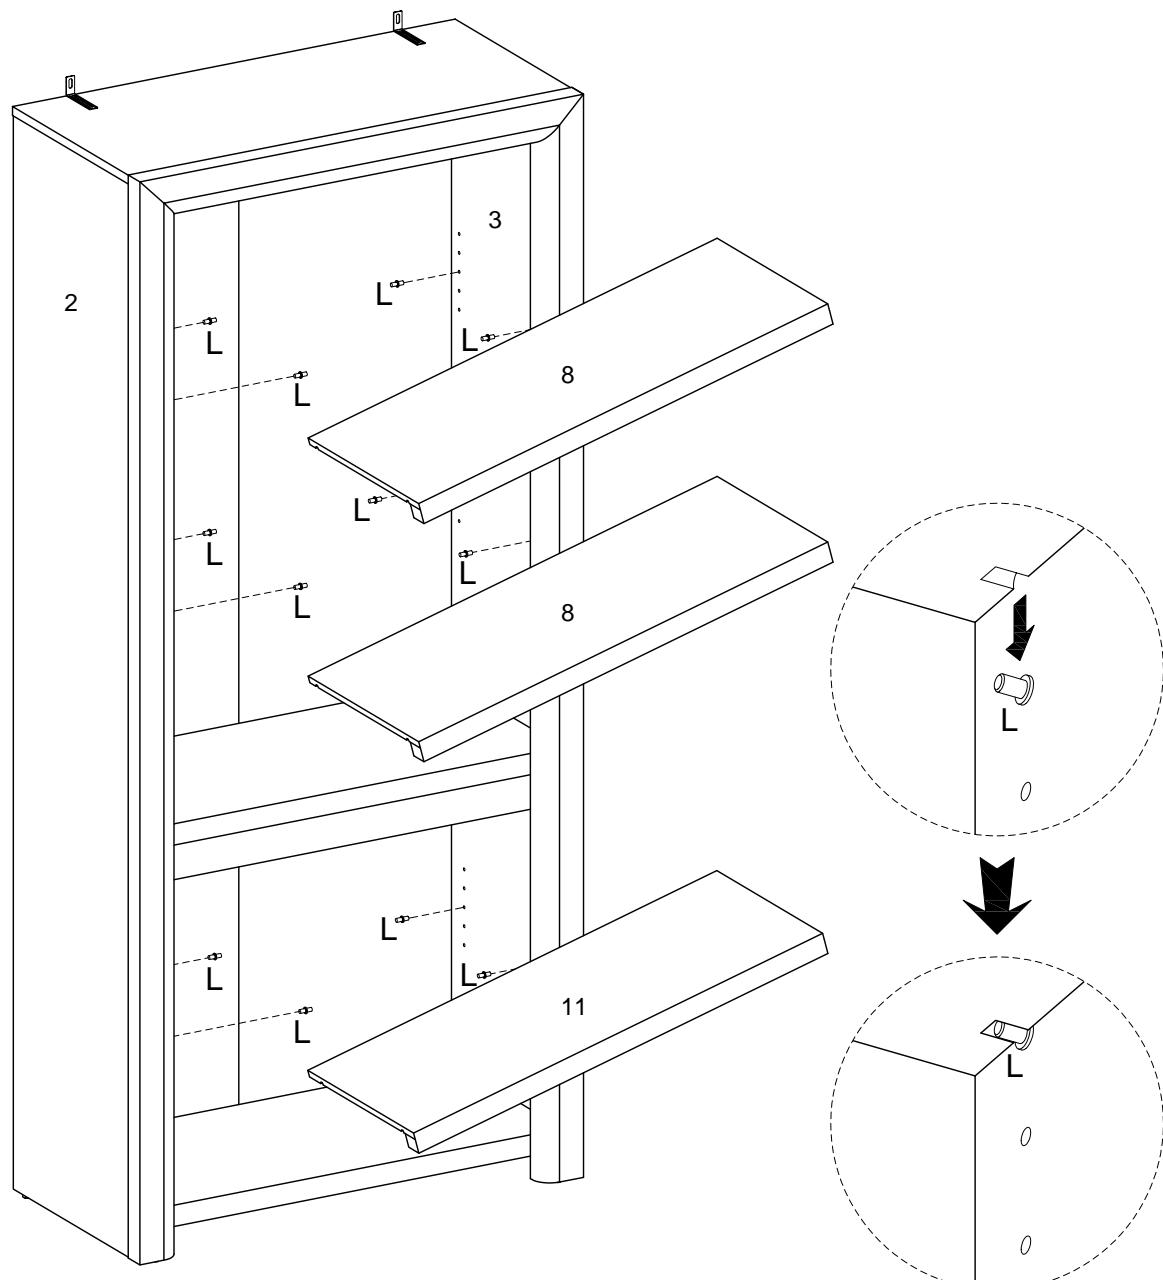


Step 18

Using the (U) screws, secure two Door Hinge Pads (15) to each side of the bookcase on the Left Side Panel (2) and the Right Side Panel (3).

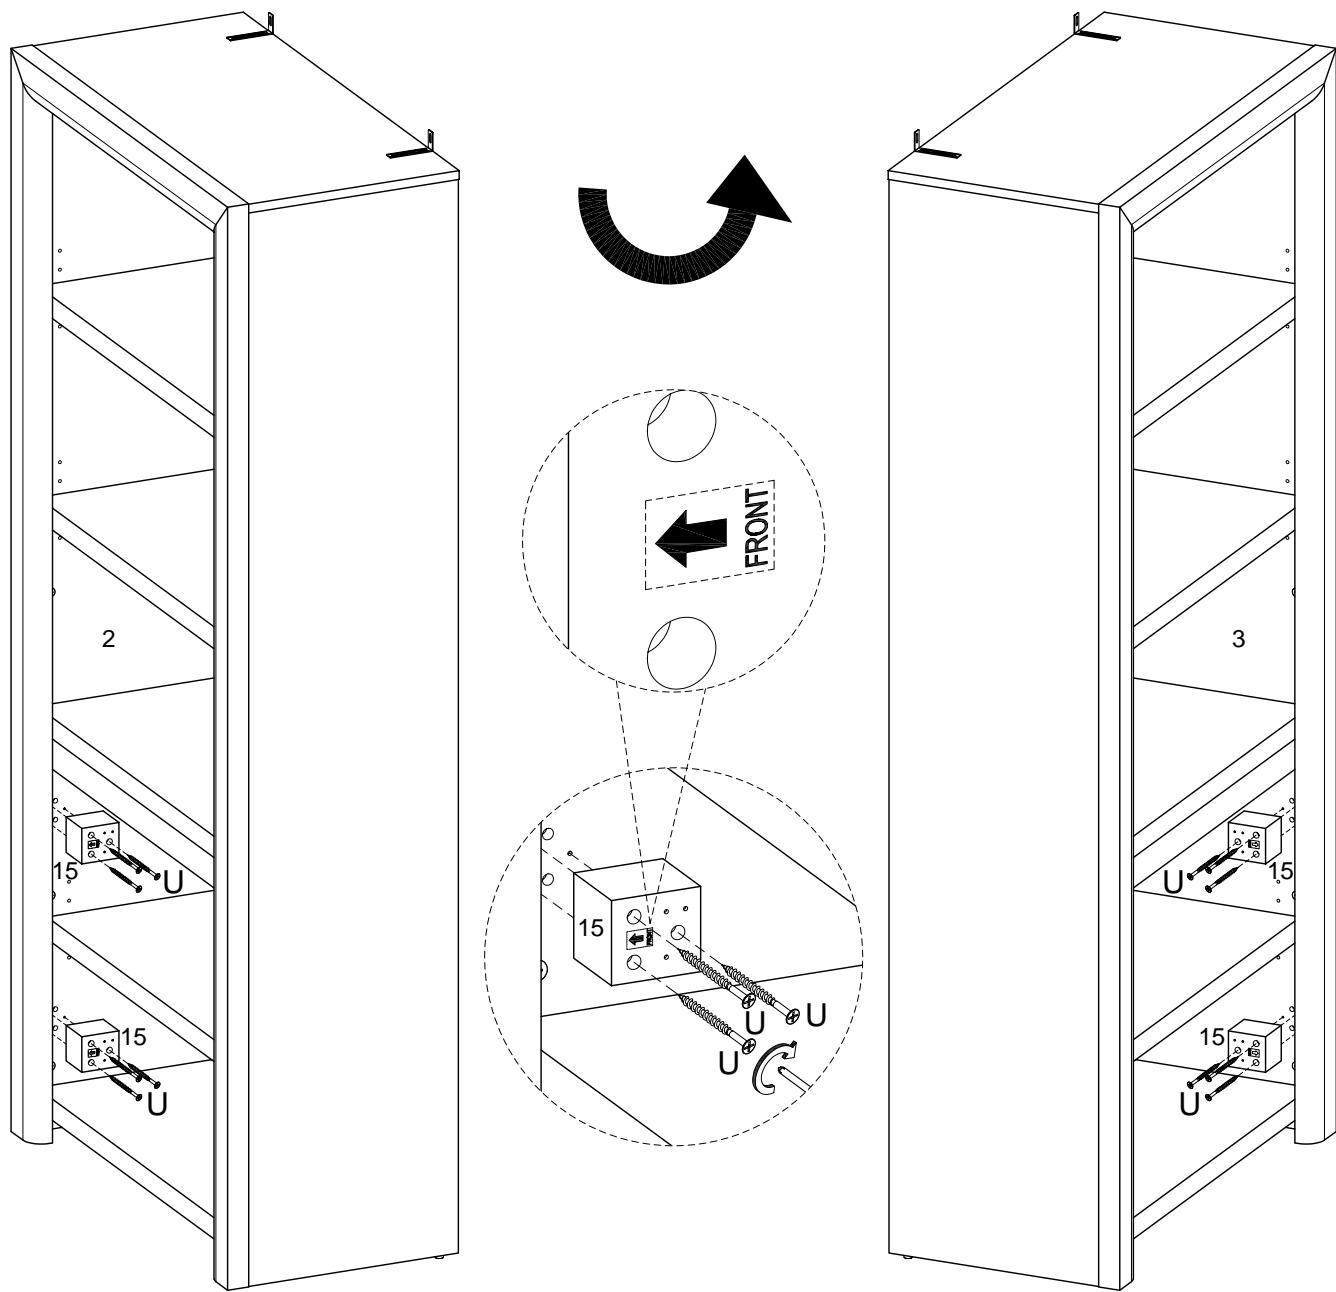

Step 19

Secure hinges (R) to the Left Door Panel (13) and the Right Door Panel (14) using the (T) screws.

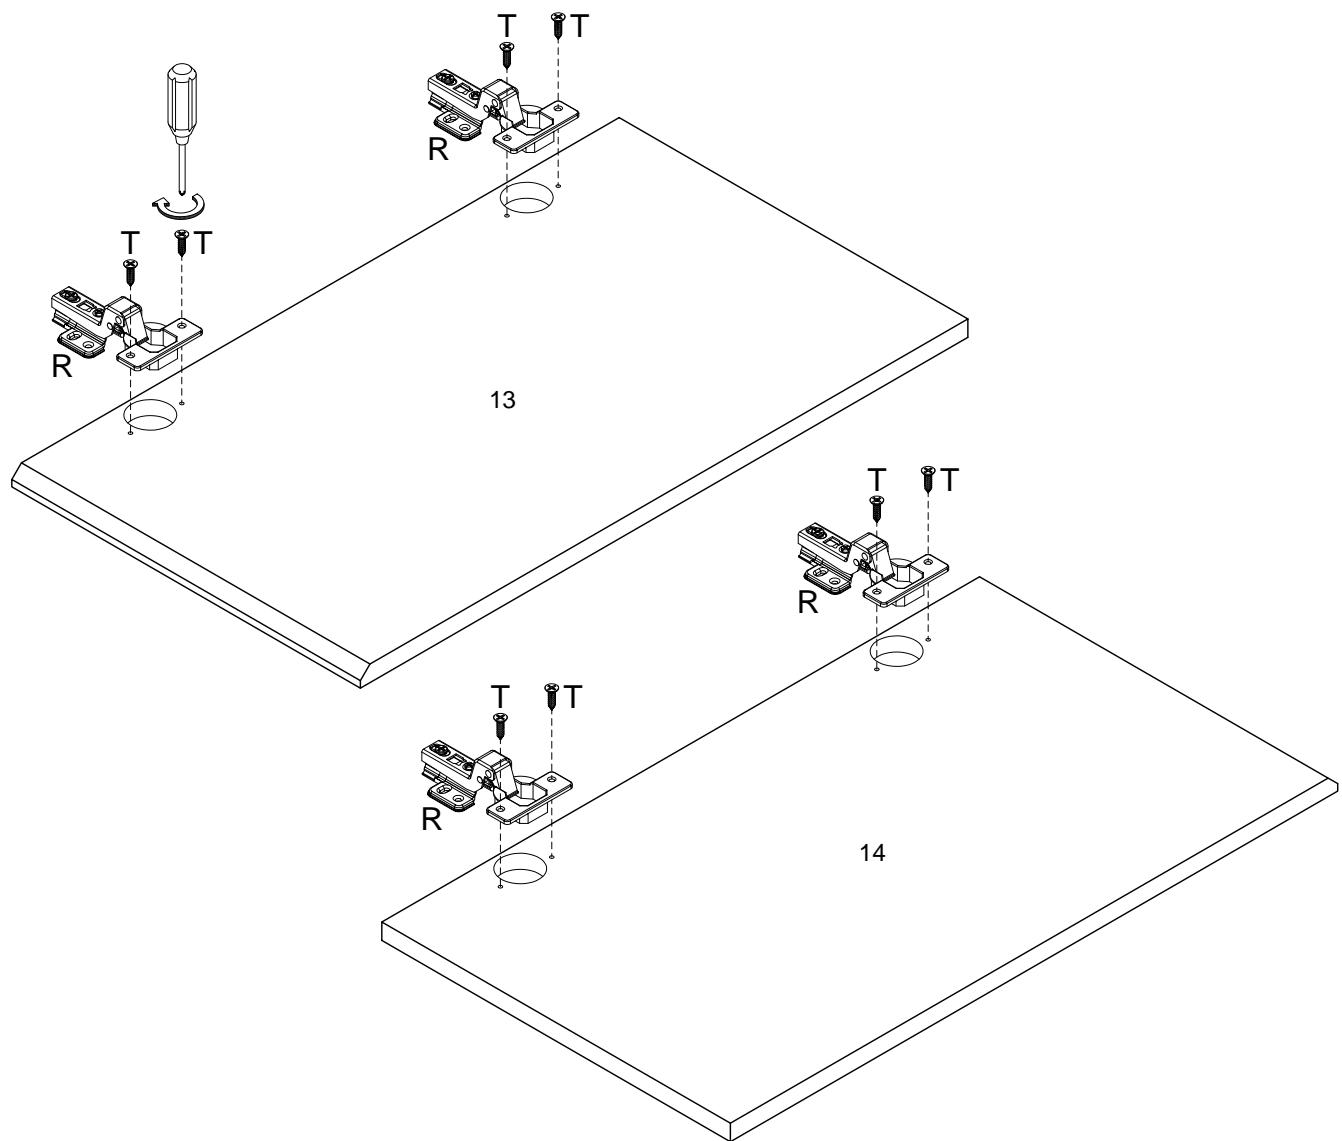


Step 20

Connect hinges on the Left Door Panel (13) to the Door Hinge Pads (15) on the Left Side Panel (2) using the (T) screws.




Tip


Adjusting The Cabinet Doors

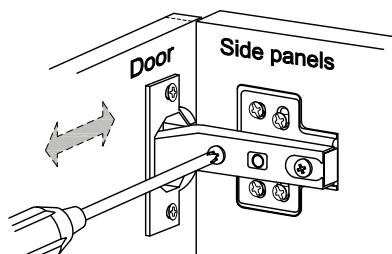



Adjust horizontal width with this screw.

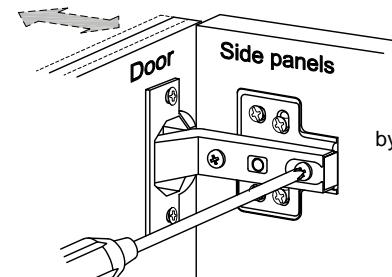

Adjust depth position by loosening the hinge arm mounting screw.

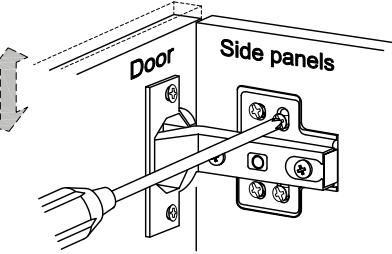


Adjust vertical height via the screws in the mounting plate.

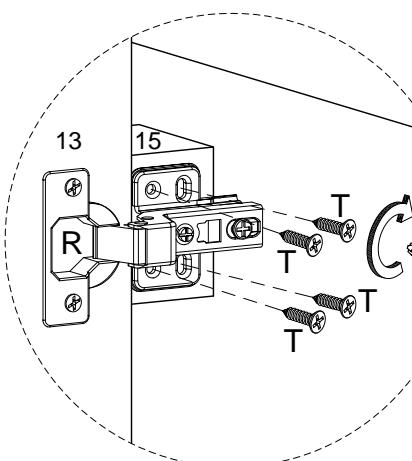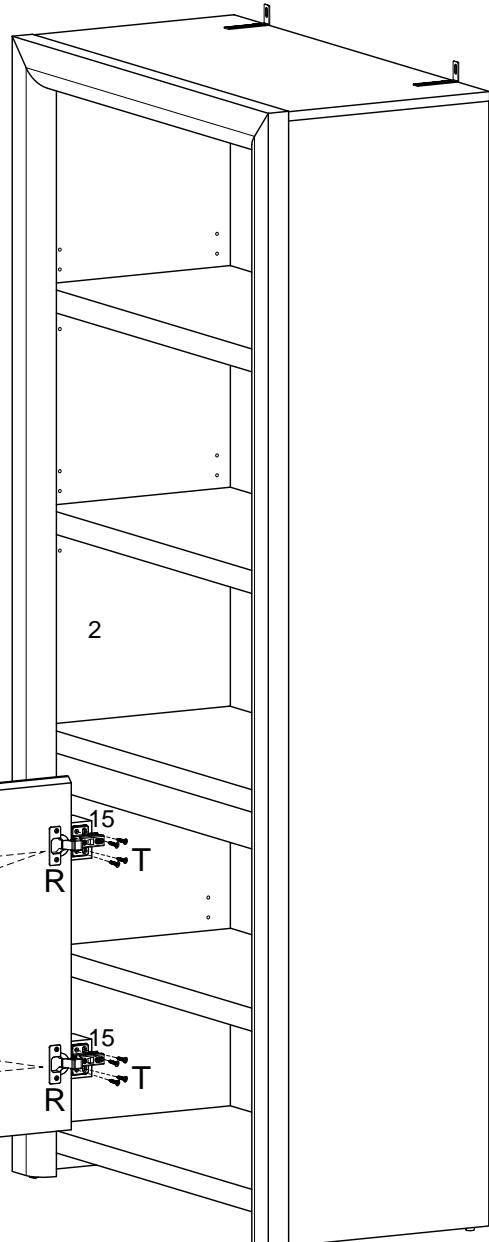


Step 21

Connect hinges on the Right Door Panel (14) to the Door Hinge Pads (15) on the Right Side Panel (3) using the (T) screws.

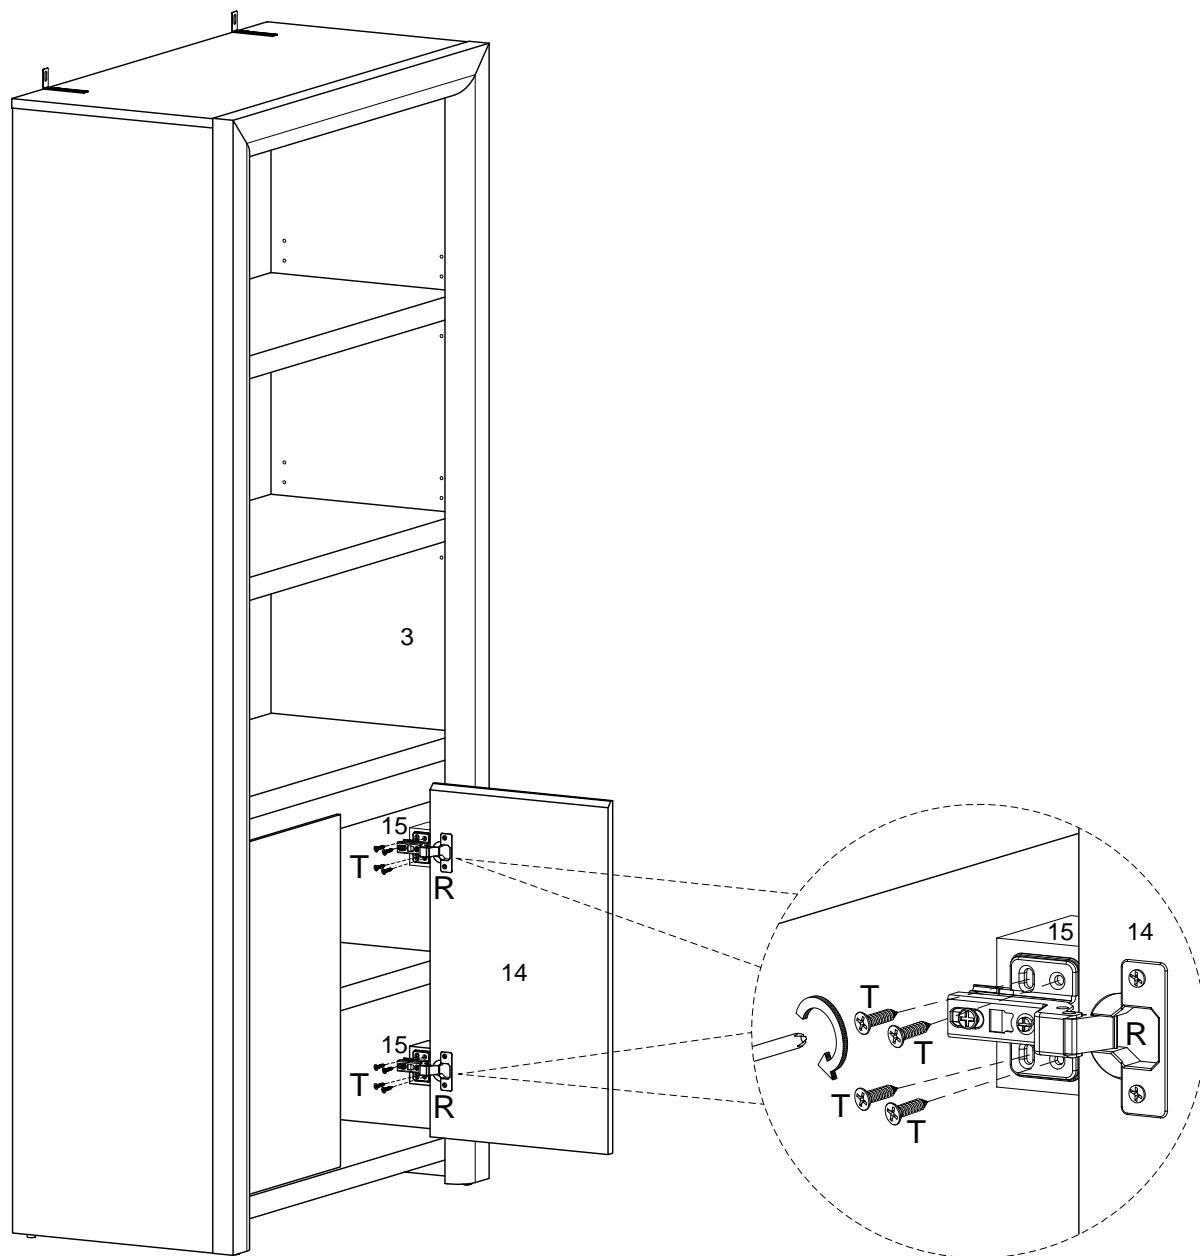


Step 22

Stick the rubber pads (S) to the Front Windshield (10).

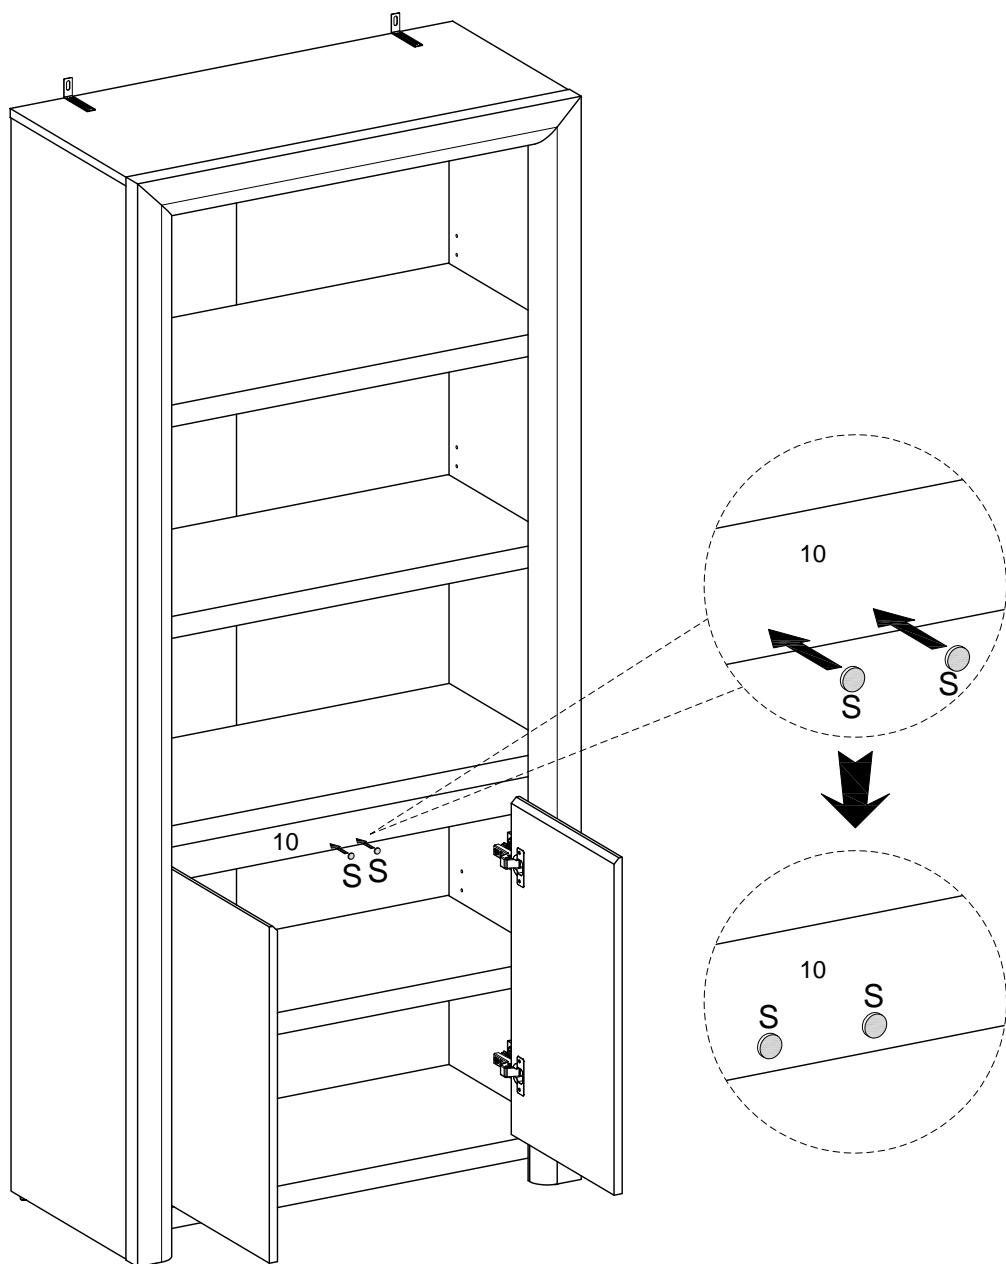


Step 23

Adjust the feet on the bottom of your unit to ensure it sits level.

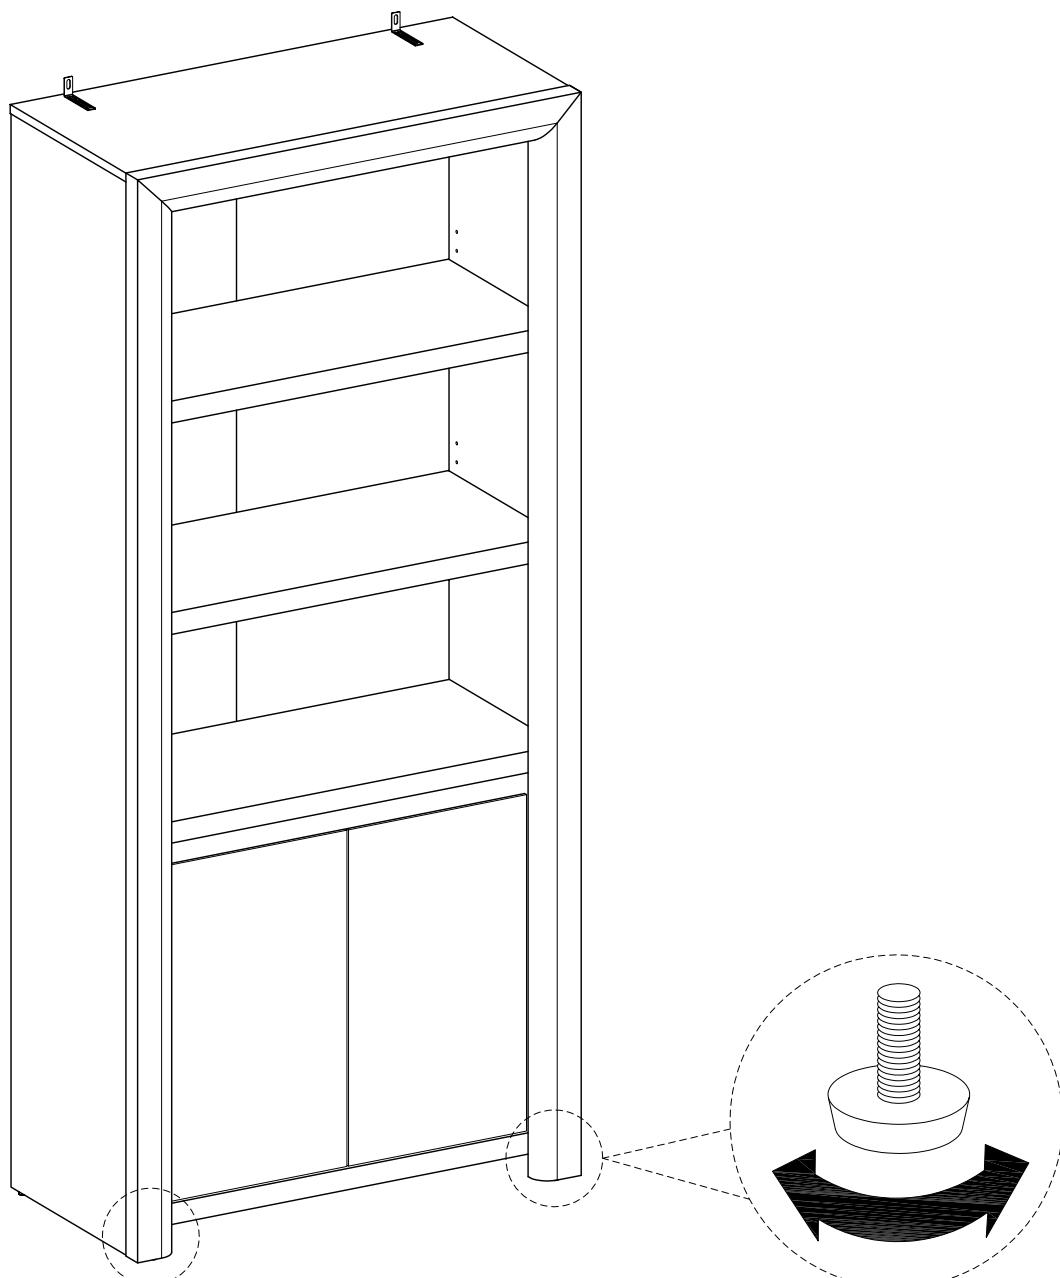

Step 24


Secure your unit to the wall using the (P) screw, the Bracket (M), and the (Q) wall anchor.

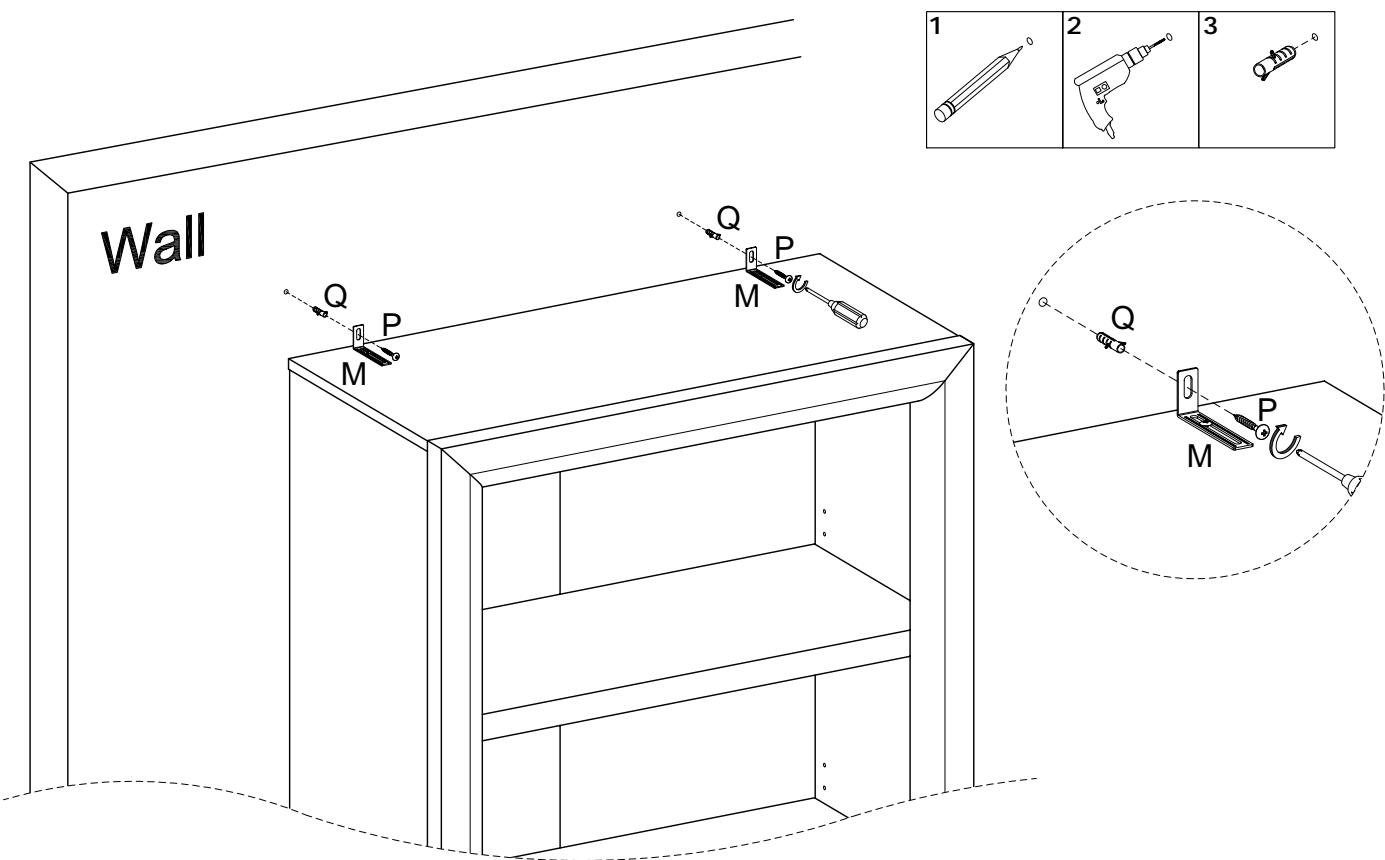

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

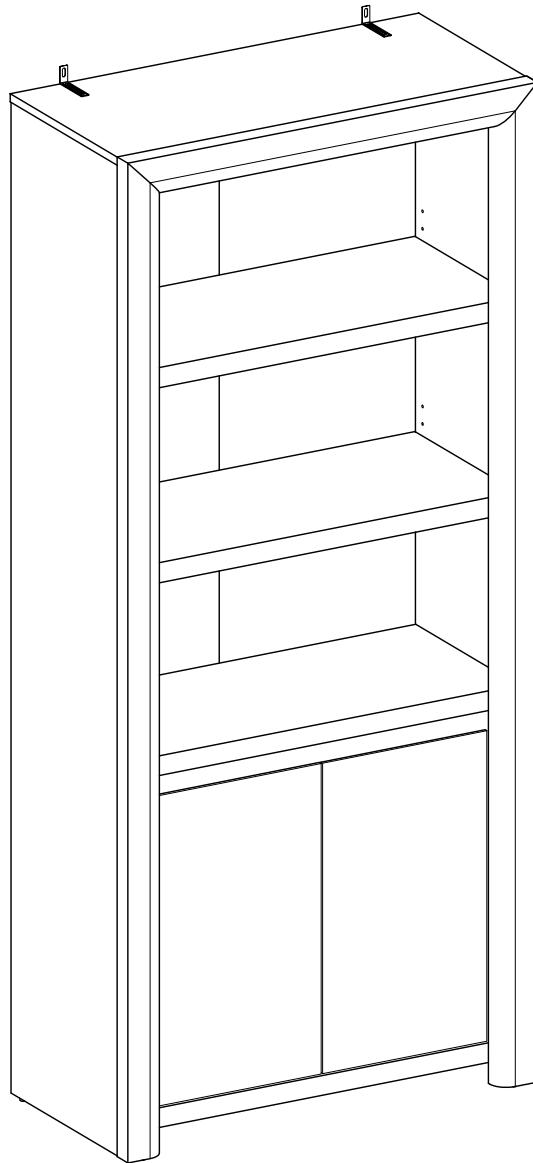

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

