

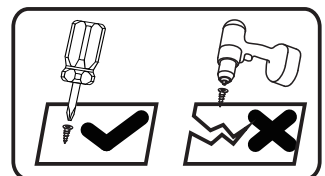
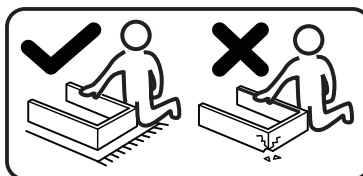
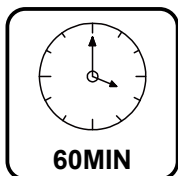


## SRN-TOMO 3011

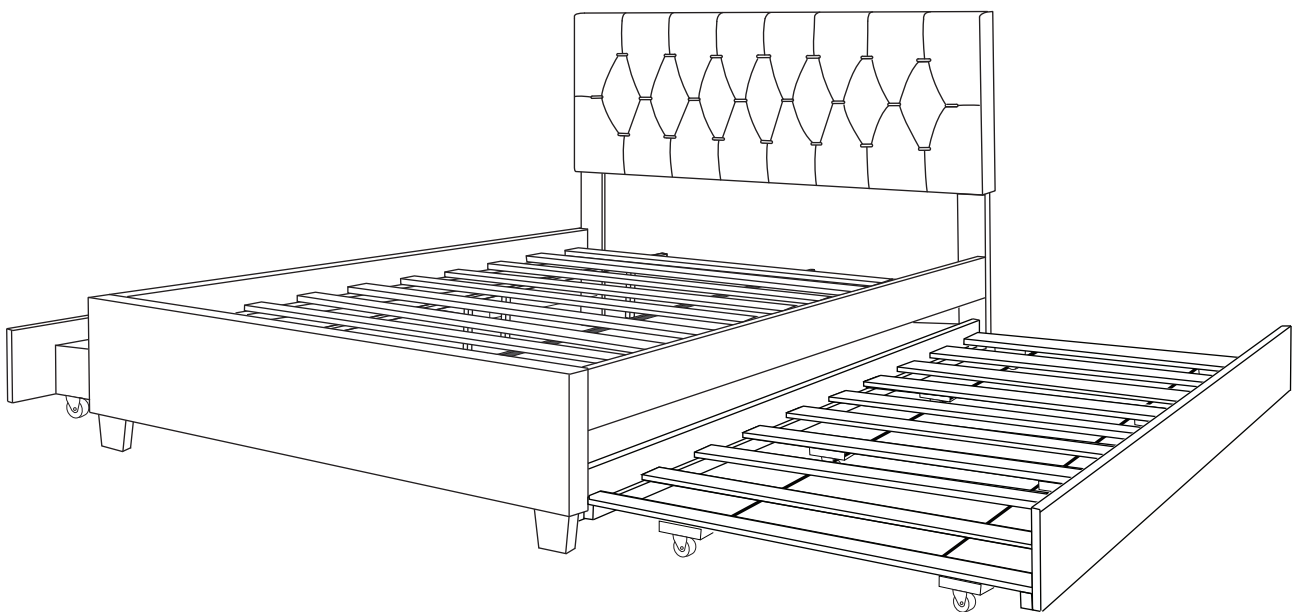


### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Please confirm that all components are present before beginning assembly.
- For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Please assemble the furniture by 2 persons or more.
- Do not confuse similar screws.
- Do not tighten bolts fully until all parts are connected!
- Please periodically check all fitting and re-tighten as necessary.

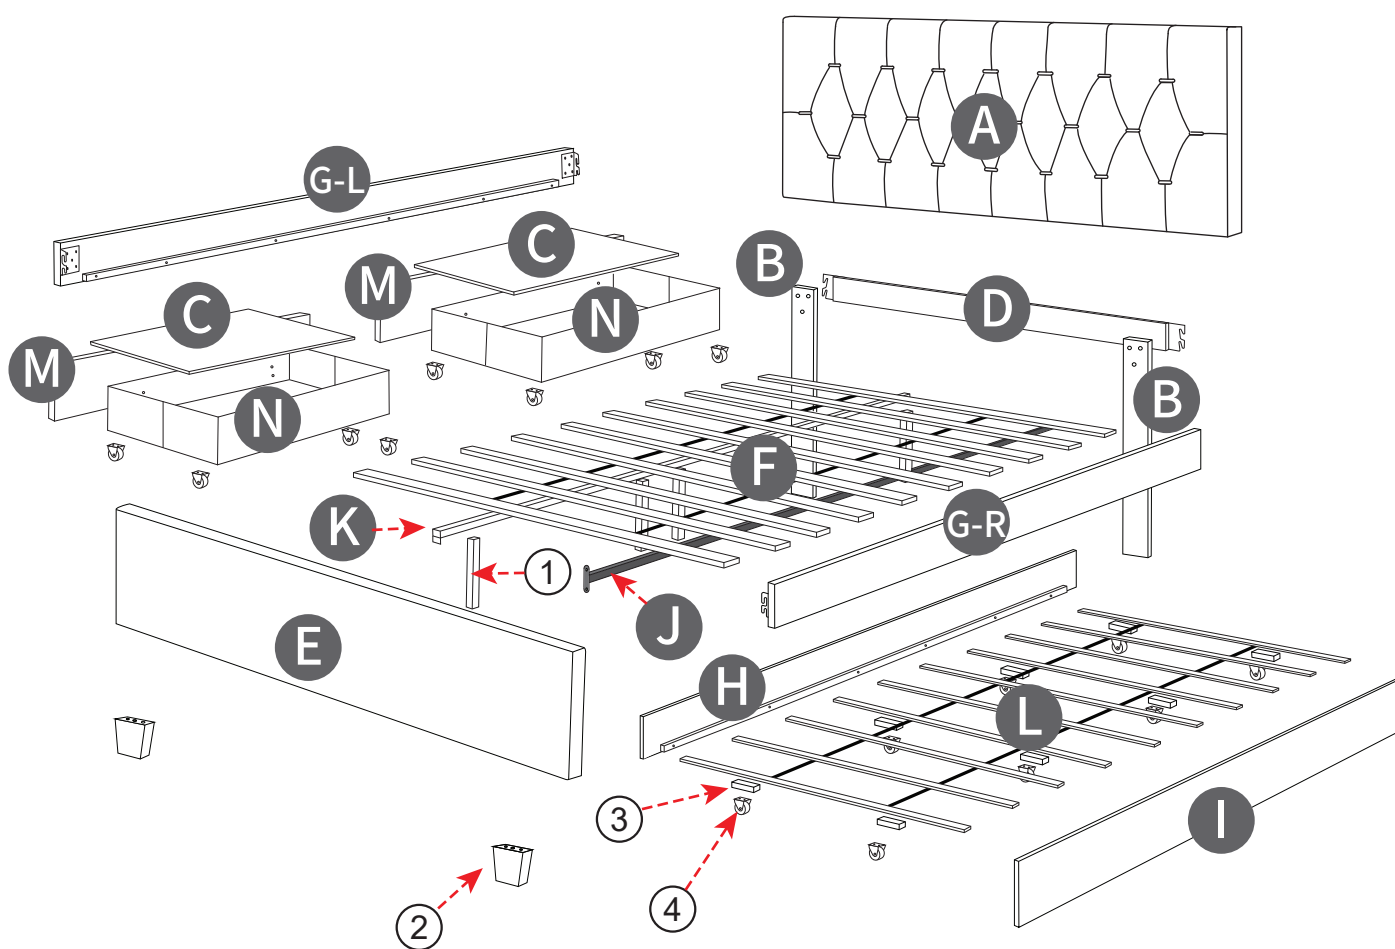


Bed Parts are shipped inside a compartment  
in the back of the headboard.

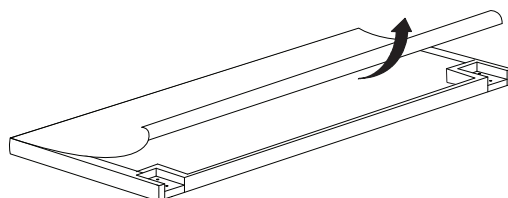


# PACKING DETAILS: TOTAL 2 BOXES

PARTS









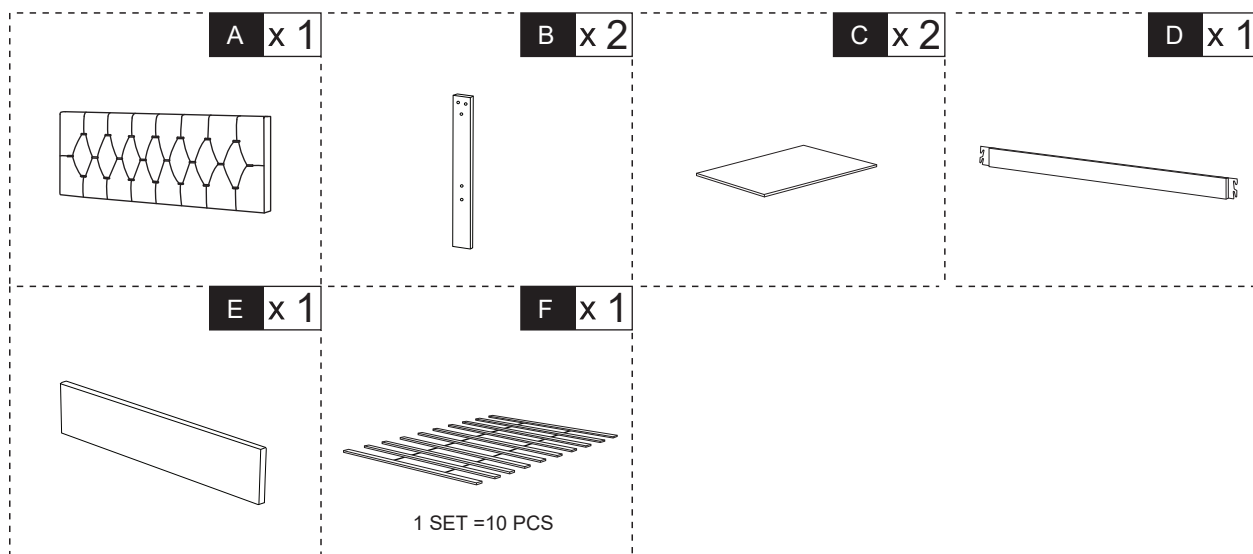

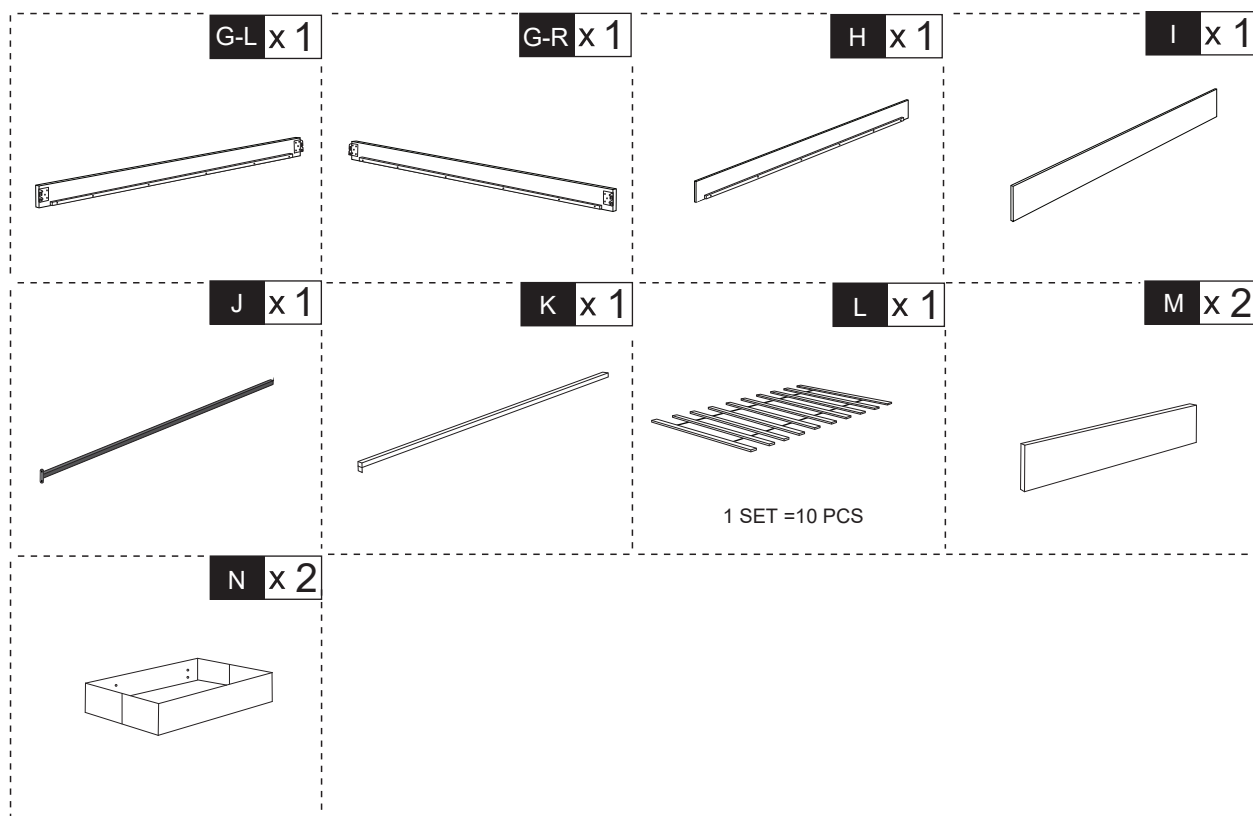














## BOX -1/2



## BOX -2/2



# BOX -1/2

<p><b>① x 4</b></p> 	<p><b>② x 2</b></p> 	<p><b>③ x 8</b></p> 	<p><b>④ x16</b></p> 
<p><b>⑤ x12</b> M8 x 25 mm</p> 	<p><b>⑥ x 4</b> M8 x 70 mm</p> 	<p><b>⑦ x 2</b> M6 x 20 mm</p> 	<p><b>⑧ x 6</b> M6 x 45 mm</p> 
<p><b>⑨ x 2</b> M6 x 40 mm</p> 	<p><b>⑩ x 2</b> M6 x 70 mm</p> 	<p><b>⑪ x 9</b> M6</p> 	<p><b>⑫ x 4</b> M8</p> 
<p><b>⑬ x16</b> M4 x 16 mm</p> 	<p><b>⑭ x10</b> M4 x 20 mm</p> 	<p><b>⑮ x40</b> M4 x 30 mm</p> 	<p><b>⑯ x16</b> M4 x 32 mm</p> 
<p><b>⑰ x 1</b> M4</p> 	<p><b>⑱ x 1</b> M5</p> 	<p><b>⑲ x 4</b> M8</p> 	<p><b>⑳ x 1</b></p> 
<p><b>㉑ x 6</b></p> 	<p><b>㉒ x 4</b></p> 	<p><b>㉓ x16</b> M4 x 12 mm</p> 	<p><b>㉔ x16</b> M4</p> 
<p><b>㉕ x 8</b> M6 x 15 mm</p> 			

Remarks: Extra hardware provided



M8

19 x 4



M6 x 70 mm

10 x 2



M6 x 45 mm

8 x 6




M6

11 x 6





2 x 2


## STEP 1.1

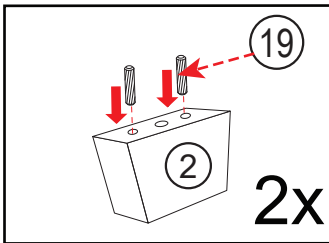


## STEP 1.2

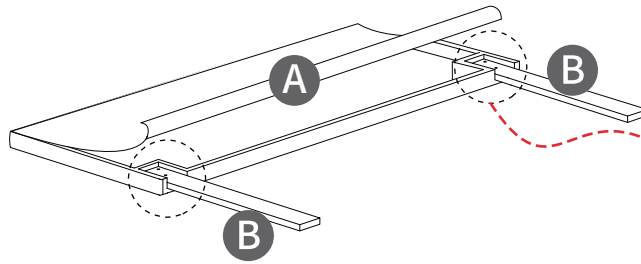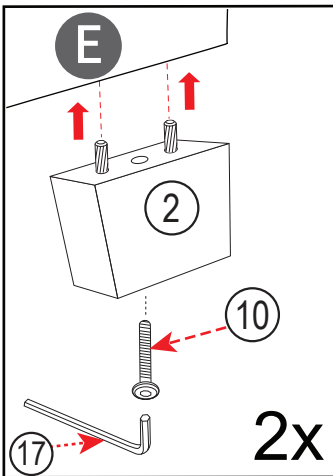

## STEP 1.3

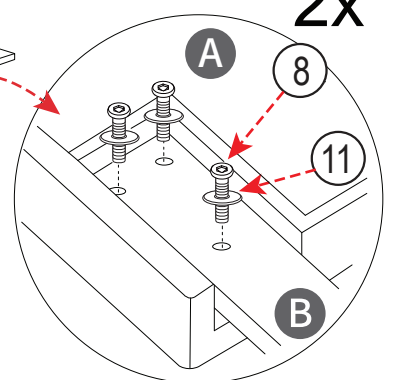


Make sure the position are facing the same direction

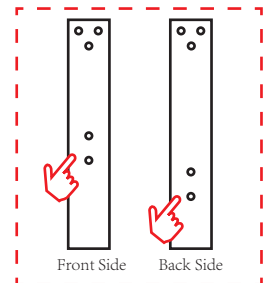




M8 x 25 mm

⑤ x 4

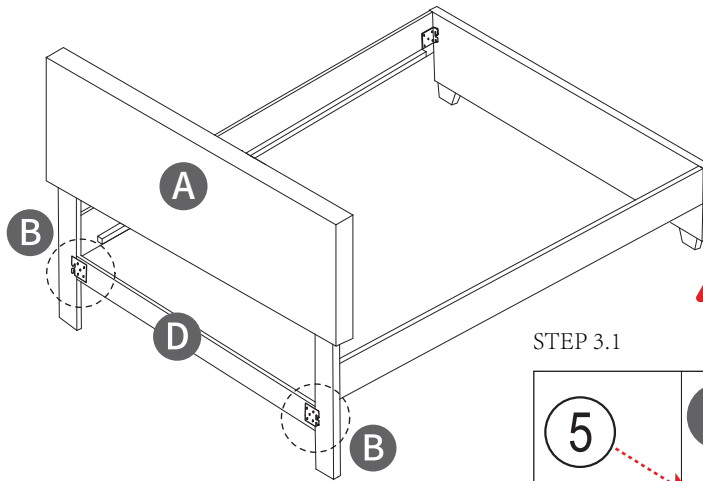


Do not fully tighten screws before completing step 3.2


STEP 3.1

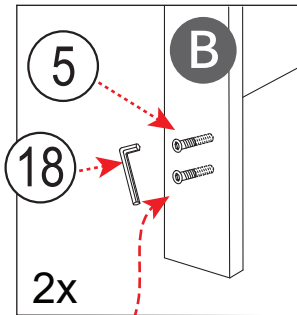


2x

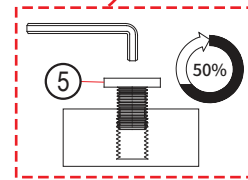

STEP 3.2

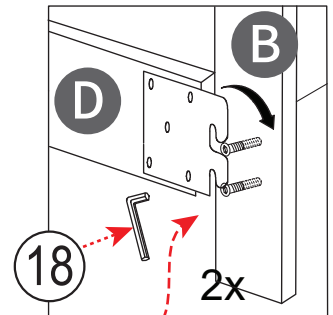

2x

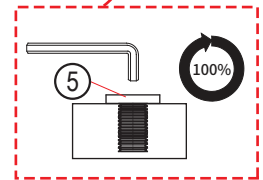

M6 x 40 mm



M6




M6 x 20 mm

⑨ x 1

⑪ x 3



⑦ x 2

Option 2

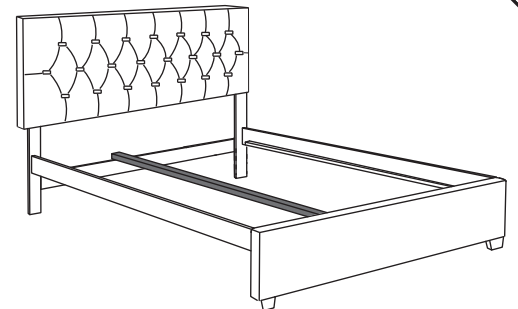

Decide the side for trundle bed &amp; drawers

Option 1

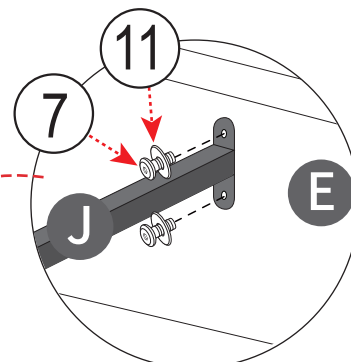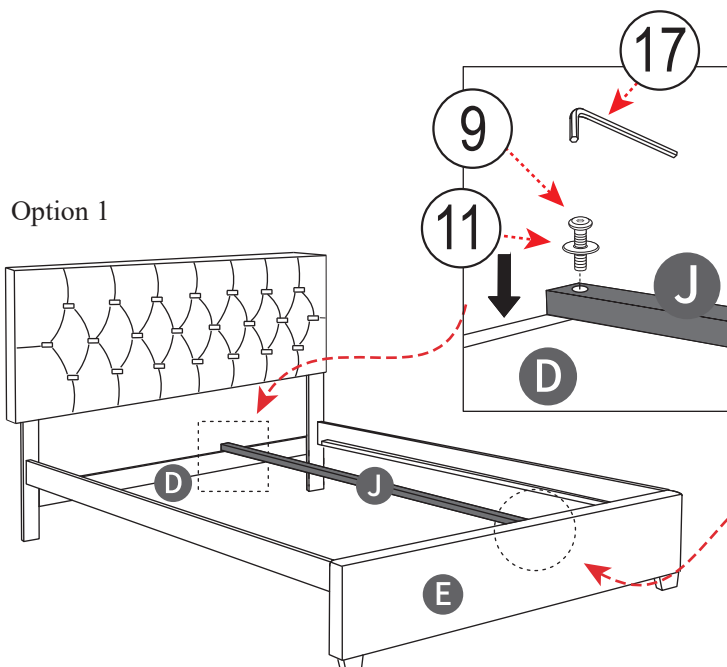



M8 x 70 mm

⑥ x 4



M8

⑫ x 4



M4 x 20 mm

⑭ x 4



⑳ x 1





M6 x 40 mm

⑨ x 1




① x 4




## STEP 5.1

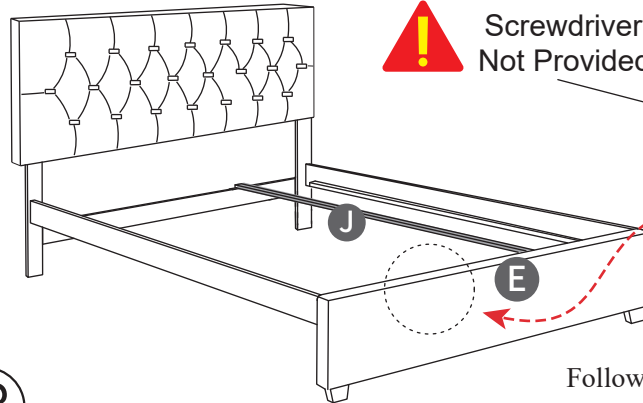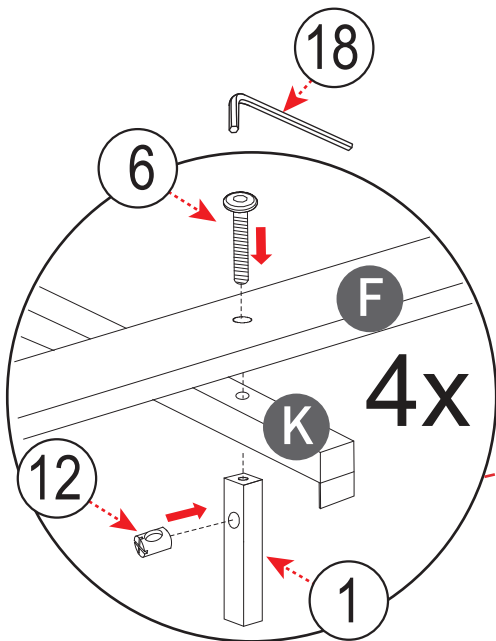
Screwdriver  
Not ProvidedFollow the marking to attach the U-Bracket  
with Screw 20mm (4PCS) at Footboard.

## STEP 5.2

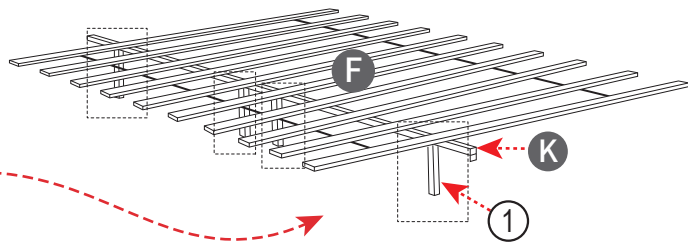

## STEP 5.3

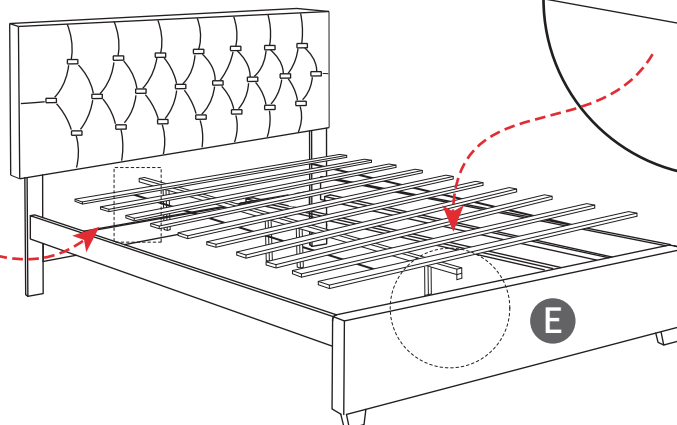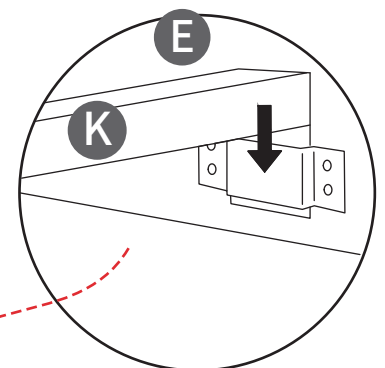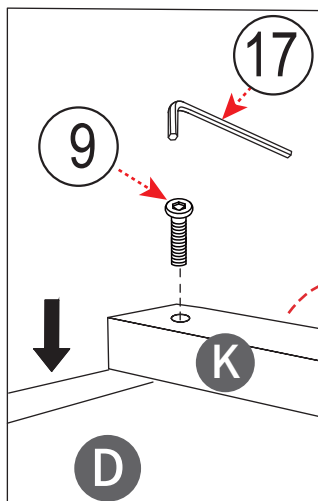





M4 x 30 mm

15 x 20

Screwdriver  
Not Provided

20x

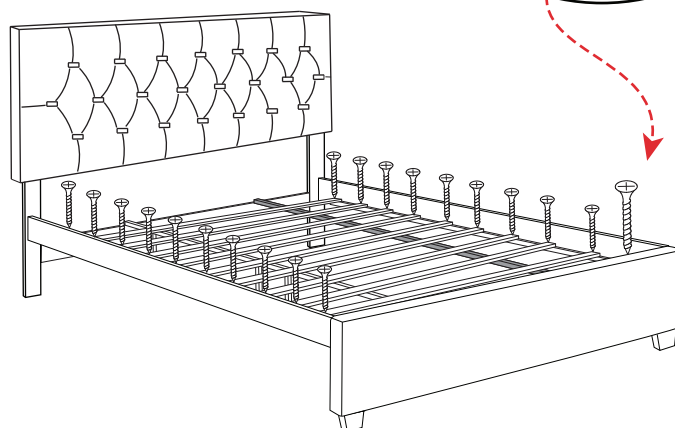
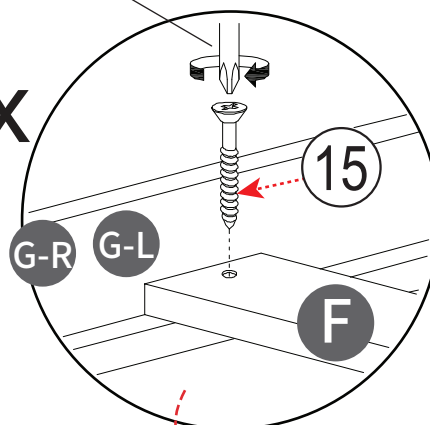


M4 x 20 mm

14 x 6




21 x 6

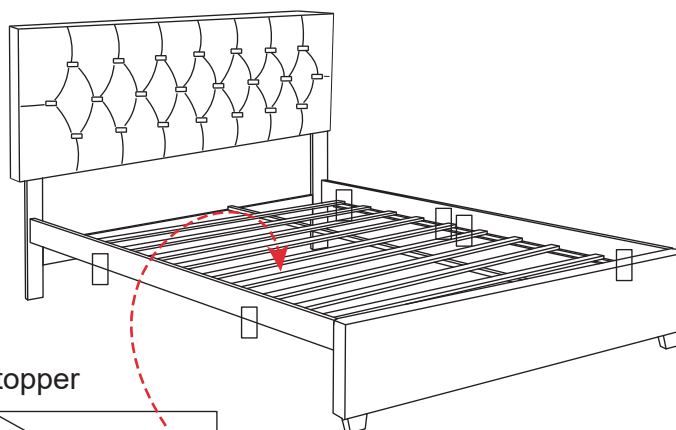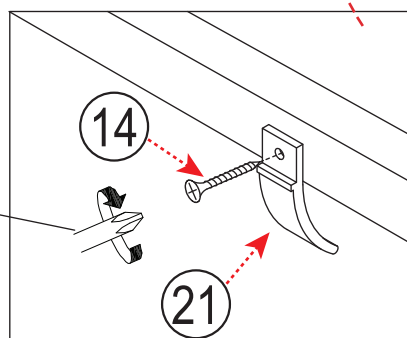
Optional:  
Add drawer stopperScrewdriver  
Not Provided

6x





M4 x 32 mm

**16** x 16


M4 x 30 mm

**15** x 20


M4 x 16 mm

**13** x 16**4** x 8**3** x 8


Fix the cube at the bottom  
of 1st, 4th, 7th, and 10th slat.

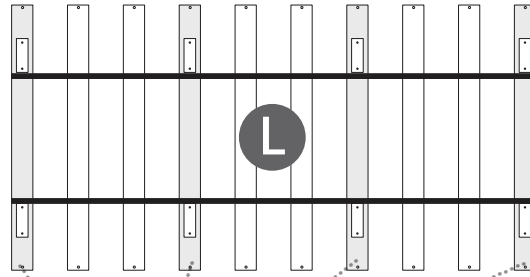

### Step 8.1


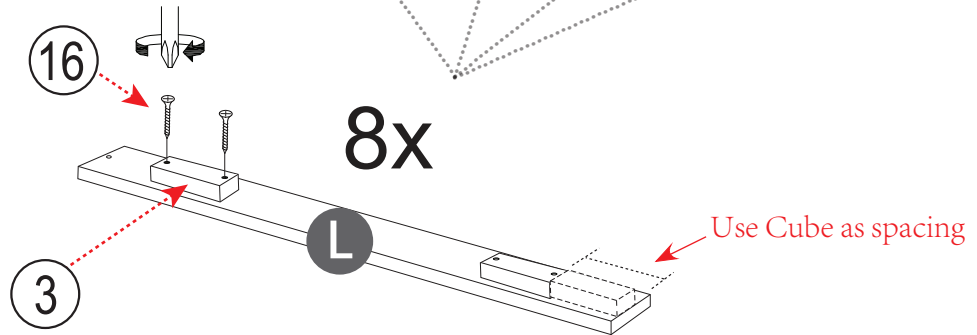


### Step 8.2

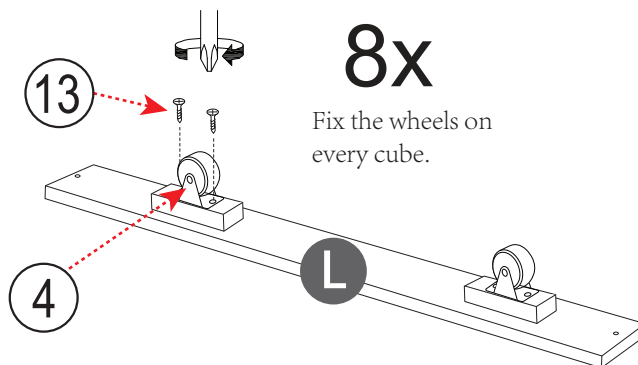

**Screwdriver  
Not Provided**

### Step 8.3

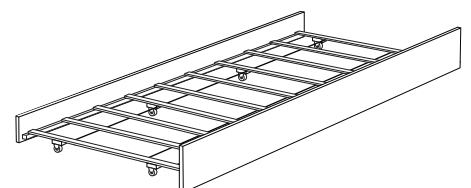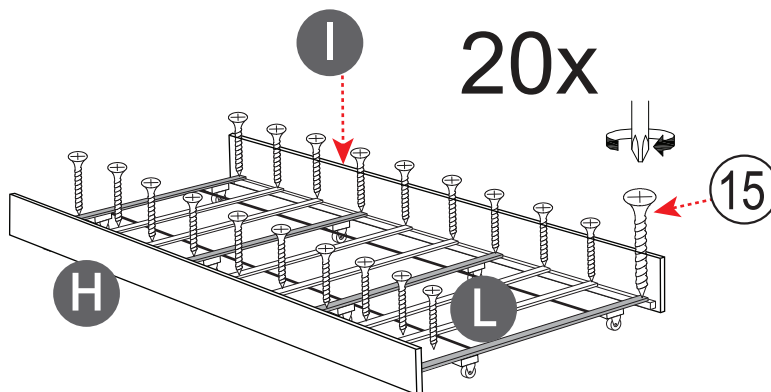

**TRUNDLE COMPLETED  
ASSEMBLY**



M4 x 12 mm

M4

M6 x 15 mm

22 x 4


23 x 16

24 x 16


25 x 8

4 x 8


Step 9.1

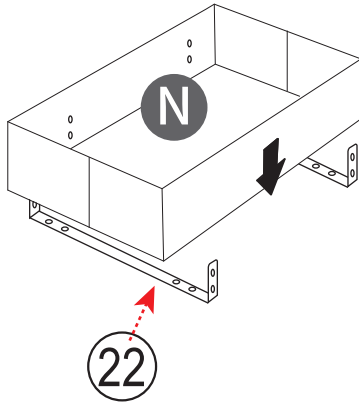


Step 9.2

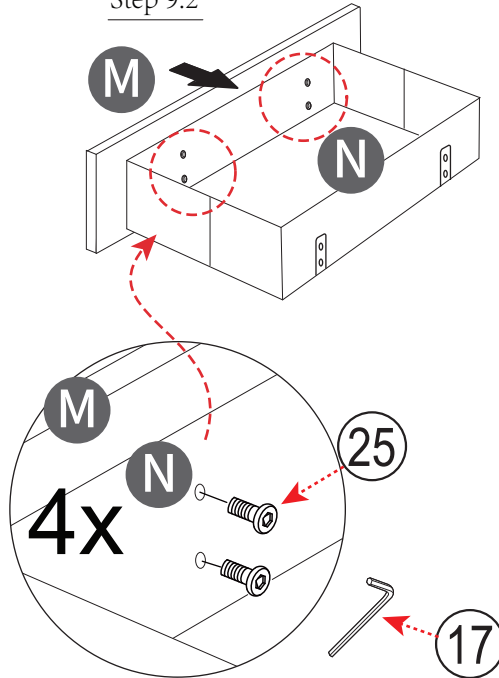


Step 9.3

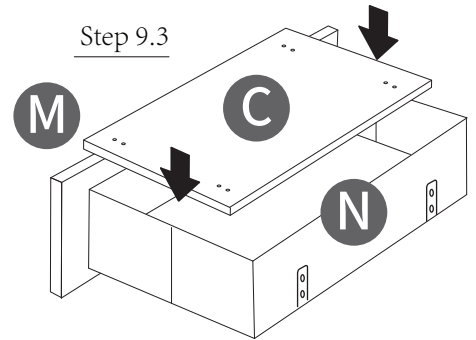

Step 9.4

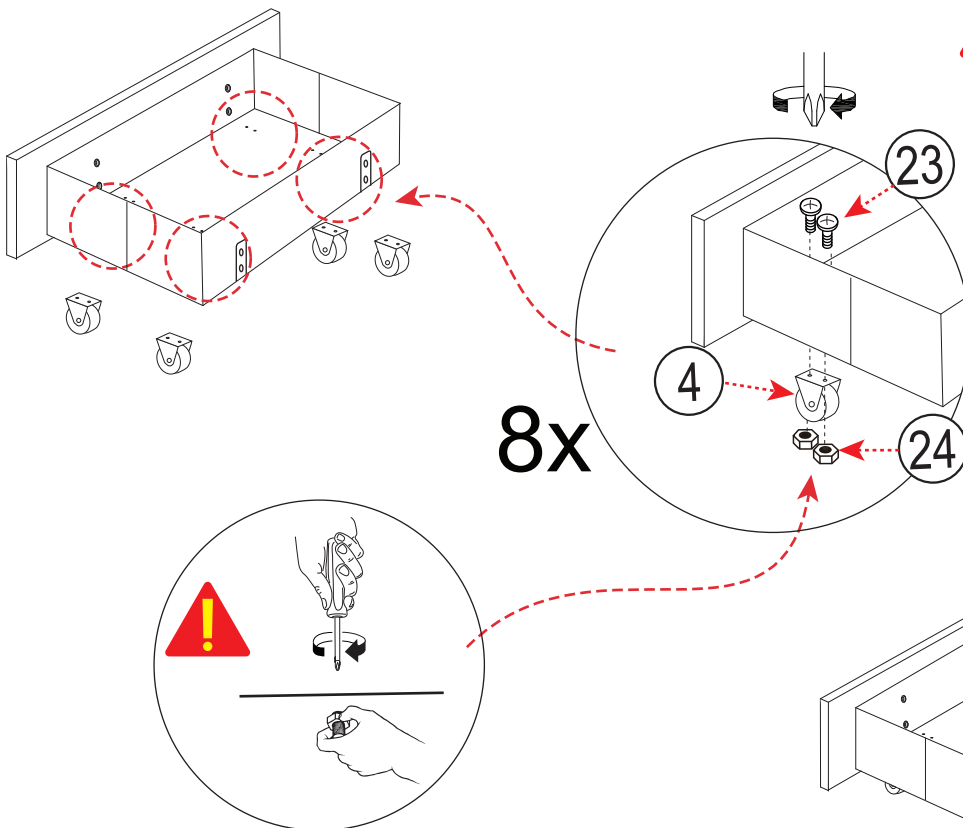Screwdriver  
Not ProvidedDRAWER COMPLETED  
ASSEMBLY

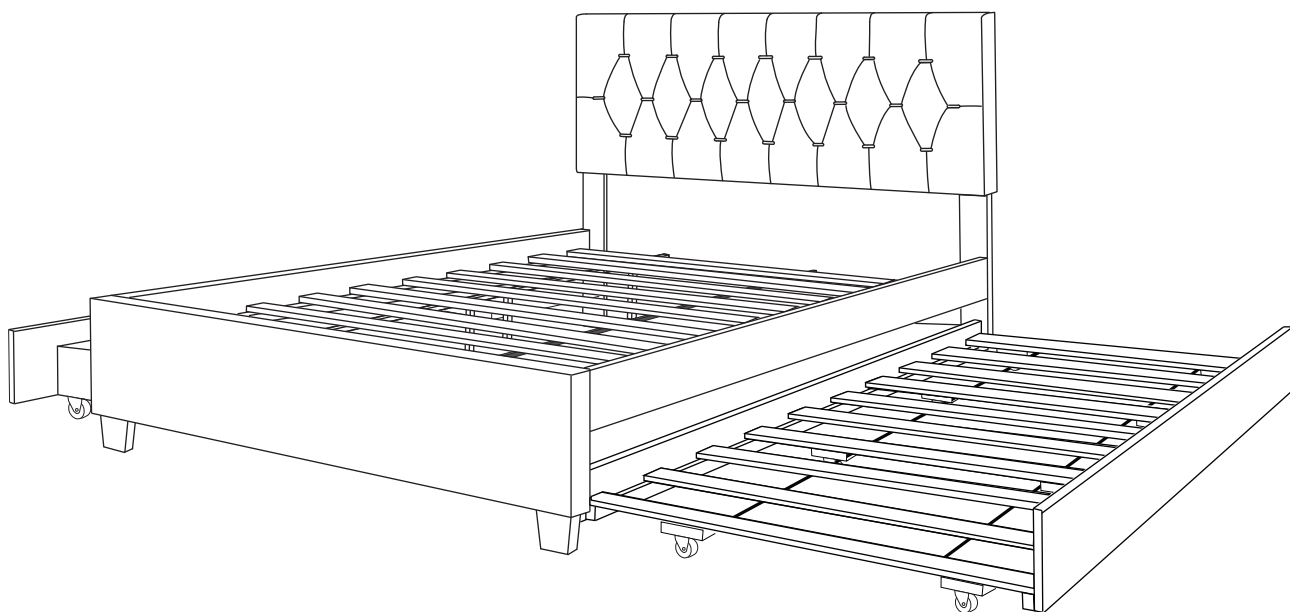

COMPLETED  
ASSEMBLY