



---

# S014

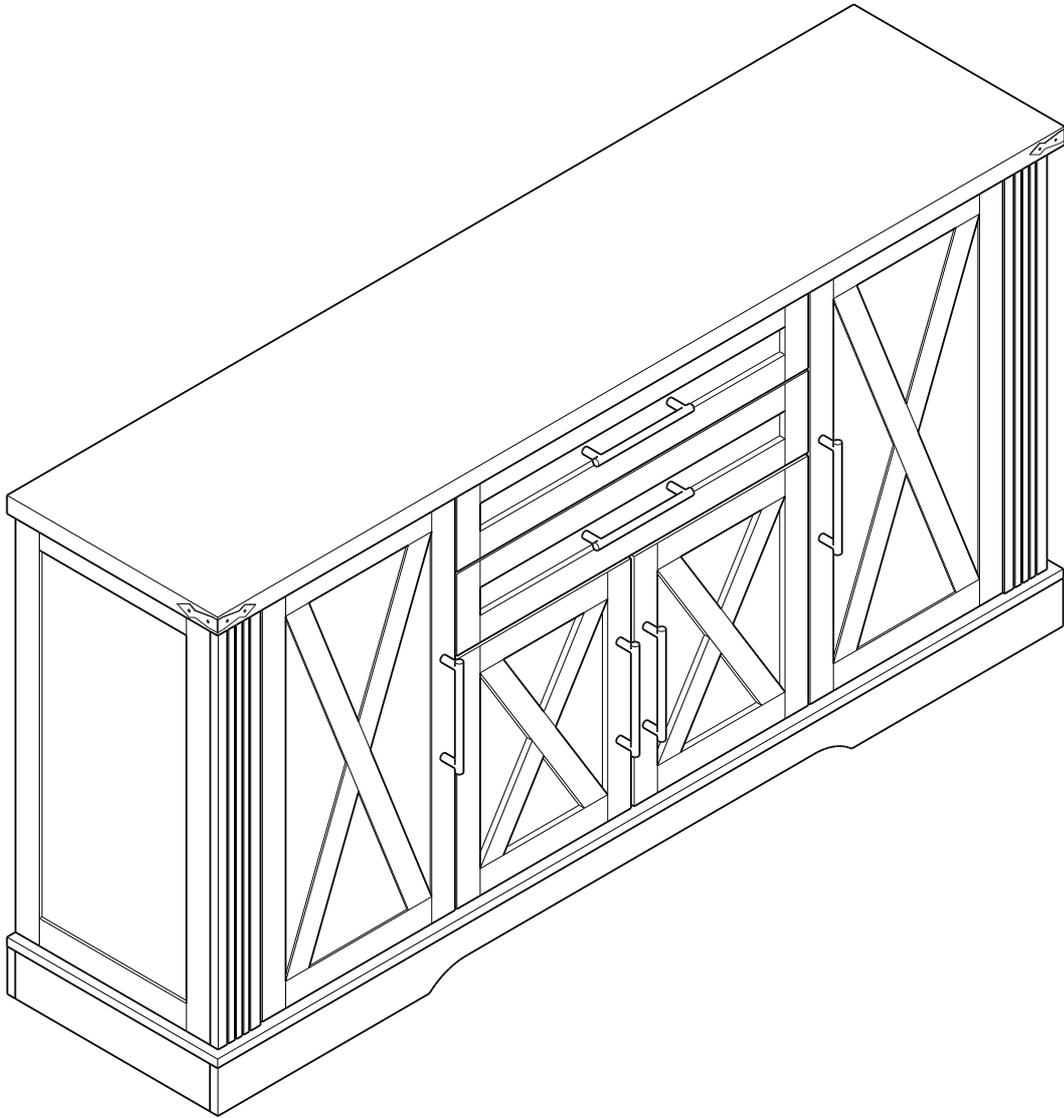

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

# Before You Start

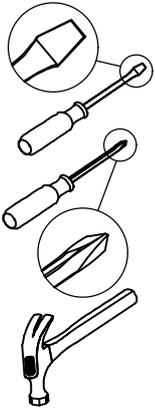

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

# Helpful Hints

## PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Never push, pull, or drag your furniture.




# Board Identification

Not actual size

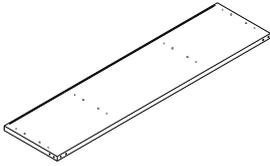


①

Qty:1

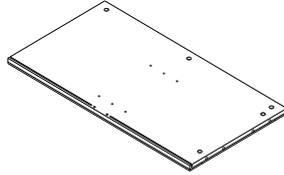


②

Qty:1

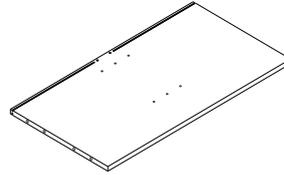


③

Qty:1

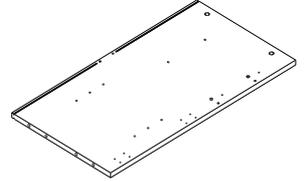


④

Qty:1

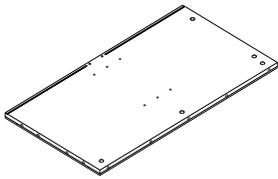


⑤

Qty:1

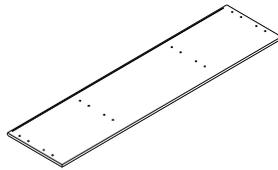


⑥

Qty:1

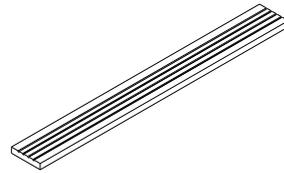


⑦

Qty:2

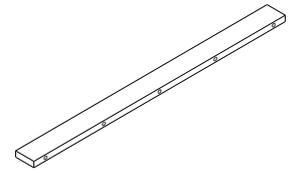


⑧

Qty:2

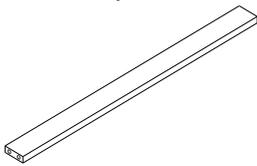


⑨

Qty:2

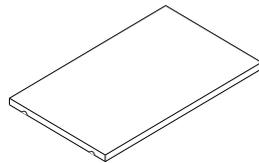


⑩

Qty:2

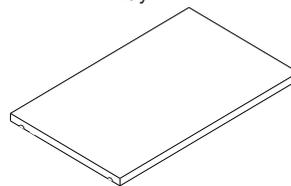


⑪

Qty:1

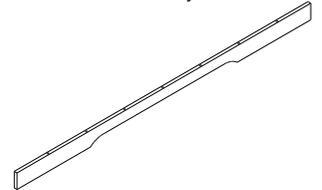


⑫

Qty:1

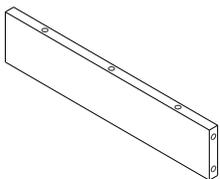


⑬

Qty:2

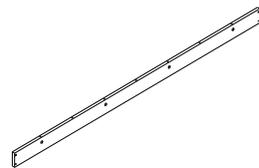


⑭

Qty:1

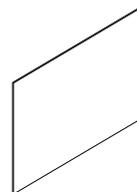


⑮

Qty:4

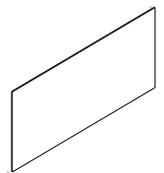


⑯

Qty:2

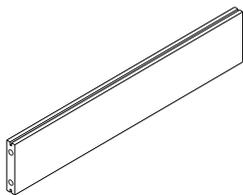

⑰

Qty:2

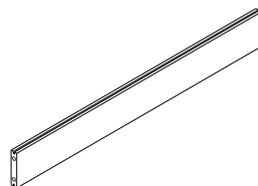

⑱

Qty:1



⑲

Qty:2




⑳

Qty:2


# Board Identification

Not actual size

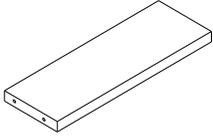


21

Qty:6

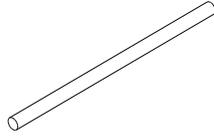


22

Qty:6




23

Qty:2




24

Qty:2

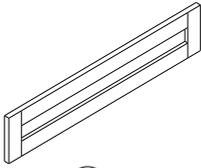


25

Qty:2

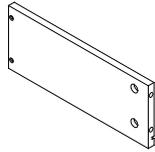


26

Qty:2

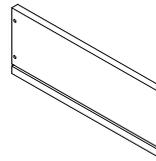


27

Qty:2

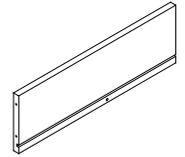


28

Qty:2

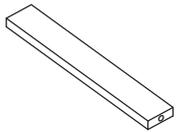


29

Qty:2



30



Qty:2






31

Qty:4

# Board Identification

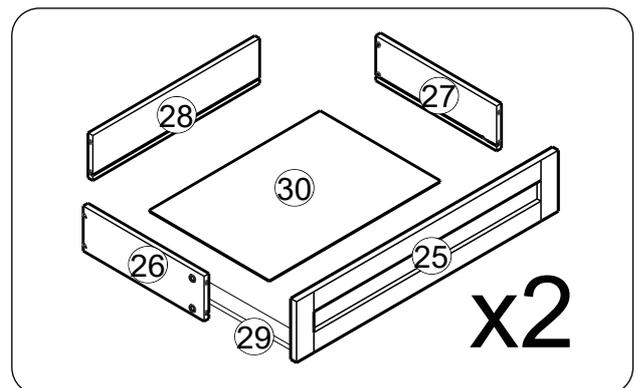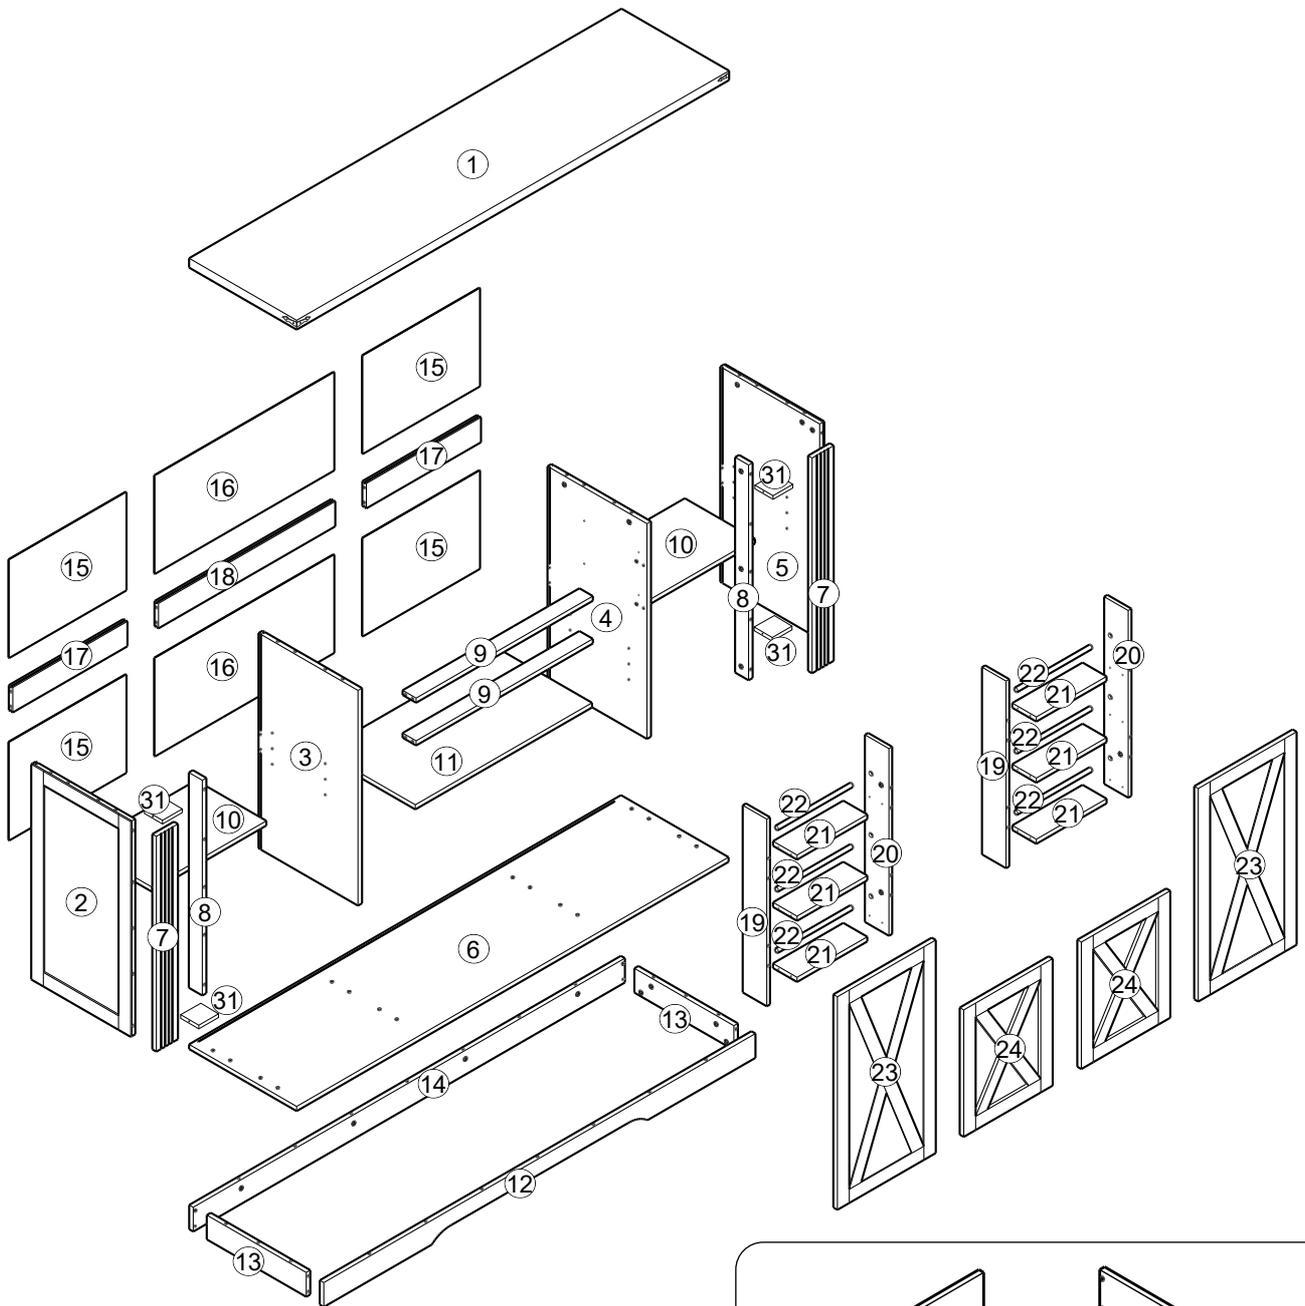


# Part List






		 Ø6x30mm	 Ø3x12mm	 Ø4x35mm
A   x82	B   x82	C   x66	D   x16	E   x22
 Ø3.5x12mm		 Ø4x18mm		
F   x48	G   x4	H   x8	I   x6	J   x12
 Ø3.5x12mm			 Ø4x14mm	
K   x24	L   x2	M   x4	N   x4	O   x4
				
DL   x2	DR   x2	CR   x2	CL   x2	

# Cam Lock Fastening System






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

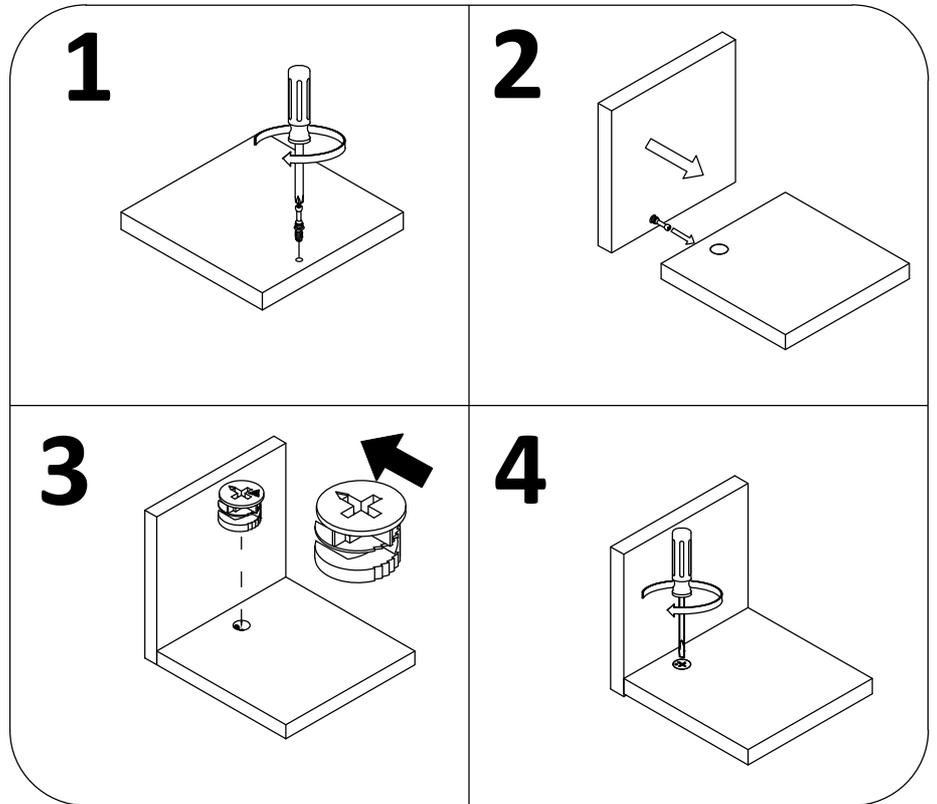




# STEP 1

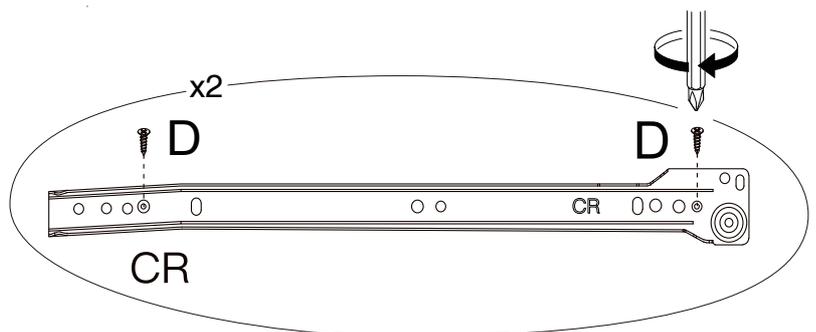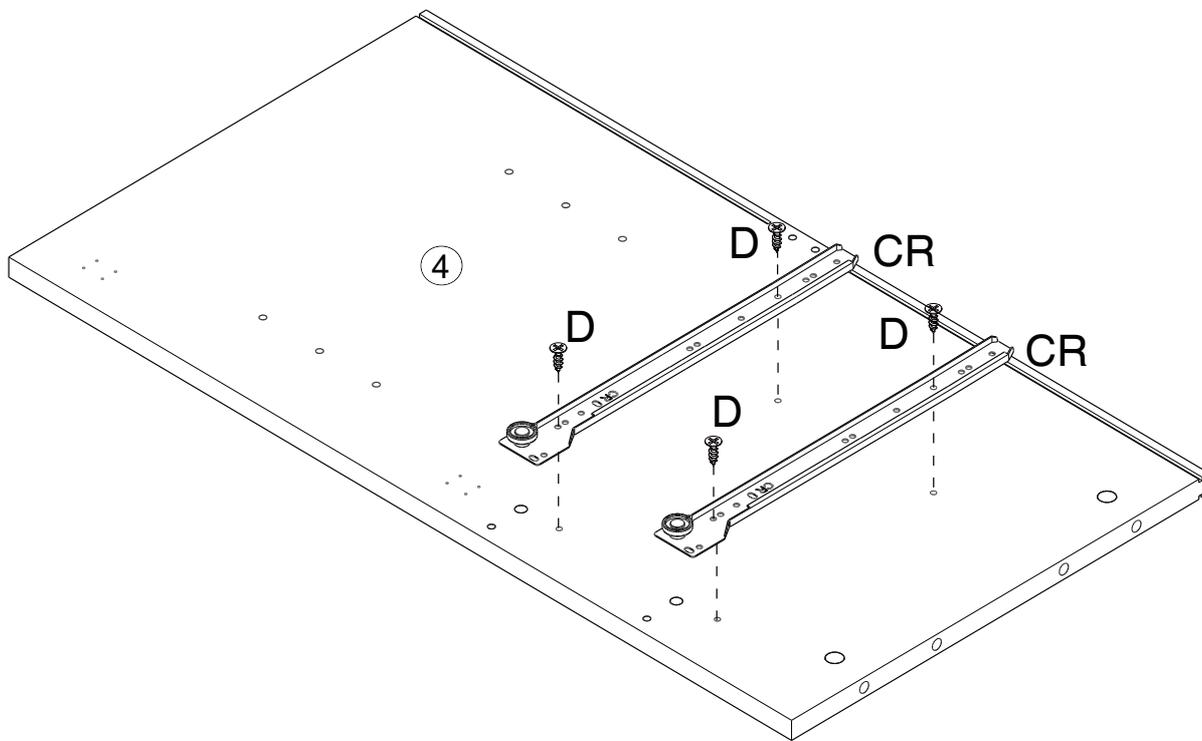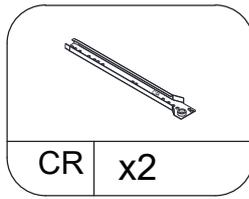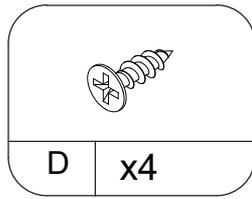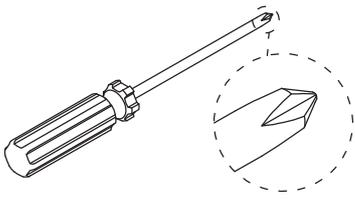






# STEP 2

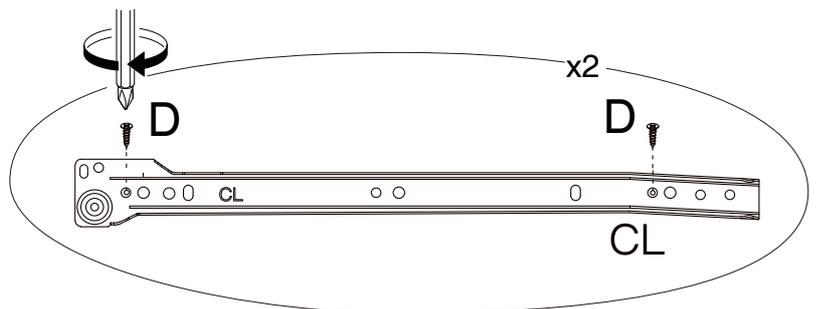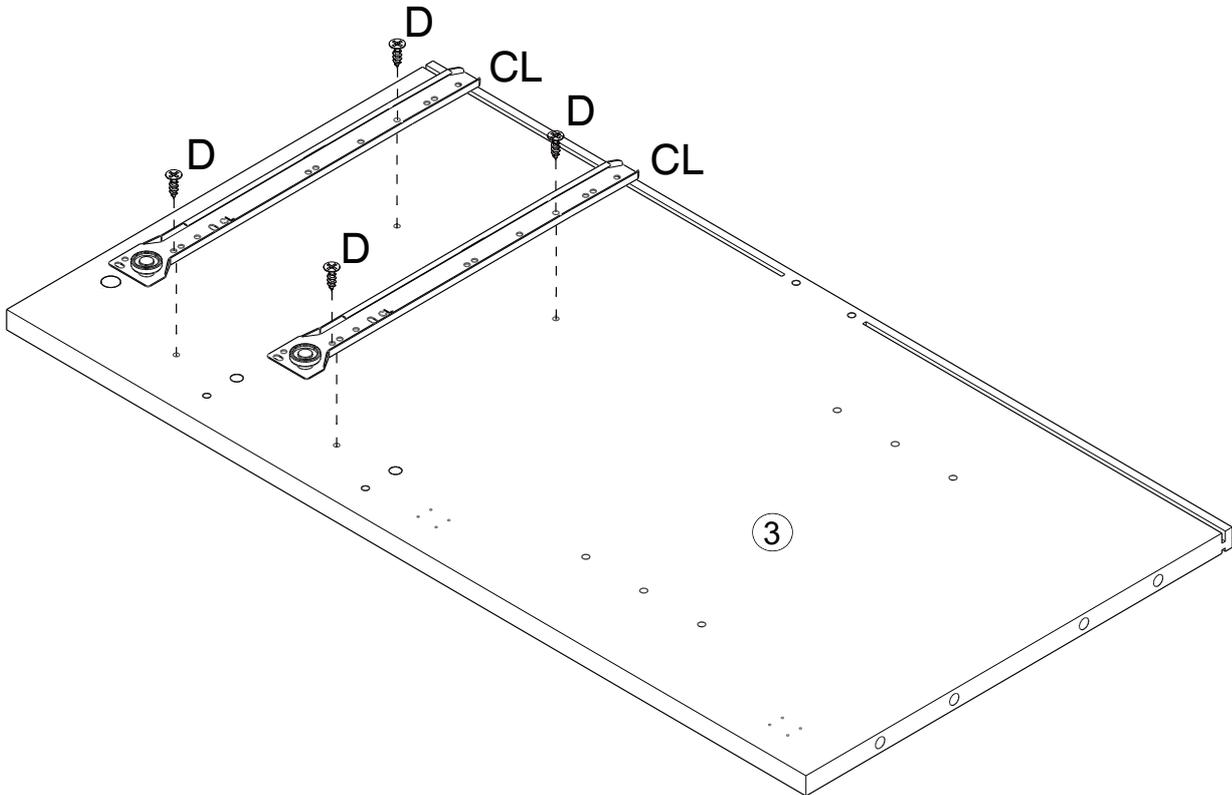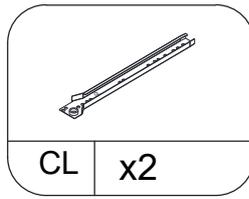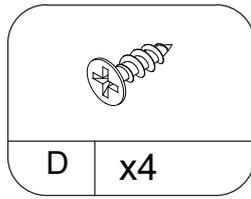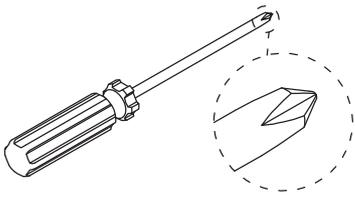

# STEP 3

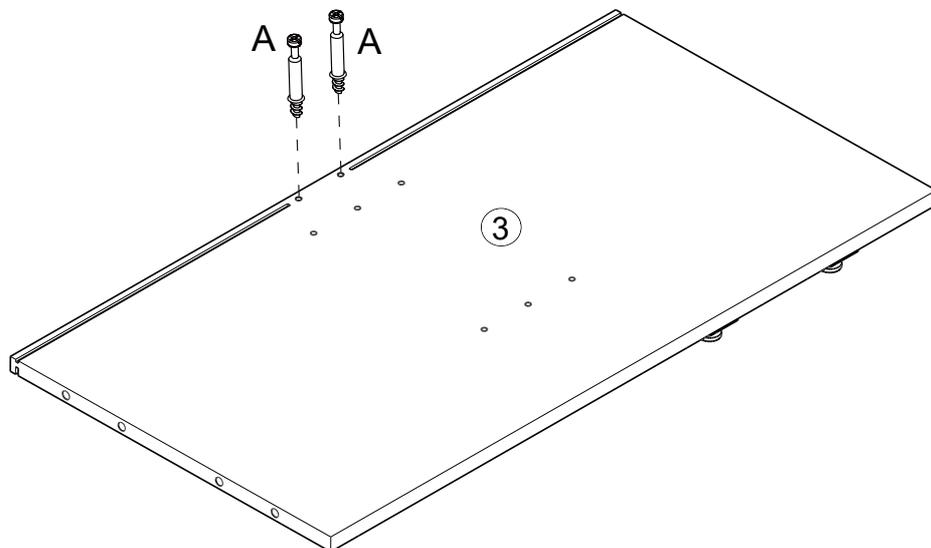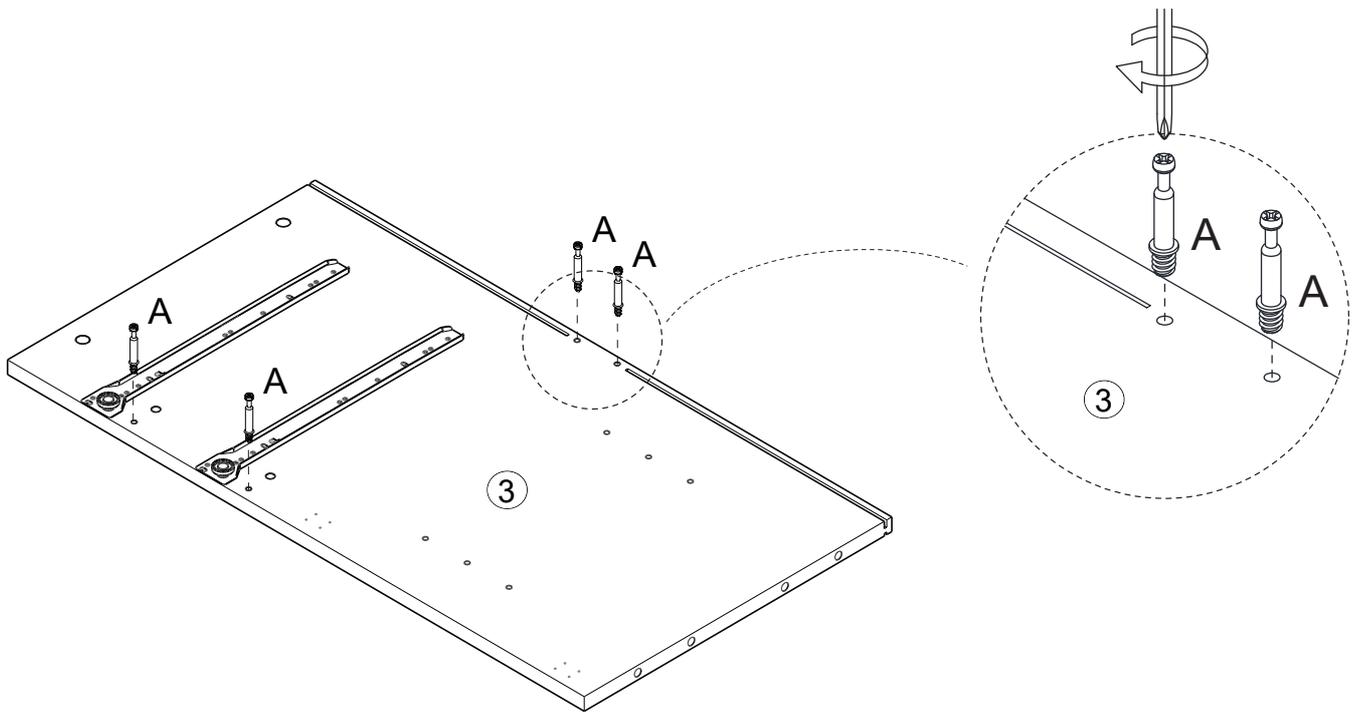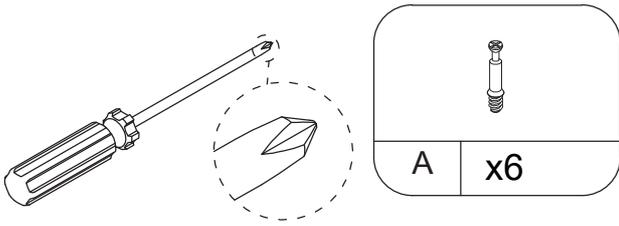


# STEP 4

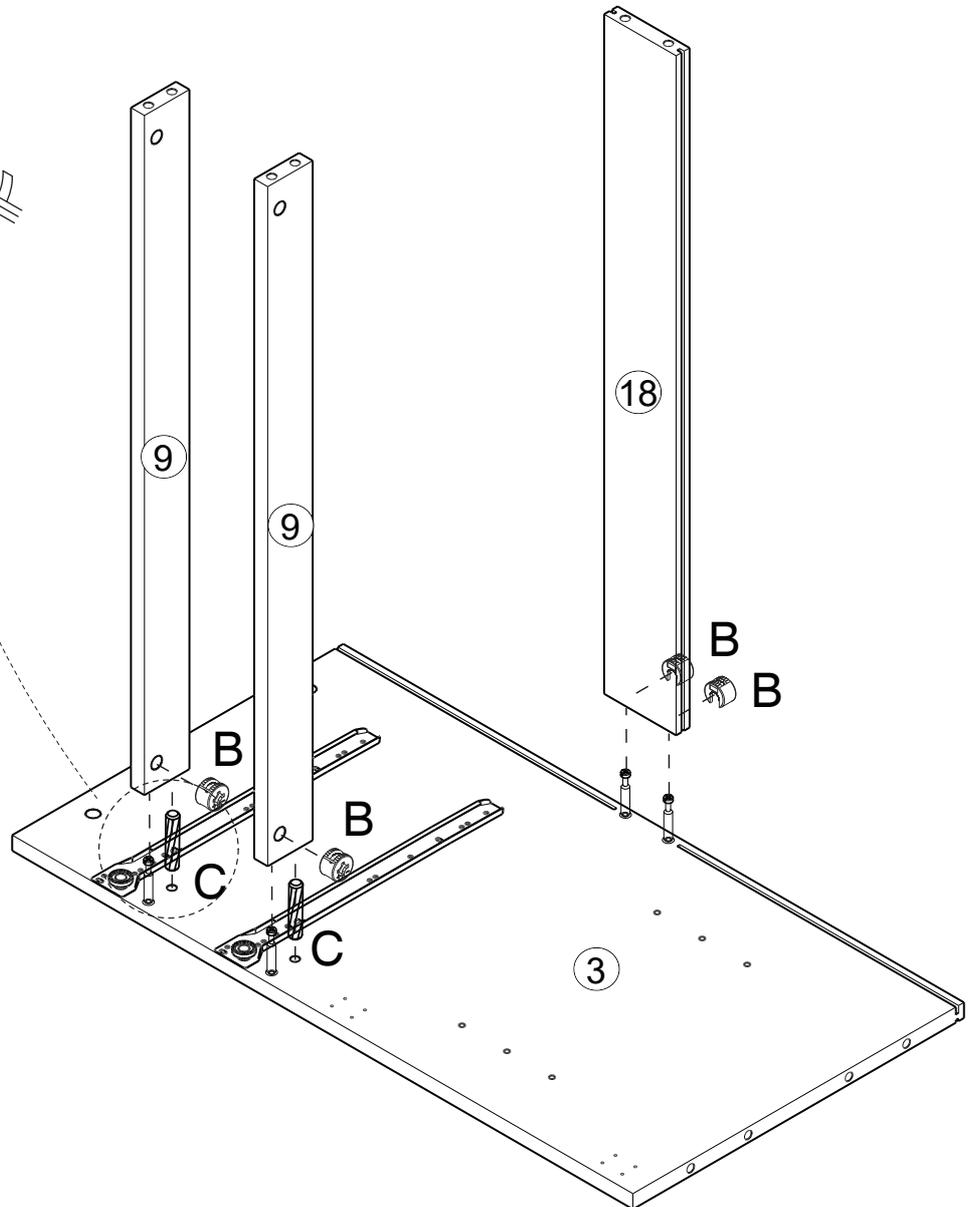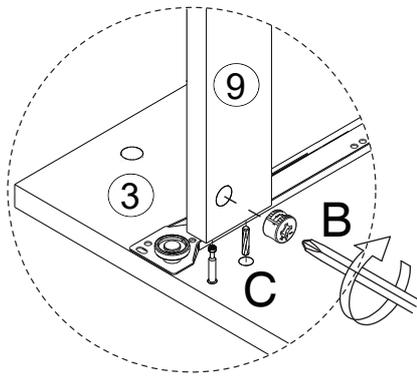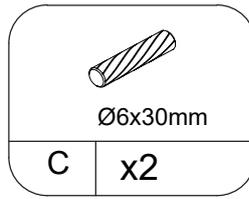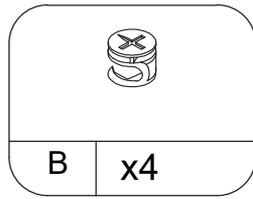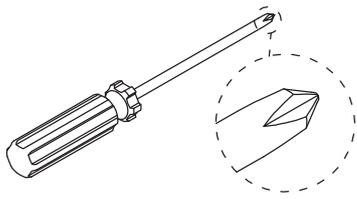

# STEP 5






---

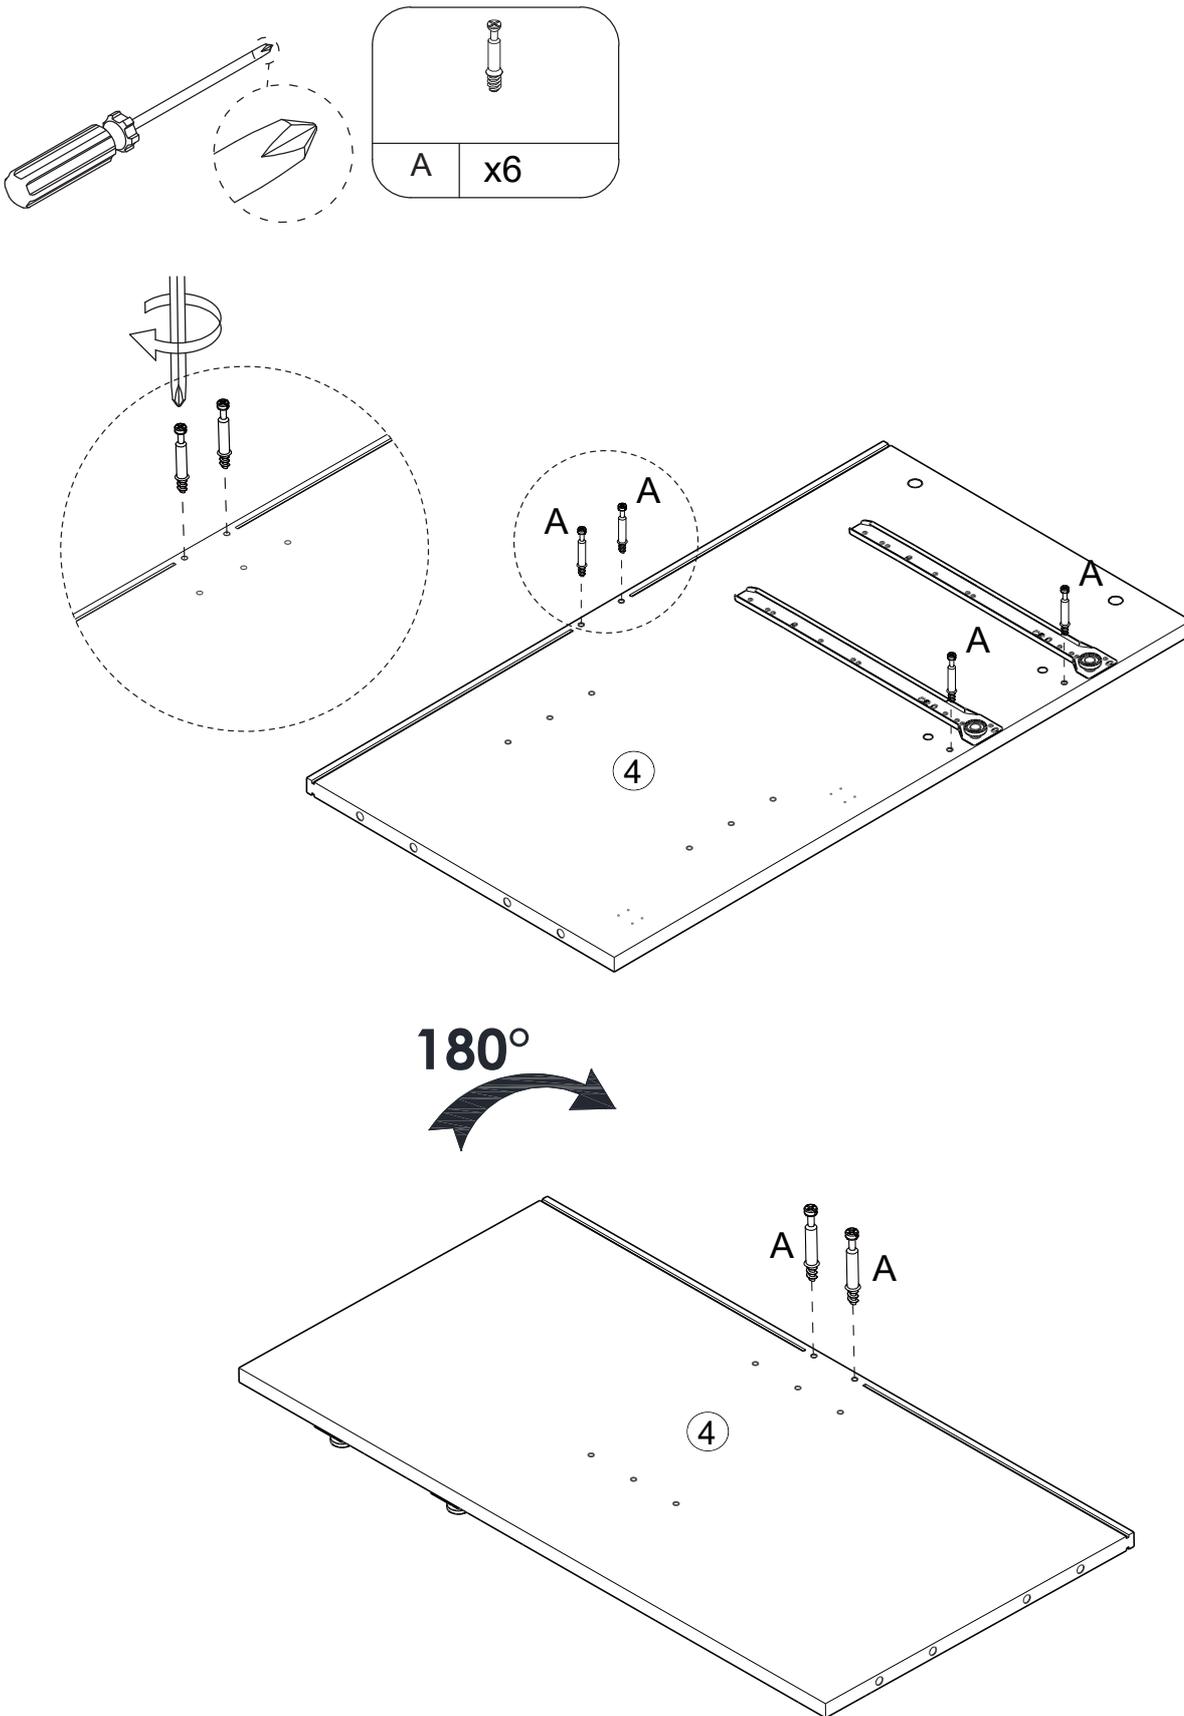




# STEP 7





---

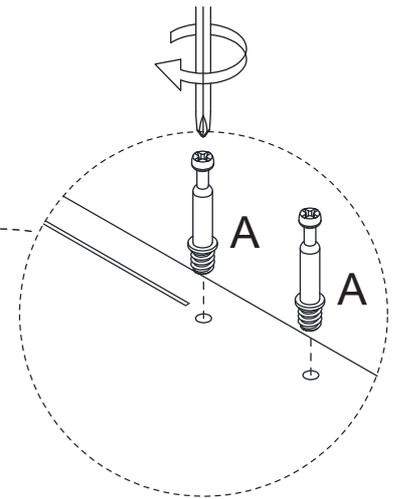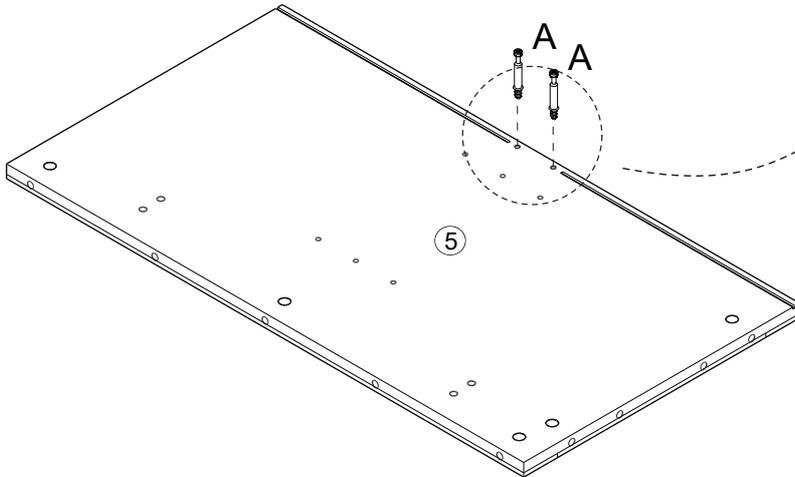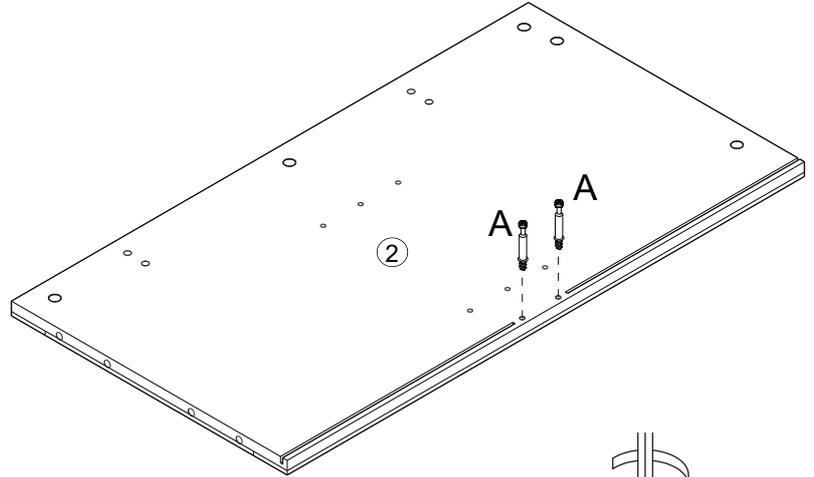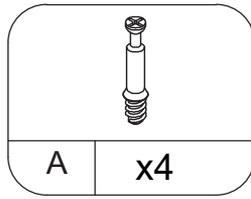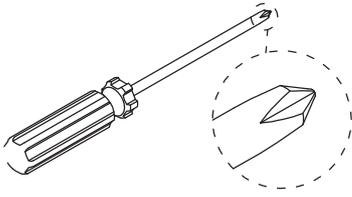

# STEP 8

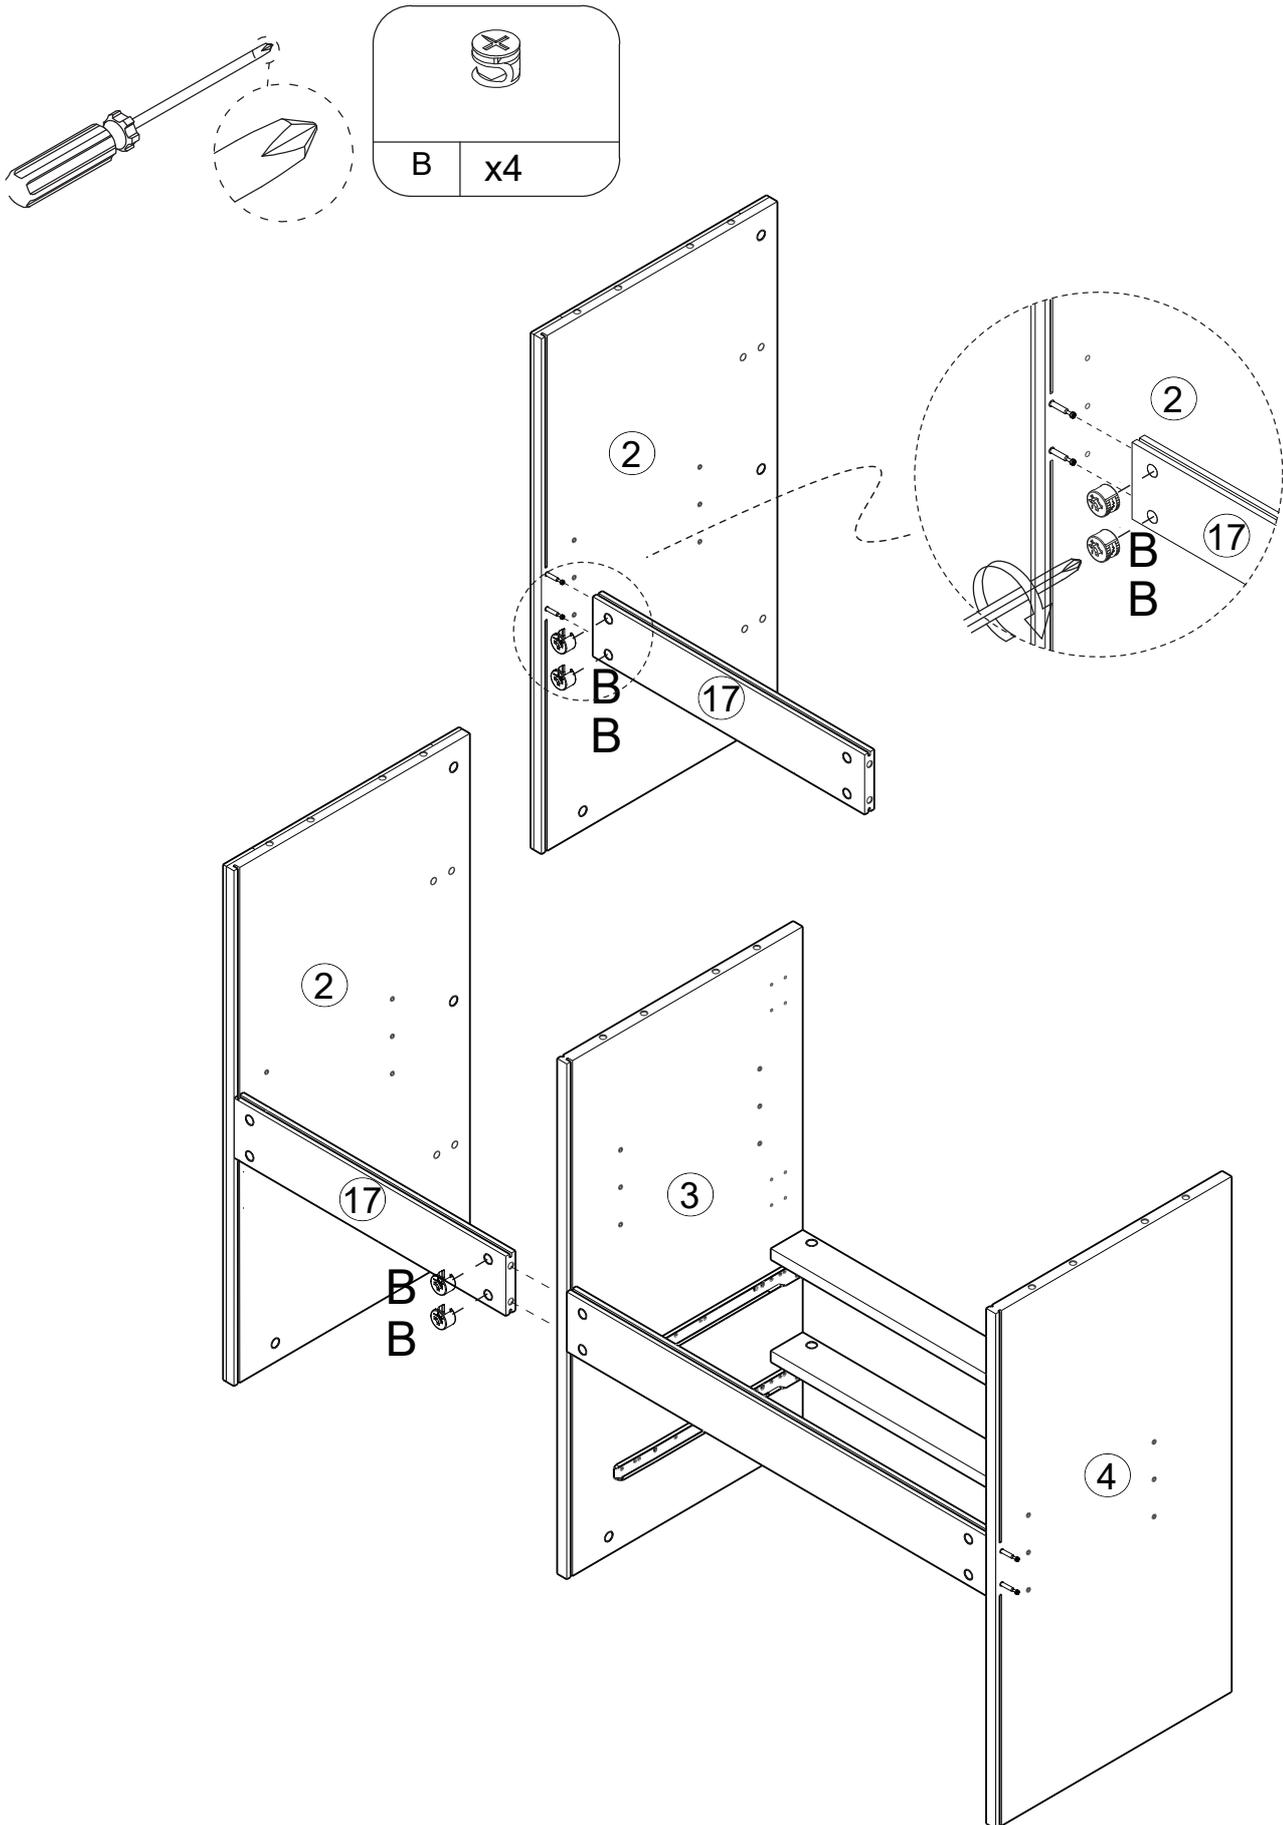


# STEP 9

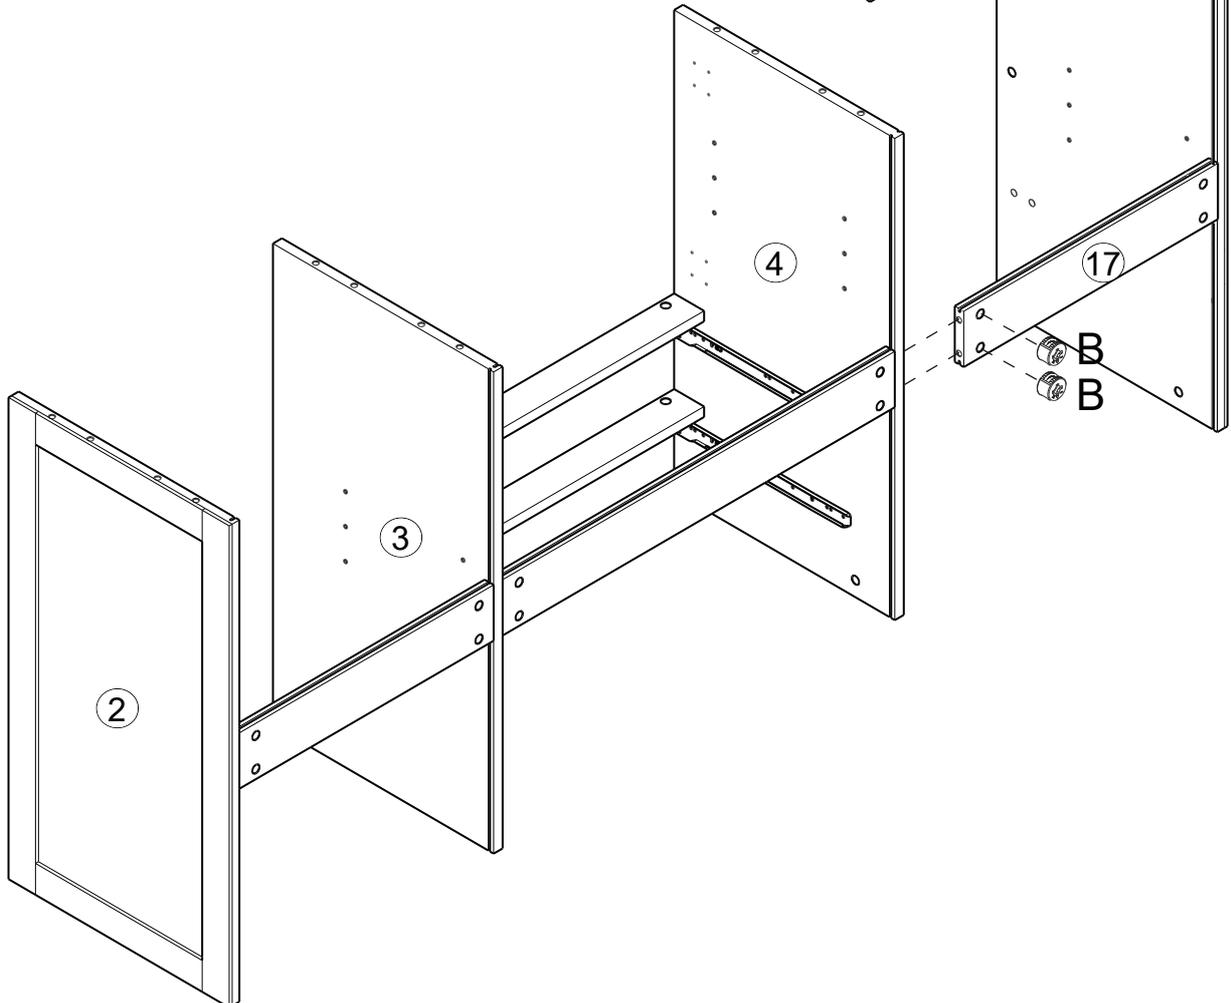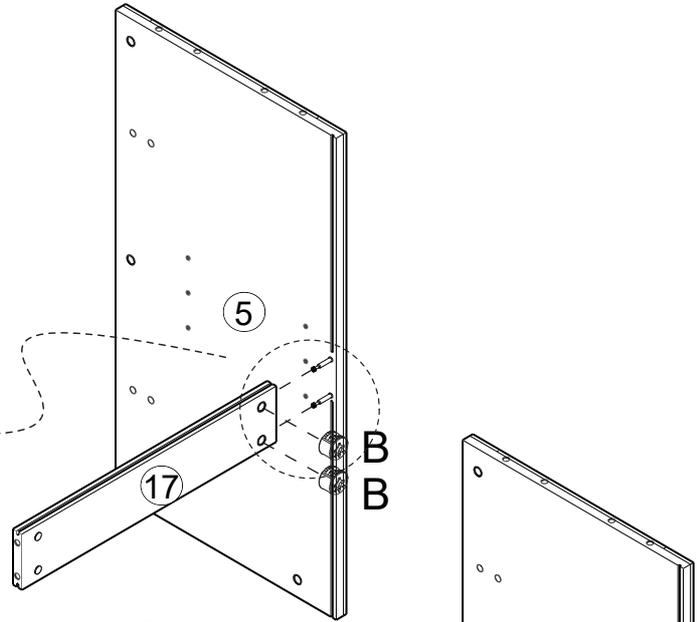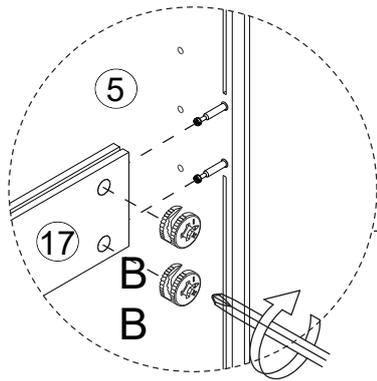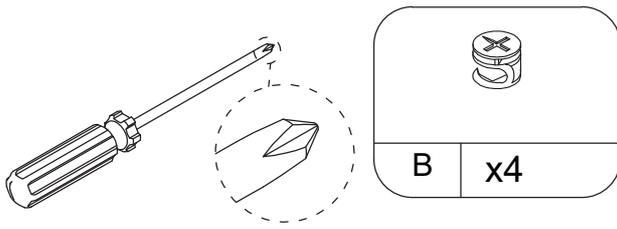



# STEP 10

---




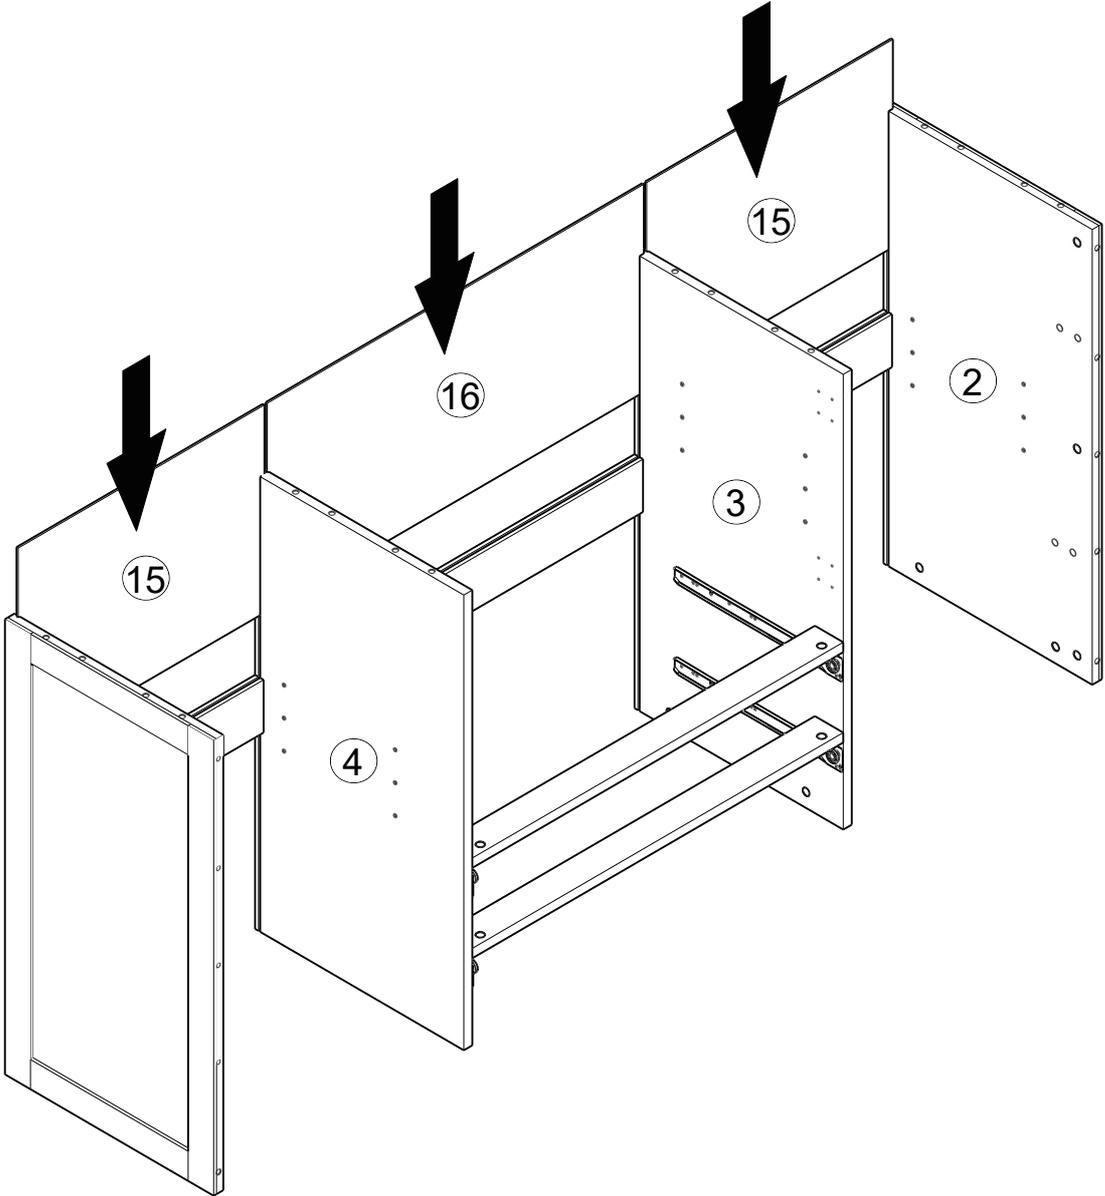


# STEP 11




---

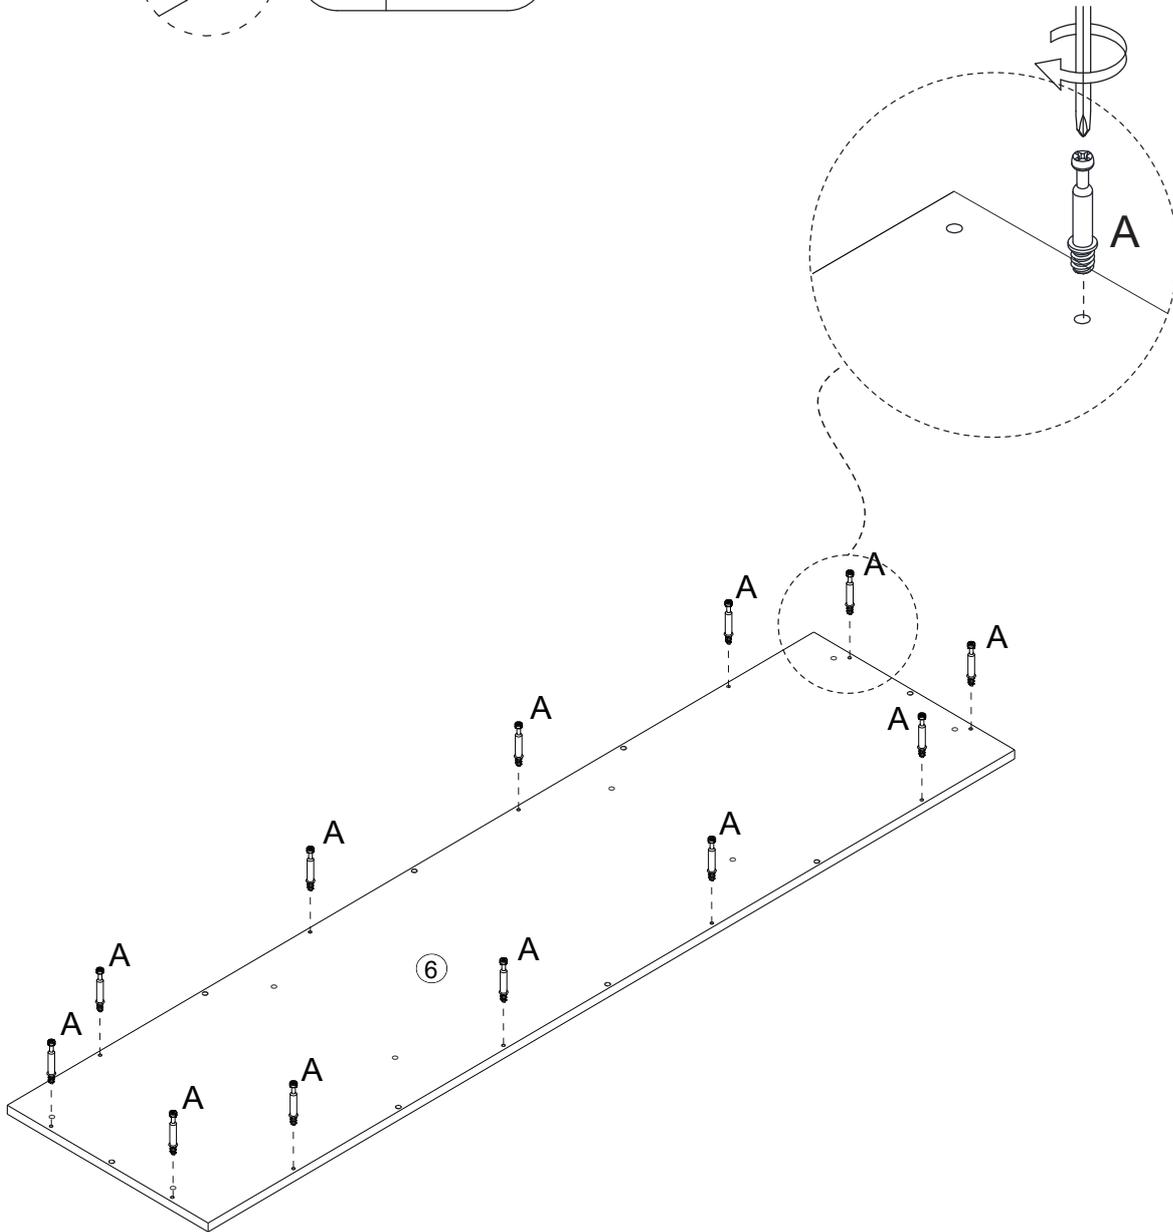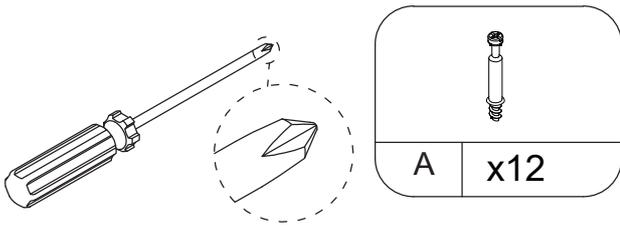






# STEP 12

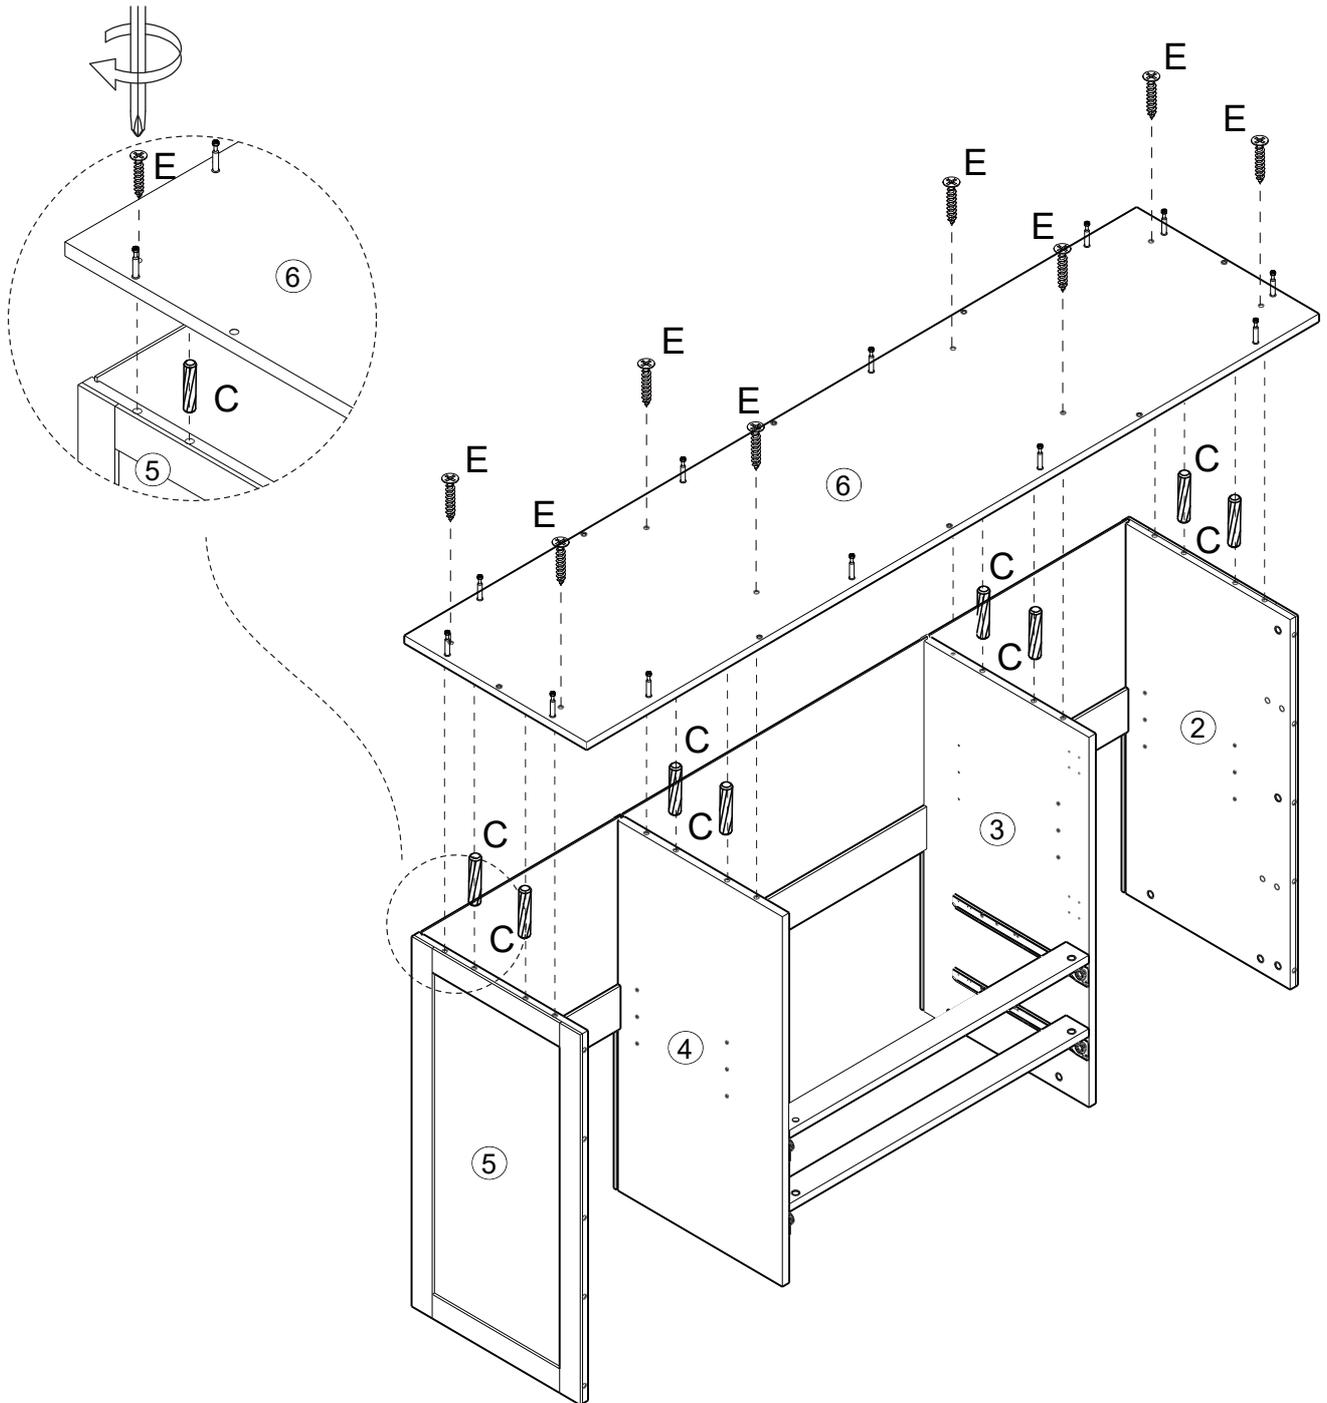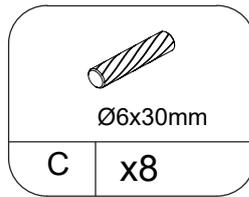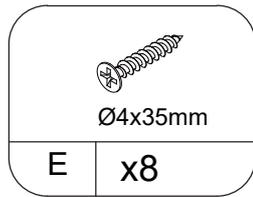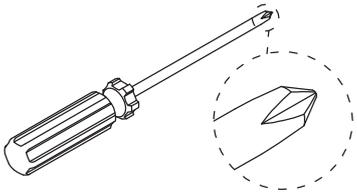







# STEP 13

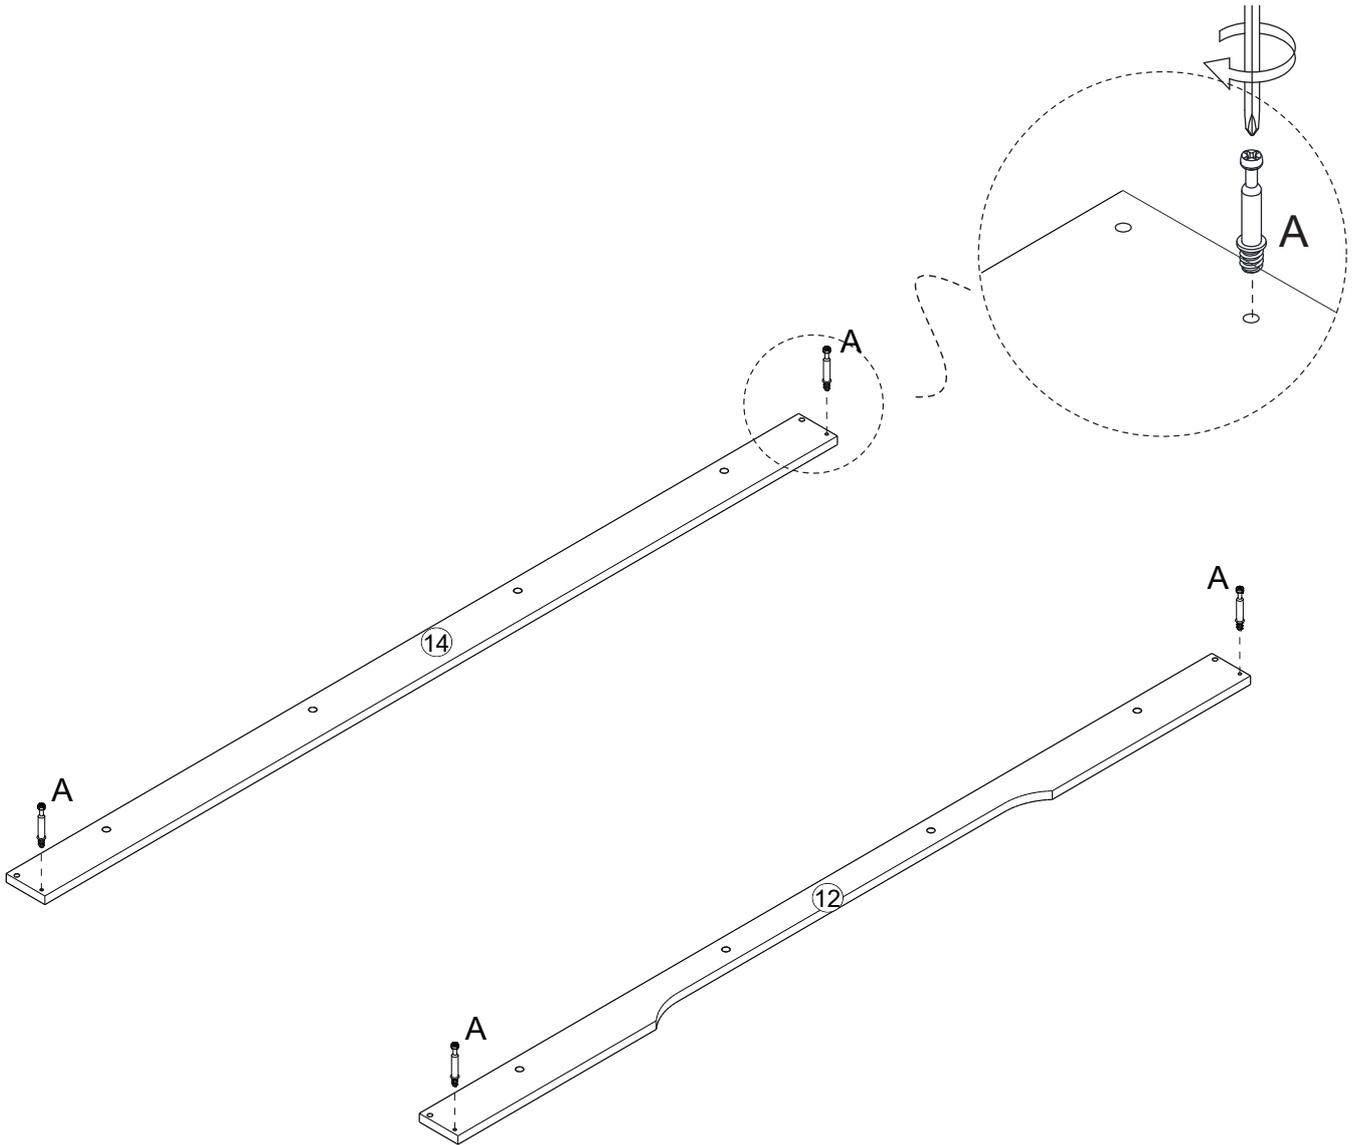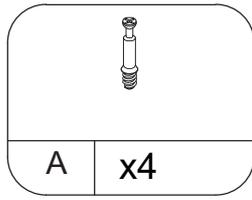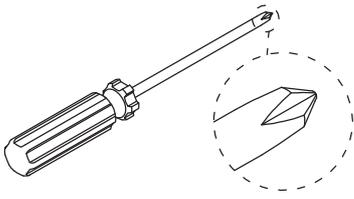

# STEP 14

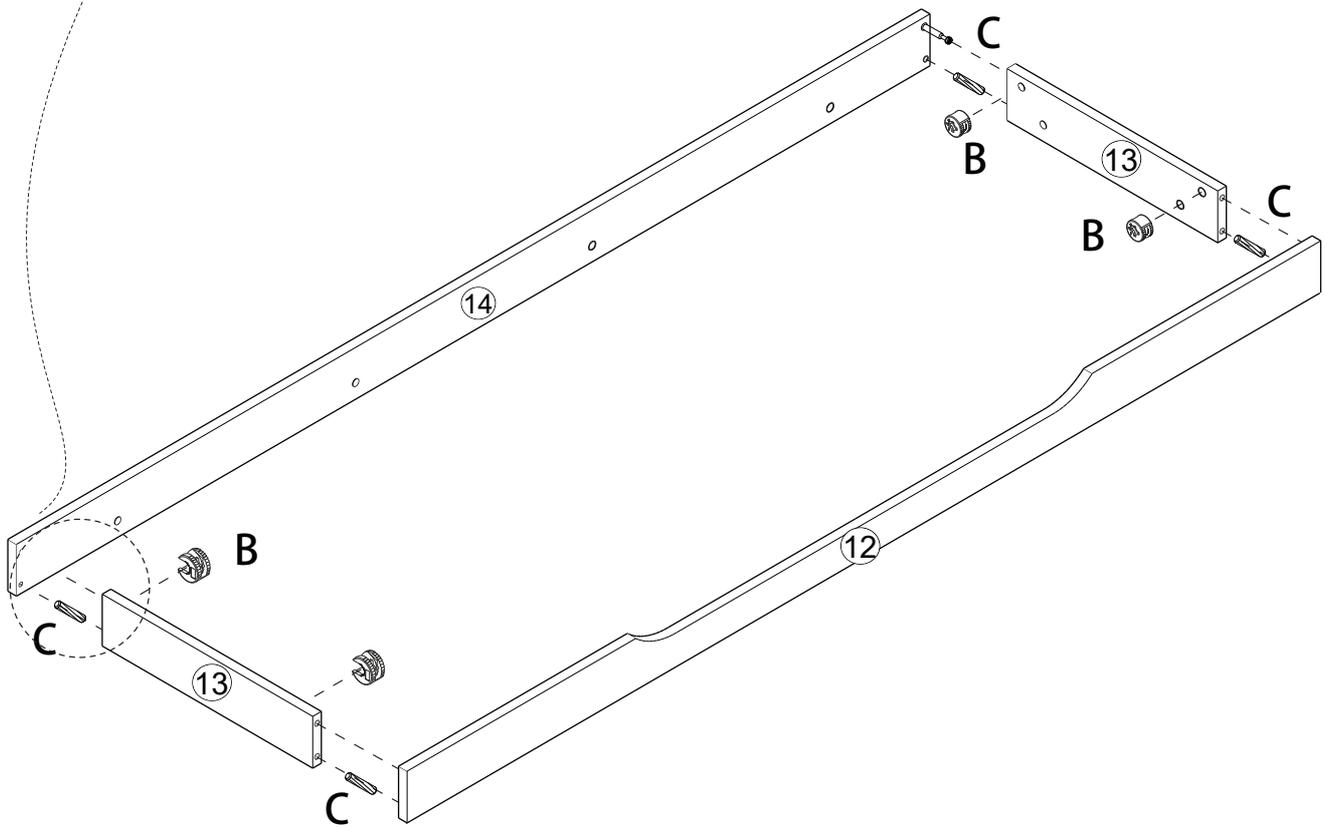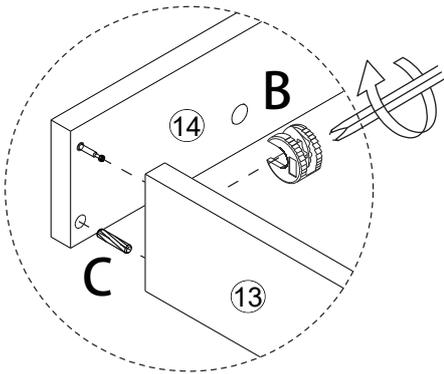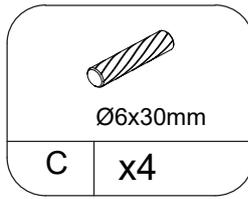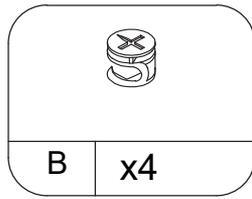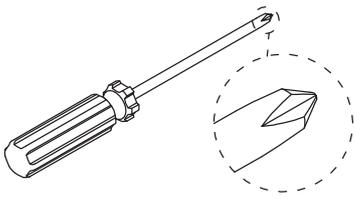


# STEP 15

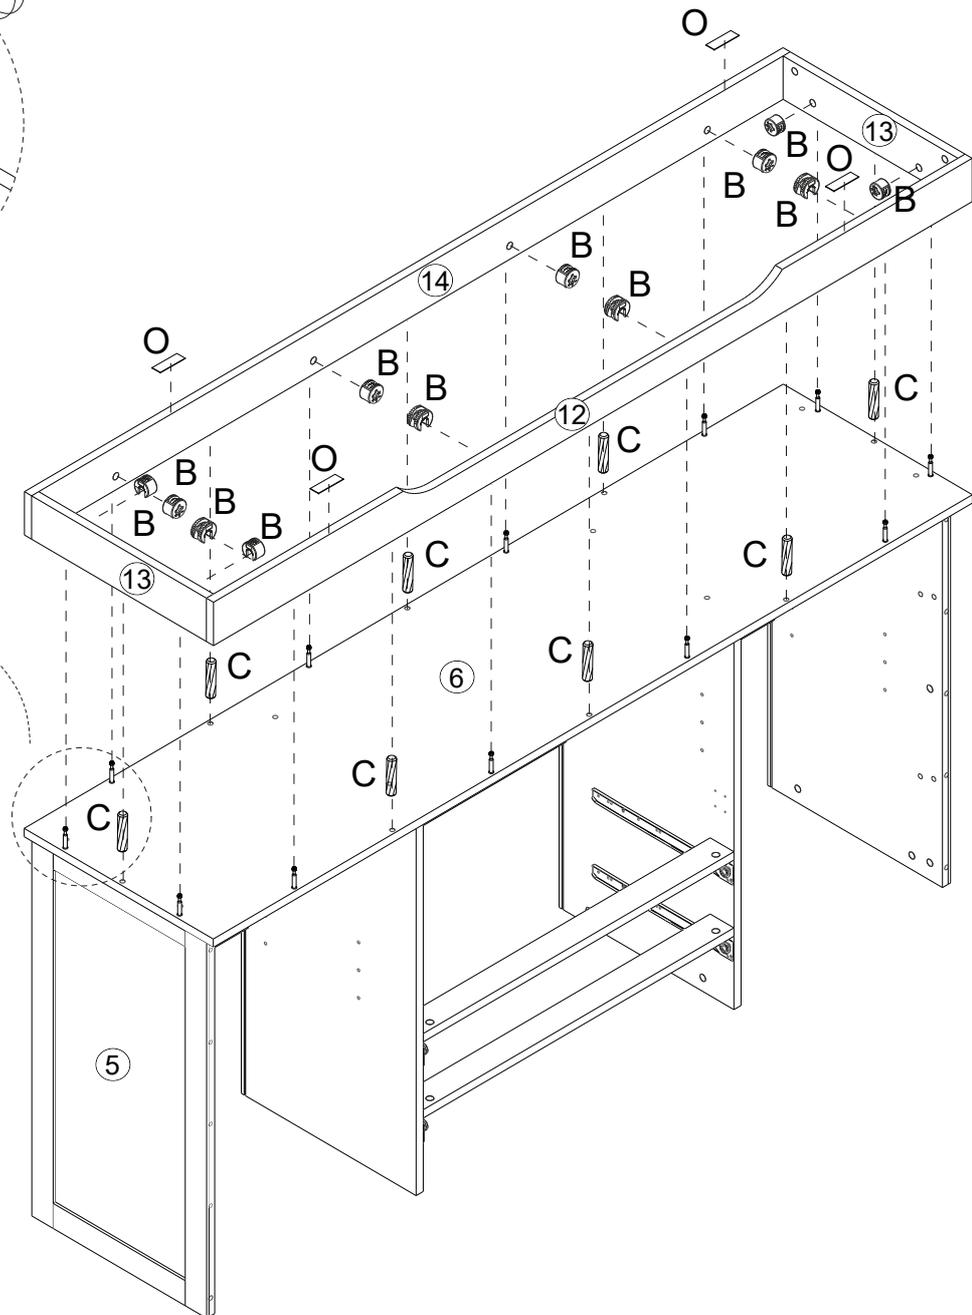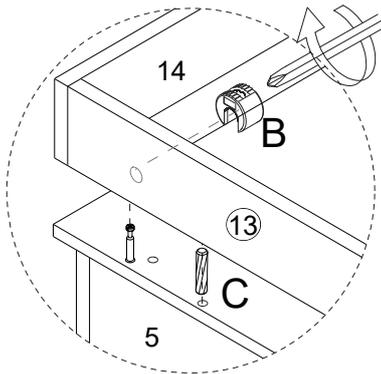
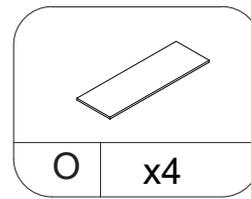
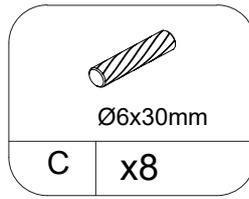
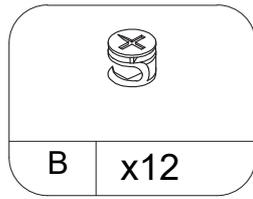
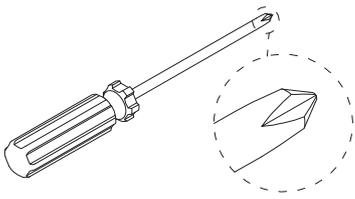


# STEP 16

---


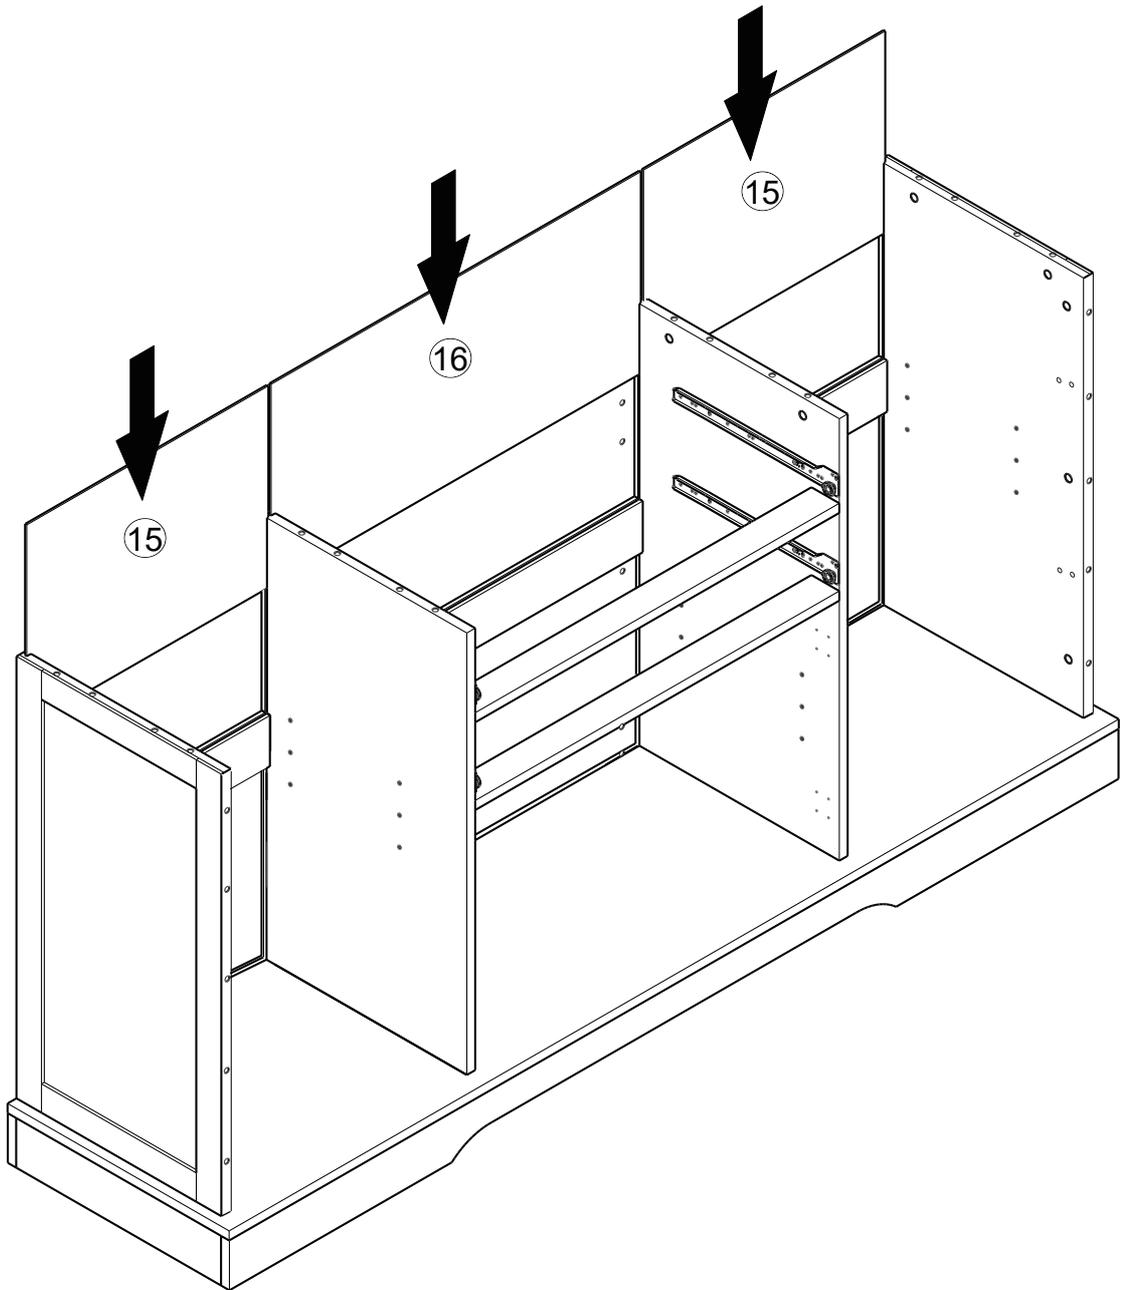


# STEP 17

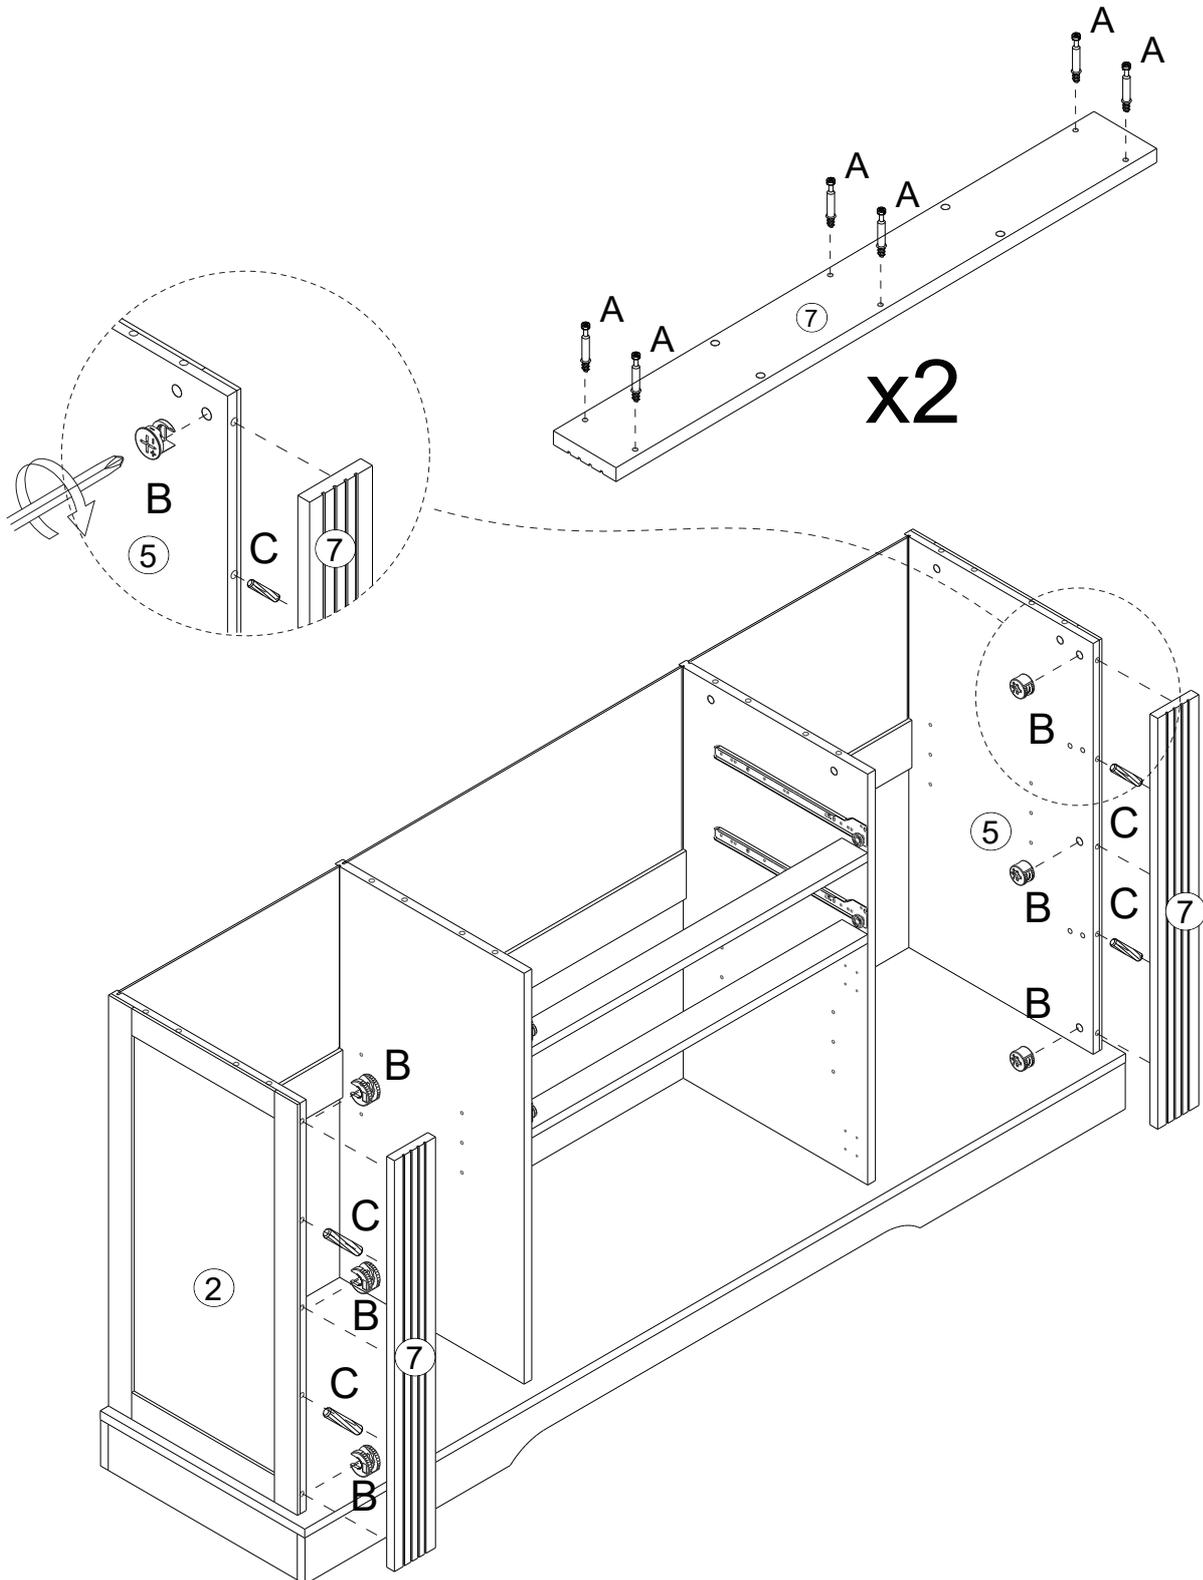
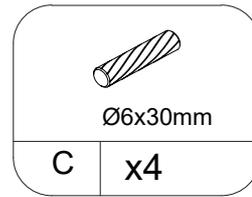
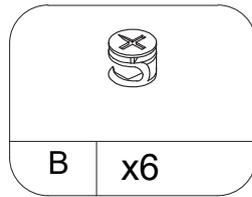
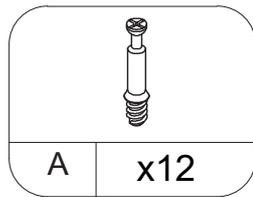
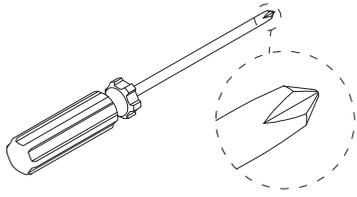


# STEP 18




---

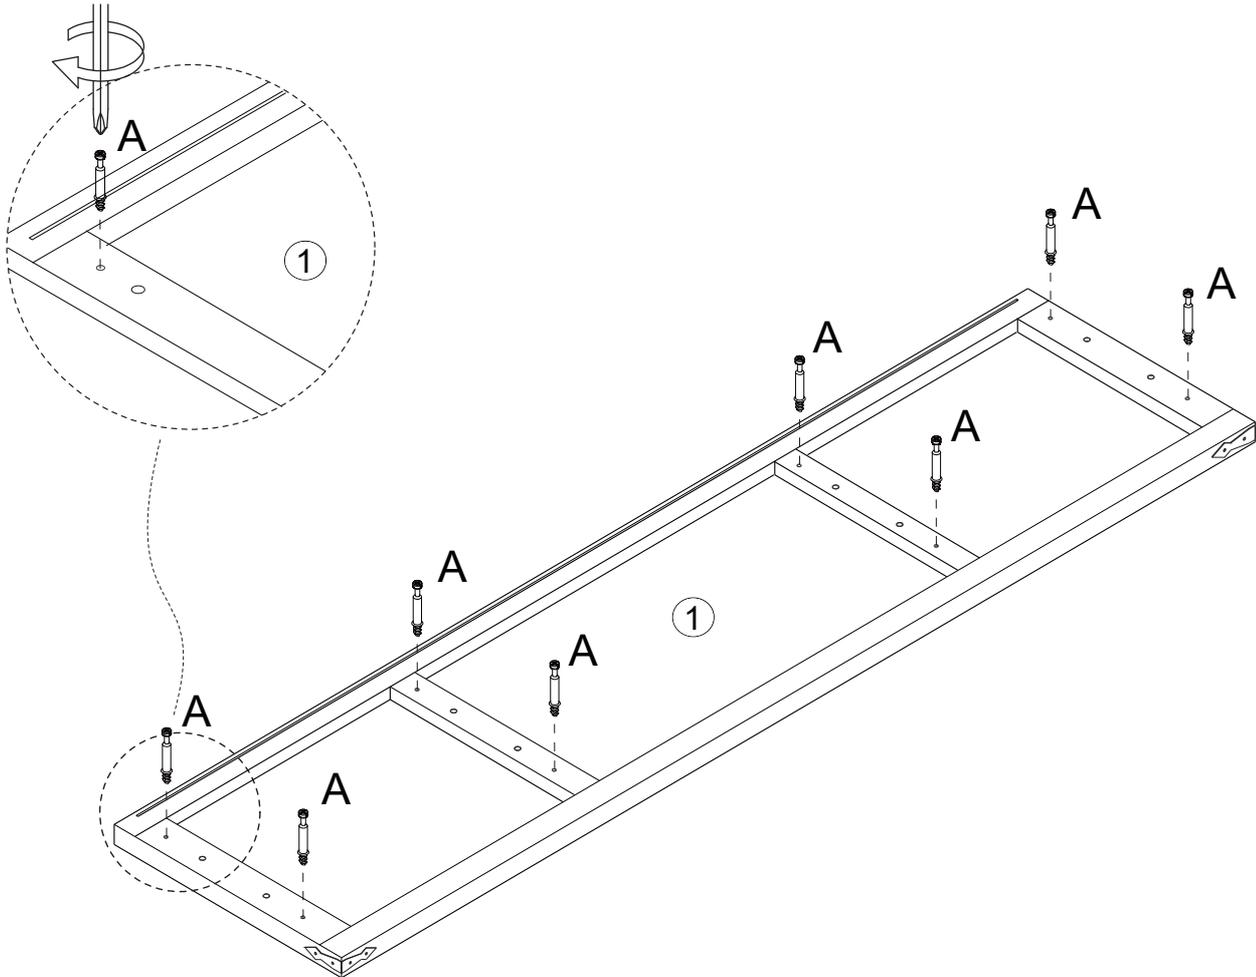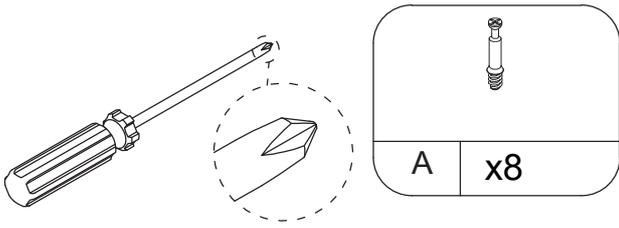







# STEP 19

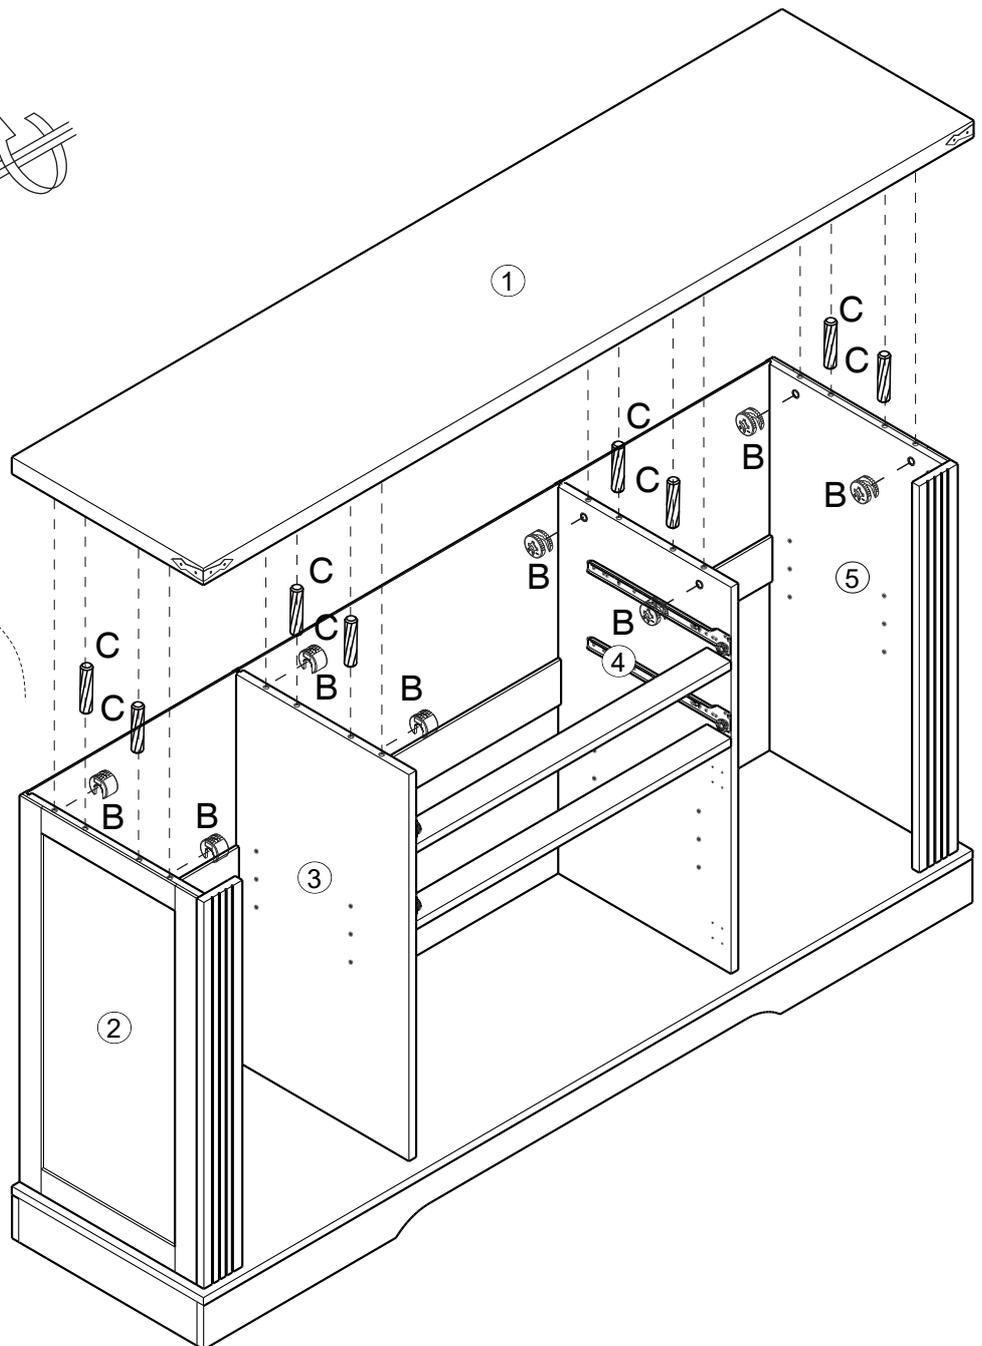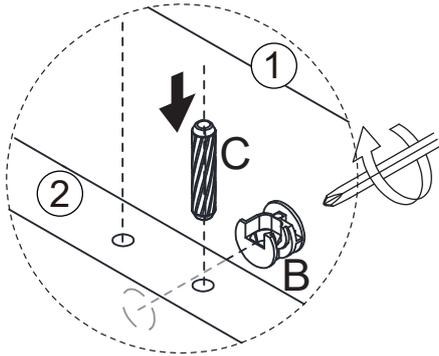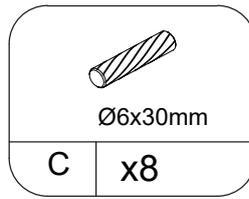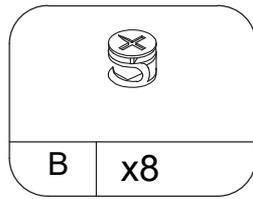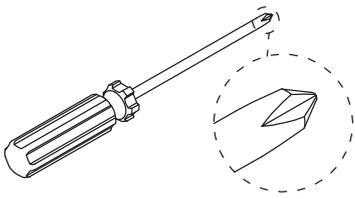



# STEP 20

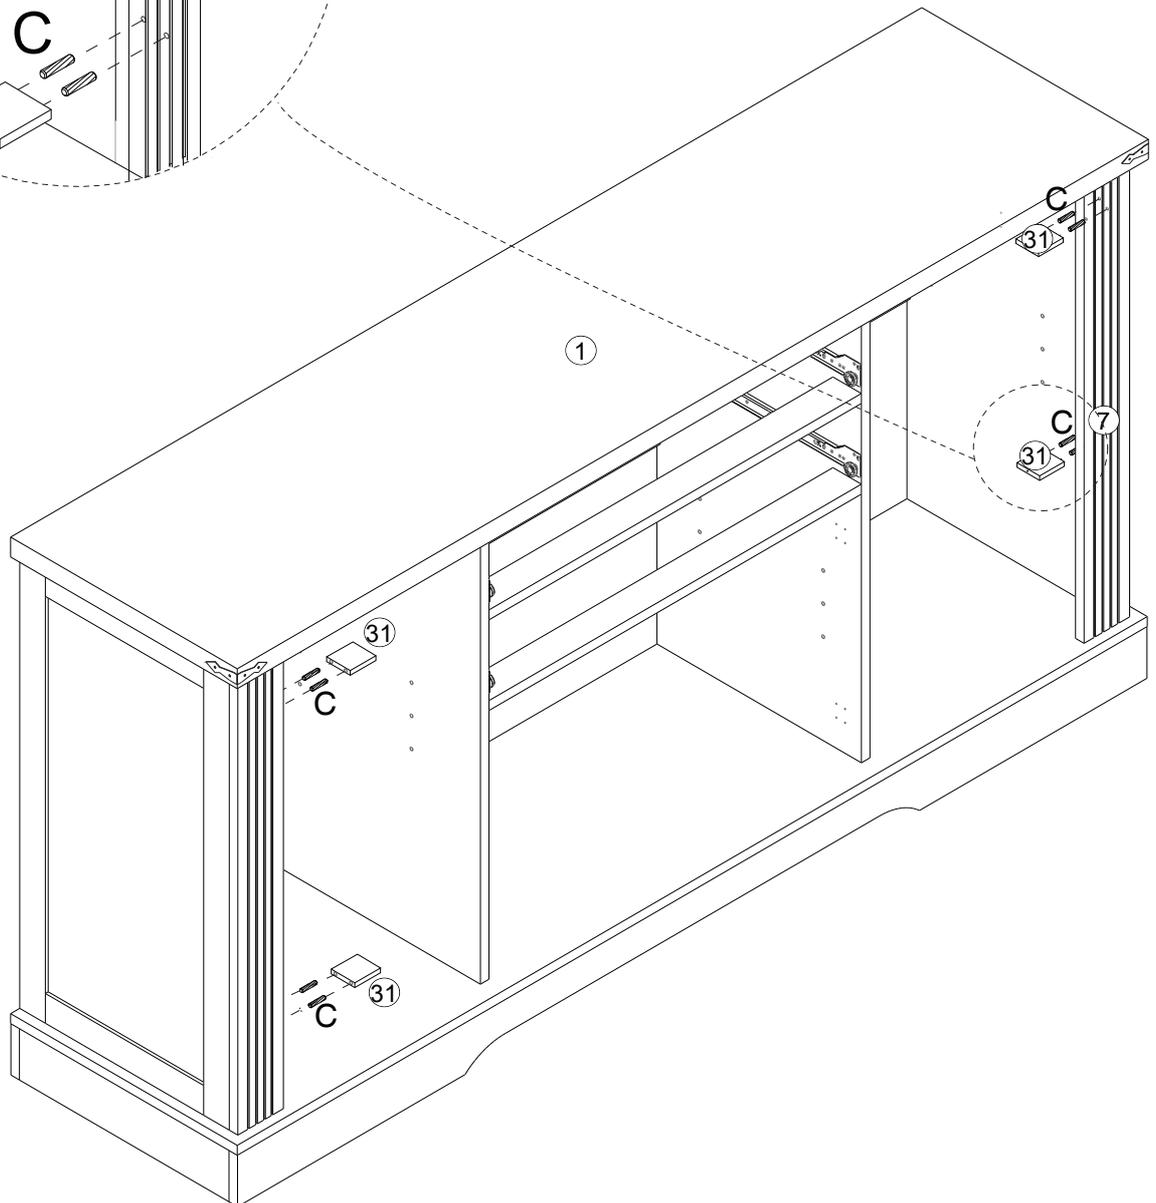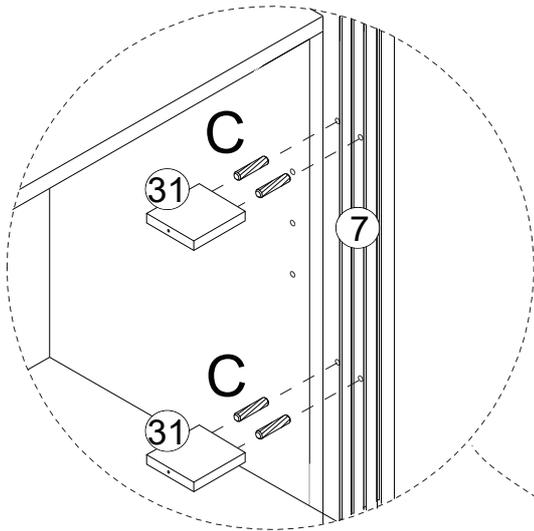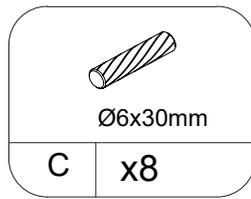




# STEP 21

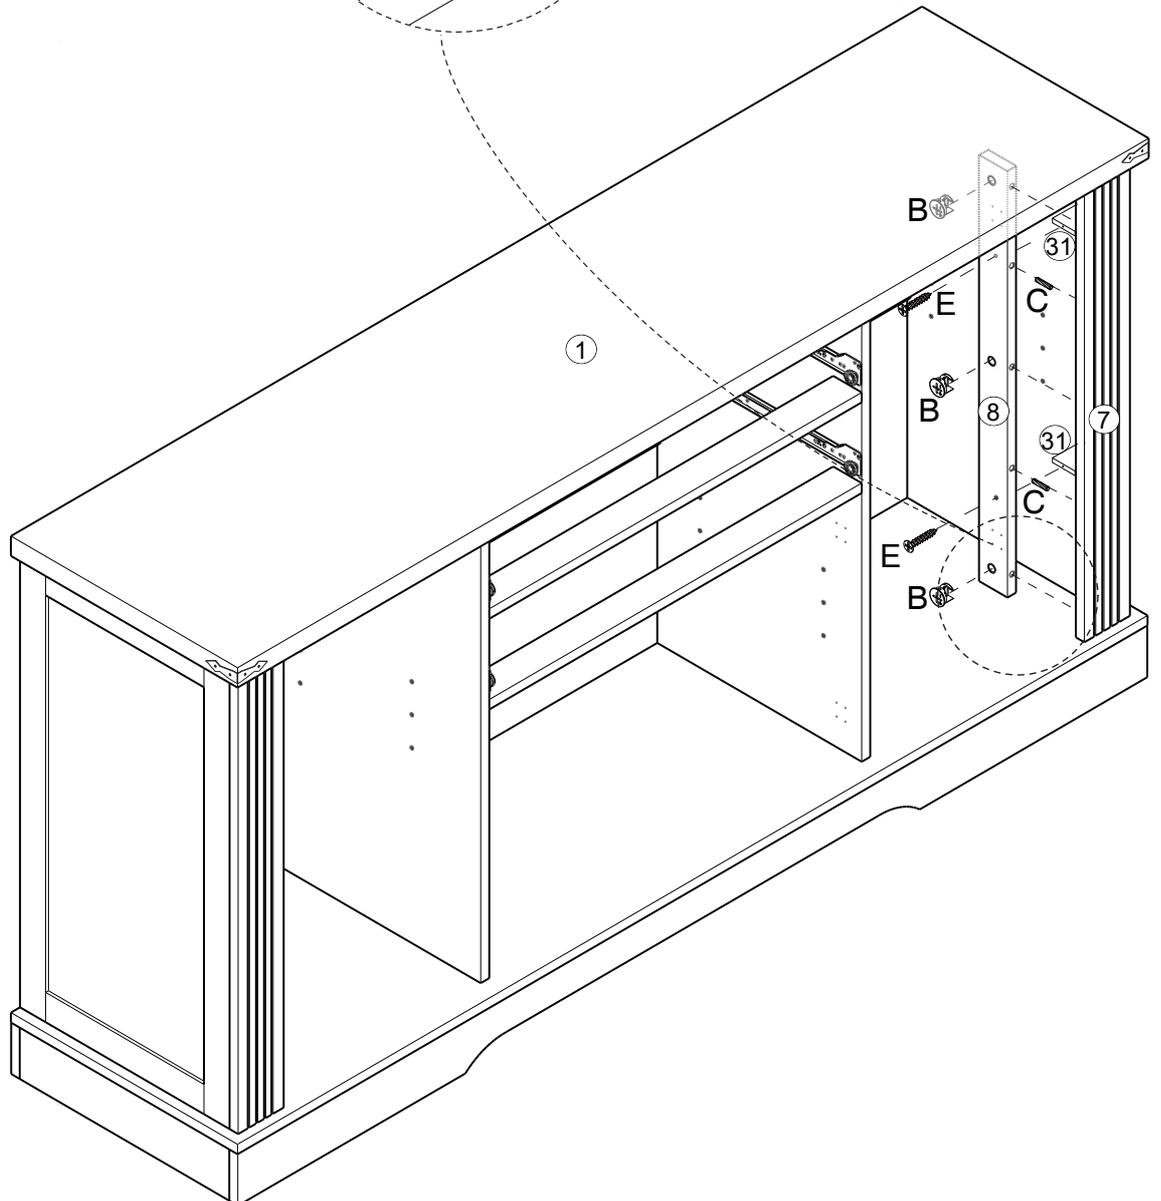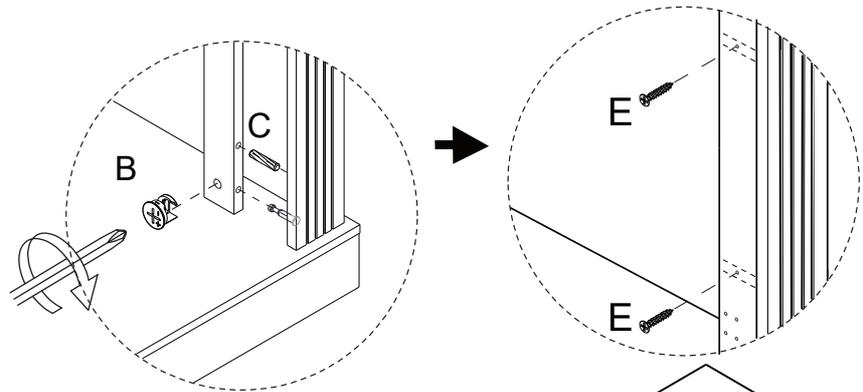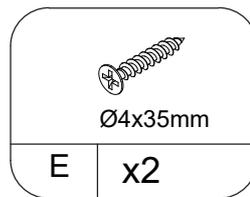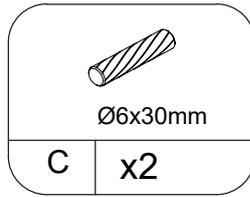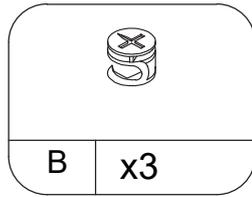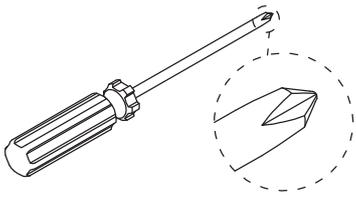










# STEP 22

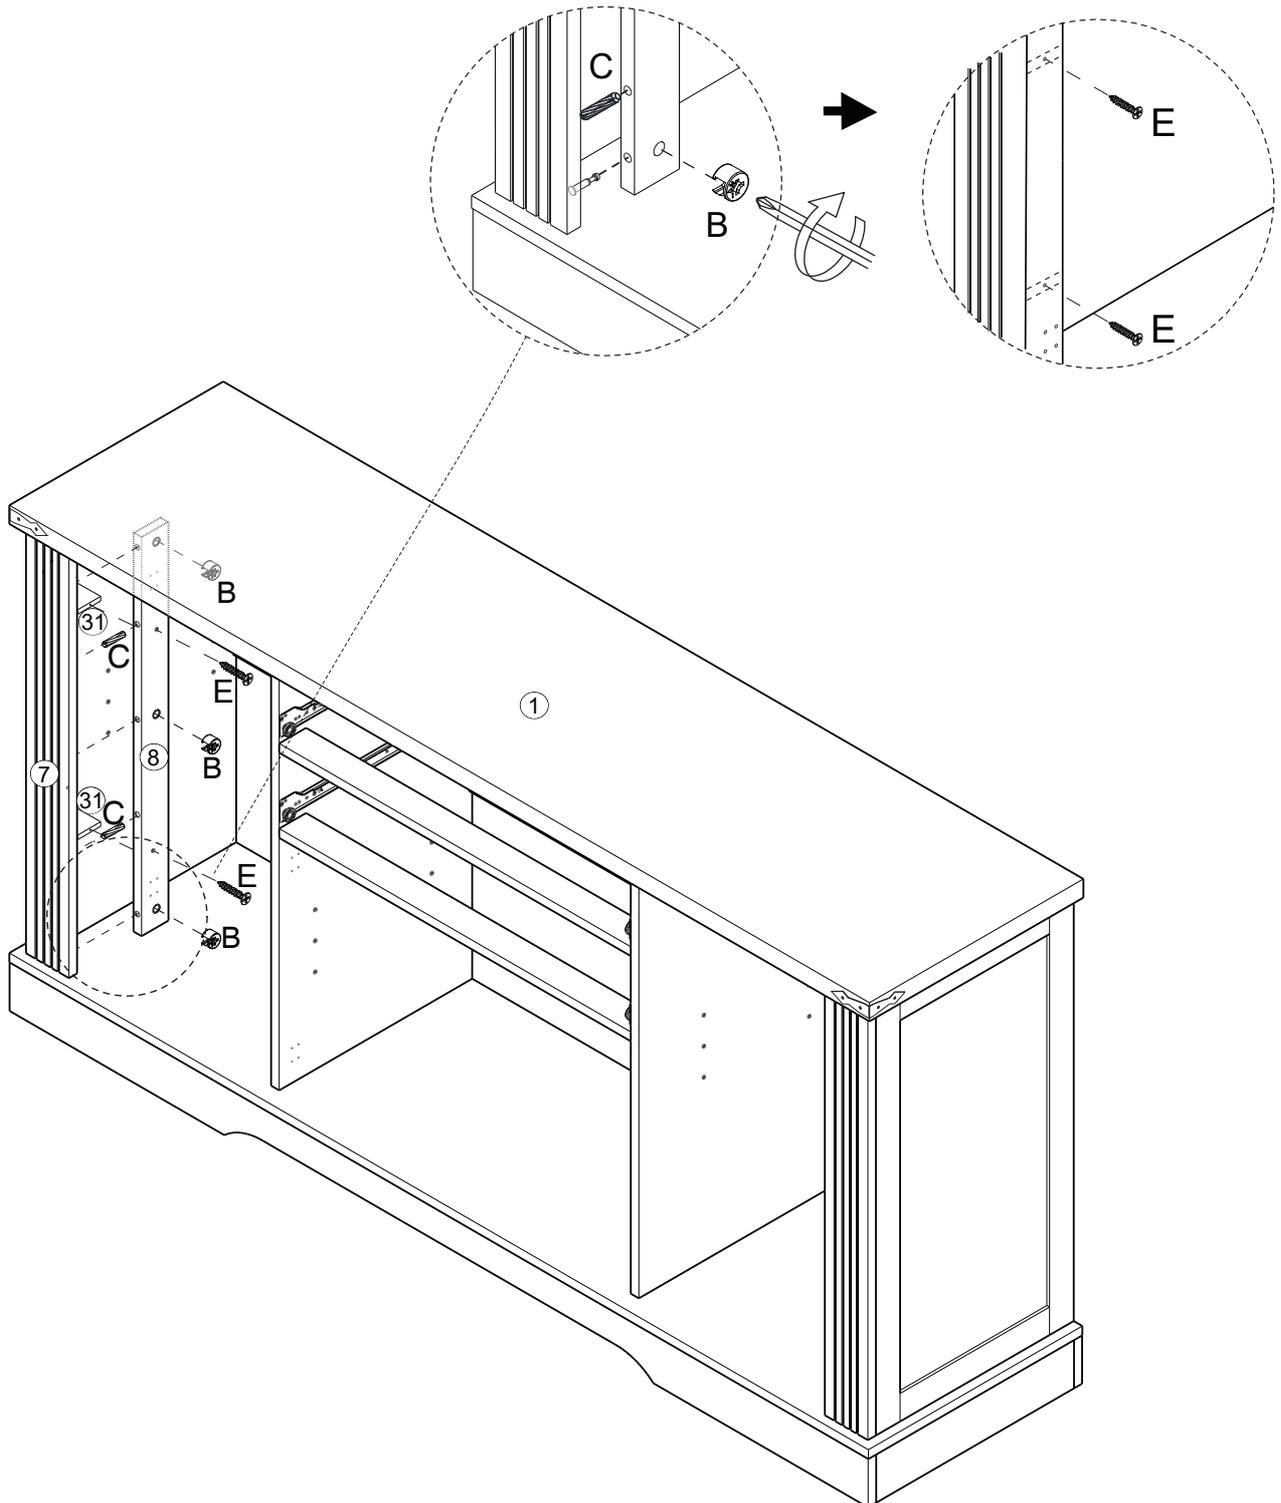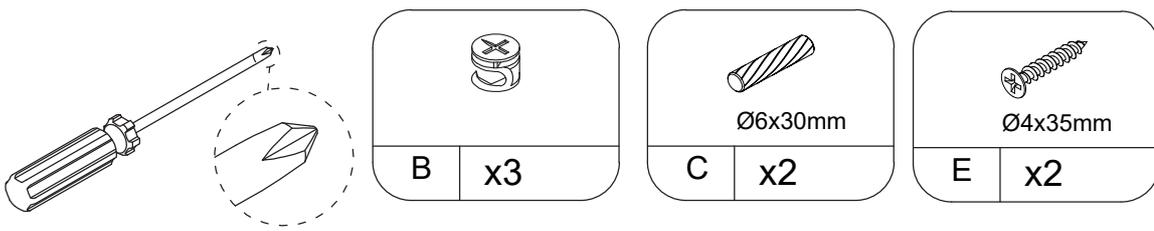






# STEP 23

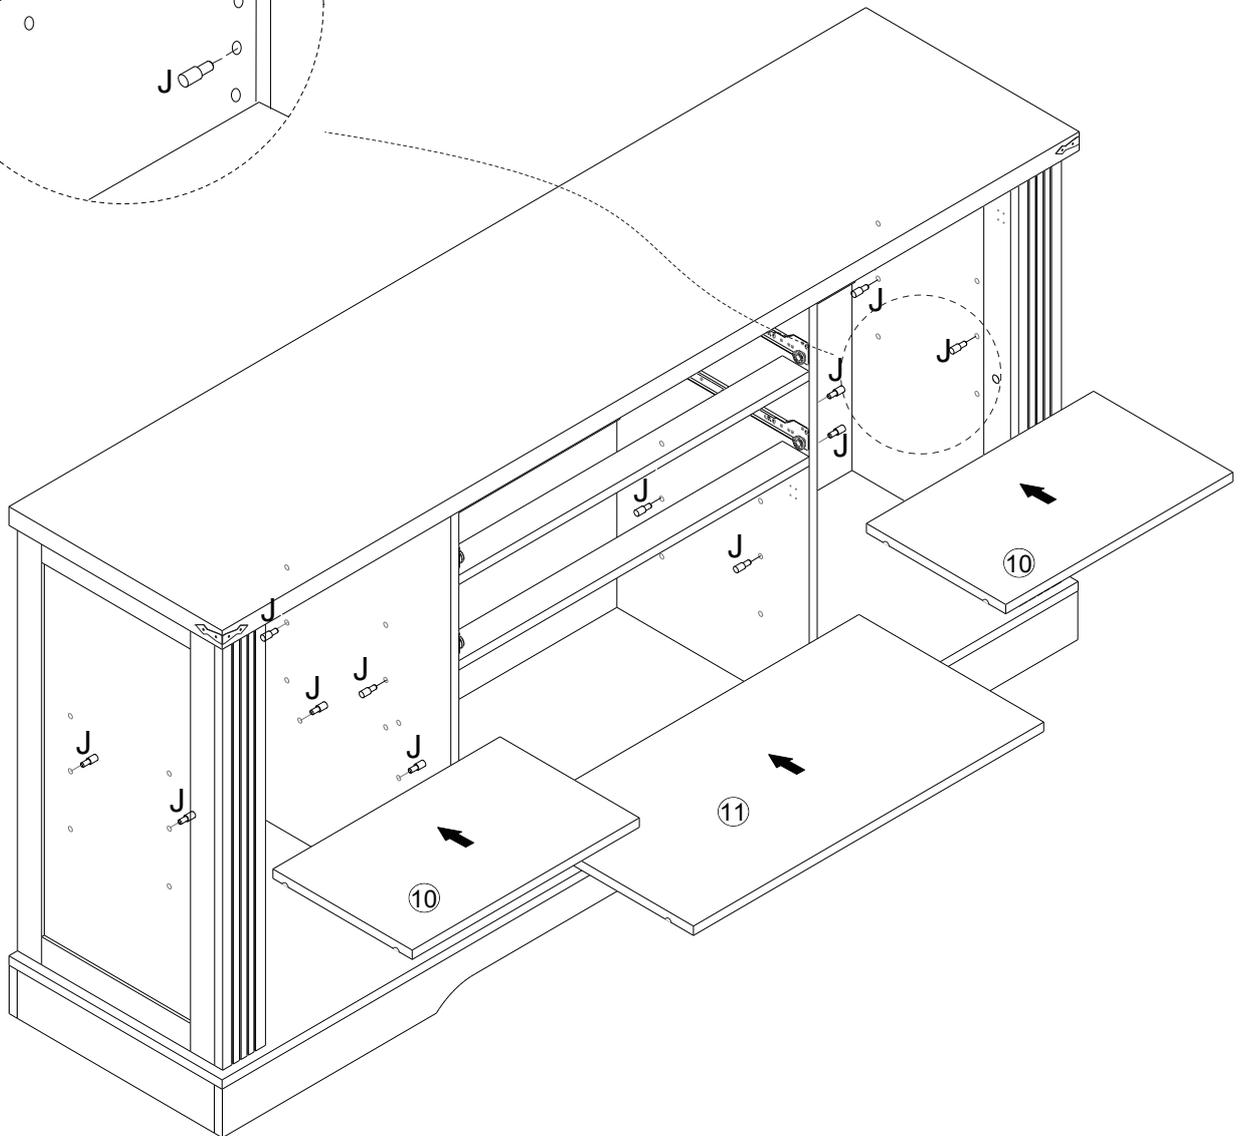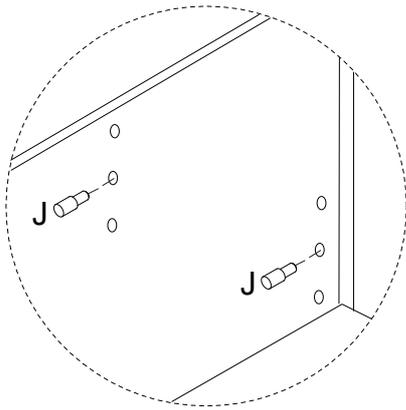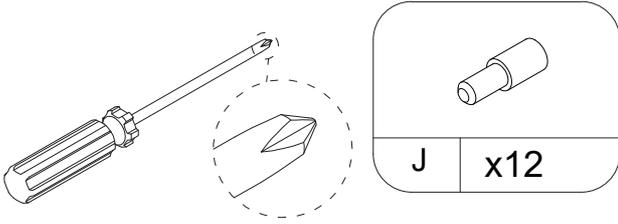





# STEP 24

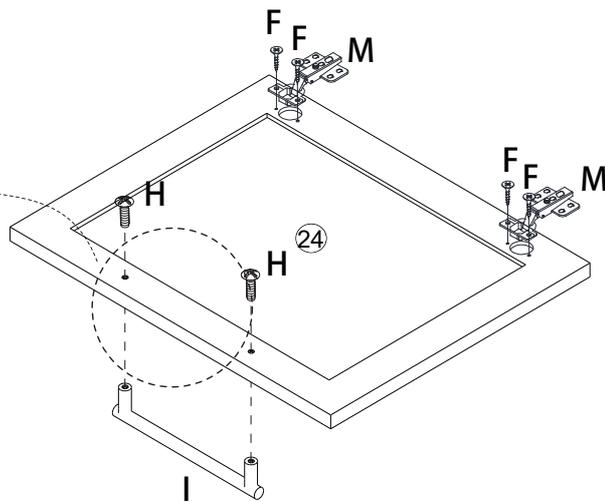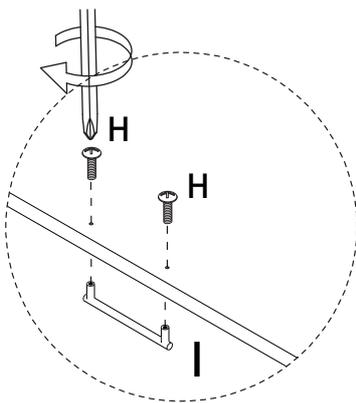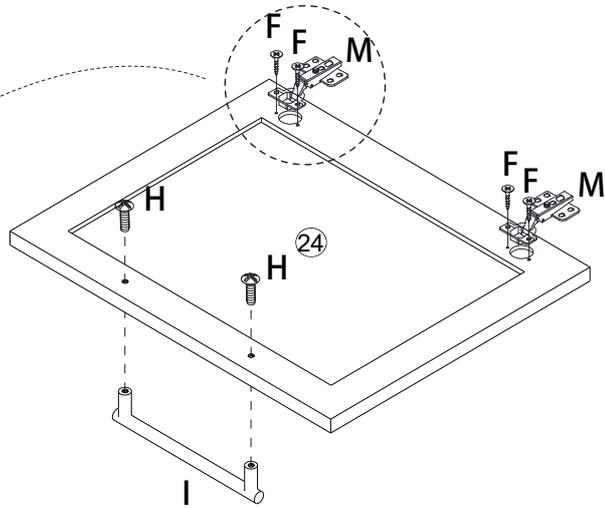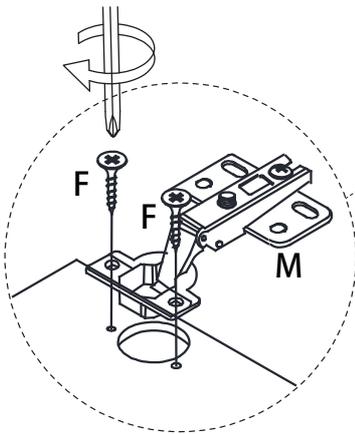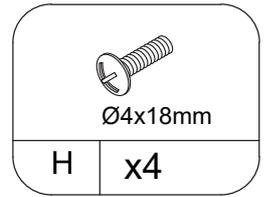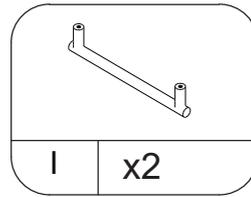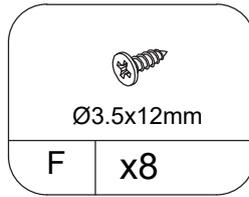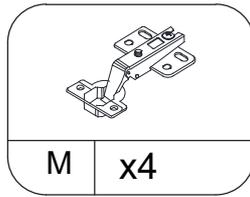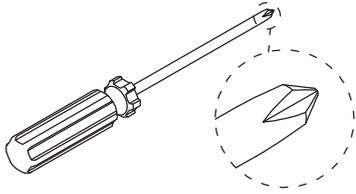





# STEP 25

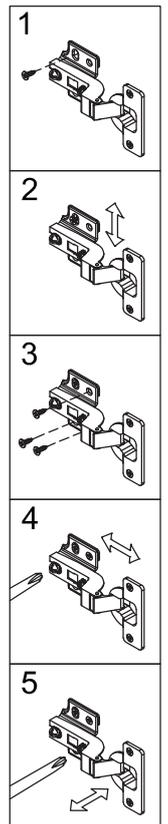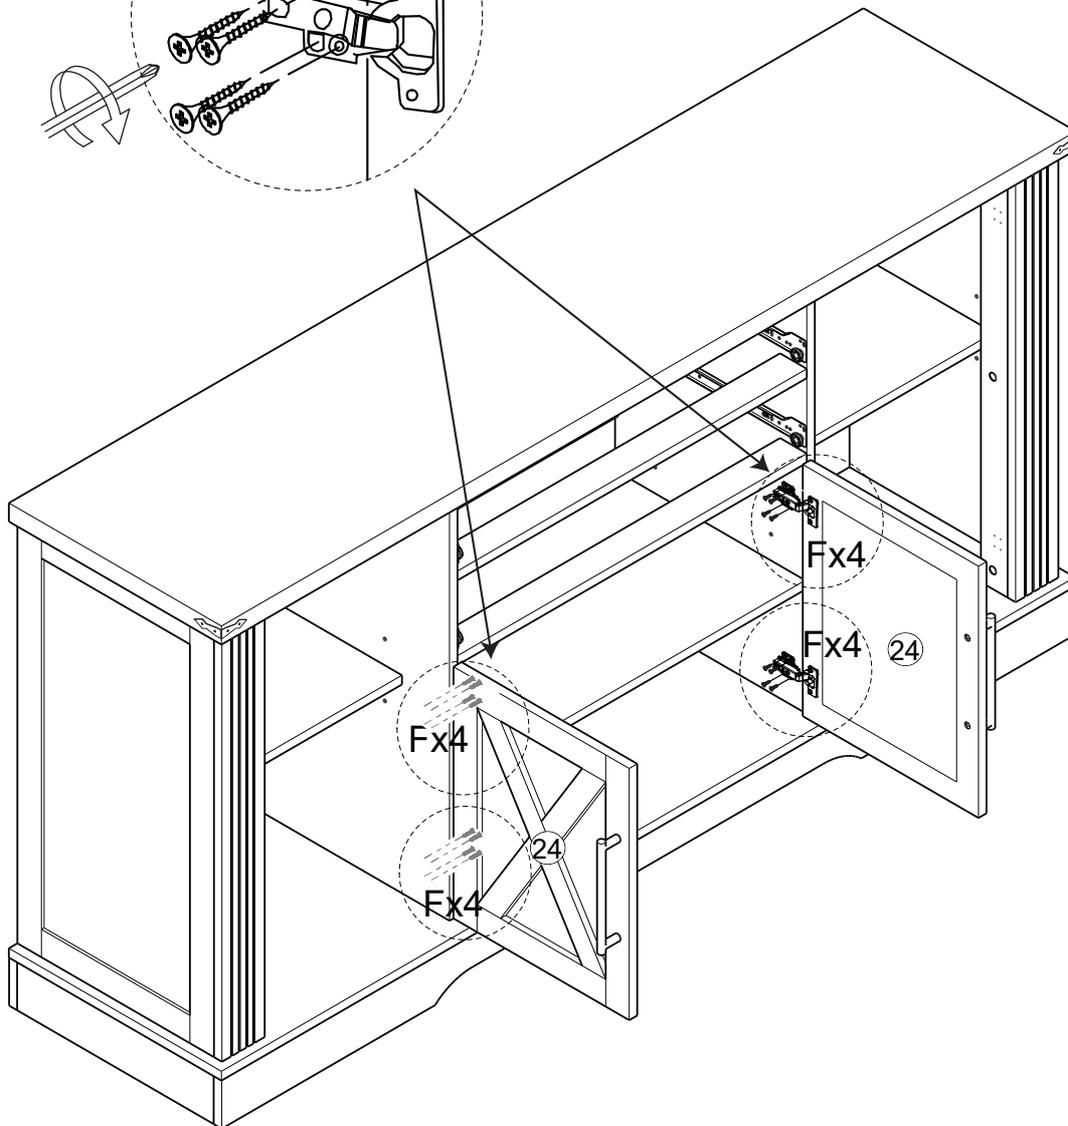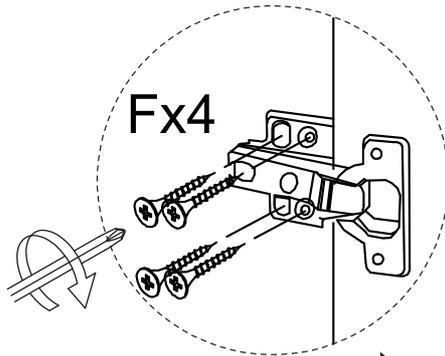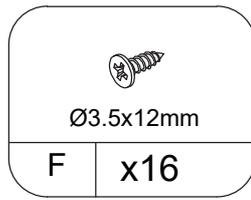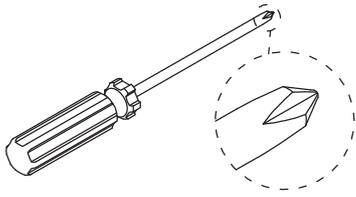







# STEP 26

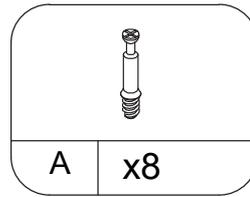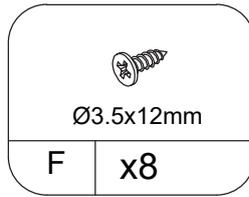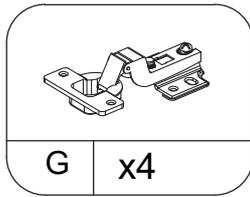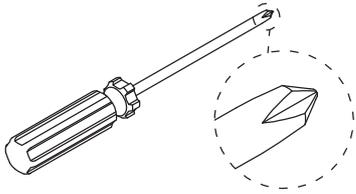


x2

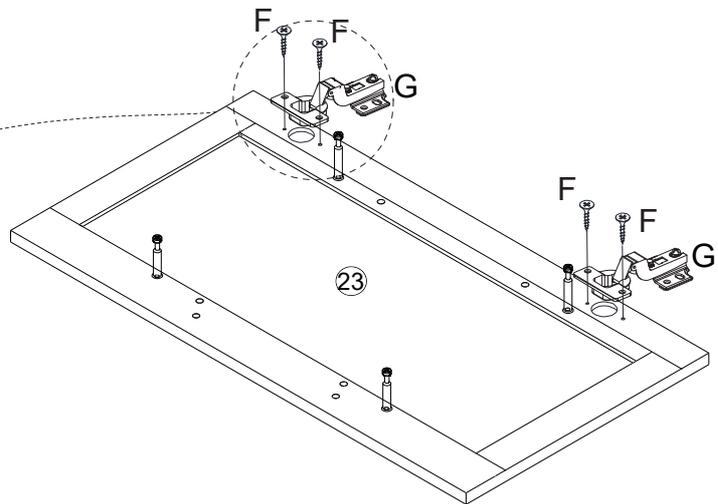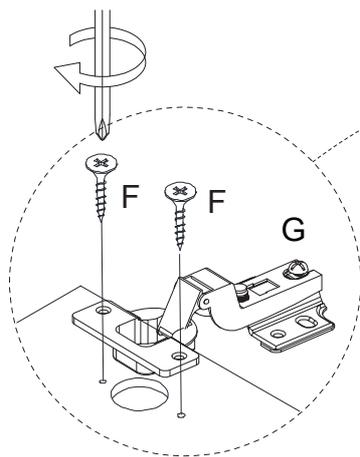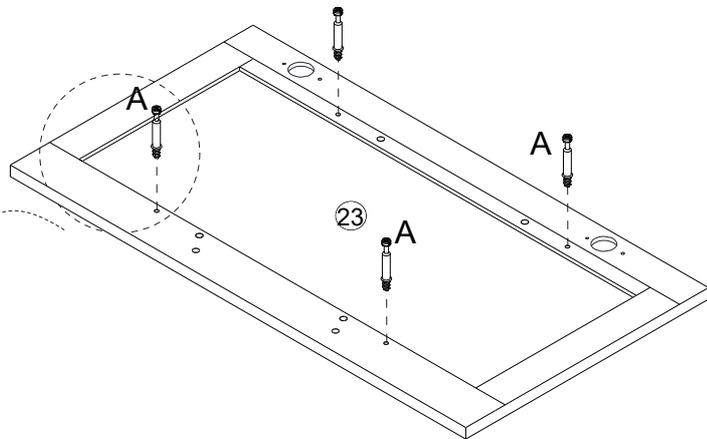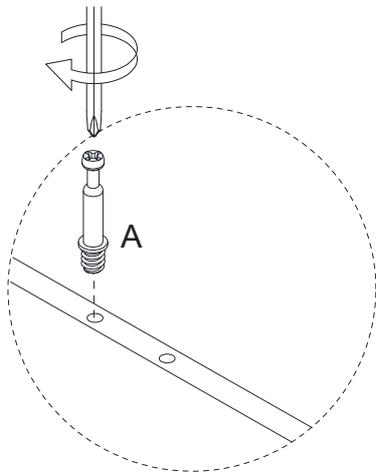

# STEP 27

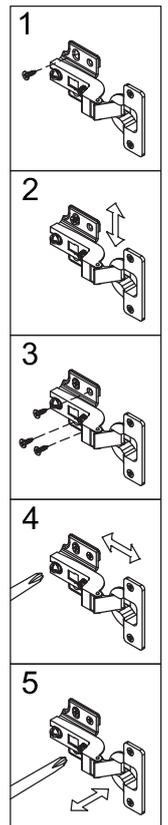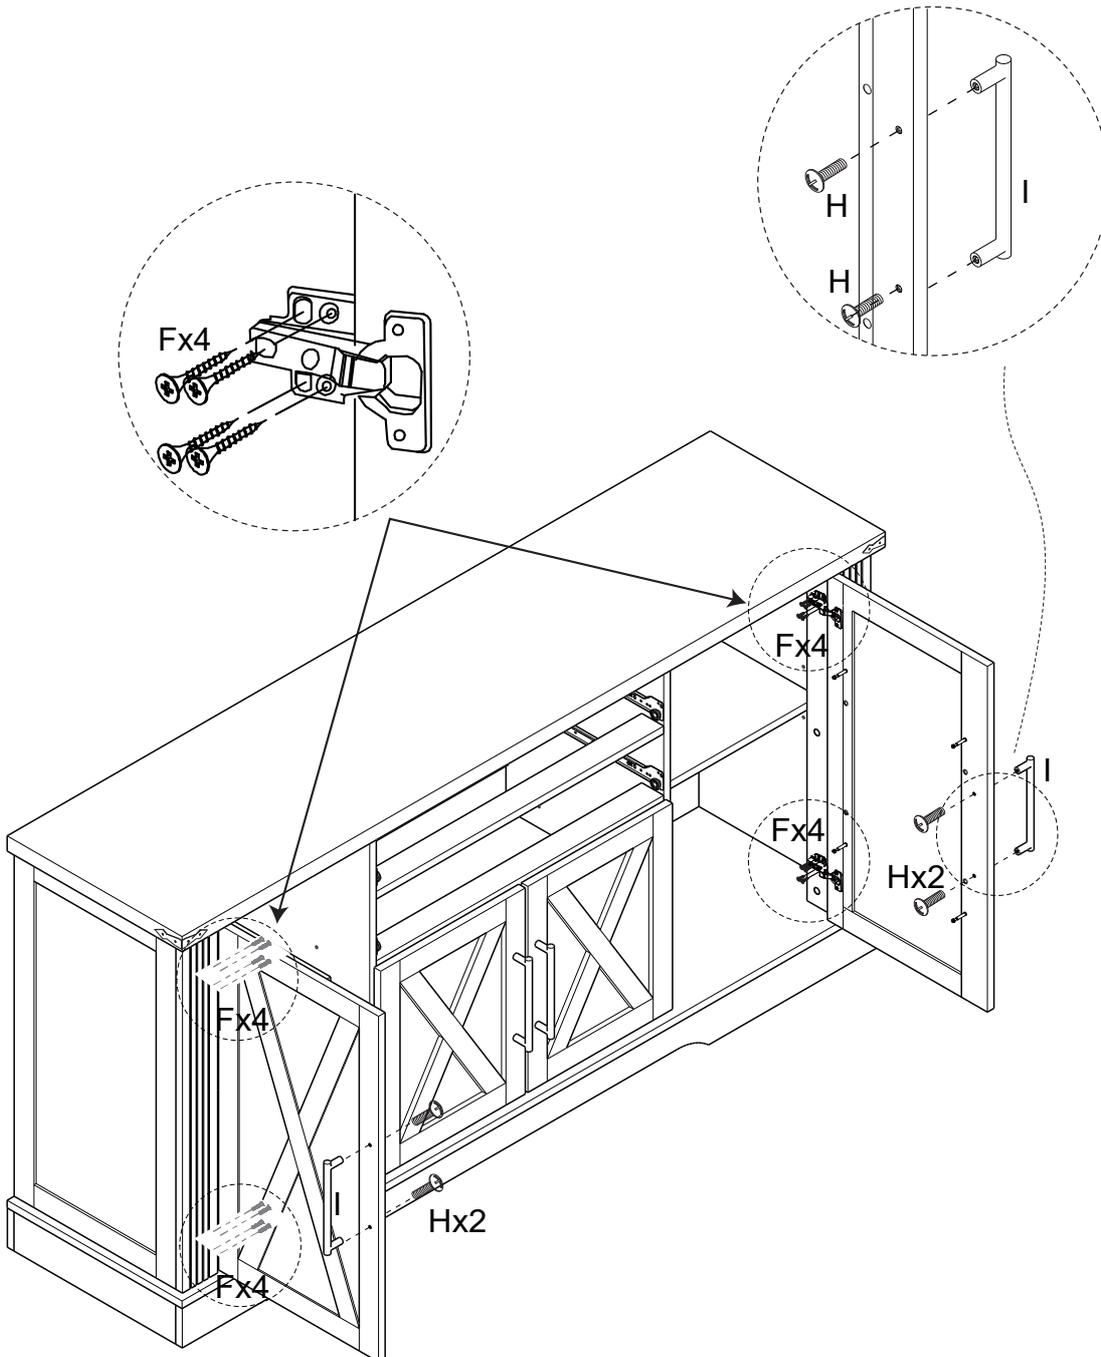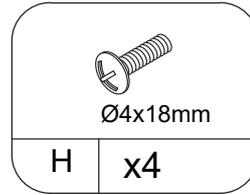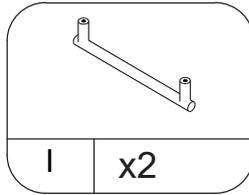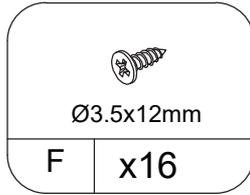
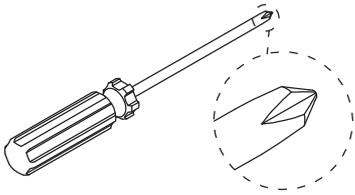


# STEP 28




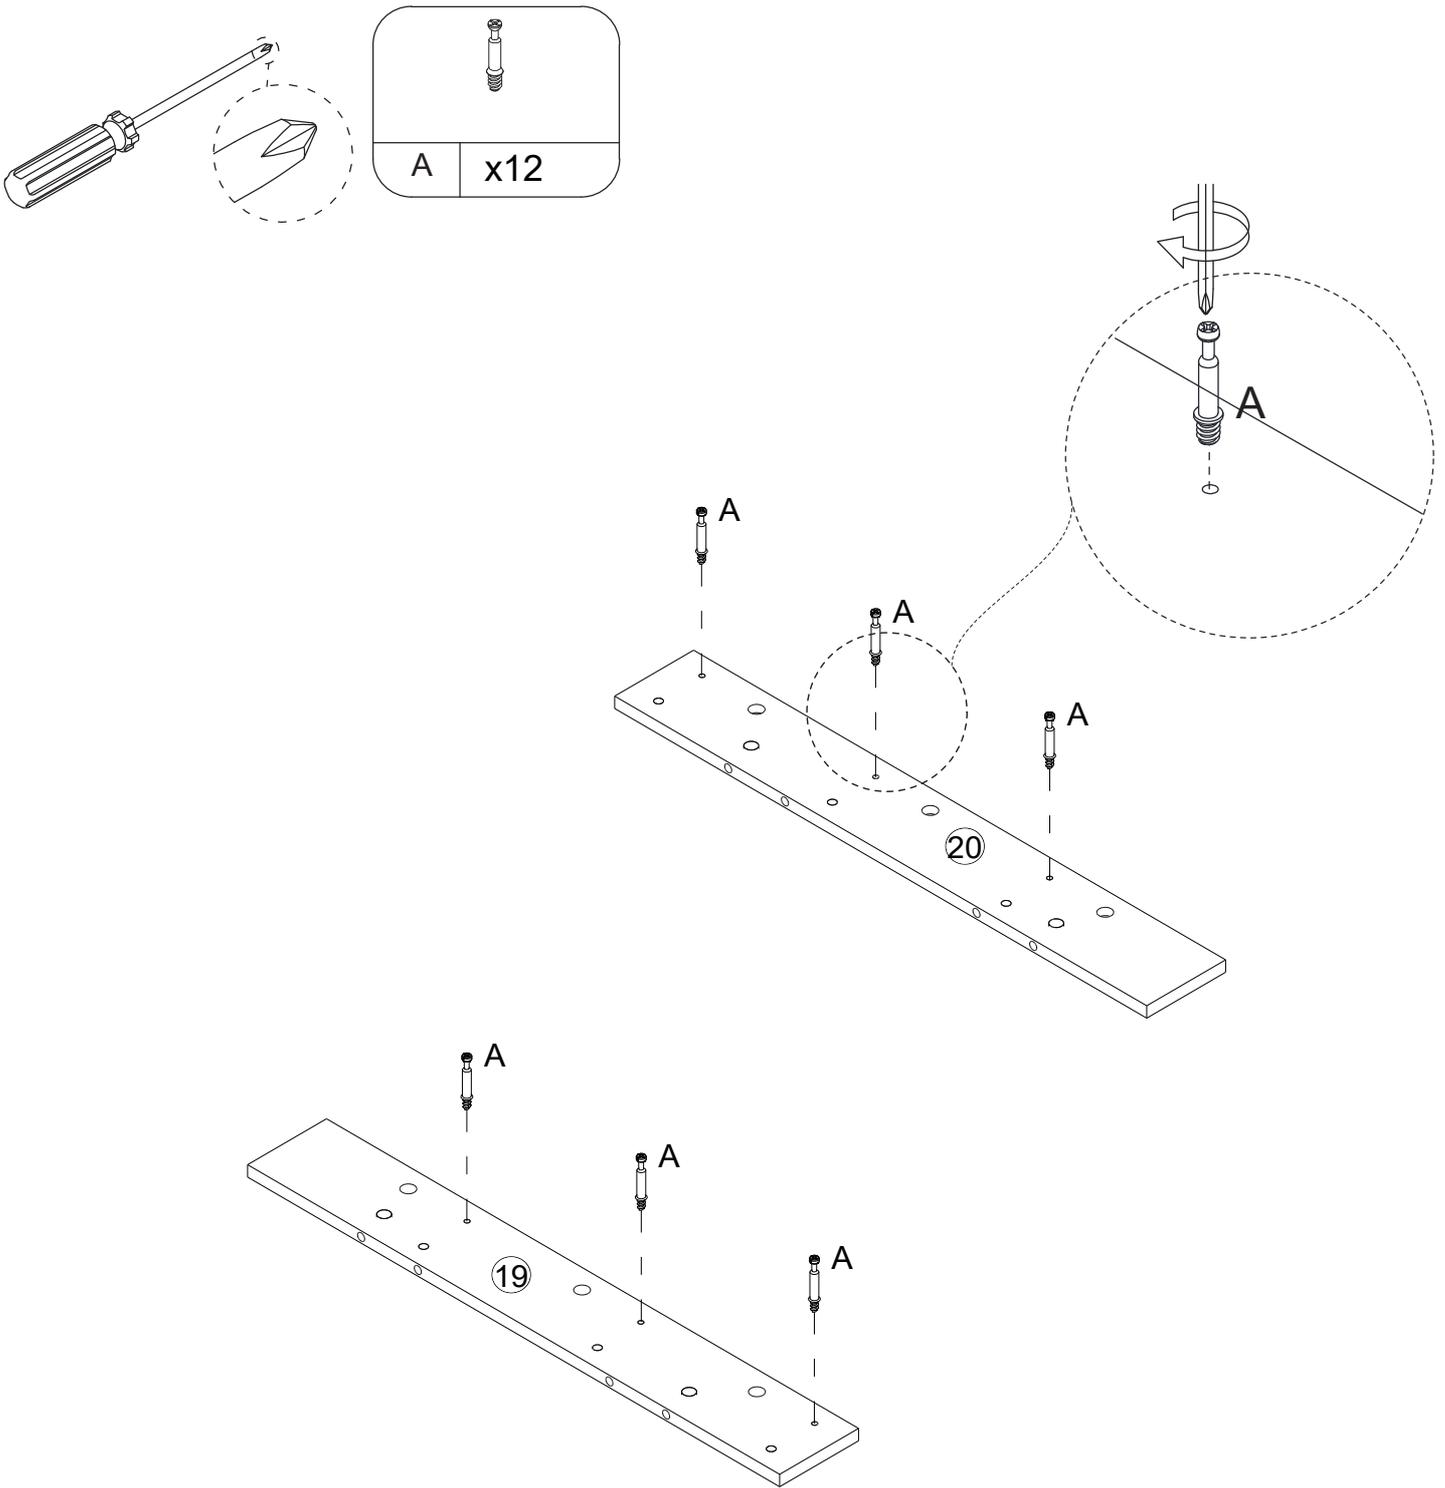


x2






# STEP 29

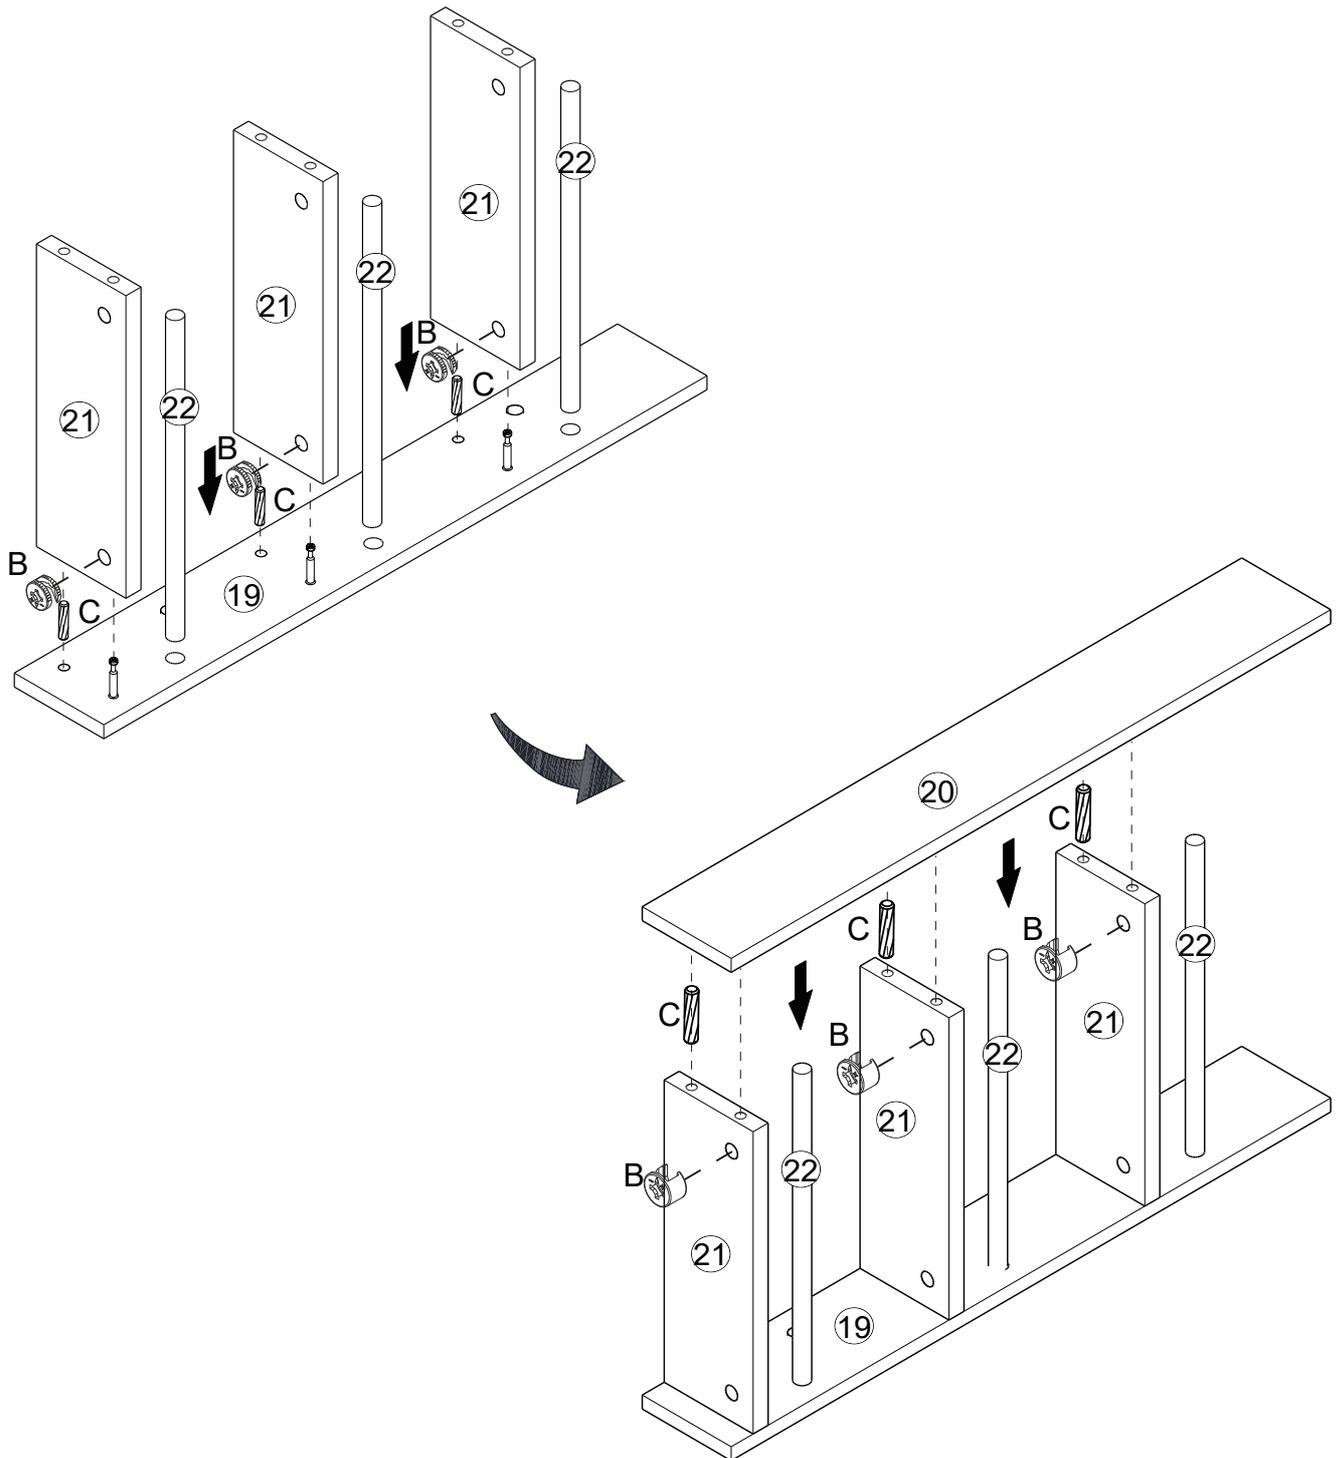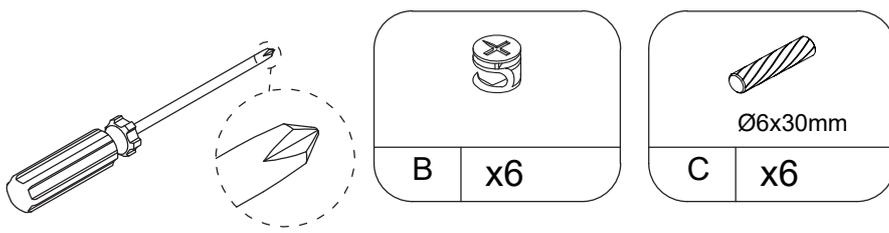

# STEP 30

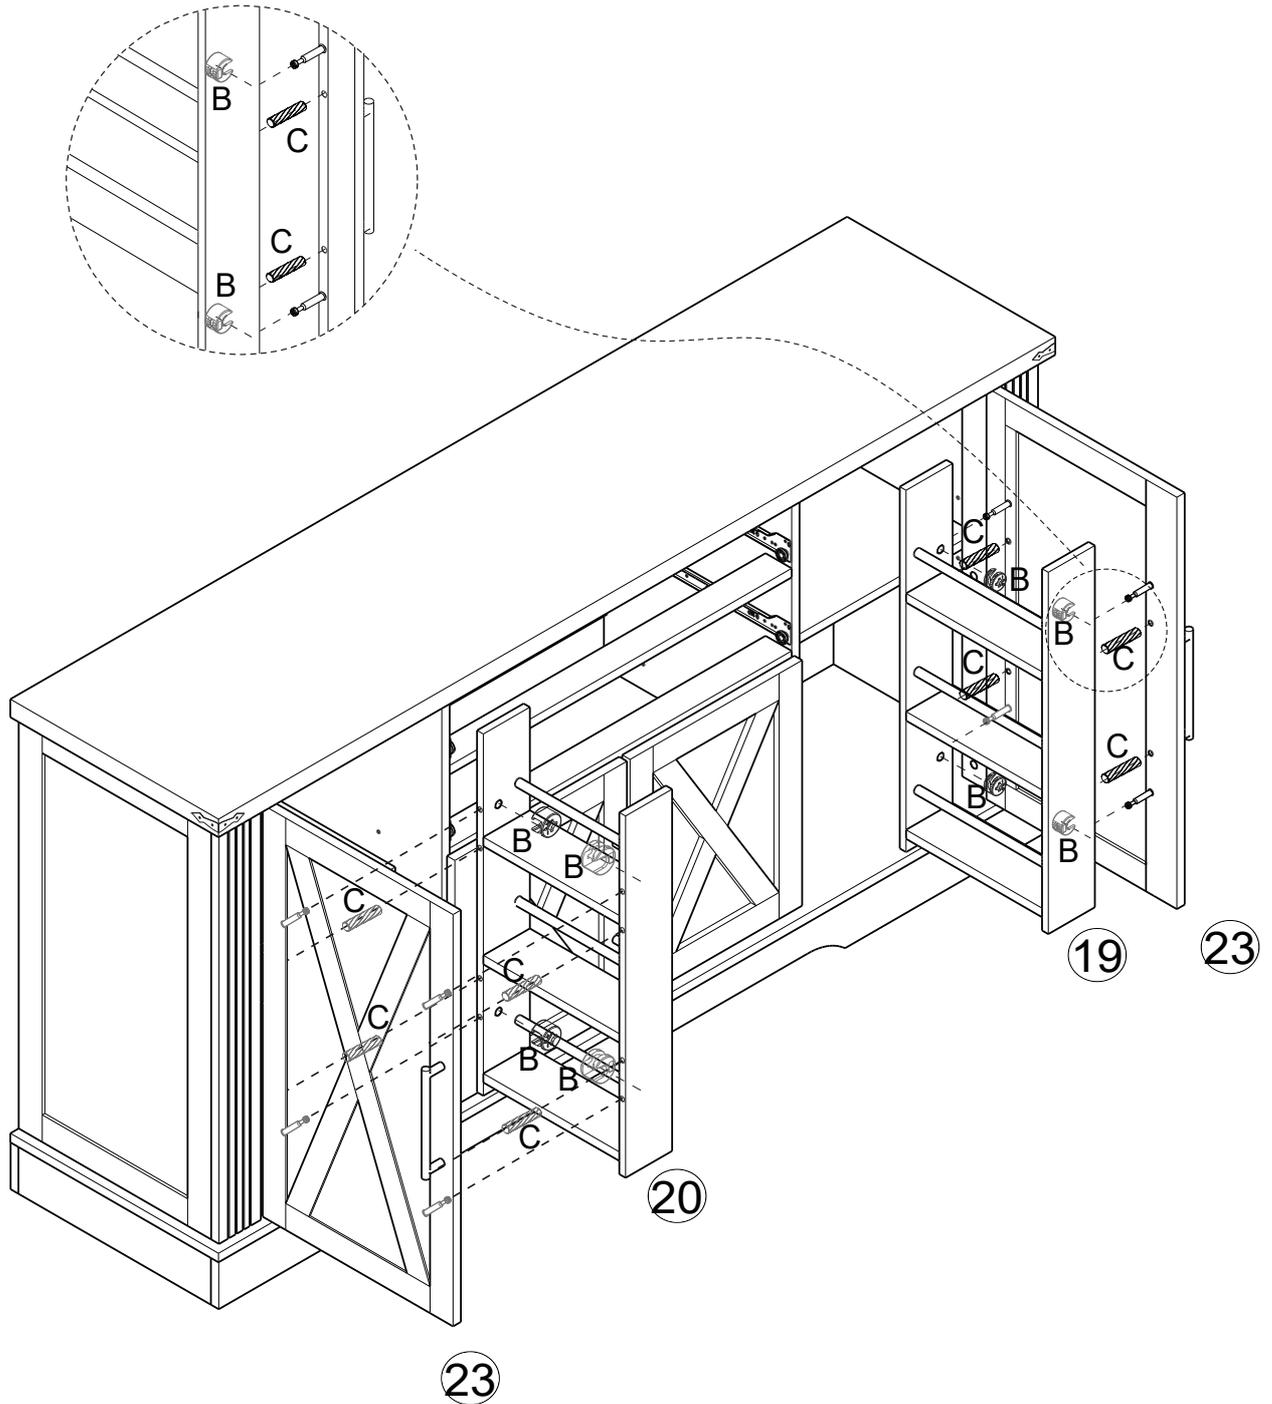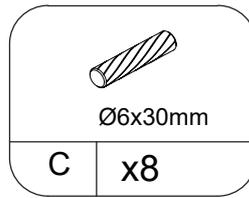
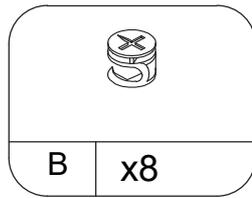
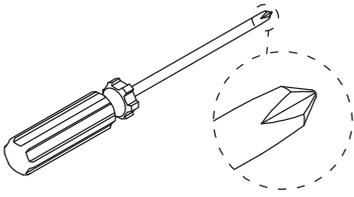


# STEP 31

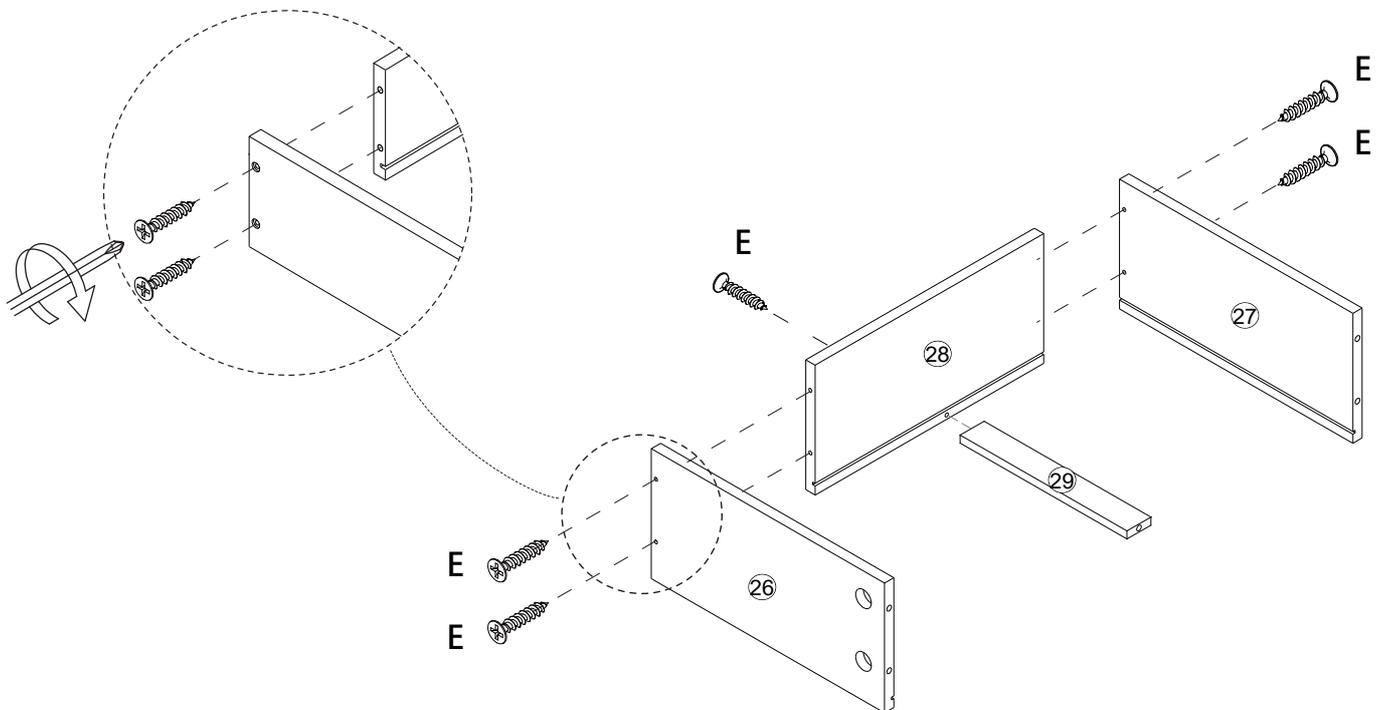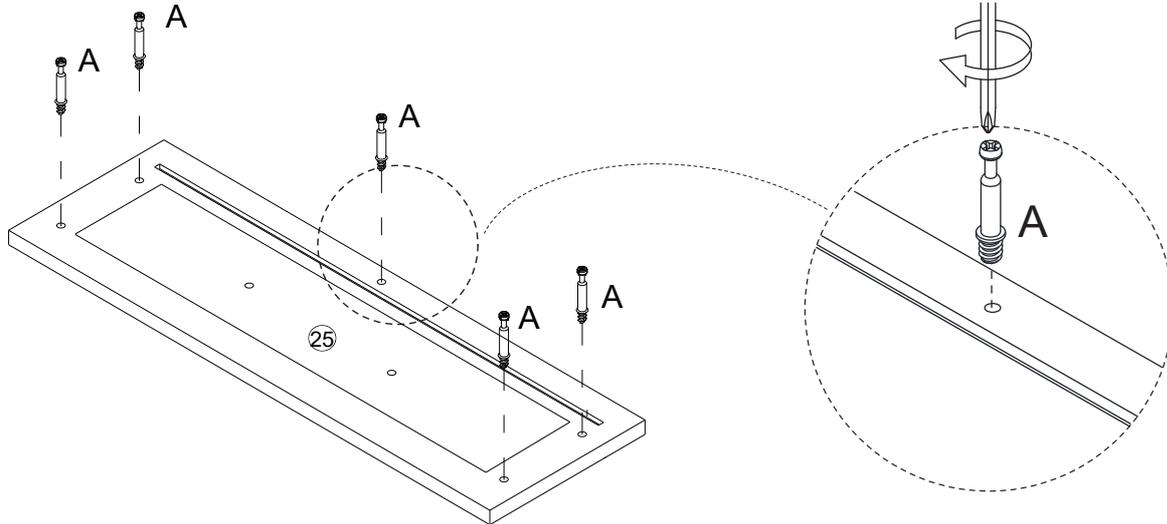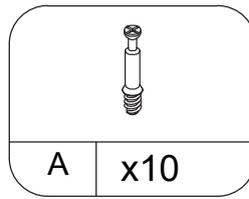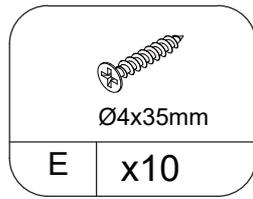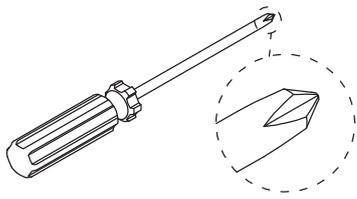






x2

# STEP 32

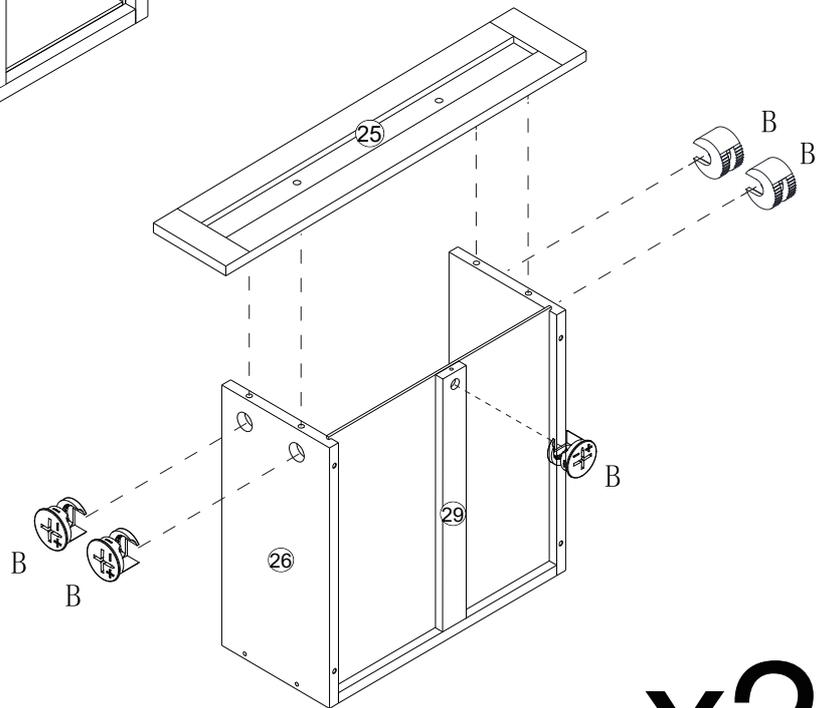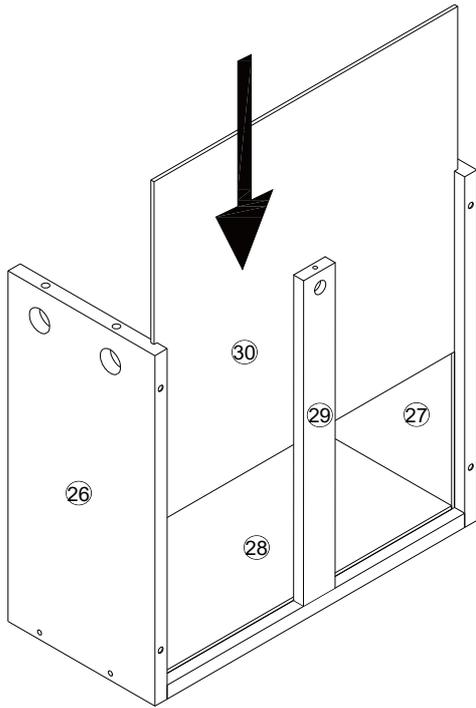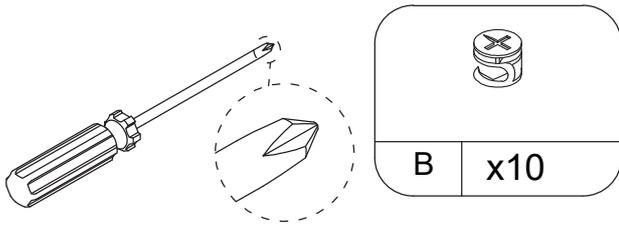


**x2**

# STEP 33

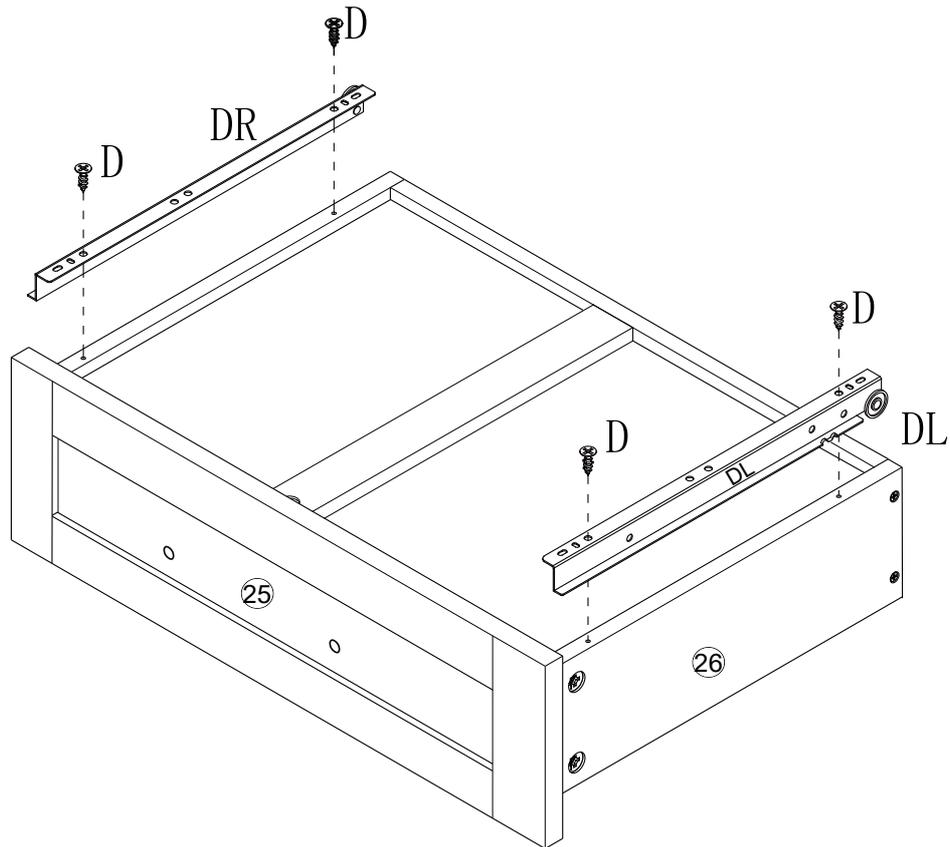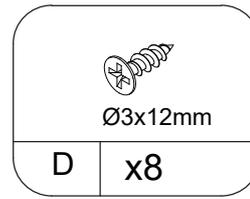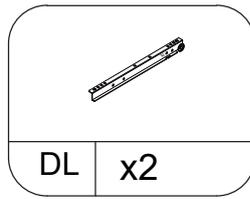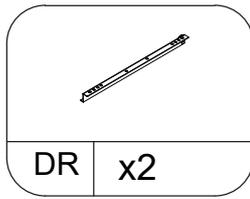
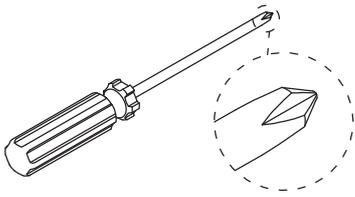


x2

## REMARK:







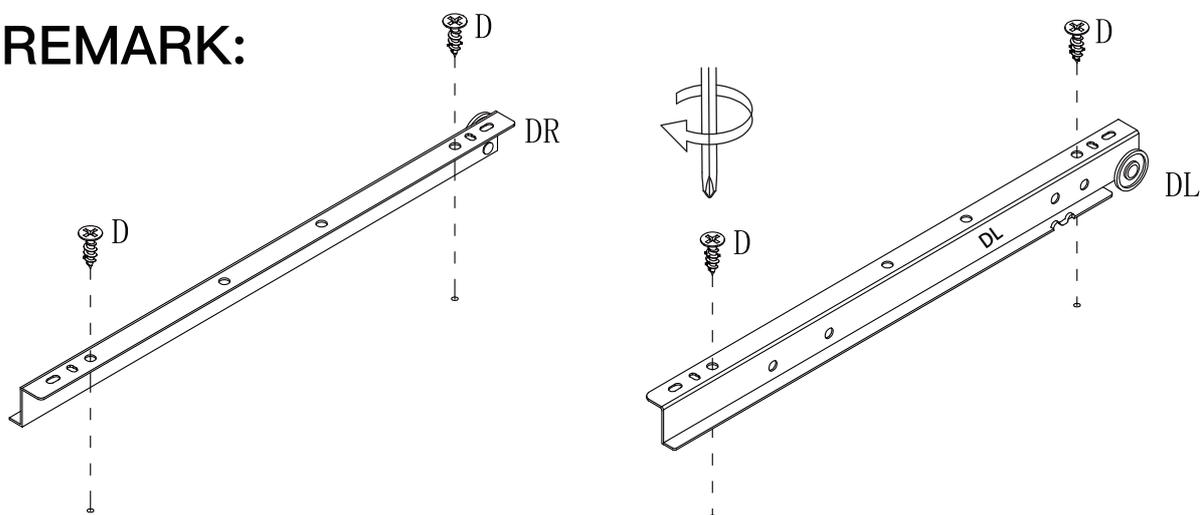


# STEP 34

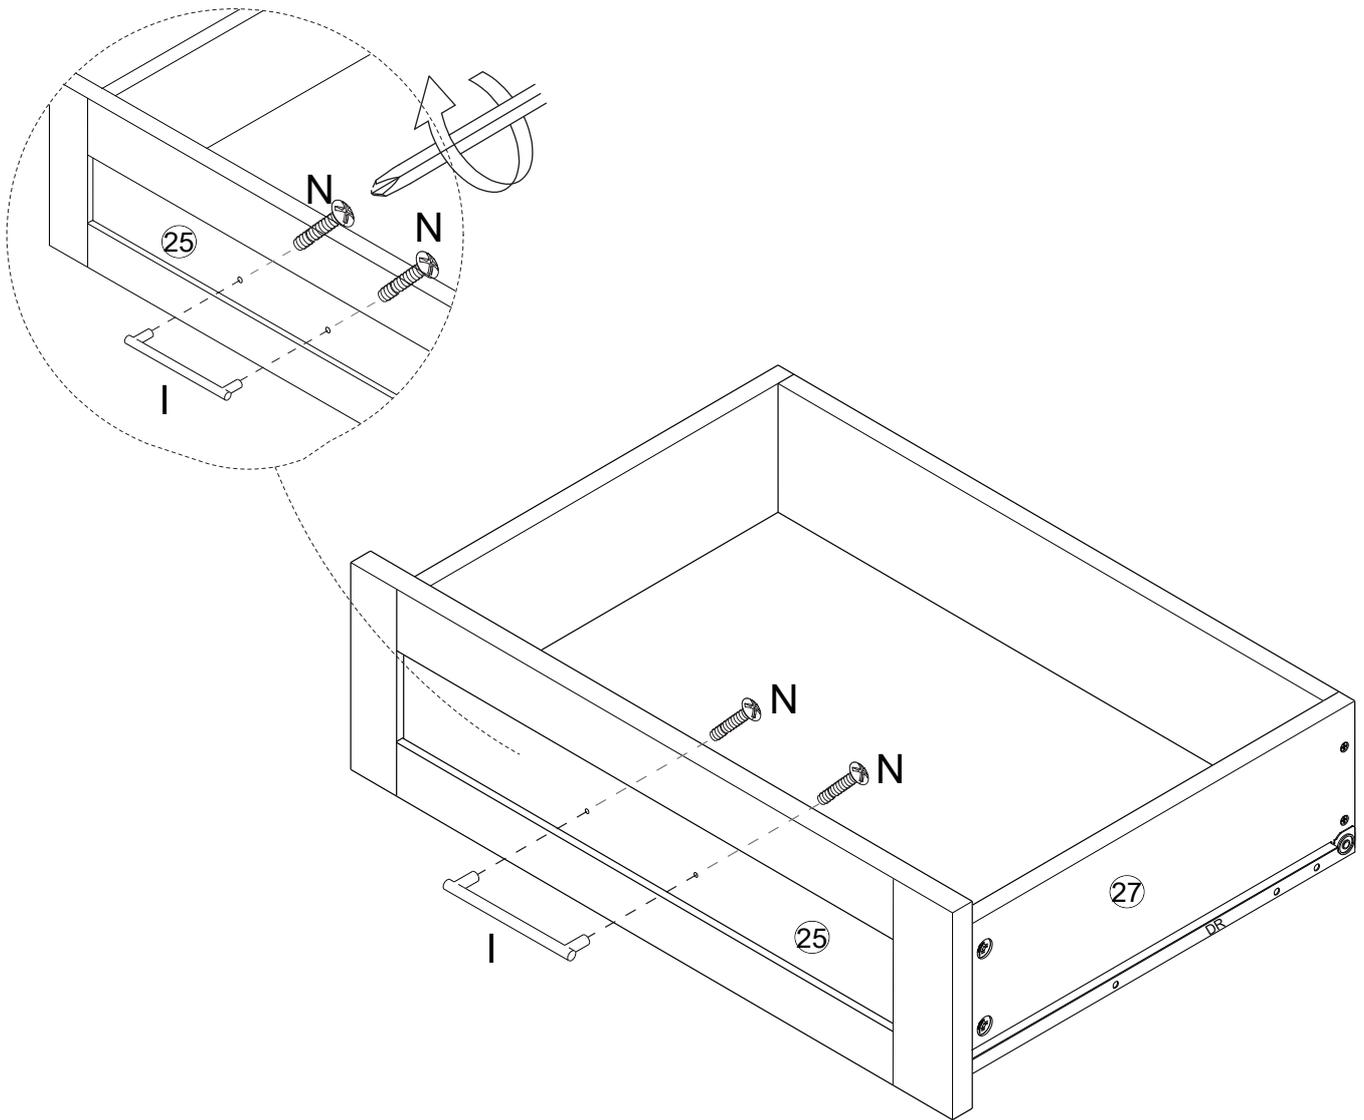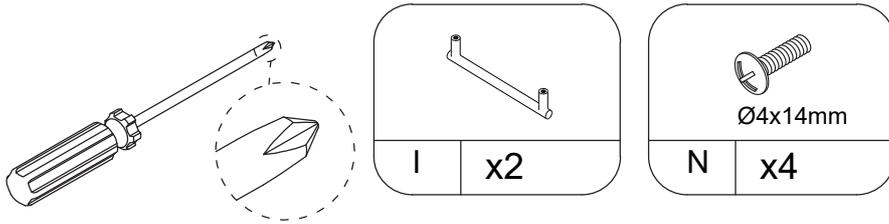

x2

# STEP 35

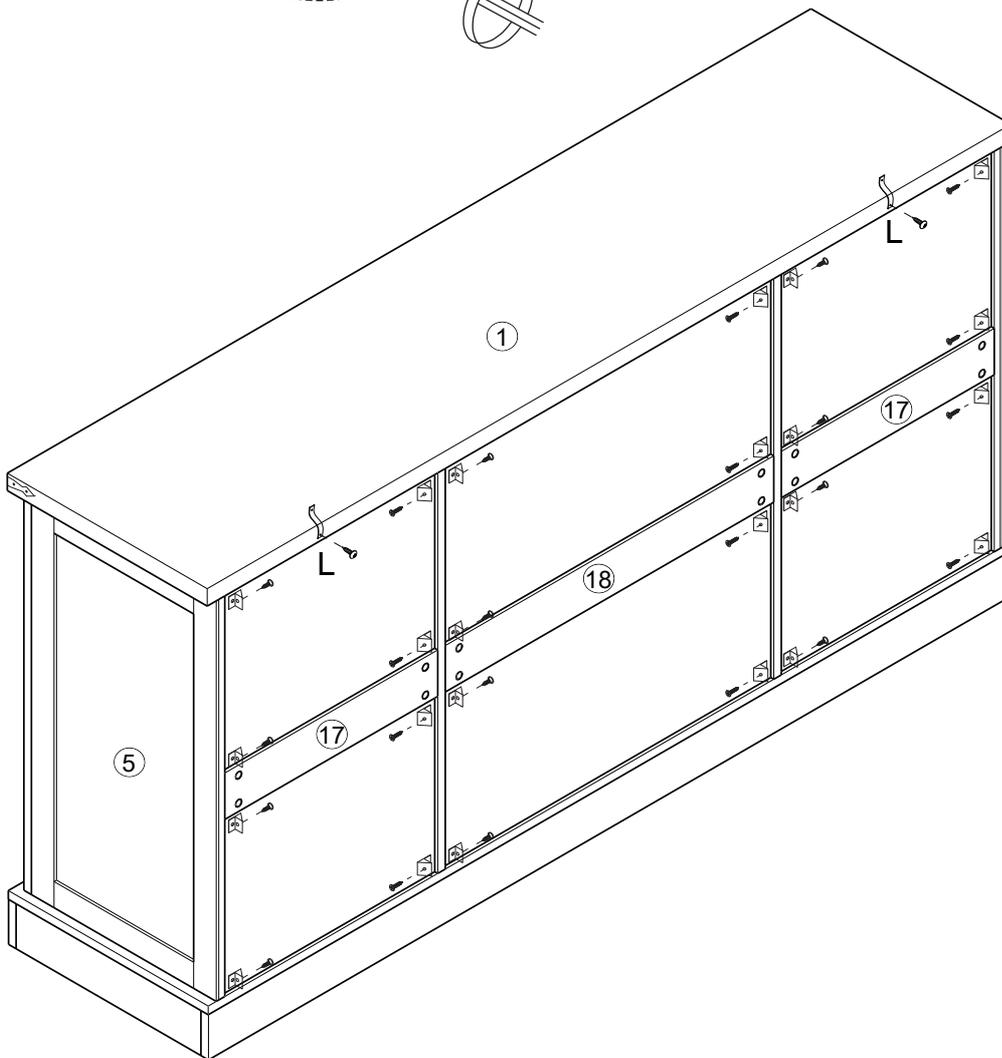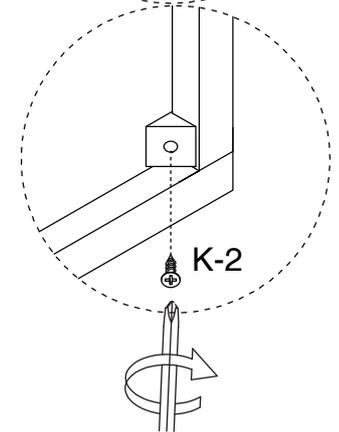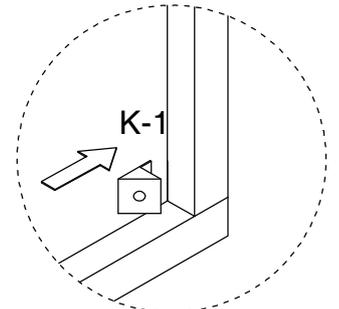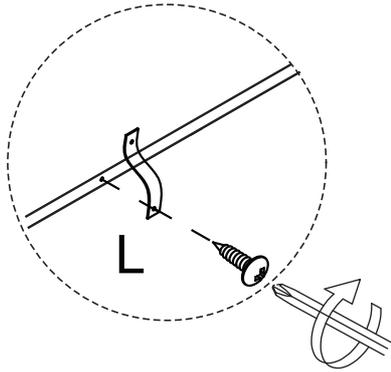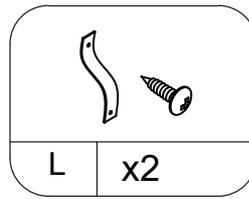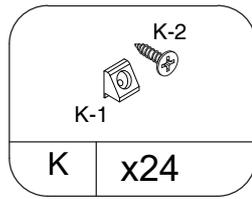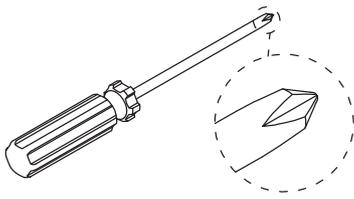

# STEP 36

