


Hall Tree

Assembly Instructions - Please keep for future reference

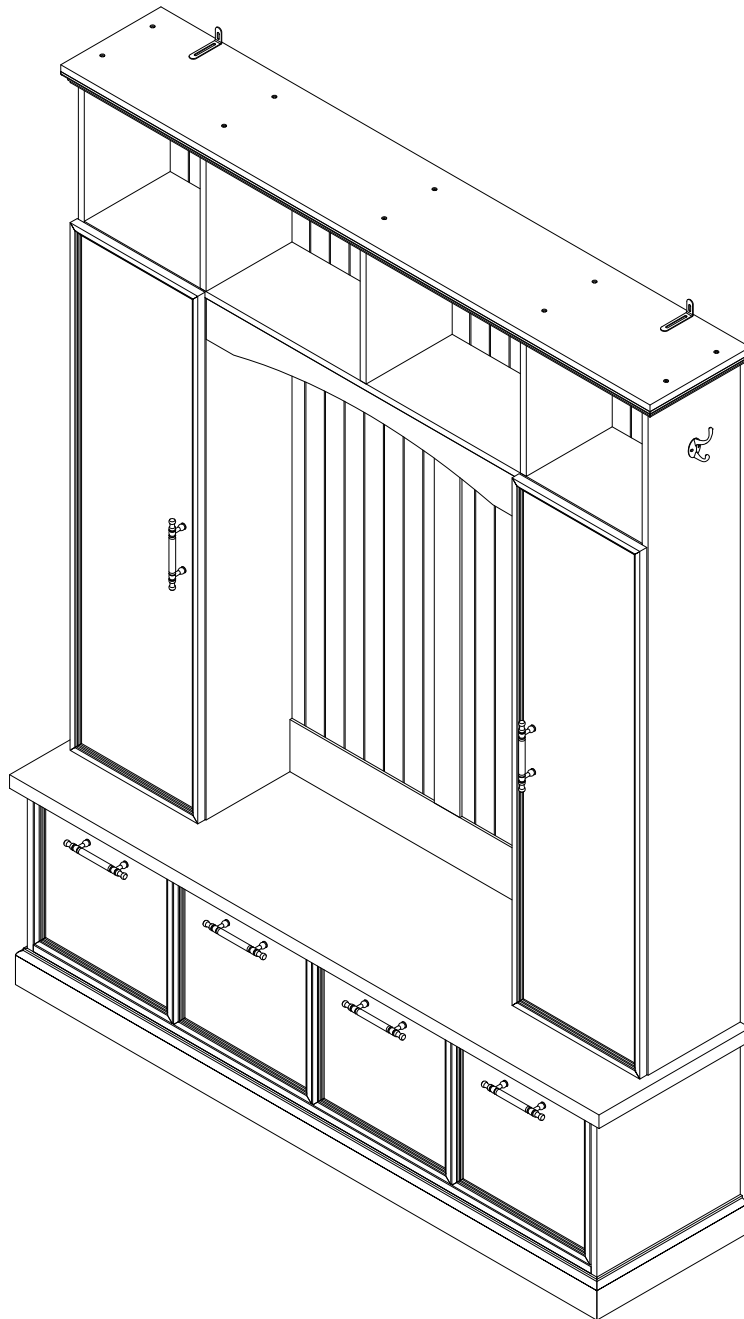

Dimensions

Width-58.5inch

Depth-15.25inch

Height-76.77inch

Important - Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

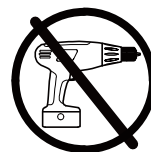

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-










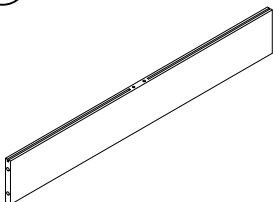
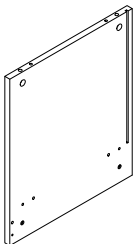
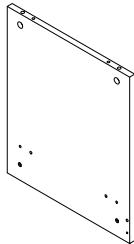
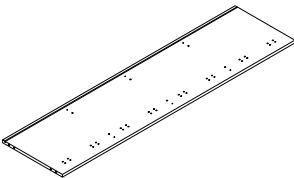
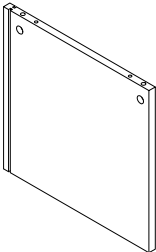
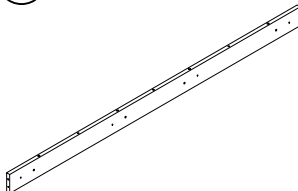
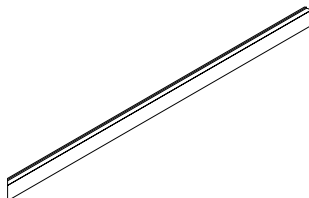
Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below







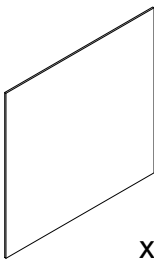
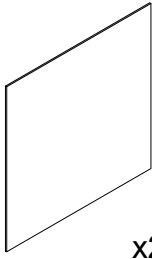
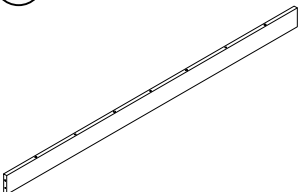
There are 2 boxes of this product.

Box 1: N721P313979
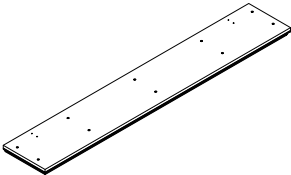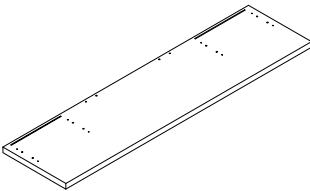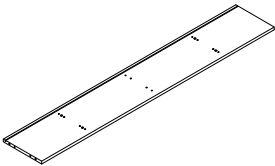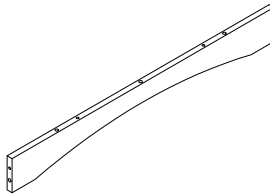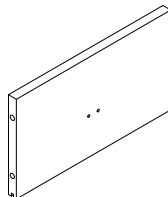
<p>① 1501*255*15</p>  <p>x1PC</p>	<p>② 1485*390*25</p>  <p>x1PC</p>	<p>③ 1485*228*15</p>  <p>x1PC</p>	<p>④ 1485*228*15</p>  <p>x1PC</p>
<p>⑤ 1416*227*15</p>  <p>x1PC</p>	<p>⑥ 320*228*15</p>  <p>x1PC</p>	<p>⑨ 800*95*15</p>  <p>x1PC</p>	<p>⑩ 293*164*15</p>  <p>x2PCS</p>
<p>⑫ 870*64*15</p>  <p>x1PC</p>	<p>⑬ 800*114*15</p>  <p>x1PC</p>	<p>⑭ 426*360*15</p>  <p>x1PC</p>	<p>⑮ 426*360*15</p>  <p>x1PC</p>
<p>⑯ 1416*359*15</p>  <p>x1PC</p>	<p>⑰ 333*337*15</p>  <p>x3PCS</p>	<p>⑱ 1416*78*12</p>  <p>x1PC</p>	<p>⑲ 1482*80*15</p>  <p>x1PC</p>

Components - Fittings

Please check you have all the panels listed below

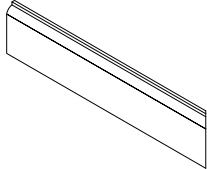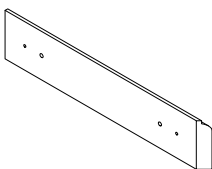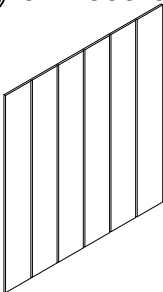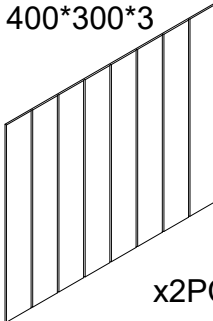










<p>②① 390*80*15</p>  <p>x1PC</p>	<p>②① 390*80*15</p>  <p>x1PC</p>	<p>②② 327*300*3</p>  <p>x2PCS</p>	<p>②③ 400*300*3</p>  <p>x2PCS</p>
<p>②④ 992*300*3</p>  <p>x2PCS</p>	<p>②⑤ 877*375*3</p>  <p>x2PCS</p>	<p>②⑥ 342*340*3</p>  <p>x2PCS</p>	<p>②⑦ 342*340*3</p>  <p>x2PCS</p>
<p>③② 1416*78*12</p>  <p>x1PC</p>			

Components - Fittings

Please check you have all the panels listed below

There are 2 boxes of this product.






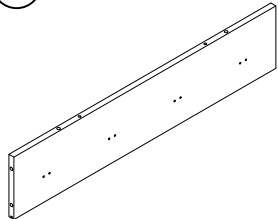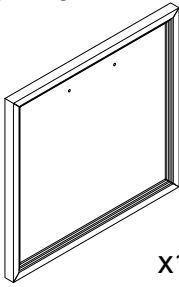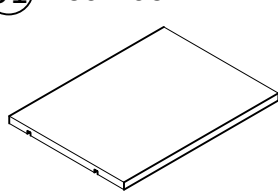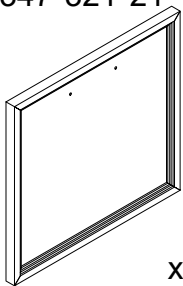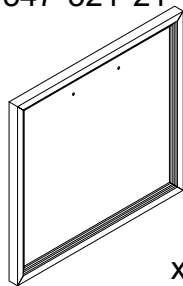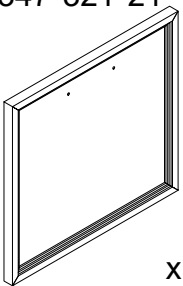
















Box 2: N721P313980

<p>⑥ 320*228*15</p>  <p>x2PCS</p>	<p>⑦ 1150*228*15</p>  <p>x1PC</p>	<p>⑧ 1150*228*15</p>  <p>x1PC</p>	<p>⑪ 800*164*15</p>  <p>x1PC</p>
<p>⑳ 1162*323*21</p>  <p>x1PC</p>	<p>㉑ 1162*323*21</p>  <p>x1PC</p>	<p>㉓ 347*321*21</p>  <p>x1PC</p>	<p>㉔ 289*195*12</p>  <p>x4PCS</p>
<p>㉖ 347*321*21</p>  <p>x1PC</p>	<p>㉗ 347*321*21</p>  <p>x1PC</p>	<p>㉘ 347*321*21</p>  <p>x1PC</p>	



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 (A) M6x35mm Cam Bolt x 59+3	 (B) M15x10mm Cam lock x 59+3	 (C) M6x30mm Dowel x 72+3	 (D) M4x35mm Screw x 26+2
 (E) M6x10mm Dowel x 8+1	 (F) M4x20mm Screw x 8+1	 (G) Hook x 8	 (H) M3.5x14mm Screw x 16+1
 (I) Anti-Inverted Iron x 2	 (J) M4x12mm Screw x 4	 (K) M5x40mm Screw x 8+1	 (L) Plastic Connector x 48
 (M) M3x16mm Screw x 48+2	 (N) SHELF PIN x 16	 (O) M3.5x14mm Screw x 84+3	 (P) HINGE x 6
 (Q) HINGE x 8	 (R) Handle x 6	 (S) M4x16mm Screw x 12+1	 (T) WALL ANCHOR x 2
 (U) SPANNER x 1	 (V) STICKERS x 6+2		

Tools required



Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

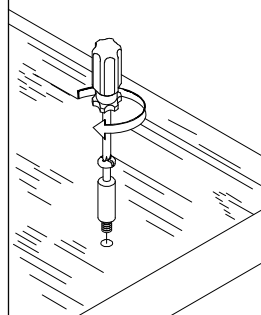

Step 2

Push the male camlock into the entry hole.

2

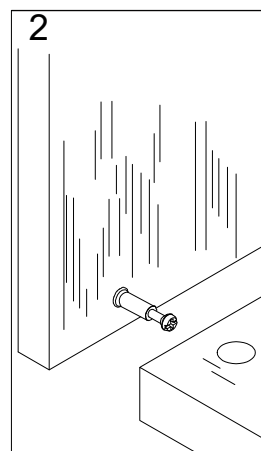


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

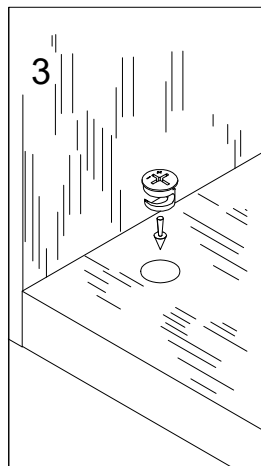


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

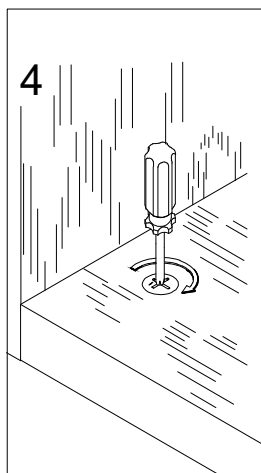


Assembly Instructions

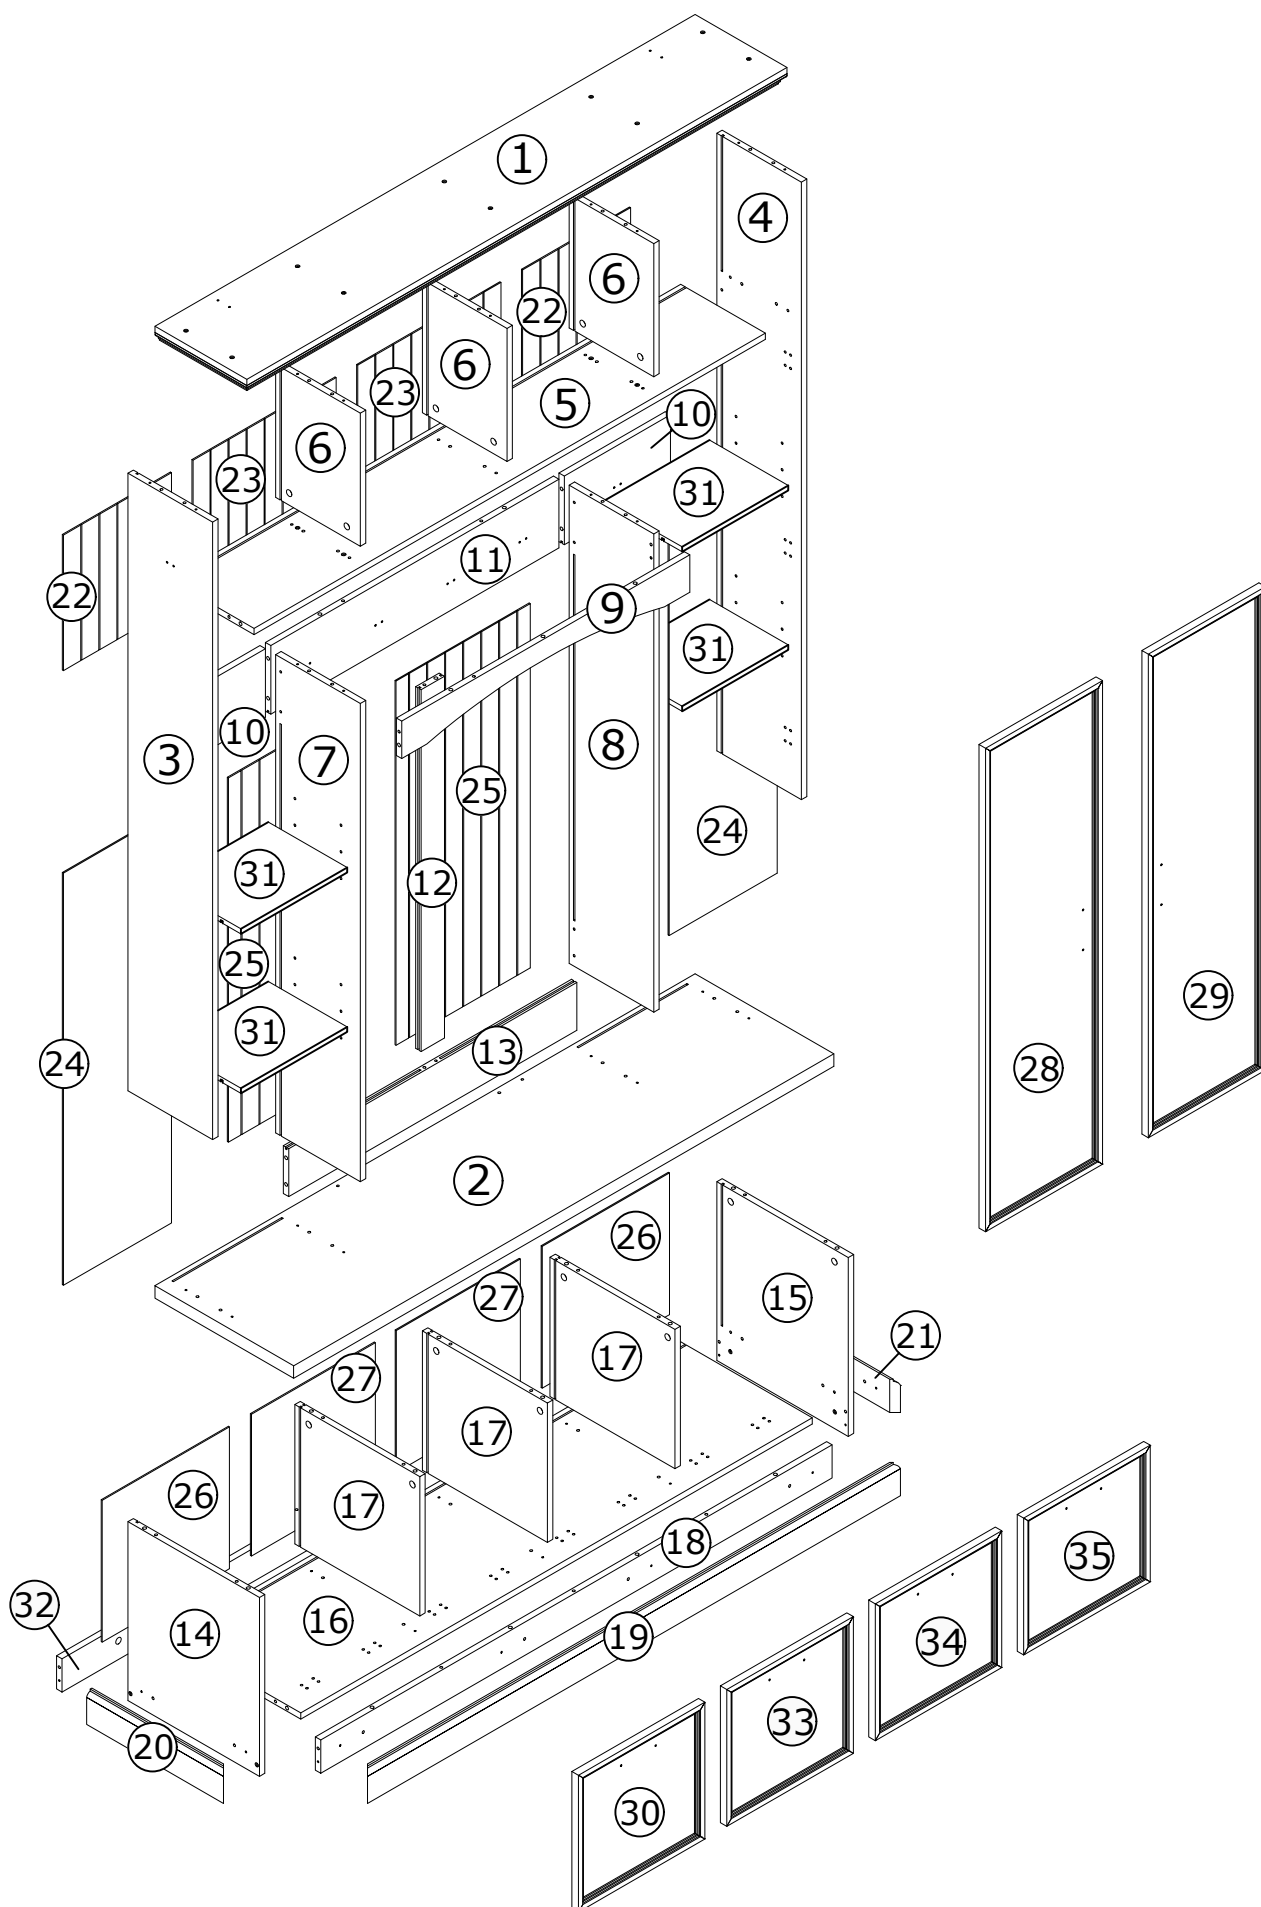

Assembly Instructions

Step 1

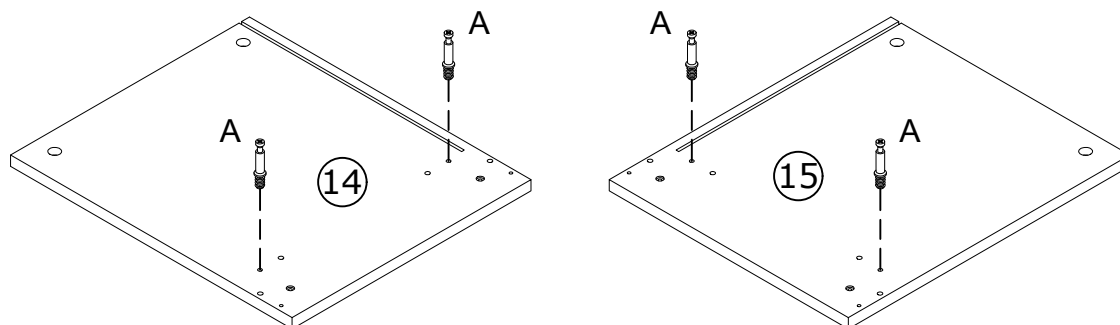


(A)




M6x35mm Cam Bolt x 4

Step 2

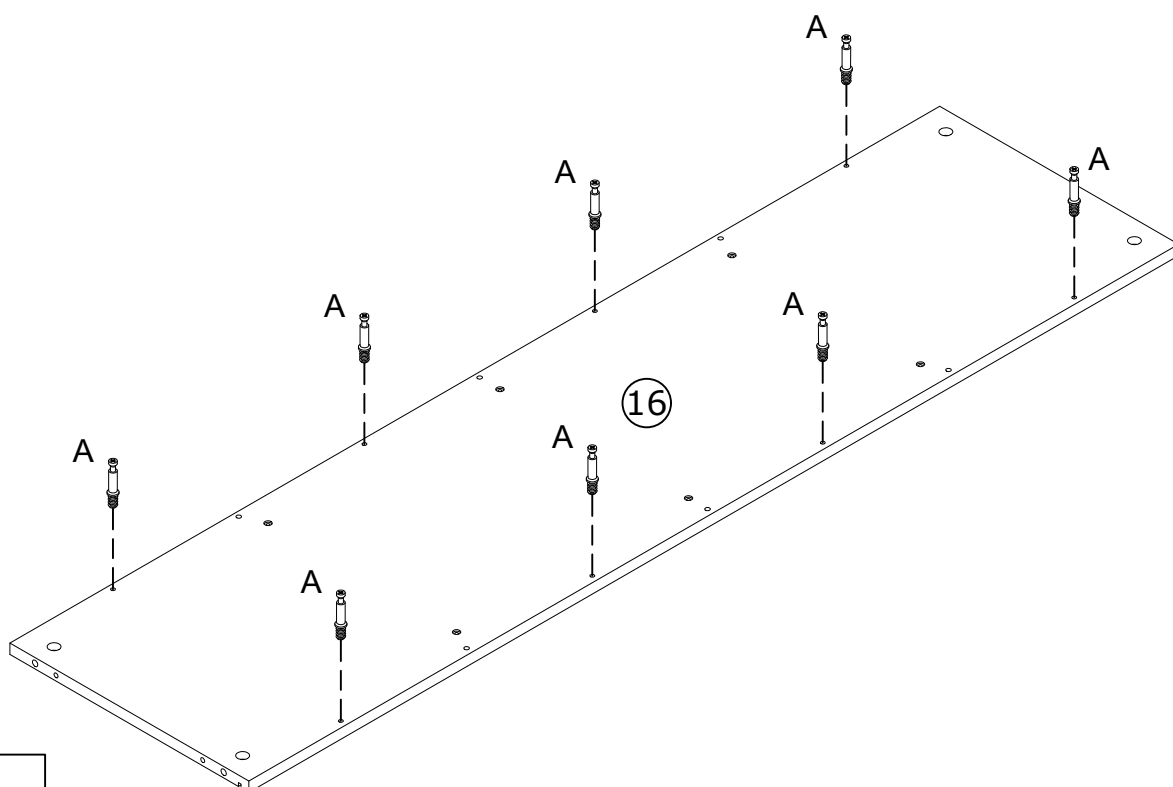


(A)



M6x35mm Cam Bolt x 8

Assembly Instructions

Step 3

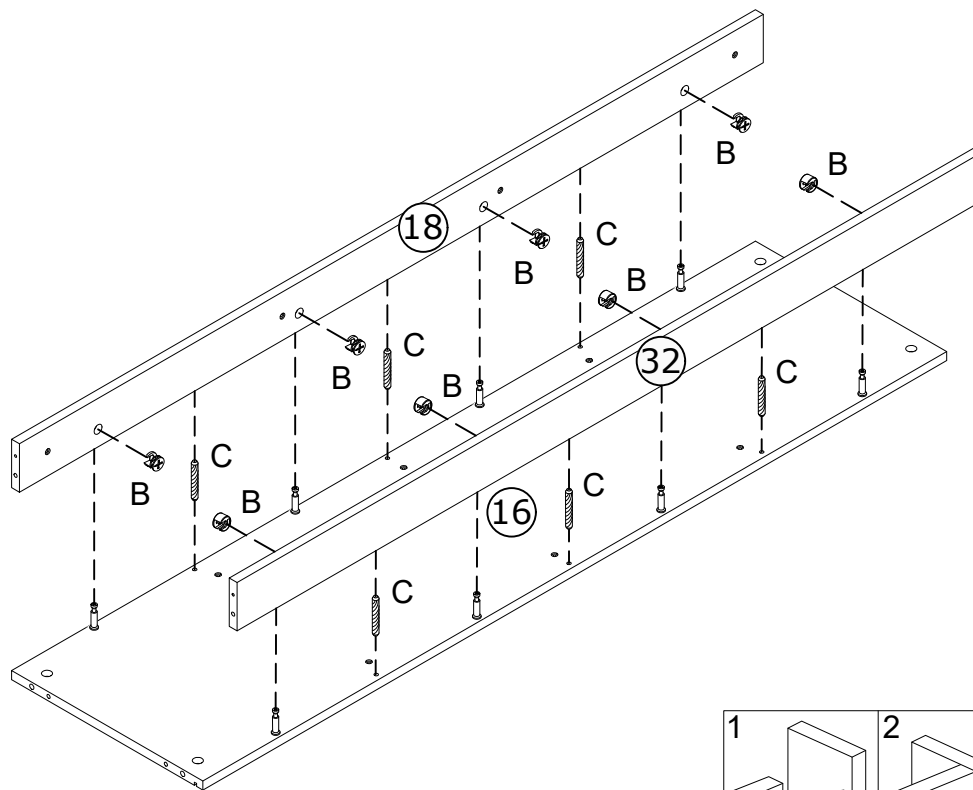


(B)




M15x10mm Cam lock x 8

(C)




M6x30mm Dowel x 6


1

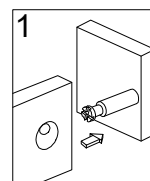


2




3

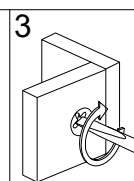

Step 4

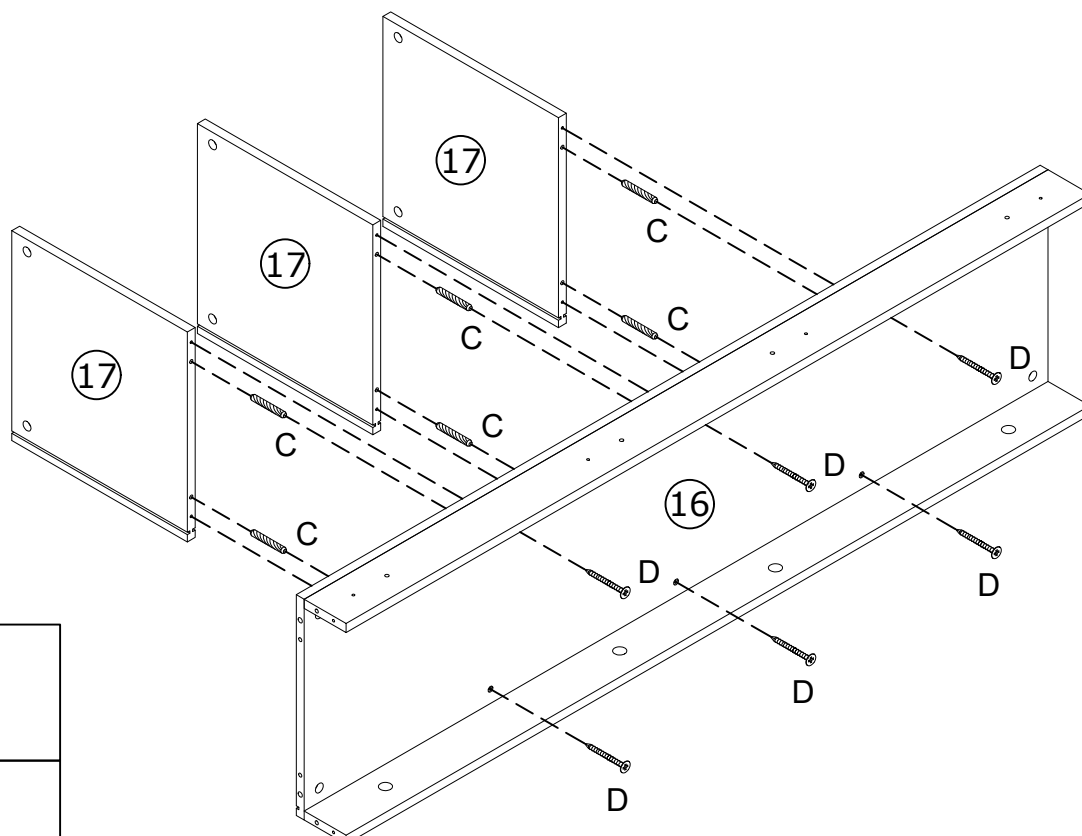


(C)



M6x30mm Dowel x 6




(D)






M4x35mm Screw x 6

Assembly Instructions

Step 5

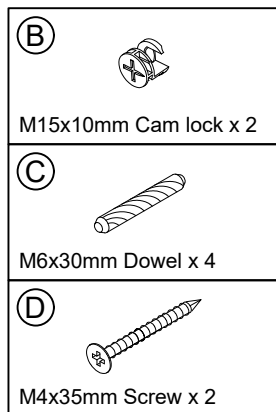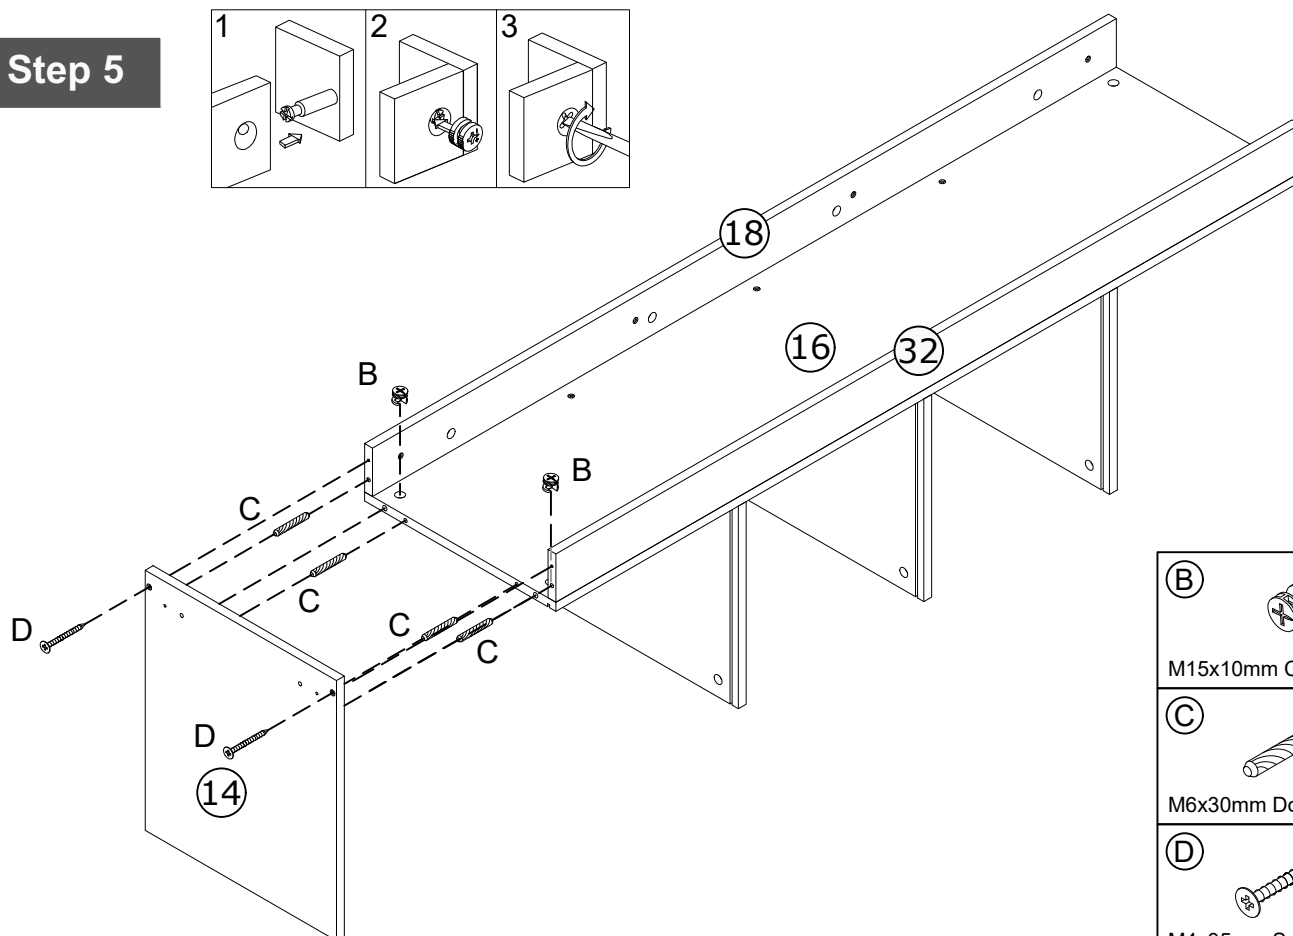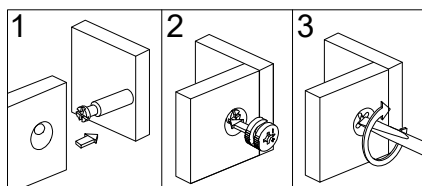


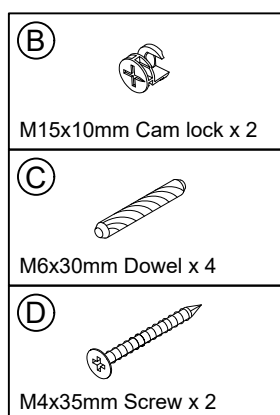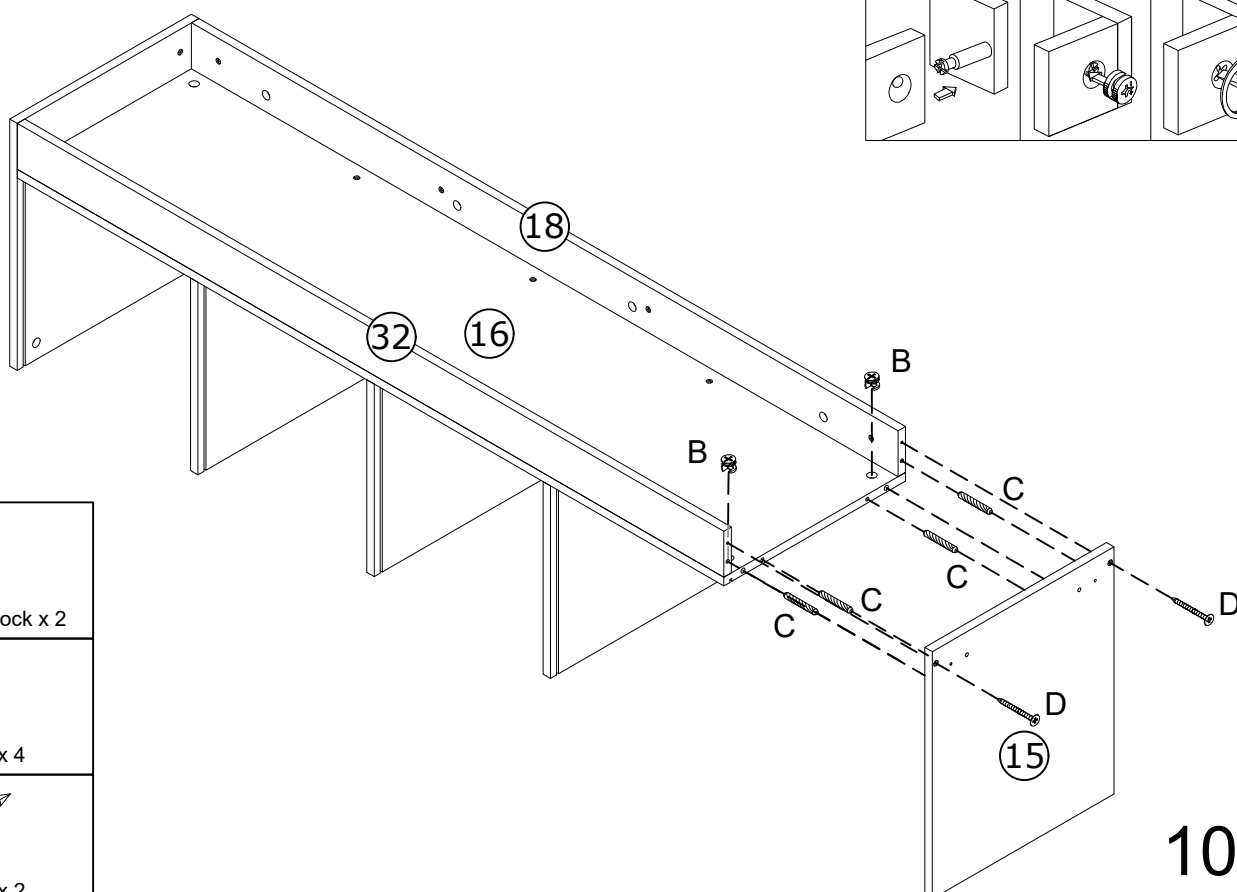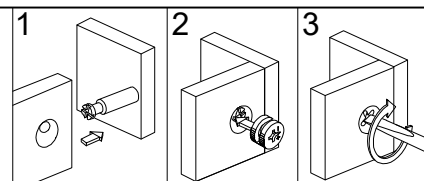

Step 6




Assembly Instructions

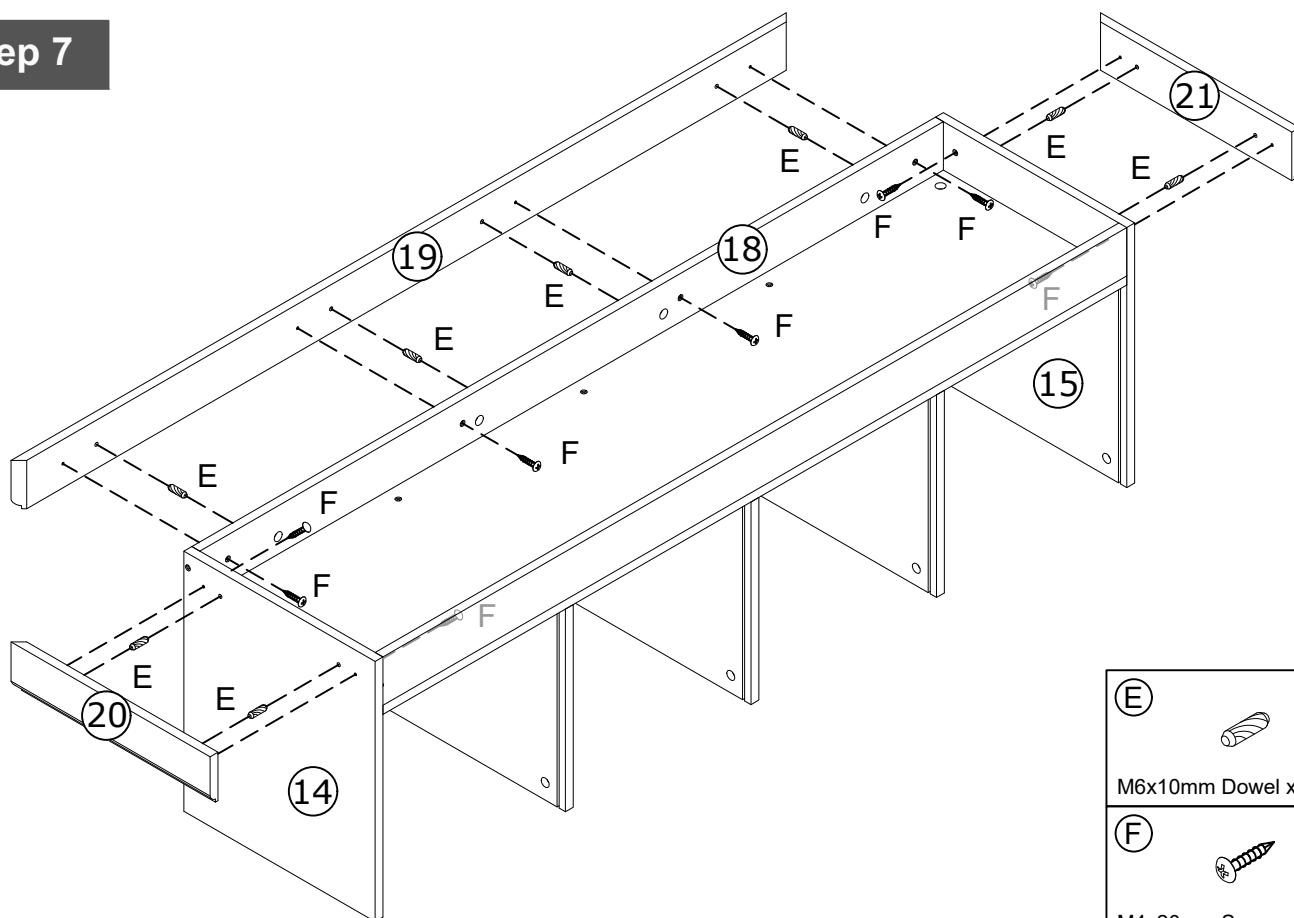Step 7




(E)	
M6x10mm Dowel x 8	
(F)	
M4x20mm Screw x 8	

Step 8

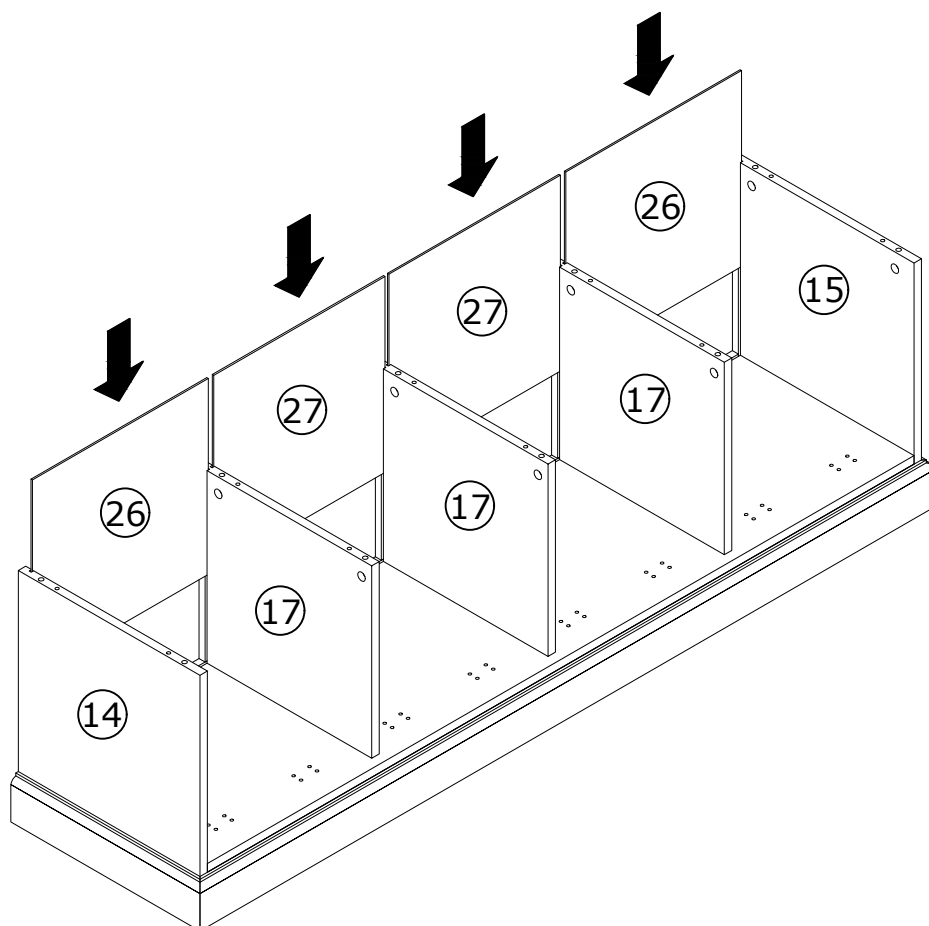

Assembly Instructions

Step 9

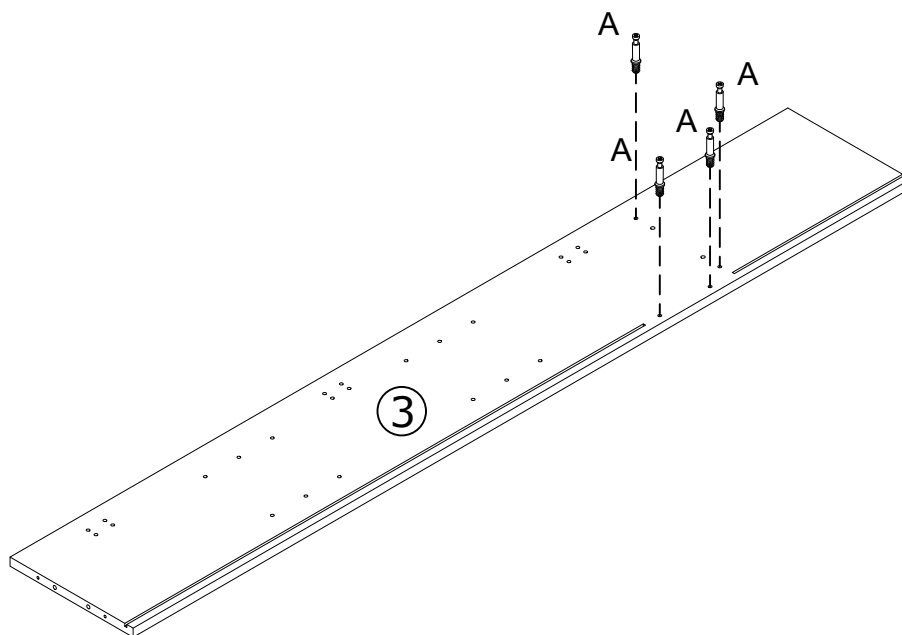


(A)




M6x35mm Cam Bolt x 4

Step 10

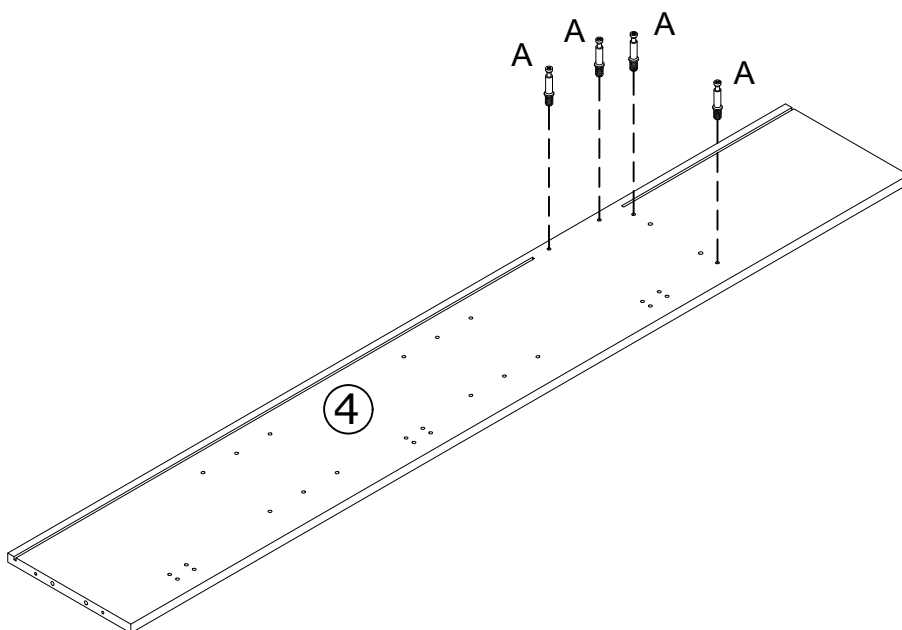


(A)



M6x35mm Cam Bolt x 4

Assembly Instructions

Step 11

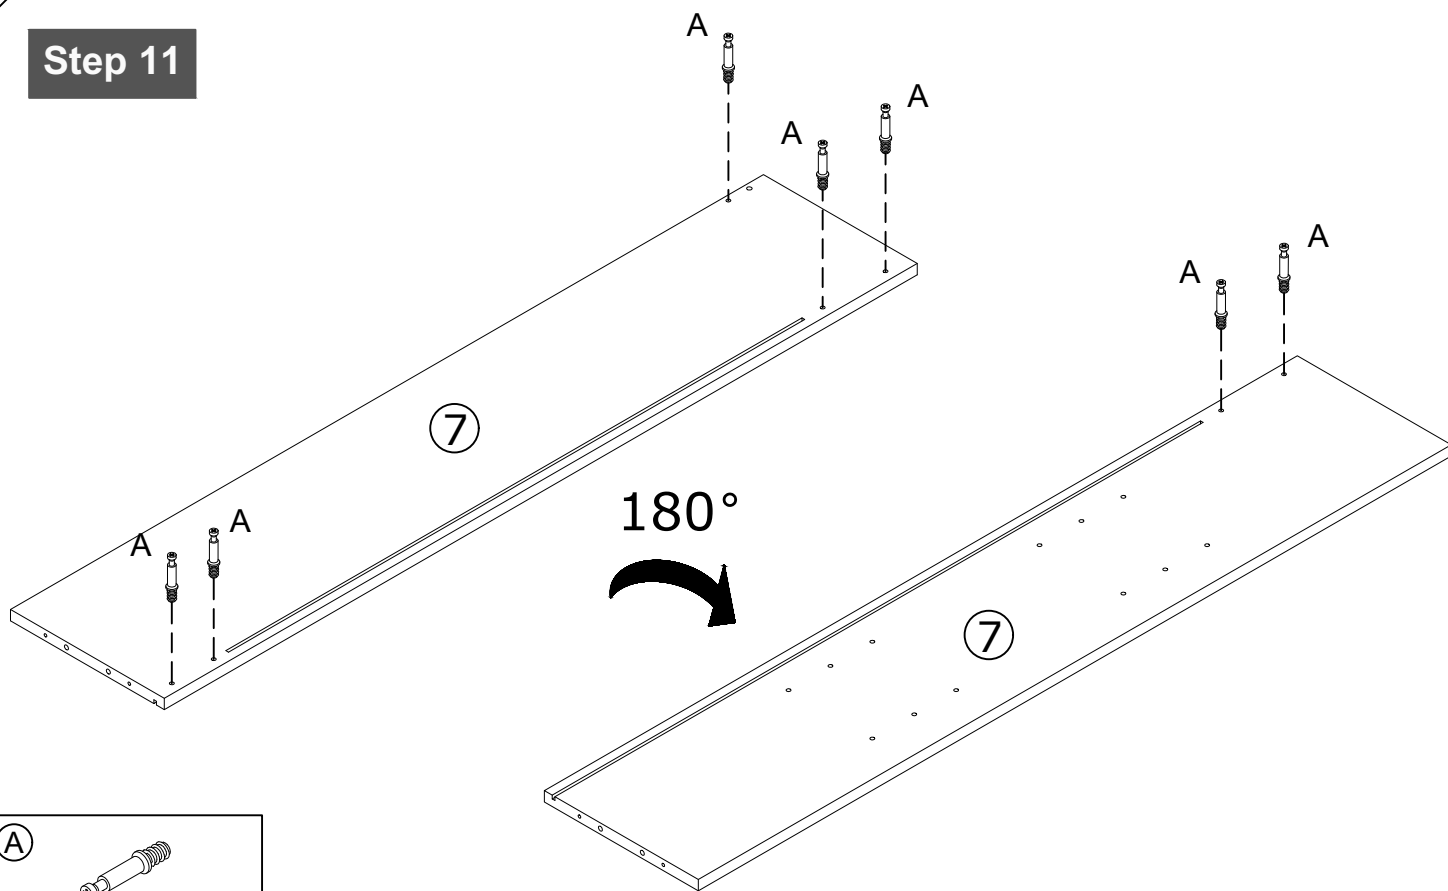


(A)




M6x35mm Cam Bolt x 7

Step 12

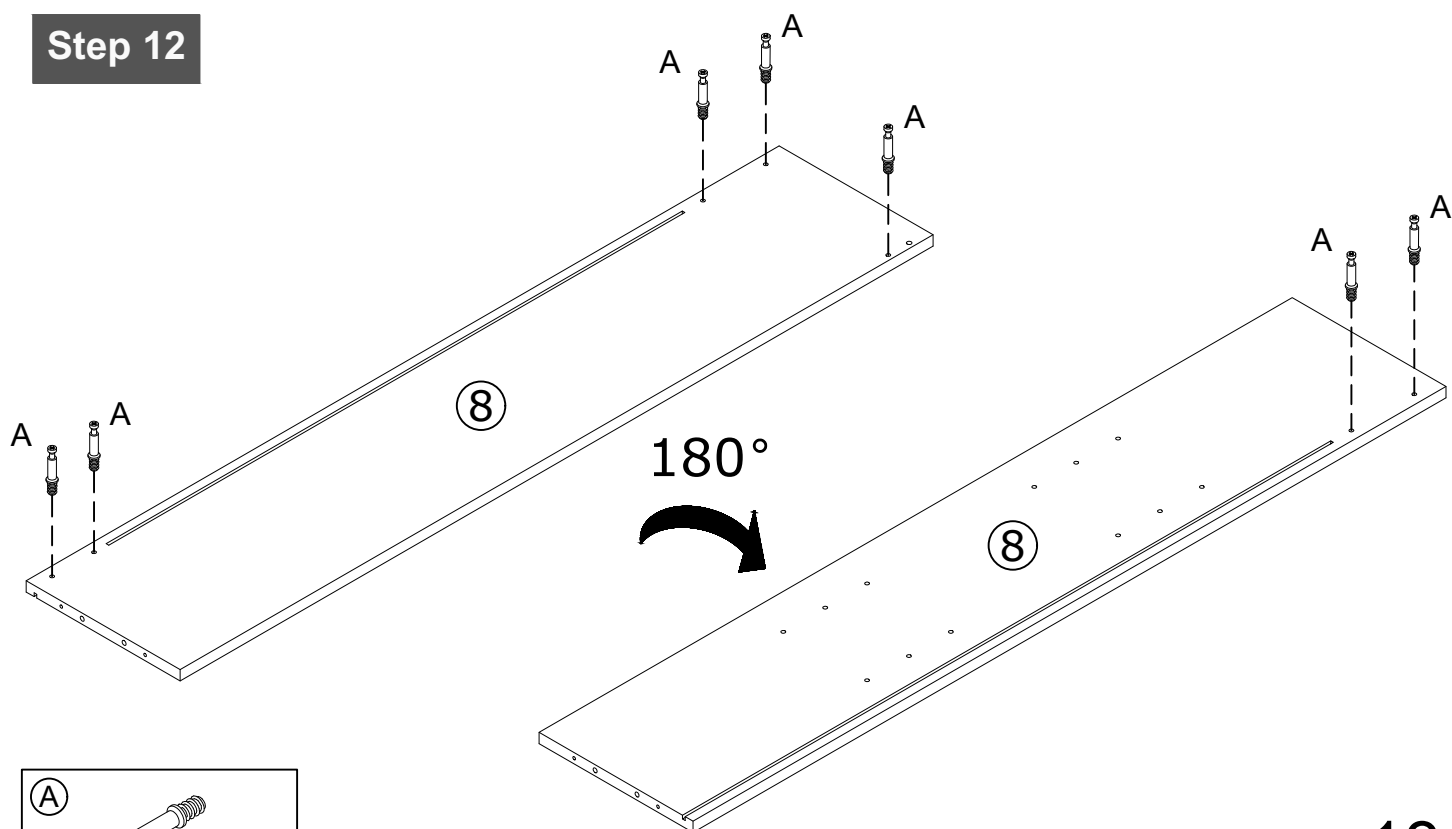



(A)



M6x35mm Cam Bolt x 7

Assembly Instructions

Step 13

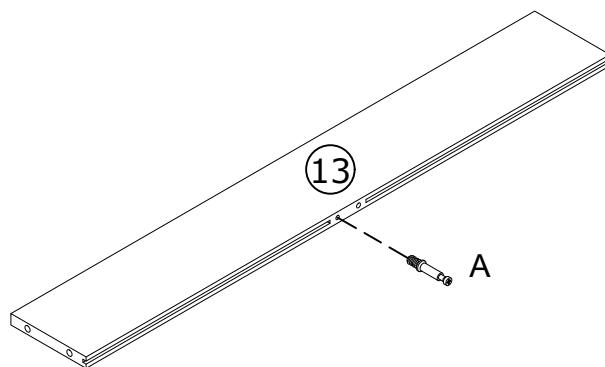
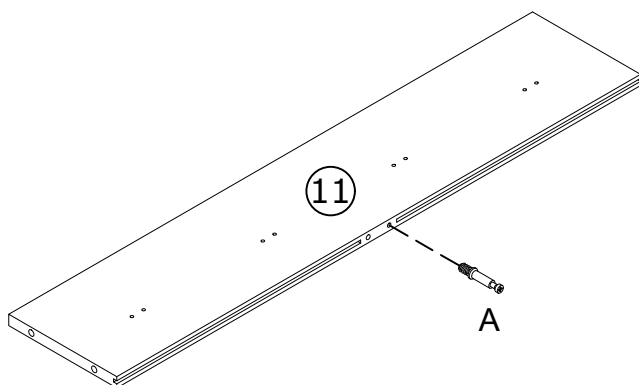


(A)



M6x35mm Cam Bolt x 2

Step 14

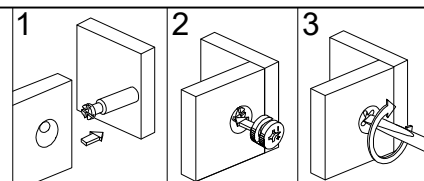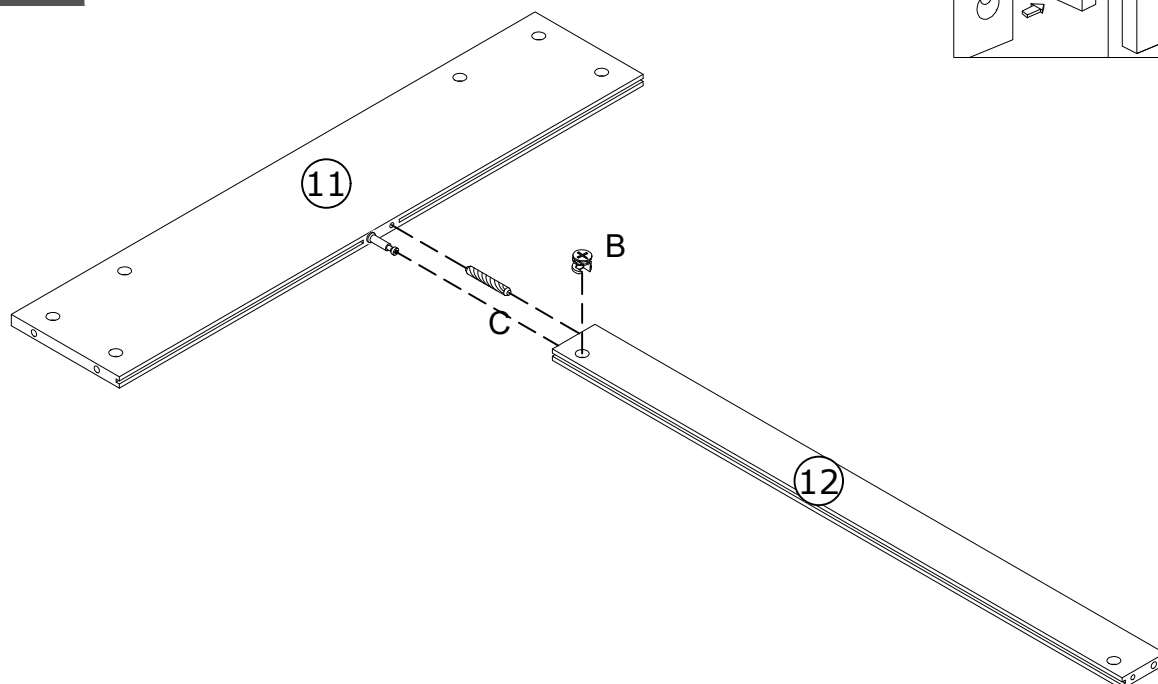

(B)



M15x10mm Cam lock x 1



(C)



M6x30mm Dowel x 1

Assembly Instructions

Step 15

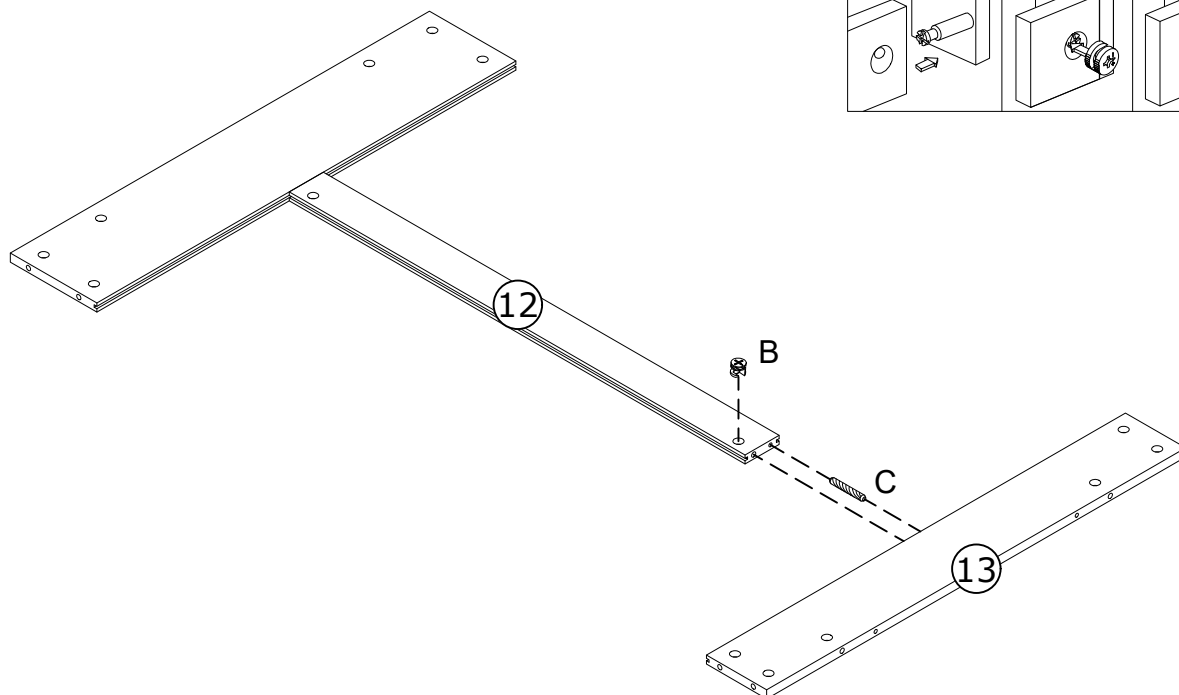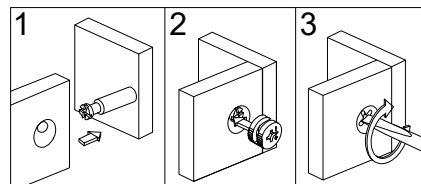

(B)




M15x10mm Cam lock x 1

(C)



M6x30mm Dowel x 1

Step 16

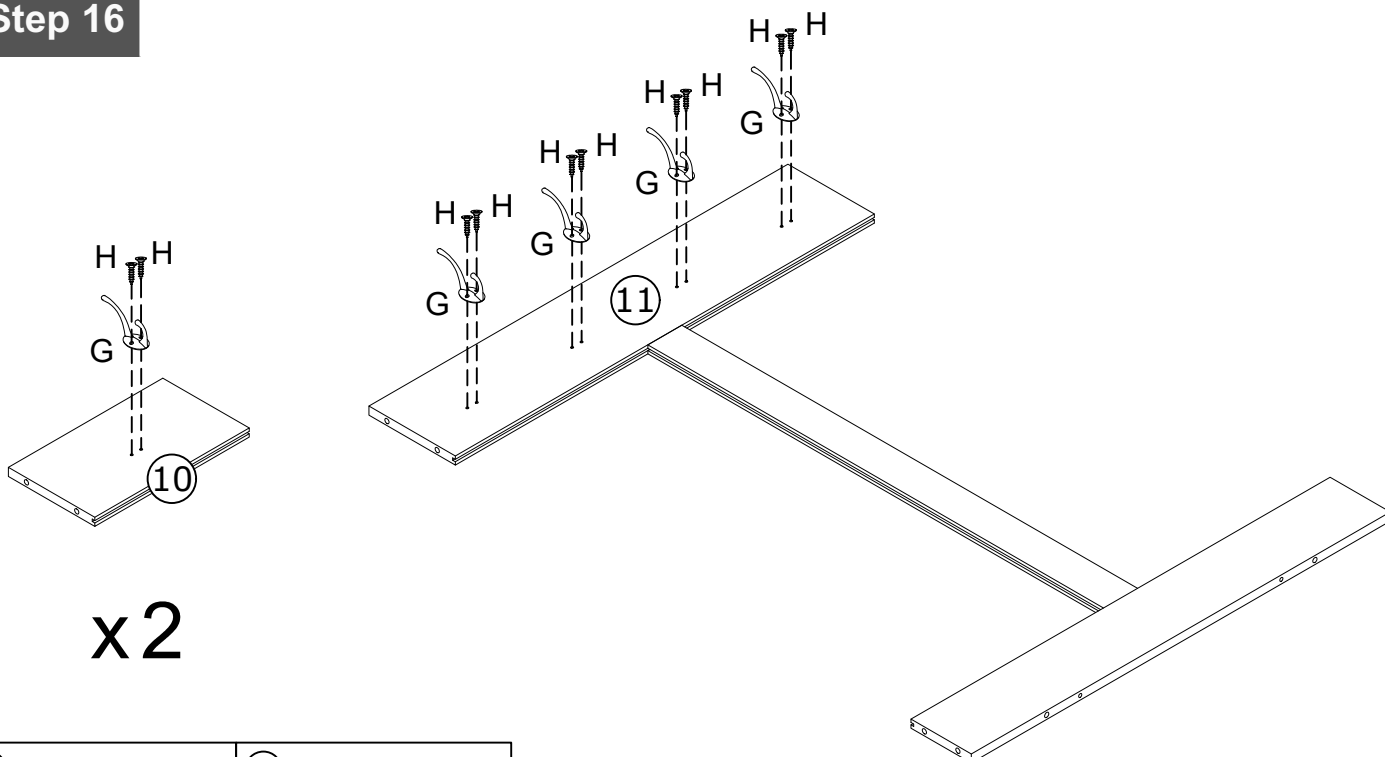

(G)



Hook x 6


(H)



M3.5x14mm Screw x 12



Assembly Instructions

Step 17

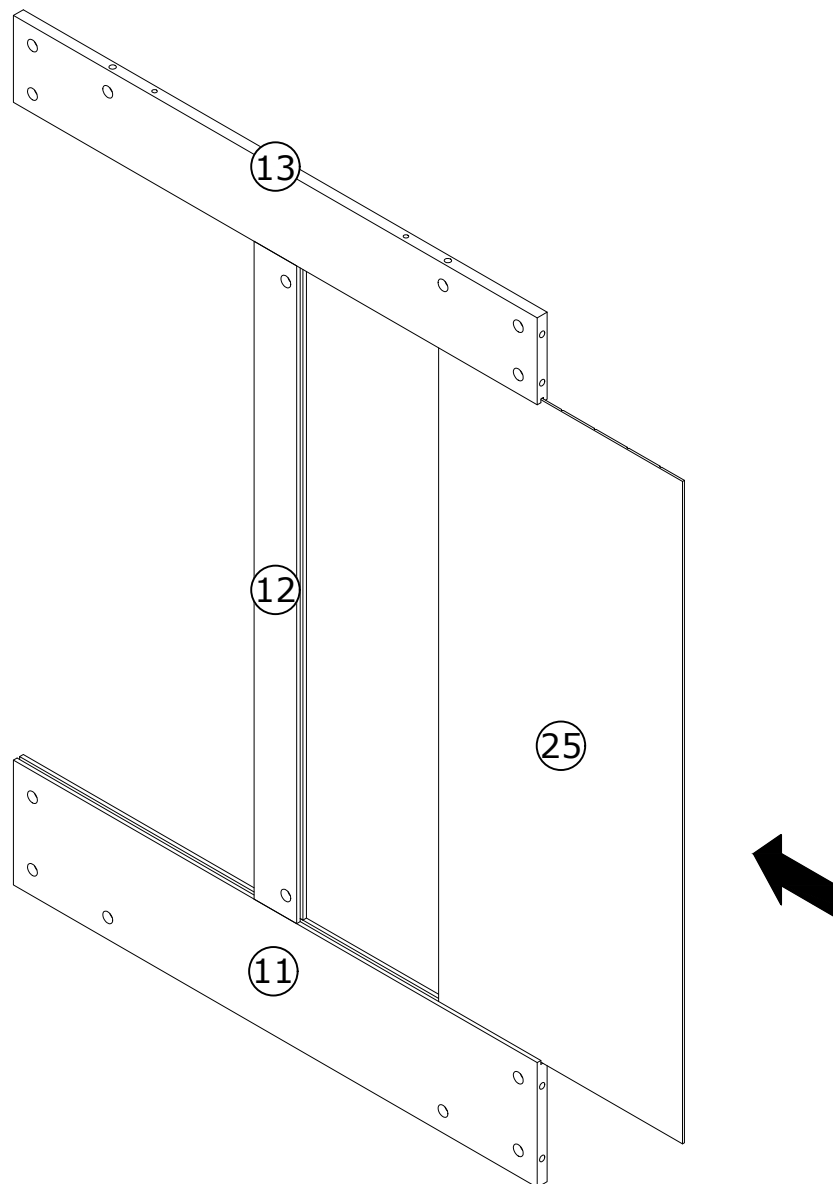

Assembly Instructions

Step 18

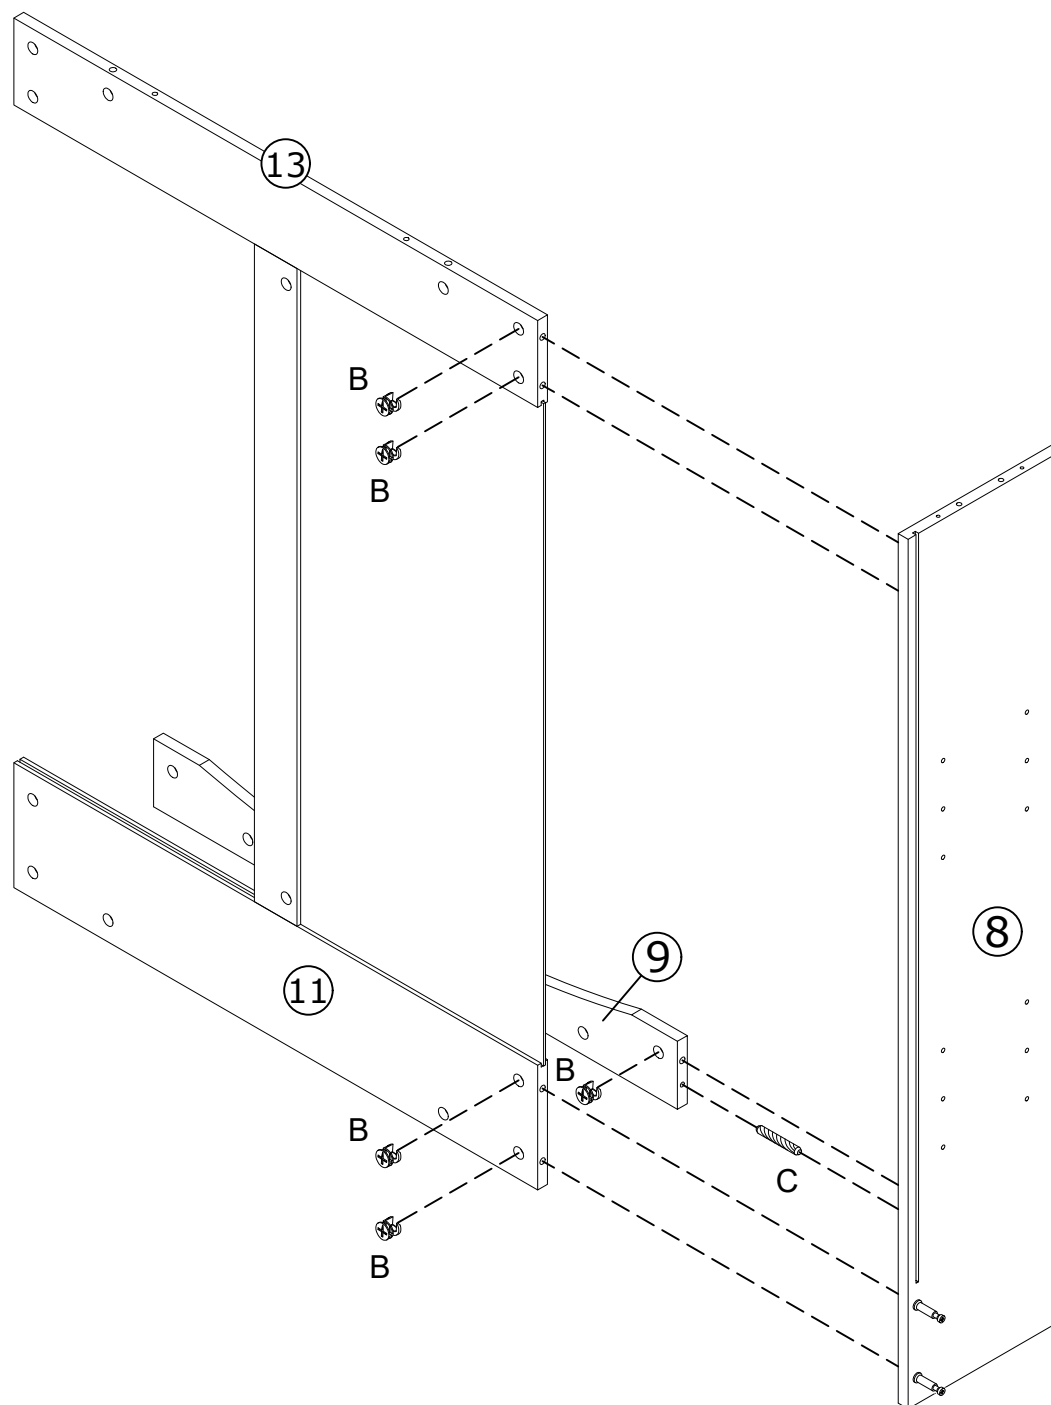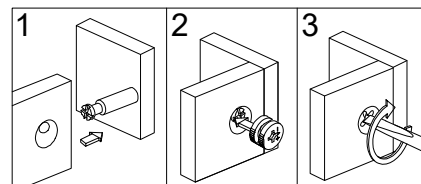

(B)



M15x10mm Cam lock x 5


(C)



M6x30mm Dowel x 1



Assembly Instructions

Step 19

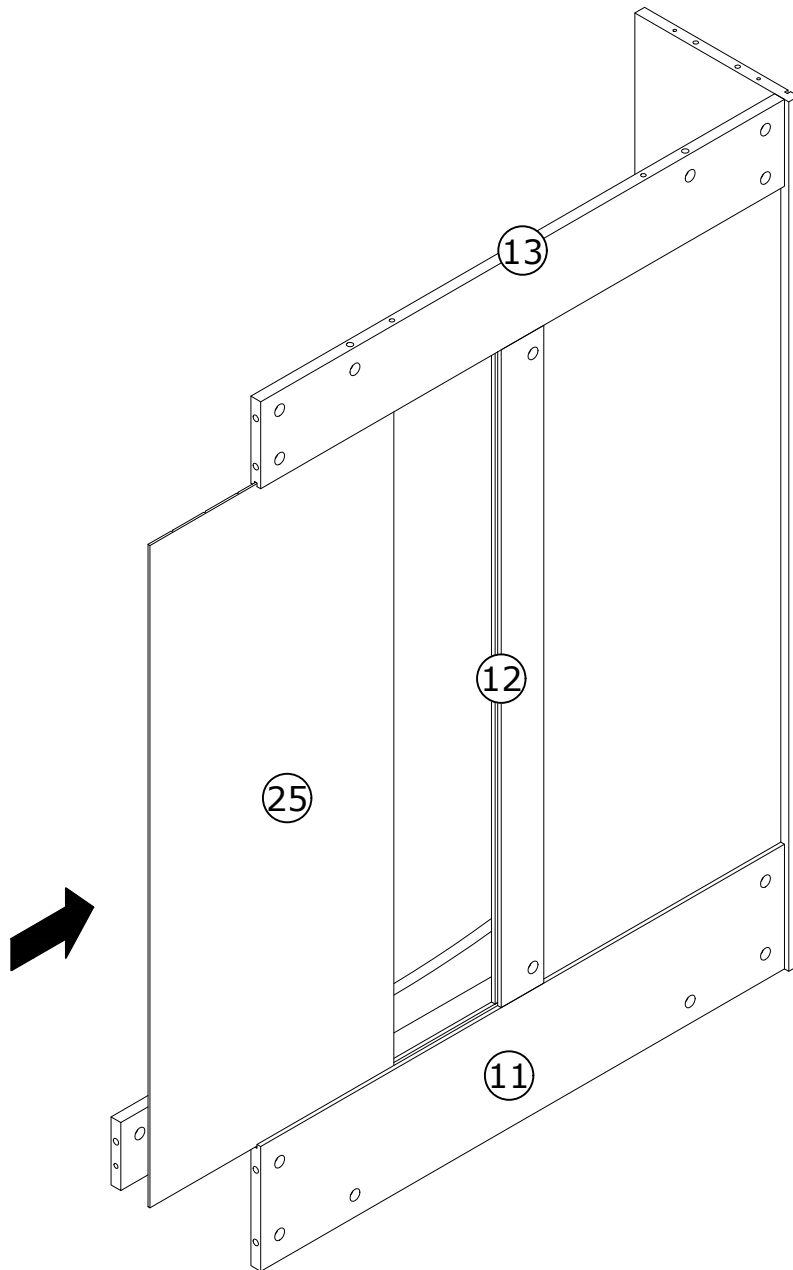

Assembly Instructions

Step 20

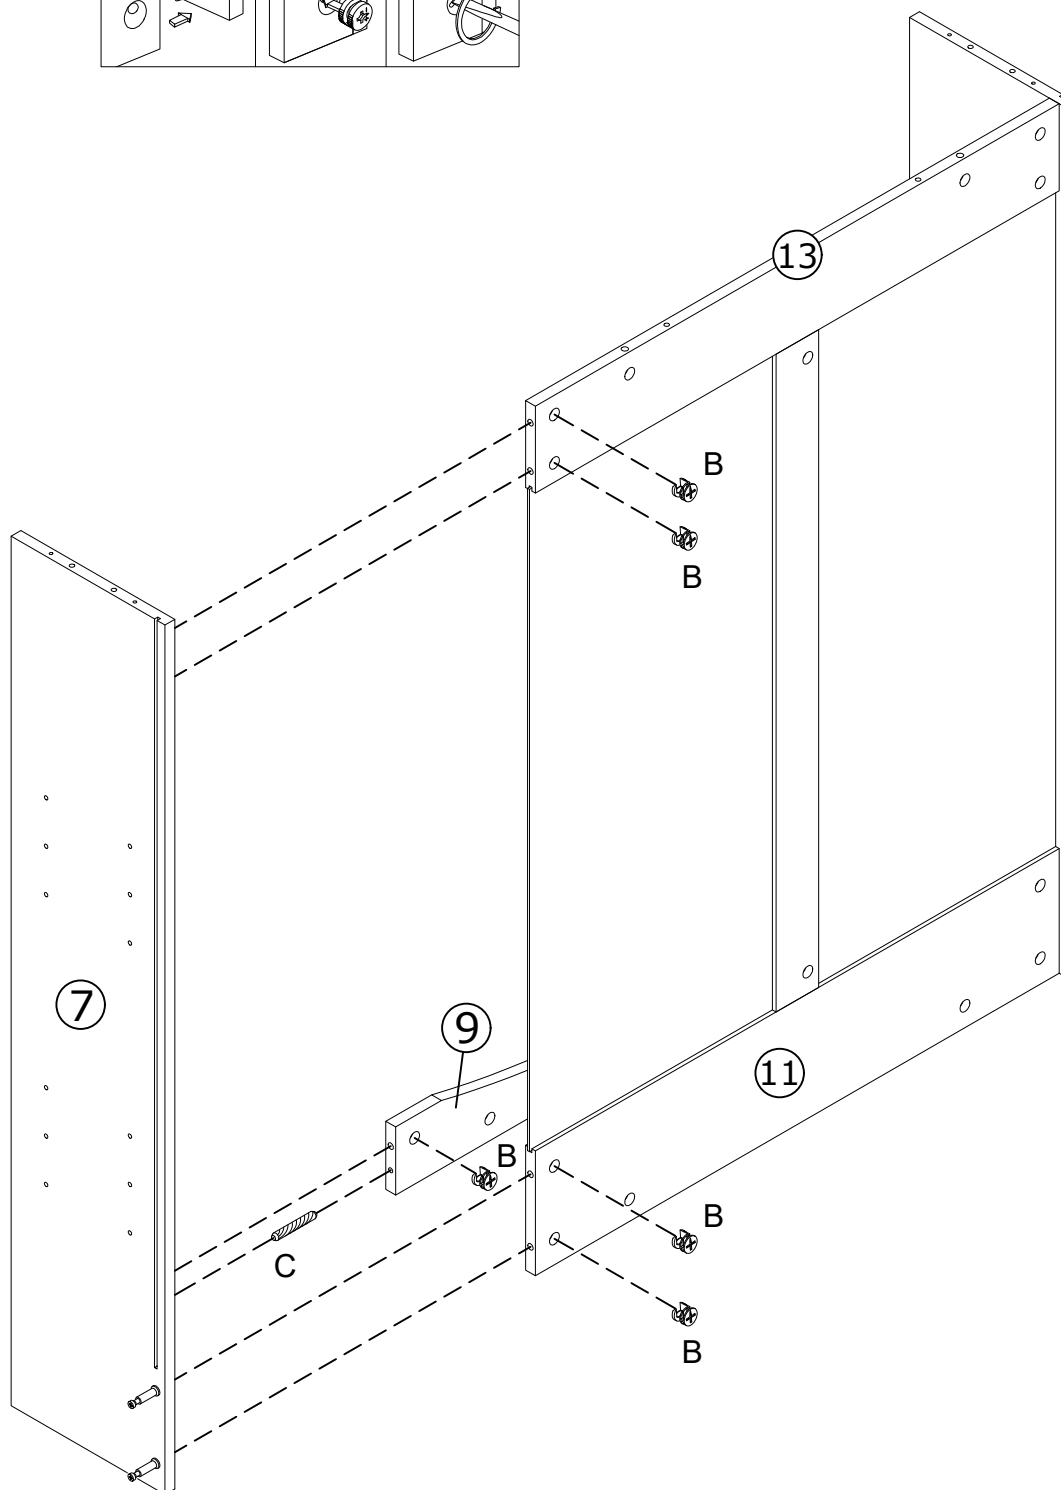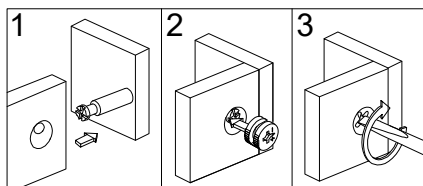

(B)



M15x10mm Cam lock x 5


(C)




M6x30mm Dowel x 1

Assembly Instructions

Step 21

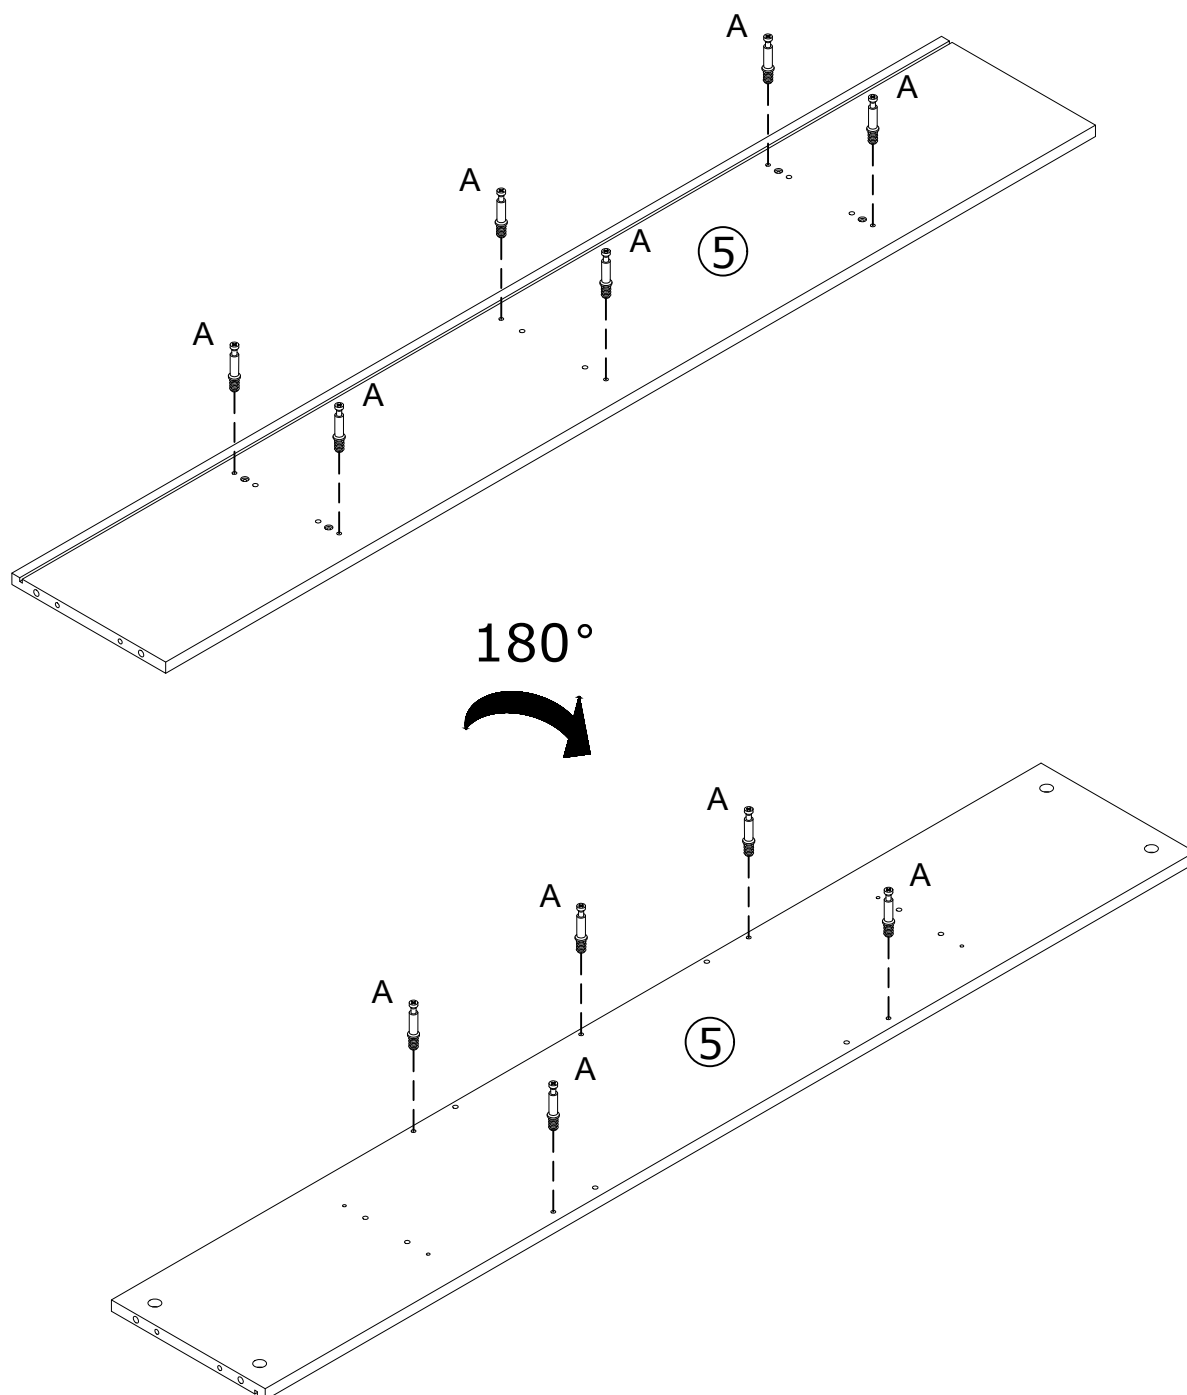



(A)






M6x35mm Cam Bolt x 11


Assembly Instructions

Step 22

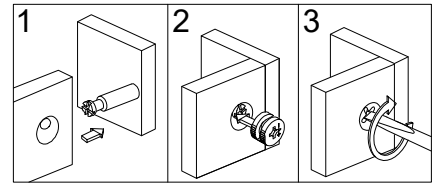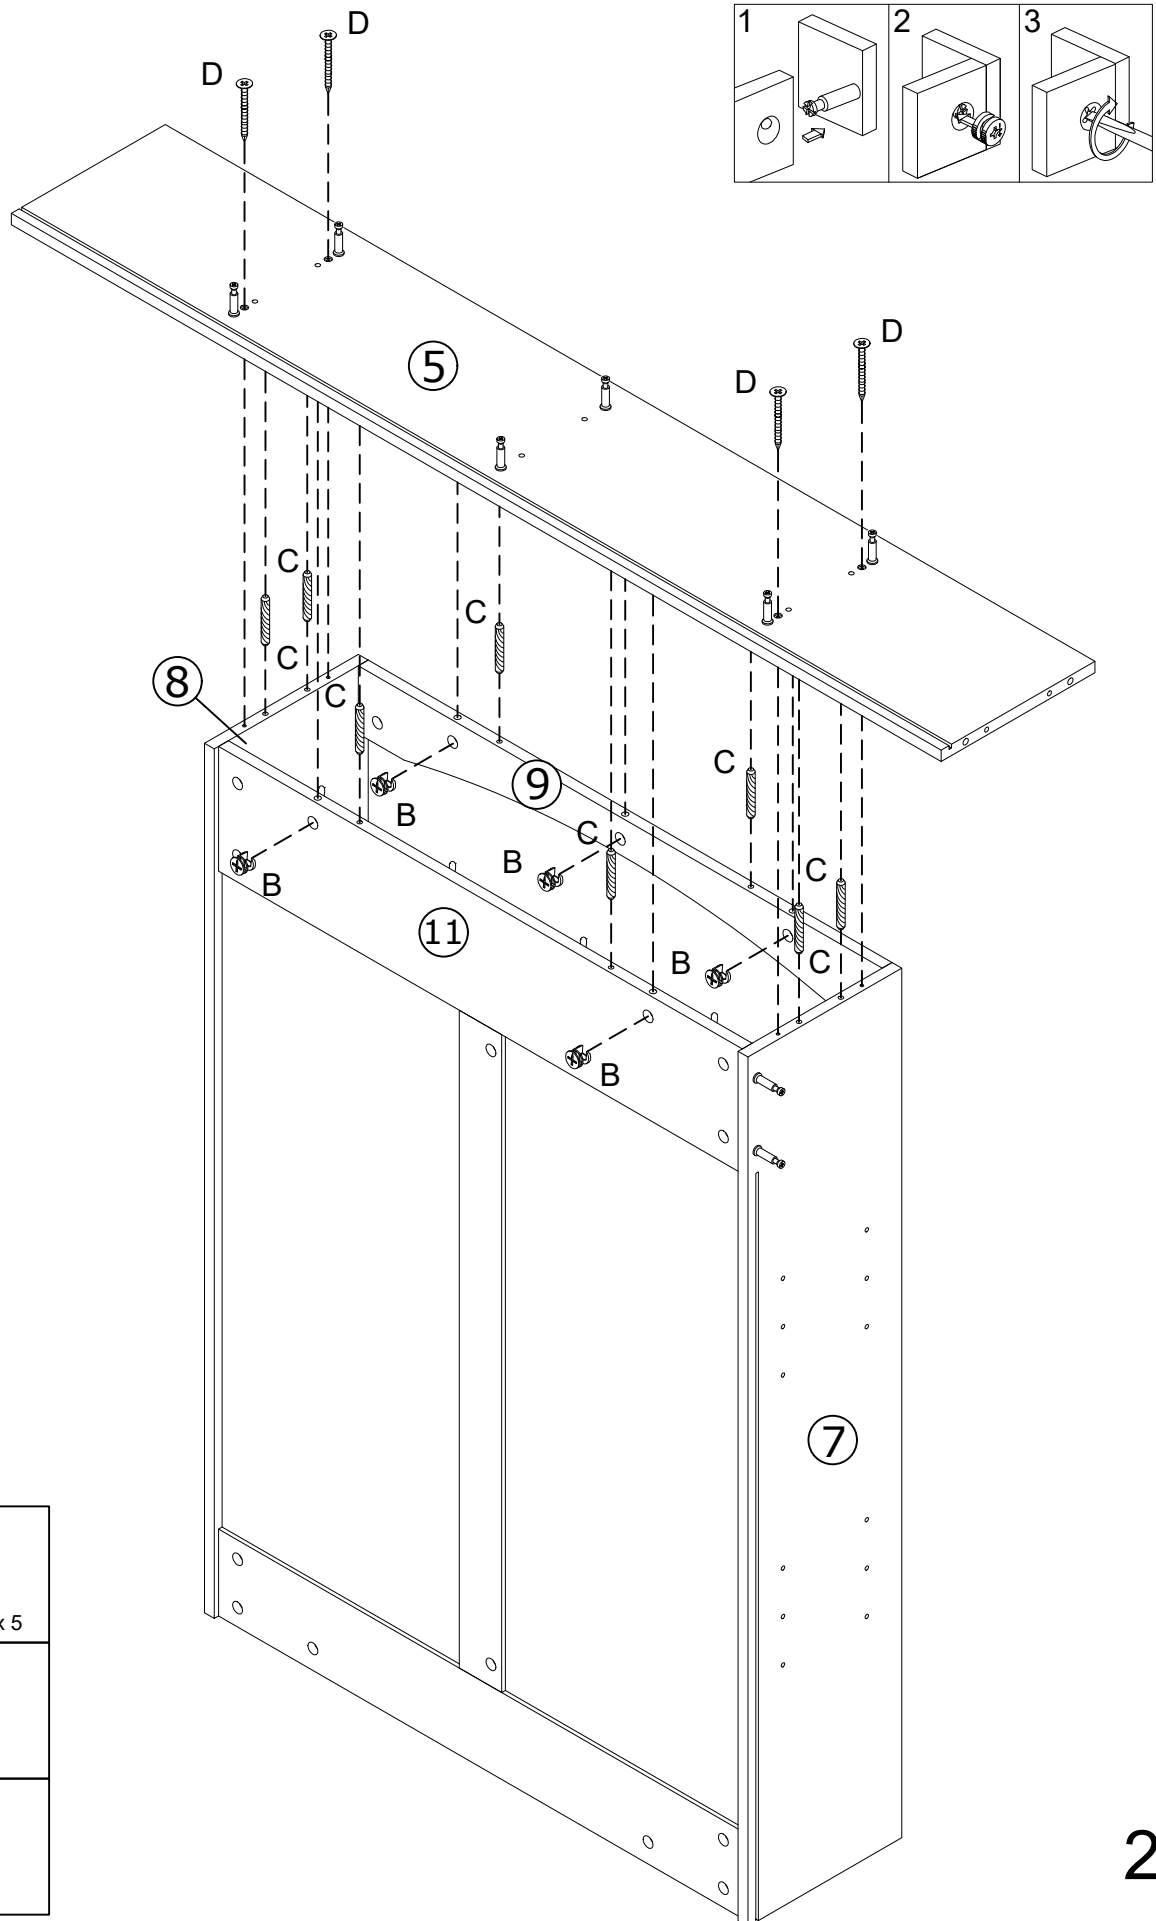

(B)	
M15x10mm Cam lock x 5	
(C)	
M6x30mm Dowel x 8	
(D)	
M4x35mm Screw x 4	



Step 23

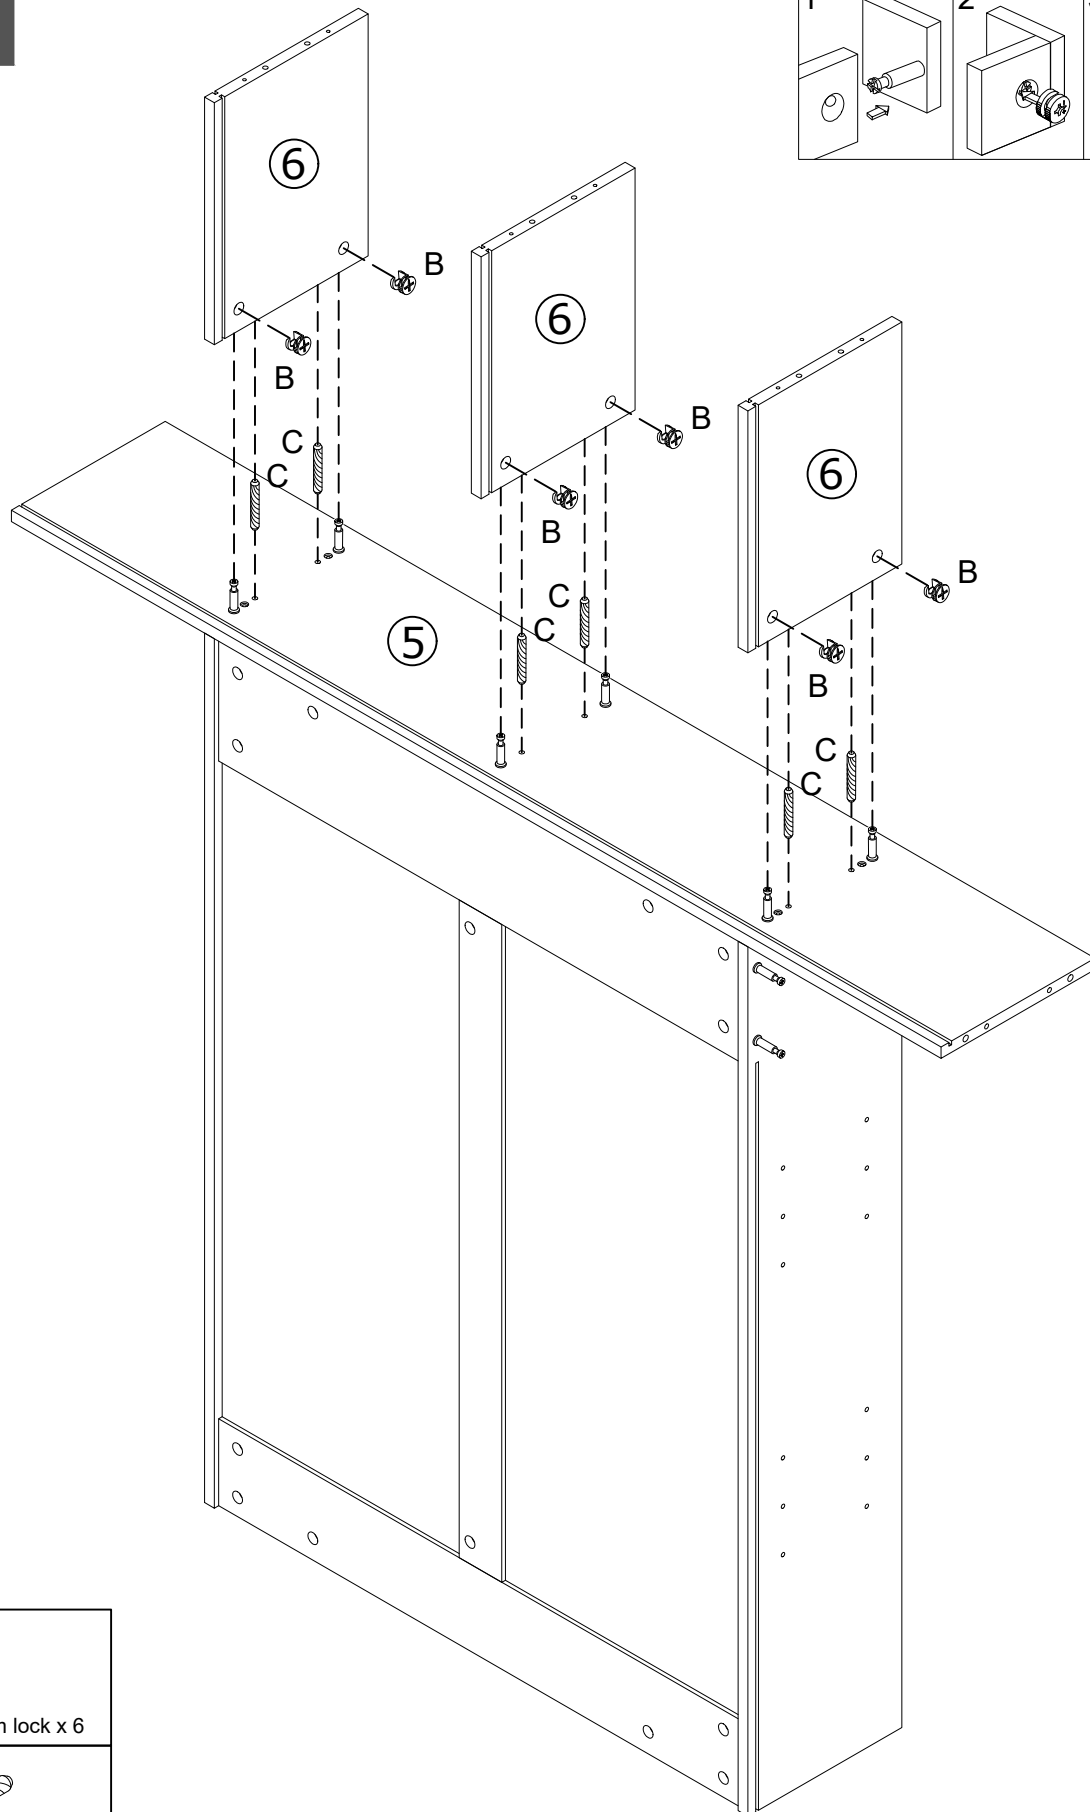

22

Assembly Instructions

Step 24

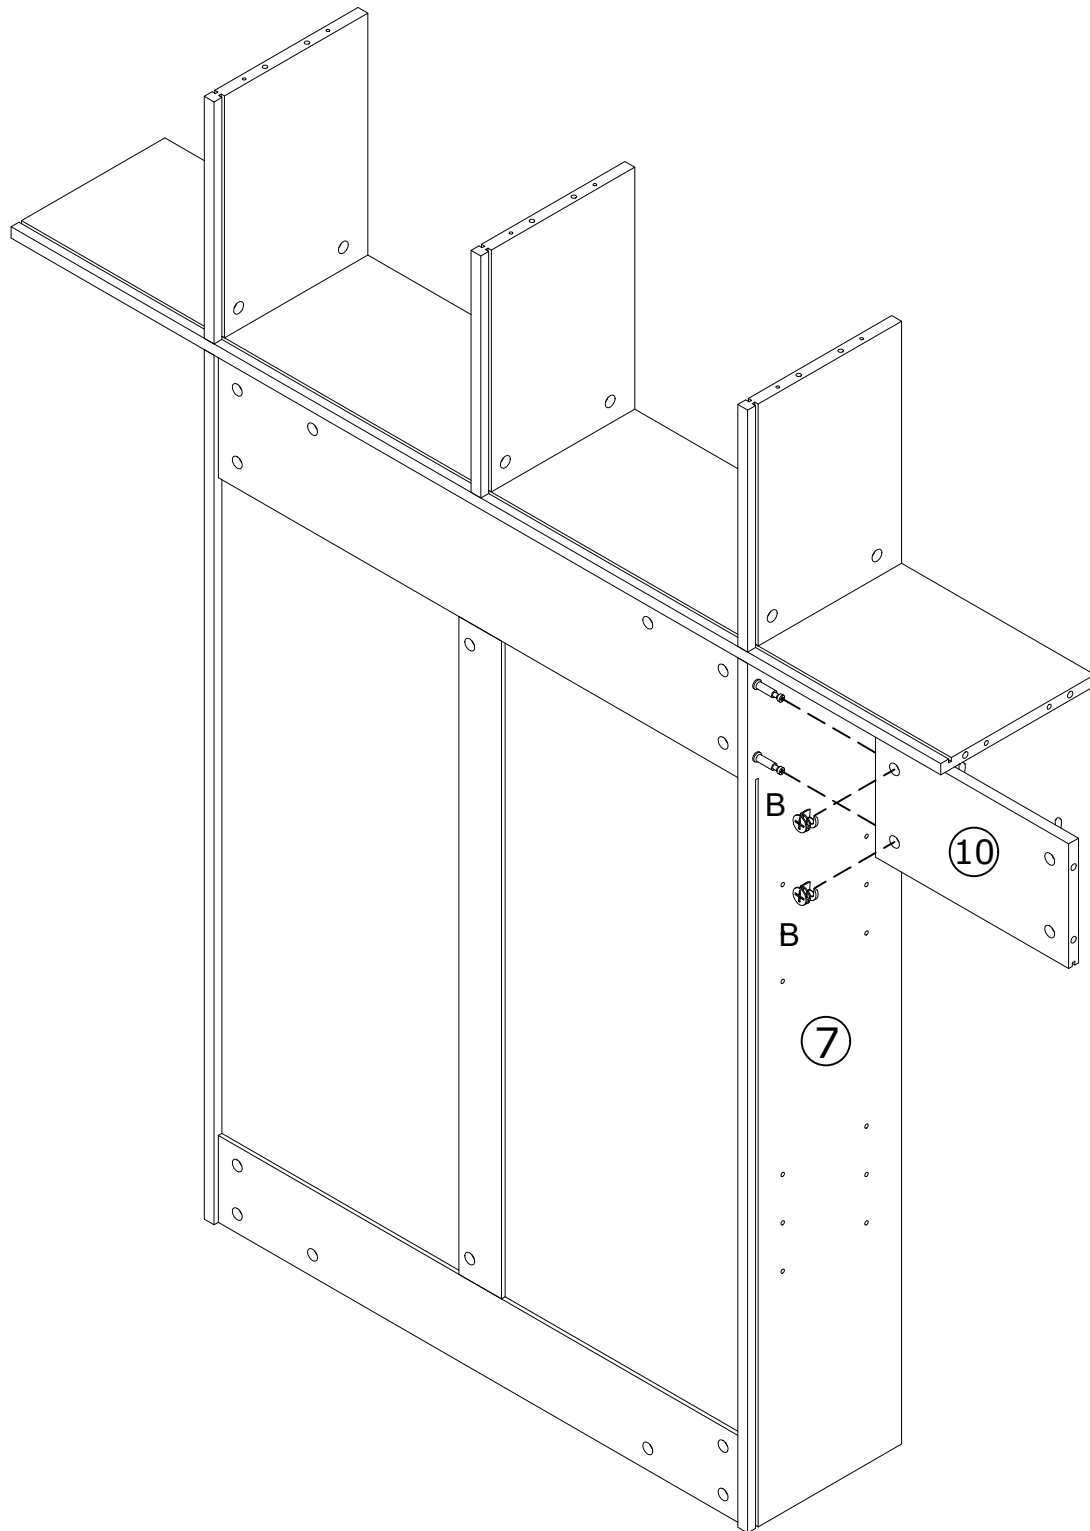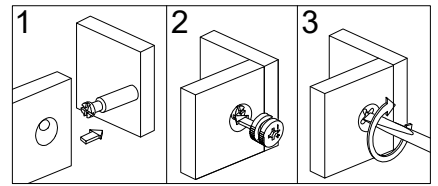



(B)



M15x10mm Cam lock x 2

Assembly Instructions

Step 25

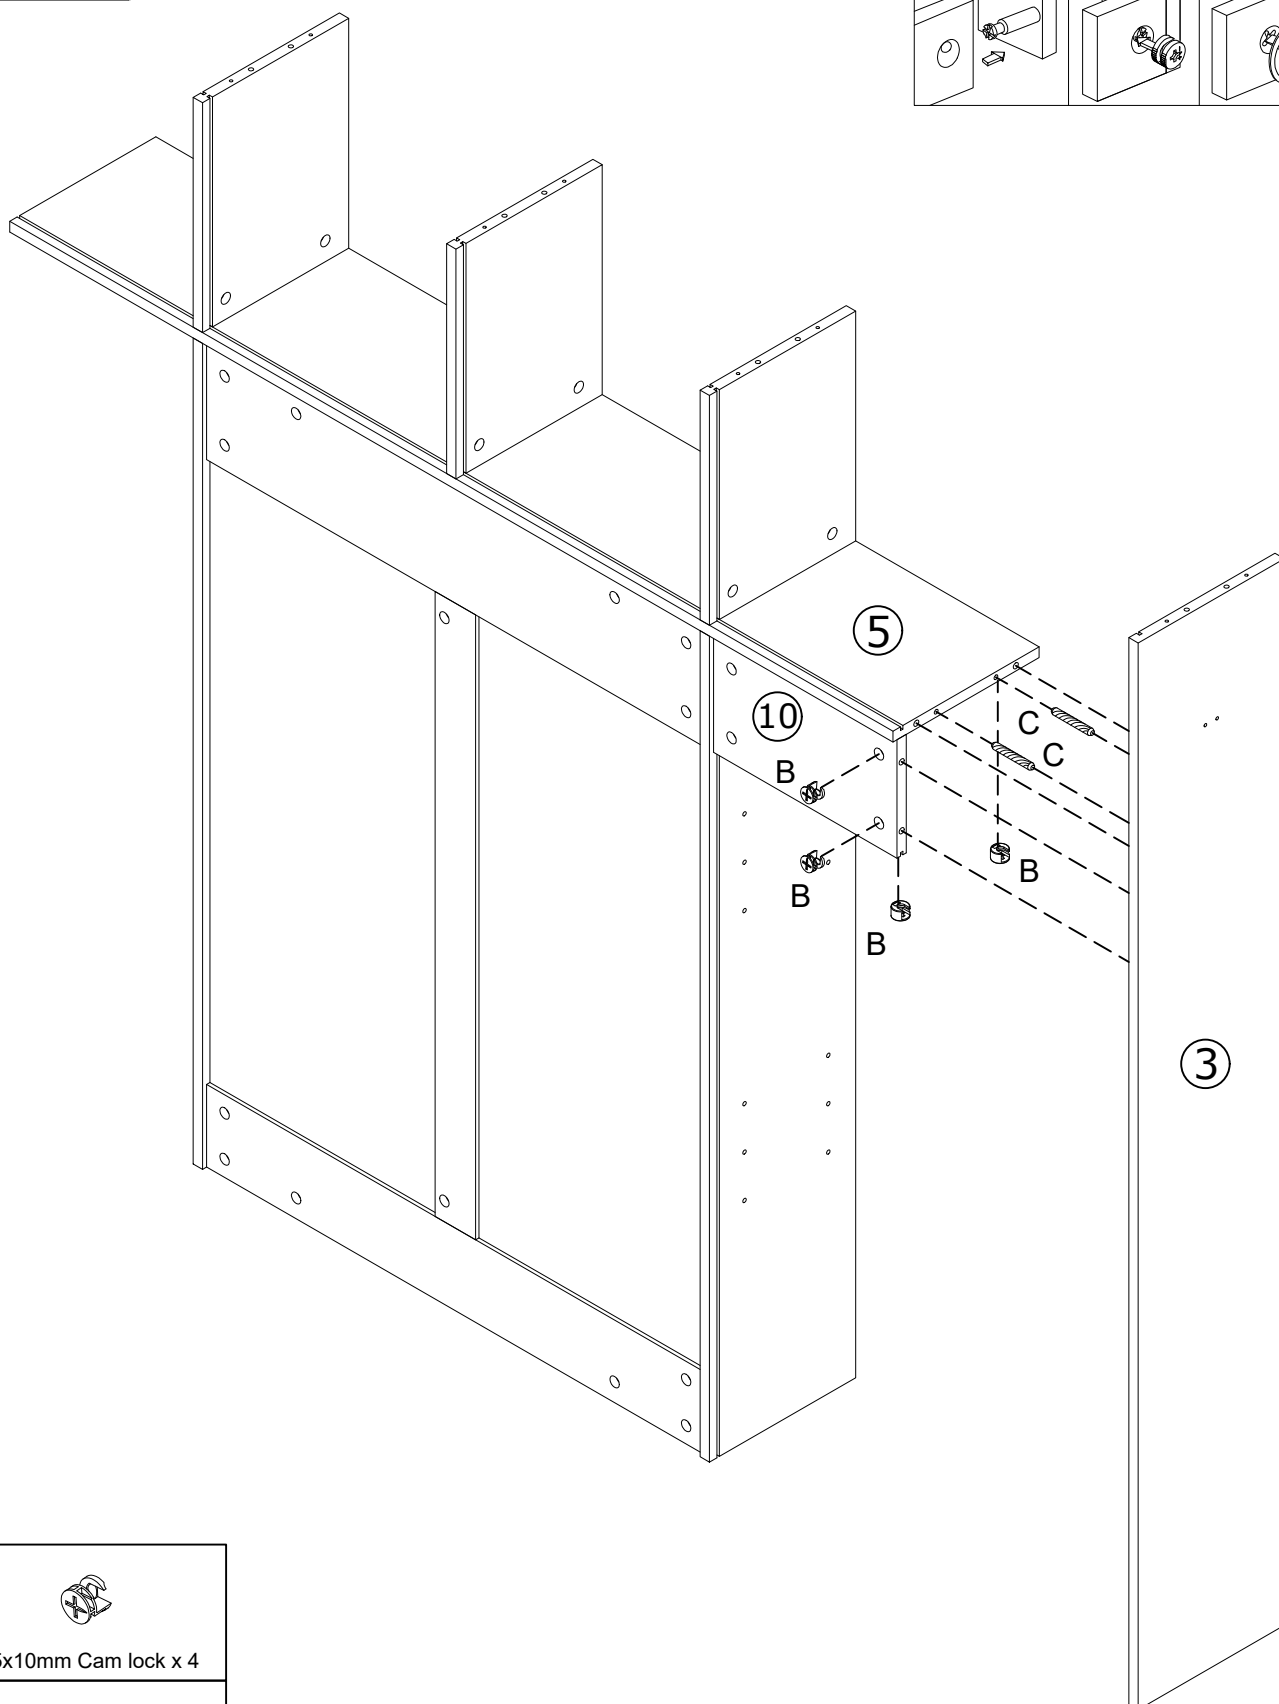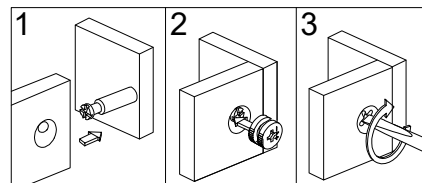

(B)



M15x10mm Cam lock x 4



(C)



M6x30mm Dowel x 2

Assembly Instructions

Step 26

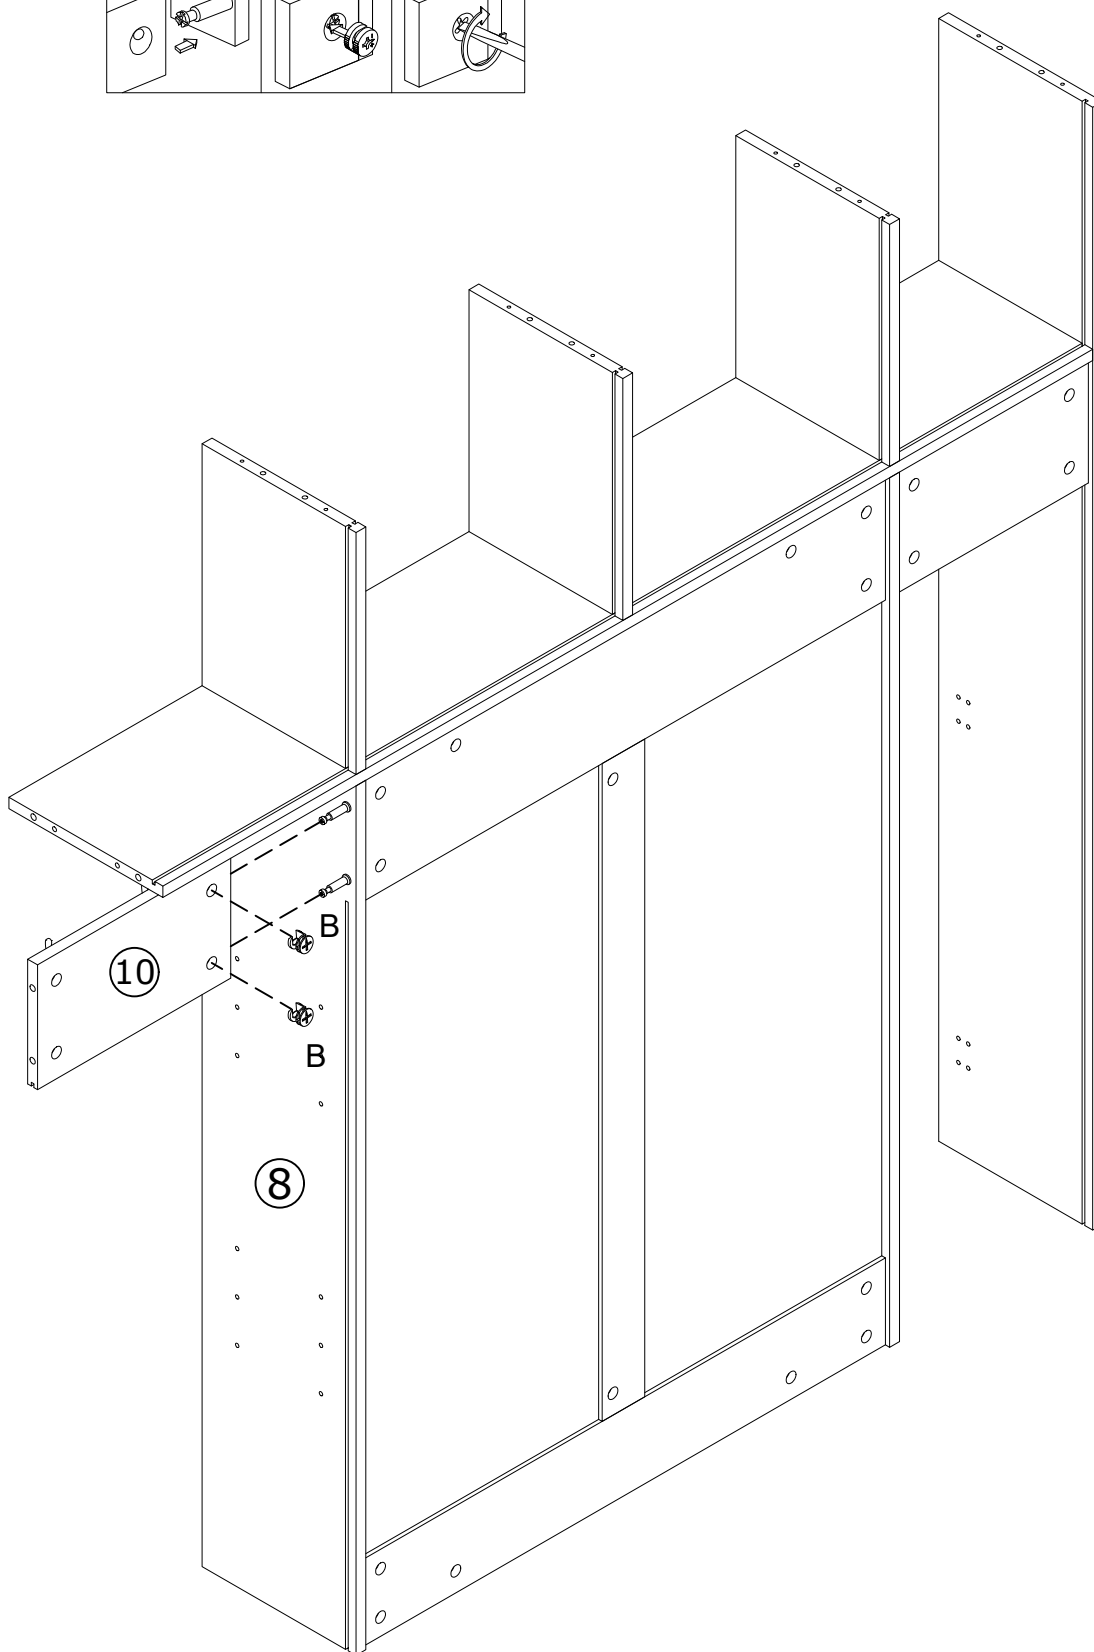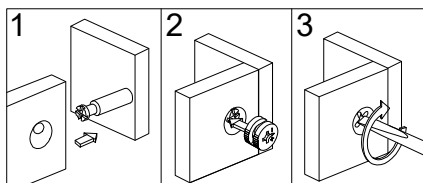




(B)



M15x10mm Cam lock x 2


Assembly Instructions

Step 27

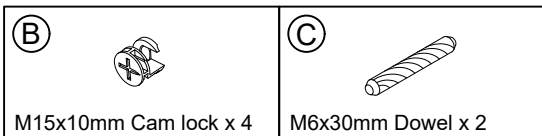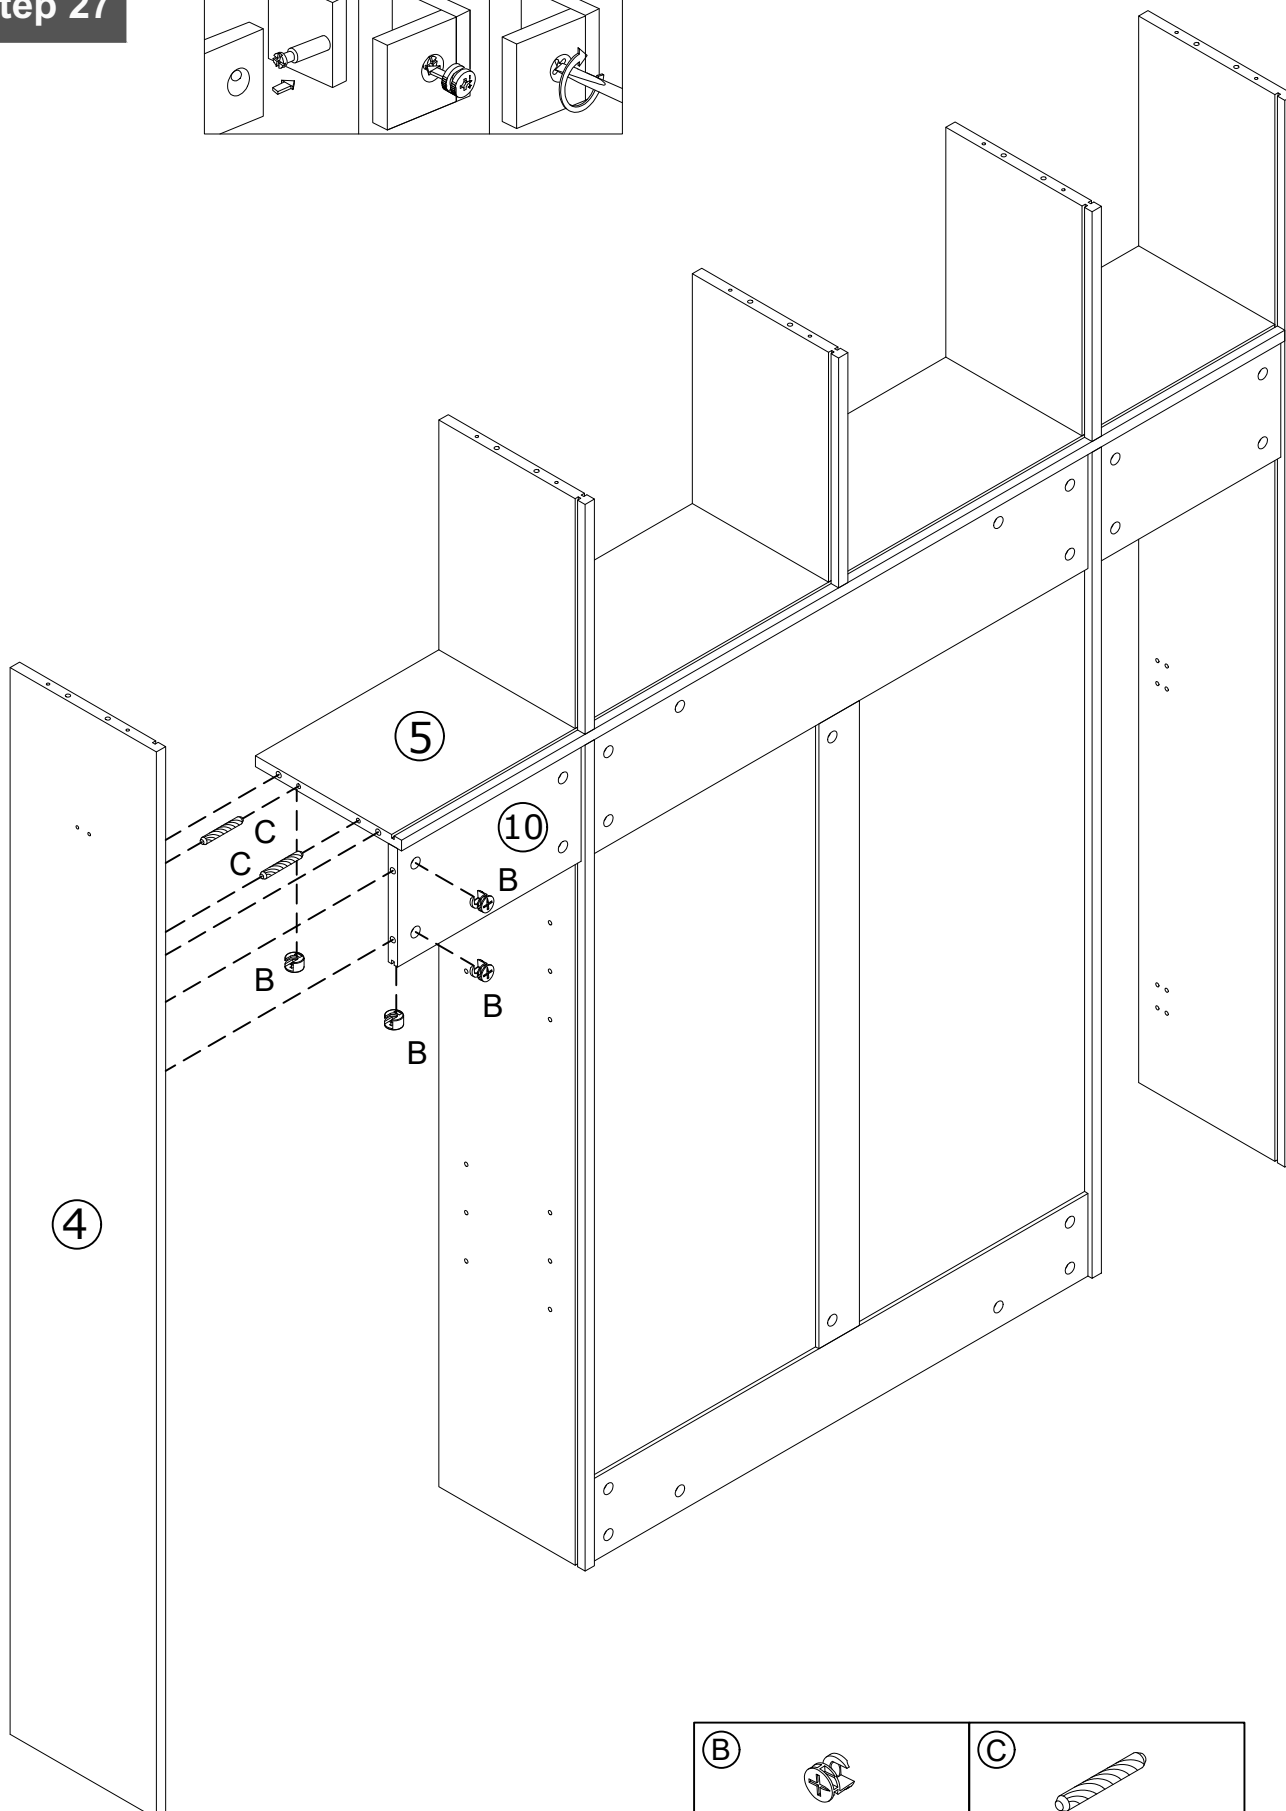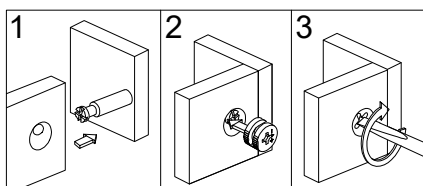



Assembly Instructions

Step 28

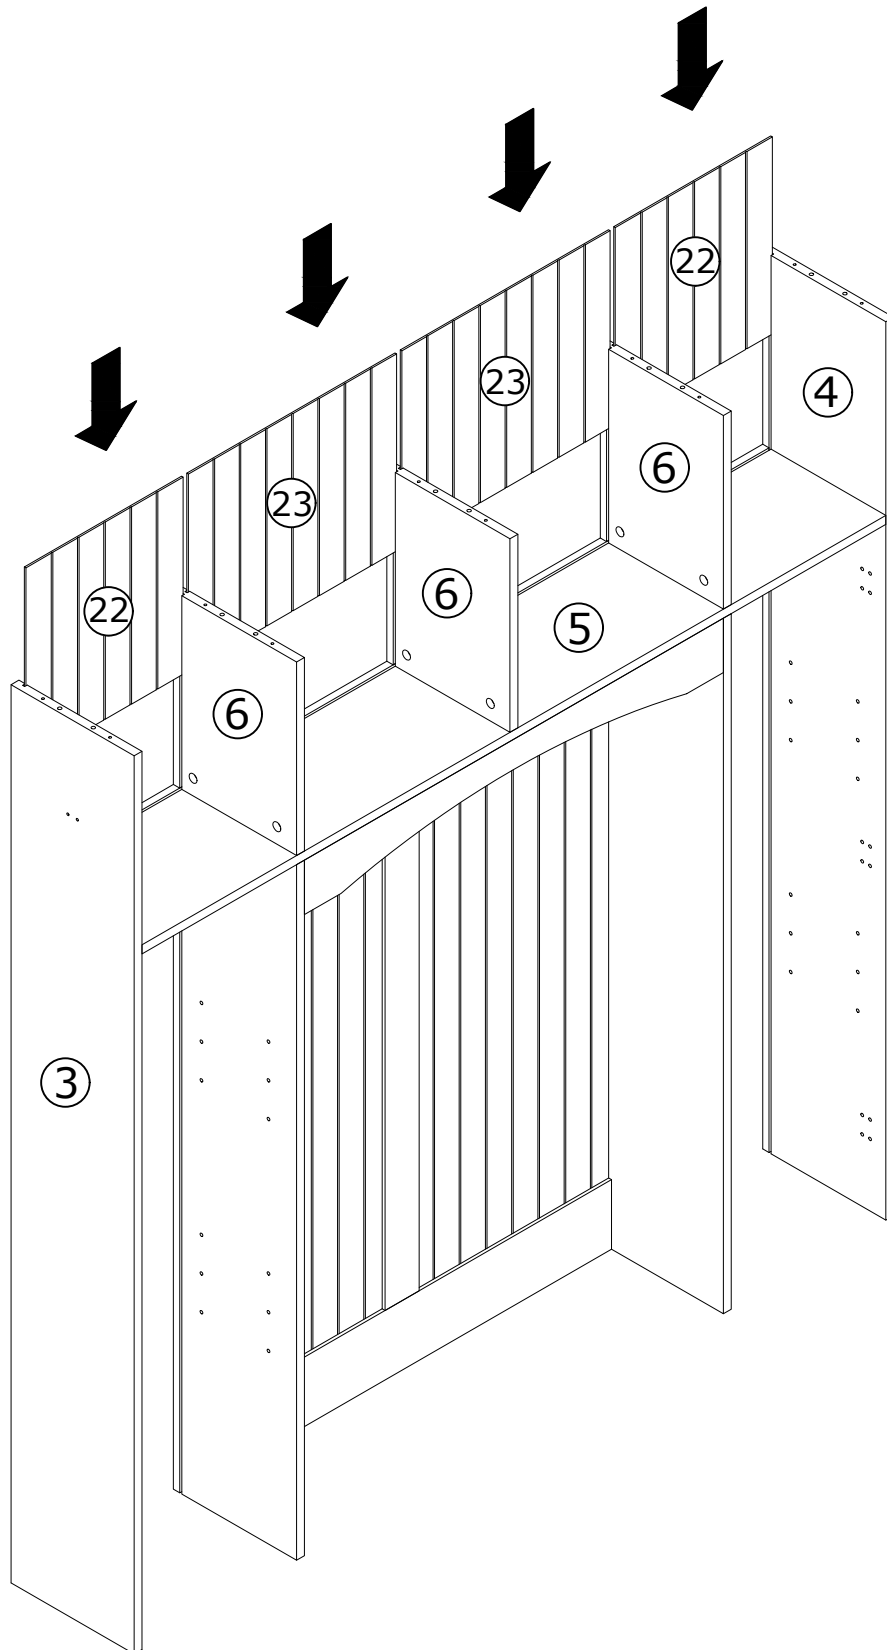


Assembly Instructions

Step 29

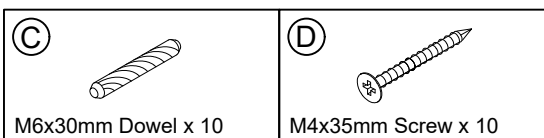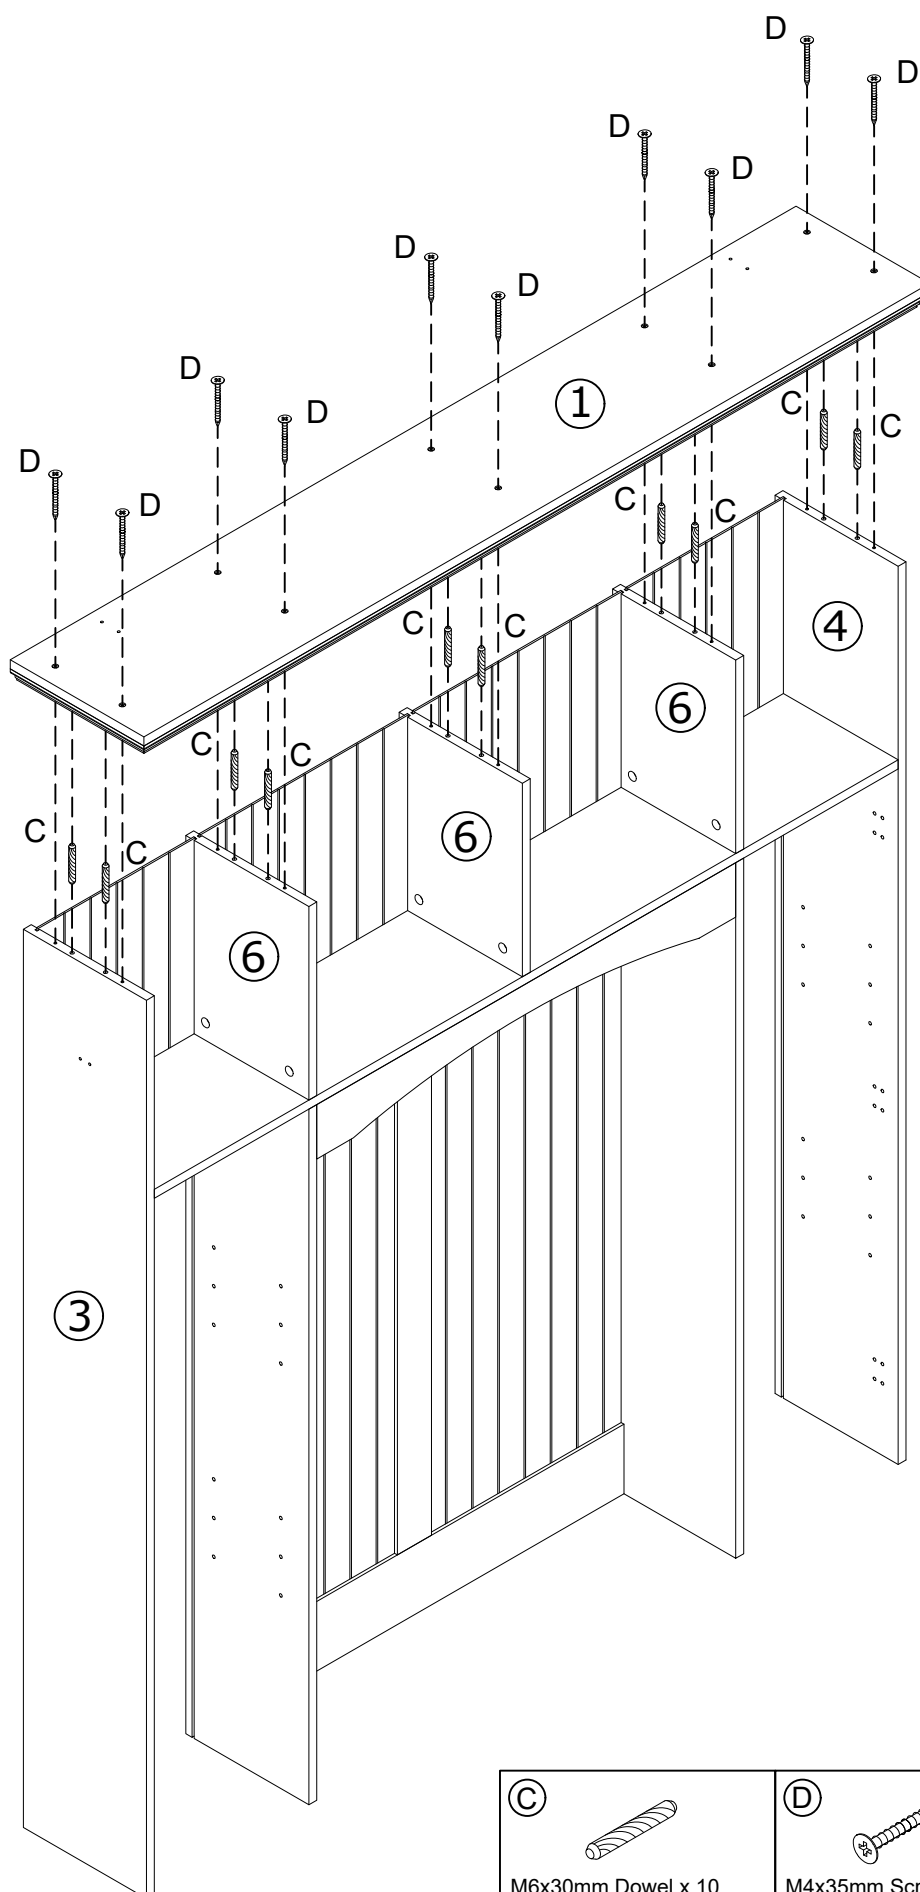


Assembly Instructions

Step 30

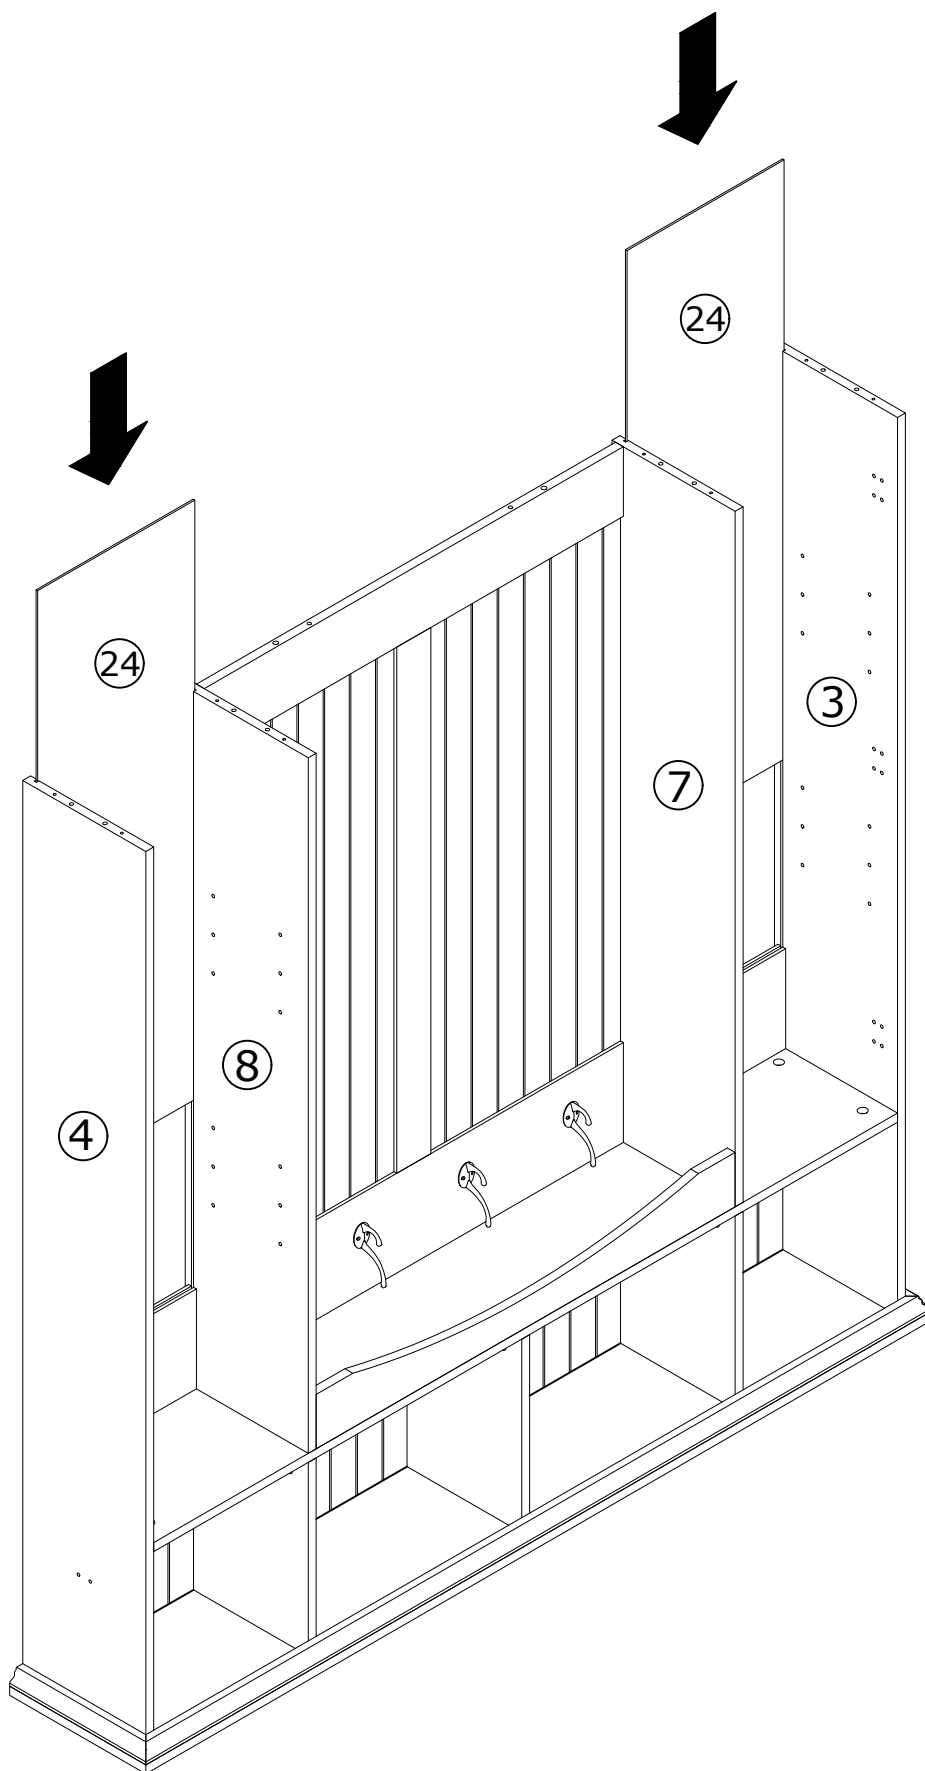


Assembly Instructions

Step 31

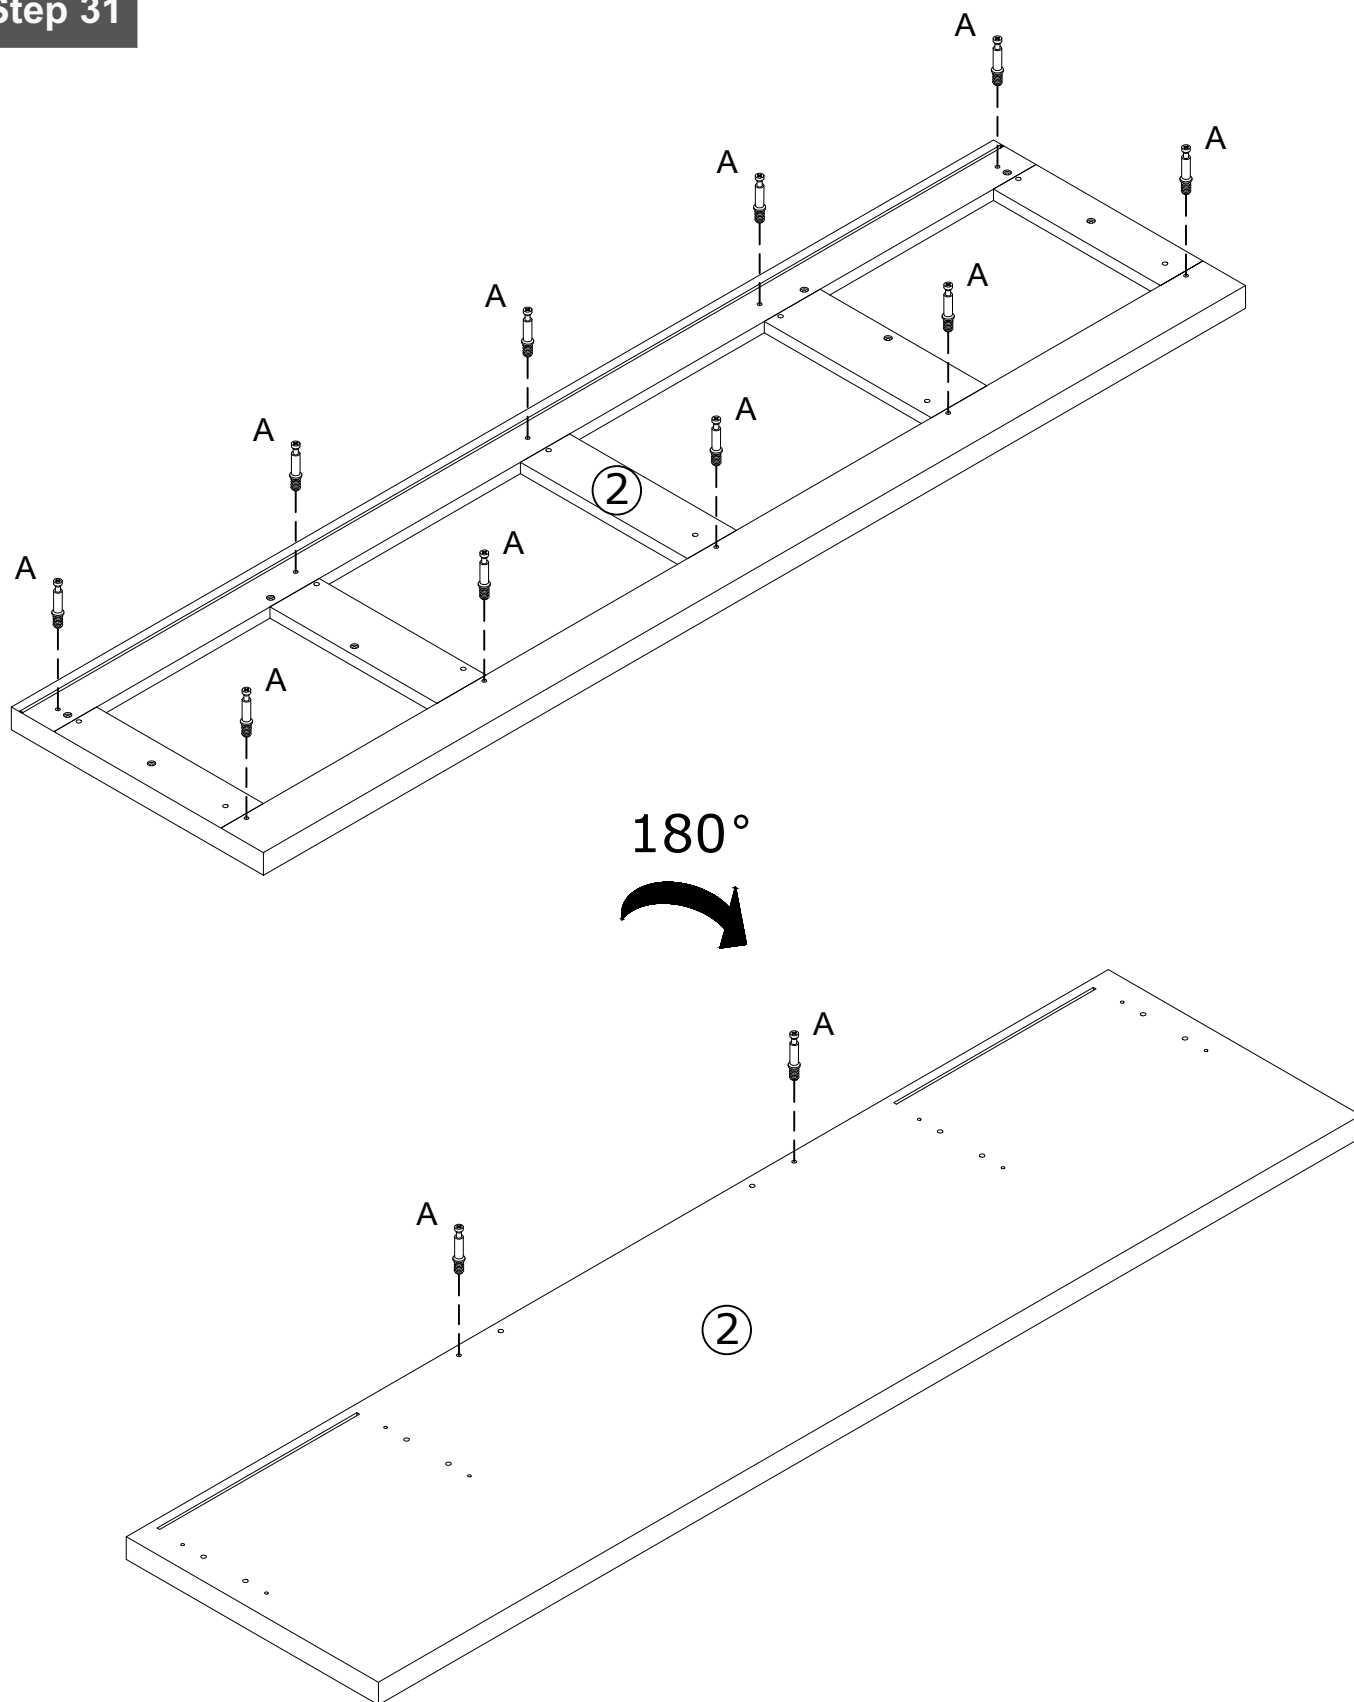




(A)







M6x35mm Cam Bolt x 12

Assembly Instructions



Step 32

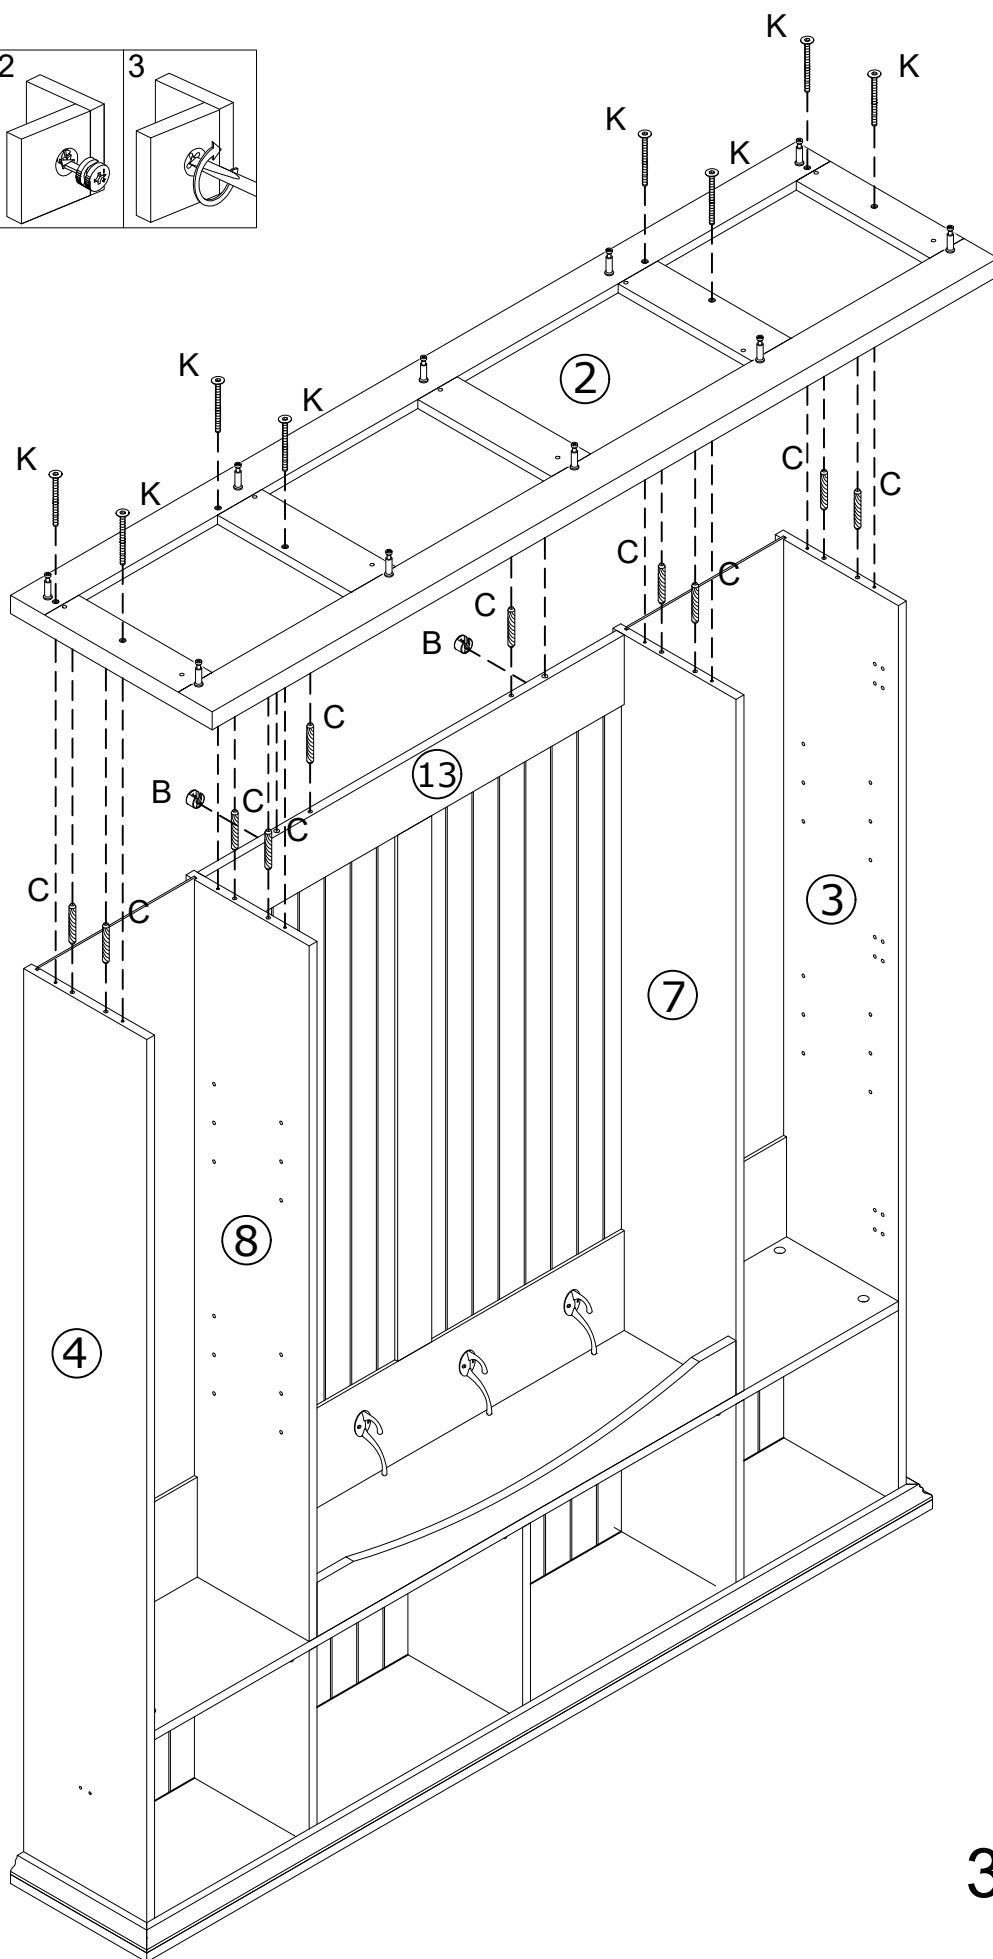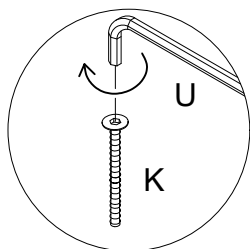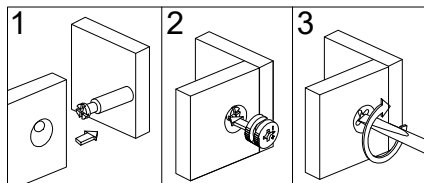

(B)	
M15x10mm Cam lock x 2	
(C)	
M6x30mm Dowel x 10	
(K)	
M5x40mm Screw x 8	
(U)	
SPANNER x 1	

Assembly Instructions

Step 33

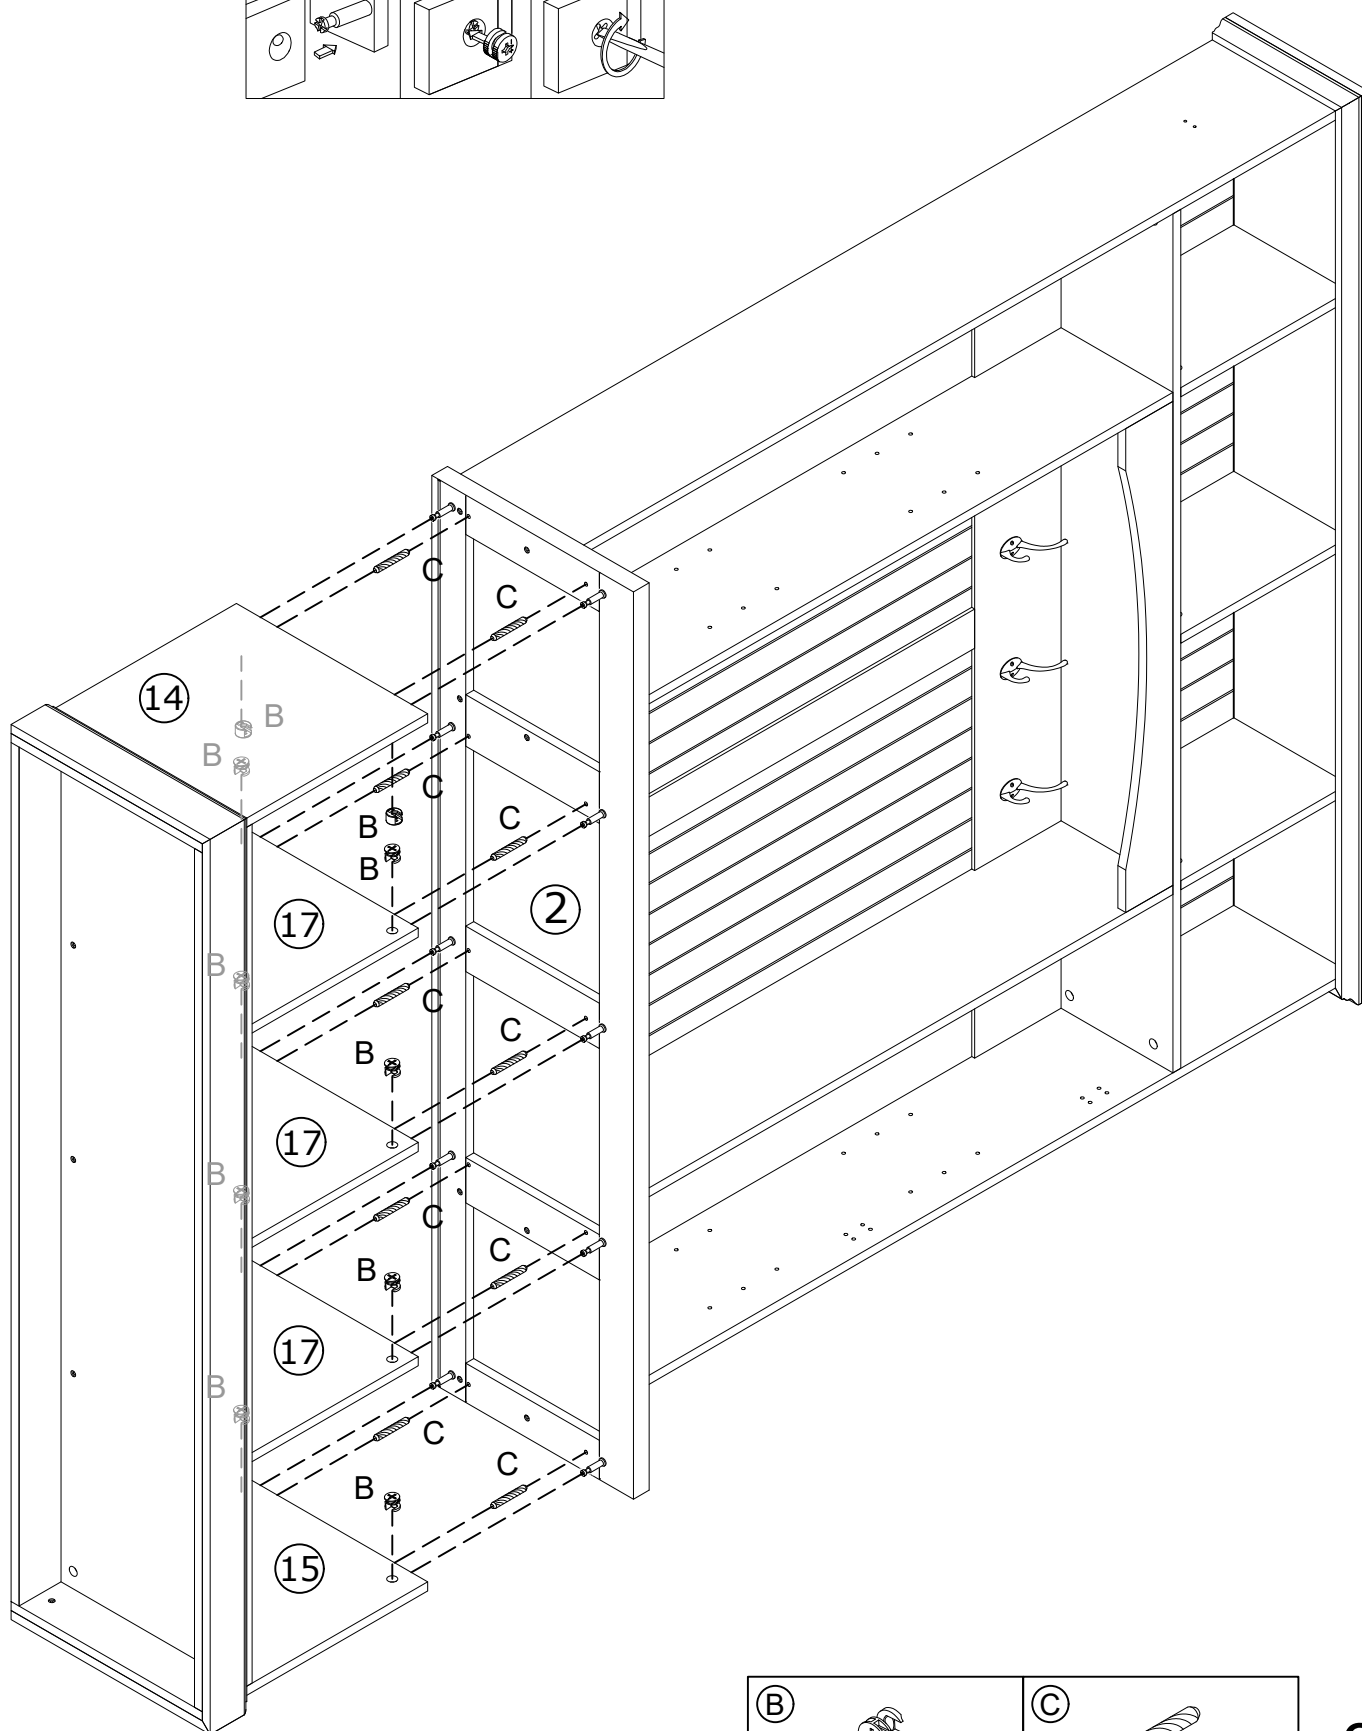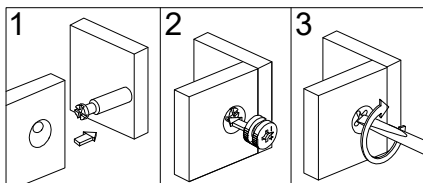

(B)



M15x10mm Cam lock x 10


(C)





M6x30mm Dowel x 10

Assembly Instructions

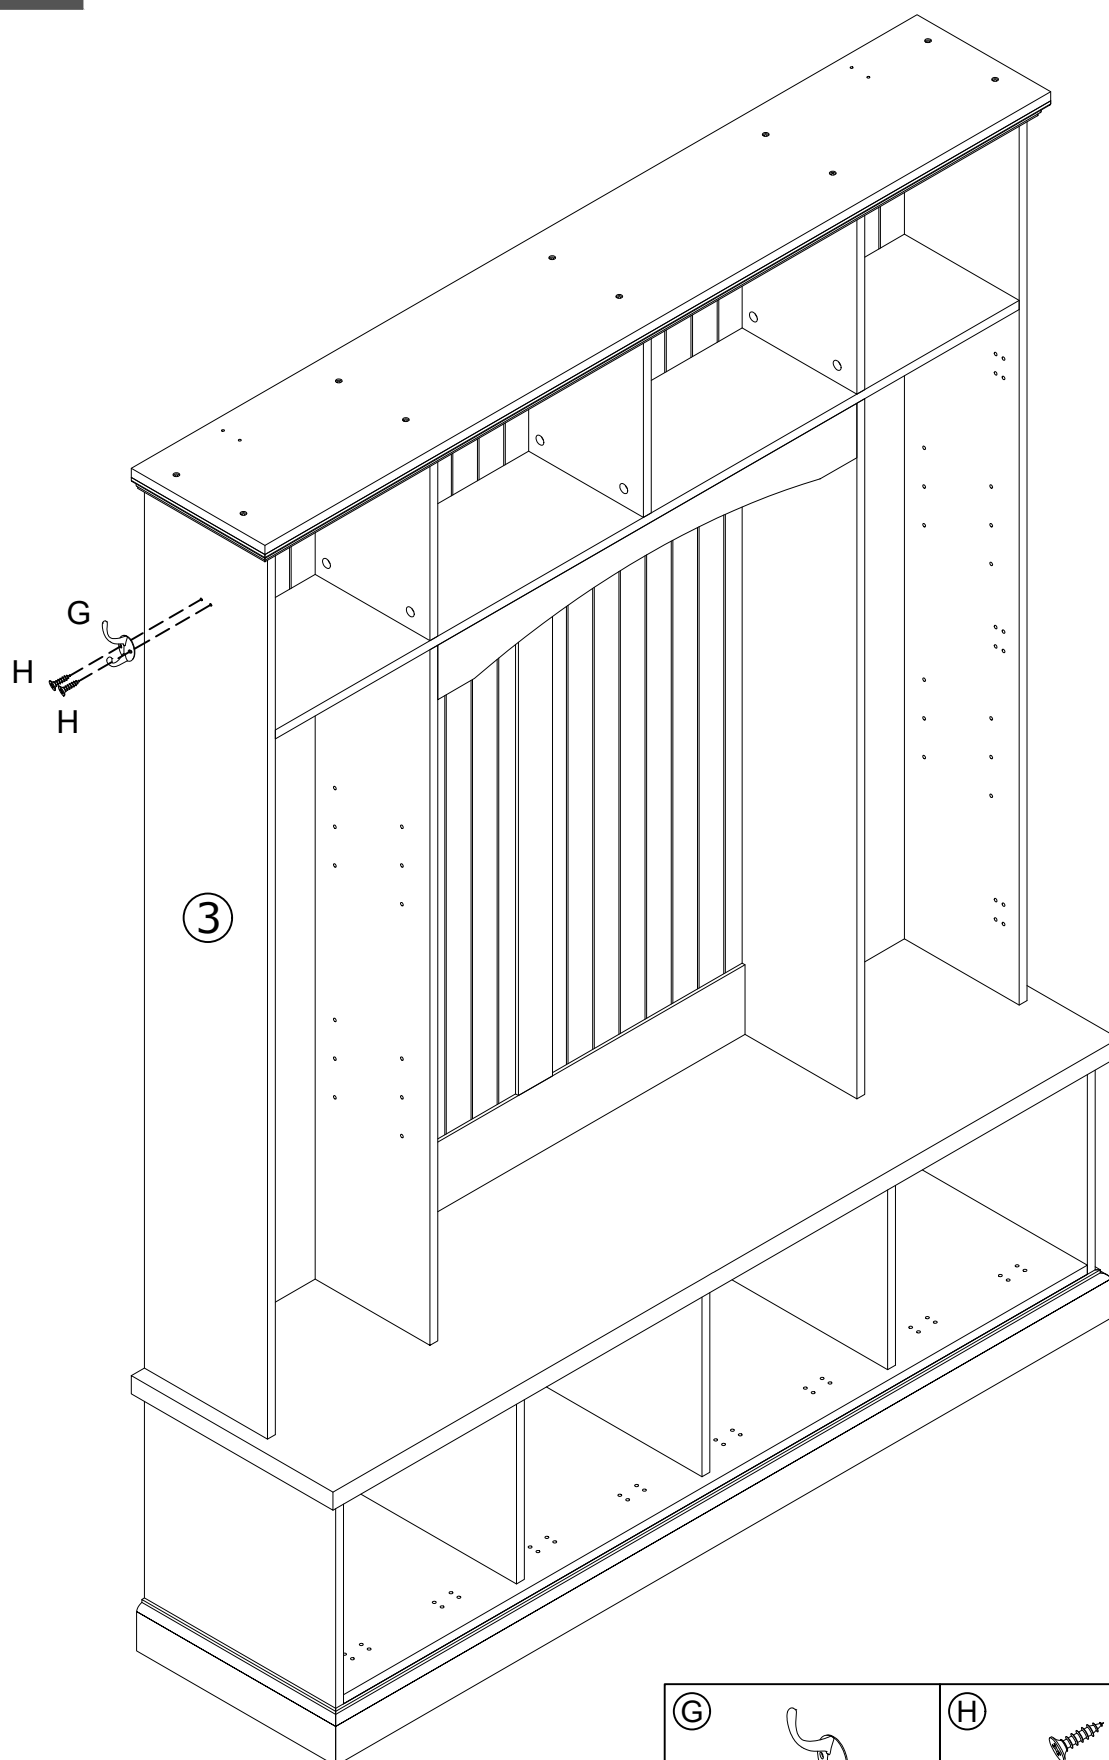
Step 34





<p>Ⓔ</p>  <p>Hook x 1</p>	<p>Ⓕ</p>  <p>M3.5x14mm Screw x 2</p>
---	---

Assembly Instructions


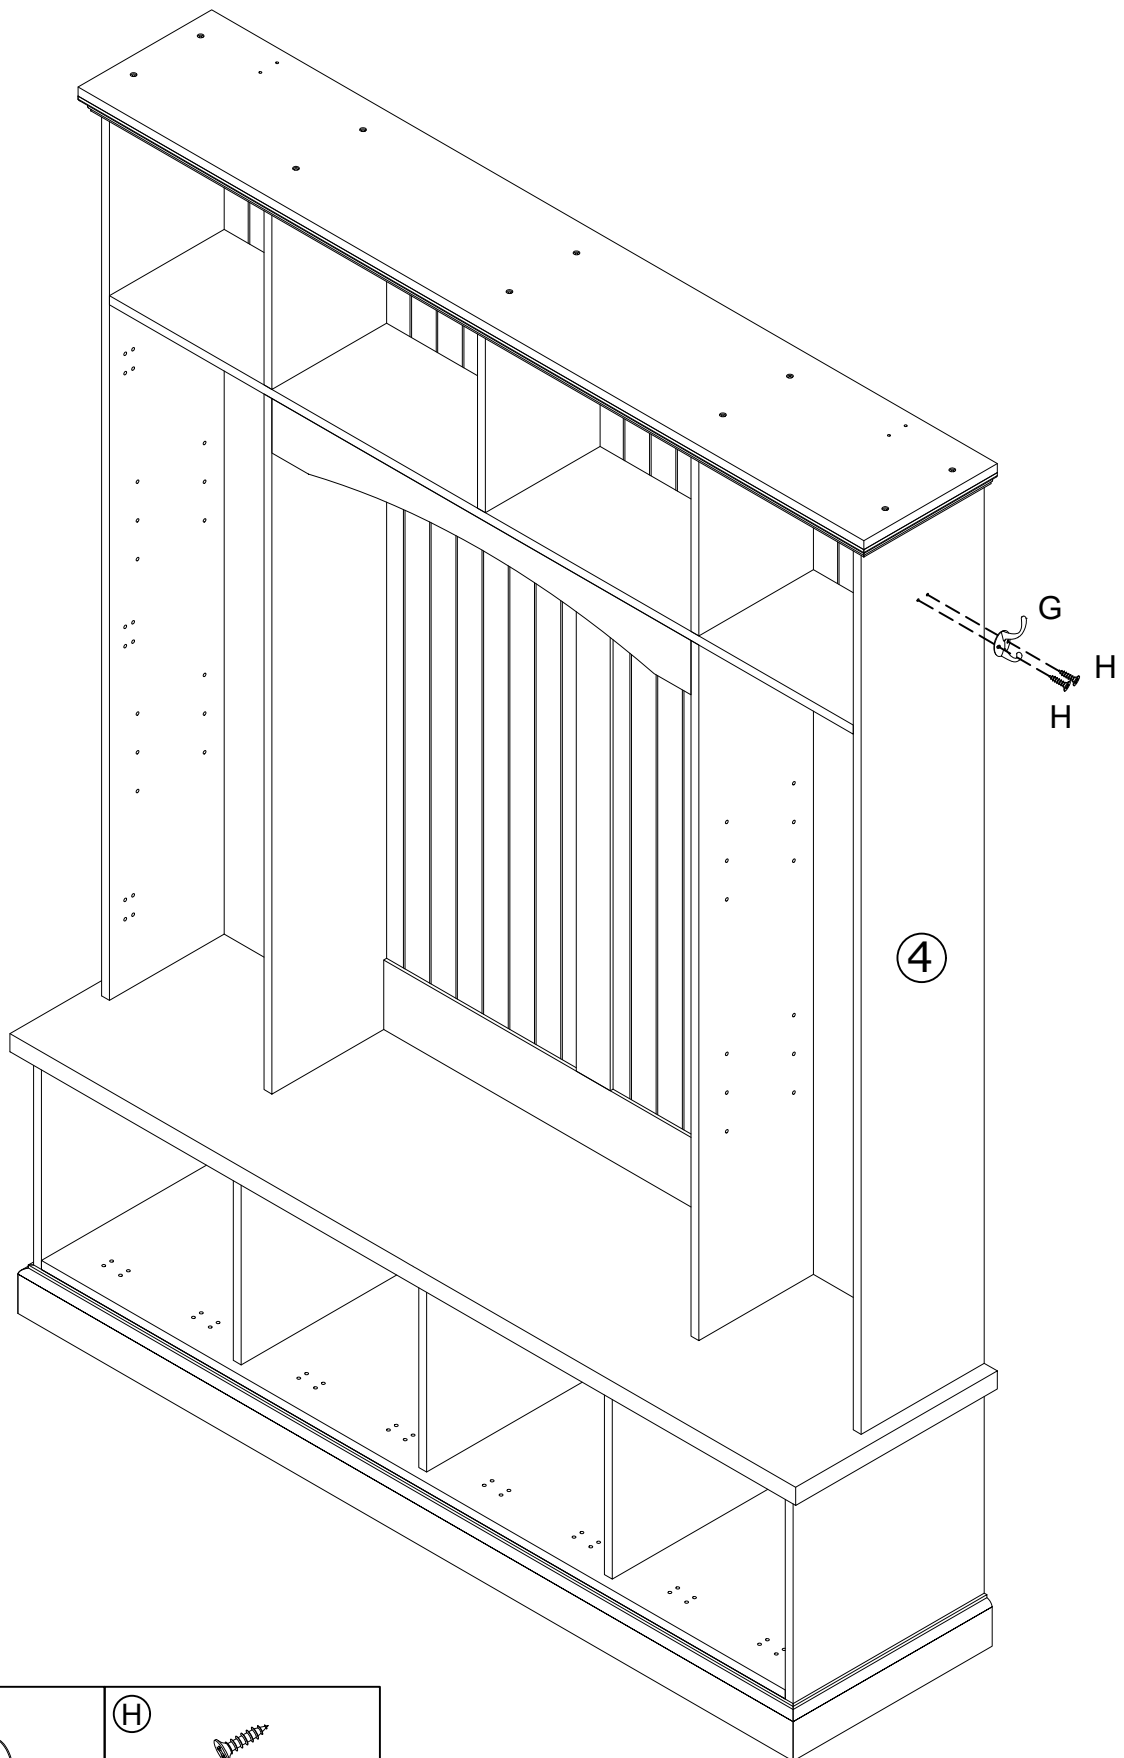
Step 35



<p>Ⓒ</p>  <p>Hook x 1</p>	<p>Ⓗ</p>  <p>M3.5x14mm Screw x 2</p>
--	---


Assembly Instructions

Step 36

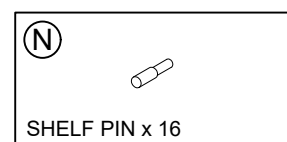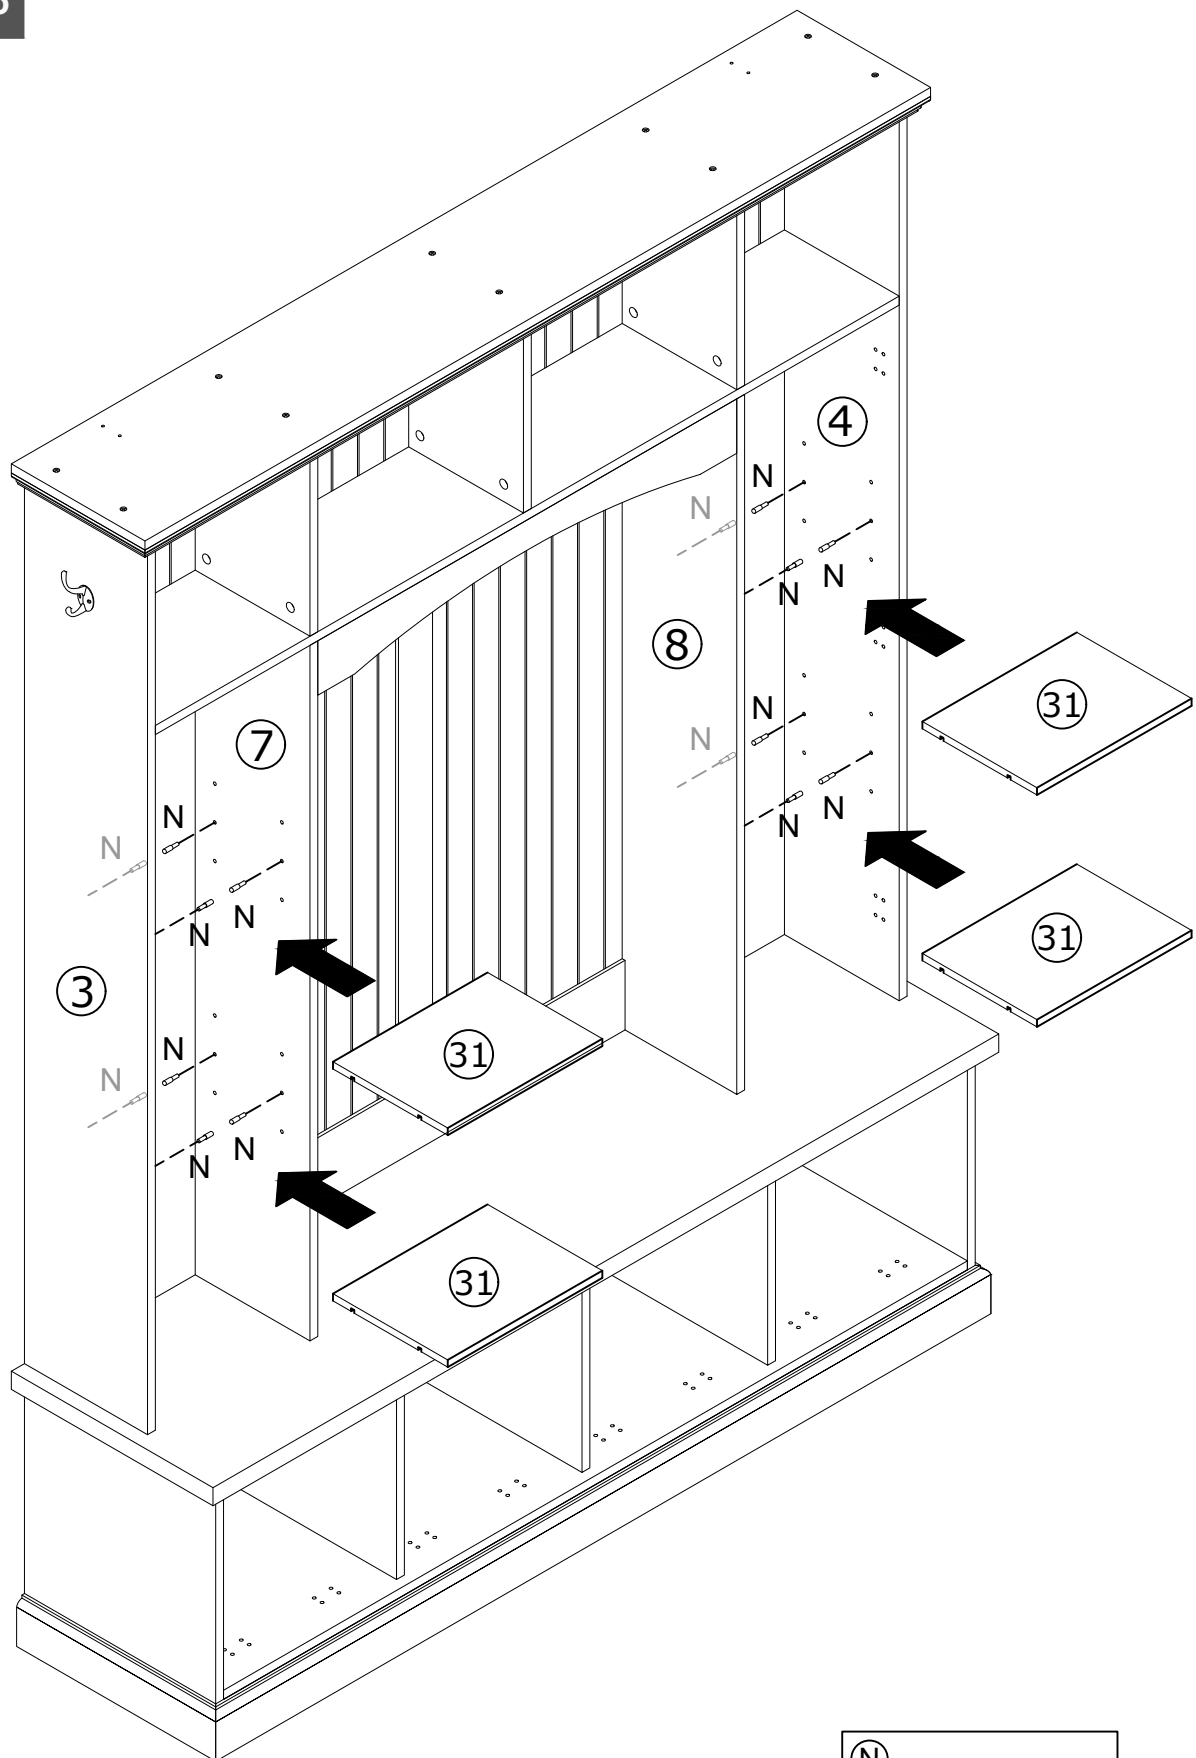

Assembly Instructions

Step 37

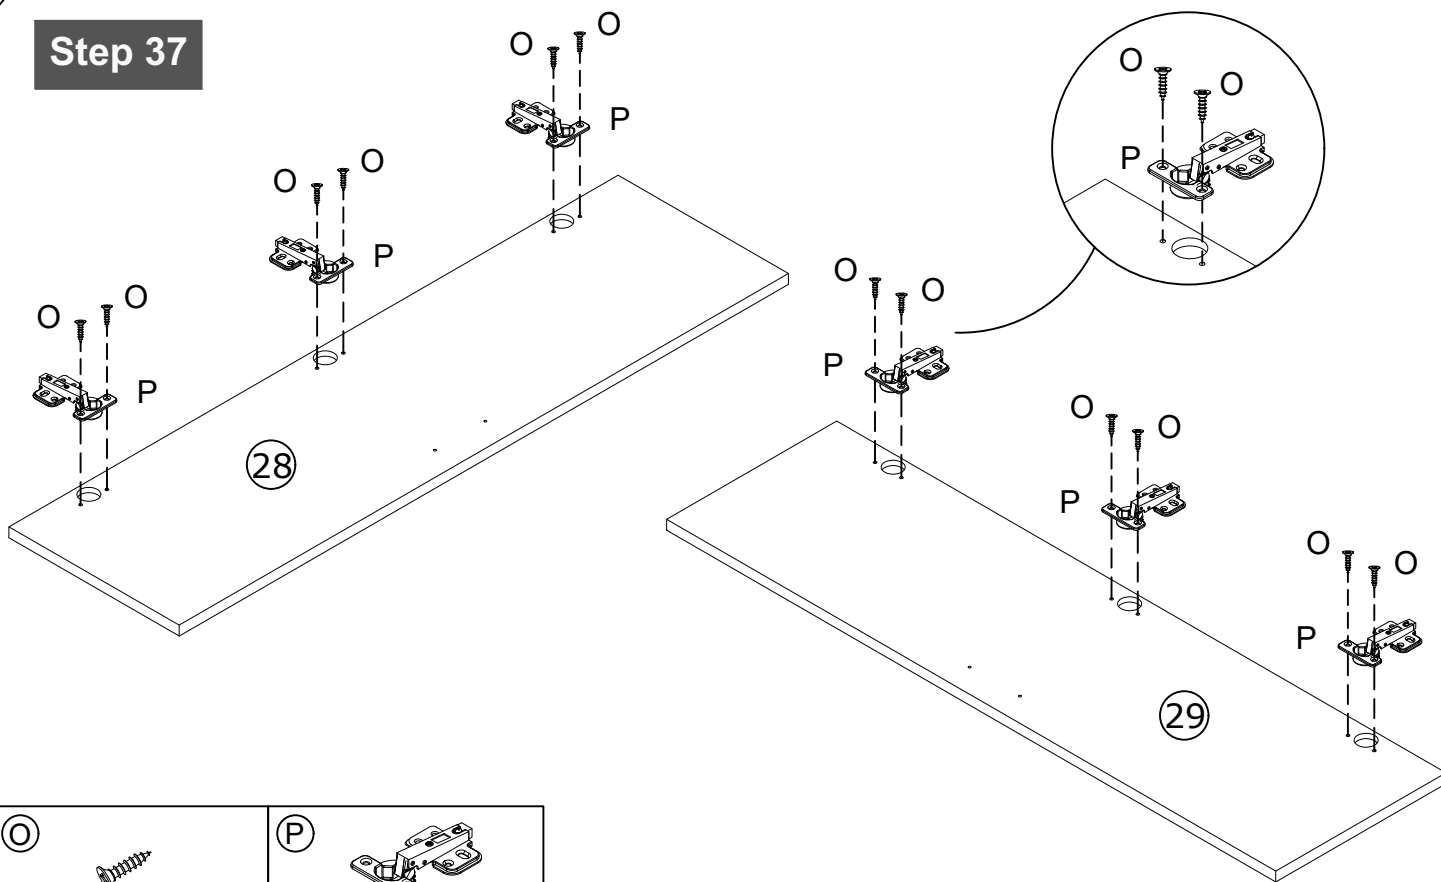


ⓐ




M3.5x14mm Screw x 12

ⓑ




HINGE x 6

Step 38

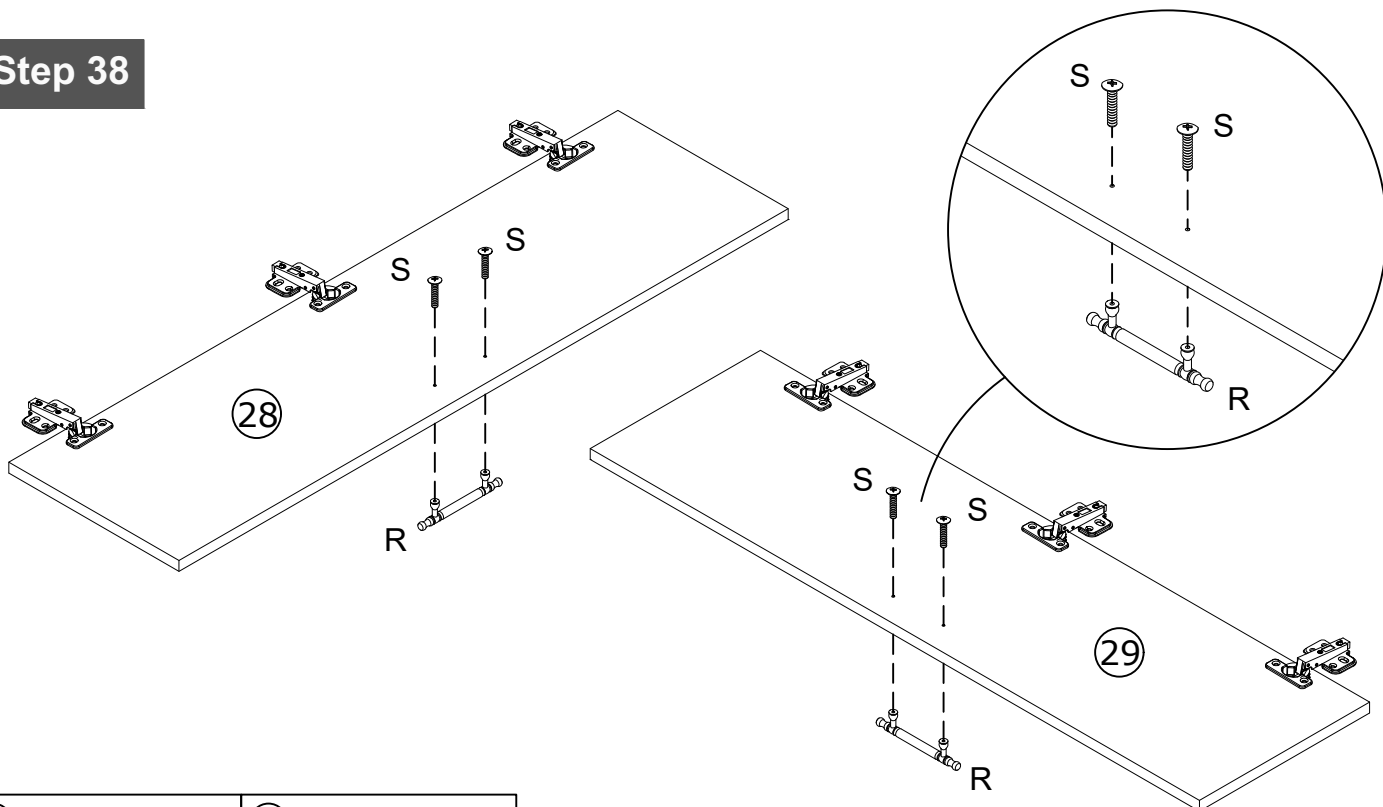

ⓒ



Handle x 2

ⓓ




M4x16mm Screw x 4




Assembly Instructions

Step 39



If the door can't close, please adjust the hinges.

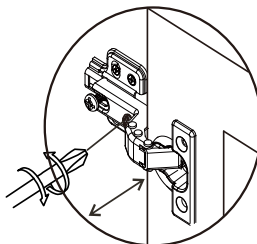

This is used to adjust the door panel in the up and down direction.



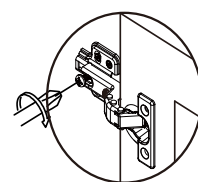
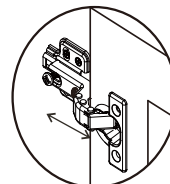
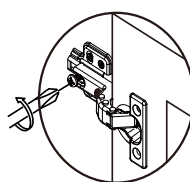


This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

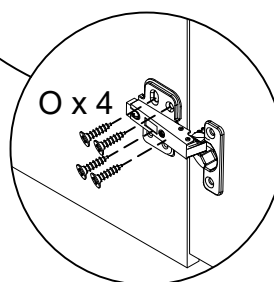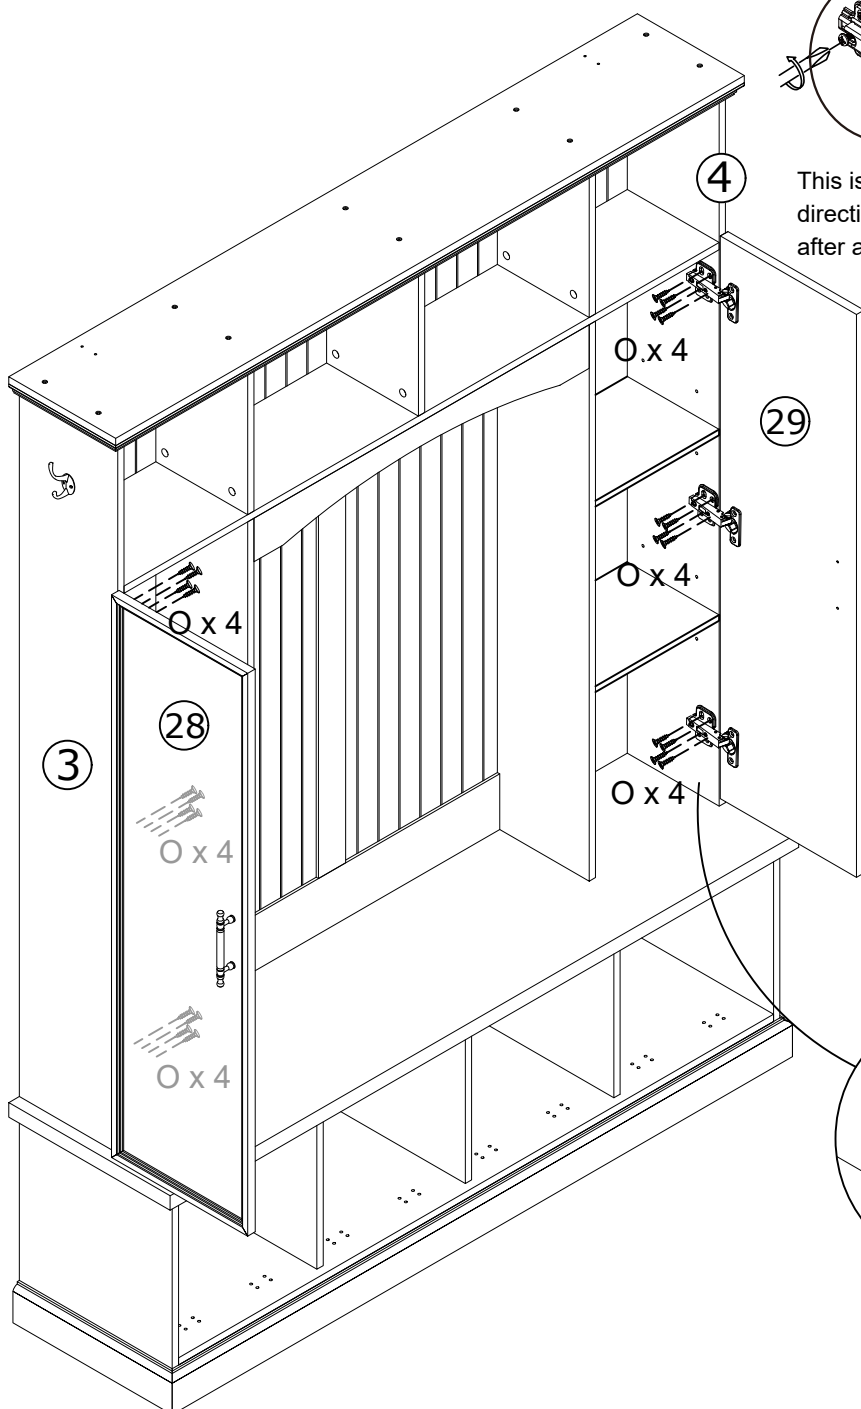

Assembly Instructions

Step 40

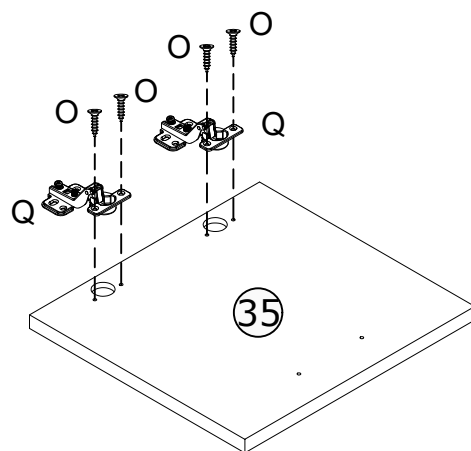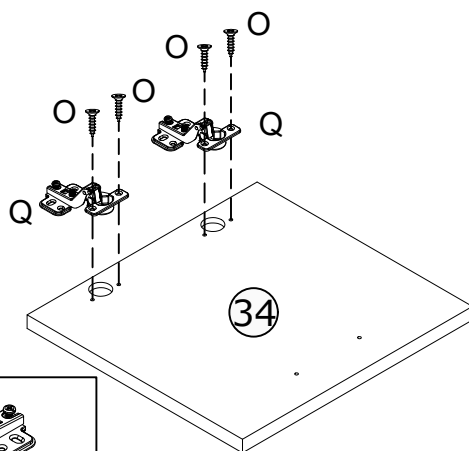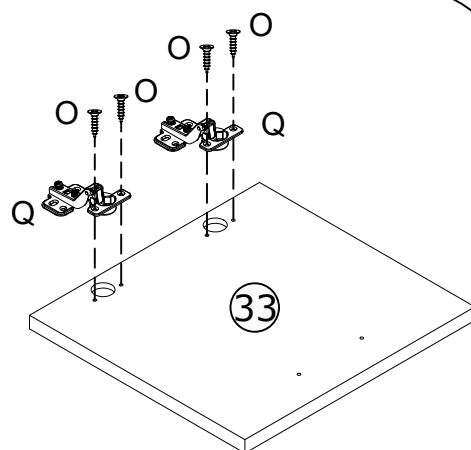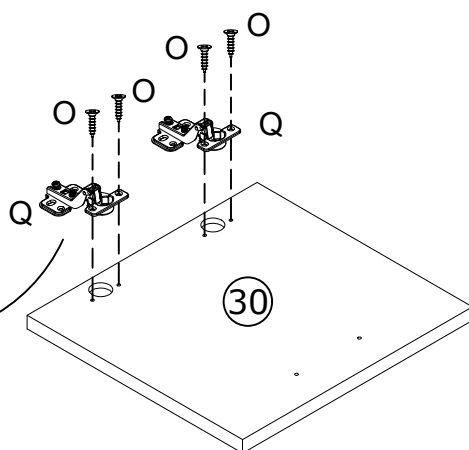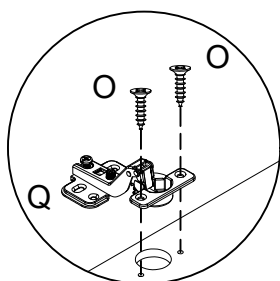

○








M3.5x14mm Screw x 16

Q




HINGE x 8

Step 41

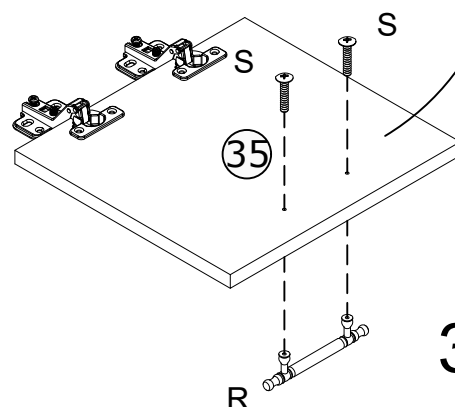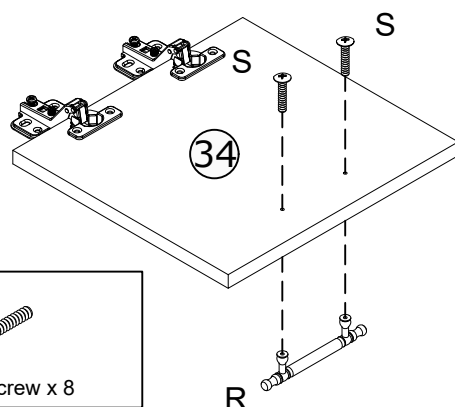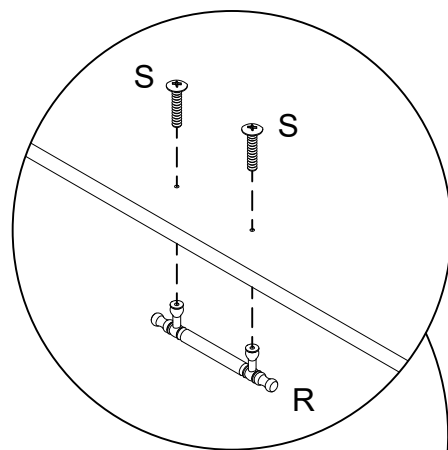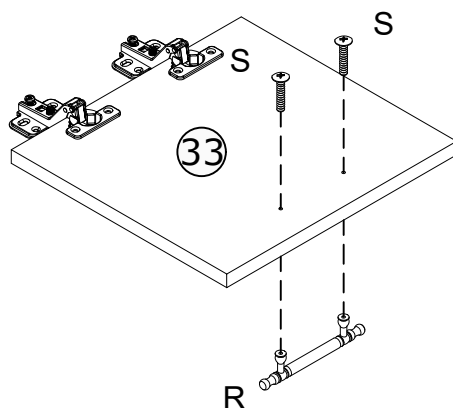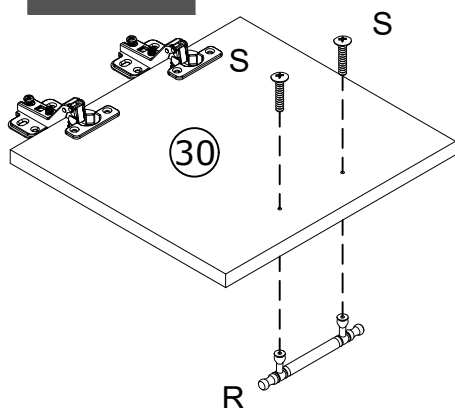

R



Handle x 4


S



M4x16mm Screw x 8

Assembly Instructions


Step 42

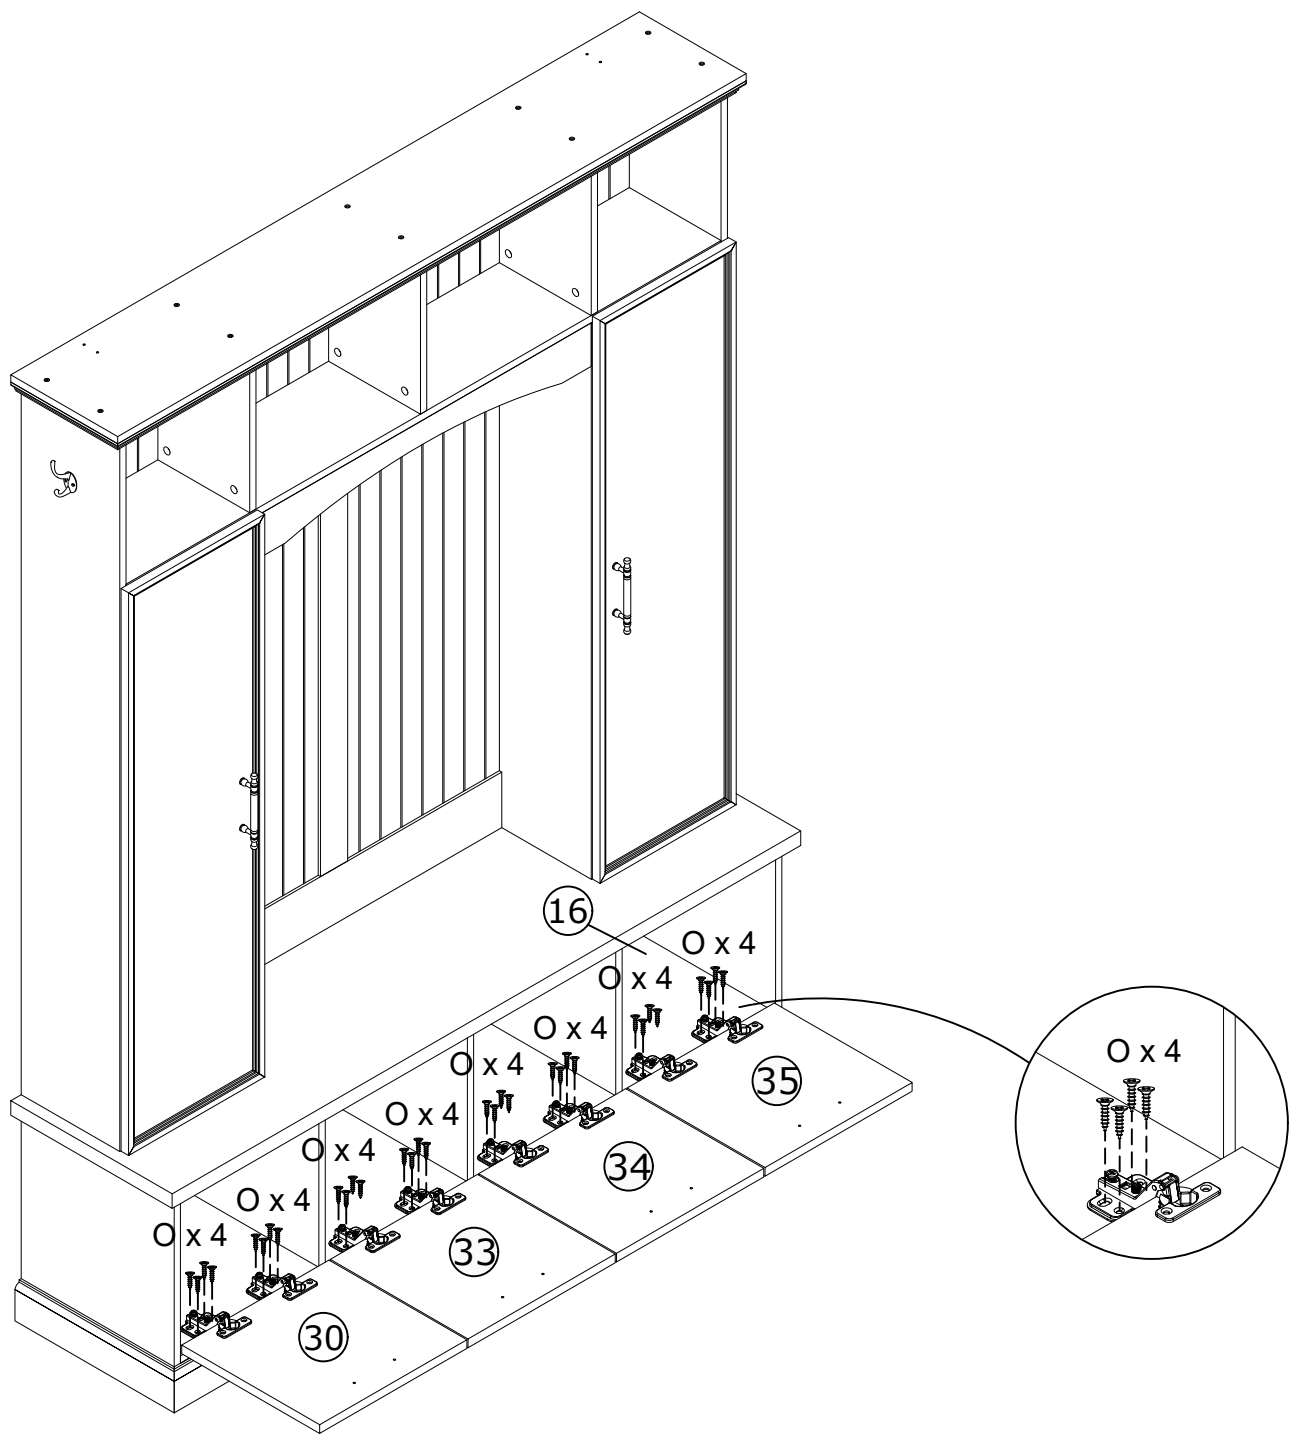

M3.5x14mm Screw x 32

Assembly Instructions

Step 43

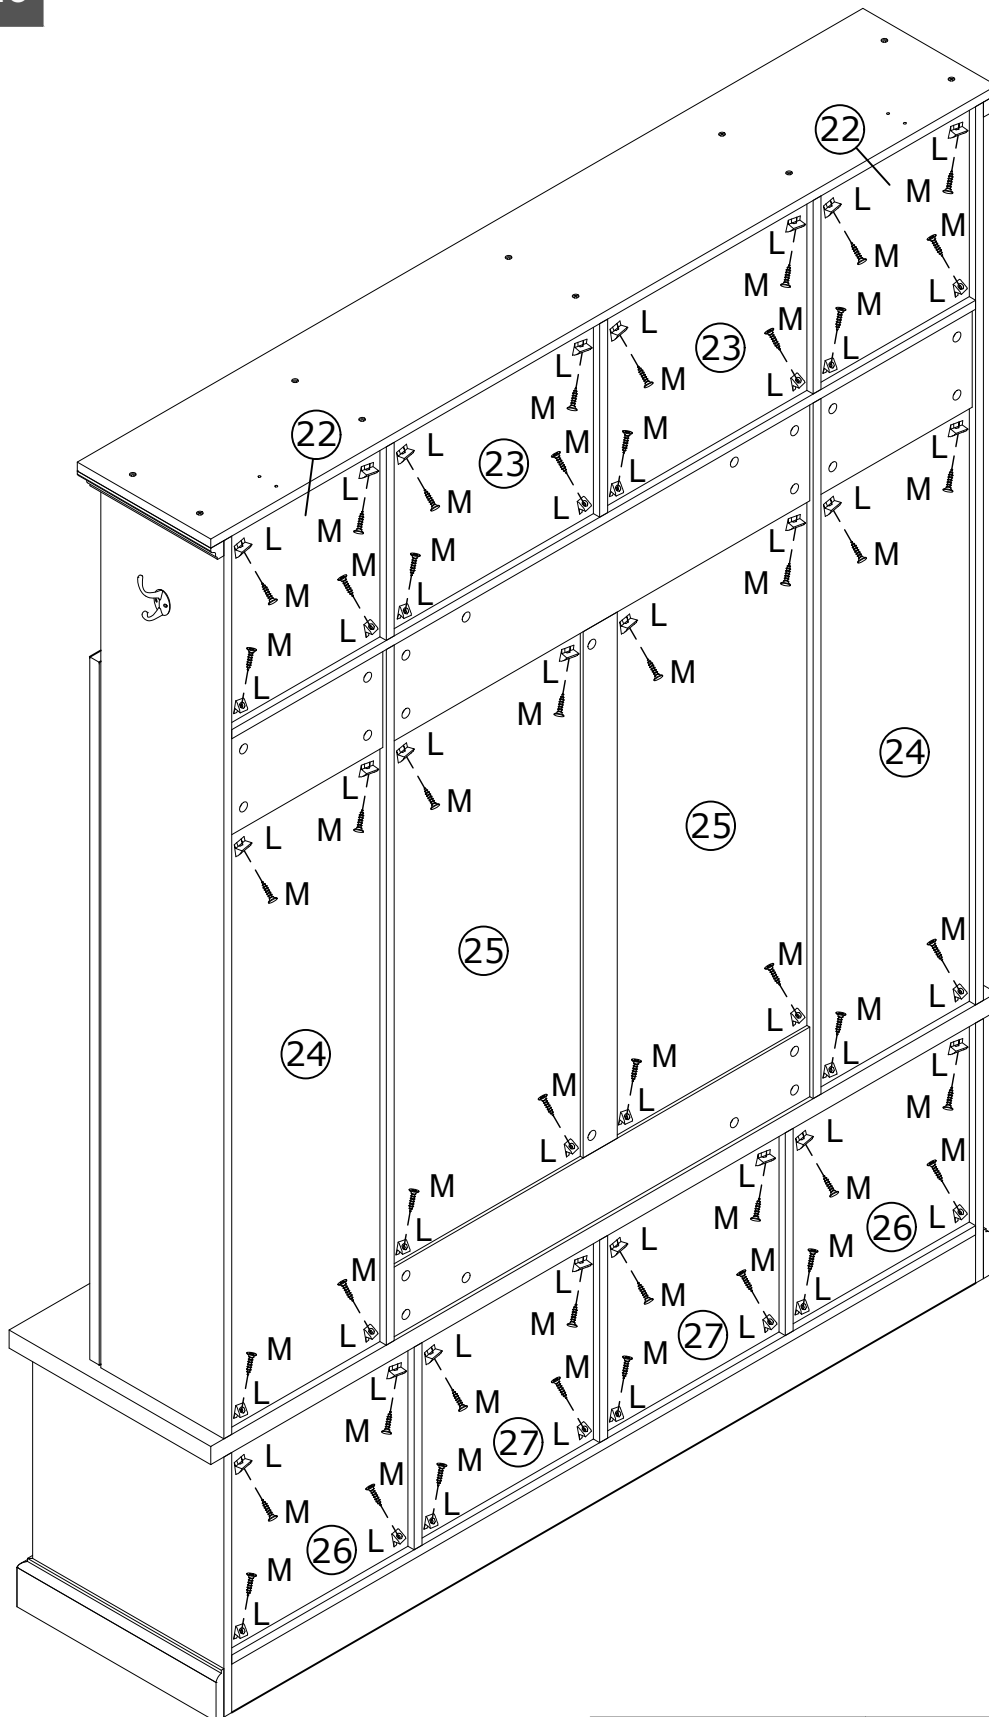

(L)



Plastic Connector x 48




(M)



M3x16mm Screw x 48


Assembly Instructions



Step 44

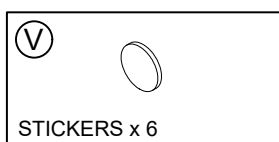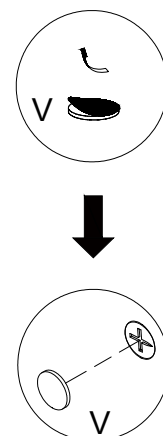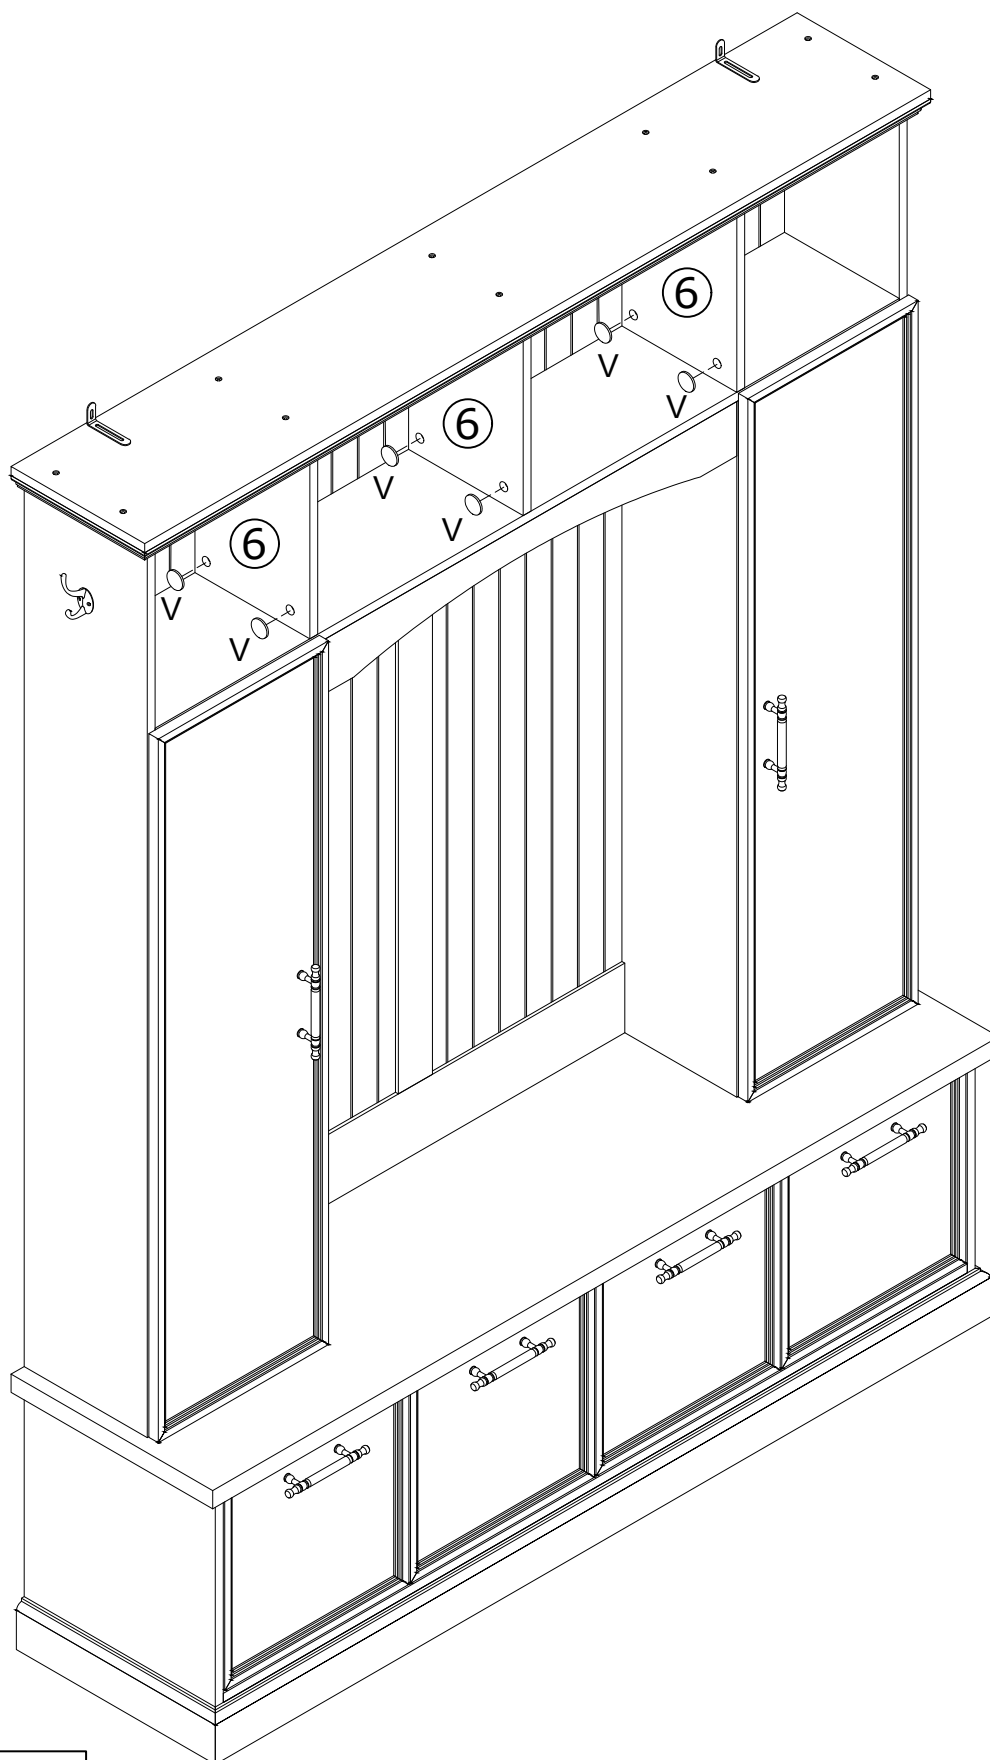

Assembly Instructions


Step 45

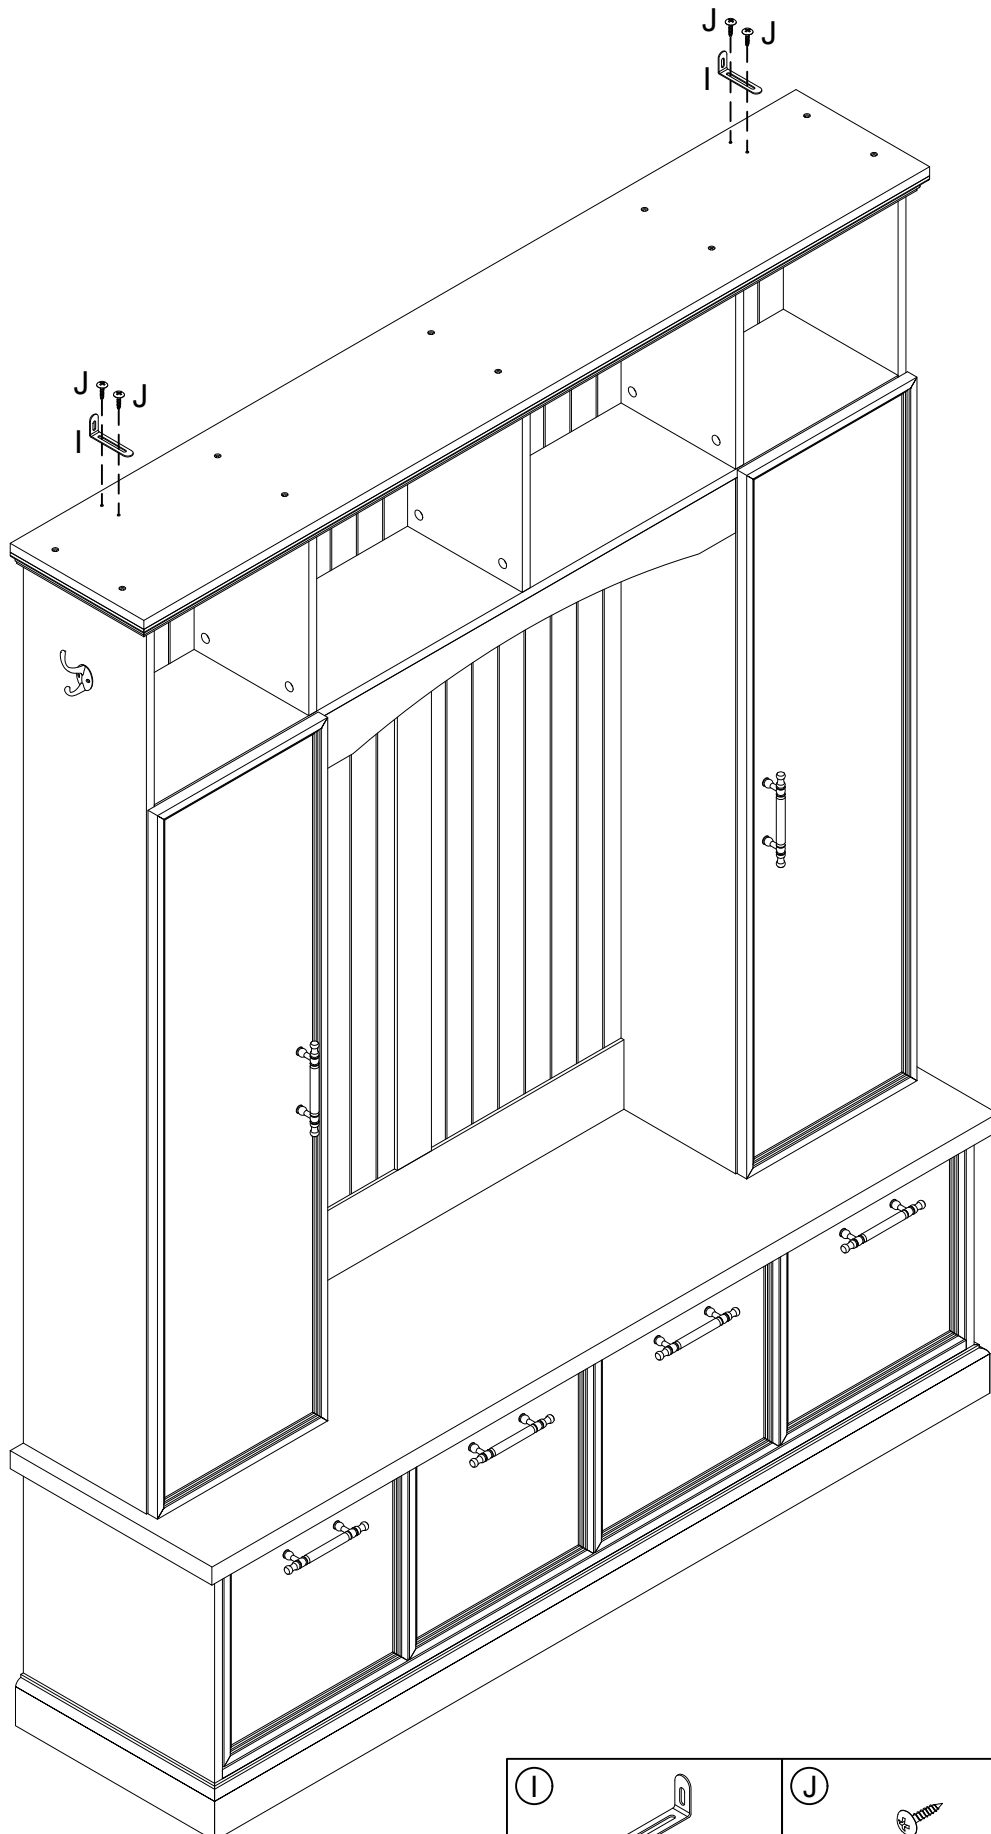


<p>①</p>  <p>Anti-Inverted Iron x 2</p>	<p>②</p>  <p>M6x35mm Screw x 4</p>
---	---

Assembly Instructions


Step 46

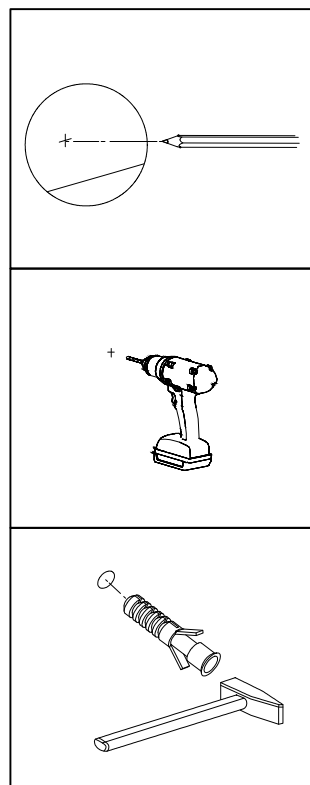

WALL

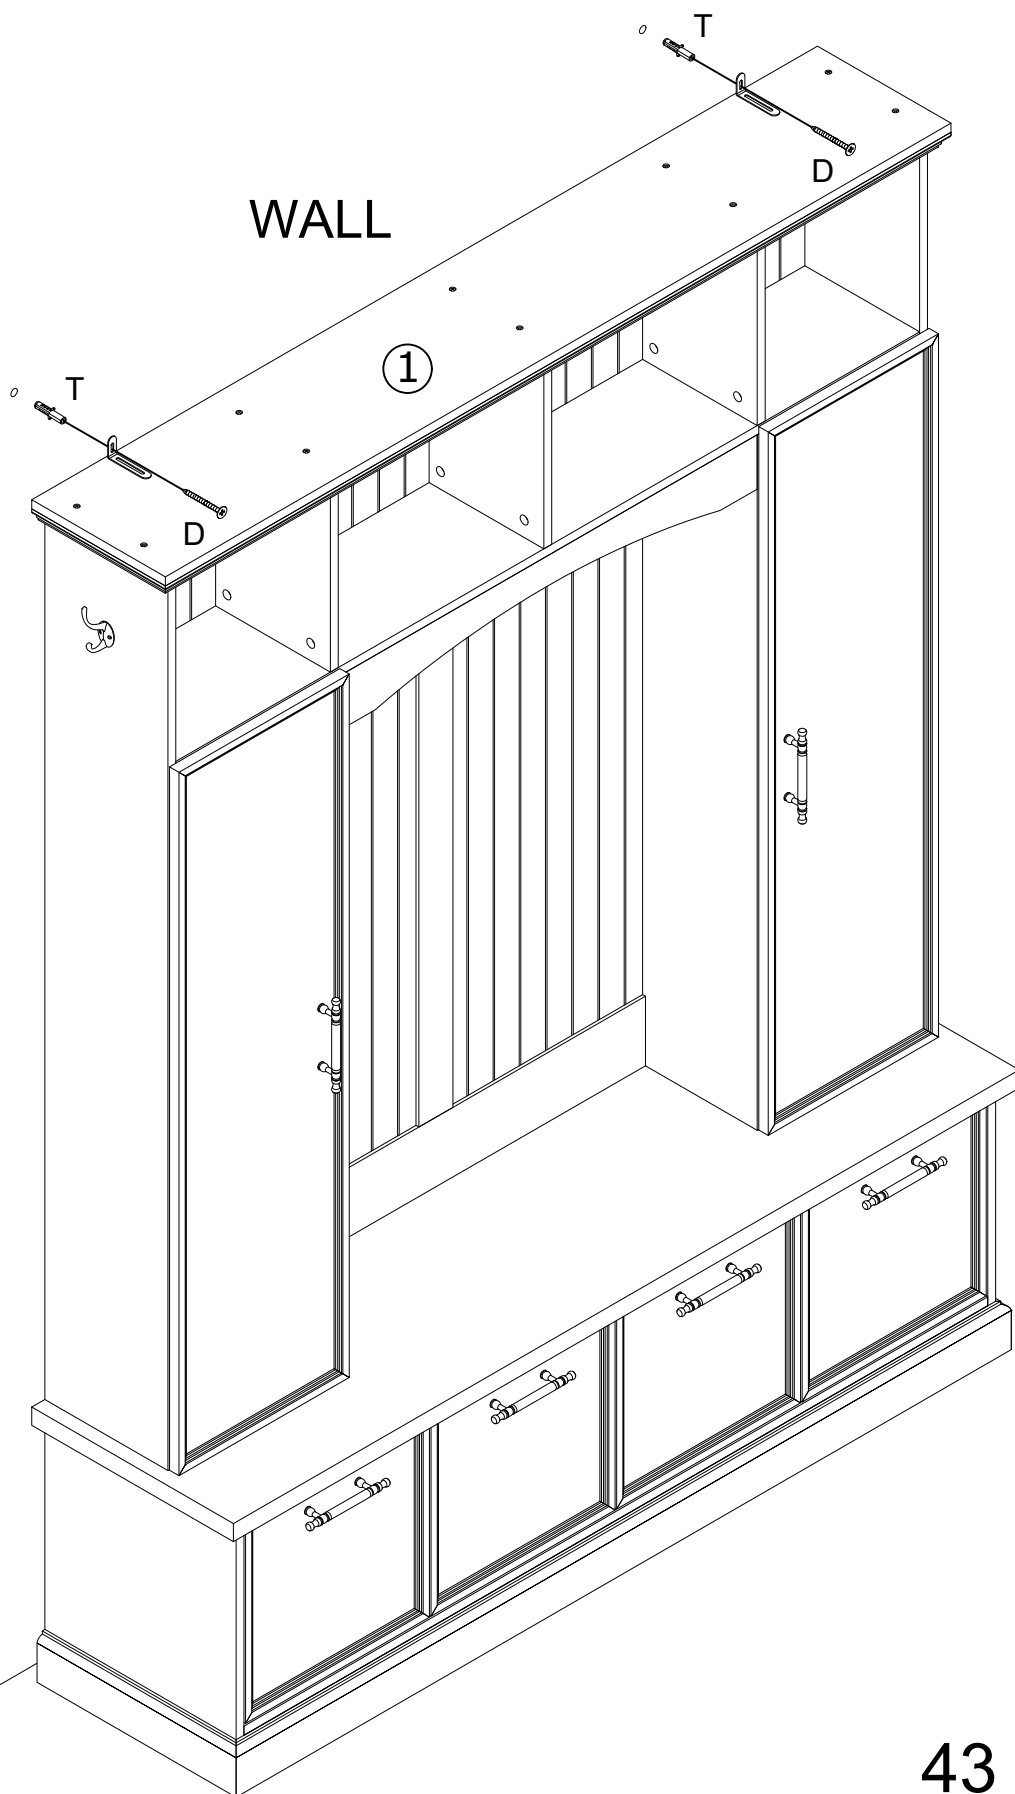

(D)



M4x35mm Screw x 2

(T)



WALL ANCHOR x 2

Assembly Instructions

Finish

